

Hamilton Beach®

INSTRUCTIONS

HB1026



DEEP FILL SANDWICH TOASTER

 www.hamiltonbeach.co.uk

FOR DOMESTIC USE ONLY.

THANK YOU

For purchasing the Hamilton Beach Deep Fill Sandwich Toaster



REGISTER YOUR PURCHASE



www.hamiltonbeach.co.uk/pages/register-my-warranty



Scan QR code using mobile device

WARRANTY REGISTRATION

Thank you for choosing Hamilton Beach for your home appliances. As part of our commitment to quality, your appliance is covered by a 2-year warranty. To ensure that you enjoy the full benefits of this warranty, we encourage you to register your product after purchase.

Why Register Your Warranty?

- Stay updated: Receive important information about your product.
- Quick assistance: In case you need to contact us in the future, we can help you faster.
- Receive product news, offers and competitions.

How to Register Your Warranty:

To register your product warranty, please gather the following information and scan the QR code above.

- Model number of your appliance.
- Details of your place of purchase.
- Your contact details.

Warranty MUST be registered within 30 days of purchase. Any warranty registered after 30 days will be void.

Please Note: We only accept warranty registrations for products purchased in the UK.

CONTENTS

Product Registration	1
Specifications	2
Important Safeguards	3
Product Overview	4
Using Your Appliance	5
Cleaning & Care	6
Disposing of the Appliance	6
Customer Support	7
Guarantee & Service	8

SPECIFICATIONS

Power Consumption:	220-240V~ ,50-60Hz
Power:	900W
Capacity:	2 Slice
Product Dimensions (cm):	10.5 (H) x 24.5 (W) x 29.3 (L)
Net Weight:	Approx.1.6 kg

IMPORTANT SAFEGUARDS



Read the following carefully before using your Hamilton Beach appliance. These warnings are provided for safety. Be sure to always follow basic safety precautions, including the following:

Key Safety Points:

- **WARNING:** Misuse of this appliance may result in injury.
- **WARNING:** Do not immerse power cord, plug, or housing in water; avoid liquid entering the appliance to prevent electric shock or short-circuit.
- **WARNING:** Surfaces are hot when appliance is in use. Do not touch the hot surfaces.
- **WARNING:** Hot steam and air may be released through the appliance, keep your hands and face at a safe distance when the appliance is in use/opened.

General Safety:

1. Read all instructions carefully.
2. Use Handle to avoid touching hot surfaces.
3. Do not immerse cord, plugs, or appliance in liquid to prevent electric shock.
4. Supervise children closely when appliance is in use.
5. Do not allow young children or infirm persons to use the appliance without supervision.
6. Keep the appliance out of reach of children.
7. Unplug before cleaning and allow to cool before handling parts or cleaning.
8. Do not operate with damaged cord or plug; contact customer service or a registered electrician for assistance.
9. Avoid using accessory attachments not recommended by the manufacturer.
10. For indoor household use only; do not use outdoors.
11. Prevent cord from hanging over edges or touching hot surfaces.
12. Keep away from hot gas or electric burners and heated ovens.
13. Use extreme caution when moving appliance containing hot substances.
14. To disconnect, remove plug from power outlet.
15. Use appliance only for its intended purpose.
16. If cable or cord is damaged, seek replacement or repair from a qualified service agent.

Note: When using the appliance for the first time, slight smoke or odour may be emitted. This is normal and will soon subside. Allow for sufficient ventilation around the sandwich toaster.

PRODUCT OVERVIEW



Product Features:

- ❶ Light Indicator
- ❷ Stainless Steel Housing
- ❸ Locking Latch
- ❹ Non-Slip Feet
- ❺ Non-Stick Plates
- ❻ Cool Touch Handle



USING YOUR APPLIANCE

Using your sandwich toaster:

1. Before first use, wipe the surface of the plates with a damp cloth and dry. Then apply a thin layer of butter, cooking spray, or any other cooking fat.
2. Plug the appliance into the power outlet.
3. Close the sandwich toaster and prepare your sandwich while it heats up.
4. When the sandwich maker is ready (approximately after 5 minutes), the ready-to-cook light will illuminate.
5. Fully open the sandwich toaster and place a slice of bread in the bottom half with the buttered side against the plate.
6. Fill the sandwich, pressing the bottom half into the plates.
7. Place the top slice with the buttered side up and carefully close the two parts of the toaster together. Do not force shut. Steam will be ejected from between the plates, so take care to avoid contact with steam or plates.
8. Lock the two halves with the clip while toasting takes place.
9. Your sandwich will be toasted in approximately 2-3 minutes, or longer to suit your taste. Remove the sandwich using a plastic or wooden spatula. Never use a metal knife as this may damage the non-stick coating.
10. Close the lid to preserve heat until you are ready to toast the next sandwiches.
11. Prepare further sandwiches if required while the previous one is cooking.
12. After use, remove the plug from the power outlet.
13. Allow the appliance to cool completely before following the cleaning and care section of this manual.

Tips:

1. Experiment with Fillings: Try cheese and ham, tuna and sweetcorn, or Nutella and banana for variety.
2. Avoid Overfilling: Stick to a moderate amount of fillings to prevent spillage.
3. Use Fresh Ingredients: Opt for freshly sliced vegetables, meats, and cheeses for enhanced flavour.
4. Trim Bread: Cut bread to fit perfectly to prevent burning and ensure even toasting.
5. Brush with Olive Oil: Lightly brush bread with olive oil for a crispy crust without excess butter
6. Mix Cheese Varieties: Combine different cheeses like cheddar, mozzarella, and Swiss for a rich flavour.
7. Add Fresh Herbs: Sprinkle basil, parsley, or thyme for a burst of freshness.
8. Slice Ingredients Thinly: Ensure even cooking by thinly slicing ingredients.
9. Season Well: Enhance flavour with salt, pepper, or spices.
10. Allow to Rest: Let your toastie cool briefly before cutting to avoid oozing fillings.

CLEANING & CARE

1. Before cleaning, make sure to unplug the appliance and allow it to cool down completely.
2. Use a soft cloth or kitchen roll to wipe the inside and edges of the plates to eliminate any residue.
3. If the filling proves difficult to remove, apply a small amount of cooking oil onto the plate and wipe it off after 5 minutes when the residue has softened.
4. Wipe the exterior of the appliance with a soft, slightly moistened cloth, ensuring no moisture, oil, or grease enters the cooling slots.
5. Thoroughly dry the plates before storing the appliance.
6. Store the toastie maker in a dry and secure place.
7. Avoid using abrasive cleaners or scouring pads on the plates to prevent damage to the non-stick coating.



WARNING: Do not immerse power cord, plug, or housing in water; avoid liquid entering the appliance to prevent electric shock or short-circuit.

DISPOSING OF THE APPLIANCE

WEEE Directive:

Dispose of items with this symbol separately; don't put them in domestic rubbish.

Visit www.recycle-more.co.uk or www.recyclenow.co.uk for electrical item recycling info.

For Ireland purchases, check www.weeeireland.ie. The WEEE directive (since August 2006) mandates recycling of all electrical items. Take this appliance to a local Civic Amenity site for recycling at the end of its life.

Correct Disposal of this Product



This marking indicates that this product should not be disposed with other household wastes throughout the EU. To prevent possible harm to the environment or human health from uncontrolled waste disposal, recycle it responsibly to promote the sustainable reuse of material resources.

CUSTOMER SUPPORT

If you have any questions or concerns about your new product, please contact our helpful Customer Support Team. Please have your Model No. available. This can be found on the front cover of this instruction manual and on the appliance's rating label.

We're here to help!



01274 752624



customerservice@hamiltonbeach.co.uk



www.hamiltonbeach.co.uk

You can also visit our website for convenient live chat assistance.

Happy with your new product?

We would love to hear about your experience. Scan the QR code below to share your feedback.



Leave Us A
Review



Register your purchase

www.hamiltonbeach.co.uk/pages/register-my-warranty

Scan QR code using mobile device

To make a warranty claim, do not return this appliance to the store. Please call **01274 752624** or email **customerservice@hamiltonbeach.co.uk**. For faster service, locate the model number on the rating label on your appliance. Alternatively, **please scan the QR code above** to be directed to our warranty registration page.

This product is covered by a 2 year warranty, please read the guarantee and service carefully and keep for future use.

Please Note: To maintain the validity of the warranty, it is imperative to register it within the initial 30 days of purchase. Any registration made beyond this time frame will result in the warranty being deemed void.

This warranty is valid for products purchased and used in the UK and serves as the sole express warranty for the product, replacing any other warranty or condition. The product is guaranteed to be free from defects in material and workmanship for a specified period from the original purchase date. The warranty covers repair or replacement of defective components, with the responsibility for return shipping costs falling on the customer. If the original product or component is unavailable, a replacement of equal or greater value will be provided.

Exclusions to this warranty include glass, filters, normal wear, improper use, accidents, alterations, abuse, or misuse. The warranty is applicable only to the original consumer purchaser or gift recipient, requiring proof of purchase for warranty claims. It becomes void if the product is used for purposes other than single-family household use or operated outside specified voltage and waveform requirements. The warranty disclaims all claims for special, incidental, and consequential damages, limiting liability to the purchase price. Every implied warranty, except where prohibited by law, is disclaimed, and any statutory warranty or condition is limited to the duration of this written warranty.

The user manual can also be downloaded from our website:

www.hamiltonbeach.co.uk

cook with **confidence**

Hamilton Beach®

Trusted quality for over 100 years.

Discover the innovative and dependable products that have made Hamilton Beach a trusted name since 1910.

We make your cooking experience easier.

Join the Hamilton Beach family!

Visit www.hamiltonbeach.co.uk to sign up to our newsletter for exclusive offers, competitions & news

@hamiltonbeachuk

www.hamiltonbeach.co.uk



Hamilton Beach
Belfry House, Roydsdale Way
Bradford, BD4 6SU
01274 752624
www.hamiltonbeach.co.uk

Illustrations may differ from actual product. We are consistently striving to improve our products, therefore all specifications contained herein are subject to change without notice.

©2024 Hamilton Beach® Brands, Inc. Trademarks by Hamilton Beach® Brands, Inc. All rights reserved. Hamilton Beach® is a registered trademark of Hamilton Beach Brands, Inc. used under license by EPE International Limited.

The user manual can also be downloaded from our website.