 
 


Porch Rocker
Bascule de porche
Mecedora de porche

 
Assembly Instructions
instructions de montage
Instrucciones de montaje

BERLIN
GARDENS

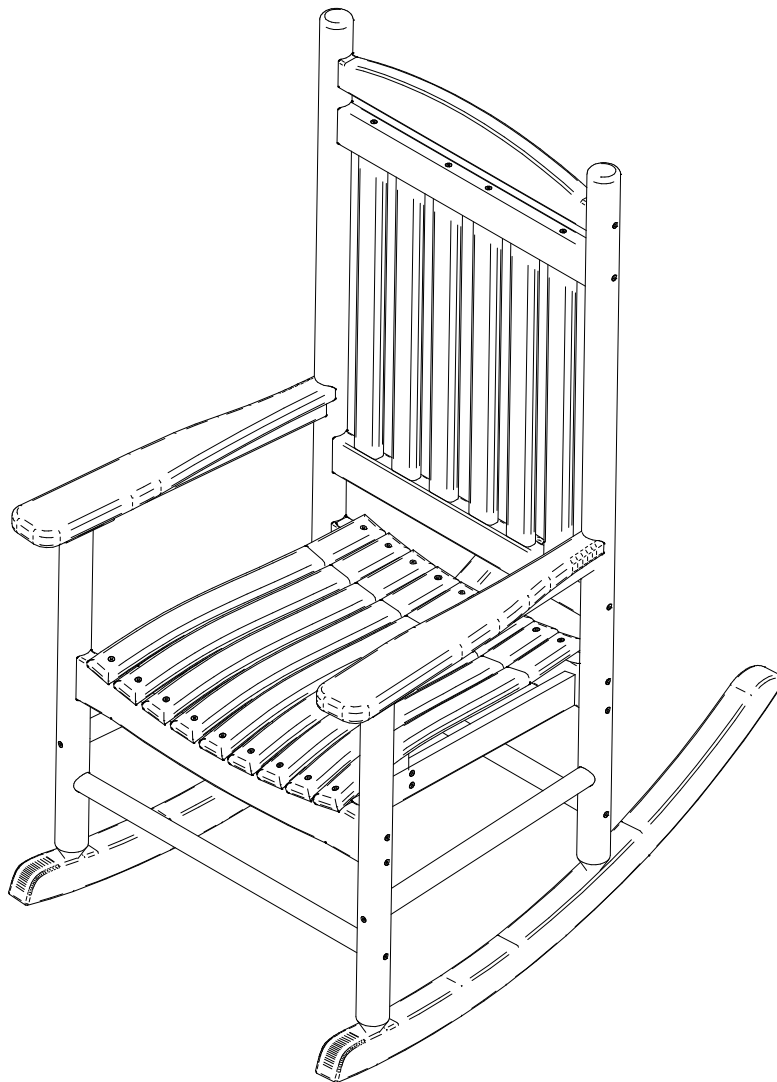


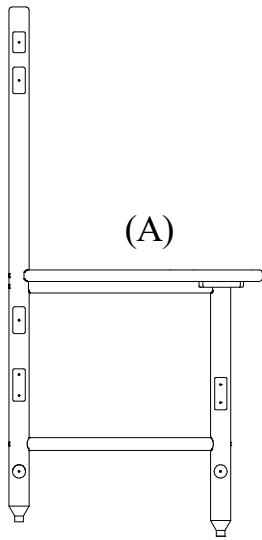


(A)

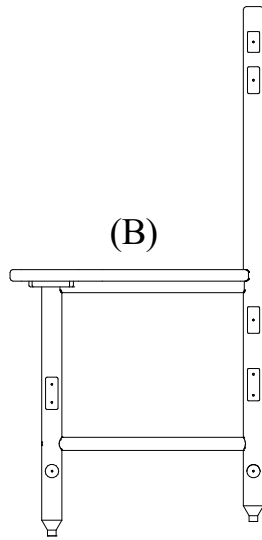


(B)

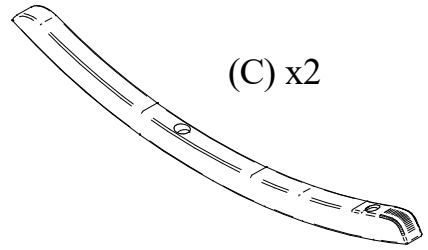 

 
(C) x2

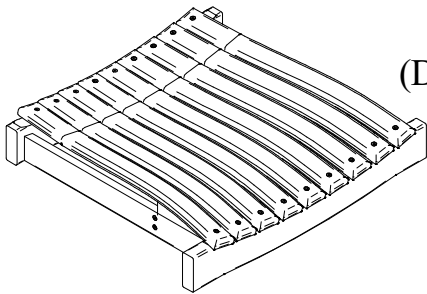


(D)

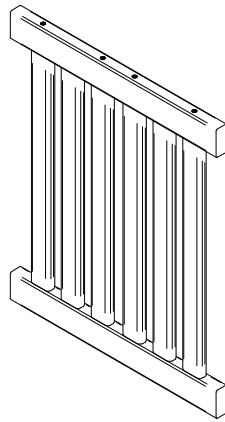 

(E)

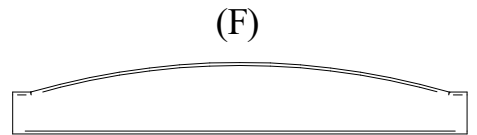 


(F)

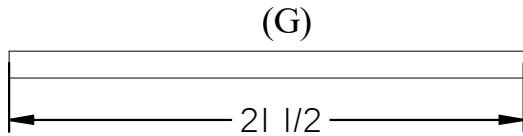 

(G)

 21 1/2

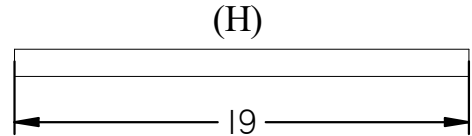


(H)

19


Hardware Included
Matériel inclus
Herrajes incluidos



 (114400) x4




(38300) x18

 

(95321) x1




 
Items Not Included
Articles non inclus
Artículos no incluidos

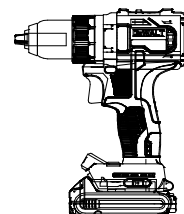


#2 Square Drive Bit
Embout d'entraînement carré #2
Punta cuadrada n.º 2



 
 
1 (A)
(B)
(C)

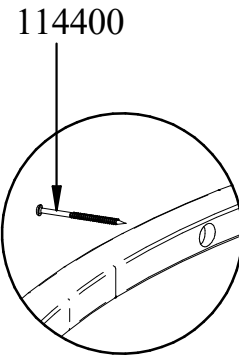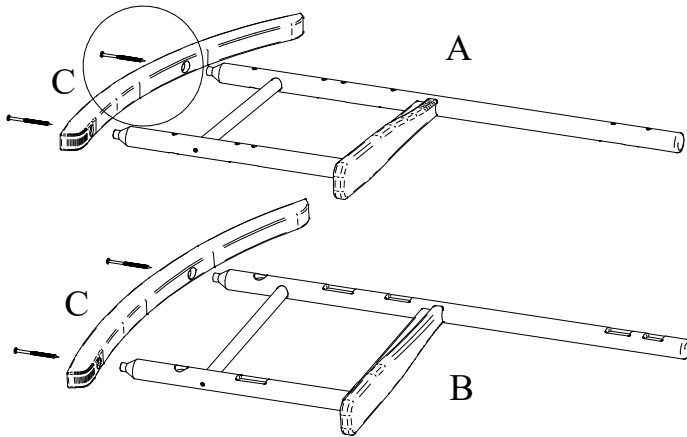


114400 x4

 



2 (B)
(D)
(E)
(F)
(G)
(H)

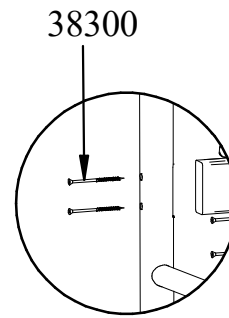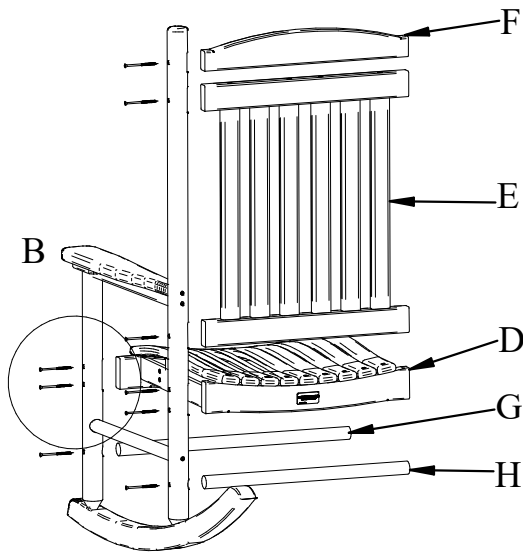  

38300 x9

 

3 (A)

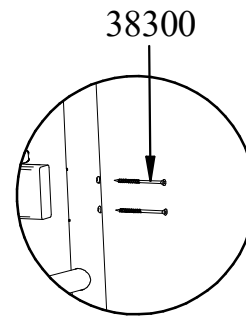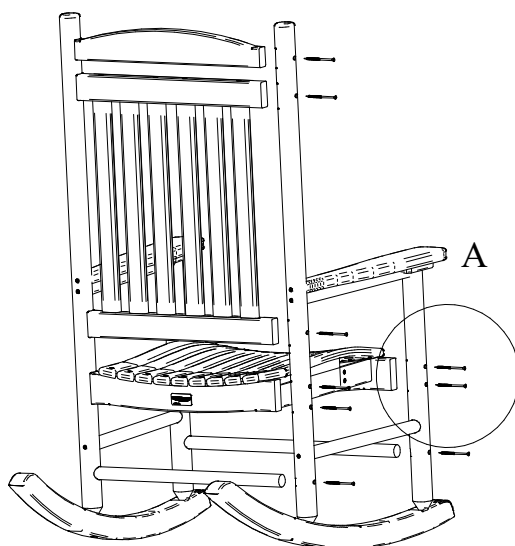  

38300 x9

