
Assembly Instructions Bookcase

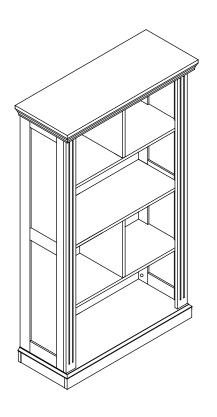

Thank you for purchasing our product!

Please assemble the products with the guidance of this manual instruction. Contact our friendly customer service department with any <u>comments</u> or in case there is any missing or damaged parts or hardware.


We appreciate your business!

Hardware List


ITEM	DESCRIPTION	PART	QTY	ITEM	DESCRIPTION	PART	QTY
Α	Cam Bolt 6X35mm		36 pcs	G	Bracket	∞	2 pcs
В	Cam Lock 15X12mm		36 pcs	Н	Cable Tie		1 pc
С	Wooden Dowel 8X30mm		20 pcs	I	Plastic Anchor		1 pc
D	Screw 4X40mm	© THE STATE OF THE	9 pcs	J	Plastic Cover	(1)	32 pcs
E	Screw 4X30mm	O	4 pcs	К	Screw 2.5X10mm	O.,	36 pcs
F	Screw 3X14mm		1 pc				

Note:

 1. Please be advised to have at least 2 persons to assemble this unit.





2. Tools not included, but assential for assembling this unit:

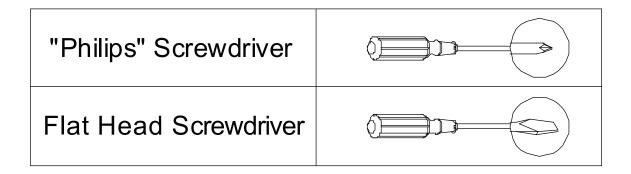


- Place a large cloth or blanket on the floor or flat surface to protect parts from scratching.
- 4. Before assembling this unit, please check that all parts and hardware are present.

Part List

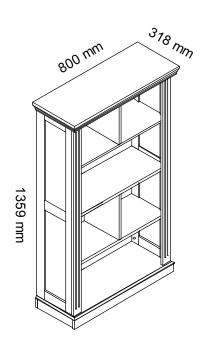


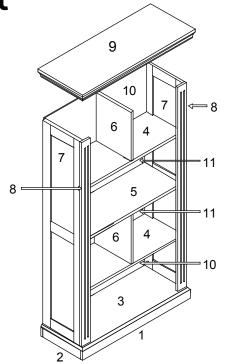


ITEM	DESCRIPTION	PART	QTY	ITEM	DESCRIPTION	PART	QTY
1	Bottom Long Rail		2 pcs	7	Side Panel		2 pcs
2	Bottom Short Rail		2 pcs	8	Front Deco Rail		2 pcs
3	Bottom Panel		1 pc	9	Top Panel		1 pc
4	Upper and Under Shelf		2 pcs	10	Upper and Under Back Panel		2 pcs
5	Middle Shelf		1 pc	11	Middle Back Panel		2 pcs
6	Divide Panel		2 pcs				

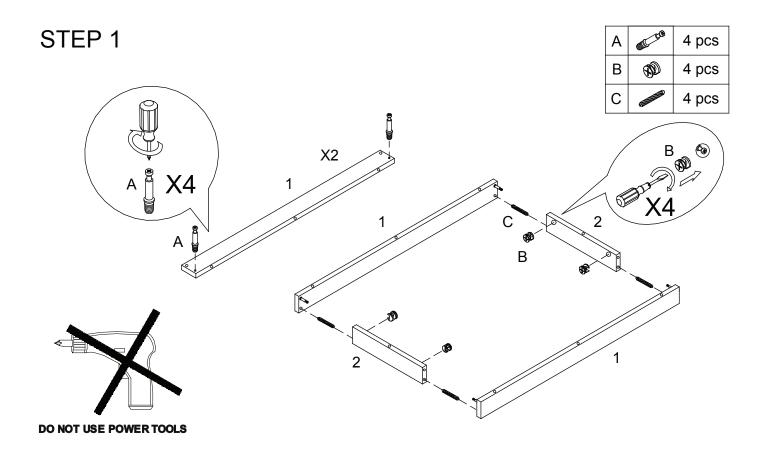


- 1. Tighten cam bolt (A) to bottom long rail (1).
- 2. Assemble bottom long rail (1) and short raill (2) together by using wooden dowel.
- 3. Insert cam lock (B) then rotate clockwise to secure cam bolt in place.

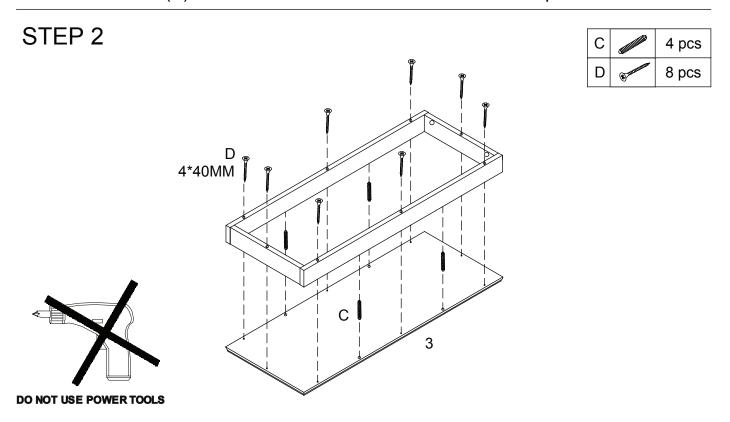


1. Attach bottom frame to bottom panel (3) by using wooden dowel (C) and screw (D).

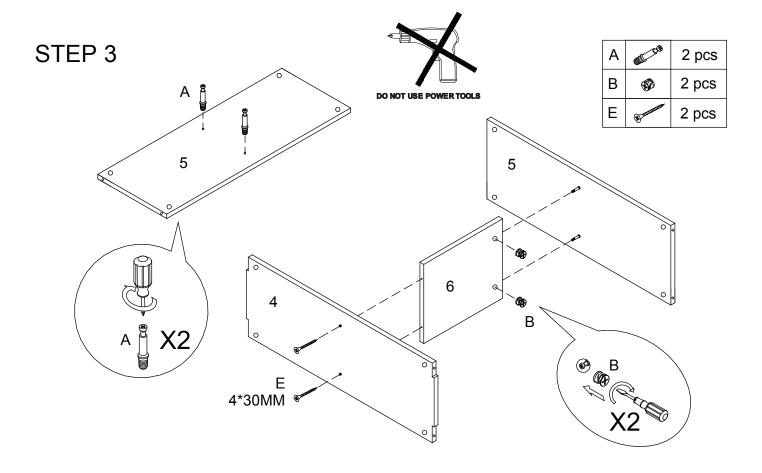


- 1. Tighten cam bolt (A) to middle shelf (5).
- 2. Attach divide panel (6) to middle shelf (5) and under shelf (4) by using screw (E).
- 3. Insert cam lock (B) then rotate clockwise to secure cam bolt in place.

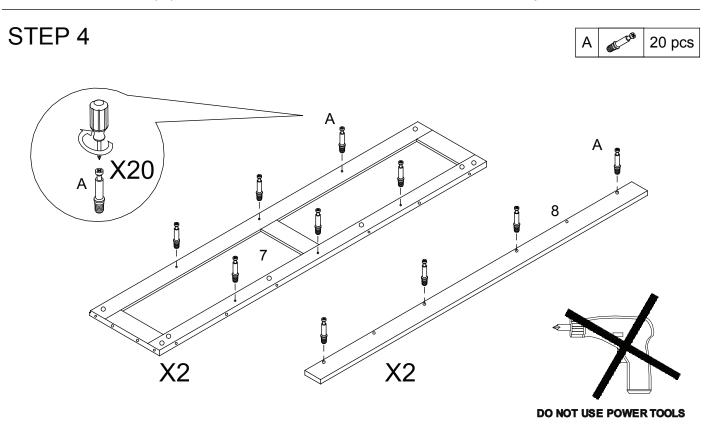


1. Tighten cam bolt (A) to side panel (7) and front deco rail (8).

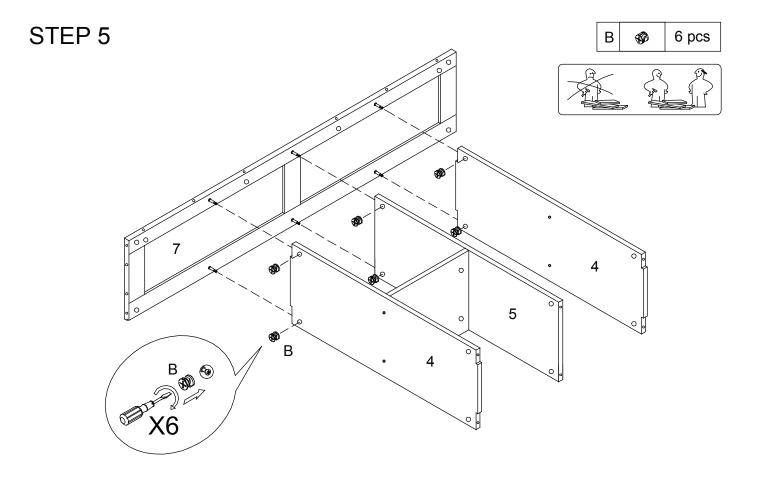


- 1. Attach upper shelf (4) and the unit from step 3 to side panel (7).
- 2. Insert cam lock (B) then rotate clockwise to secure cam bolt in place.

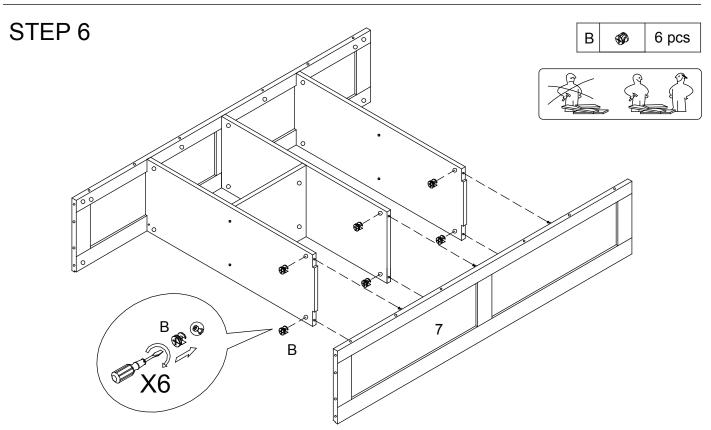


1. Attach side panel (7) and insert cam lock (B) then rotate clockwise to secure cam bolt in place.

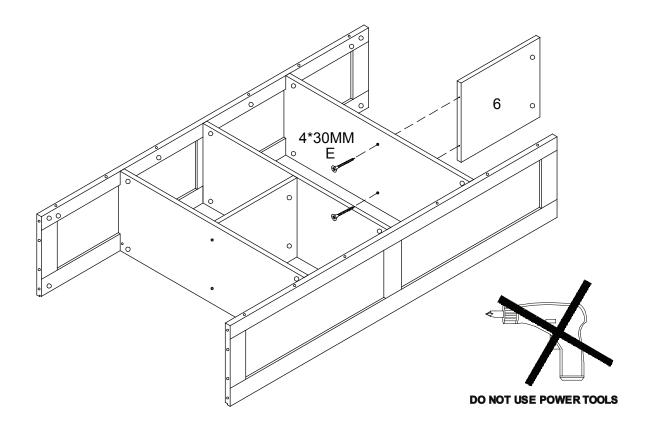


1. Attach divider panel (6) to upper shelf (4) by using screw (E).

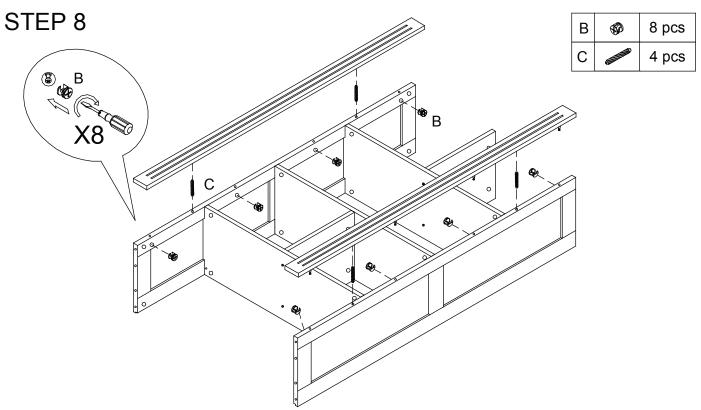

- 1. Attach front deco rail (8) by using wooden dowel (C).
- 2. Insert cam lock (B) then rotate clockwise to secure cam bolt in place .

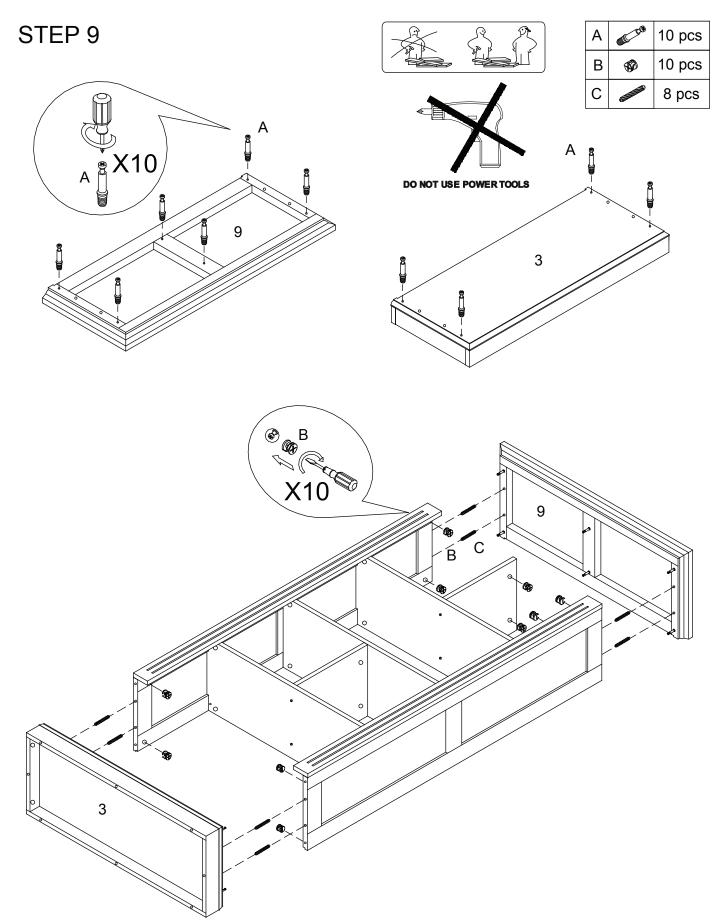


- 1. Tighten cam bolt (A) to top panel (9) and bottom panel (3).
- 2. Attach top panel (9) and bottom base to the assembly unit by using wooden dowel (C).
- 3. Insert cam lock (B) then rotate clockwise to secure cam bolt in place

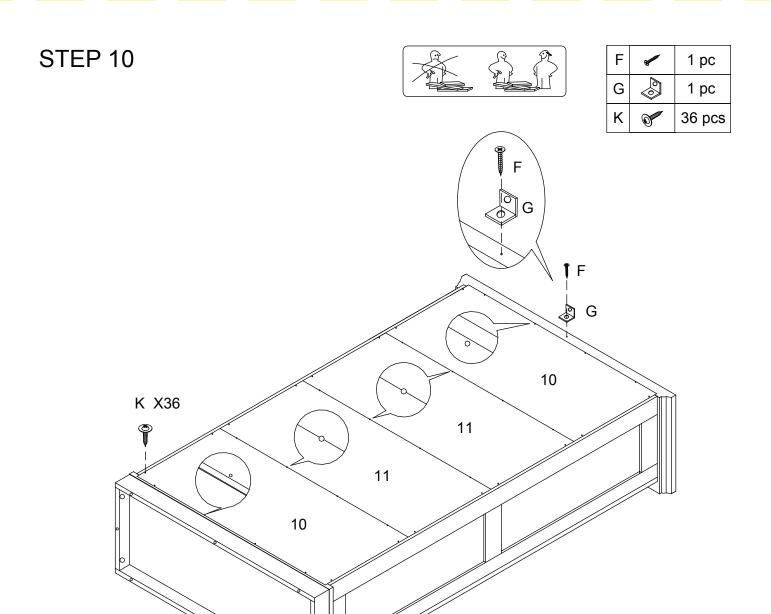


YOU CAN CHOOSE THE DESIGN OPTION A OR B.


OPTION A: BLUE COLOR WITH POLKA DOT

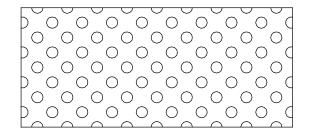

OPTION B: GRAY COLOR

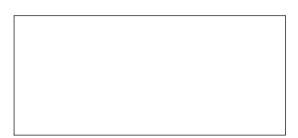

- 1. Rotate the product and attach back panel (10 & 11) by using screw (K).
- 2. Attach bracket (G) by using screw (F).

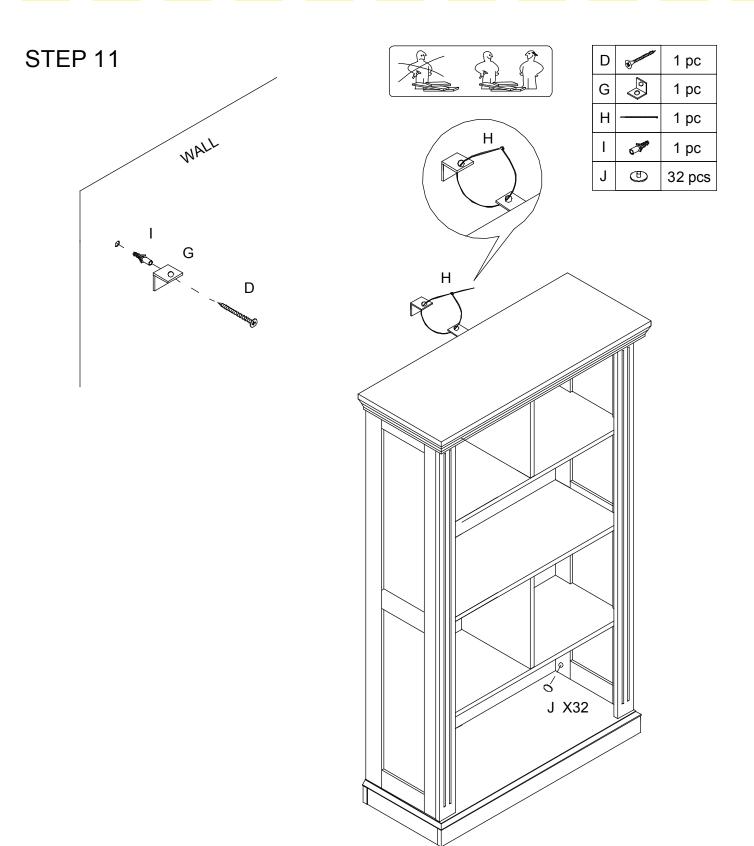

- 1. Drill a 7/32" hole in the dry wall. Press the plastic wall anchor (I) to the drywall. Ensure that the anchor fits securely in the wall.
- 2. Attach the bracket (G) to the wall by using screw (D).
- 3. Rotate the product and fix it on the wall using cable tie (H).
- 4. Cover all exposed holes by using plastic cover (J).