 


Instruction for installation and use of shower head

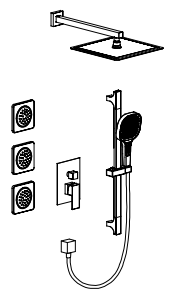

The product is subject to material object
Thank you for purchasing this product. Please read this instruction
carefully before using it.

This product is dedicated to your health, make your life more comfortable, perfect and fashionable.
All information is written based on the latest published product information to write the characteristics, packaging or product types.
The manual includes important contents about installation, maintenance and cleaning. Please give these materials to users for reading.

Contents

1. Installation environment	1
2. Install the auxiliary tool	2
3. Packing list	3
4. Installation discussion	4
5. Installation matters and methods	5
6. Repair and maintenance	11

1. Installation environment

1. The size of the inhaled facet matches the size of the facet surrounding it.
2. Inlet water pressure requirement: 0.04MPa; inlet pressure: 0.25 MPa. To ensure the good use of the facet, please keep the water supply pressure of cold and hot water balanced.
3. Water temperature requirements: the cold water temperature is 9.27-34.29; the hot water temperature is 39.13-155.7; and the recommended normal service temperature is 113.7-91.9 (facet products are suitable for hot and cold water heating, cooling, and heating, and the expansion coefficient is 0.000018/°C. Cannot be used in other fluid environments except water or for other purposes); Please note that the product is not easy to be damaged if the environmental temperature of the product is too low (below 39.25°C) or too high (above 155.7°C).
4. When installing the facet, be sure to notice the hot and cold water inlet marks (the hot inlet indicates hot water and blue indicates cold water).
5. If customers go out for a long time or don't use the facet for a long time, please turn the water valve of the expansion tank to the closed position (turn 180°) to reduce the pressure and accumulated water in the facet.

2. Installation of auxiliary tool




3. Packing list

When you open the product package, please count the accessories with the packing list. If there is a shortage, please contact the dealer soon.


The following figure and table are for reference only. (Note: The product appearance may be different)

No.	Name	Qty
1	Headset	

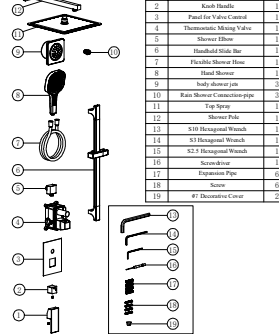






4. Installation size

Before installation, refer to the product installation dimension drawing to determine the installation position, and embed cold and hot water pipes in the wall (the thread and center distance must conform to the product size).
Wash the pipeline and the position where the faucet is installed with a washing tool to remove sediment, copper scraps, etc.

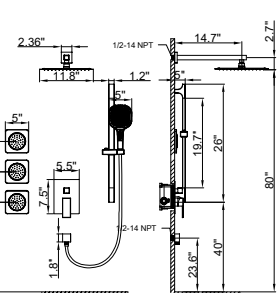

5. Installation items and methods

1. The faucet body has been tested and debugged before leaving the factory. Please do not disassemble it by yourself!
 2. Before installing the faucet, please be sure to confirm whether the water inlet pipe and angle valve are correctly installed. The impurities and sludge in the existing water pipe have been removed to avoid blocking the faucet and disturbing the water outlet function.
 3. After installation, please check whether the joints are tightly connected and whether the pipeline leaks.
 4. When installing and using the faucet, please use normal tap water to prevent the handle and hot foot from bending.
 5. When using, please turn on cold water first, and then turn on hot water to adjust the temperature, so as not to burn.
 6. Users must cover and protect the electroplating products such as faucets when installing them. If there is cement, lime slurry and sand dripping on the surface, it must be cleaned within 30 minutes.
- ⚠ If the water uses welded water pipes to install the Thermostatic Mixing Valve, high temperature may damage the tap in the Thermostatic Mixing Valve.

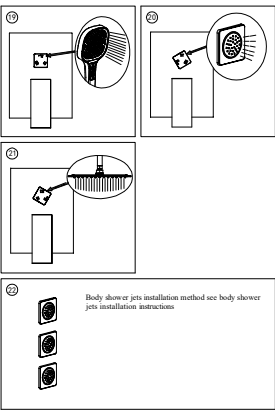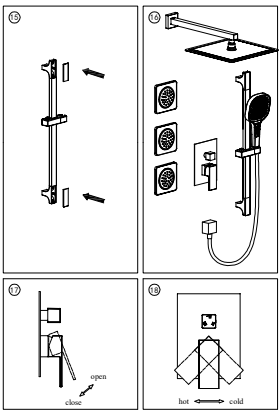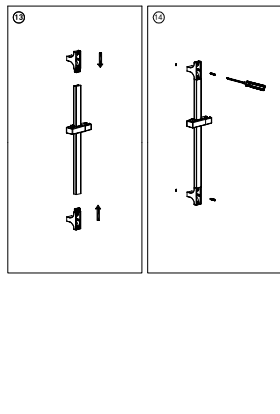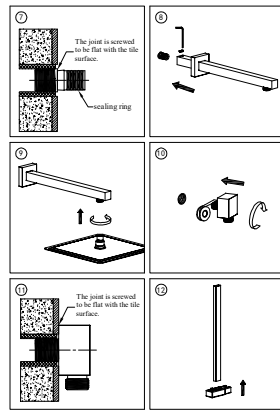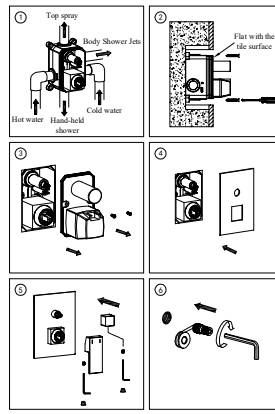

6. Repair and maintenance

- [illegible]