ASSEMBLY INSTRUCTIONS

WARNING!

- ☐ Chair have a 250 lbs weight capacity.
- ☐ Hang cushion over chair frame to dry if it gets wet to prevent mold/mildew.


ATTENTION:

- 1. Please read these instructions carefully before assembly.
- 2. Aluminum is soft metal over tighten may strip threads or break the part.
- 3. DO NOT use power tools.
- 4. Check parts against the parts list to make sure you have all parts needed for proper assembly.
- 5. Familiarize yourself with the inventory of parts and the accompanying illustrations to ensure safe and proper assembly.

Assembly steps:

- 1. Loosely attached the clean back(C) to the left arm and right arm with bolt(E), flat washers(F), lock washers(G), nuts(H). DO NOT tighten the nuts.
- 2. Leave enough play for assembly the seats, push the seat to the seat to the gap between the arms and seat, tighten the bolt(E), flat washer(F), lock washer(G) and nut(H).
- 3. Finally attach the nut cap(I) to the back nuts. Tighten all the screw.
- 4. Turn the chair onto its legs and use the adjuster feet to level the legs.

Warning: please do not use acid or alkaline washing liquid to clean the product.

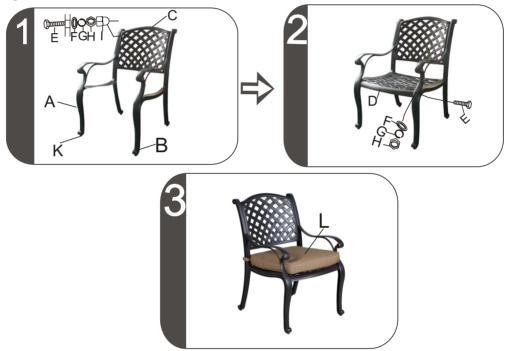

Parts list	Parts picture	Description	Qty		Parts list	Parts picture	Description	Qty
А	A	Left arm	1		Е	(M8*35)	Bolt	8
В	A	Right arm	1		F	(M8)	Flat washer	8
С		Back	1		G	(M8)	Lock washer	8
D		Seat	1		Н	(M8)	Nut	8
K	-	Foot leveler	Factory already assembled		ı	(M8)	Nut cap	4
L	Translation paids	Cushion	1		J	2_3	Wrench	1

Made in China

*** DO NOT OVER TIGHTEN**

***NO POWER TOOLS**

***NO SOCKET DRIVERS**





ASSEMBLY INSTRUCTIONS

Parts List							
Pieces		Schema	Description	QTY			
Α		(M8*55)	Screw	4			
В			Flat washer	4			
С			Lock washer	4			
D			Nut	4			
Е		•	Alu plate	4			
F		(M8)	Nut cap	4			
G	6	3	Wrench	1			
Н			РЕ сар	Factory already assembled			
ı			Seat	1			
	1	\bigcirc	Base	1			
	2	•	Alu plate	2			
	3		Spring plate	2 2 4			
<u>ل</u> ا	4	(M8*35)	Screw	4			
	5		Flat washer	4			
	6		Lock washer	4			
	7		Nut	4			
	8	1	TR	1			
K			Seat Cushion	1			




WARNING!

- O This chair has a 250 lbs weight capacity.
- O Hang cushion over chair frame to dry if it gets wet to prevent mold/mildew.

ATTENTION:

- 1. Please read these instructions carefully before assembly.
- 2. Aluminum is soft metal over tighten may strip threads or break the part.
- 3. DO NOT use power tools.
- 4. Check parts against the parts list to make sure you have all parts needed for proper assembly.
- 5. Familiarize yourself with the inventory of parts and the accompanying illustrations to ensure safe and proper assembly.

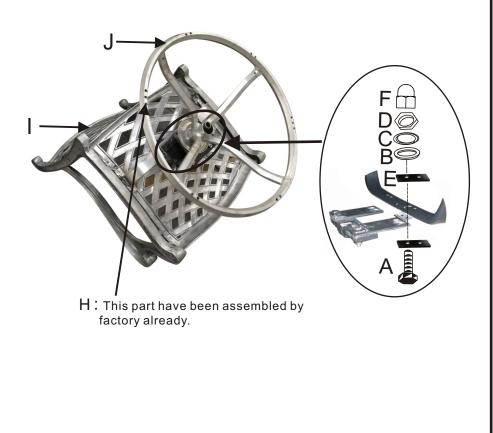


- Before removing all protective packing material and position base on floor. Attach the seat(I) onto the base (J)with Alu plate as the picture, then assemble using bolt(A), flat washers(B), lock washers(C), nuts(D) and nut cap(F). Be sure to the arrows face to front.
- 2. Tighten all the bolts and nuts. Test the swivel rocker gently. If the rocker does not rock properly, double check the assembly procedure.
- 3. Remove all protective packaging.
- 4. Put Cushion(K) on the unit(as shown in the picture).

Warning DO NOT use acid or alkaline washing liquid to clean the product.



***DO NOT OVER TIGHTEN**

 ***NO SOCKET DRIVERS**



***NO POWER TOOLS**



ASSEMBLY INSTRUCTIONS


ATTENTION:

- 1. Please read these instructions carefully before assembly.
- 2. Aluminum is soft metal over tighten may strip threads or break the part.
- 3. DO NOT use power tools.
- 4. Check parts against the parts list to make sure you have all parts needed for proper assembly.
- 5. Familiarize yourself with the inventory of parts and the accompanying illustrations to ensure safe and proper assembly.

Assembly step:

- 1. Turn the table top(A) upside down on the soft clean surface. Loosely attach the legs(C) to the table top (A) using the bolts(E) followed by flat washers(F), lock washers(G), nuts(H) and nut caps(I). DO NOT tighten the nuts.
- Loosely attach each of the center ring(B) to the legs.
 Secure using flat washers(J), lock washers(K), bolts(L) and PVC covers(M).
- 3. Tighten all the bolts and nuts completely. DO NOT over-tighten. Turn the table onto its legs and use the adjuster feet to level the tables.
- 4. To extend the table, wrench the adjust handle (N) while pulling out the top panels. Lift the removable panels and lay them on table top structure then open the last panel on opposite side. push top panels toward center of table and wrench the adjust handle (N).
- 5. Table is now ready to use.

Warning: DO NOT use acid or alkaline washing liquid to clean the product.

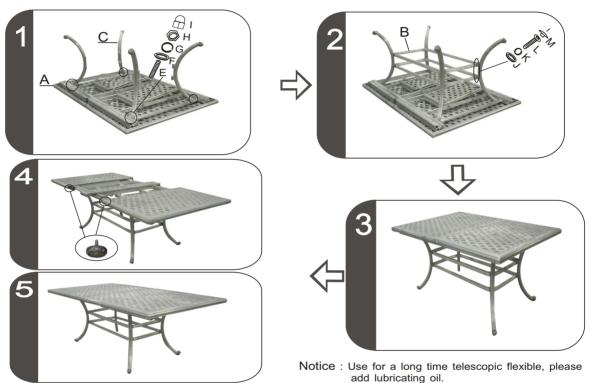

Parts list	Parts picture	Description	Qty		Parts list	Parts picture	Description	Qty
Α		Table top	1		E	())))))))))))))))))))))))))))))))))))	Bolt	4
			+ -	-	F	(M8)	Flat washer	4
В		Center ring	2		G	(M8)	Lock washer	4
C		Table leg	4		Н	(M8)	Nut	4
	~~~		. 1	+		(M8)	Nut cap	4
_ D	55	Wrench 1	ı		J	(M6)	Flat washer	8
0		Wrench	1		K	(M6)	Lock washer	8
<u> </u>		Foot leveler alrea	Factory already assembled	1	L	(M6*35)	Bolt	8
Р	•				M	(M6)	PVC cover	8
Q		Umbrella cover	1		Ν	<b>Q</b>	Adjust handle	2

Made in China

***DO NOT OVER TIGHTEN** 

***NO POWER TOOLS** 





