

Instructions & Care

⚠️WARNING!

Do not operate an outdoor appliance or machine with the cover on. Fabric is NOT fire resistant. Keep away from open flames or burning logs.

⚠️CAUTION!

When covering an outdoor appliance, let it cool before you put the cover on it.

⚠️CAUTION!

Remove all cushions to avoid possible mildew before covering your furniture.

⚠️CAUTION!

 
Cushion/Cover Storage Bag is NOT WATER PROOF. To avoid possible moisture and/or mildew of contents do not store the cushion storage bag outside.

Our cover may have one or more of these features:


INSTALLATION: Check your patio furniture, appliance or machine to make sure there are no sharp objects or corners that could stress your cover as you pull it on.

CUSHION BAG: To avoid any possibility of mildew, be sure your bag is completely dry before you store it in an enclosed area for long periods of time.


CLEANING AND CARE: Hand wash with lukewarm water. DO NOT USE SOAP OR DETERGENT as it may remove the protective coatings added by the factory. Do not pack wet. Air dry.

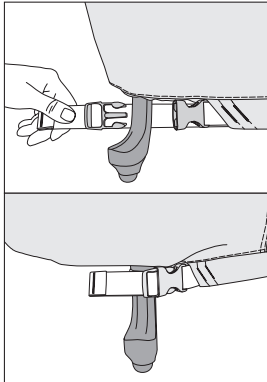

 
Click-close straps tighten securely to the legs of your furniture.

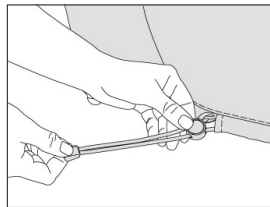

 Adjustable cord closure for a secure and tight fit.

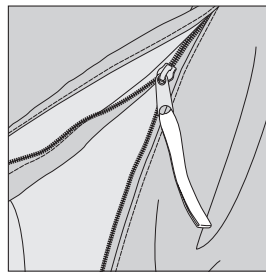

Zipper with convenient zipper pull.

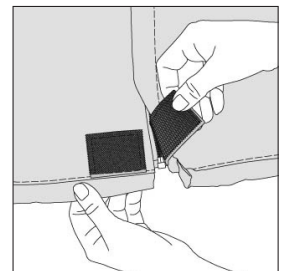 

Easy to use rip and grip closure.

