

IRON SCROLLWORK FLOOR LAMP

PACKAGE CONTENTS

A. Upper Body
B. Pole
C. Pole
D. Pole
E. Pole
F.. Lamp Base
G. Shade
H. Socket Nut

CAUTION: TO PREVENT ELECTRIC SHOCK, MATCH WIDE BLADE OF PLUG TO WIDE SLOT, FULLY INSERT.

This portable lamp has a polarized plug (one blade is wider than the other) as a feature to reduce risk of electric shock, this plug will fit in a polarized outlet only one way. If it does not fit fully in the outlet, reverse the plug. If it still does not fit, contact a qualified electrician. Never use with an extension cord unless the plug can be fully inserted. Do not alter this plug. Save these instructions for future reference.

PREPARATION

Before beginning assembly and installation of product, make sure all parts are present. Compare parts with package contents list and diagram above. If any part is missing or damaged, do not attempt to assemble, install or operate the product. Contact customer service for replacement parts.

Lay out all lamp parts from box and put them on a flat surface.

ASSEMBLY AND INSTALLATION INSTRUCTIONS

Start assembly from top to bottom:

1. Screw upper body (A) onto pole (B) clockwise to tighten. Pull any excess cord gently through the poles so that these parts fit.
2. Screw pole (B) into pole (C) clockwise to tighten.
3. Screw pole (C) into pole (D) clockwise to tighten.
4. Screw pole (D) into pole (E) clockwise to tighten.
5. Screw pole (E) onto lamp base (F) clockwise to tighten
6. Insert lamp shade (G) onto upper body (A) and tighten with the socket nut (H). **If the socket nut is already screwed into the upper body (A), you will need to unscrew the socket nut (H) from the upper body (A) before you insert the lamp shade (G).**
7. Install light bulb. Only use bulb of the specified type and maximum rated wattage or less.

CARE AND MAINTENANCE

Clean with soft dry cloth. Do not use abrasives.

Bulb replacement:

Use a 3-Way 150 Watt E26 standard base bulb or LED equivalent.

Bulb not included.

Shut off main power supply before replacing bulbs

