



Electric Standing Desk


Elektrischer Stehschreibtisch

Instruction Manual

Bedienungsanleitung

EGESD4 / EGESD5 / EGESD71

Rev01

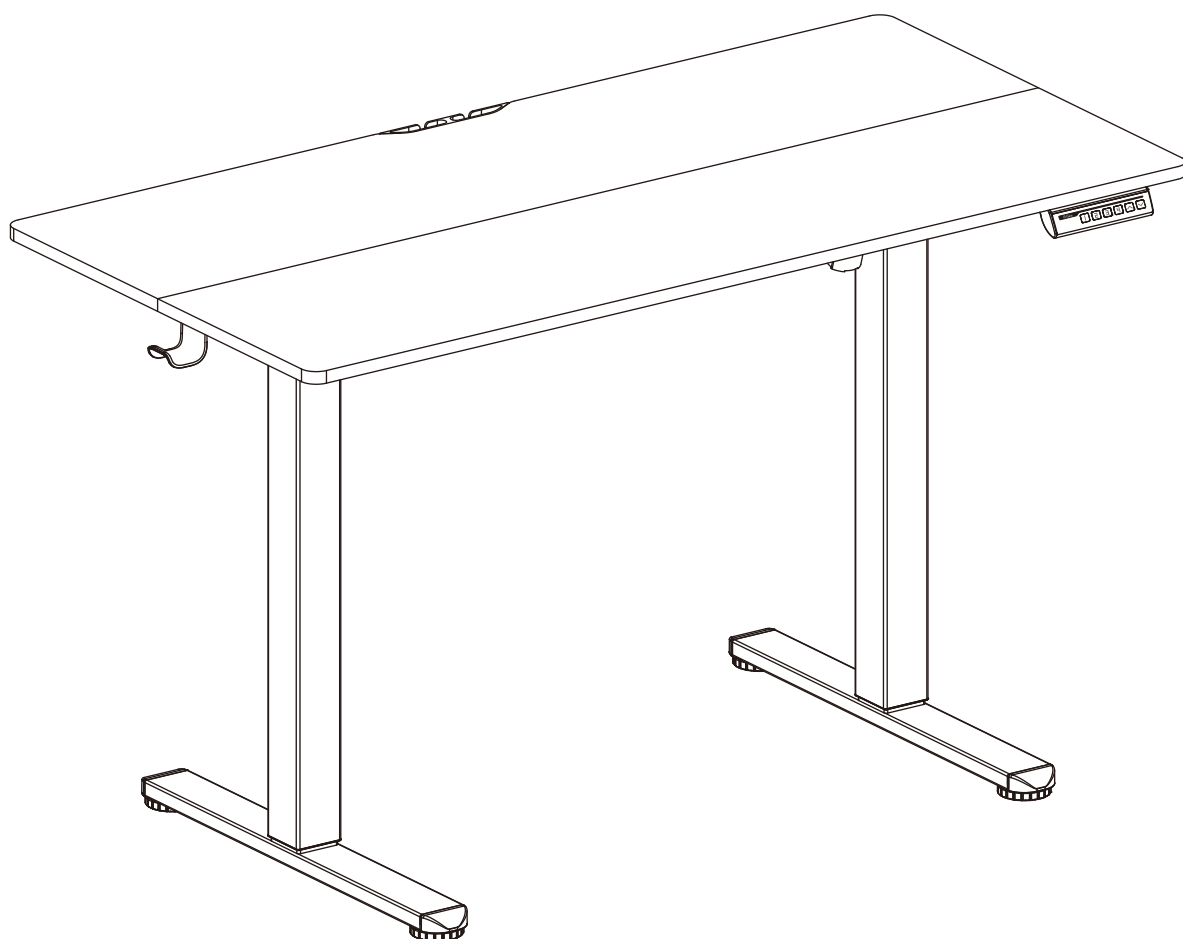

English	-----	01-16
Deutsch	-----	17-32



1-800-651-9525 (US/CA) Mon-Fri, 8am-8pm (CST)
44-808-196-3875 (UK) Mon-Fri, 2pm-10pm (UTC)



support@ergear.com



www.ergear.com

UK Declaration of Conformity

Declaration Number: 20240929

We, hereby declare that the essential requirements set out in the **Electromagnetic Compatibility Regulations 2016/1091 (EMC)** , **Electrical Equipment(Safety) Regulations 2016:(LVD)** have been fully fulfilled on our product with indication as below:

Product Name	Electric Standing Desk
Product Description	Height Adjustable Desk for Home Office
Brand Name / Model	EGESD4、EGESD5、EGESD71

The following standards have been applied for the investigation of compliance:

	Testing Standard	Test Report	Testing Lab
☒ Safety	EN 60335-1: 2012+A11:2014+A13:2017+A1:2019 +A14:2019 +A2:2019+A15:2021 EN 62233:2008	S24051405001001	Shenzhen NTEK Testing Technology Co., Ltd.
☒ Safety (Adaptor)	EN IEC 61558-1:2019, EN 61558-2-16:2009+A1:2013 EK1 527-12 Rev.2, EK1 557-13	CN24JP44 001	TÜV Rheinland (Guangdong) Ltd.
☒ EMC	EN IEC 55014-1:2021 EN IEC 55014-2:2021 EN IEC 61000-3-2:2019+A1:2021 EN 61000-3-3:2013+A2:2021	S24051405002001	Shenzhen NTEK Testing Technology Co., Ltd.

Furthermore, the ISO requirement for the in-process quality control procedure as well as the manufacturing process has been reached. The technical document as well as the test reports will be kept for a period at least 10 years after the last product has been manufactured at the disposal of the relevant national authorities of any Member State for inspection.

Detail contact information for this declaration has been listed below as the window of any issues relevant for this declaration.

Manufacturer Information:

Company	BESTQI INNOVATION (HONGKONG) TECHNOLOGY CO., LIMITED		
Address	Rm 4, Unit G 4/F, BLK 1 KOON WAH MIRROR FTY.(6th) IND., BLDG. 7-9 Ho Tin St., TUEN MUN, N.T., HONG KONG		
Name/Title	Ivy Chen / Certification Specialist		
Tel. No.	00852-30697751	Fax No.	/

Authorised Representative

Company	ERGEAR TECHNOLOGIES LIMITED
Address	SOUTH GYLE WESTPOINT 4 REDHEUGHS RIGG EDINBURGH Scotland EH12 9DQ GB

Ivy Chen

Signature / stamp Date: 2024-9-29

EU Declaration of Conformity

Declaration Number:20240929

We, hereby declare that the essential requirements set out in the **Directive 2014/30/EU Electromagnetic Compatibility (EMC) , 2014/35/EU (Low Voltage Directive)** have been fully fulfilled on our product with indication as below:

Product Name Electric Standing Desk
Product Description Height Adjustable Desk for Home Office
Brand Name / Model EGESD4、EGESD5、EGESD71

The following standards have been applied for the investigation of compliance:

	Testing Standard	Test Report	Testing Lab
☒ Safety	EN 60335-1; 2012+A11:2014+A13:2017+A1:2019 +A14:2019 +A2:2019+A15:2021 EN 62233:2008	S24051405001001	Shenzhen NTEK Testing Technology Co., Ltd.
☒ Safety (Adaptor)	EN IEC 61558-1:2019, EN 61558-2-16:2009+A1:2013 EK1 527-12 Rev.2, EK1 557-13	CN24JP44 001	TÜV Rheinland (Guangdong) Ltd.
☒ EMC	EN IEC 55014-1:2021 EN IEC 55014-2:2021 EN IEC 61000-3-2:2019+A1:2021 EN 61000-3-3:2013+A2:2021	S24051405002001	Shenzhen NTEK Testing Technology Co., Ltd.

Furthermore, the ISO requirement for the in-process quality control procedure as well as the manufacturing process has been reached. The technical document as well as the test reports will be kept for a period at least 10 years after the last product has been manufactured at the disposal of the relevant national authorities of any Member State for inspection.
Detail contact information for this declaration has been listed below as the window of any issues relevant for this declaration.

Manufacturer Information:

Company BESTQI INNOVATION (HONGKONG) TECHNOLOGY CO., LIMITED
Address Rm 4, Unit G 4/F, BLK 1 KOON WAH MIRROR FTY.(6th) IND., BLDG.7-9 Ho
Tin St., TUEN MUN, N.T., HONG KONG
Name/Title Ivy Chen / Certification Specialist
Tel. No. 00852-30697751 **Fax No.** /

Authorised Representative

Company BSQ Technology GmbH
Address Feringastr. 6, Unterföhring, 85774 ,DE

Ivy Chen

Signature / stamp Date: 2024-9-29

IMPORTANT SAFETY INFORMATION

- With proper supervision and instruction, this desk can be used by children 8 years and above and by persons with reduced physical, sensory, or mental capabilities. Users must understand safe operation and the potential hazards involved.
- Cleaning and user maintenance shall not be performed by children.
- The desk is only to be used with the power supply unit provided.
- Disconnect the power supply when performing maintenance and cleaning.
- Examine the desk frequently for signs of wear or damage. If there are such signs or if the desk has been misused or does not work, contact the supplier for further information.
- When operating a switch that initiates and maintains the movement of the furniture, terminates the movement of the furniture, or causes a change of the direction of the furniture, make sure that all persons are kept clear of movement.
- Properly place the desk to avoid creating collision hazards with other furniture.
- Dust off regularly to keep your desktop clean. Power off the desk, then use a damp piece of cloth to gently rub the surface.



For indoor use only

Specifications



Height Adjustment Range
28.3-46.5" (72-118cm)



Power Input
100V-240V




Max. Speed
20mm/s




Operating Noise
≤55dB

Tools Needed (Not Included)

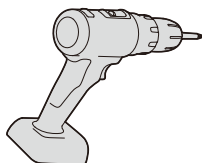

Drill

 OR



Phillips Screwdriver

Step 1

Supplied Parts and Hardware

A x 4



Bolt
M6 x 11mm

B x 8



 
Bolt
M6 x 35mm

C x 1




Large Allen Wrench
3/16" (5mm)

01 x 1



Leg with Motor

 02 x 1




Leg

03 x 2



Leg Base

 08 x 1



Crossbar

Step 2

Supplied Parts and Hardware

A x 4



Bolt
M6 x 11mm

C x 1



Large Allen Wrench
3/16" (5mm)

D x 1



 
Small Allen Wrench
5/64" (2mm)

04 x 1



Transmission Rod


07 x 2



Side Plate

Step 3 Supplied Parts and Hardware

 E x 18



Screw
M5 X 15mm

F x 4



Wood Dowel Pin

G x 2



Desktop Panel Connector

H x 2



Storage Hook

K1 x 2



Cam Bolt

K2 x 2




Cam Lock

05 x 1



Controller

09 x 1

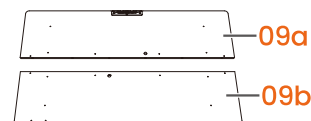

Desktop

 
Step 4 Supplied Parts and Hardware

J x 2



Cable Clip

06 x 1



Power Cable

**Actual part
may vary.**

Not all hardware included in this package will be used.

Contact Us

If you receive parts that are damaged, defective, or are missing parts, please contact us.


 



1-800-651-9525 (US/CA) Mon-Fri, 8am-8pm (CST)
44-808-196-3875 (UK) Mon-Fri, 2pm-10pm (UTC)





support@ergear.com

Step 1 Assembling the Desk Legs

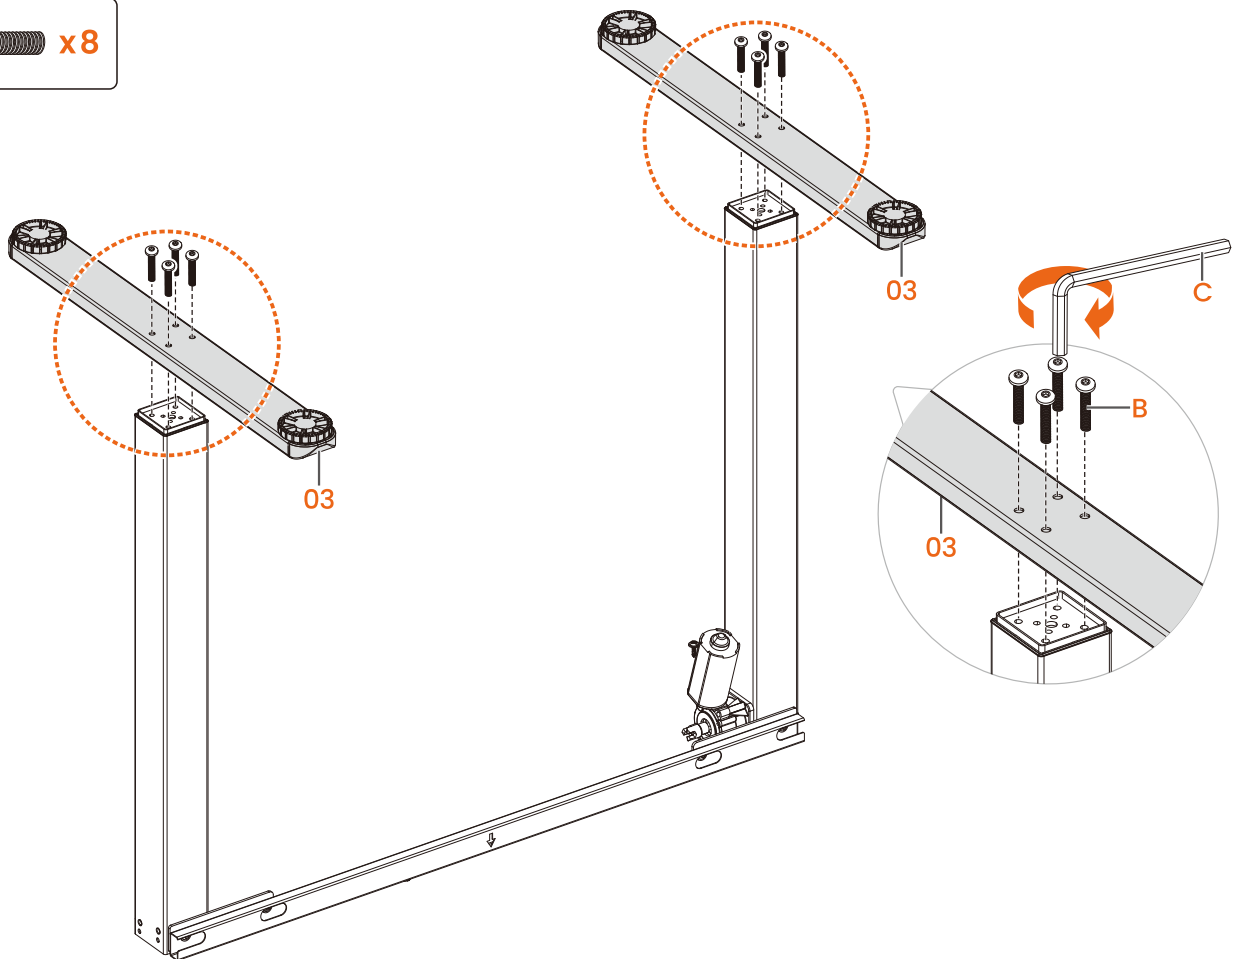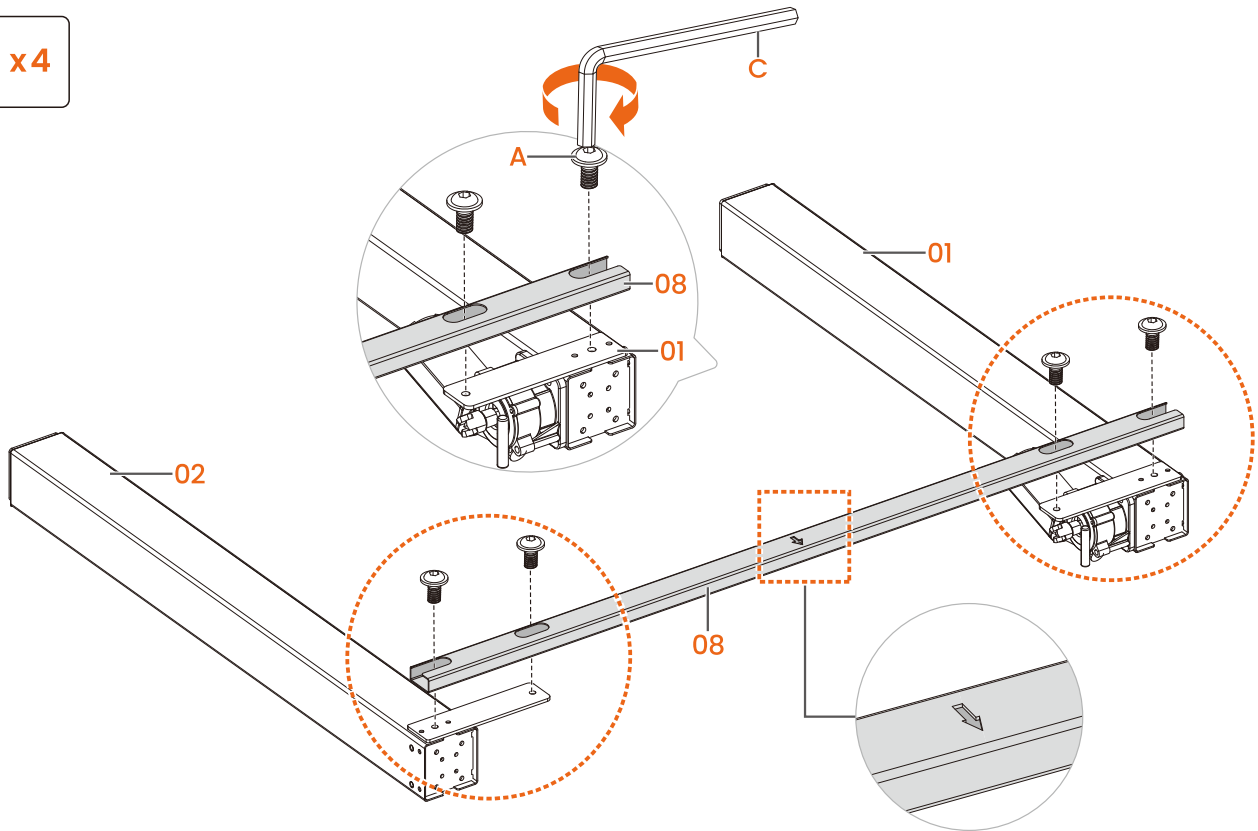


Step 2

Attaching the Side Plates and the Transmission Rod

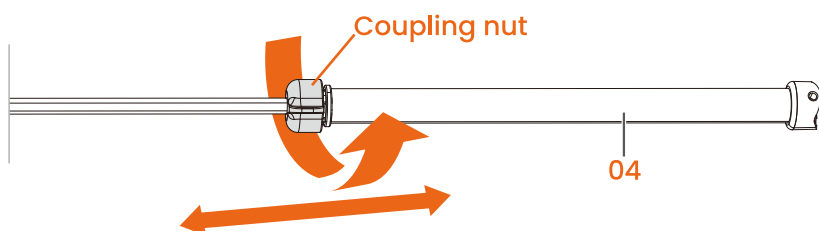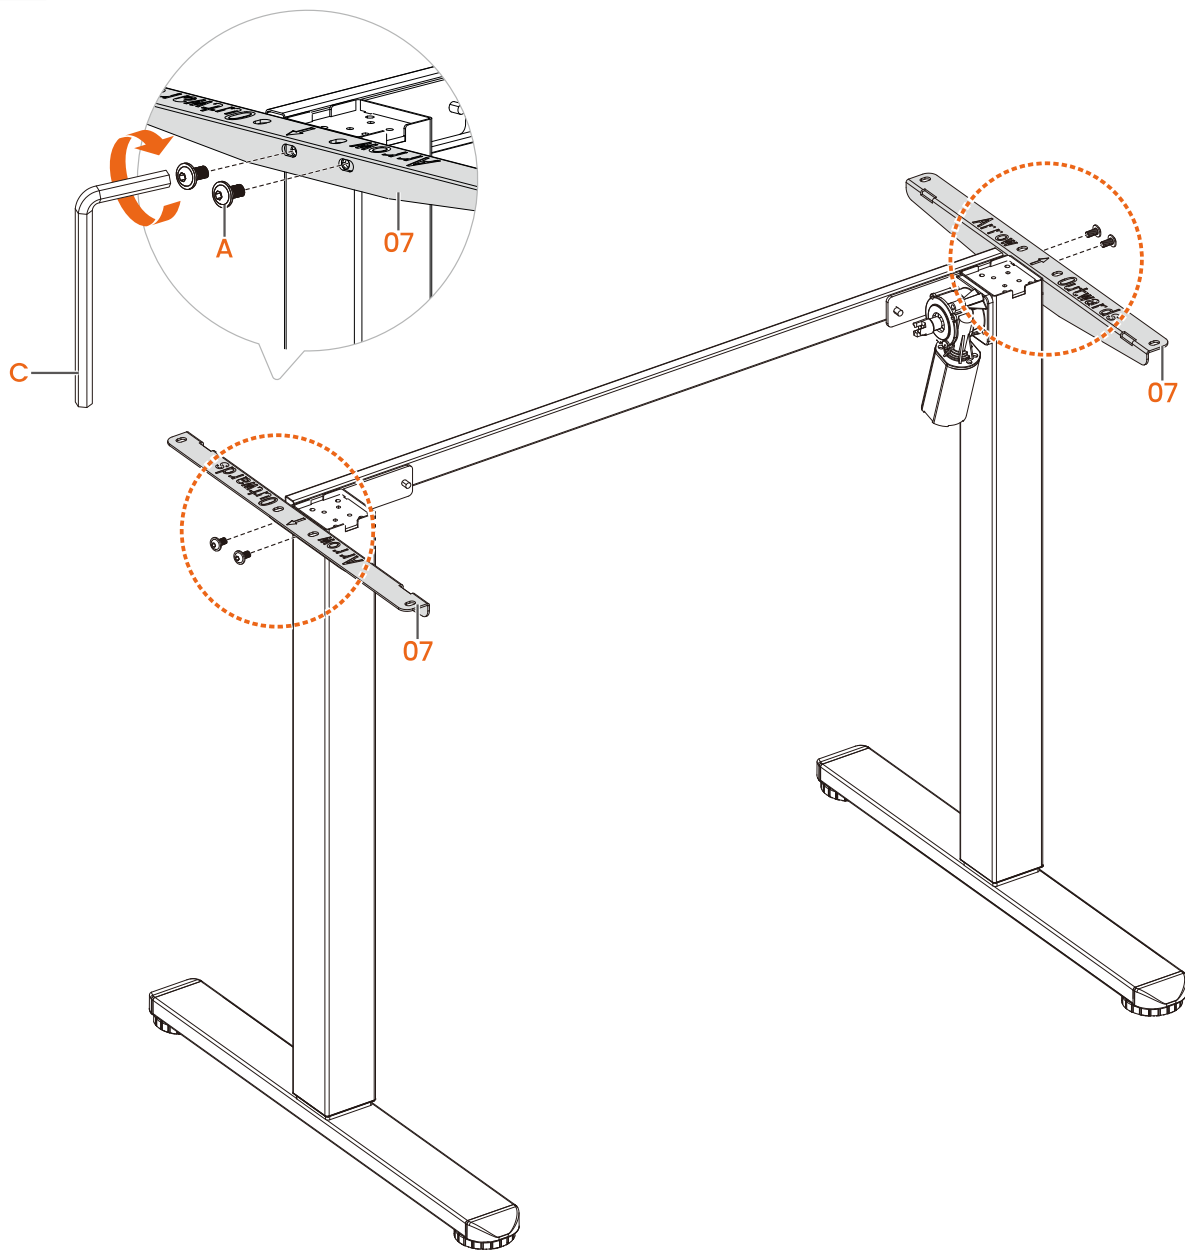


Loosen the coupling nut.

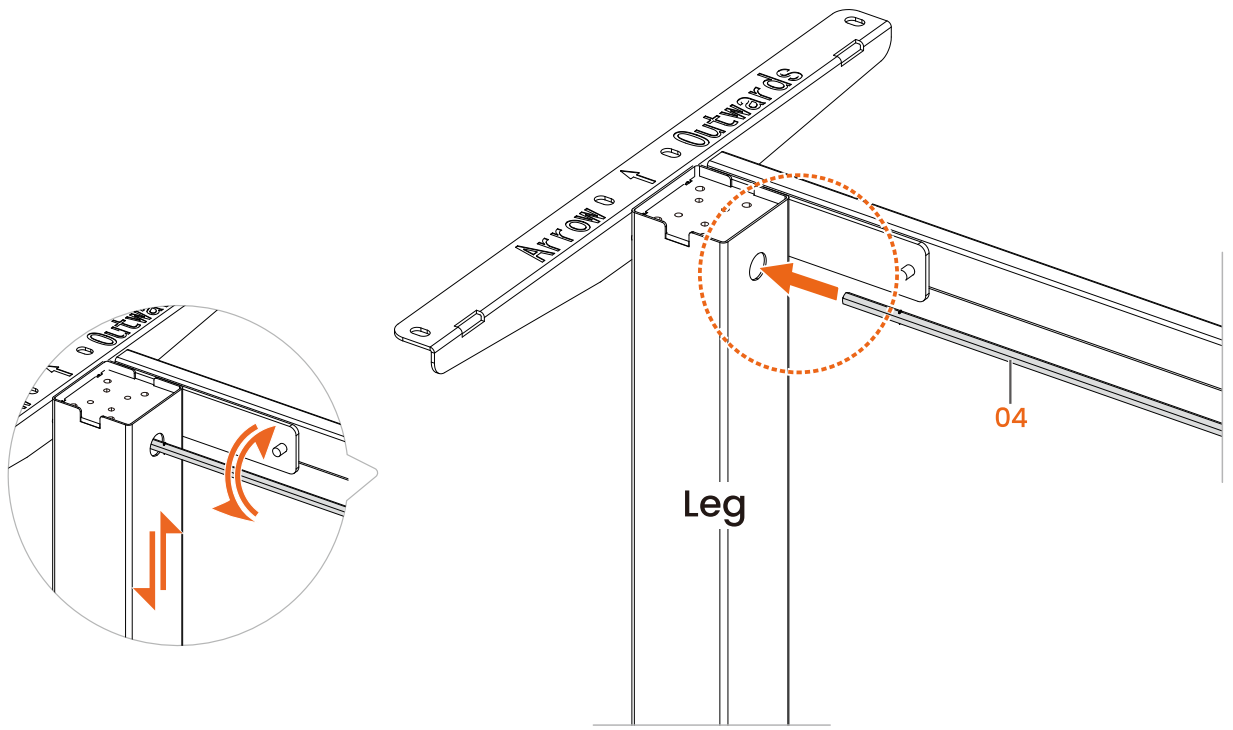


Adjust uneven desk legs if needed:


Measure the heights of the two desk legs to see if they are set at the same level. If not, turn the rod to raise or lower the leg until it's level with the leg with motor.

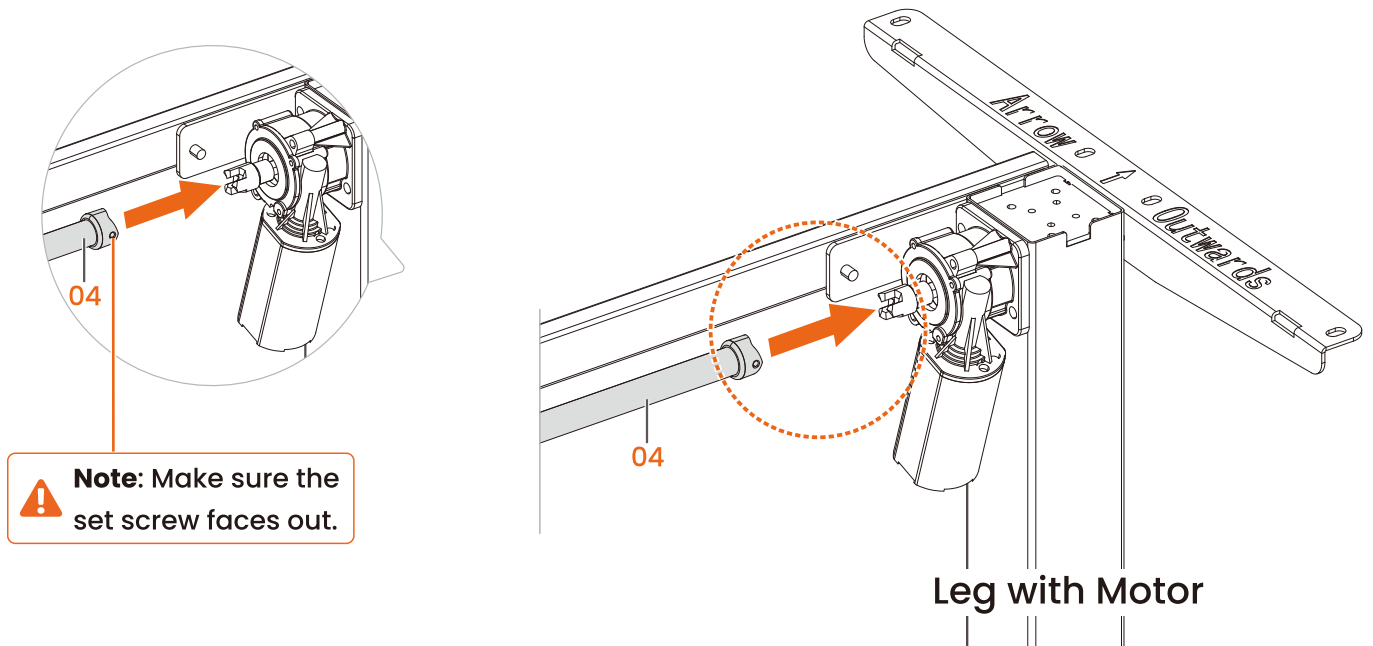

Ensure the transmission rod is fully and properly inserted into the hole in the leg. Smoothly connect the other end of the rod to the end of the motor drive shaft on the leg with motor.

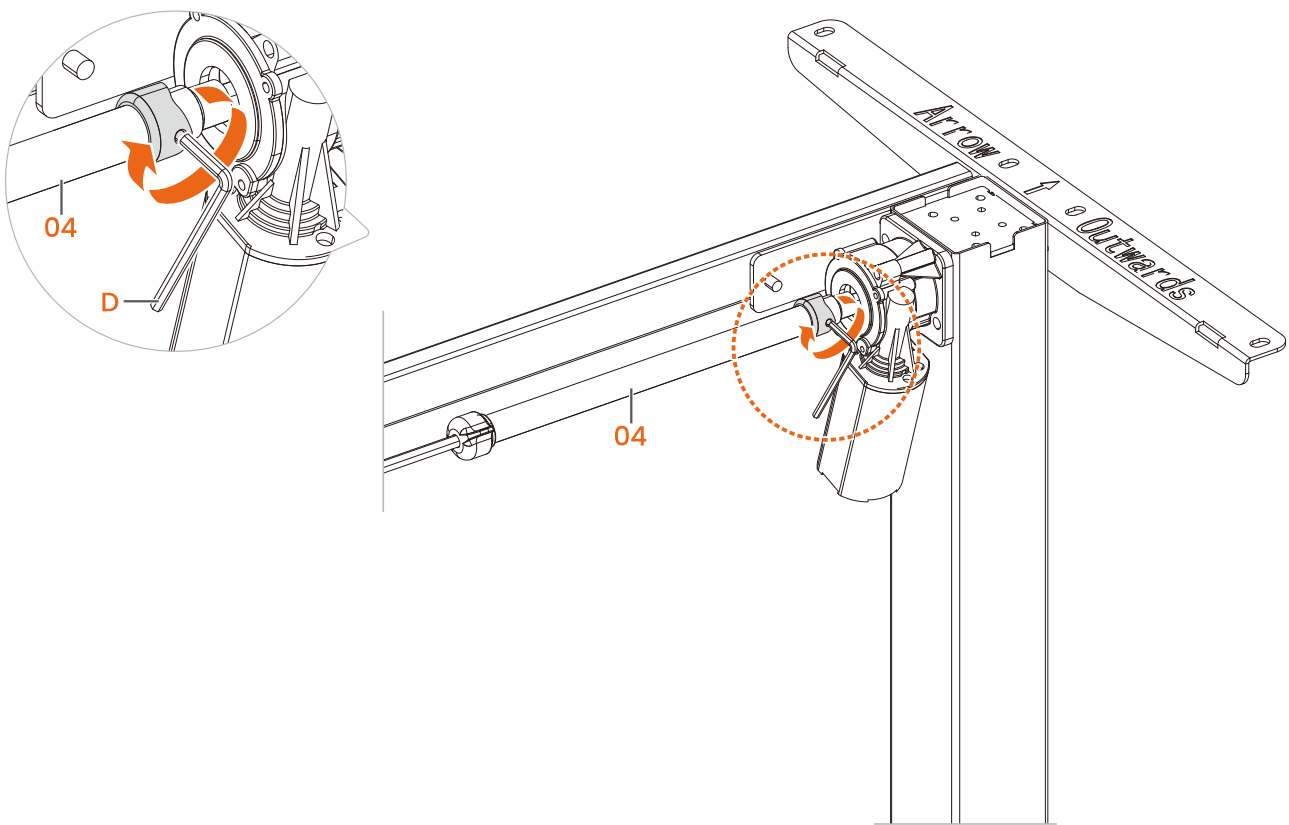

Secure the transmission rod by tightening the set screw.

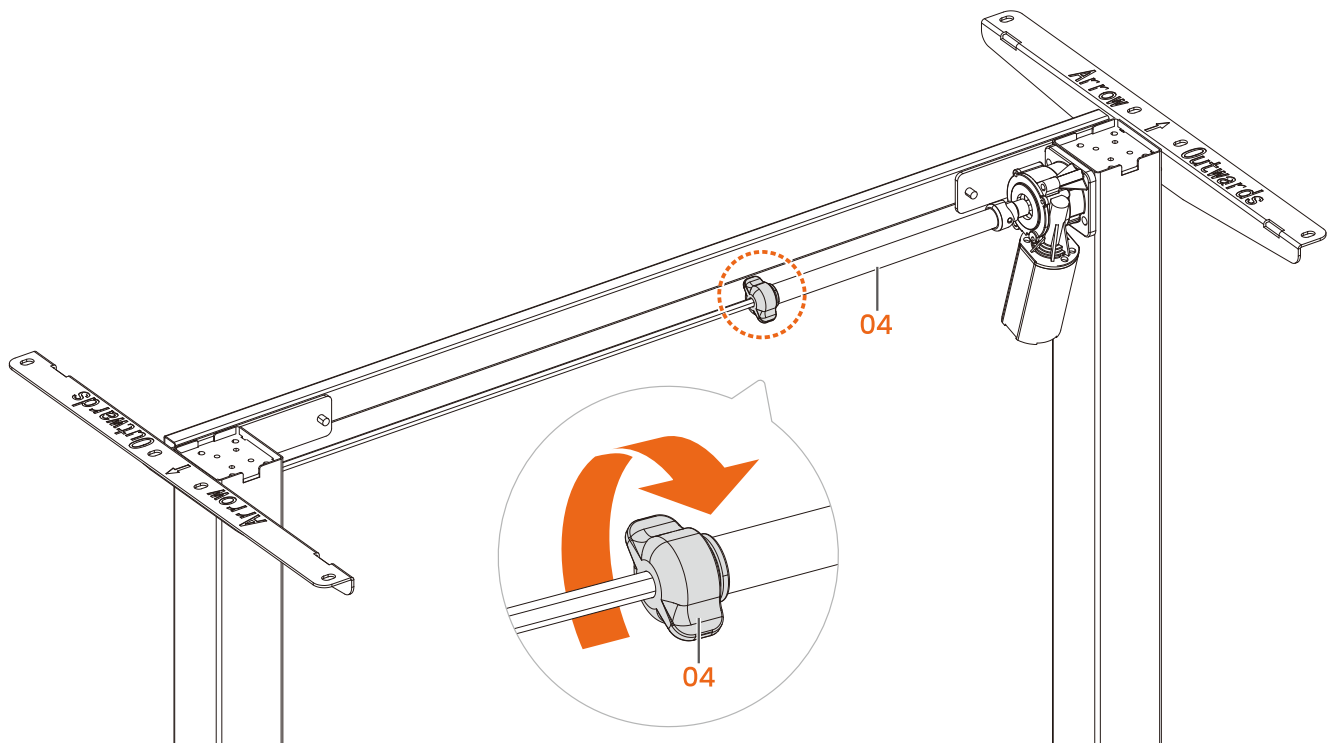

Tighten the coupling nut.

Step 3

Assembling the Desktop and Other Parts



Tip:  indicate pre-drilled hole locations.




09a




09b

Top

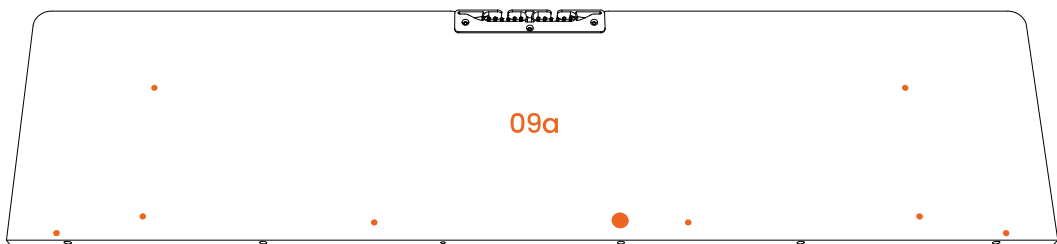

09a

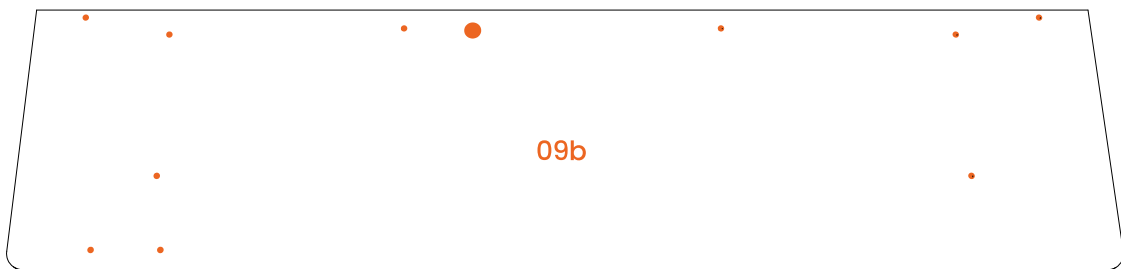

09b

Bottom

IMPORTANT:



Some pre-drilled hole locations may vary between desks of different sizes. The illustrations demonstrate assembly steps using one desk size, but should remain similar for each installation process.

If you have any issues, please contact us.




1-800-651-9525 (US/CA) Mon-Fri, 8am-8pm (CST)
44-808-196-3875 (UK) Mon-Fri, 2pm-10pm (UTC)




support@ergear.com


For 40 x 24" long desk

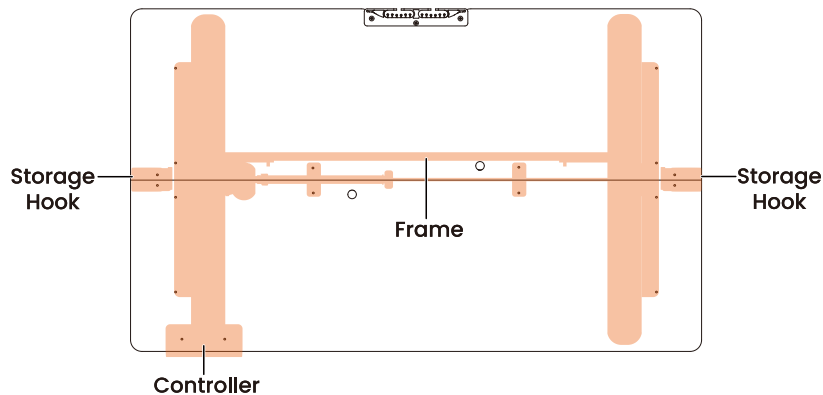


For 44 x 24" long desk


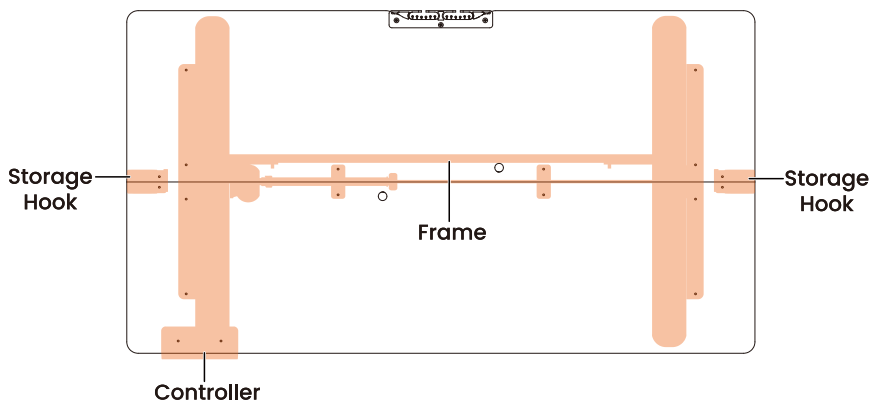


For 48 x 24" long desk


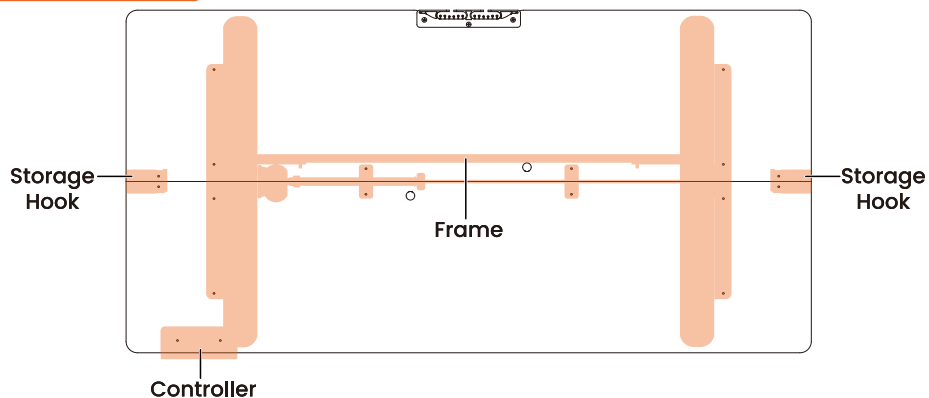






 




Tip: Start to thread the bolts in by hand before using a tool to tighten.

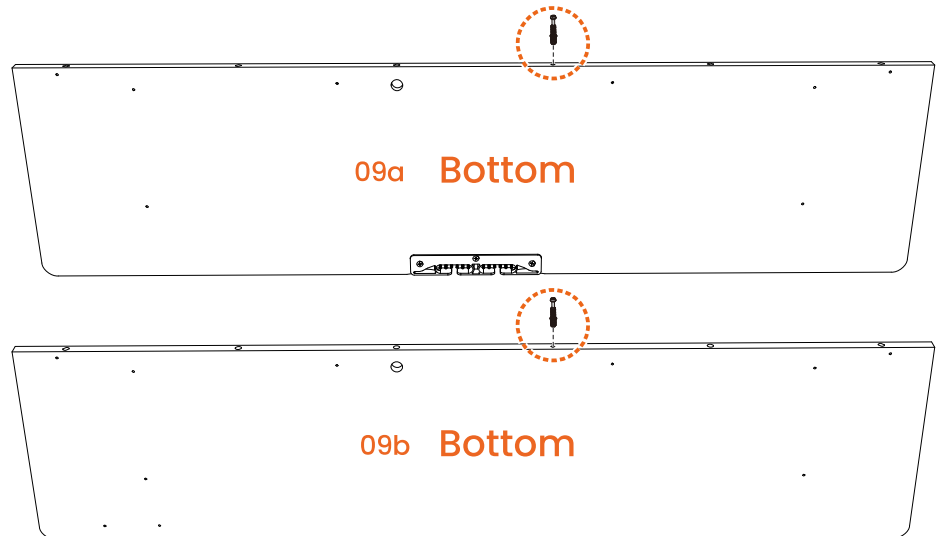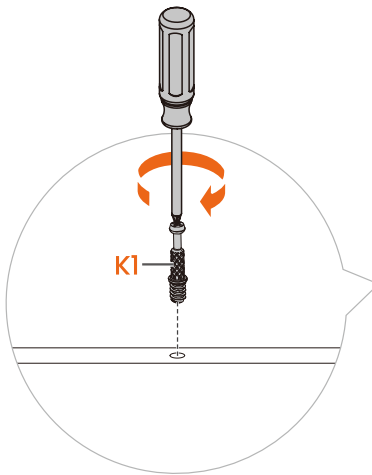

 

Assemble the desktop with the bottom of the panels facing up.

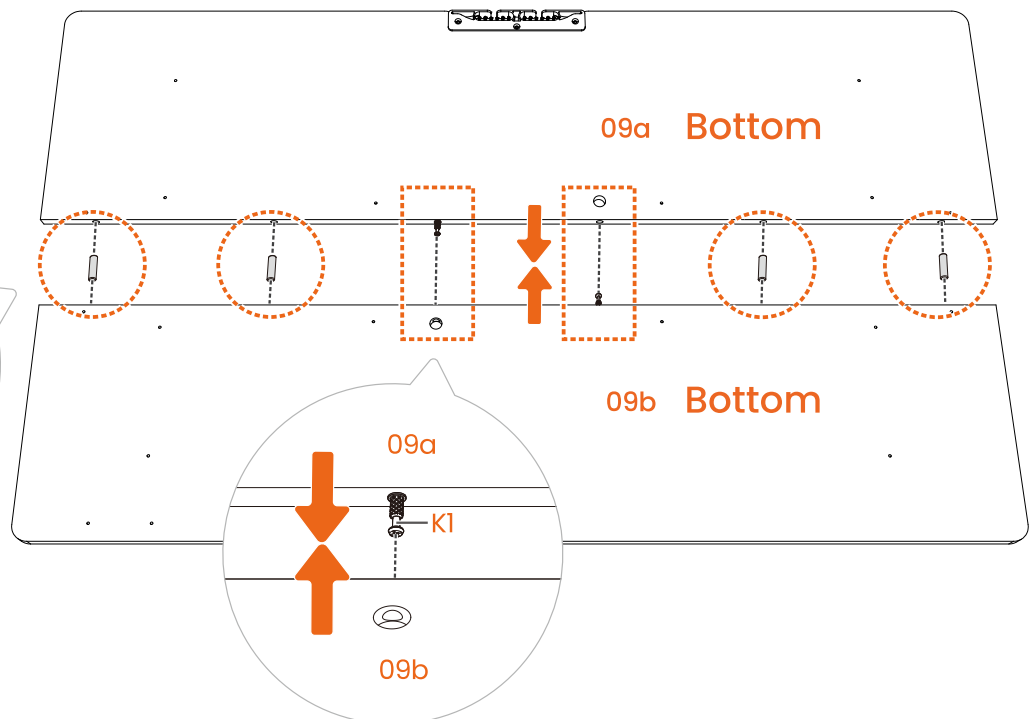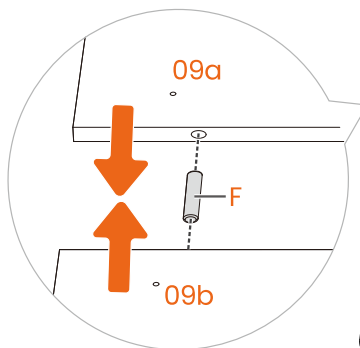

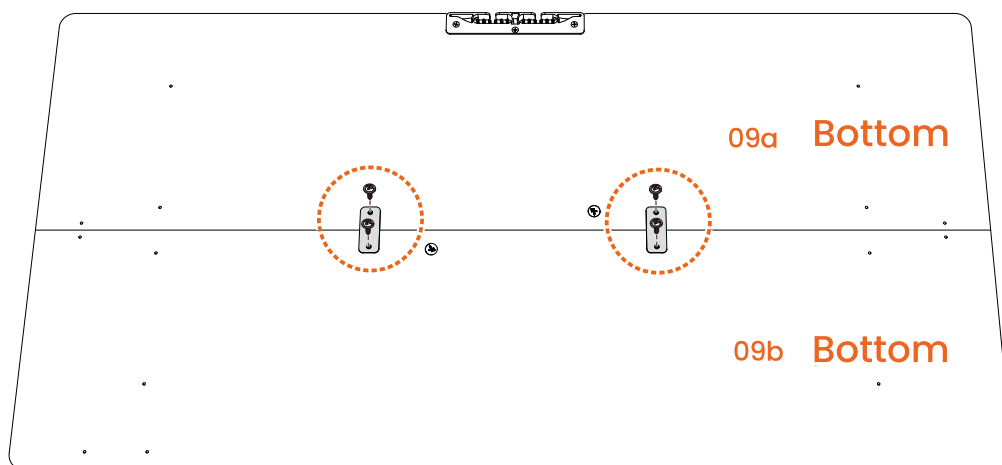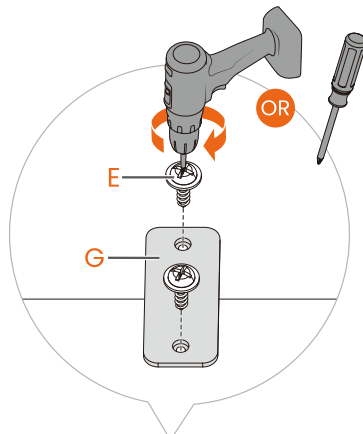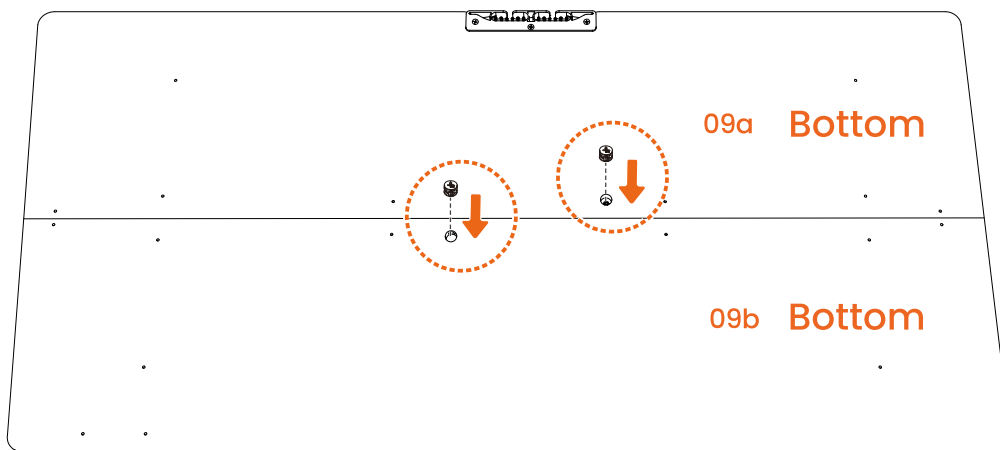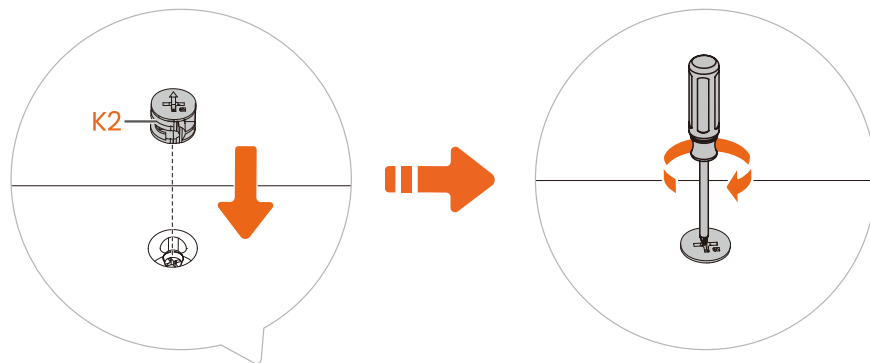

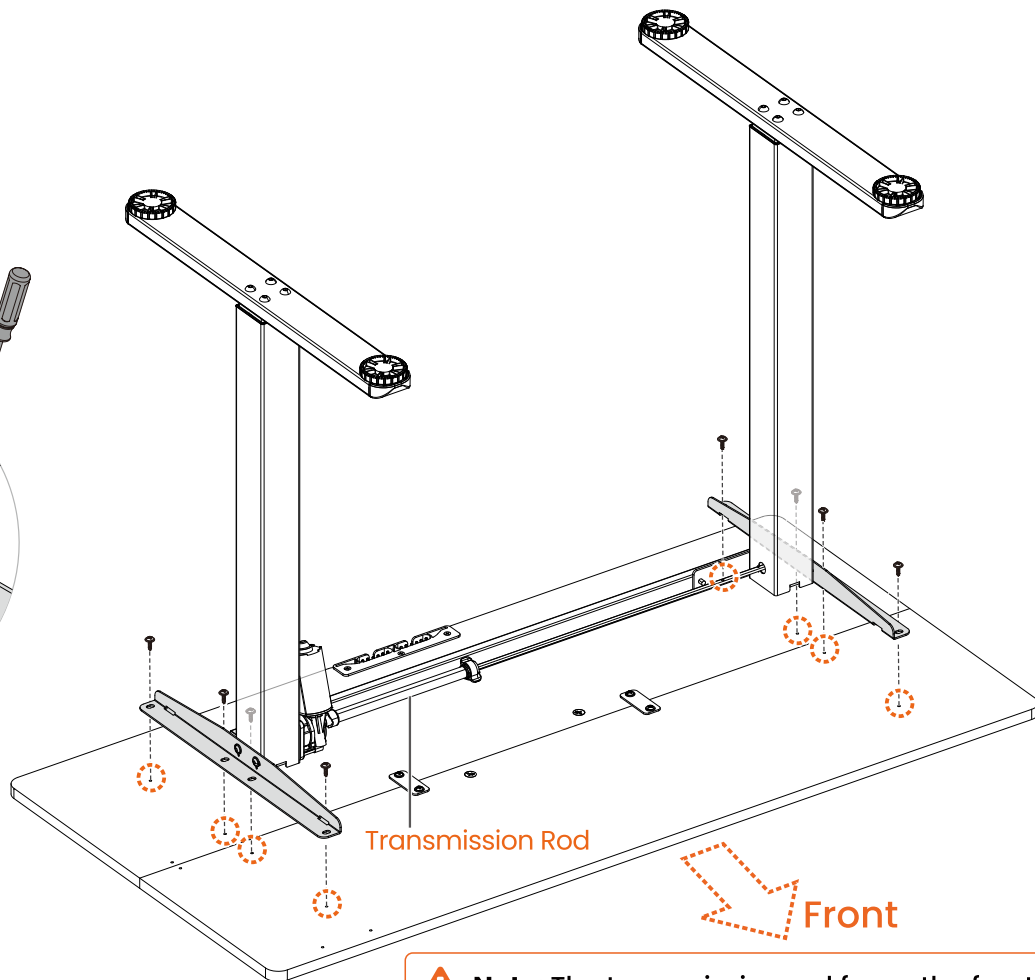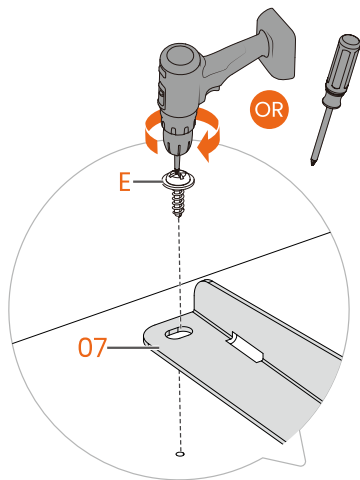


Note: The transmission rod faces the front.

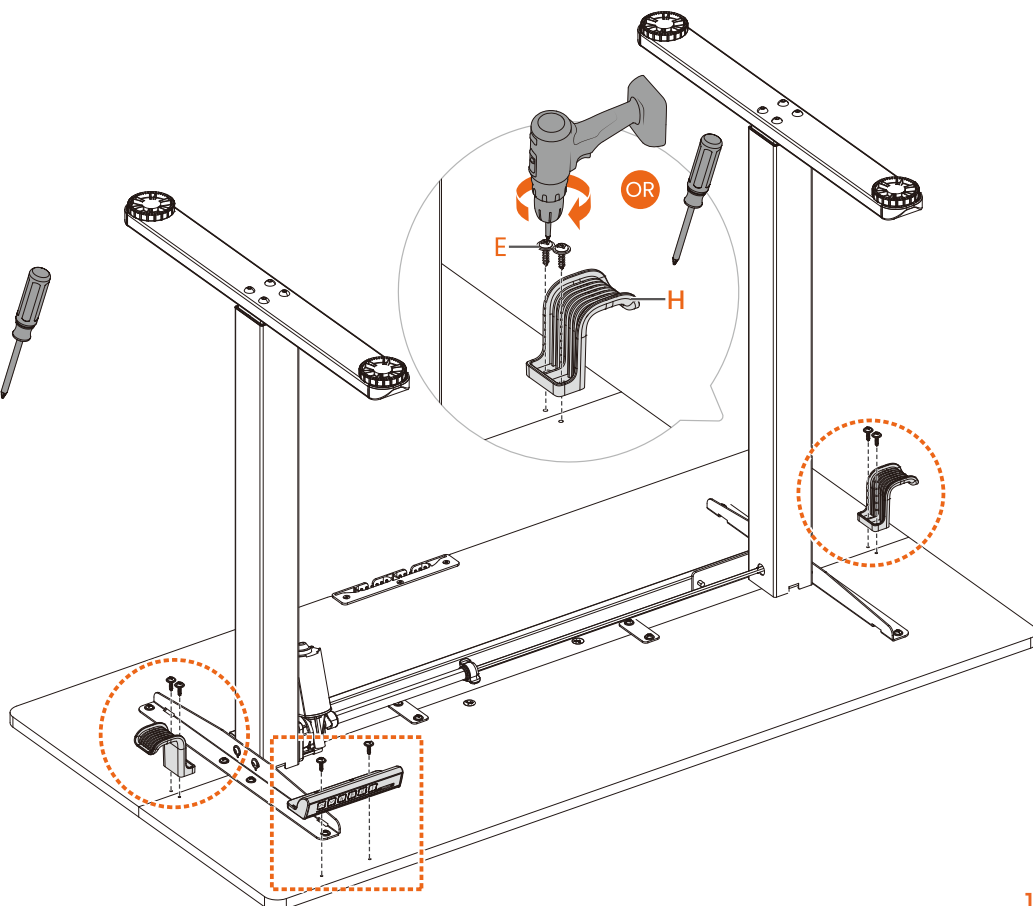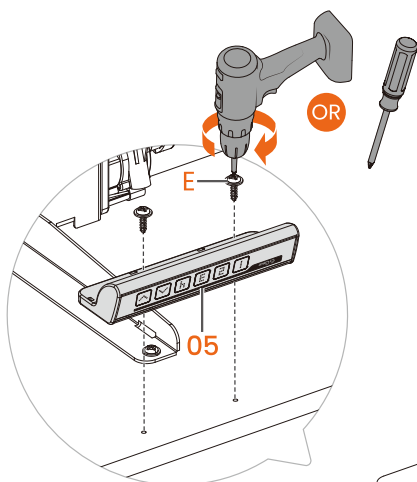

Step 4 Connecting the Cables




Tip: An example of a cable clip layout is indicated below. However, the cable clips can be arranged according to your needs.

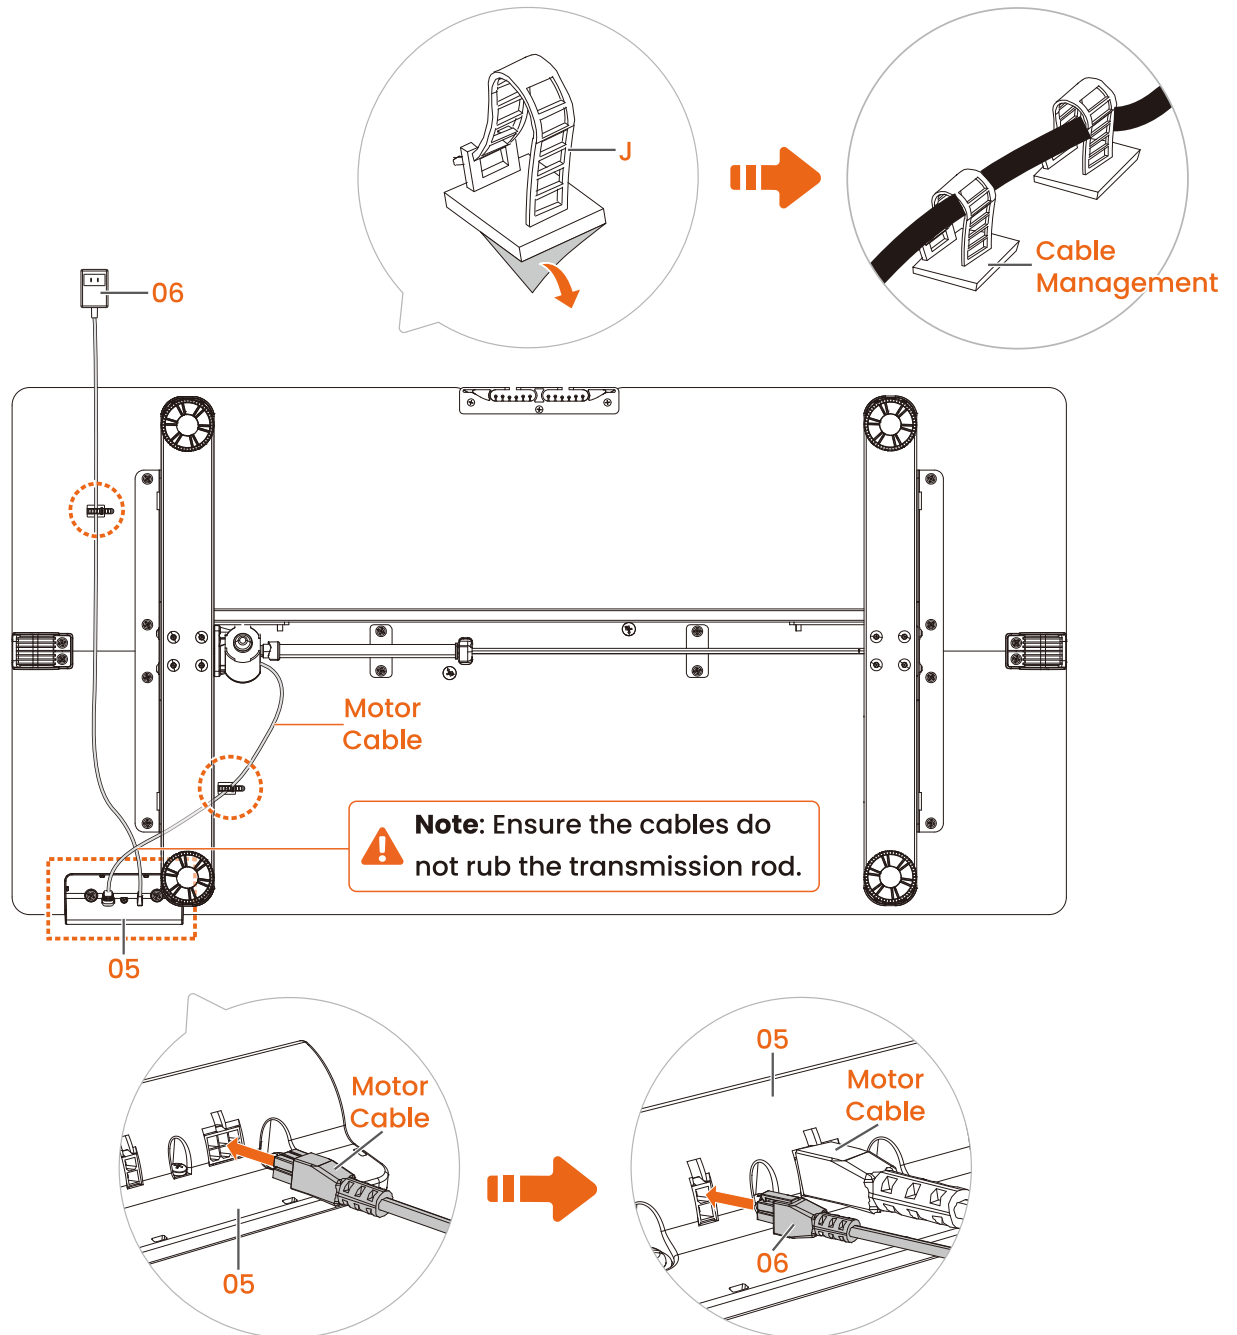

Note: When flipping the desk over, do not allow the controller to collide with the ground, which could cause damage.

Using the Controller

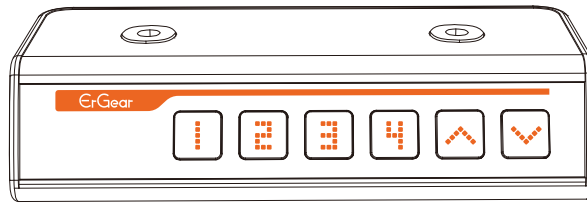

Tip: Reset before first use.

Note: Ensure that there are no obstacles when using the desk, that the desktop is not too close to the wall, and that all cables are long enough for the desk to move up and down freely. When the controller screen is off (power-saving mode), press any button to wake it before operation.

Suggestion: Set the most comfortable height when you sit down to **1** and the most comfortable height when you stand up to **2**. The other two presets can be set for another user or for other heights you want to use.

• Save Current Height Setting

Four heights can be saved. Press and hold the **1**, **2**, **3**, or **4** button for 5 seconds until 'H1', 'H2', 'H3', or 'H4' is displayed. The current height will be saved to that button.

• Select Height Setting 1

Press the **1** button. The desk will move to the height that was previously set for that button.

• Select Height Setting 2

Press the **2** button. The desk will move to the height that was previously set for that button.

• Select Height Setting 3

Press the **3** button. The desk will move to the height that was previously set for that button.

• Select Height Setting 4

Press the **4** button. The desk will move to the height that was previously set for that button.

• Raise the Desk

Press the **↑** button to raise the desk continuously until it reaches the highest position of 46.5" (118cm) or the button is released.

• Lower the Desk

Press the **↓** button to lower the desk continuously until it reaches the lowest position of 28.3" (72cm) or the button is released.

Settings	
Reset	1. Press and hold the  button until the desk goes down to its lowest level, then release the button. 2. Press and hold the  button for 5 seconds, and the screen will display 'RES.' Continue holding until the desk goes comes back up slightly. Reset is complete.
'RES' displays as  on the screen.	
Protection Mode Error Codes	
Hot	Overheating Protection: When the motor has been working continuously for 5 minutes, it will stop operating to prevent damage from overheating. Wait for at least 15 minutes before making any further height adjustment.
E10	Sensor Malfunction Warning: Motor safety sensor cannot be detected. Power off, disconnect the controller cable, wait for 5 minutes, reconnect the cable, then power back on and perform a reset.
E20	Overload Warning: Max load exceeded. If raising the desk, remove all items from the desk and try again. If lowering the desk, power off, remove all items from the desk, power back on, then try again. If error code persists, follow the reset instructions.
E02	Operation Status Warning: The desk stops moving if vibration, impact, or incline are detected. If this detection is incorrect, follow the reset instructions before continuing use.

E32	Overvoltage Protection: Input voltage too high. If the correct AC adapter is being used, power off, disconnect the controller cable, wait for 5 minutes, reconnect the cable, then power back on and perform a reset.
E31	Undervoltage Protection: Input voltage too low. If the correct AC adapter is being used, power off, disconnect the controller cable, wait for 5 minutes, reconnect the cable, then power back on and perform a reset.
—	Cable Disconnection Warning: Power off, disconnect the controller cable, wait for 5 minutes, reconnect the cable, then power back on and perform a reset.

Wichtige Sicherheitsinformationen

- Bei entsprechender Aufsicht und Einweisung kann dieser Schreibtisch von Kindern ab 8 Jahren und Personen mit eingeschränkten körperlichen, sensorischen oder geistigen Fähigkeiten verwendet werden. Benutzer müssen den sicheren Betrieb und die damit verbundenen potenziellen Gefahren verstehen.
 - Reinigung und Benutzerwartung dürfen nicht von Kindern durchgeführt werden.
 - Der Schreibtisch darf nur mit dem mitgelieferten Netzteil betrieben werden.
 - Trennen Sie die Stromversorgung, wenn Sie Wartungs- und Reinigungsarbeiten durchführen.
 - Untersuchen Sie den Schreibtisch regelmäßig auf Anzeichen von Abnutzung oder Beschädigung. Wenn solche Anzeichen vorhanden sind oder der Schreibtisch missbräuchlich verwendet wurde oder nicht funktioniert, wenden Sie sich für weitere Informationen an den Lieferanten.
 - Wenn Sie einen Schalter betätigen, der die Bewegung des Möbels einleitet und aufrechterhält, die Bewegung des Möbels beendet oder eine Richtungsänderung des Möbels bewirkt, stellen Sie sicher, dass sich keine Personen in der Bewegung befinden.
 - Stellen Sie den Schreibtisch richtig auf, um eine Gefahr durch Einklemmen mit anderen Möbeln zu vermeiden.
 - Entfernen Sie regelmäßig Staub, um Ihren Schreibtisch sauber zu halten. Schalten Sie den Schreibtisch aus und reiben Sie ihn dann vorsichtig mit einem feuchten Tuch ab.
-



nur für die Verwendung in Innenräumen

Spezifikationen



Höhenverstell-Bereich
72-118cm (28.3 bis 46.5 Zoll)



Eingangsstrom
100V bis 240V




Max. Geschwindigkeit
20mm/s




Betriebsgeräusch
≤55dB

Werkzeuge benötigt (nicht enthalten)

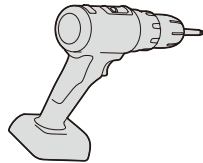

Bohrer

 ODER



Kreuzschraubendreher

Schritt 1 Mitgelieferte Teile und Beschläge

A x 4



Bolzen
M6 x 11mm

B x 8



 
Bolzen
M6 x 35mm

C x 1



Großer Inbusschlüssel
5mm (3/16 Zoll)

01 x 1



Bein mit Motor

02 x 1



 
Bein

03 x 2



Bein-Unterteil

08 x 1



Querstange

Schritt 2 Mitgelieferte Teile und Beschläge

A x 4



Bolzen
M6 x 11mm

C x 1



Großer Inbusschlüssel
5mm (3/16 Zoll)

D x 1



Kleiner Inbusschlüssel
2mm (5/64 Zoll)

04 x 1



Übertragungsstange

 
07 x 2



Seitenplatte

Schritt 3 Mitgelieferte Teile und Beschläge

E x 18



Schraube
M5 X 15mm

F x 4



Holzdübel

G x 2



Tischplattenverbinder

H x 2



Ablagehaken

K1 x 2



 
Exzenterbolzen

K2 x 2




Exzenterriegel

05 x 1



Steuergerät

 09 x 1



Schreibtischplatte

 
Schritt 4 Mitgelieferte Teile und Beschläge

J x 2



Kabelklemme

06 x 1



Stromkabel

Der tatsächliche
Teil kann variieren.

Nicht sämtliche Hardware, die in diesem Paket enthalten ist, wird verwendet.

Kontaktiere uns

Wenn Sie Teile erhalten, die beschädigt oder defekt sind oder Teile fehlen, kontaktieren Sie uns bitte.






1-800-651-9525 (US/CA) Mon-Fri, 8am-8pm (CST)
44-808-196-3875 (UK) Mon-Fri, 2pm-10pm (UTC)



support@ergear.com

Schritt 1

 

Zusammenbauen der Beine des Schreibtischs

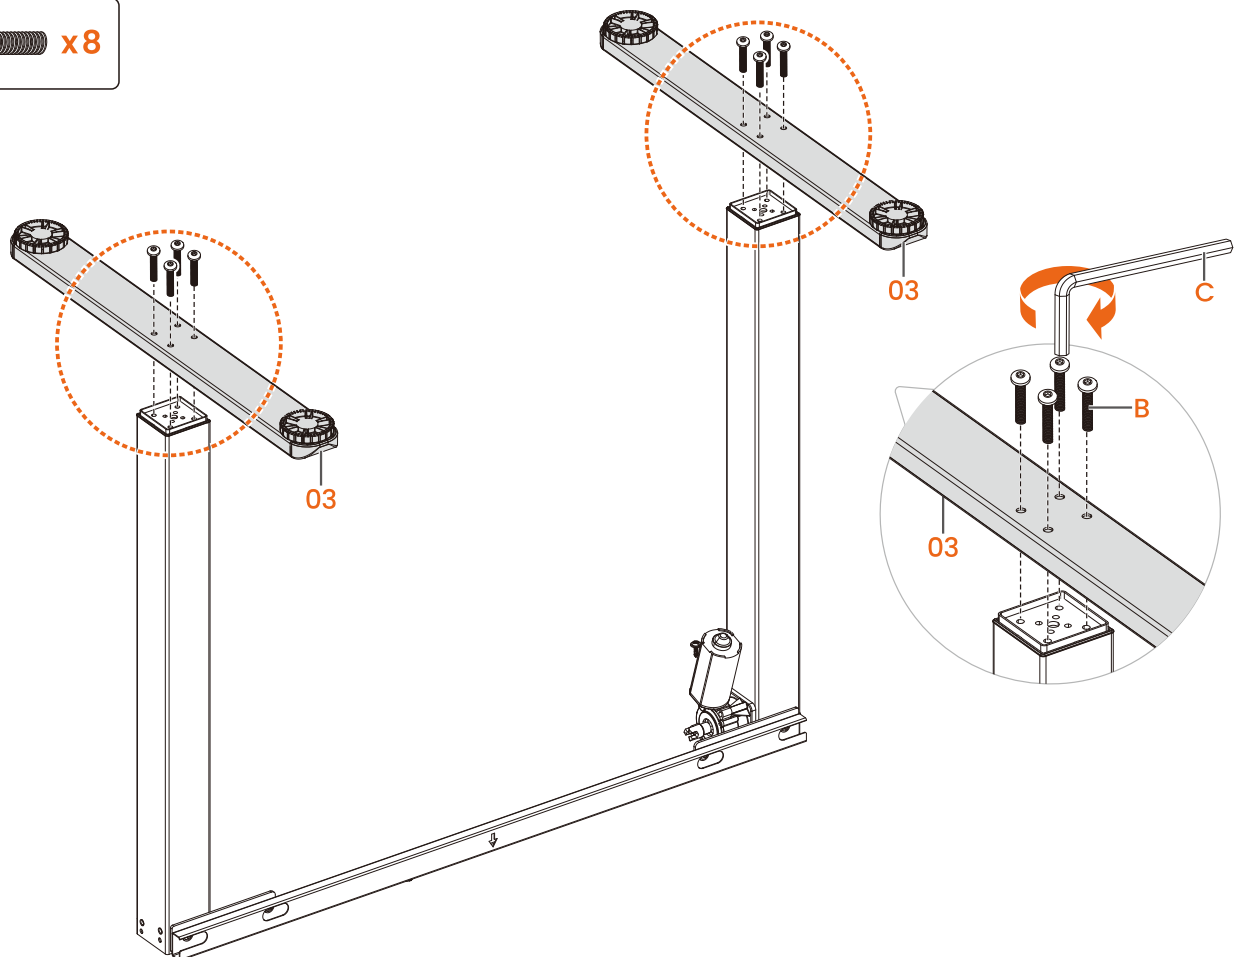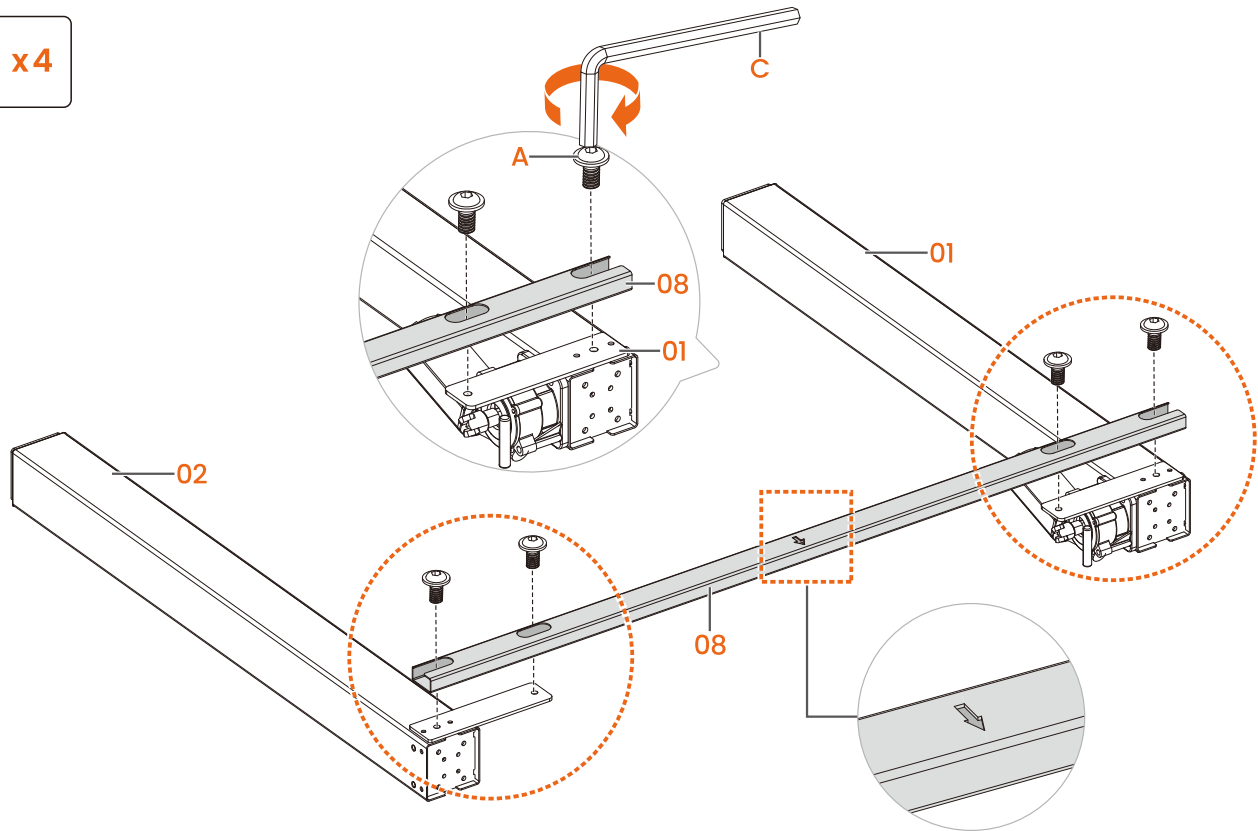


Schritt 2

Anbringen der Seitenplatten und der Übertragungsstange

 x4

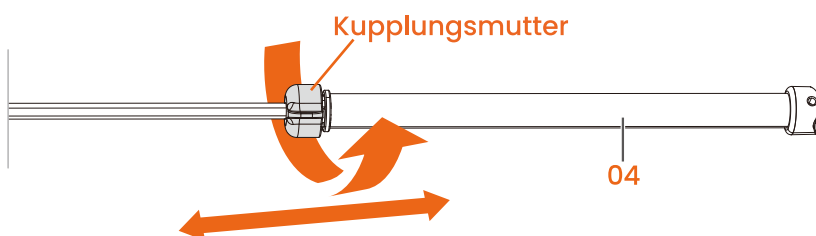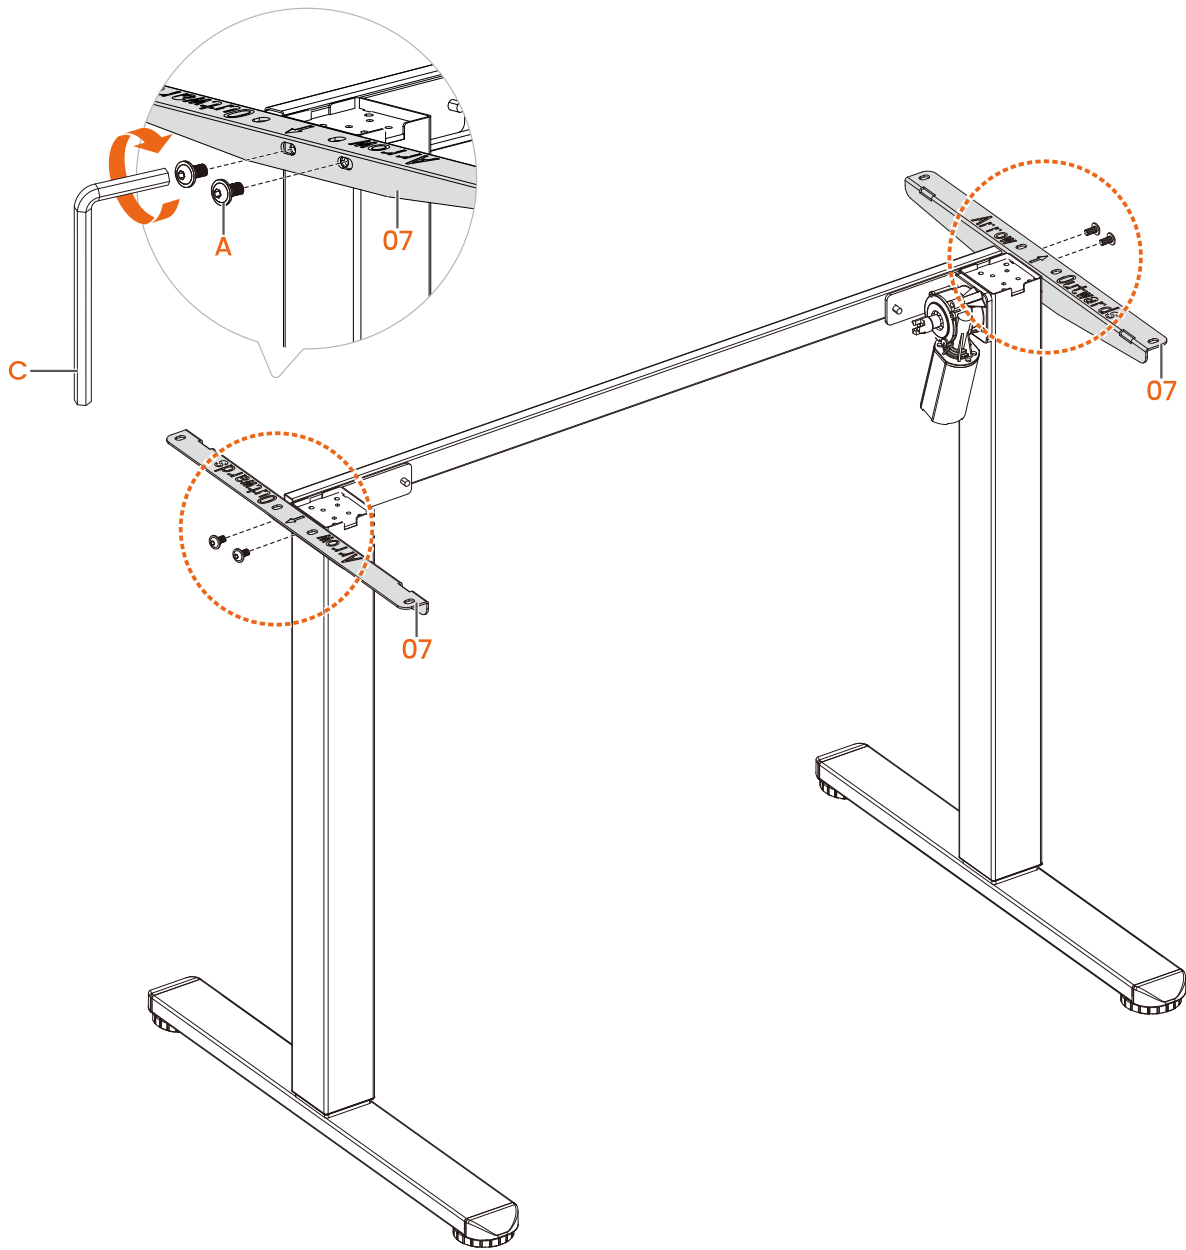


Lösen der Kupplungsmutter.

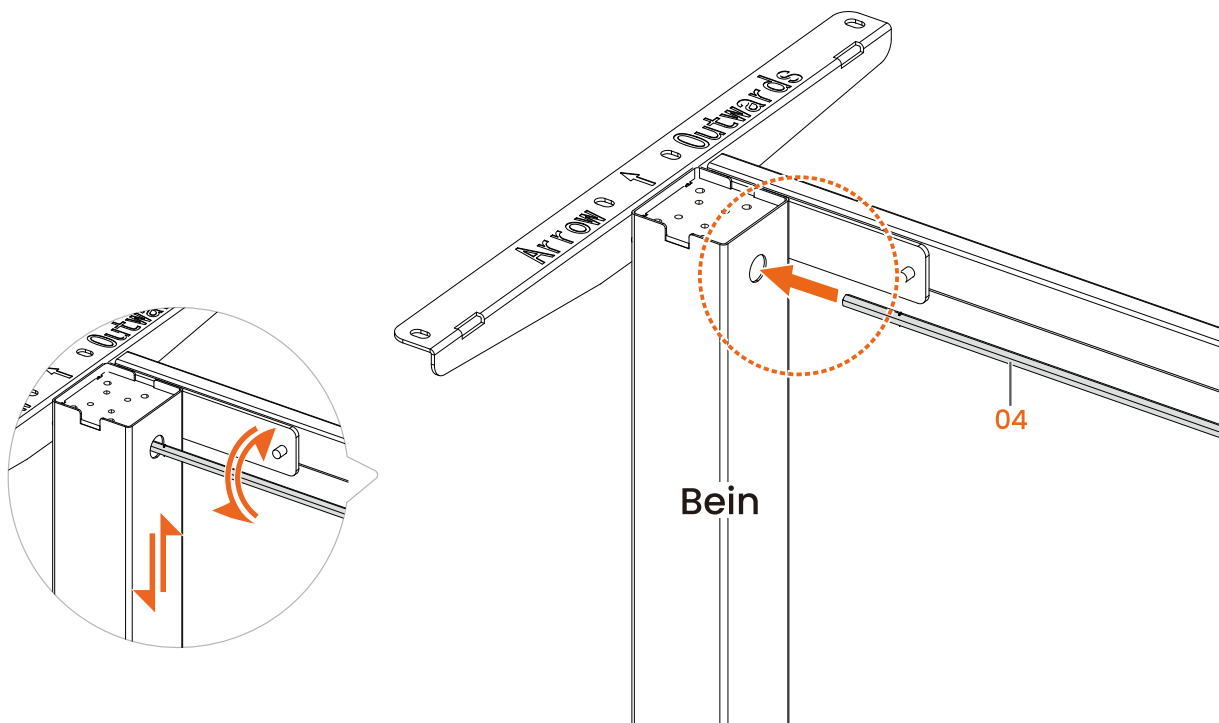


Bei Bedarf ungleichmäßige Tischbeine anpassen:


Messen Sie die Höhen der beiden Schreibtischbeine, um zu überprüfen, ob sie auf gleicher Höhe eingestellt sind. Falls nicht, drehen Sie die Stange, um das Bein anzuheben oder abzusenken, bis es auf gleicher Höhe wie das Bein mit dem Motor ist.

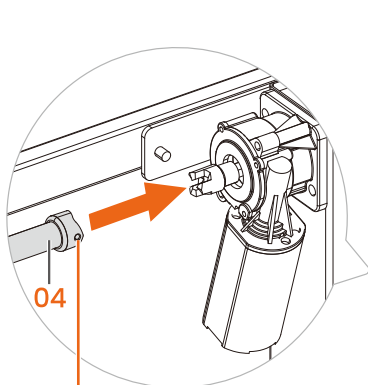


Hinweis: Stellen Sie sicher, dass die Stellschraube nach außen zeigt.

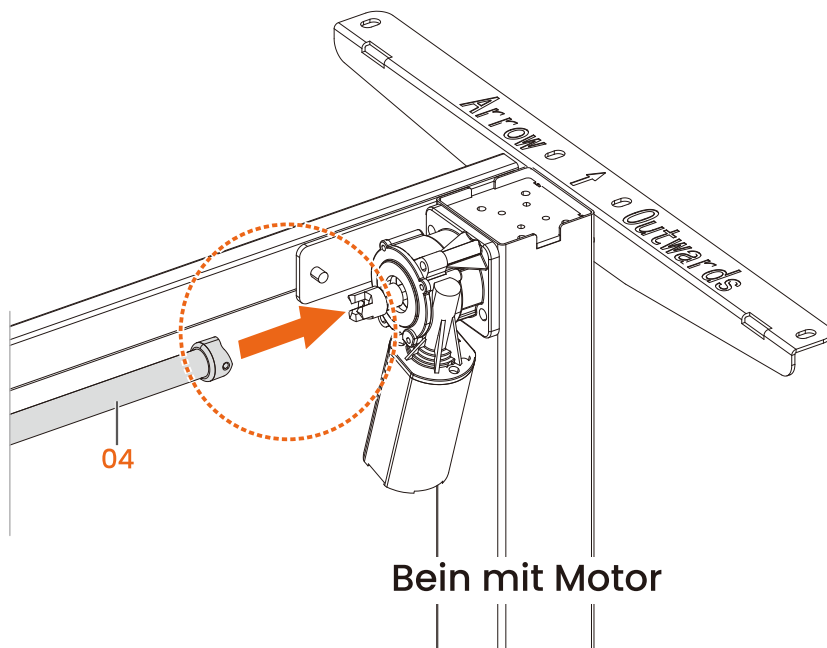

Stellen Sie sicher, dass die Übertragungsstange vollständig und korrekt in das Loch im Bein eingesetzt ist. Verbinden Sie das andere Ende der Stange reibungslos mit dem Ende der Antriebswelle am Bein mit Motor.

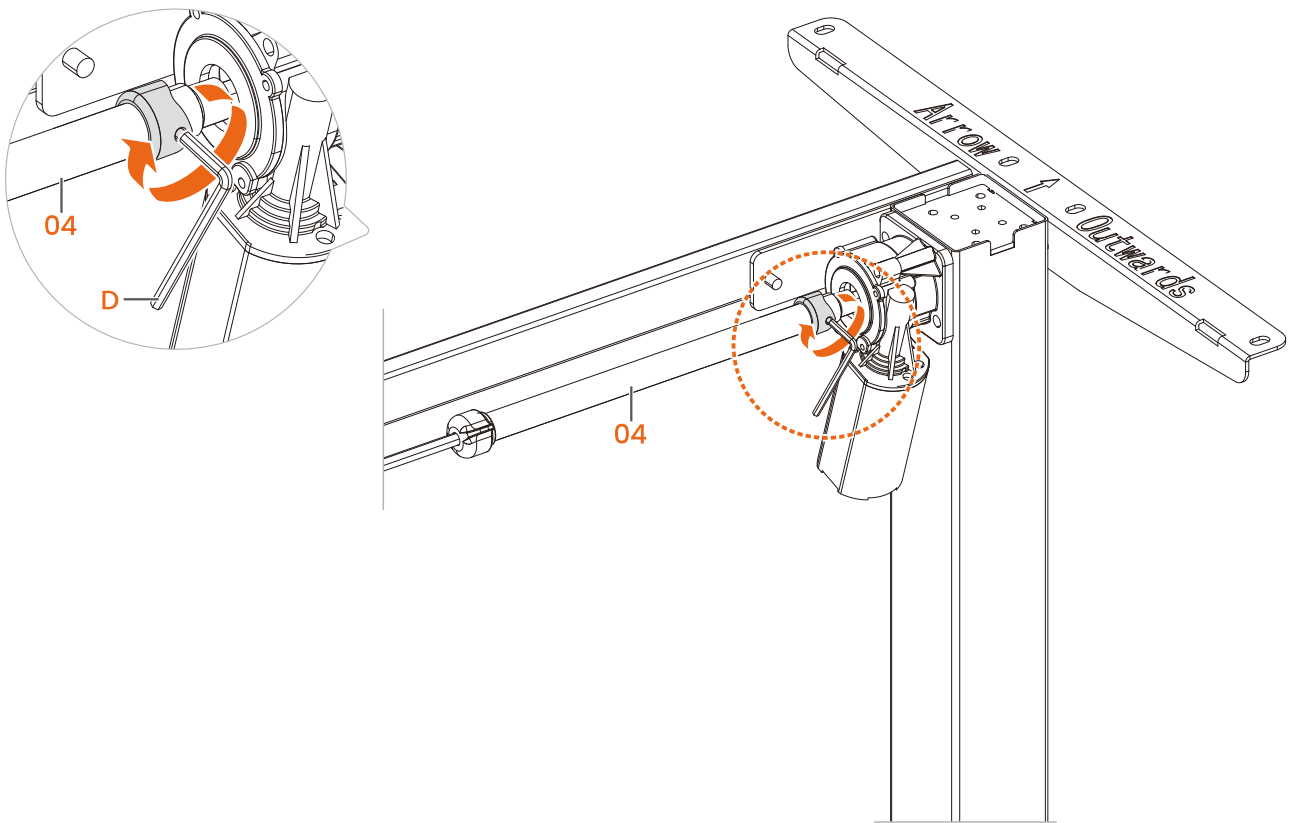

Sichern Sie die Antriebsstange, indem Sie die Stellschraube festziehen.

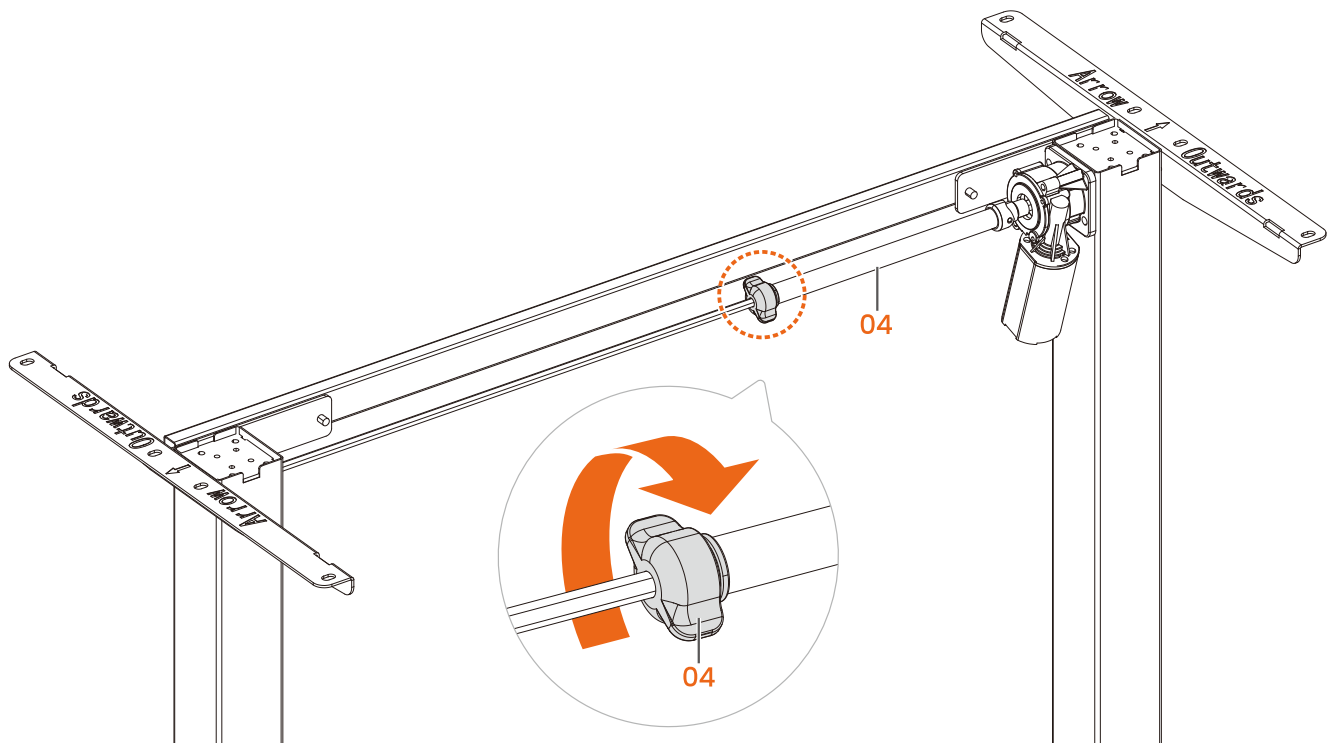


Ziehen Sie die Kupplungsmutter fest.


Schritt 3 Montage der Tischplatte und anderer Teile



Tipp:  Markieren Sie die Positionen der vorgebohrten Löcher.

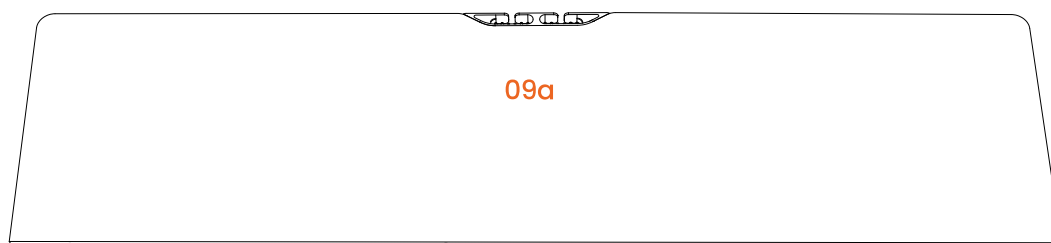


09a

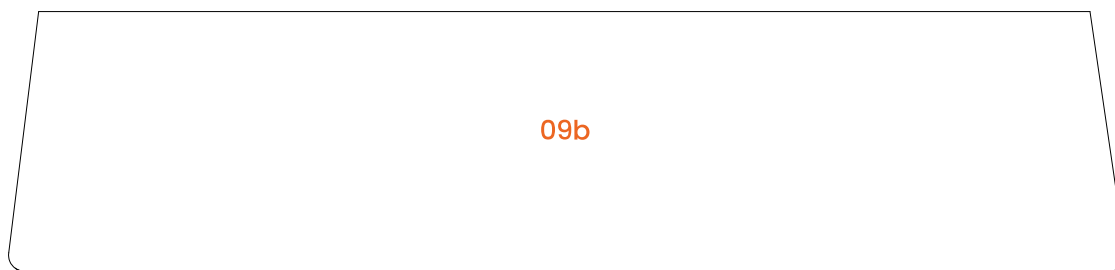


09b

Oberseite

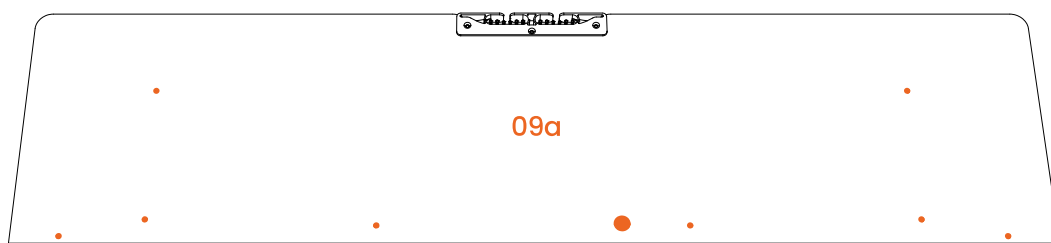

09a

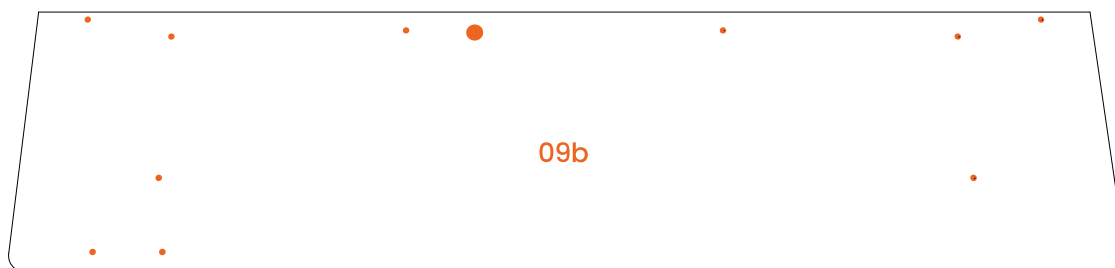

09b

Unterseite

WICHTIG:



Die Positionen der vorgebohrten Löcher können je nach Schreibtischgröße variieren. Die Illustrationen zeigen Montageschritte für eine Schreibtischgröße, sollten jedoch für jeden Installationsprozess ähnlich bleiben.

Bei Problemen kontaktieren Sie uns bitte.




1-800-651-9525 (US/CA) Mon–Fri, 8am–8pm (CST)
44-808-196-3875 (UK) Mon–Fri, 2pm–10pm (UTC)




support@ergear.com


For a 40 x 24 Zoll langer Schreibtisch

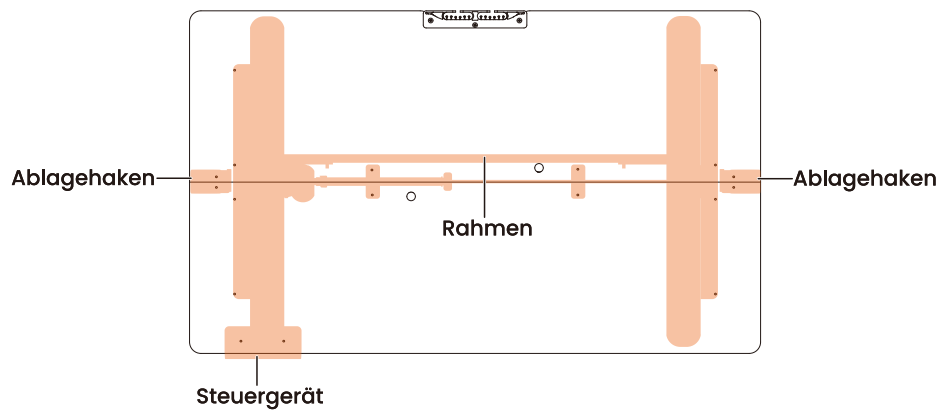


For a 44 x 24 Zoll langer Schreibtisch


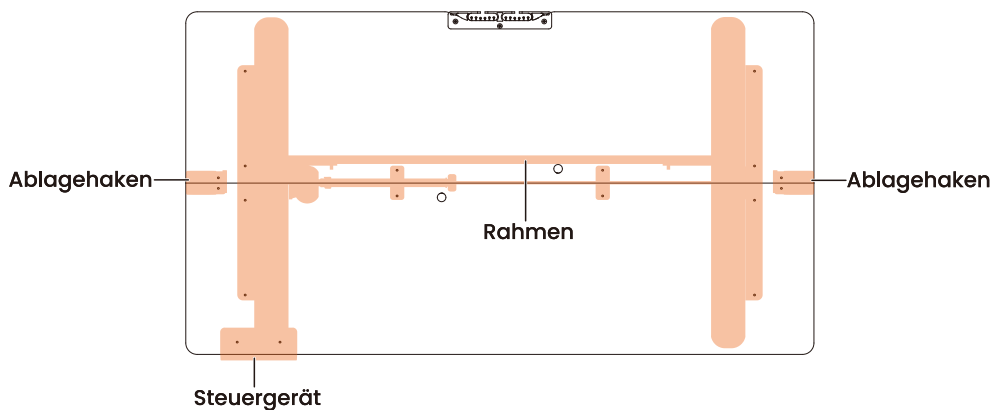


For a 48 x 24 Zoll langer Schreibtisch


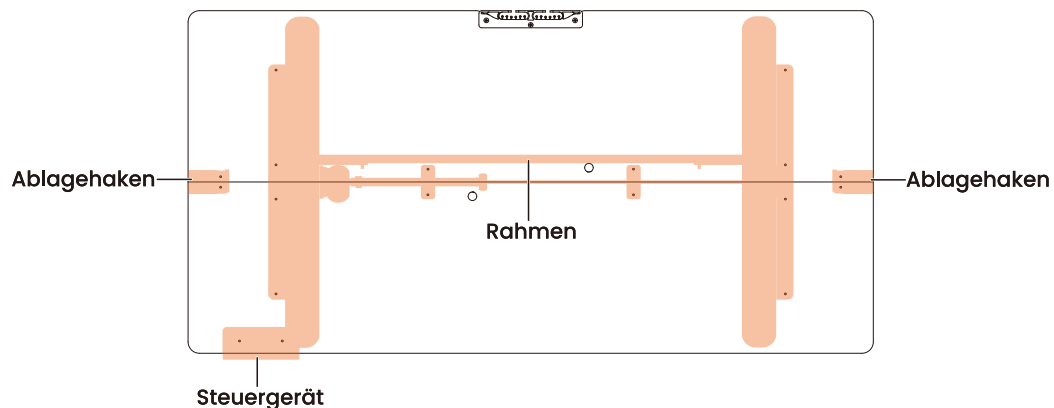





 




Tipp: Beginnen Sie mit dem Eindrehen der Schrauben von Hand, bevor Sie sie mit einem Werkzeug festziehen.

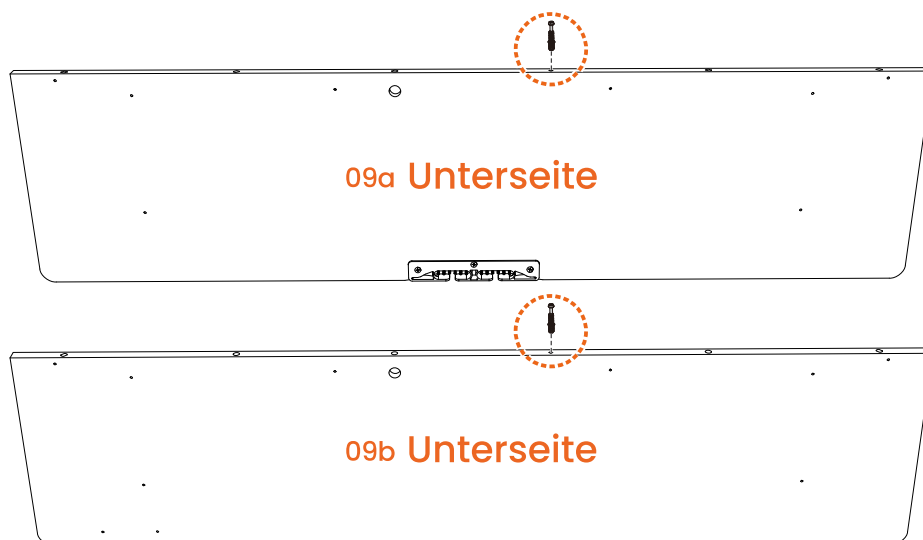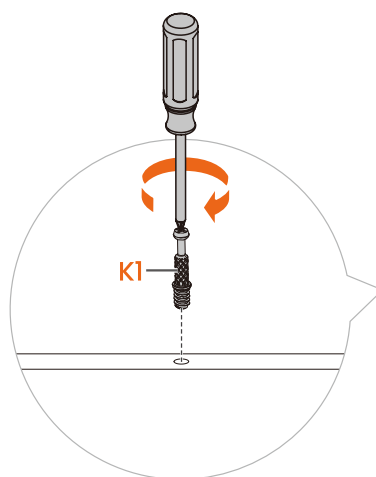



Assemblez le bureau avec le bas des panneaux vers le haut.

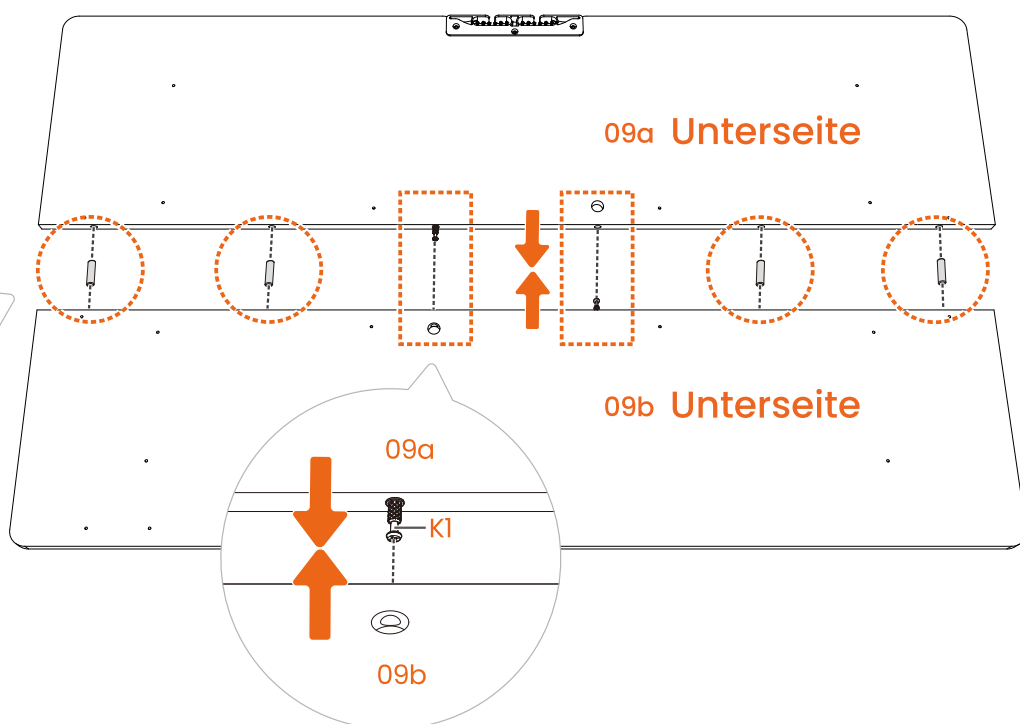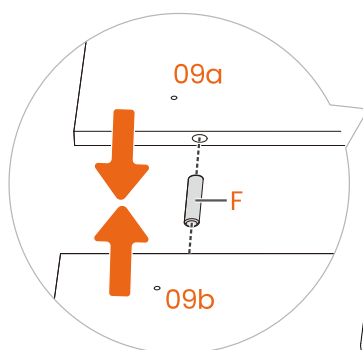

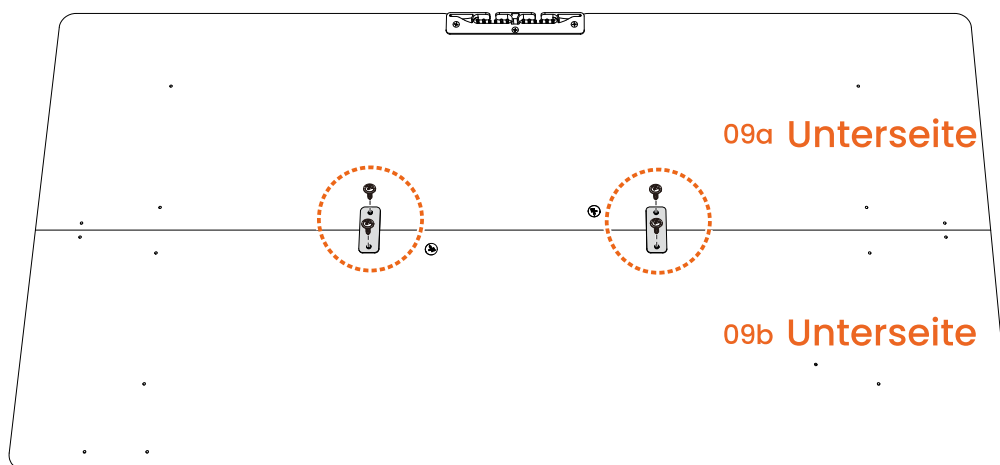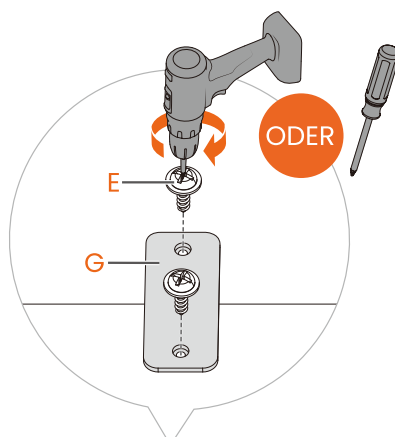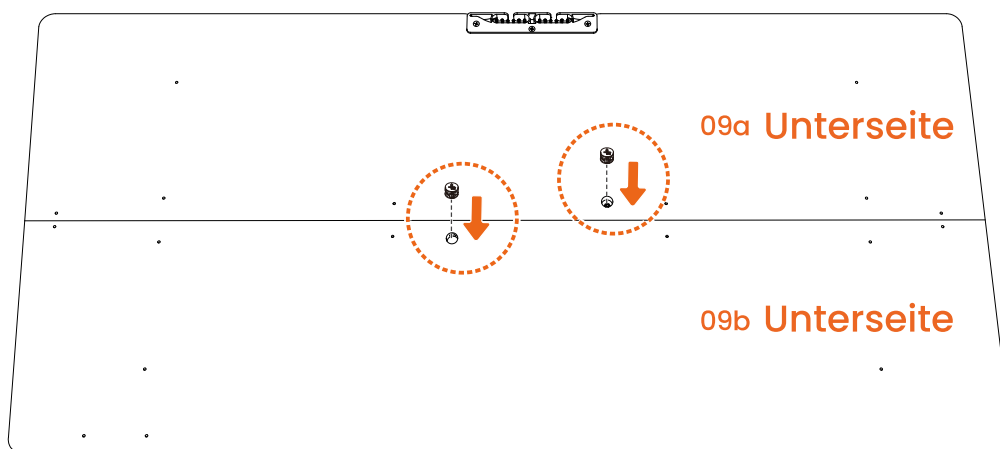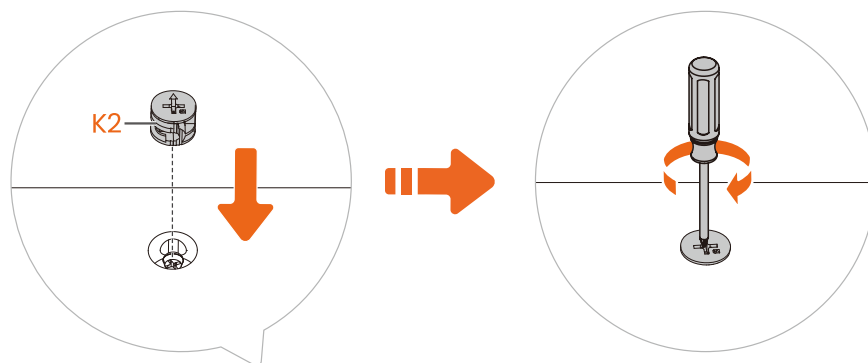

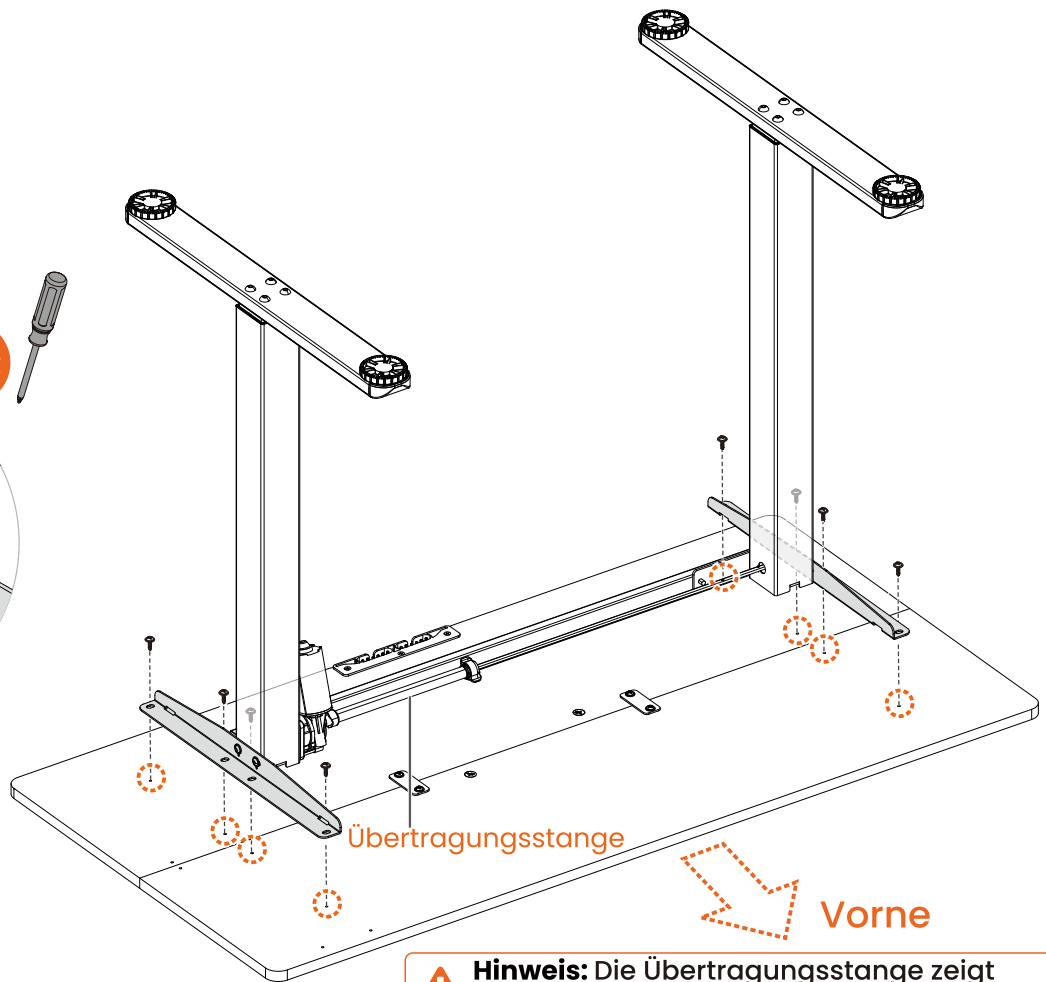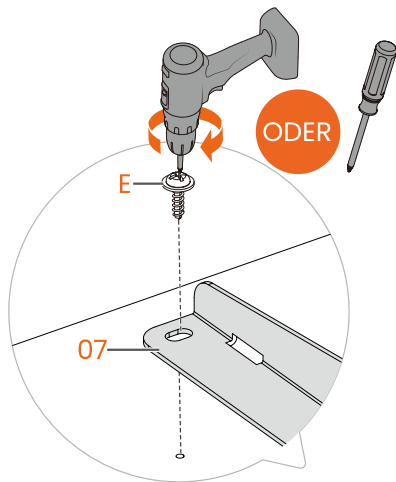


Hinweis: Die Übertragungsstange zeigt nach Vorderseite.

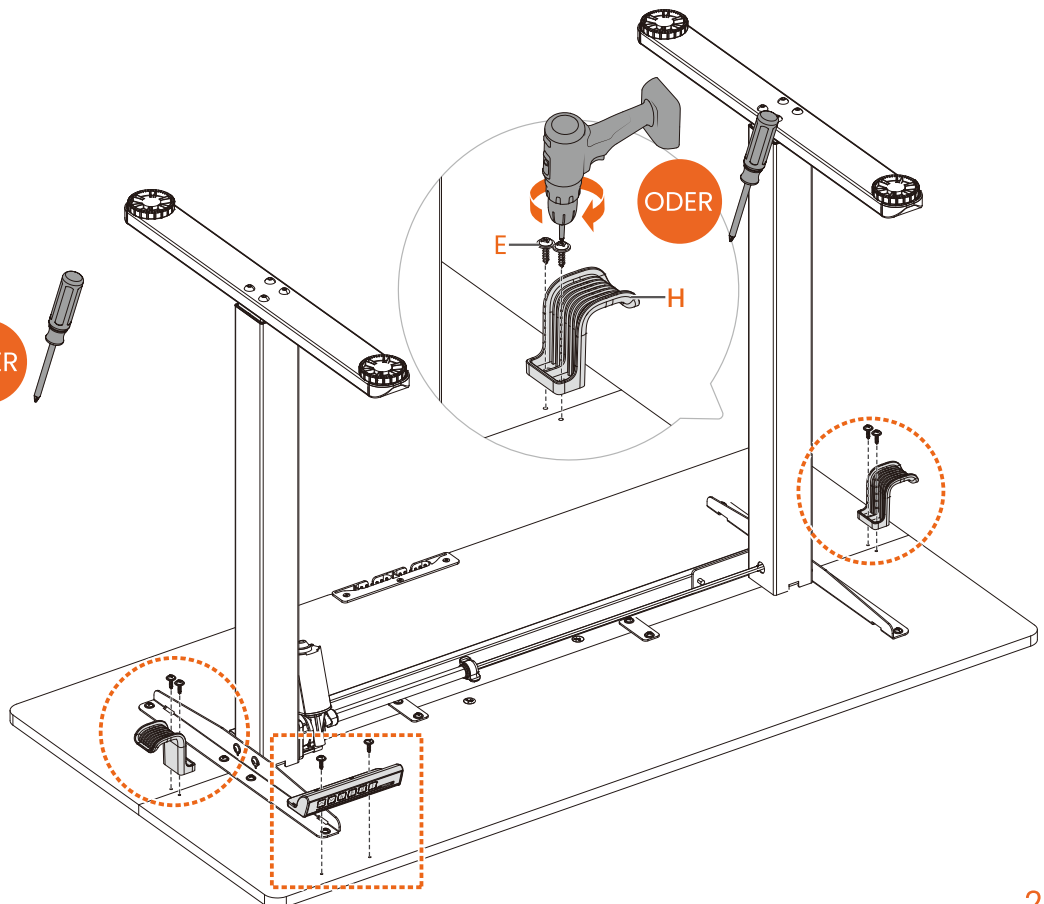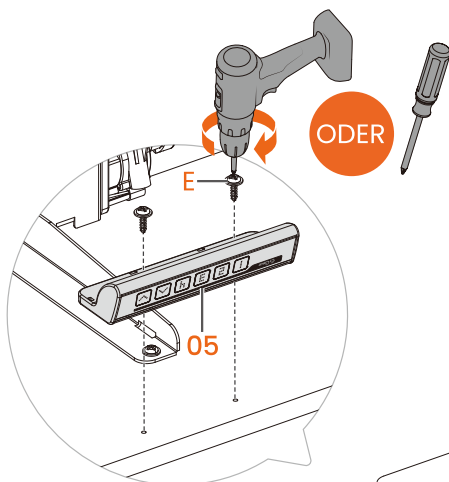

Schritt 4 Anschließen der Kabel




Tipp: Ein Beispiel für die Anordnung von Kabelclips ist unten dargestellt. Die Kabelclips können jedoch nach Ihren Bedürfnissen angeordnet werden.

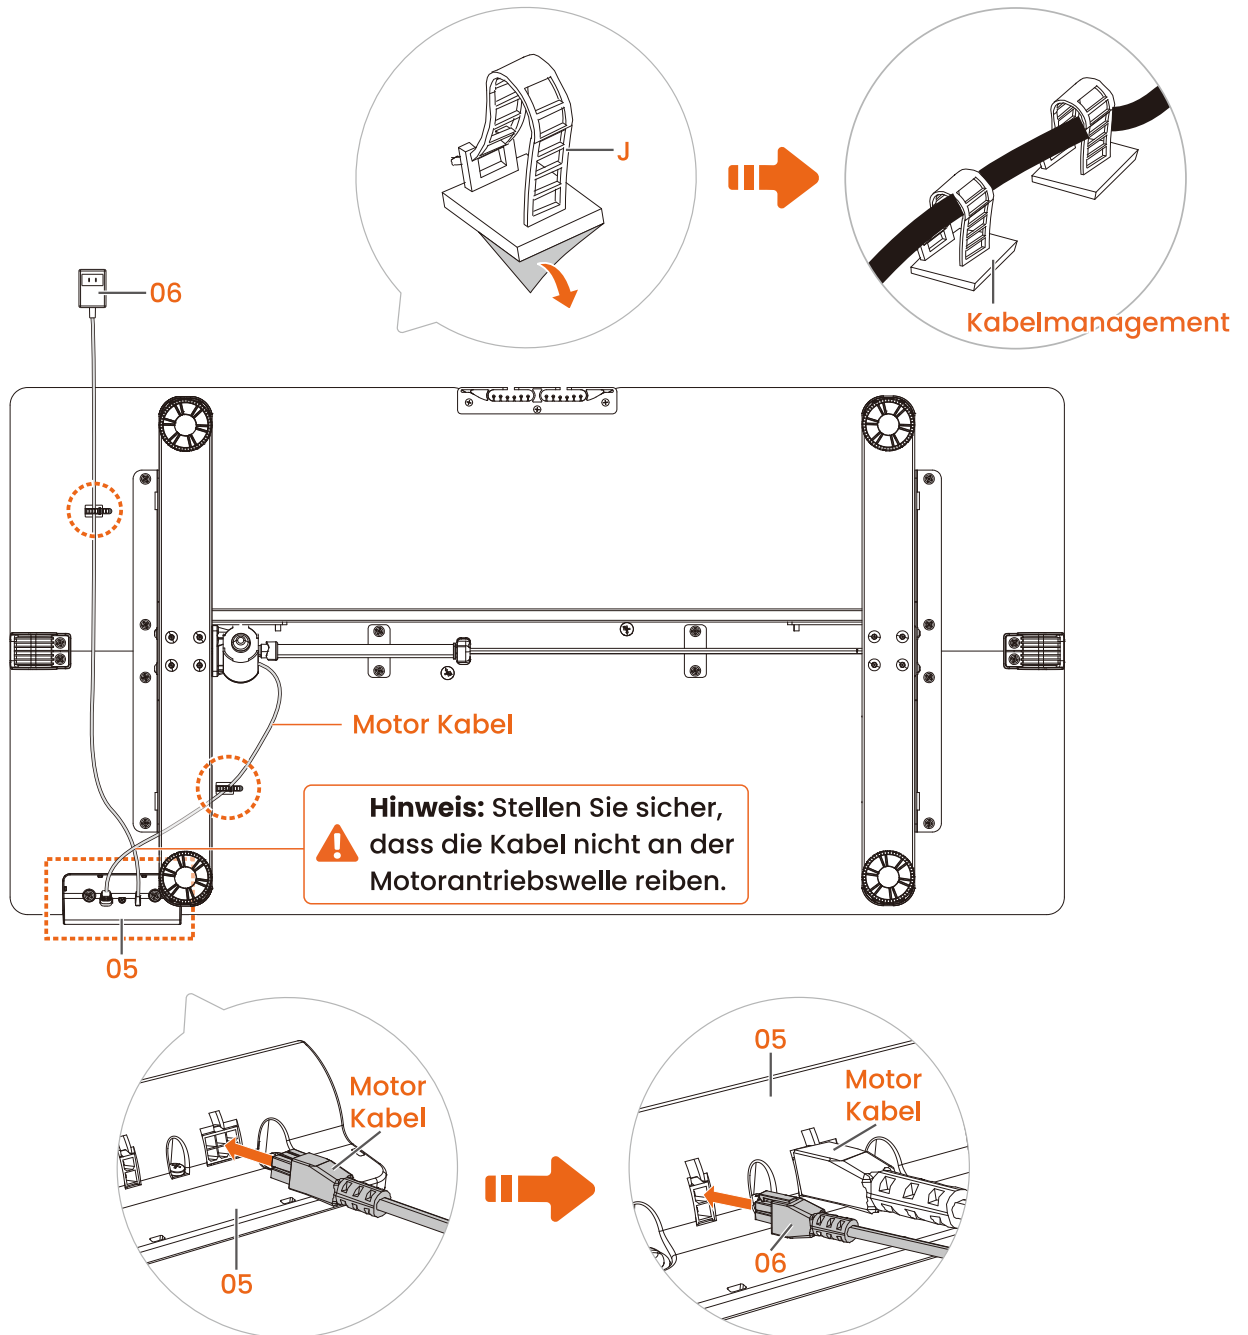

Hinweis: Beim Umdrehen des Schreibtisches darf der Controller nicht mit dem Boden kollidieren, da dies zu Schäden führen könnte.

Verwendung der Steuerung

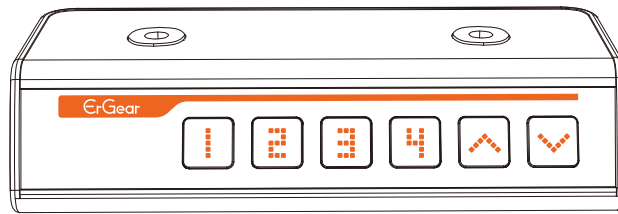

Tipp: Vor der ersten Verwendung zurücksetzen.

Hinweis: Stellen Sie sicher, dass sich keine Hindernisse in der Nähe des Schreibtisches befinden, dass die Tischplatte nicht zu nah an der Wand ist und dass alle Kabel lang genug sind, damit sich der Schreibtisch frei auf- und abbewegen kann. Wenn der Controller-Bildschirm ausgeschaltet ist (Energiesparmodus), drücken Sie eine beliebige Taste, um ihn vor dem Betrieb zu aktivieren.

Anregung: Stellen Sie die bequemste Sitzhöhe auf **1** und die bequemste Stehhöhe auf **2** ein. Die anderen beiden Voreinstellungen können für einen anderen Benutzer oder für andere Höhen, die Sie verwenden möchten, eingestellt werden.

• Aktuelle Höheneinstellung speichern

Es können vier Höhen gespeichert werden. Halten Sie die Taste **1**, **2**, **3**, **4** oder 5 Sekunden lang gedrückt, bis "H1", "H2", "H3" oder "H4" angezeigt wird. Die aktuelle Höhe wird auf dieser Taste gespeichert.

• Wählen Sie die Einstellung der Höhe 1

Drücken Sie die Taste **1**. Der Schreibtisch wird auf die zuvor für diese Taste eingestellte Höhe fahren.

• Wählen Sie die Einstellung der Höhe 2

Drücken Sie die Taste **2**. Der Schreibtisch wird auf die zuvor für diese Taste eingestellte Höhe fahren.

• Wählen Sie die Einstellung der Höhe 3

Drücken Sie die Taste **3**. Der Schreibtisch wird auf die zuvor für diese Taste eingestellte Höhe fahren.

• Wählen Sie die Einstellung der Höhe 4

Drücken Sie die Taste **4**. Der Schreibtisch wird auf die zuvor für diese Taste eingestellte Höhe fahren.

• Den Schreibtisch anheben

Drücken Sie die **▲**-Taste, um den Schreibtisch kontinuierlich anzuheben, bis er die höchste Position von 118cm (46.5 Zoll) erreicht oder die Taste losgelassen wird.

• Den Schreibtisch absenken

Drücken Sie die **▼**-Taste, um den Schreibtisch kontinuierlich abzusenken, bis er die niedrigste Position von 72cm (28.3 Zoll) erreicht oder die Taste losgelassen wird.

Einstellungen

Zurücksetzen

"RES" wird auf dem Bildschirm als  angezeigt.

1. Drücken und halten Sie die Taste , bis der Schreibtisch seine niedrigste Position erreicht hat, und lassen Sie dann die Taste los.
2. Drücken und halten Sie die Taste  für 5 Sekunden, und der Bildschirm zeigt 'RES' an. Halten Sie weiterhin fest, bis der Schreibtisch leicht nach oben kommt. Der Reset ist abgeschlossen.

Schutzmodus-Fehlercodes

Hot

Überhitzungsschutz: Wenn der Motor 5 Minuten lang ununterbrochen gearbeitet hat, schaltet er sich ab, um Schäden durch Überhitzung zu vermeiden. Warten Sie mindestens 15 Minuten, bevor Sie eine weitere Höhenverstellung vornehmen.

E10

Warnung vor Sensorstörung: Motorsicherheitssensor kann nicht erkannt werden. Schalten Sie das Gerät aus, trennen Sie das Steuerkabel, warten Sie 5 Minuten, schließen Sie das Kabel wieder an und schalten Sie das Gerät wieder ein. Befolgen Sie das oben beschriebene Zurücksetzverfahren.

E20

Überlast-Warnung: Maximallast überschritten. Wenn Sie den Tisch anheben, nehmen Sie alle Gegenstände vom Tisch und versuchen Sie es erneut. Wenn Sie das Pult absenken, schalten Sie es aus, nehmen Sie alle Gegenstände vom Pult, schalten Sie es wieder ein und versuchen Sie es dann erneut. Wenn der Fehlercode weiterhin besteht, befolgen Sie die Anweisungen zum Zurücksetzen.

E02

Betriebsstatus Warnung: Der Tisch stoppt die Bewegung, wenn eine Vibration, ein Stoß oder eine Neigung erkannt wird. Wenn diese Erkennung falsch ist, befolgen Sie die Anweisungen zum Zurücksetzen, bevor Sie den Tisch weiter benutzen.

E32	Überspannungsschutz: Eingangsspannung zu hoch. Falls der korrekte AC-Adapter verwendet wird, schalten Sie das Gerät aus, trennen Sie das Steuerkabel, warten Sie 5 Minuten, schließen Sie das Kabel wieder an und schalten Sie das Gerät wieder ein. Befolgen Sie das oben beschriebene Zurücksetzverfahren.
E31	Unterspannungsschutz: Eingangsspannung zu niedrig. Falls der korrekte AC-Adapter verwendet wird, schalten Sie das Gerät aus, trennen Sie das Steuerkabel, warten Sie 5 Minuten, schließen Sie das Kabel wieder an und schalten Sie das Gerät wieder ein. Befolgen Sie das oben beschriebene Zurücksetzverfahren.
—	Warnung vor Kabeltrennung: Schalten Sie das Gerät aus, trennen Sie das Steuerkabel, warten Sie 5 Minuten, schließen Sie das Kabel wieder an und schalten Sie das Gerät wieder ein. Befolgen Sie das oben beschriebene Zurücksetzverfahren.



Complete Flexibility. Total Freedom

Totale Flexibilität. Totale Freiheit

Thank you for choosing this ErGear product. At ErGear, we strive to provide you with the best quality products and services in the industry. Should you have any issues, please don't hesitate to contact us.

Tielen Dank, dass Sie sich für dieses Produkt von ErGear entschieden haben. Wir bei ErGear sind bestrebt, Ihnen die besten Produkte und den besten Service der Branche zu bieten. Sollten Sie irgendwelche Probleme haben, zögern Sie bitte nicht, uns zu kontaktieren.

 1-800-651-9525 (US/CA) Mon-Fri, 8am-8pm (CST)
44-808-196-3875 (UK) Mon-Fri, 2pm-10pm (UTC)

 support@ergear.com

 www.ergear.com