
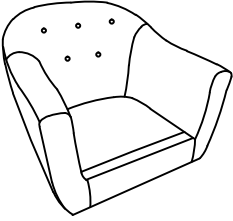


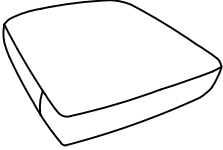


ASSEMBLY INSTRUCTION

ACCENT CHAIR


NOTE: Do not use power tools for assembly. Power tools increase the risk of over tightening which lead to splitting or cracking the wood.

PARTS LIST


NO.	DRAWING	QTY	DESCRIPTION
A		1	CHAIR
B		1	SEAT CUSHION
C		4	LEG
D		16	BOLT
E		1	ALLEN KEY

Please follow the drawings below to assemble the item.


Step 1: Legs are stored in the non-woven bag at the bottom of the chair, please take out for assembly.

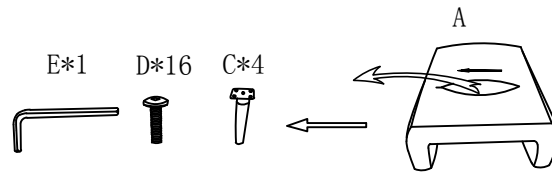


Step 2: Insert at the bottom frame

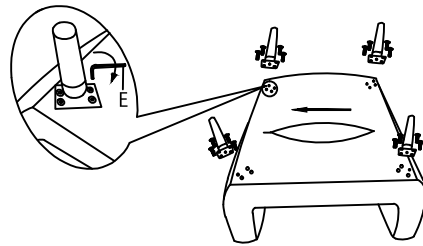

Step 3:

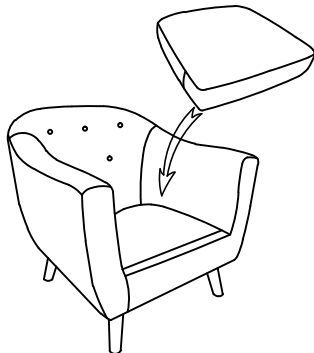

Step 4:

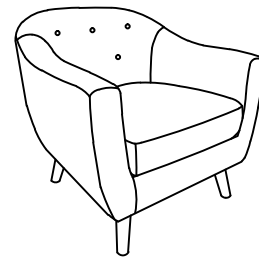

CARE INSTRUCTION FOR 100% POLYESTER FURNITURE:

In order to maintain the original appearance of your 100% polyester furniture, please follow below care procedures :

- Avoid exposing furniture directly to sunlight or heating and air conditioning outlets. Exposure to sunlight or heating and air conditioning outlets will fade/damage 100% polyester.
- Wipe gently with a damp soft cloth to remove dust, dirt and any grime buildup.
- Wipe the 100% polyester with professional cleanser.



For items use on wooden floor, hard surfaces or carpets, it is recommended to Install protective pads under all legs and supports to avoid/prevent from damages/scratches and discoloration.