

Zebra sheer shade

Thank you for purchasing this product. Please read the instructions and warnings carefully before use to ensure safe and satisfactory operation of this product. It is recommended that this blind should only be installed by persons competent in DIY.

Please check the contents


	20x72in	24x72in	33x72in	34x72in	35x72in	36x72in	46x72in	71x72in	72x72in	73x72in
	2	2	2	2	2	2	2	4	4	4
	2	2	2	2	2	2	2	4	4	4
	2	2	2	2	2	2	2	4	4	4
	4	4	4	4	4	4	4	8	8	8

Please note : Additional fasteners other than those sent with your blind may be required depending on the mounting surface.

Wallboard and plaster require the use of anchors such as expansion or toggle bolts.

Brick, tile or stone need special plugs and drill bits.

Remember to always pre-drill holes in wood to avoid splitting.

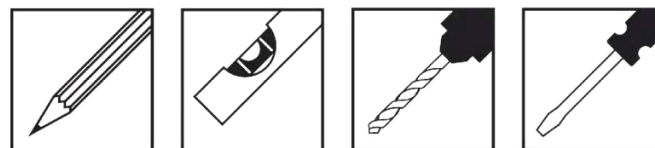


1. Positioning the blind

1-1. Inside mount

Decide the position of the blind so that it will be clear of any latches and fixtures. If you need to reduce the width of the blind to fit the recess, this should be done before assembling. See instructions for reducing the width below.

1-2. Outside mount

Decide the position of the blind so that the overlaps on both sides are equal. It is advisable to allow a minimum of 5 cm overlap on each side.

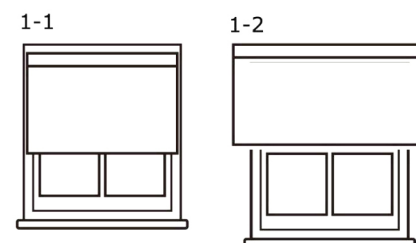

2. Installing the headrail

- 2-1. Fit the headrail using the brackets provided.
- 2-2. When fitting to plaster, use the plastic wall plugs provided.
- 2-3. Brackets should be installed no greater than 1.5cm from each end with intermediate brackets spaced evenly. (fig.1)

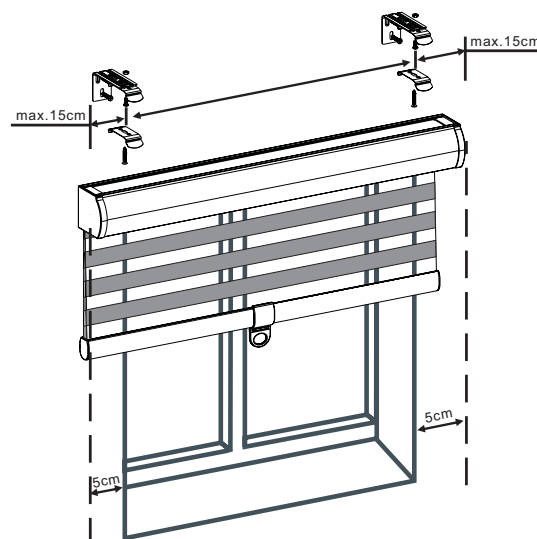


fig. 1

3. Top fixing

Simply screw the spring clips directly to the wall under the window frame. (fig. 2)

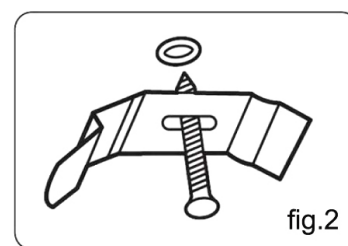


fig.2

4. Face fixing

Attach the spring clips to the L shaped brackets with the small nuts and bolts as shown, then fix to the wall on frame. (fig. 3)


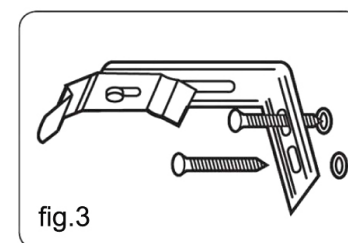



fig.3

5. Fitting the blind


- 5-1. Position the top of the headrail against the spring clips and click into place.
- 5-2. Please note, to remove for cleaning, etc. gently prise away the headrail from the clips using a screwdriver. (fig. 4)

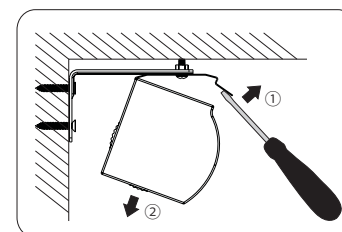

6. Notice

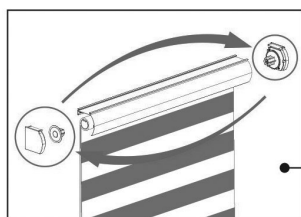

Mechanism can be installed on either side.

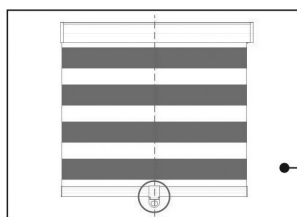

For better stability, it is better to put the transparent hand holder in the middle of the bottom rail.

7. Care and maintenance

The fabric may be dusted using a dry cloth. To clean, wipe with a damp cloth. Please ensure blind does not become wet to avoid water damage.