

# Assembly Instruction

ITEM NO.: TDL334979DS


- 1) Add the Harp (3) on to the saddle located on the Socket (2).
- 2) Add the Shade (4) onto the Harp (3).
- 3) Add the Finial (6) onto the Harp (4).

*\*Please note that the screw, that attaches the Finial (5) to the Harp (3), is movable. If the shade appears to be askew, check this screw and adjust it – if needed – so it points straight up.*

**CAUTION** - Refer to the wattage caution label located near the lamp holder for recommended maximum wattage - Do not exceed recommended wattage.

**WARNING** - Do not attempt to replace the bulb while the lamp is plugged into a wall receptacle.

**IMPORTANT SAFETY INSTRUCTIONS** This portable lamp has a polarized plug (one blade is wider than the other) as a safety feature to reduce the risk of electric shock. This plug will fit in a polarized outlet only one way. If the plug does not fit fully in the outlet, reverse the plug. If it still does not fit, contact a qualified electrician. Never use with an extension cord unless plug can be fully inserted. Do not alter the plug.

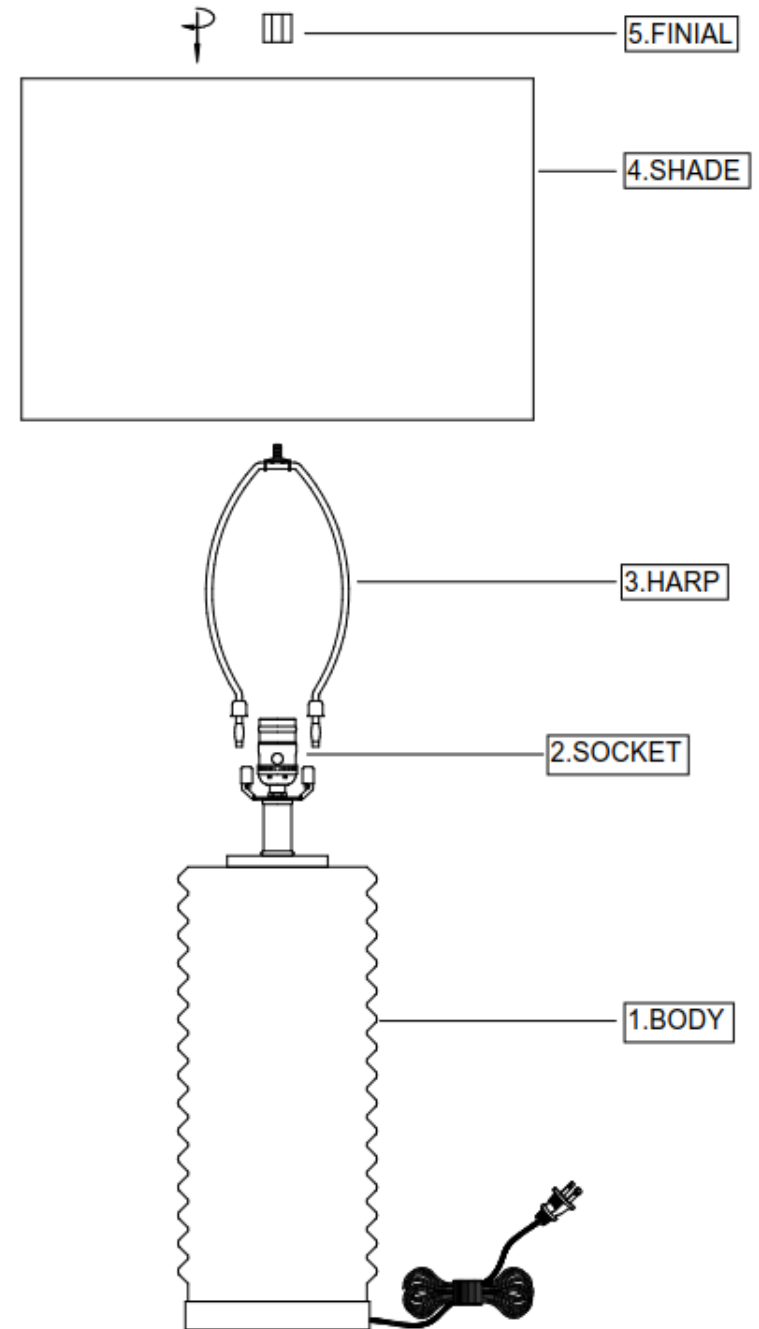

E26, TYPE A, 60W (NOT INCLUDED)