 
 




Assembly Guide & User Manual

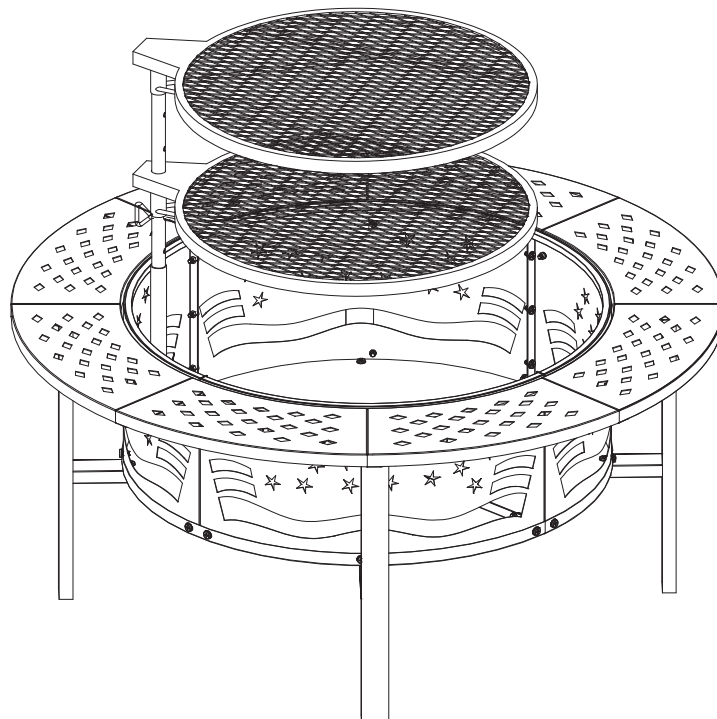

Used for assembly and grill height adjustment



We recommend 2 or more people to install.



The expected assembly time is 45 Minutes.



We recommend wearing protective gloves.



Not intended for use by children.



Do not use power tools for assembly.

WARNING

Read all instructions before assembly.

Failure to follow these instruction may result in injury or product damage.

IMPORTANT WARRANTY INFORMATION

PLEASE READ CAREFULLY

Your satisfaction is our priority. Our team is available 24/7 to assist you. We respond to all inquiries within 24 hours.

All items can be returned or replaced for any reason within 30 days of the receipt as long as the item is returned in its original product package and all accessories of its original shipment are included.

About Replacement:

Missing or Damaged Parts? Do not return the entire unit. Contact us with your Order ID, and we will ship replacement parts free of charge.

About Returns:

1. To initiate a return, email **After-sales Team** with your Order ID. For damaged items, please include a photo to expedite your replacement. We will provide a **PREPAID RETURN LABEL** by E-mail.
2. **Please Note: Returns made without a pre-authorized label may be subject to shipping fees at the customer's expense. Seller will not bear the fee of the customer's own purchase of the return label.**
3. If the product is damaged by the customer, we can refuse to provide a prepaid return label, and the customer needs to pay for the return shipping.
4. Boxes for return shipping will not be provided by the seller. Items must be returned in their original packaging. If original packaging is unavailable, the customer is responsible for providing suitable shipping cartons.
5. After all returned items arrive at the Return Center, please contact the After-sales team and we will fully refund back to the original payment method.

WARRANTY:

This product is warranted to be free from defects in material and workmanship for a period of 6 months from the date of original purchase. This warranty does not cover damage resulting from misuse, abuse, neglect, alteration, normal wear and tear, or accidental damage.

SPECIAL WARNINGS

- ▶ Check local by-laws before using the fire pit.
- ▶ This fire pit is intended for outdoor use ONLY!! DO NOT use it on wooden decks.
- ▶ This fire pit is intended to burn Wood Log or Charcoal. Do not burn leaves or other combustible materials in the fire pit.
- ▶ NOT for use by children. Keep children and pets away from the fire pit.
- ▶ Fire pit is hot, so DO use it with caution. NEVER touch hot fire with bare hands.
- ▶ NEVER leave burning fire pit unattended and always extinguish fire completely before leaving the fire pit.
- ▶ Keep the fire pit at least 20 feet away from any flammable surface or dwelling.
- ▶ DO NOT use near flammable or combustible objects or materials.
- ▶ Always use gloves and protective goggles when loading the fire pit or extinguishing the fire.
- ▶ Have a fire extinguisher available near the fire pit in case of emergency.

OPERATION INSTRUCTIONS

- ▶ Place wood logs on grate and light with match. DO NOT overload logs.
- ▶ Please use Poker(provided) when handing.
- ▶ We do not recommend pouring water over the fire unless necessary. The fire should be allowed to expire on its own.

CARE and MAINTENANCE

This fire pit is a quality-built product and is made to last for many years. The frame structure or this unit is made of powder-coated steel brush on the affected area followed by a spray coating of high temperature anti-rust paint. For additional rust proofing of the bowl grate and mesh lid, we recommend that a coat of high temperature primer be applied before use. You may cover the fire pit with a Protective Cover(not included) when the fire pit is not in use. Ensure the fire pit has completely cooled down before using the Protective Cover(not included).

 
WARNING!!!

- ▶ The use of alcohol, prescription or non-prescription drugs may impair the ability to properly assemble or safely operate this fire pit.
- ▶ When using this fire pit, exercise the same precautions you would do with any open fire.
- ▶ Do not use this fire pit for indoor heating. Toxic carbon monoxide fumes can accumulate and cause asphyxiation or death

PARTS LIST

A


Tabletop Segment

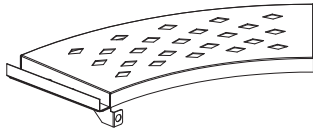

8pcs

B

 
Supporting Leg



4pcs

C

 
Fire Bowl Panel

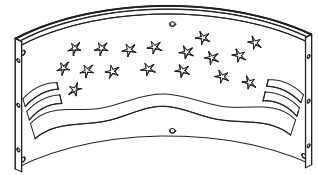

4pcs

D

 
Fire Pit Lid

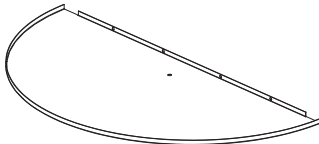

2pcs

E

 
Log Grate

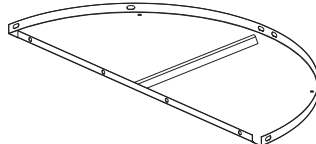

2pcs

F

 
Large Cooking Grill

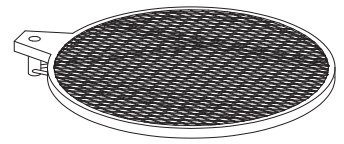

1pcs

G

 
Small Cooking Grill

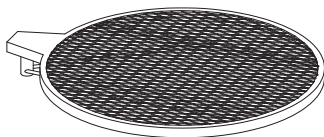

1pcs

H

 
Grill Post



1pcs

I

 Handle

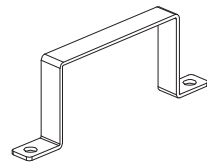

1pcs

J

 
Bolts M6x12



78pcs

K

Nuts



34pcs

L

Flat Washer



74pcs

M

 
Protective Gloves



2pcs

N

Assembly Tool
and Locking Pin



1pcs

O

Fire Poker



1pcs

P

Foot Leveler

 
 
 
 
 


4pcs

Step 1.

Place the Fire Bowl Panels (C) upside down on a soft, level surface.






Connect the panels in sequence to form a circular frame.
Secure the joints using Bolts (J), Washers (L), and Nuts (K).

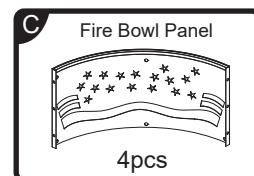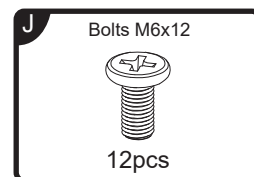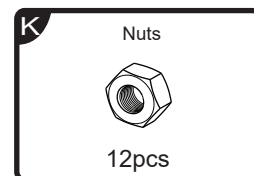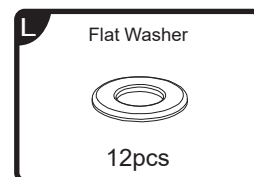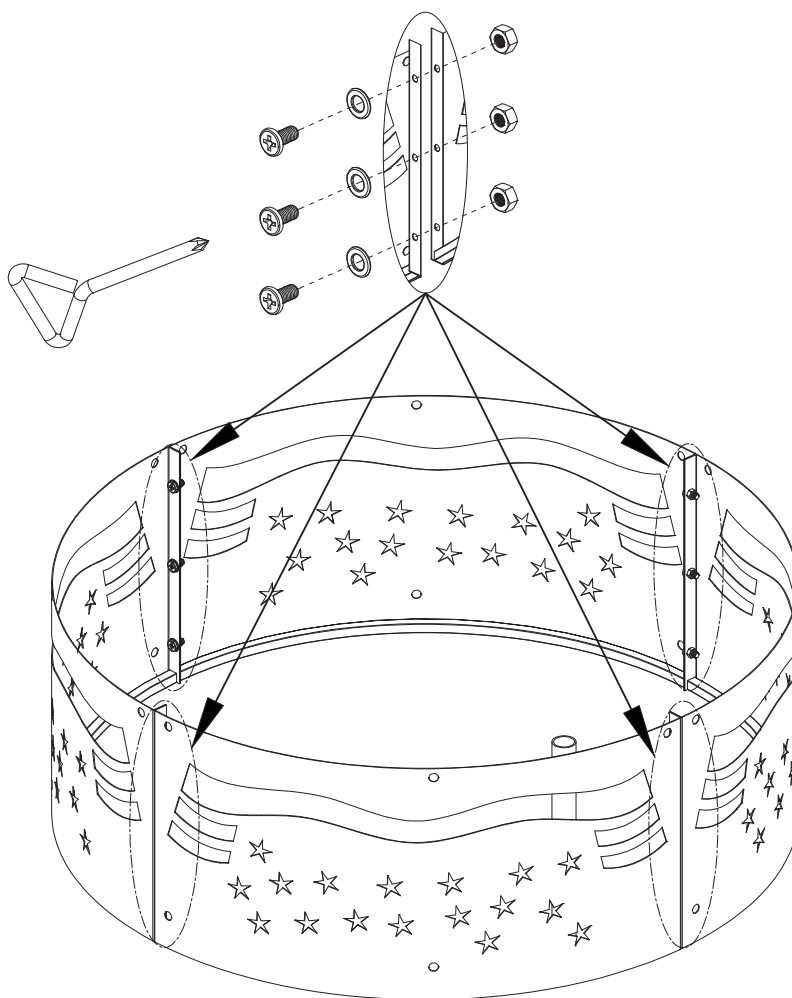

Step 2.

Connect the Tabletop Segments (A) one by one around the fire bowl to form the outer rim.

     Secure each segment to the bowl using Bolts (J) and Washers (L).


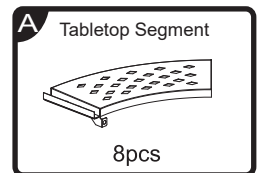
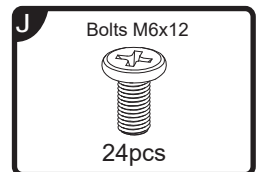
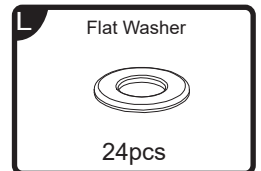
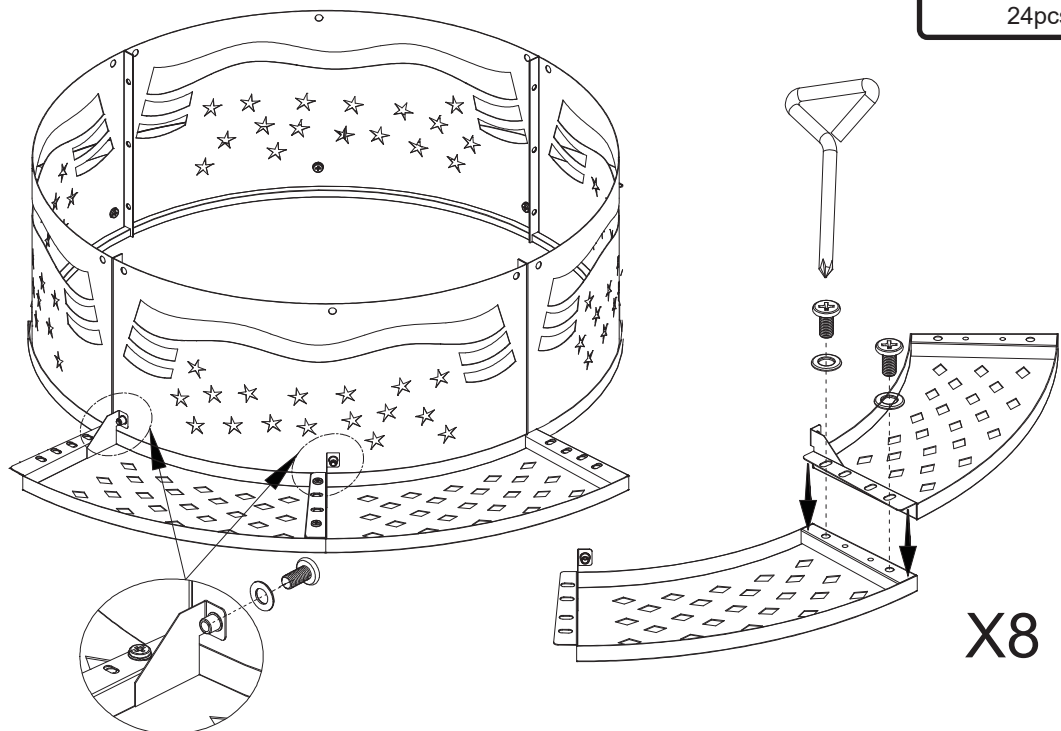
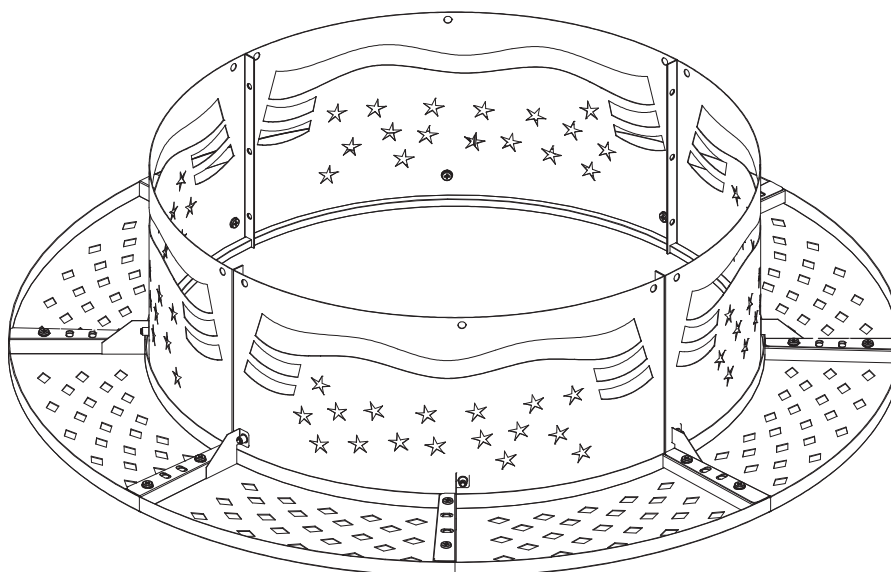


Step 3.

Join the two halves of the Log Grate (E) together using Bolts (J), Washers (L), and Nuts (K).

Once assembled, place the completed grate onto the fire bowl as shown.


 
 
 
 
 
 
Ensure the mounting holes on the Log Grate (E) are aligned with the corresponding holes on the fire bowl rim.

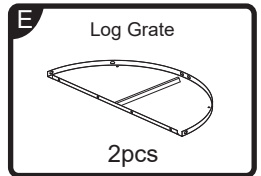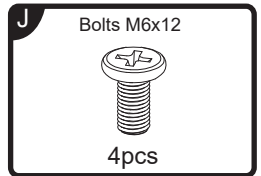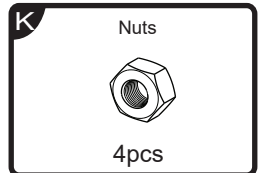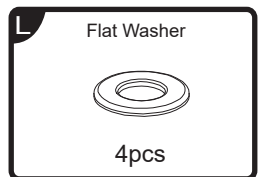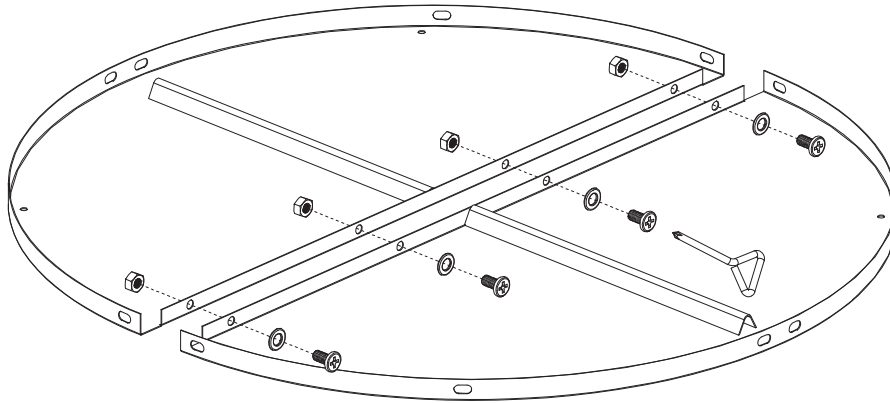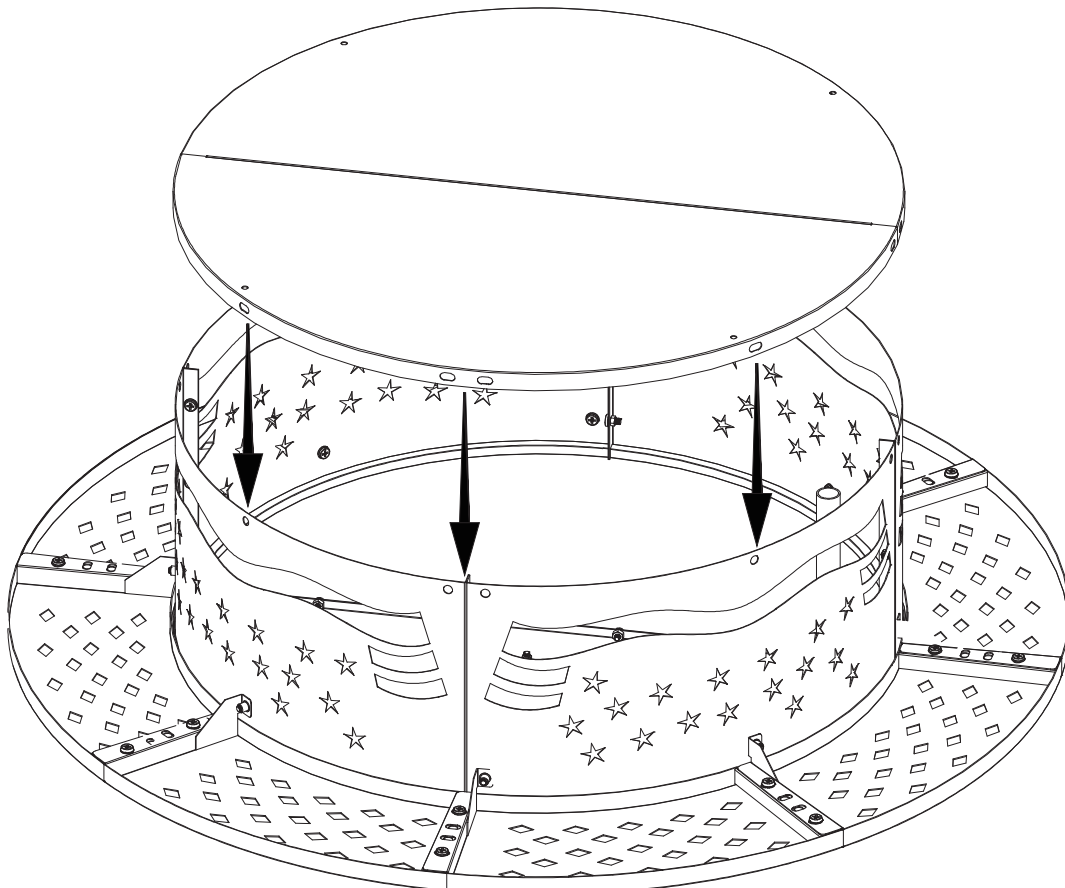

Step 4.




Install the Foot Leveler (P) onto the Supporting Leg (B).
Align the Supporting Leg (B) with the mounting holes on the
Tabletop Segment (A).

       Secure the leg with Bolts (J) and Washers (L).

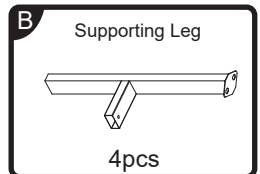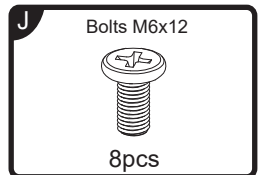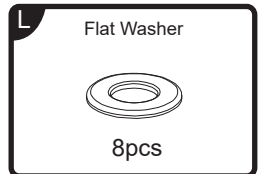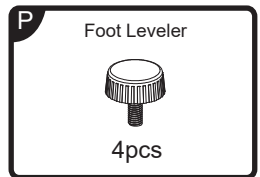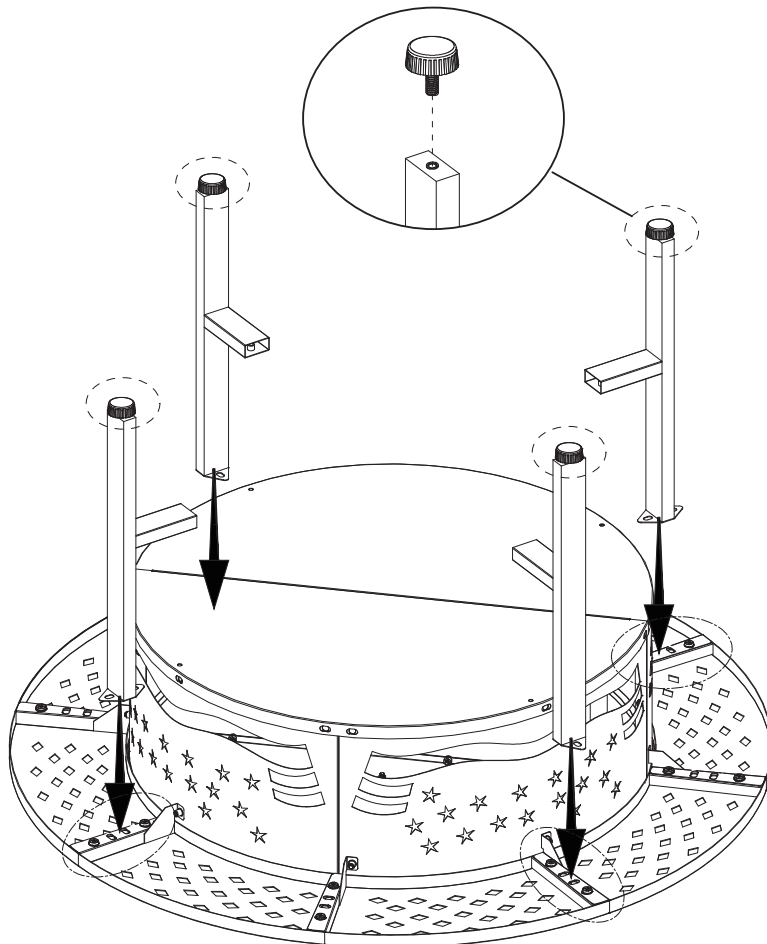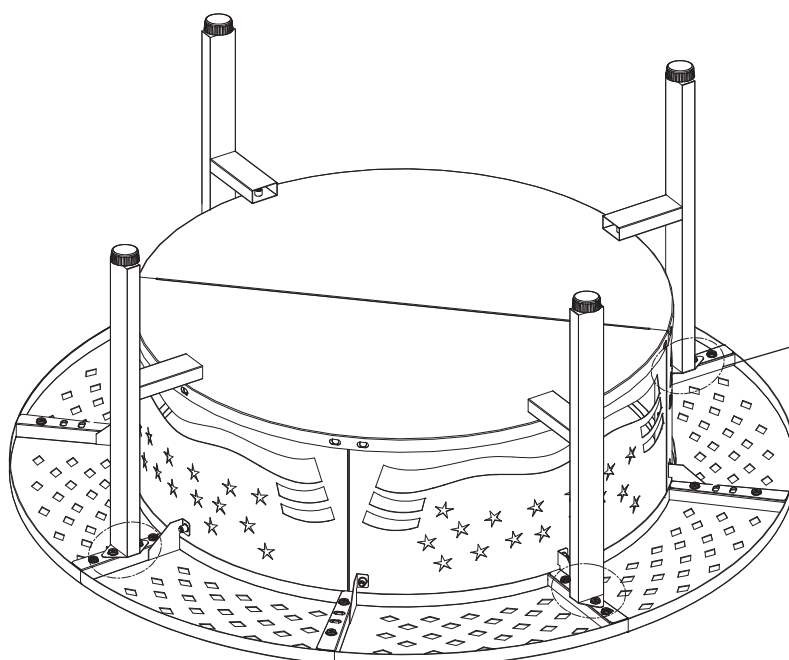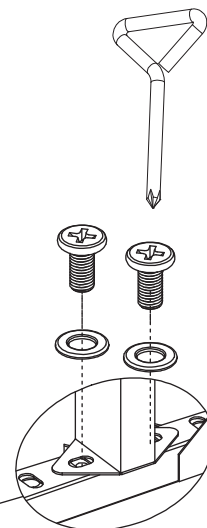

Step 5.


 
 
 
Ensure all Bolts (J) and Washers (L) are securely tightened to create a stable base.

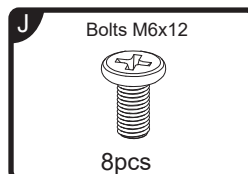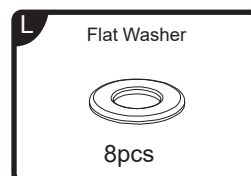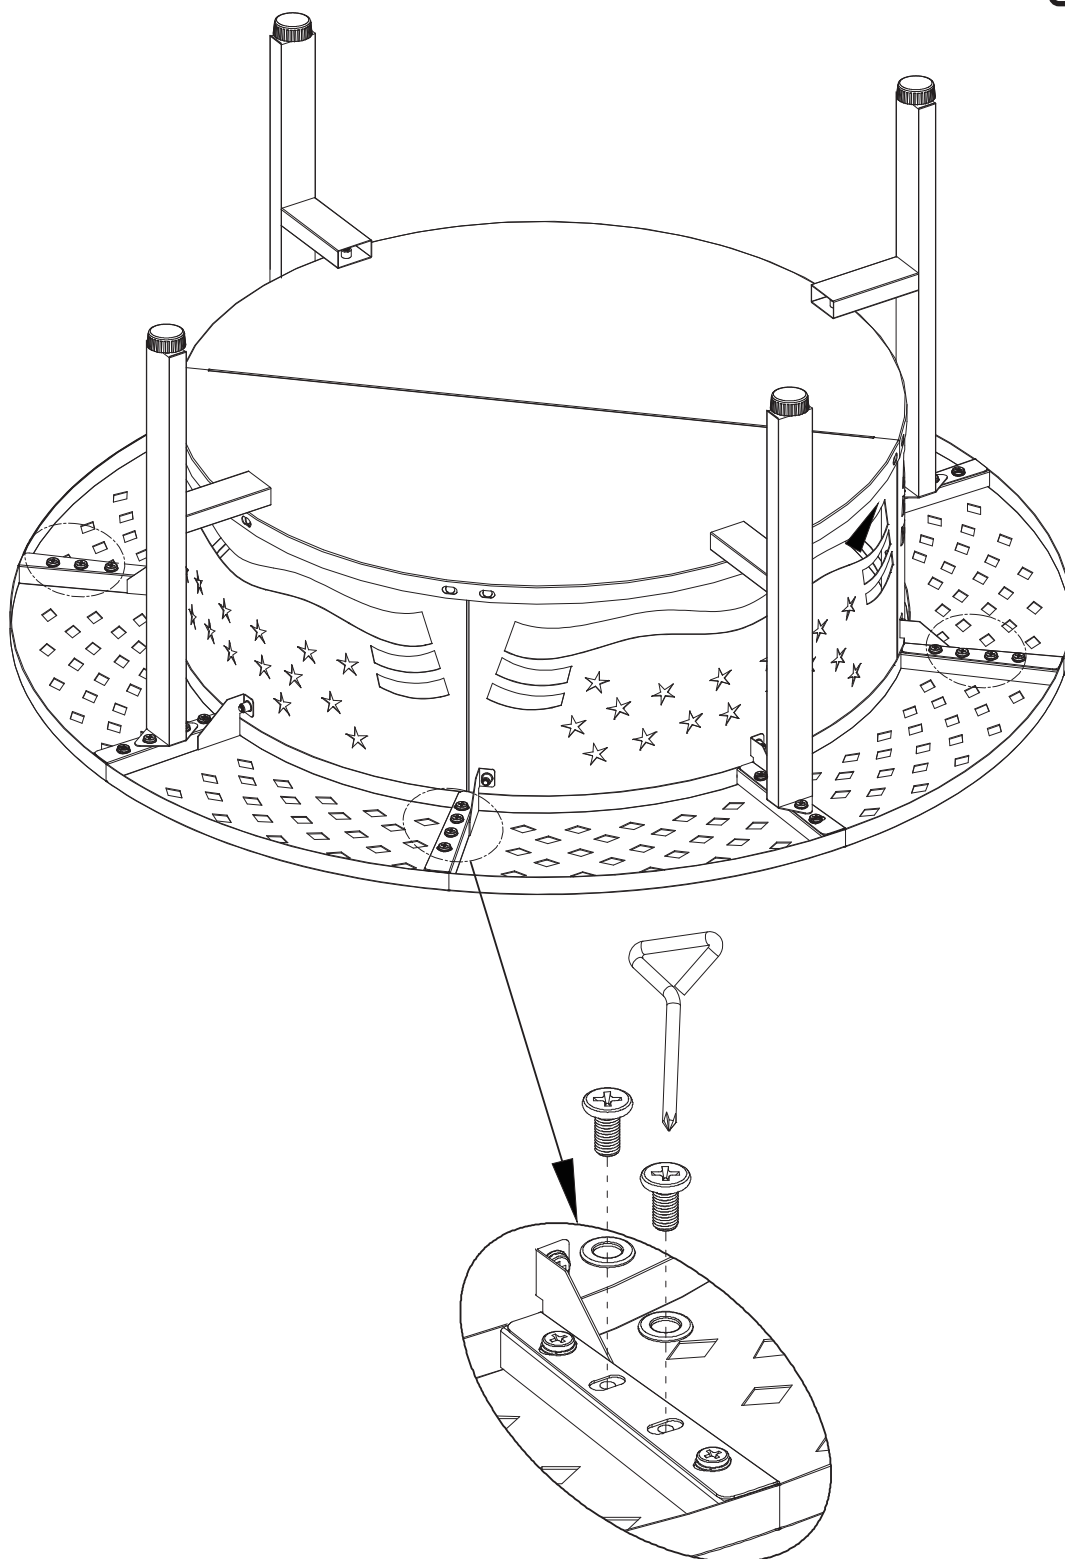

Step 6.




Carefully flip the assembled fire pit over and place it upright on a flat surface.

    Secure the Log Grate (E) to the Fire Bowl (C) using the Bolts (J), Washers (L), and Nuts (K) as shown in the detail views.

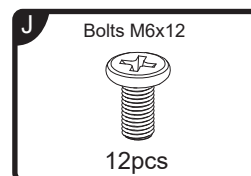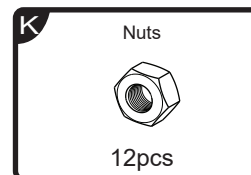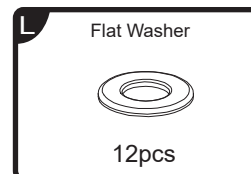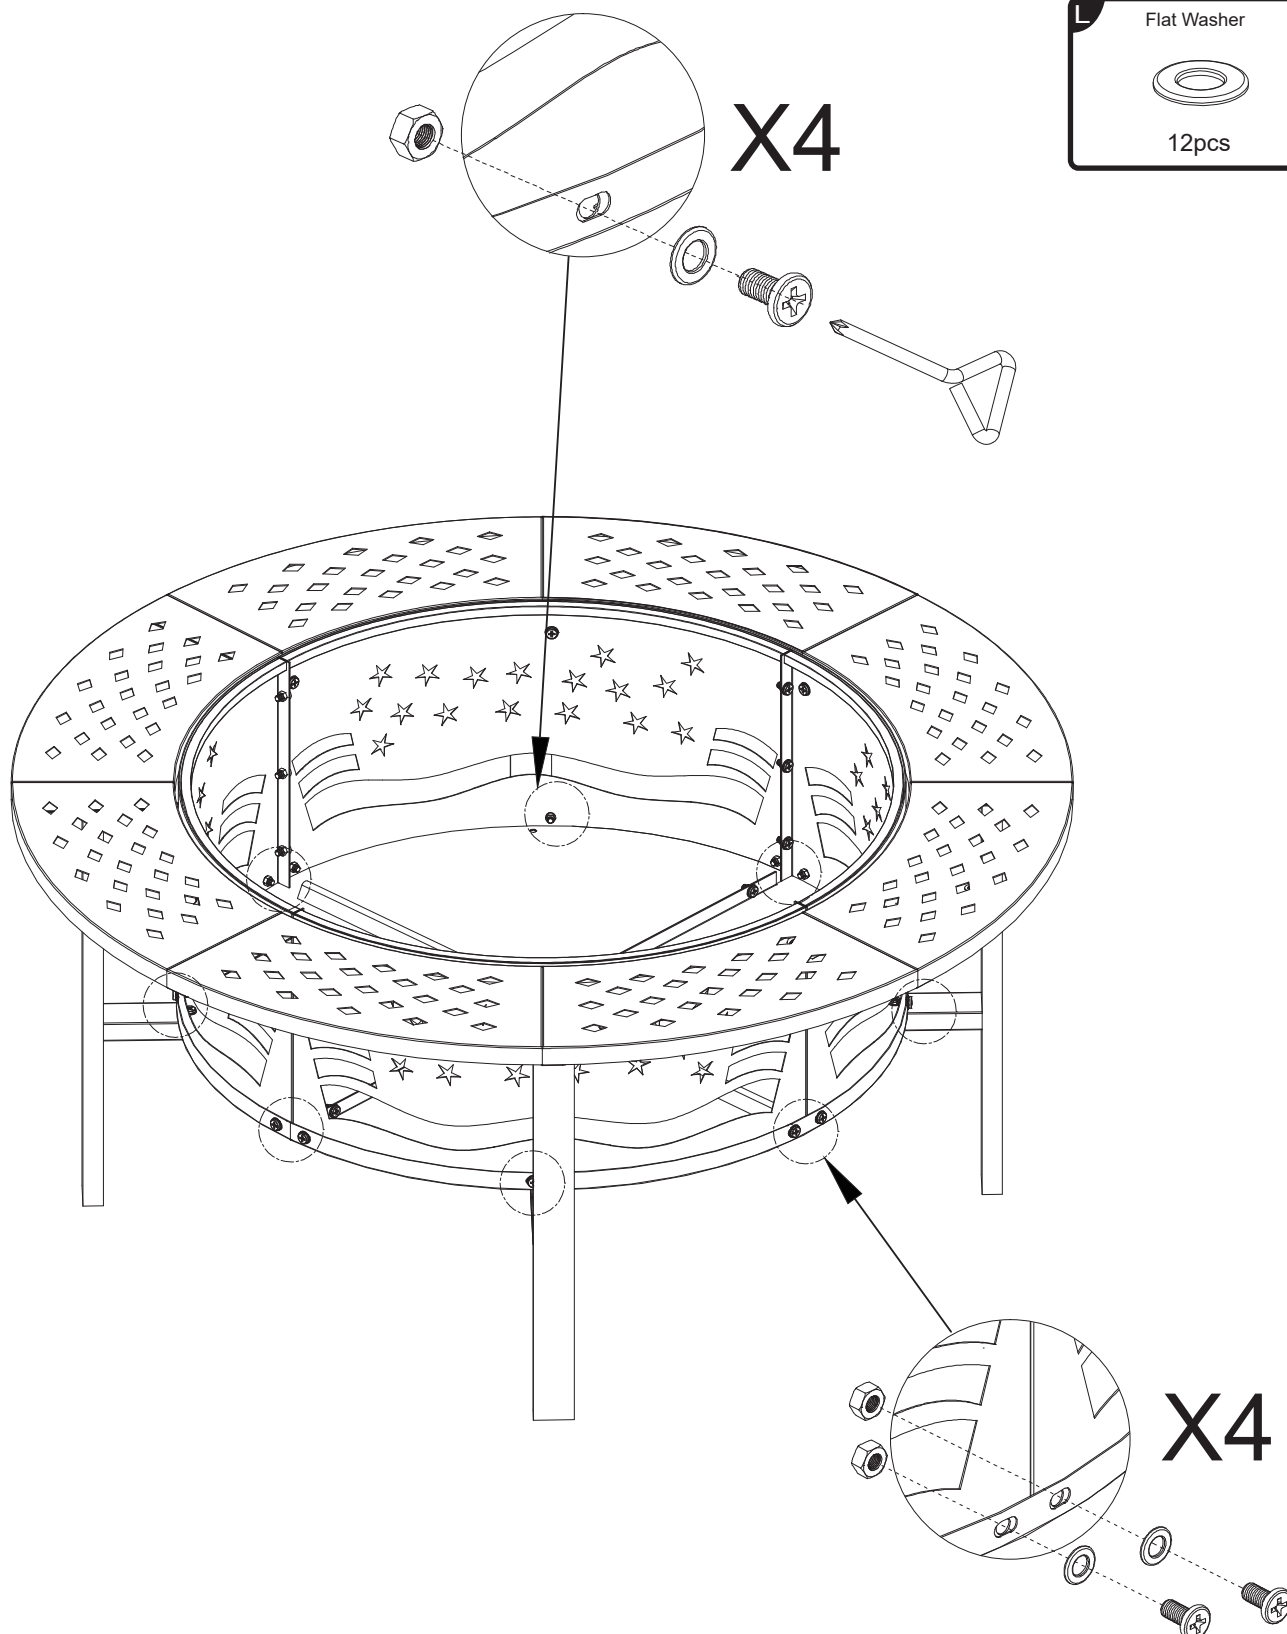









Step 7.

   Secure the support leg (B) with the Log Grate (E) using Bolts (J) and Washers (L) as shown.

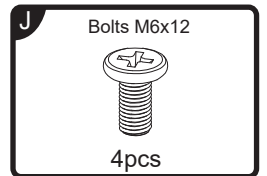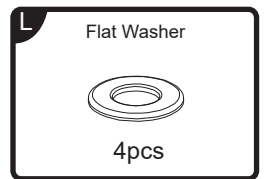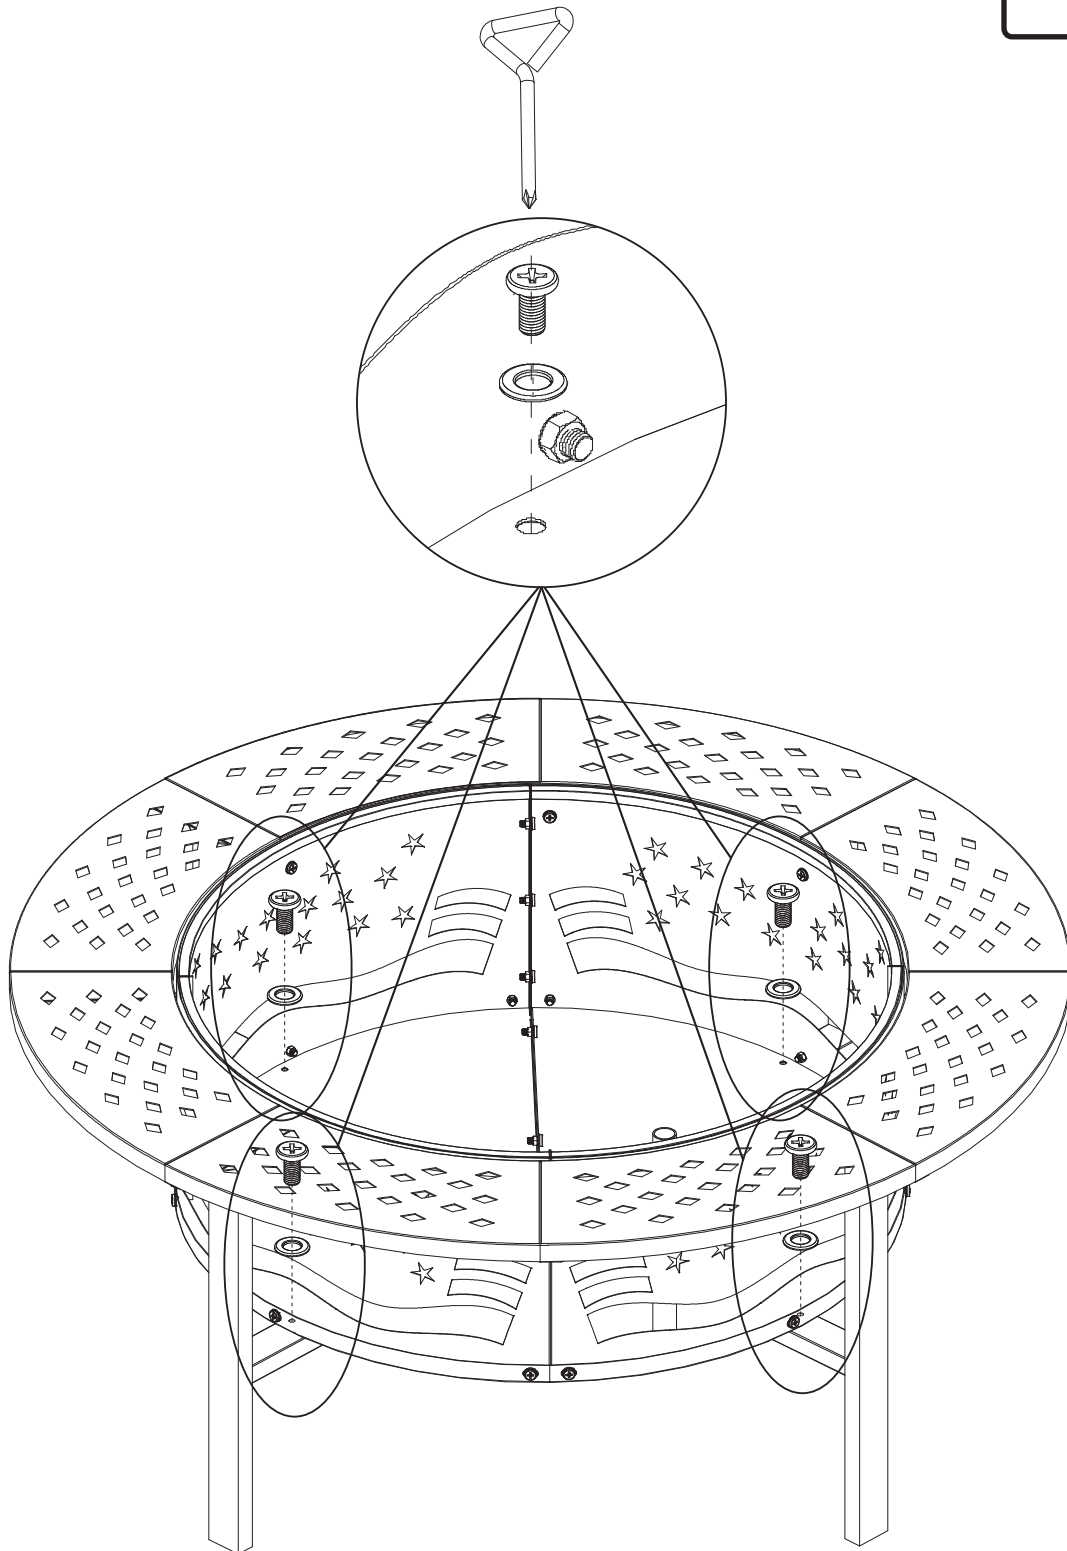


Step 8.

        Join the two halves of the Fire Pit Lid (D) using Bolts (J), and Nuts (K).
Then, flip the lid over and install the Handle (I) on the top surface as shown.

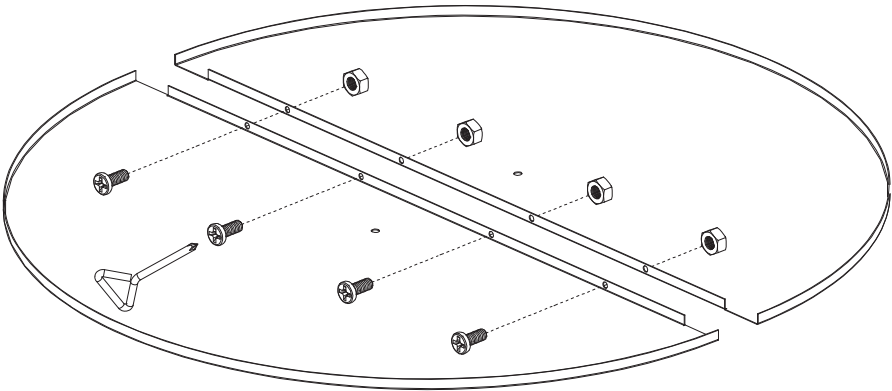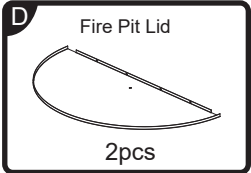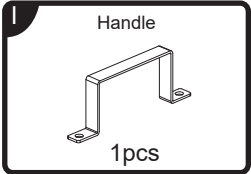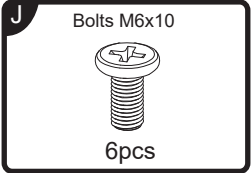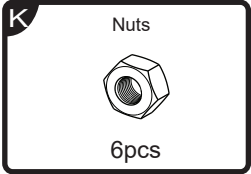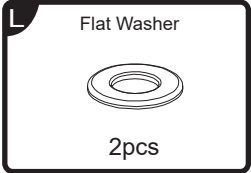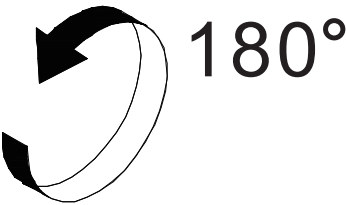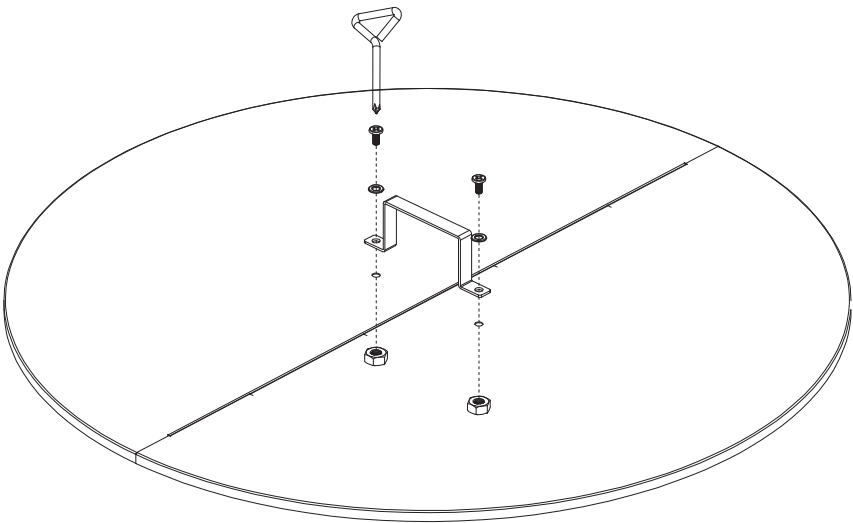




Step 9.

 When not in use, the fire pit can be covered with the lid for protection and storage.

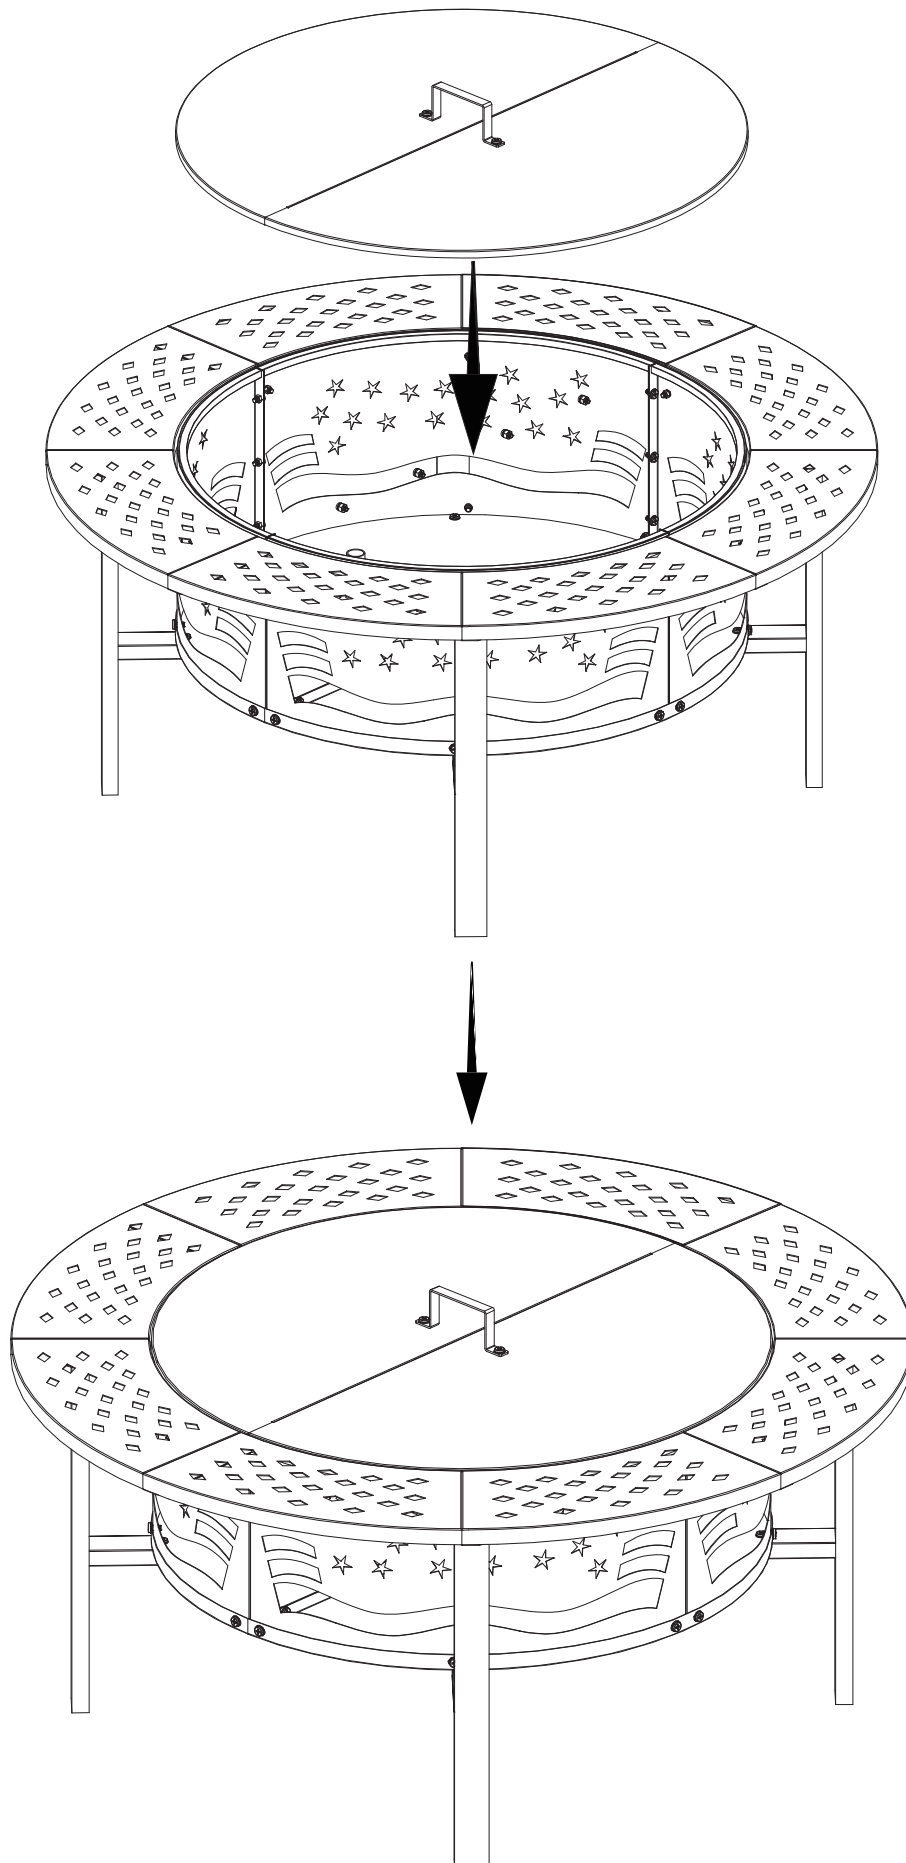

Step 10.

 
 
 
To use the grilling feature, insert the Grill Post (H) into the designated socket on the Fire Bowl (C).
Insert the Locking Pin (N) into the desired hole on the post to set the Large Cooking Grill's (F) height.

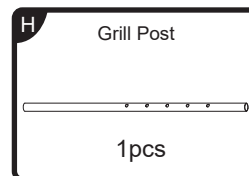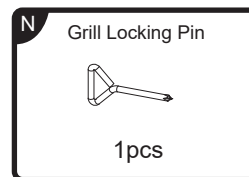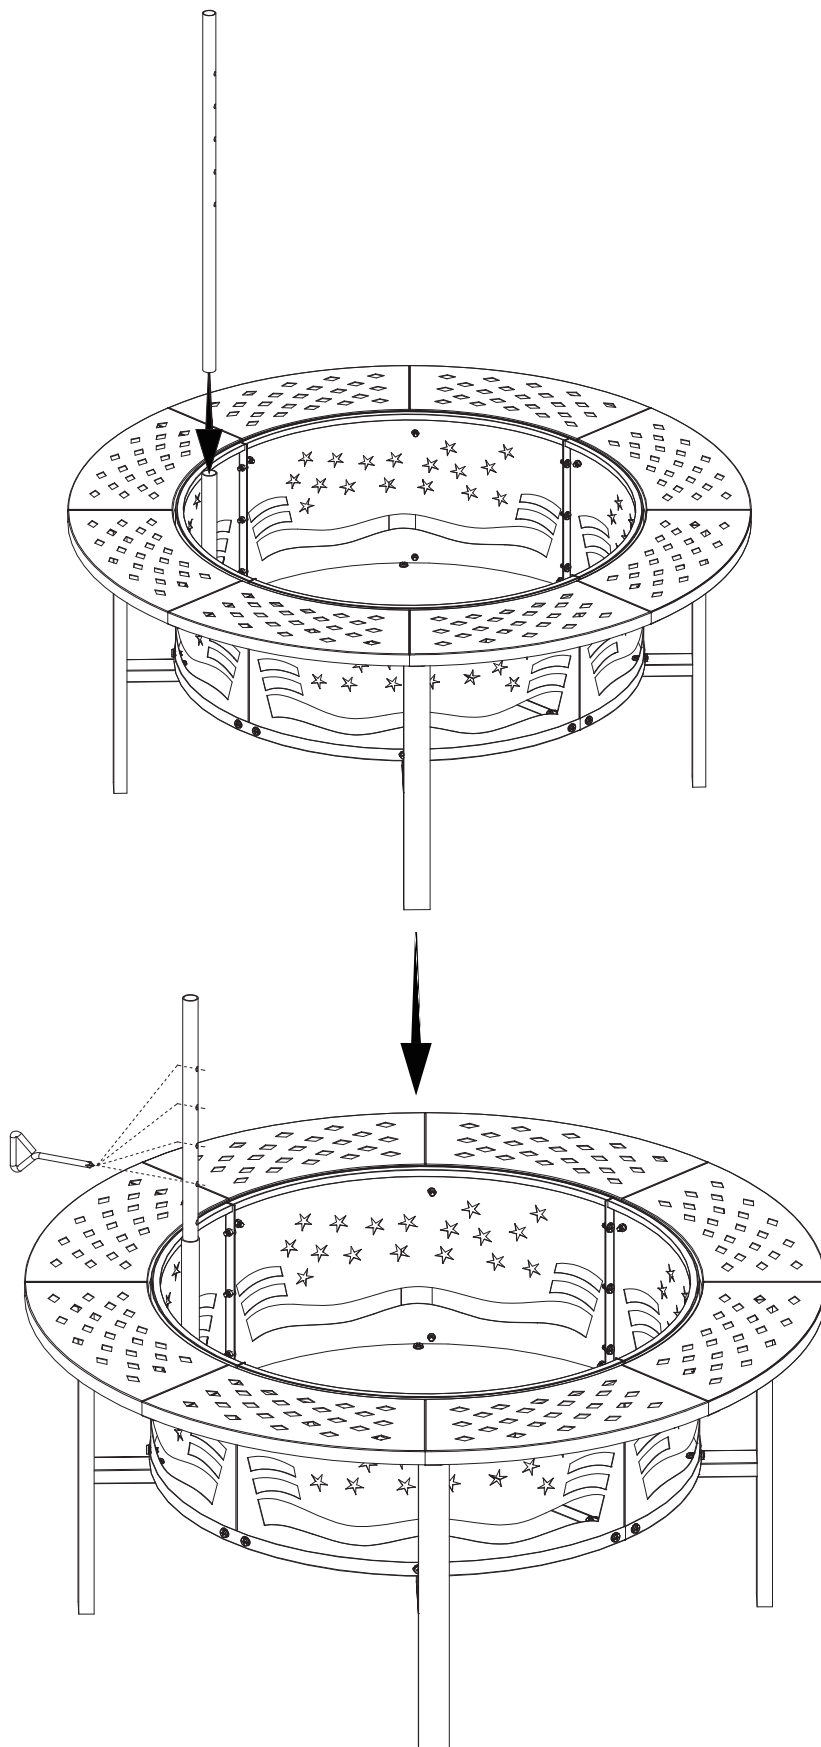


Step 11.

Slide the Large Cooking Grill (F) and Small Cooking Grill (G) onto the post.

    CAUTION: Always ensure the Grill Locking Pin (N) is fully inserted before placing food on the grills.

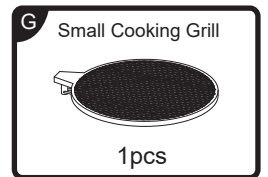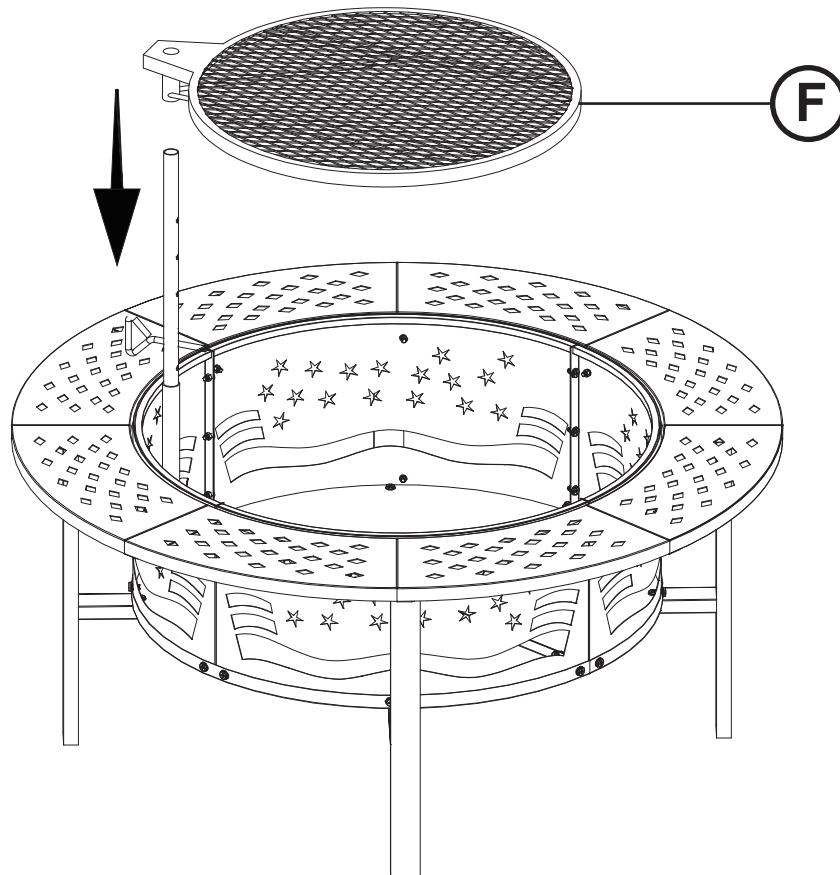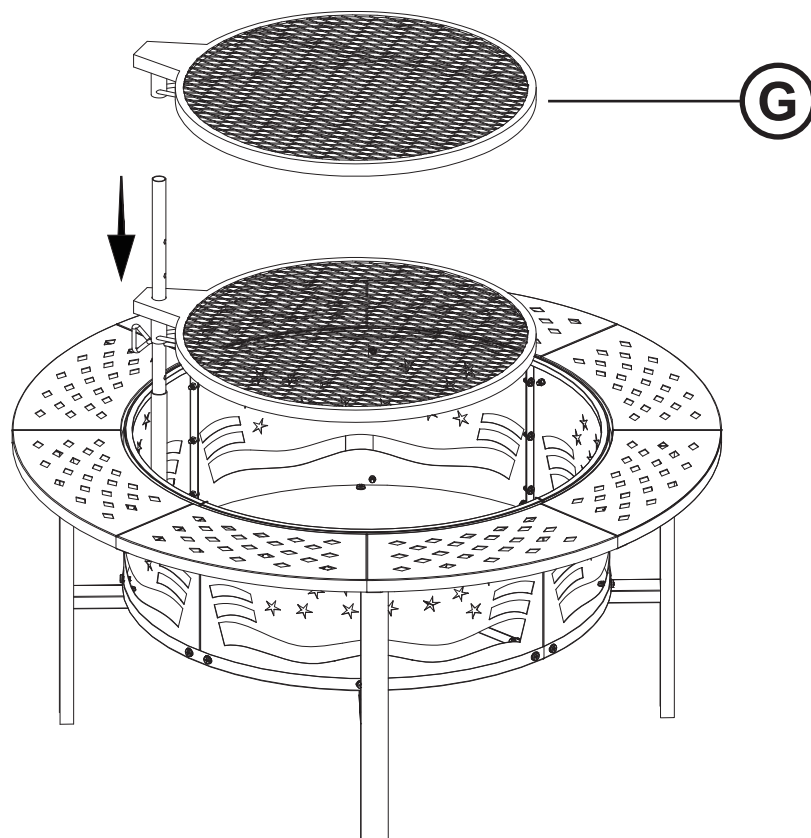

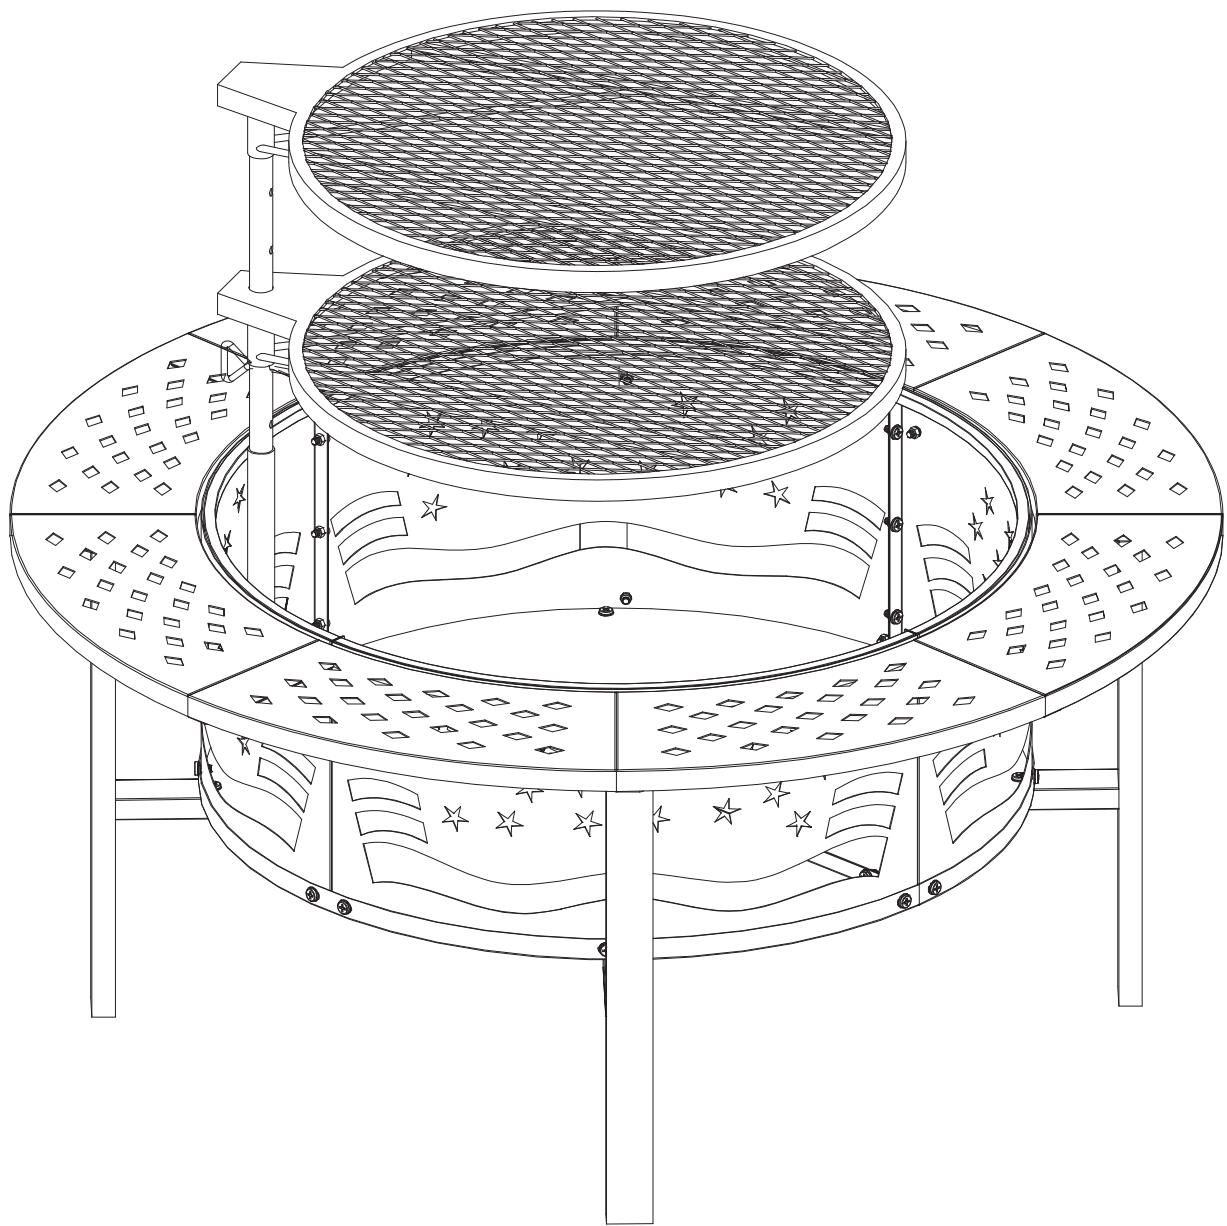

MAINTENANCE REQUIREMENT

Hardware may loosen over time. Periodically check and retighten all bolts. We recommend checking 2 weeks after assembly and every 6 months thereafter.



WARNING:

Please place the Tin/Aluminum Foil for BBQ under the foods, DO NOT put the food directly on the Grate!

