 
 
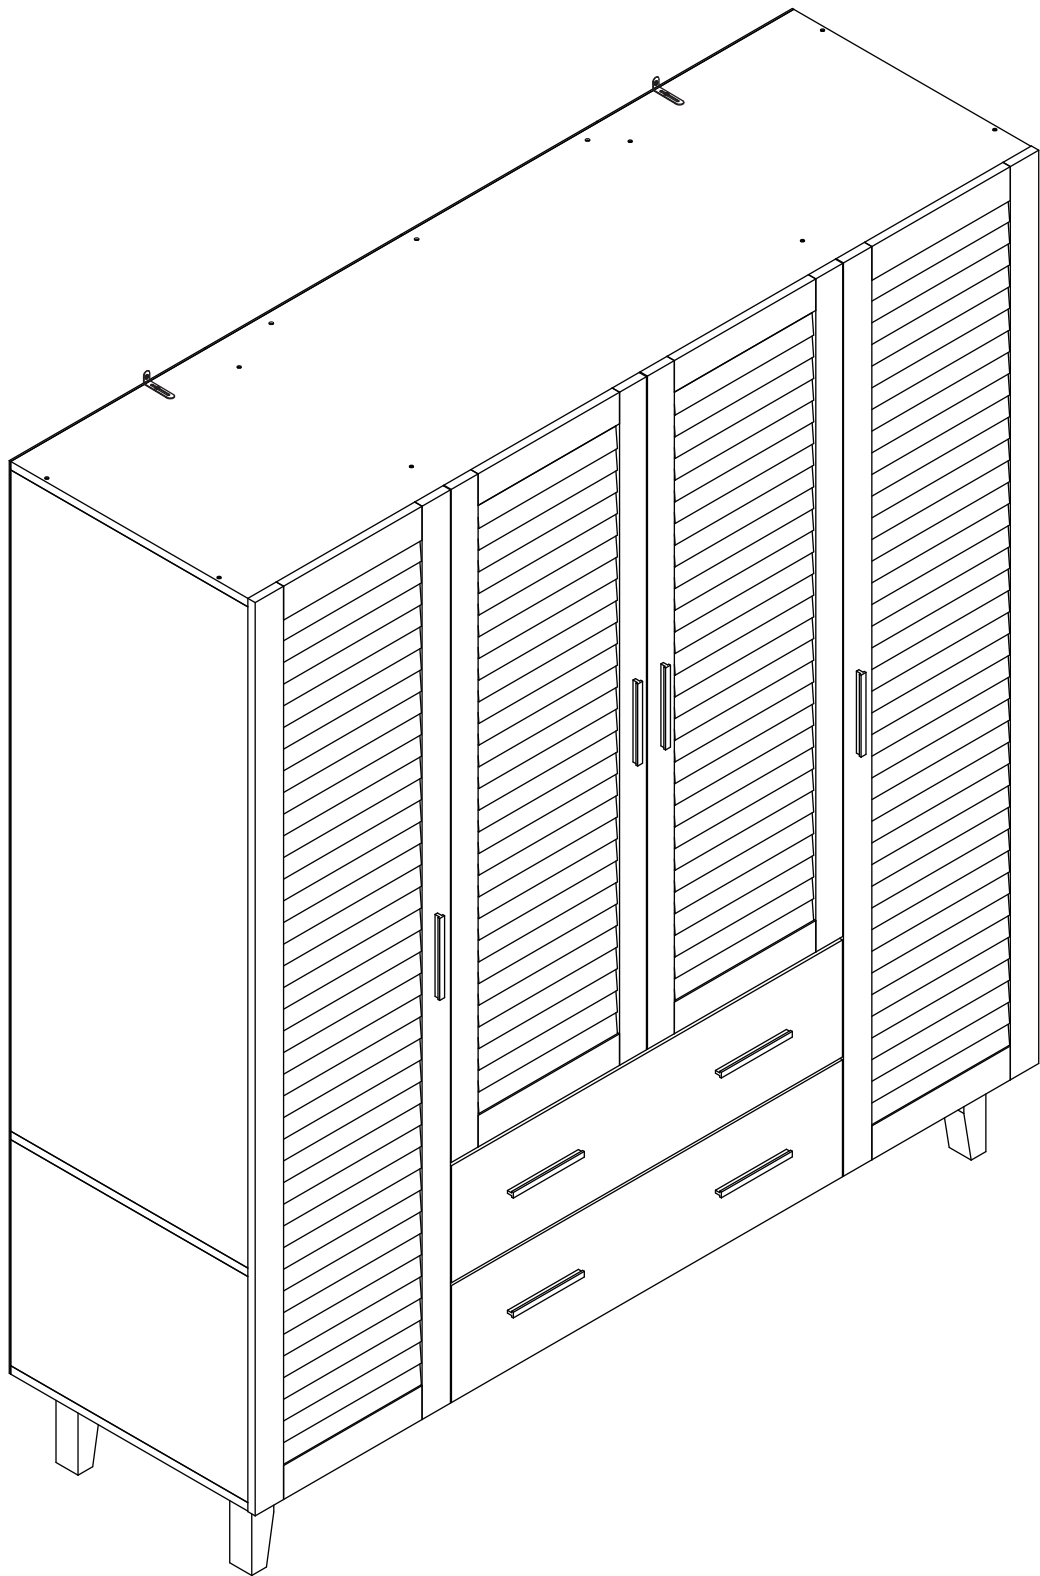 
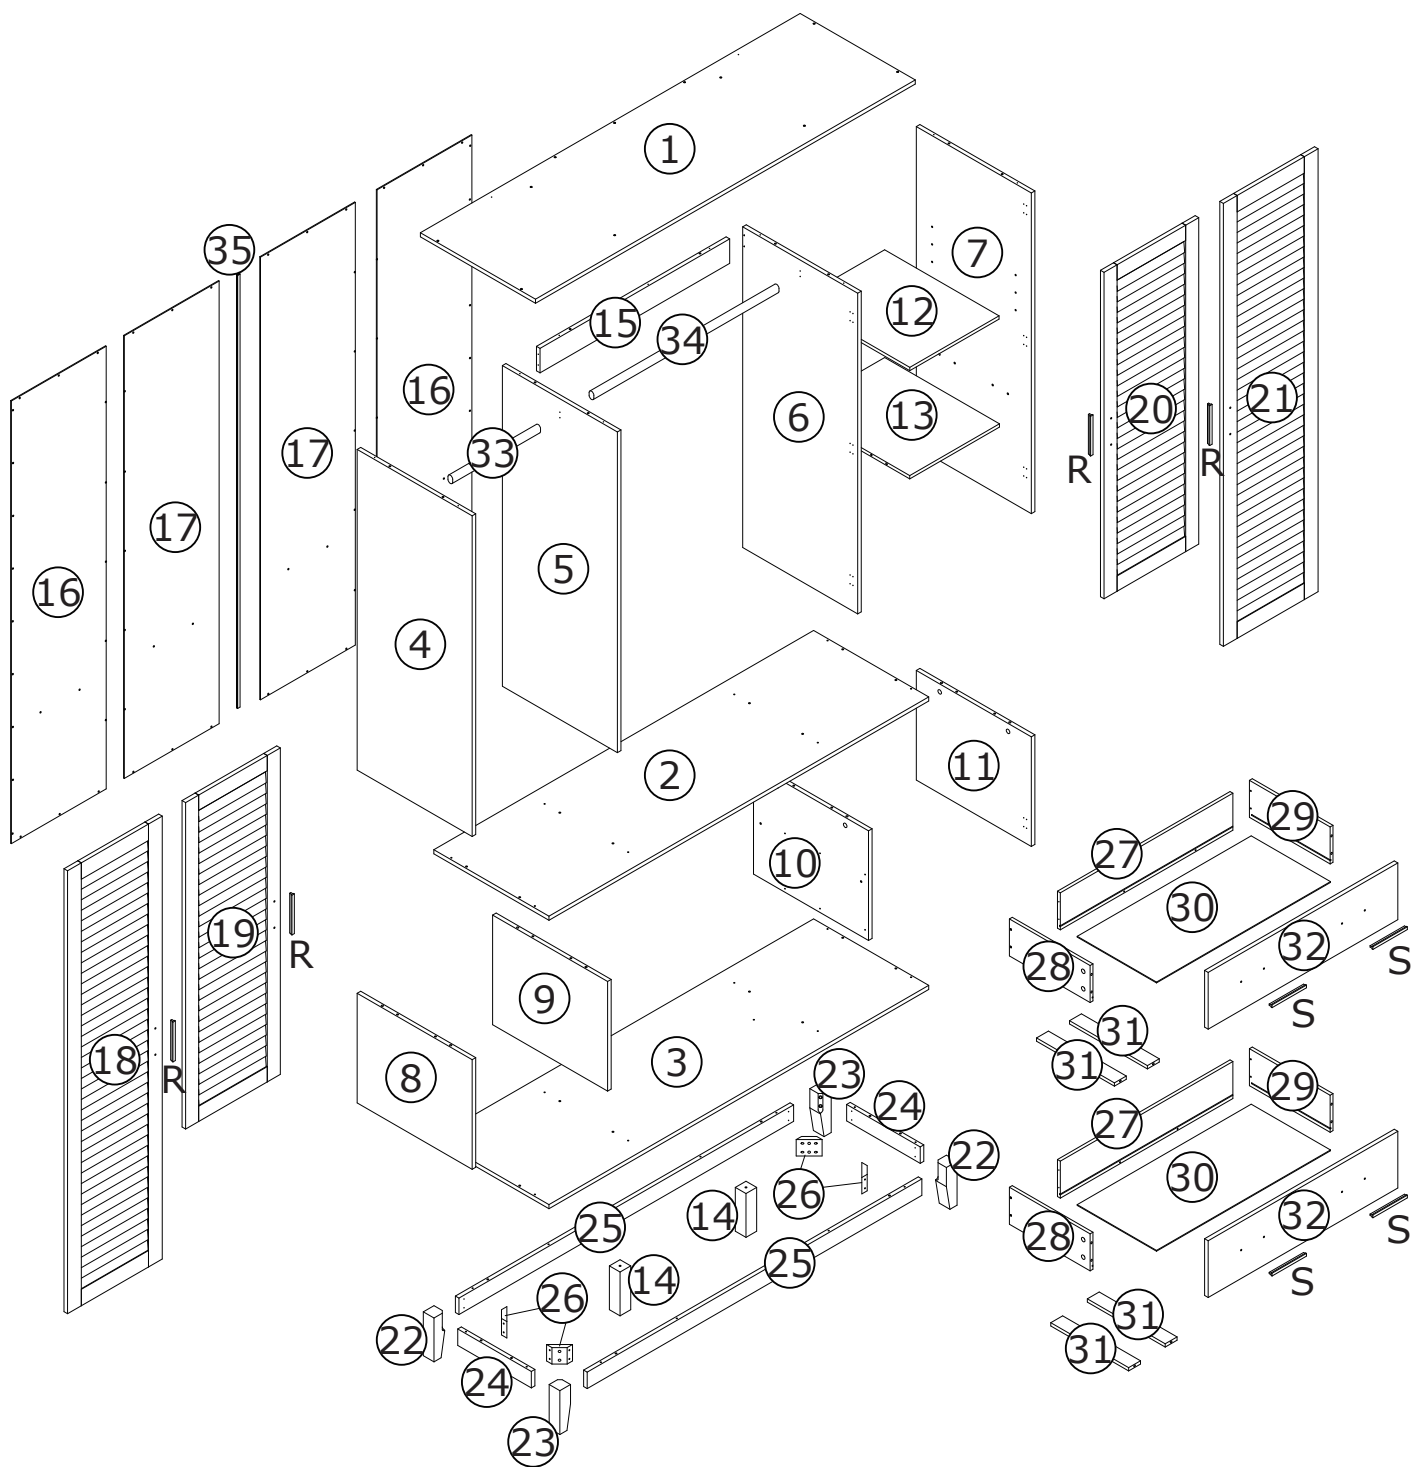 
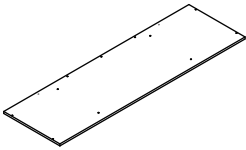 
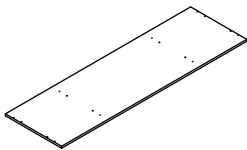 
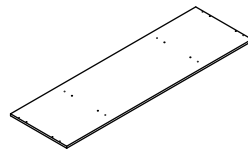 
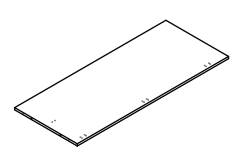 
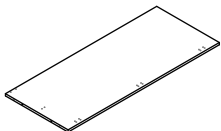 
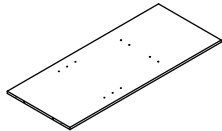 
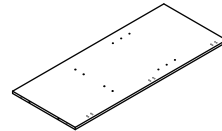 
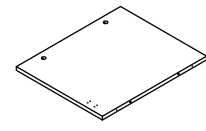 
 
 
 
 
 
 
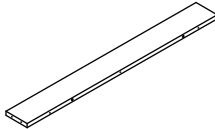 
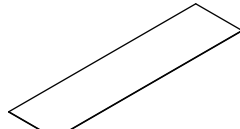 
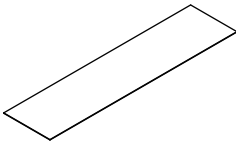 
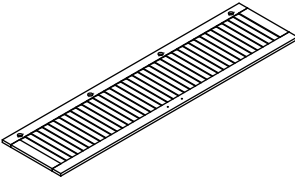 
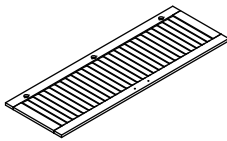 
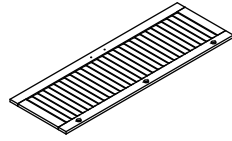 
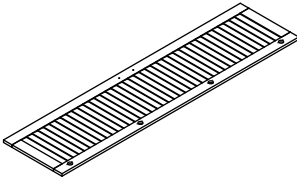 
 
 
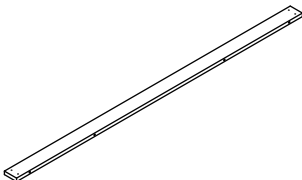 
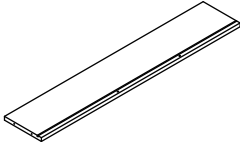 
 
 
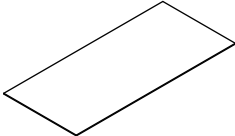 
 
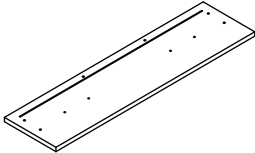 
 


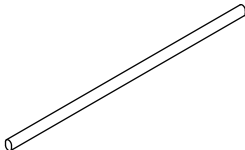












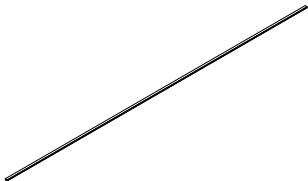







Parts and Operation Elements

			
① 1pc	② 1pc	③ 1pc	④ 1pc
			
⑤ 1pc	⑥ 1pc	⑦ 1pc	⑧ 1pc
			
⑨ 1pc	⑩ 1pc	⑪ 1pc	⑫ 1pc
			
⑬ 1pc	⑭ 2pcs	⑮ 1pc	⑯ 2pcs
			
⑰ 2pcs	⑱ 1pc	⑲ 1pc	⑳ 1pc
			
㉑ 1pc	㉒ 2pcs	㉓ 2pcs	㉔ 2pcs









							
25	2pcs	26	4pcs	27	2pcs	28	2pcs
							
29	2pcs	30	2pcs	31	4pcs	32	2pcs
							
33	1pc	34	1pc	35	1pc		

            Hardware

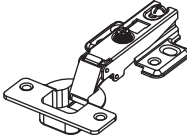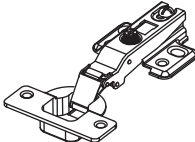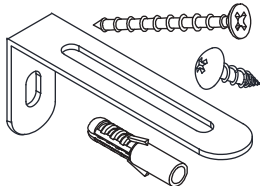

 Cam Bolt	 Cam Lock	 Cam Bolt	 Cam Lock
(A) 16pcs^{+2pcs}	(B) 16pcs^{+2pcs}	(C) 12pcs^{+2pcs}	(D) 12pcs^{+2pcs}
 Ø6x30mm Dowel	 Ø8x40mm Dowel	 M5x40mm Screw	 M4x30mm Screw
(E) 4pcs	(F) 42pcs^{+2pcs}	(G) 29pcs^{+2pcs}	(H) 12pcs^{+2pcs}
 M4x25mm Screw	 M6x45mm Screw	 M4x40mm Screw	
(J) 16pcs^{+2pcs}	(K) 8pcs	(L) 12pcs^{+2pcs}	(M) 6pcs
	 M4x14mm Screw	 M3x12mm Screw	
(N) 8pcs	(P) 84pcs^{+2pcs}	(Q) 62pcs^{+2pcs}	(R) 4pcs
	 M4x18mm Screw		 M2.5x12mm Screw
(S) 4pcs	(T) 16pcs^{+2pcs}	(U) 4pcs	(V) 60pcs^{+2pcs}
			
(W) 4pcs	(X) 2pcs	(Y) 1pc	(Z) 15pcs

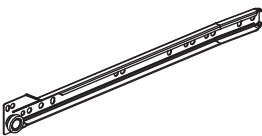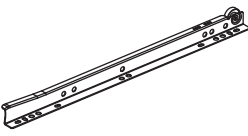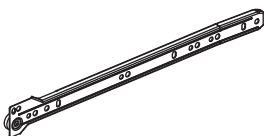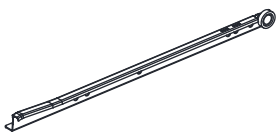     							
(a)	10pcs	(b)	8pcs	(d)	6pcs	(e)	28pcs ^{+2pcs}
							
(CL)	2pcs	(DL)	2pcs	(CR)	2pcs	(DR)	2pcs

        1

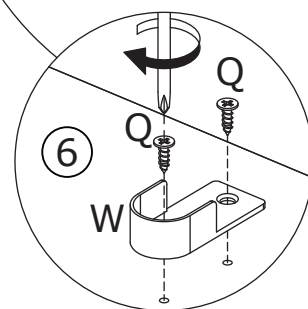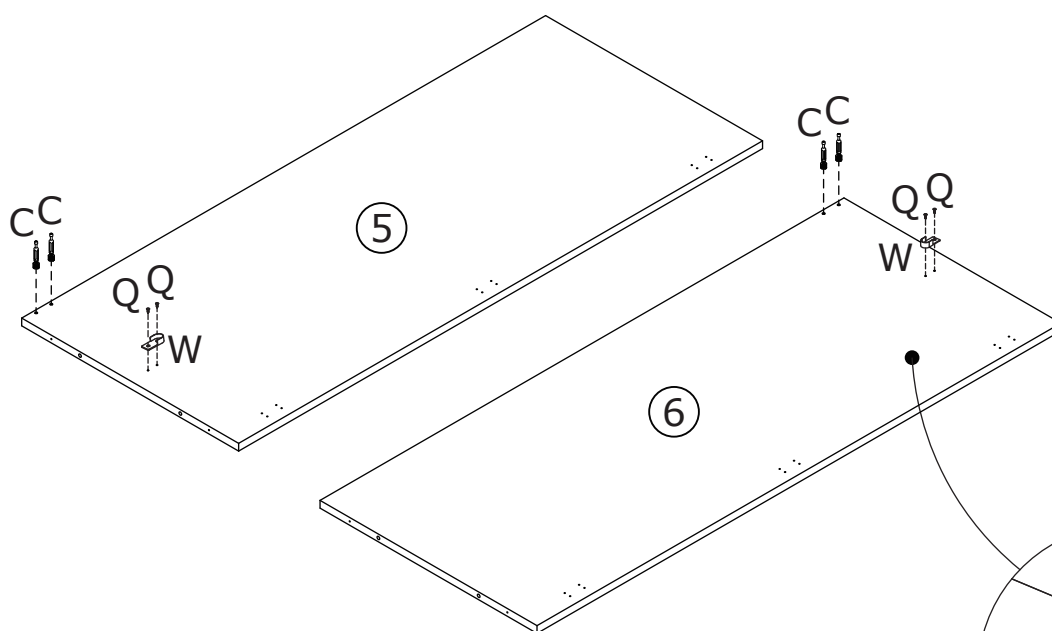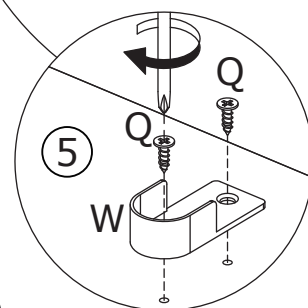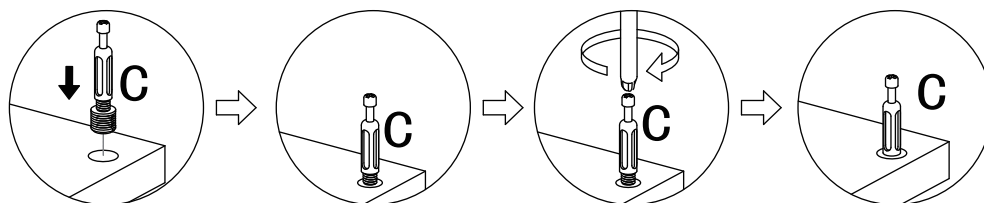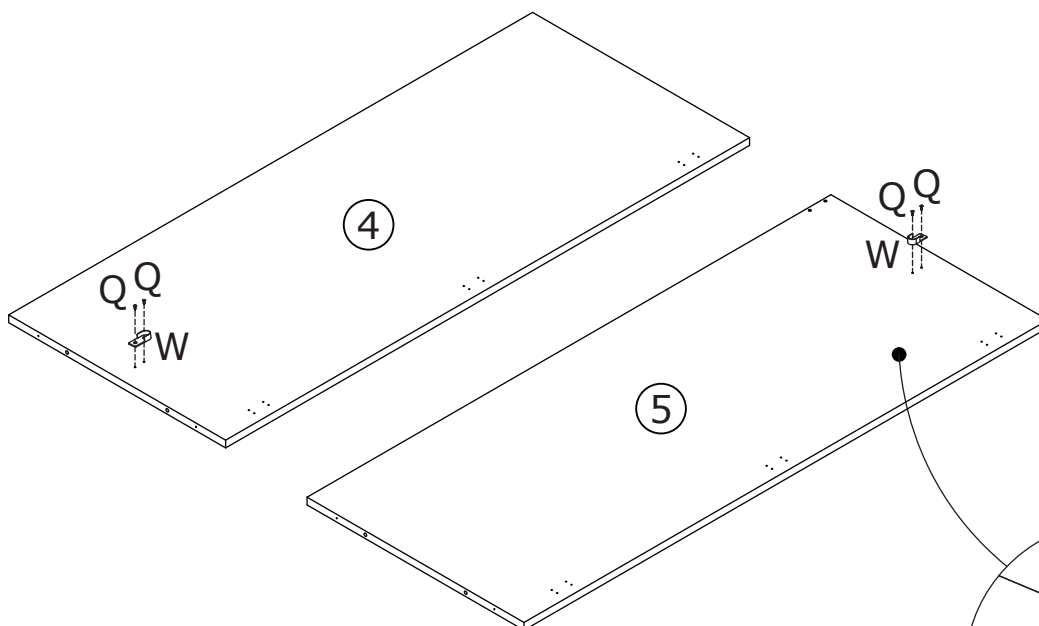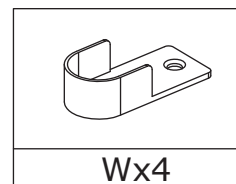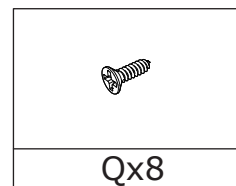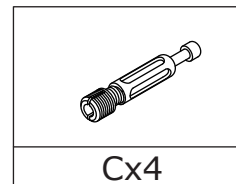




2

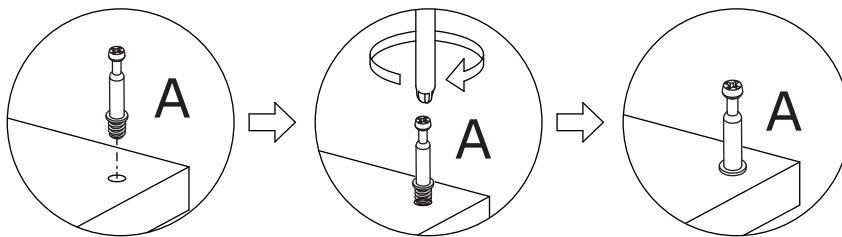  








Ax4



  
 
Cx8

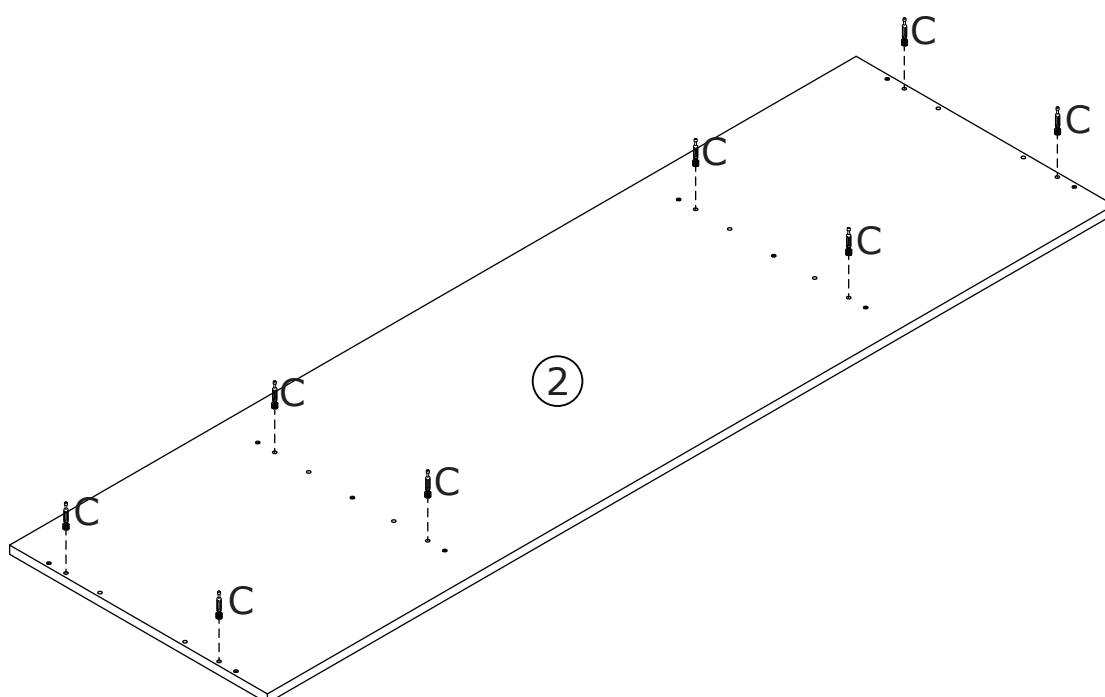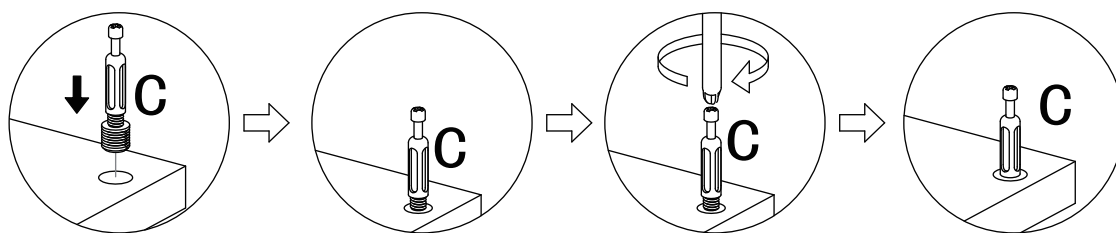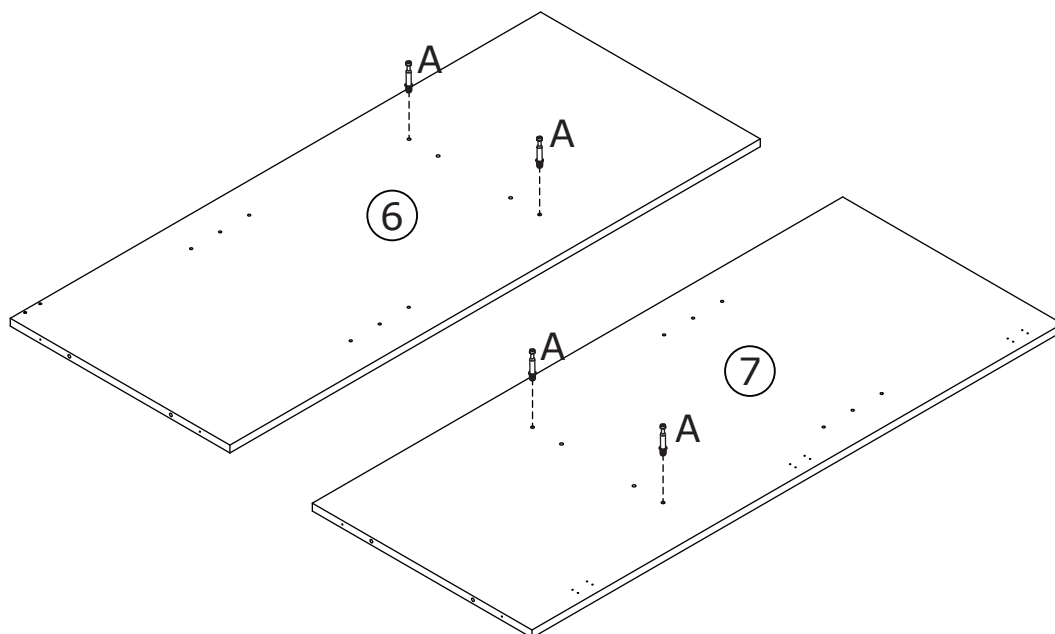

3

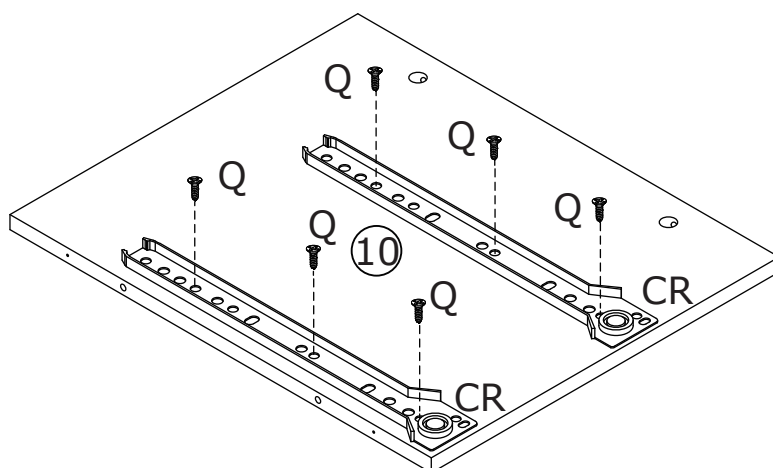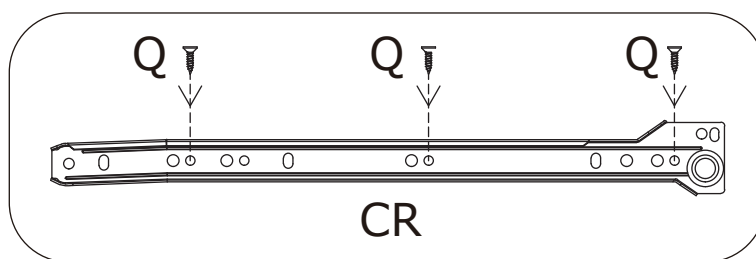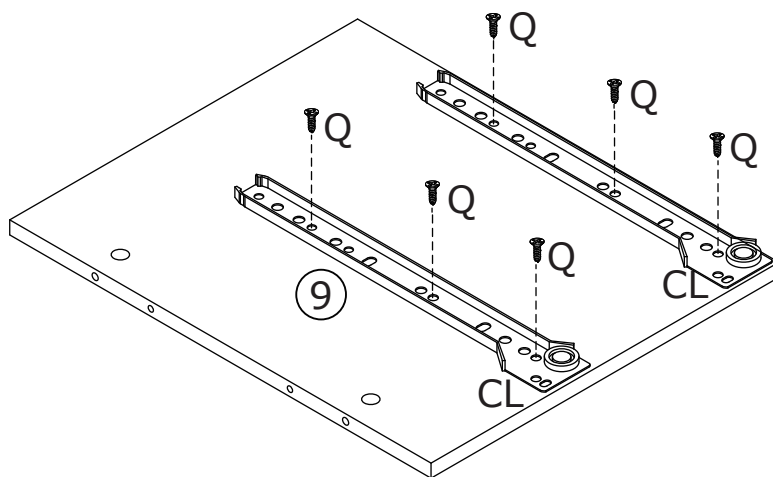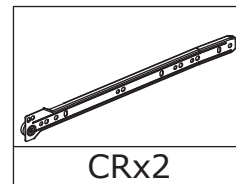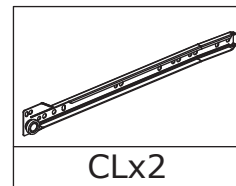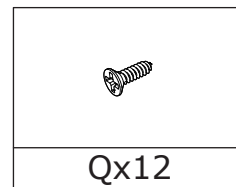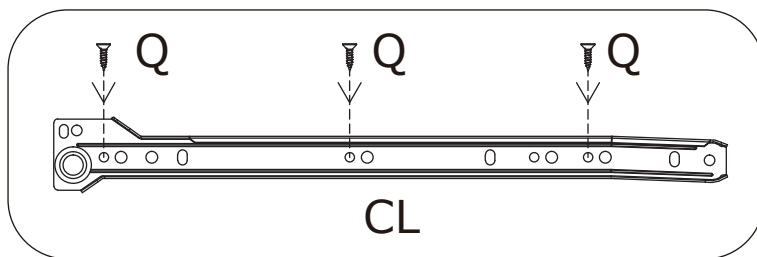       


4

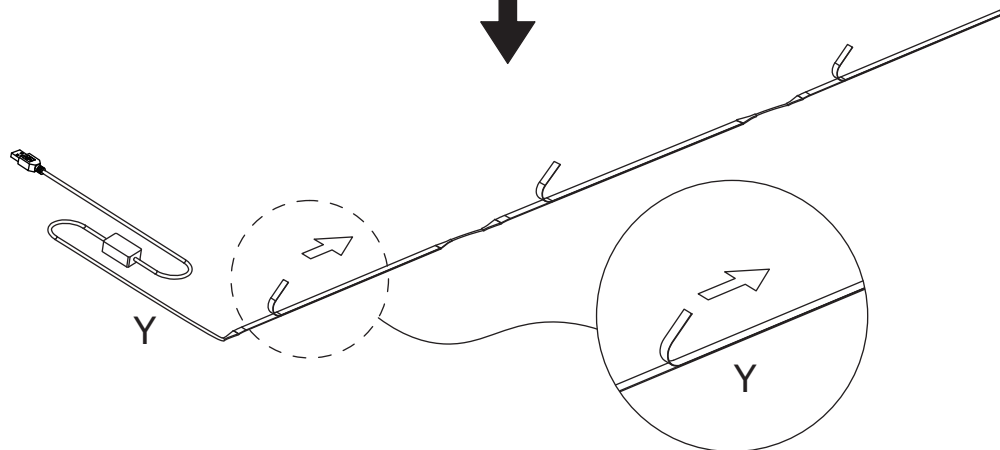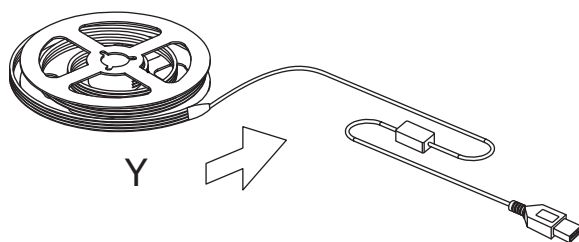  



Qx30





 
Yx1




Zx15

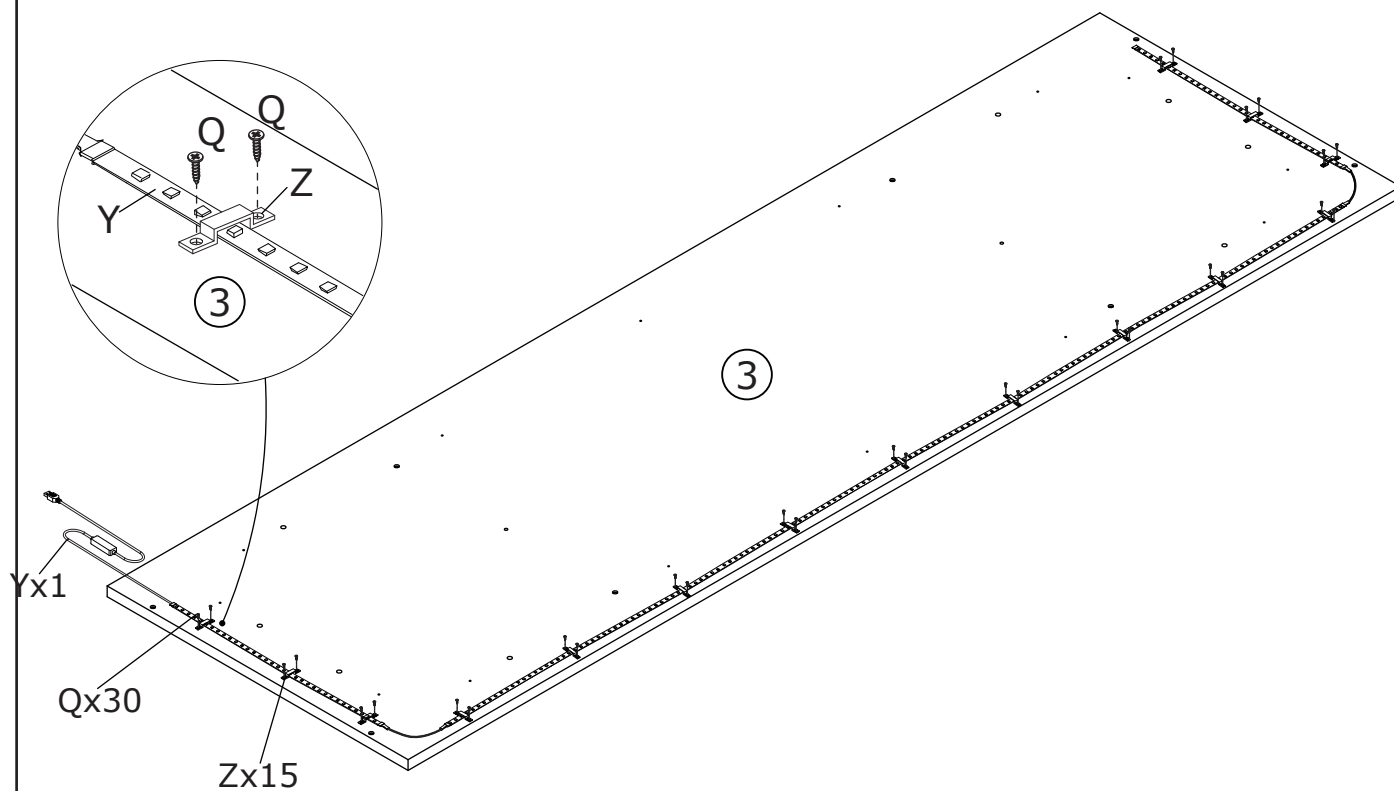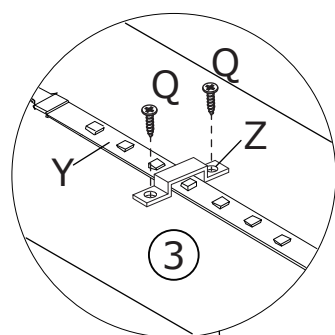  


5

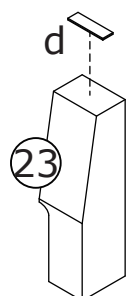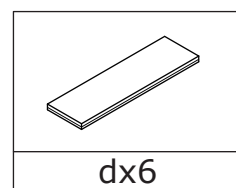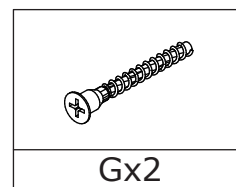   


x2

 

x2

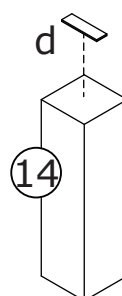 

x2

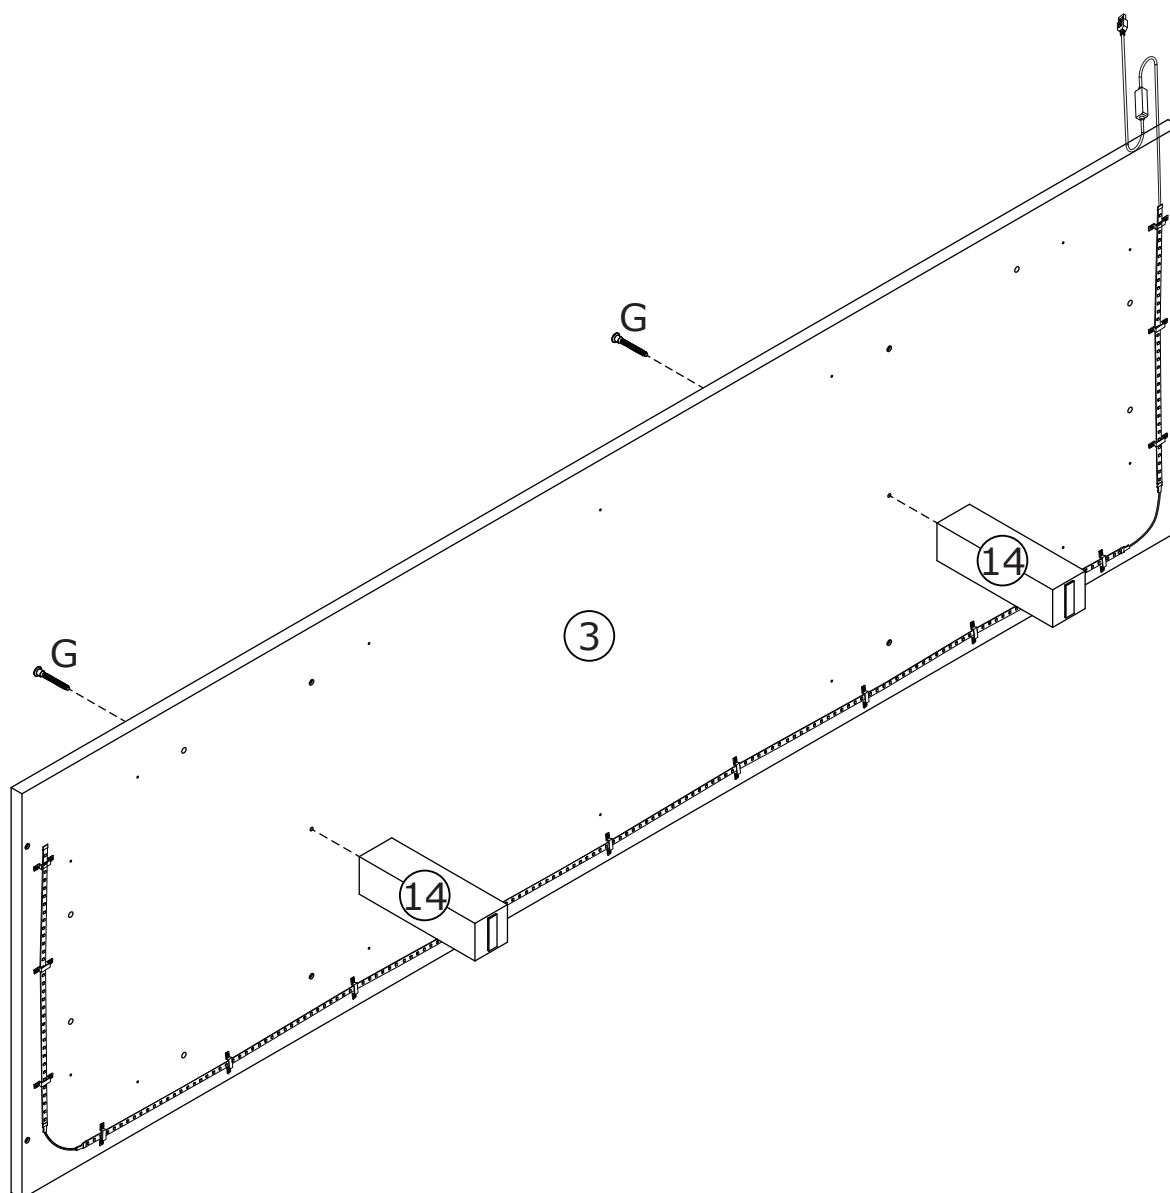 

6








Bx4






Ex4



     
ex4

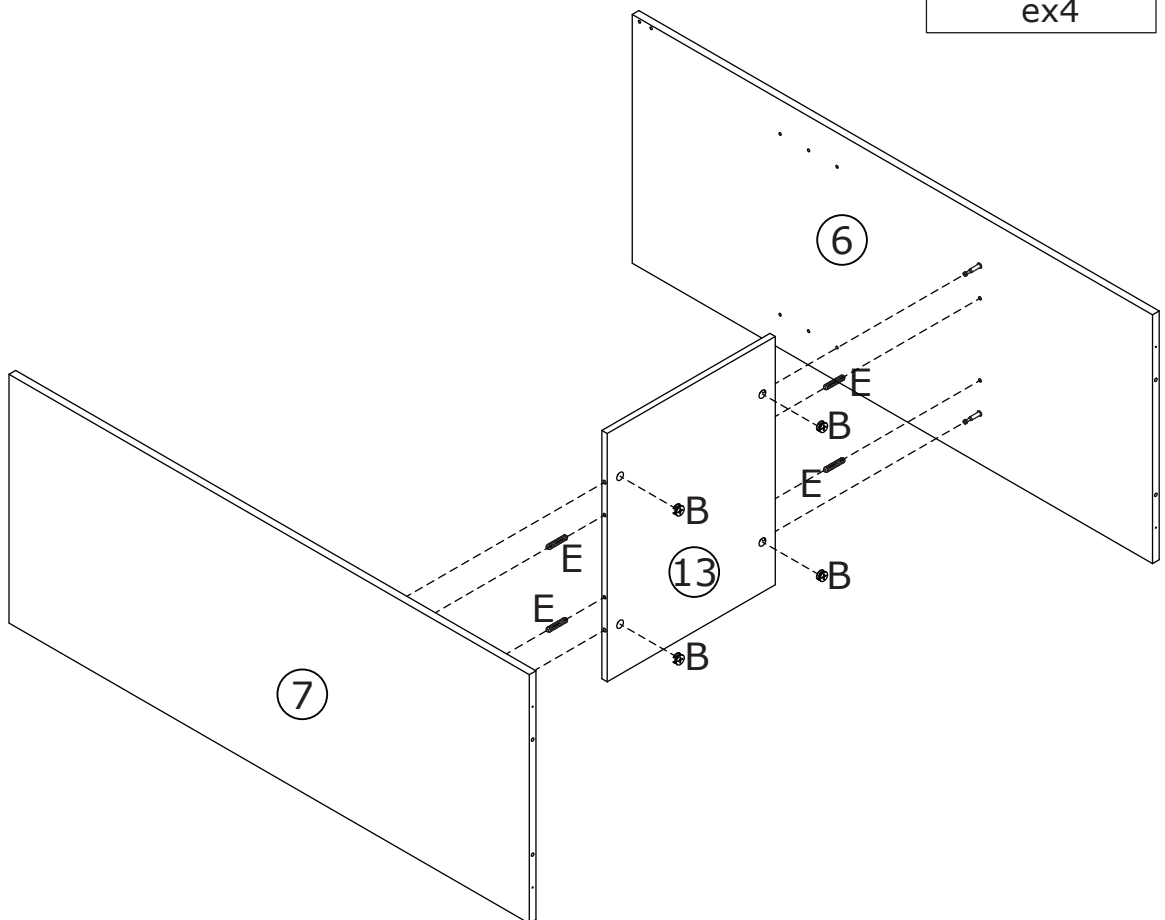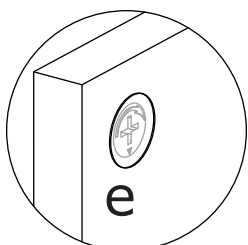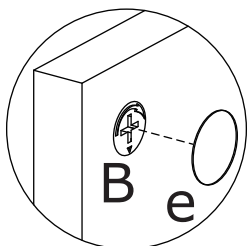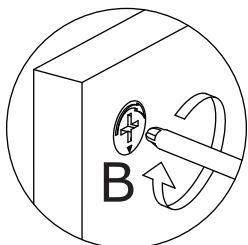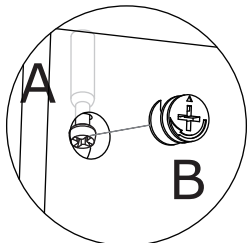


7

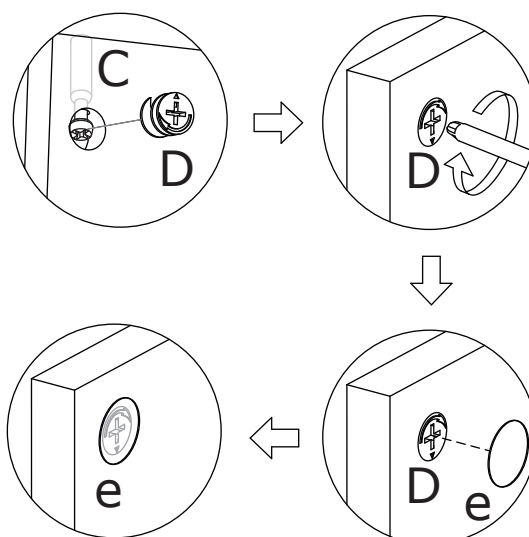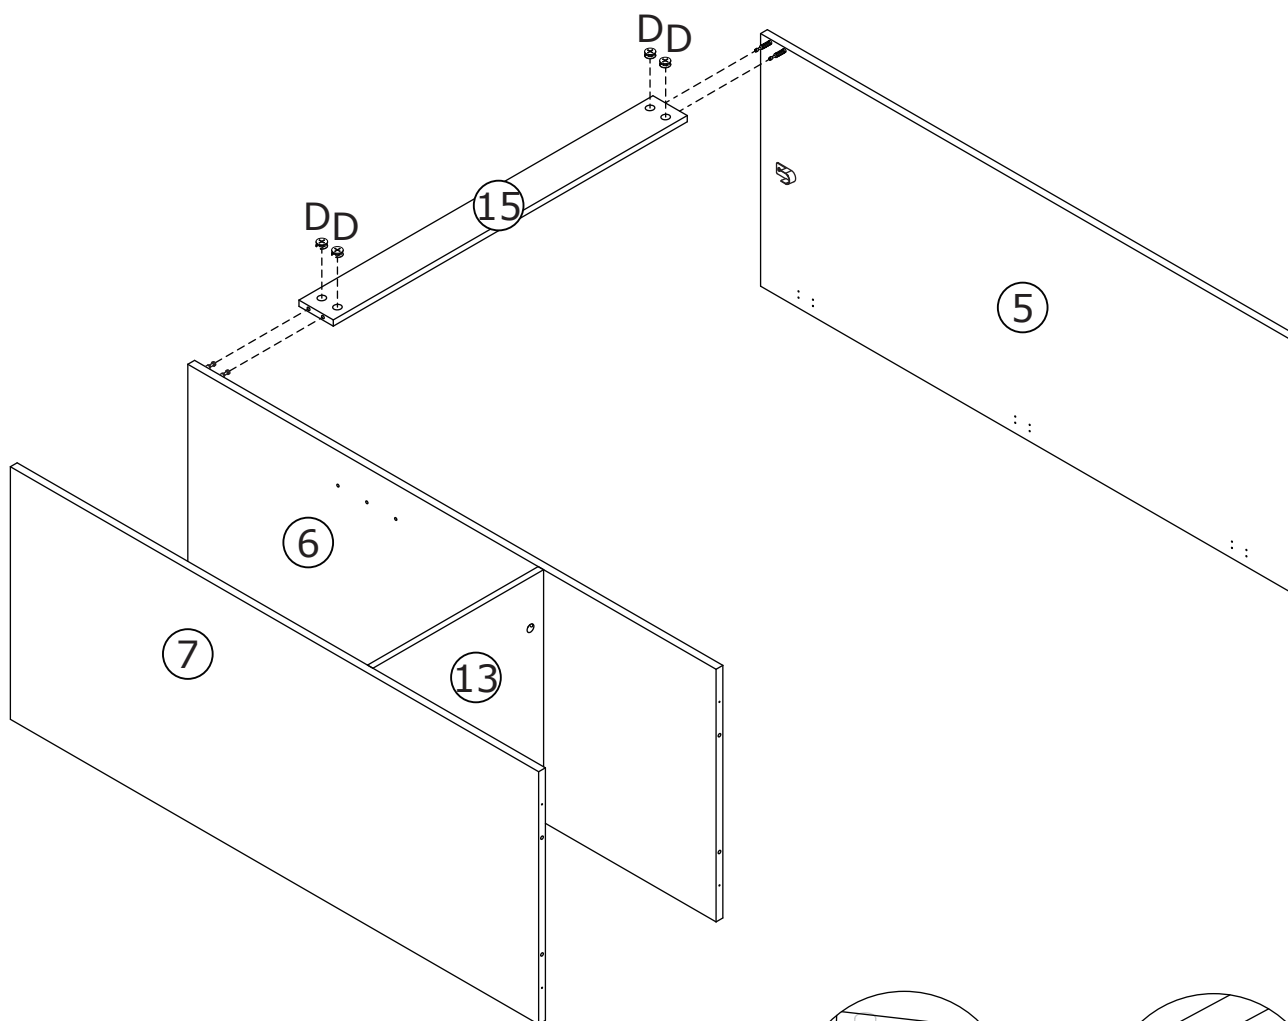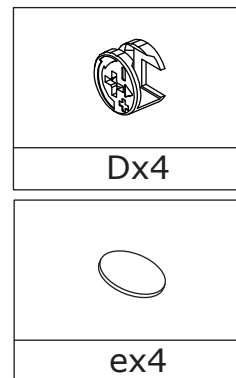   


8

 


Fx8

 


Gx8

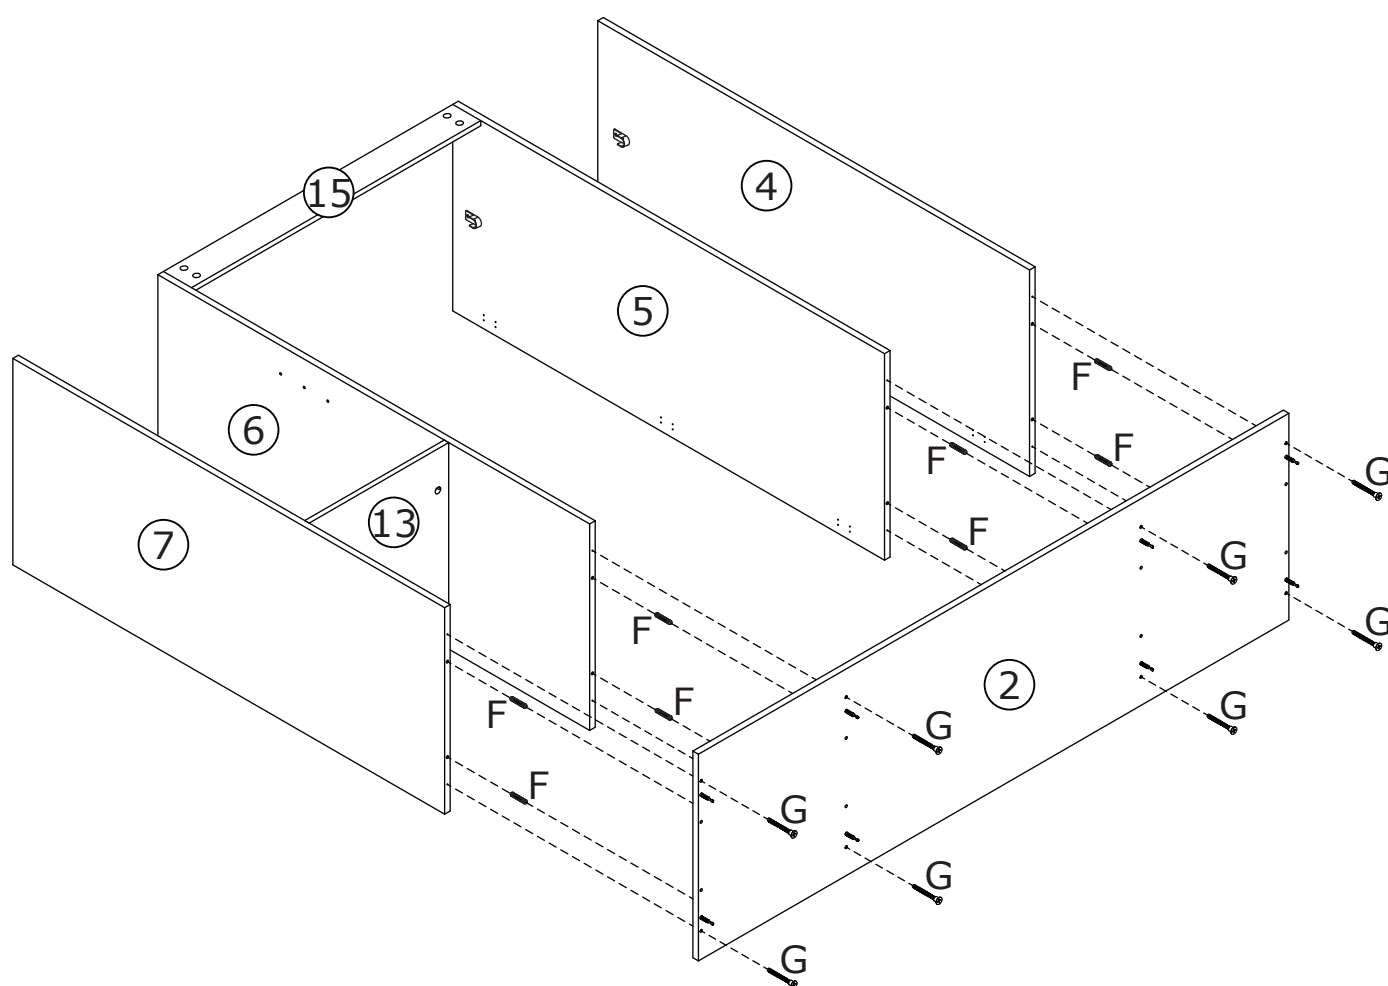 


9

 

Fx8

 


Gx8

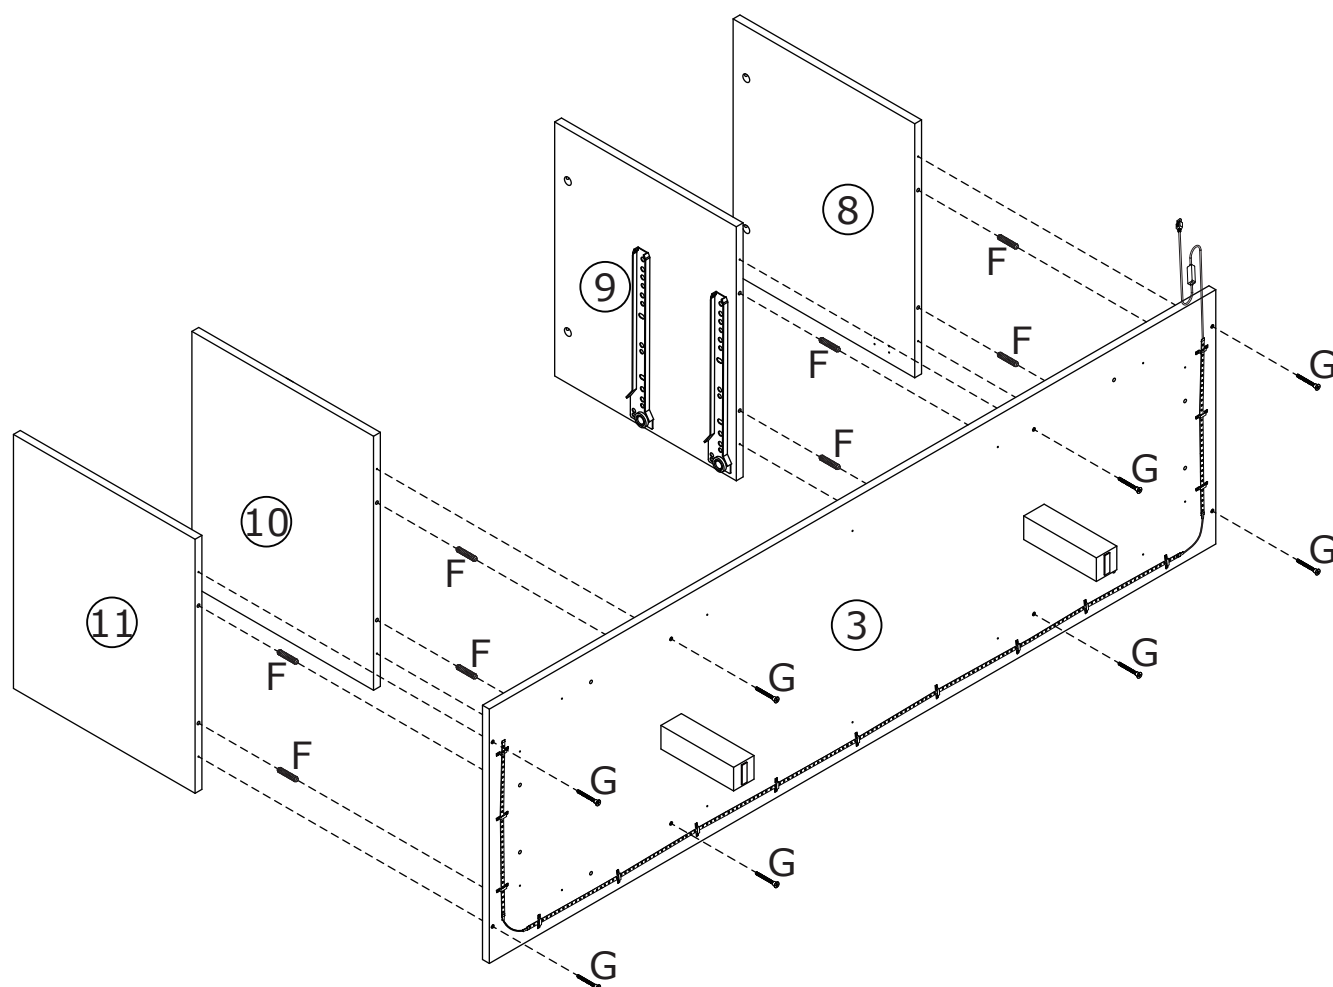 

10







 
Dx8




Fx8



     
ex8

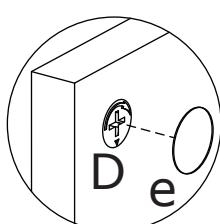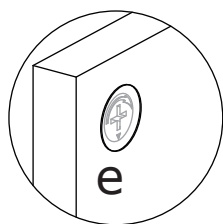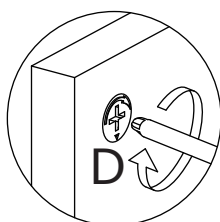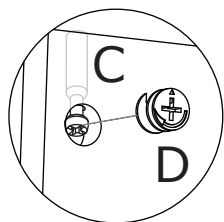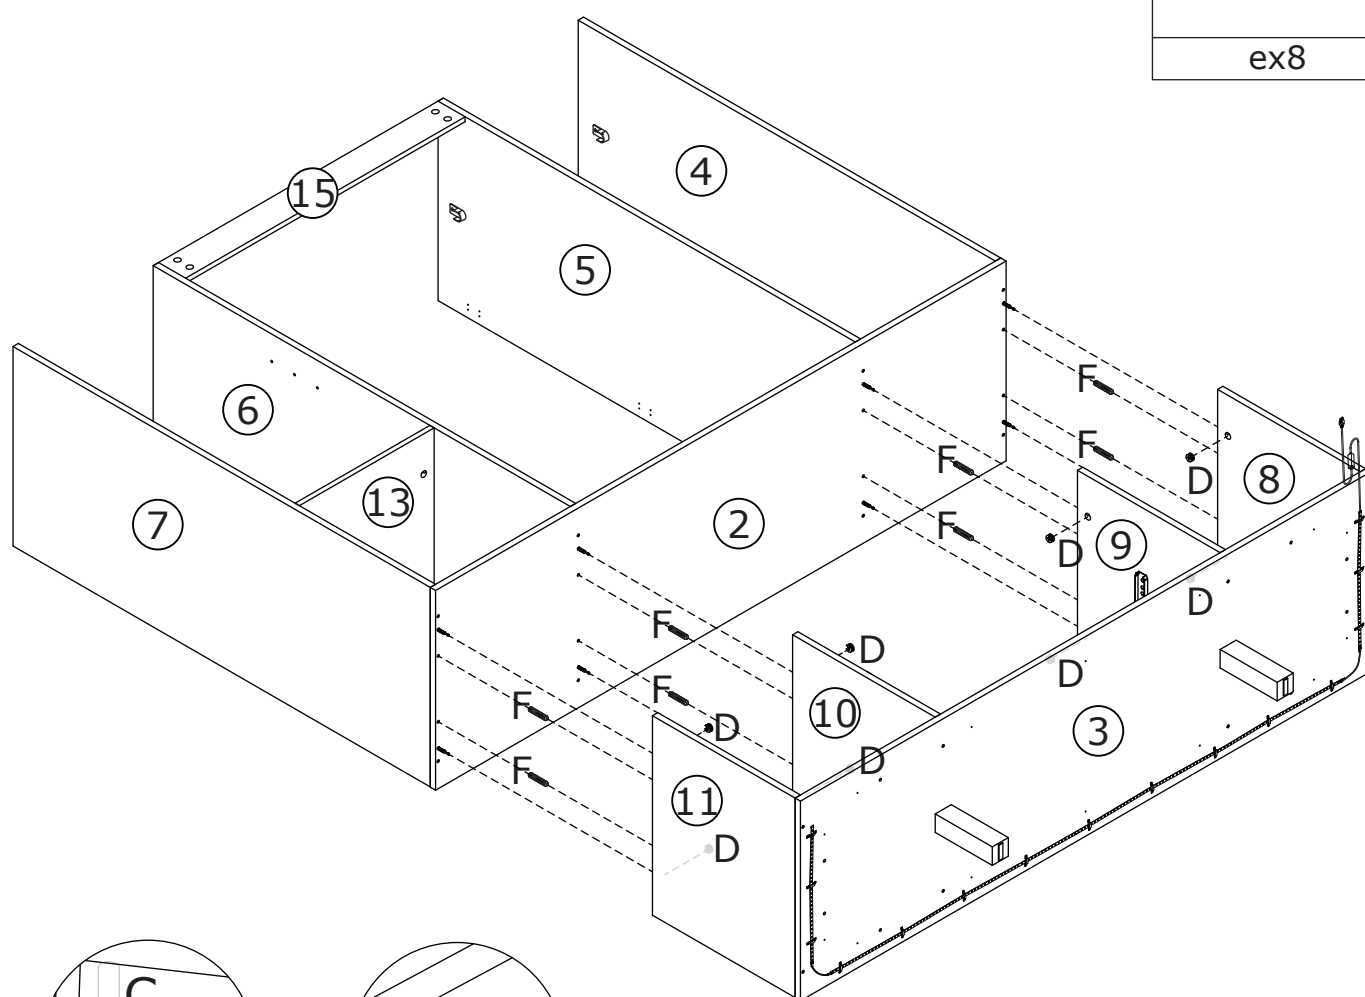


11

 






Fx10

 


Gx11

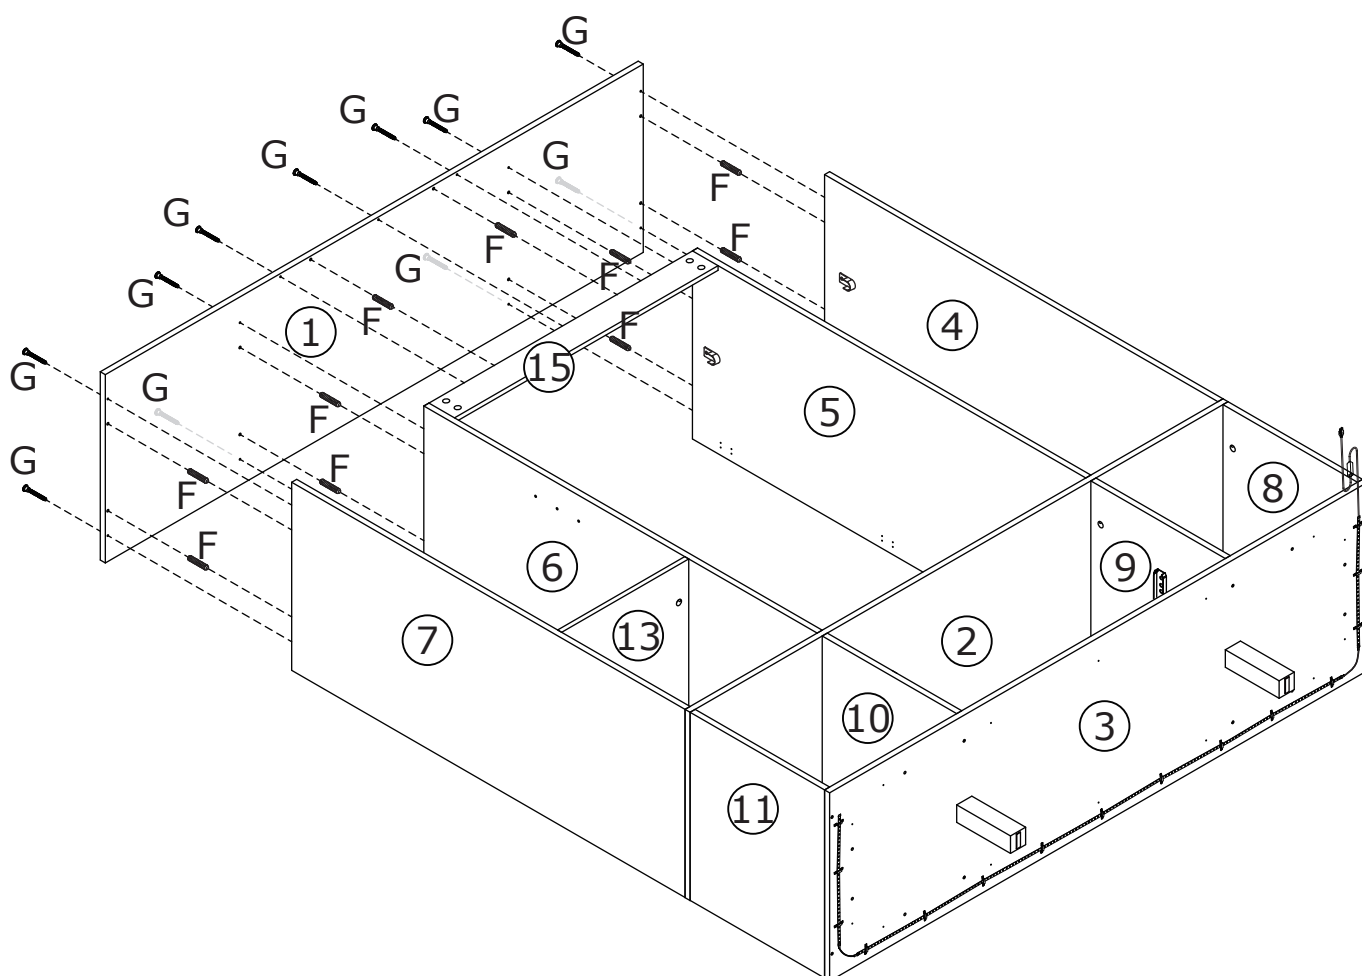 


12

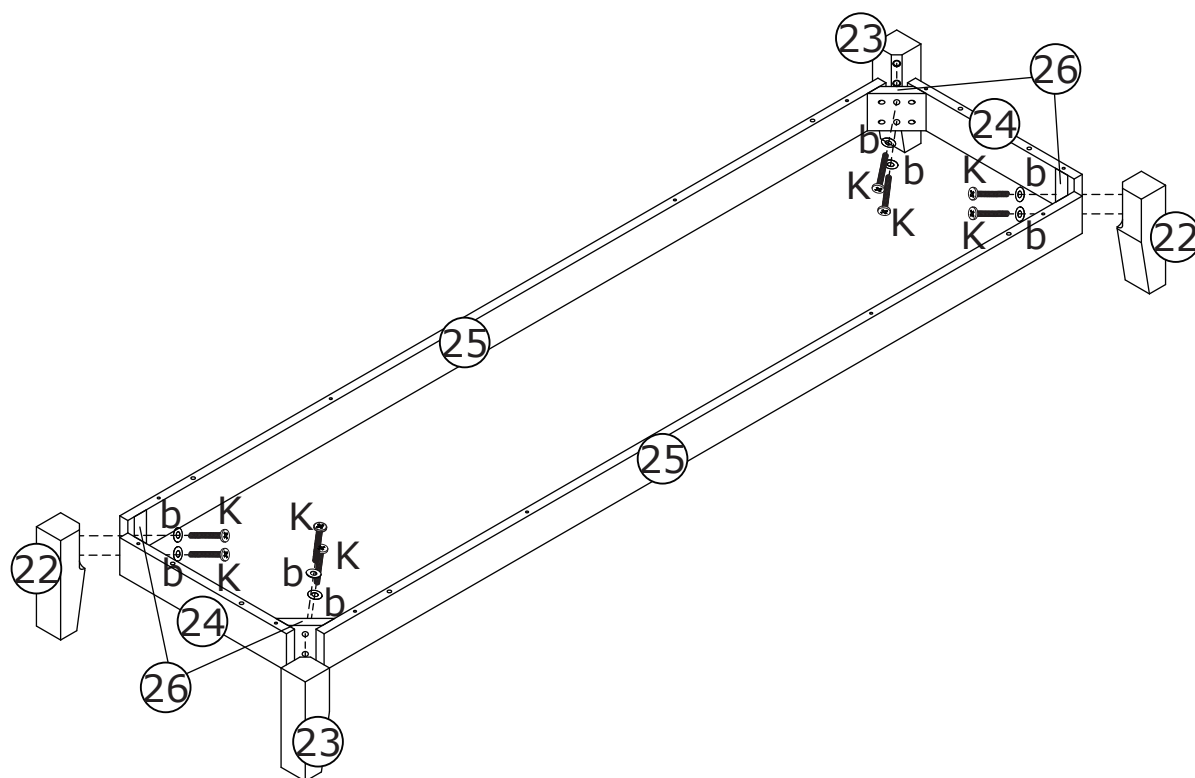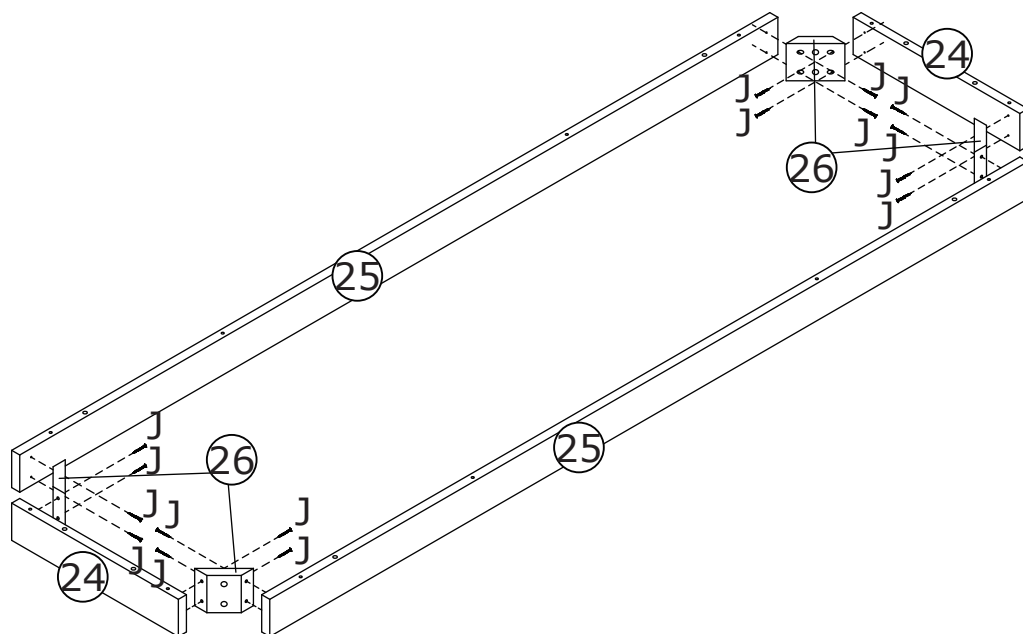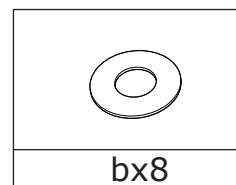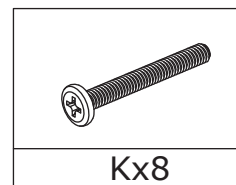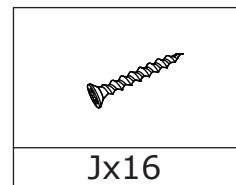     


13

 

Fx8

 


Lx12

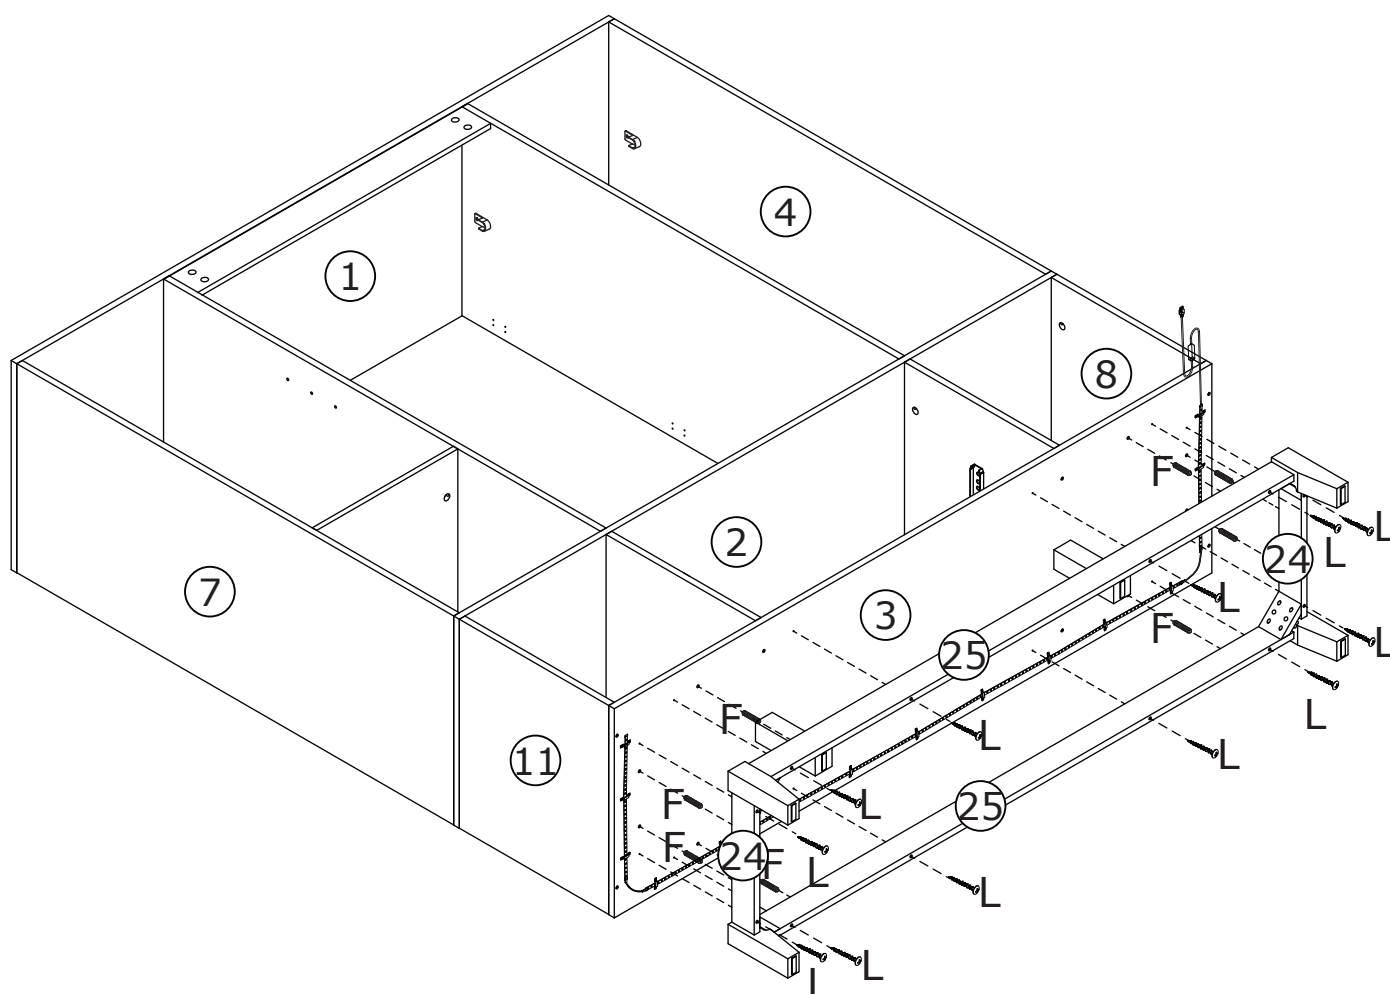 


14



 
Vx30



ax5

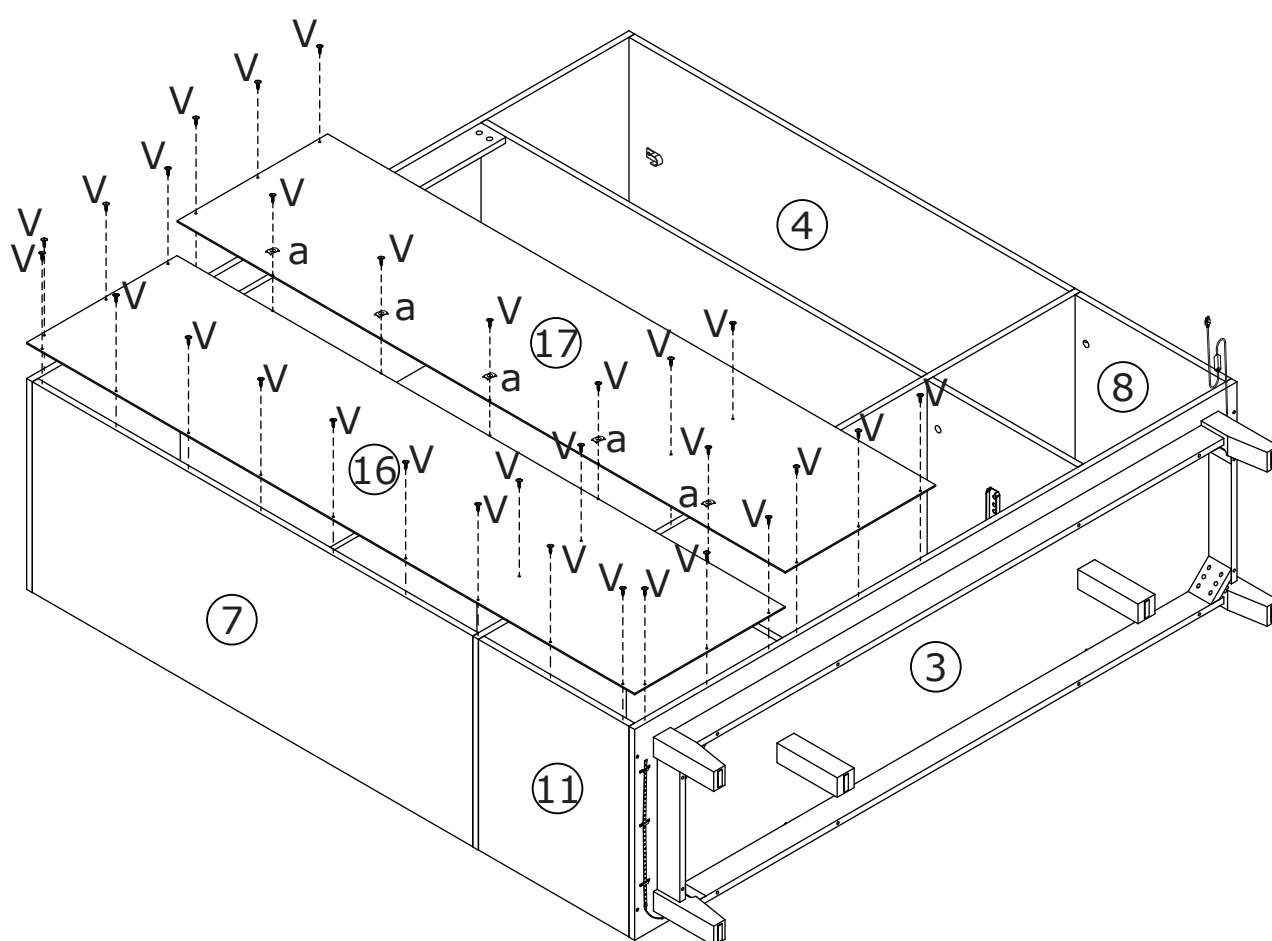 

15

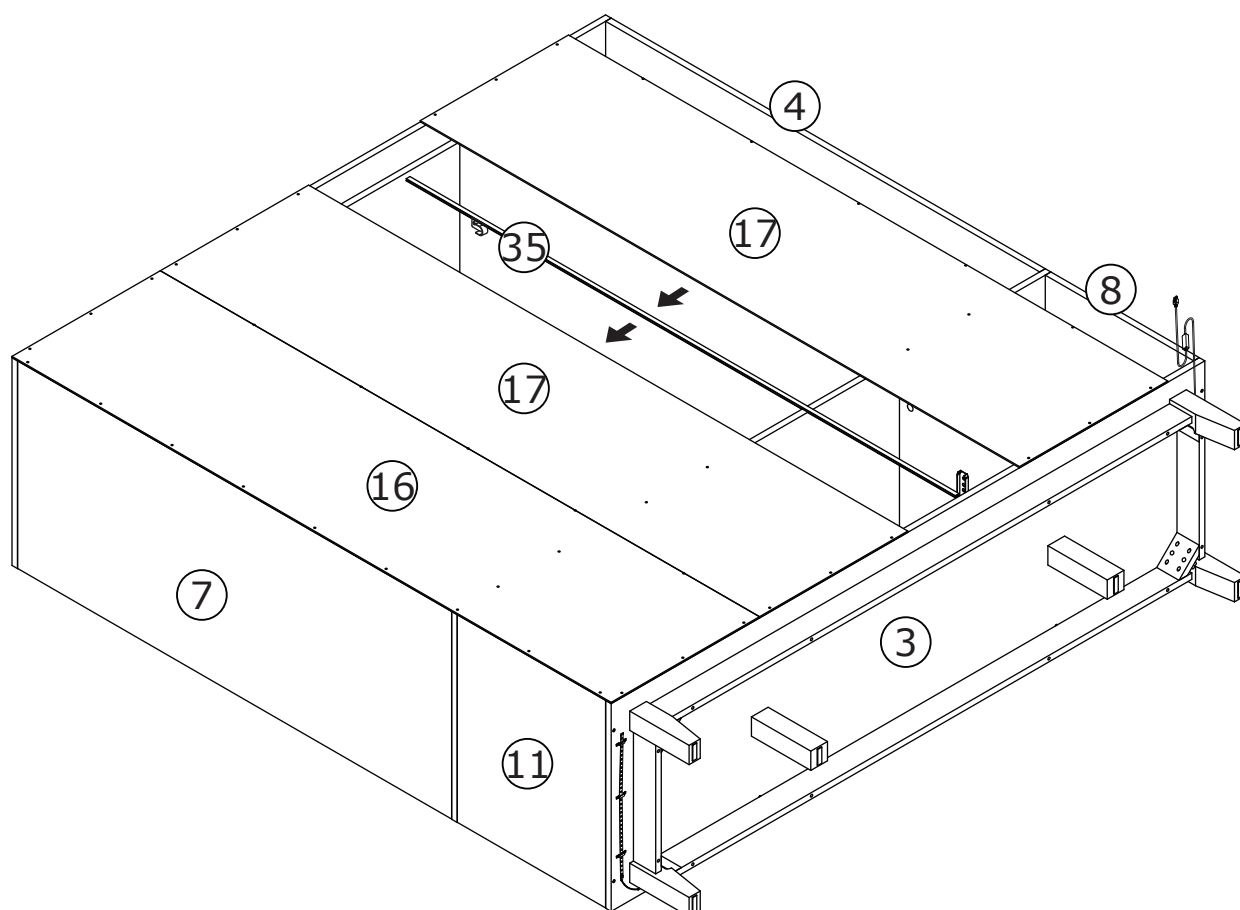 


16



Vx30



 
ax5

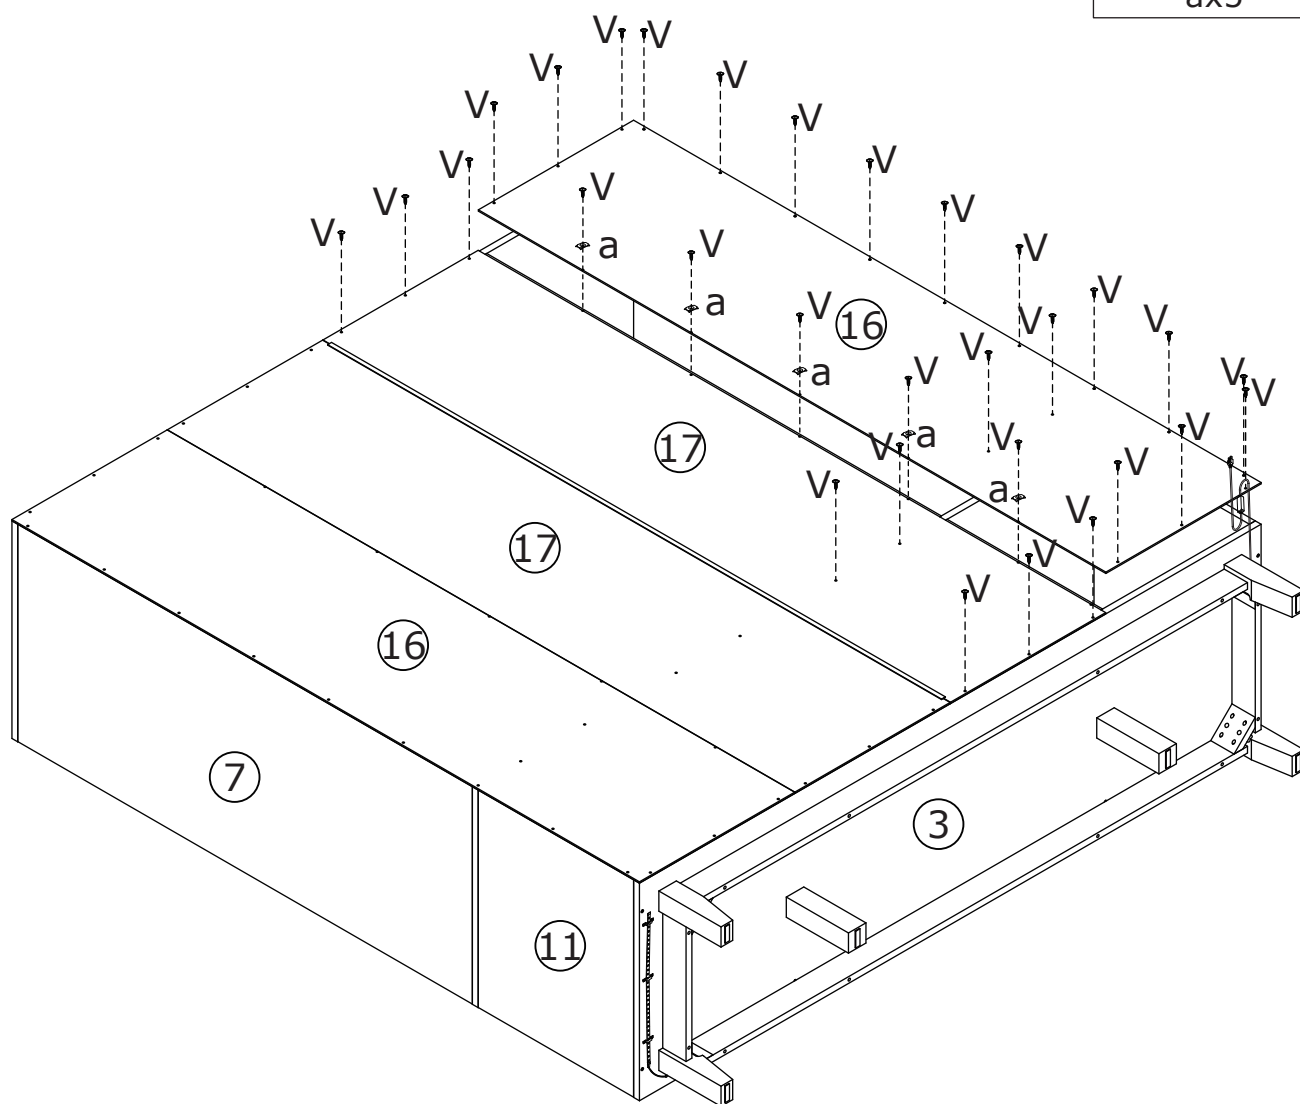


17



 
Ux4

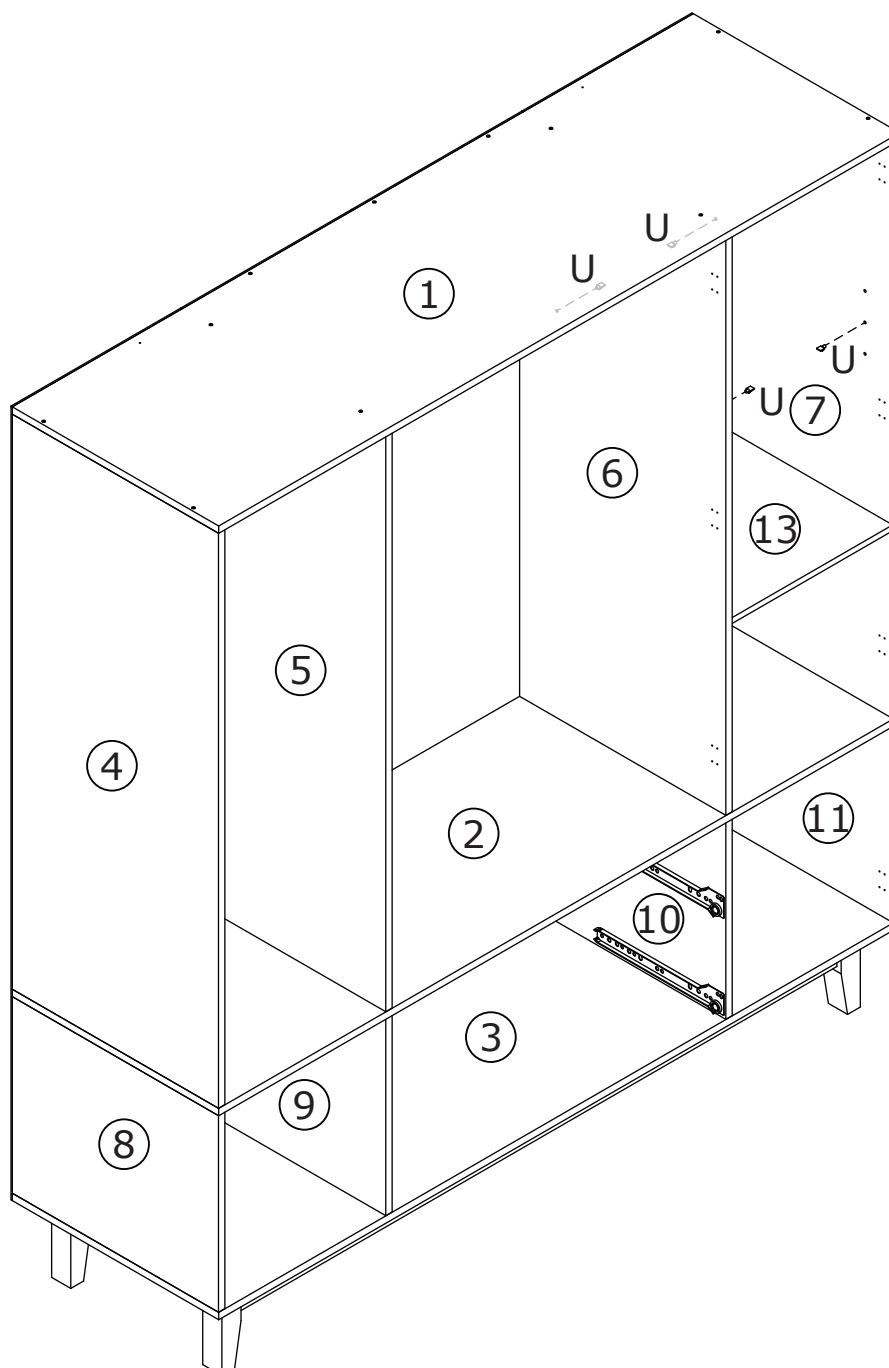


18

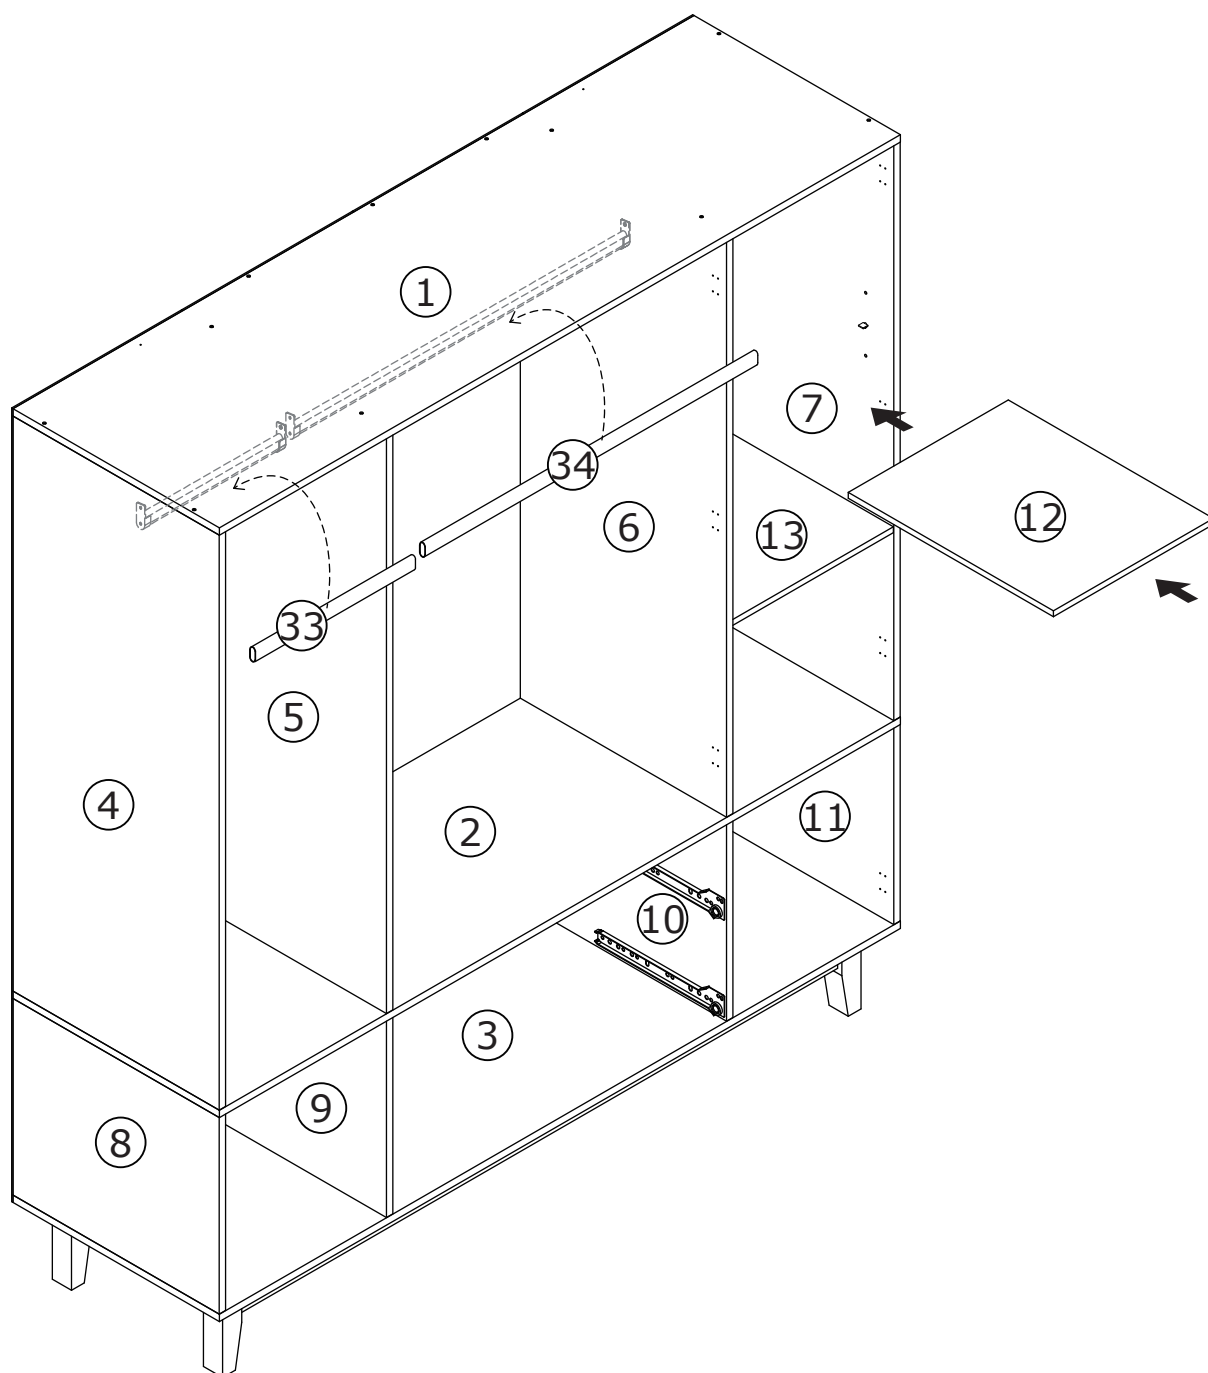 

19

 


Ax12

 


Mx6



 Px12






Rx2

 

Sx4









   Tx12






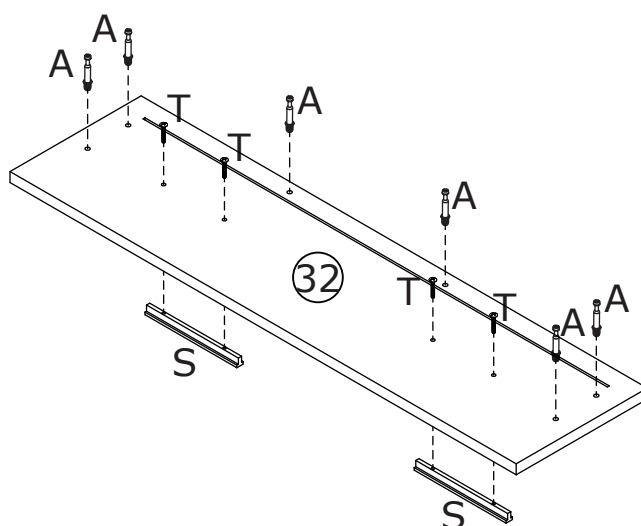
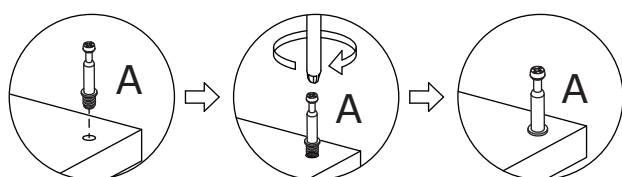
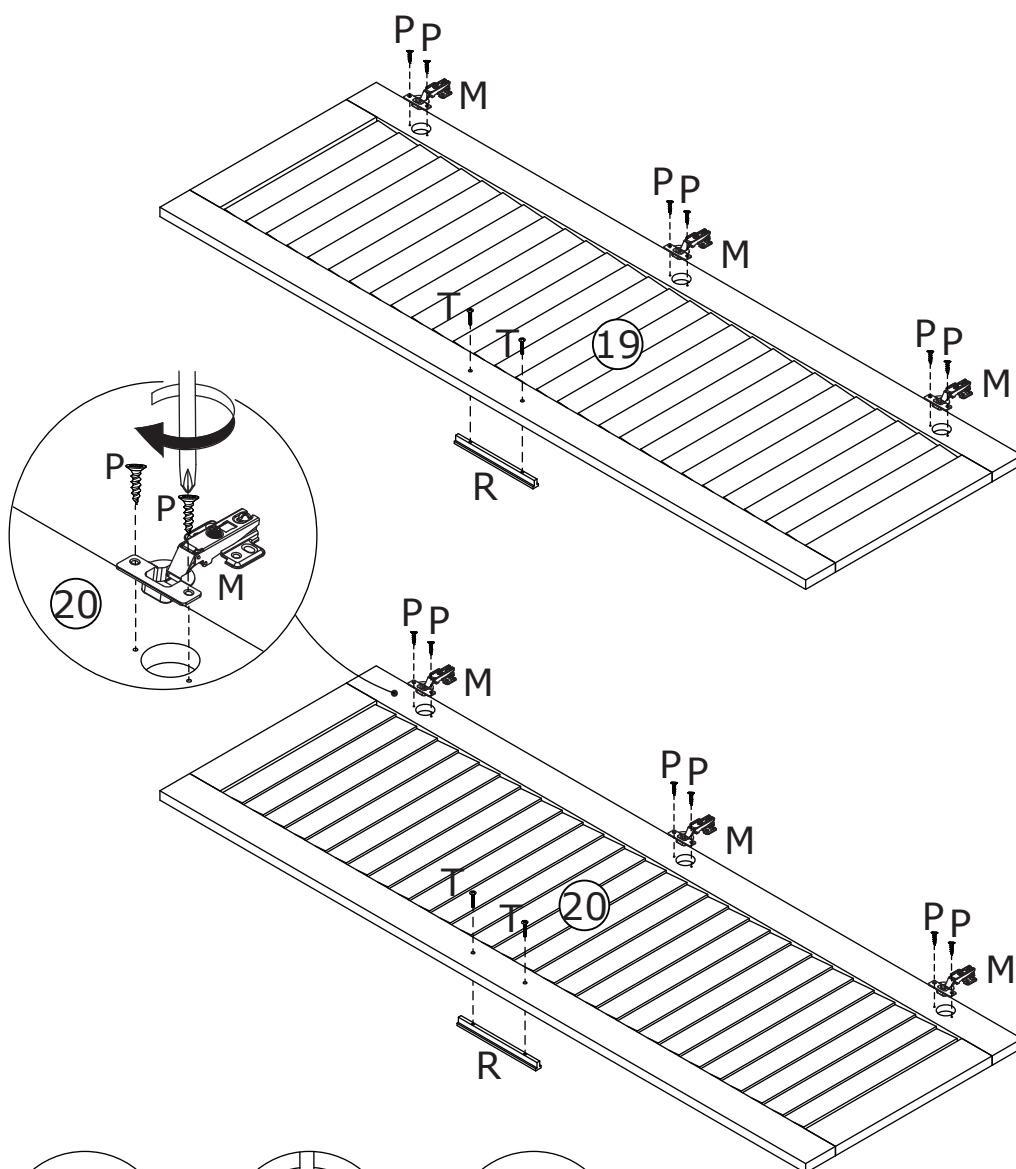


x2

      20

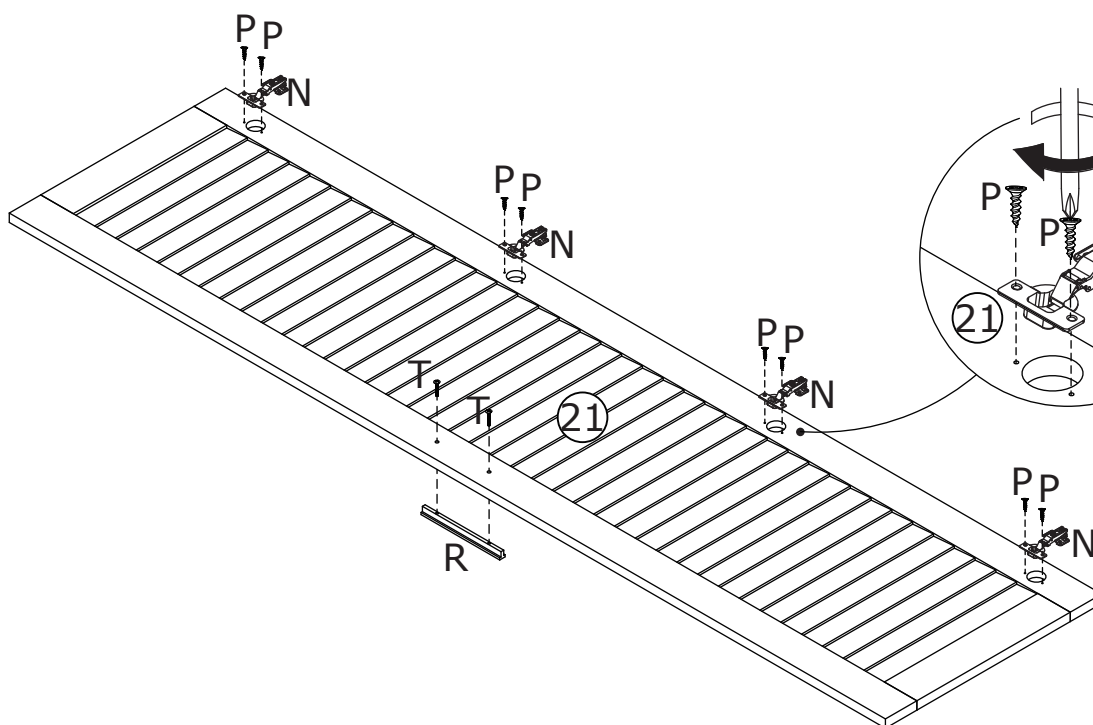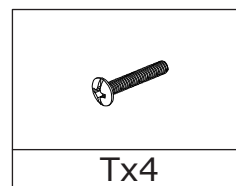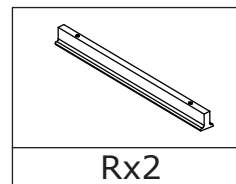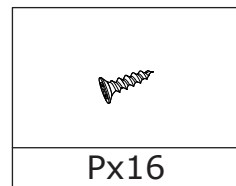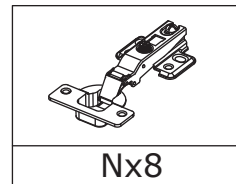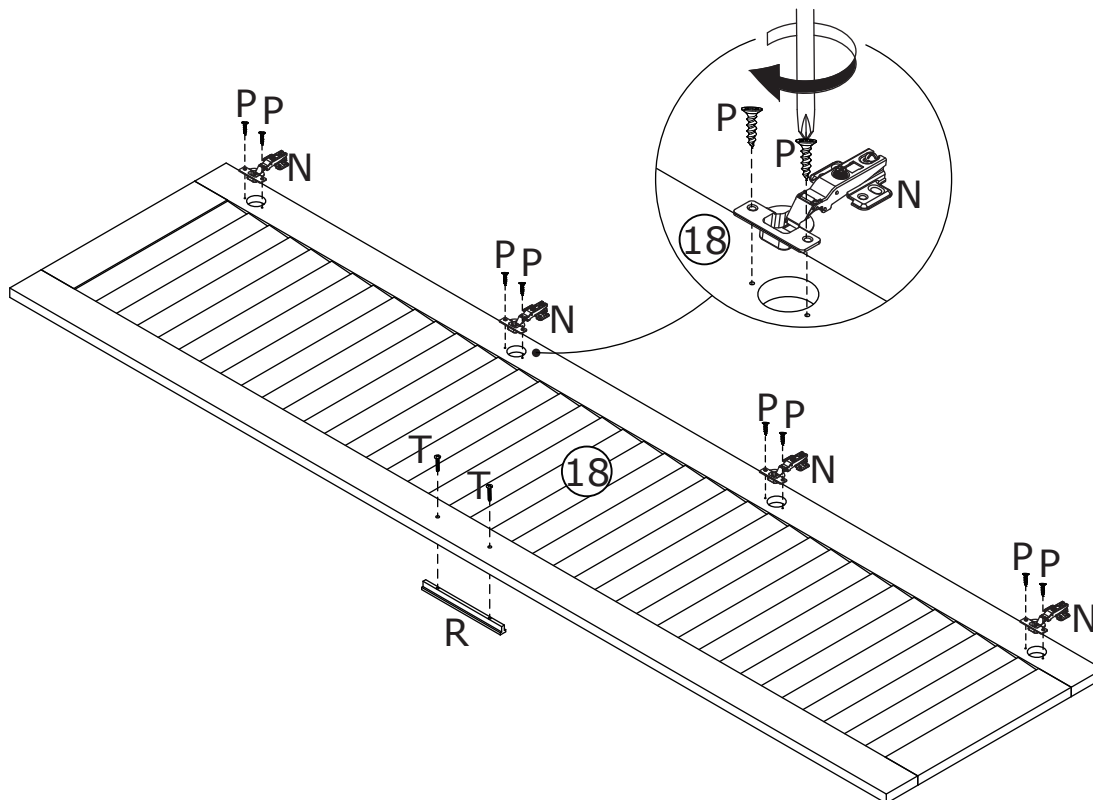

21

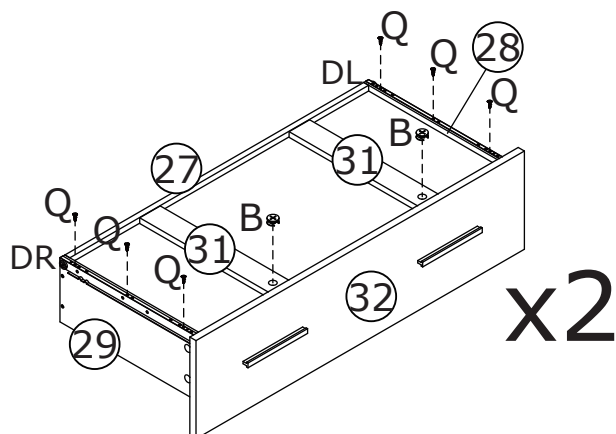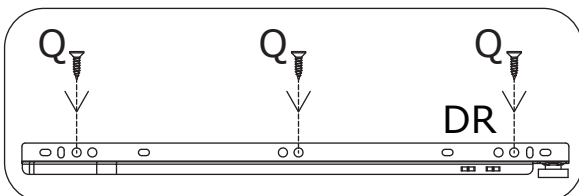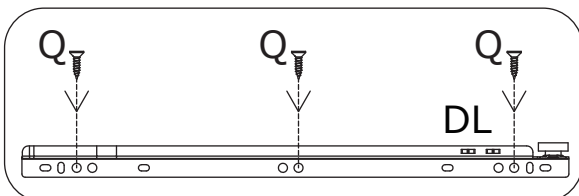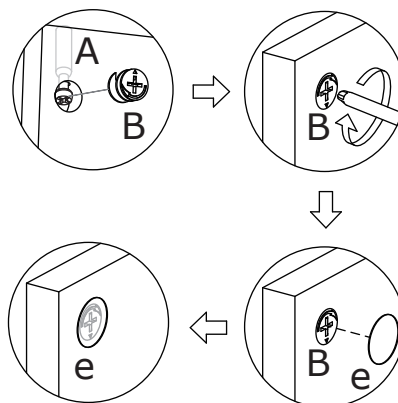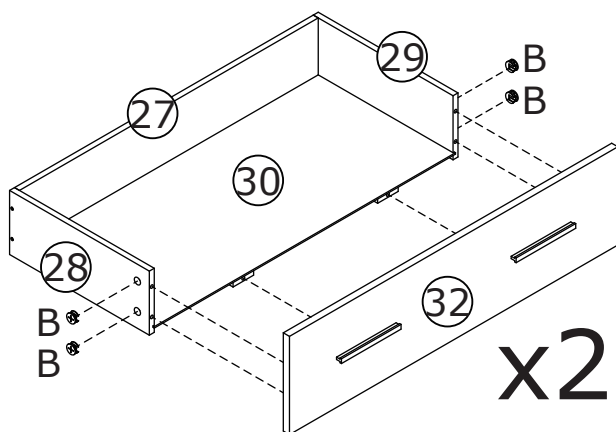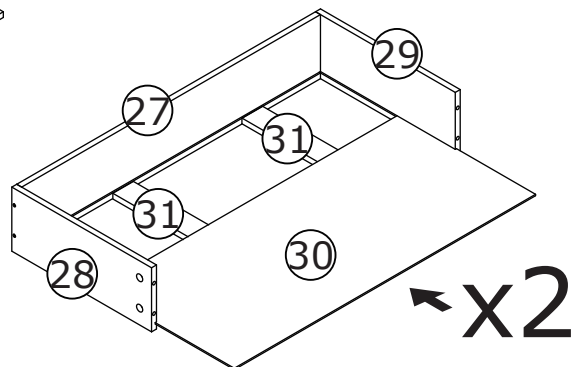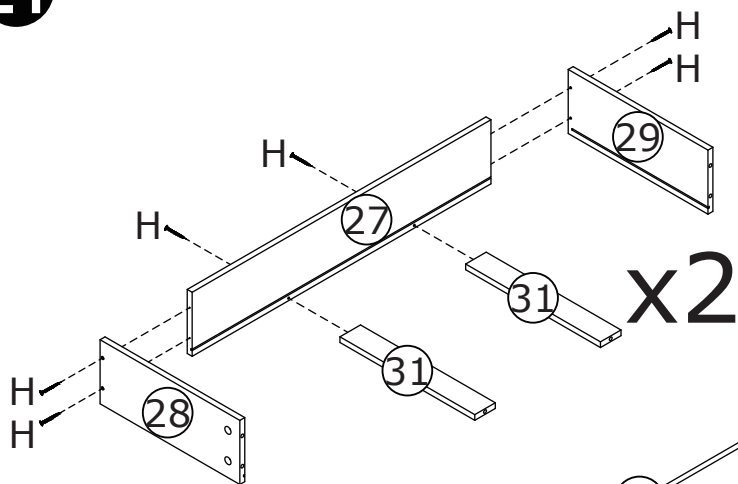        


Hx12




Bx12



 Qx12




DLx2

 

DRx2



 
ex12

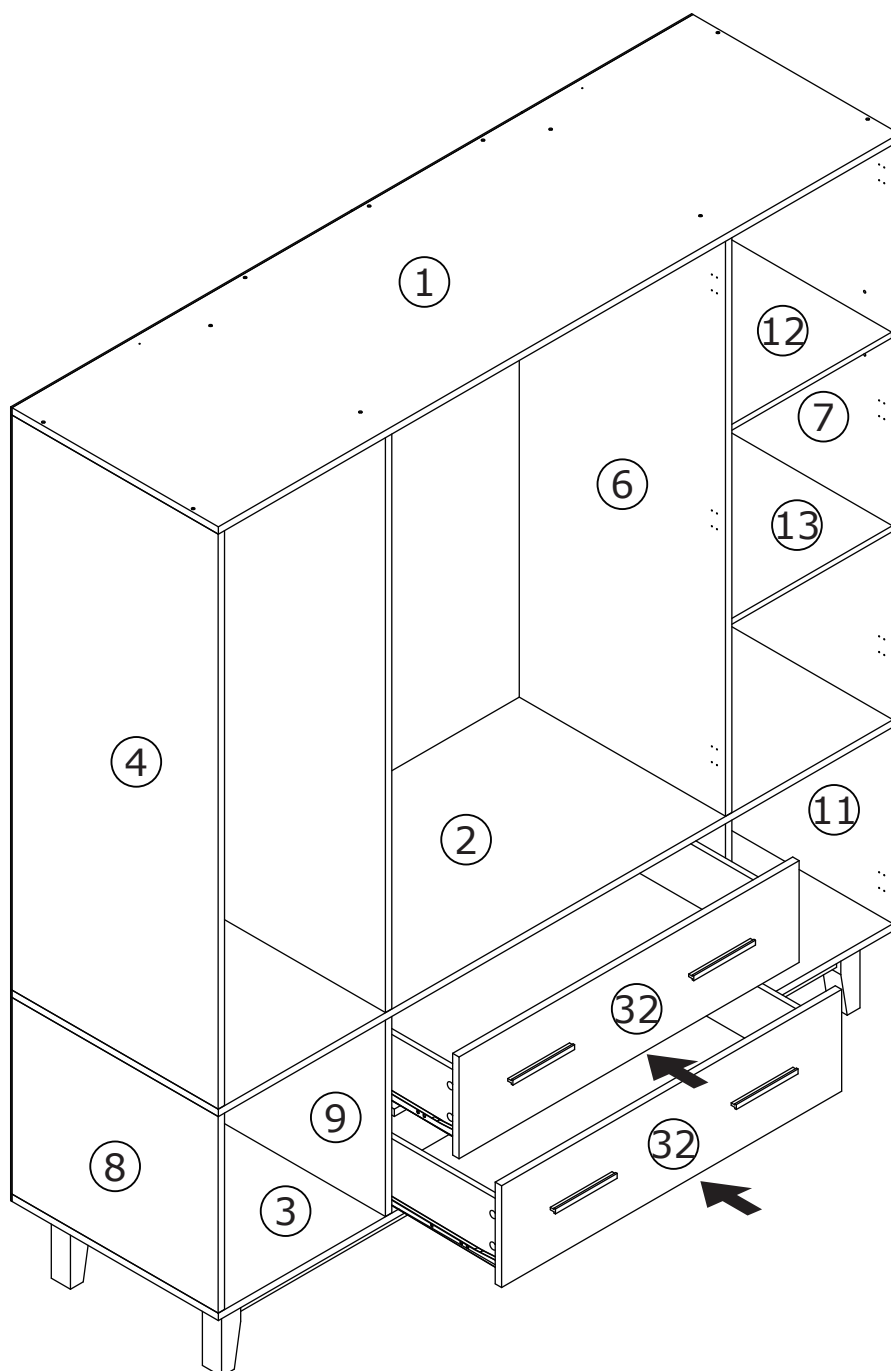

23




 
Px16

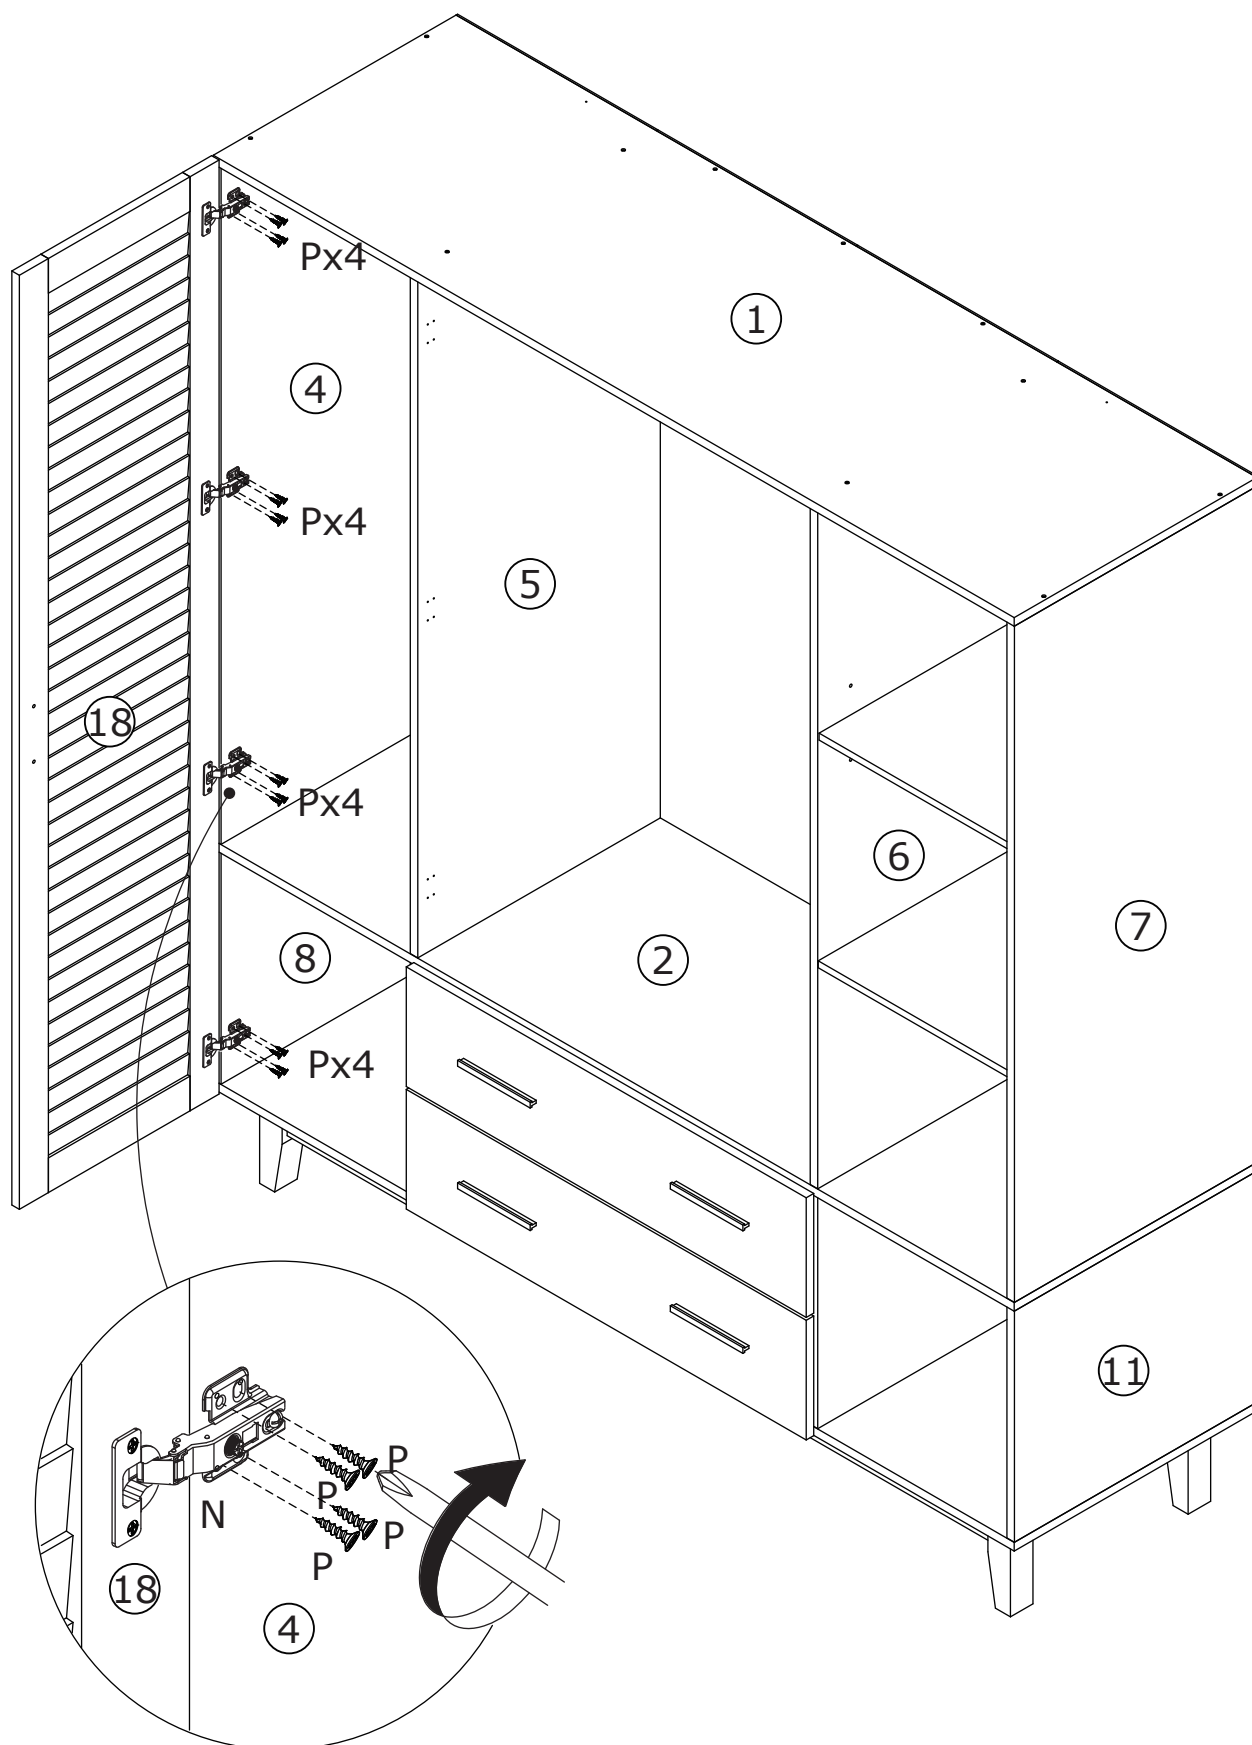

24



  
Px16

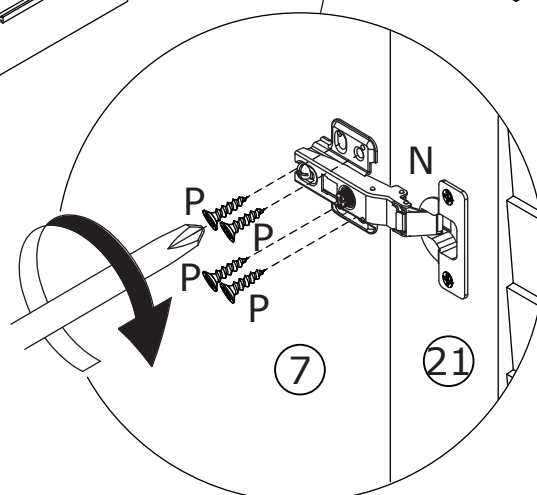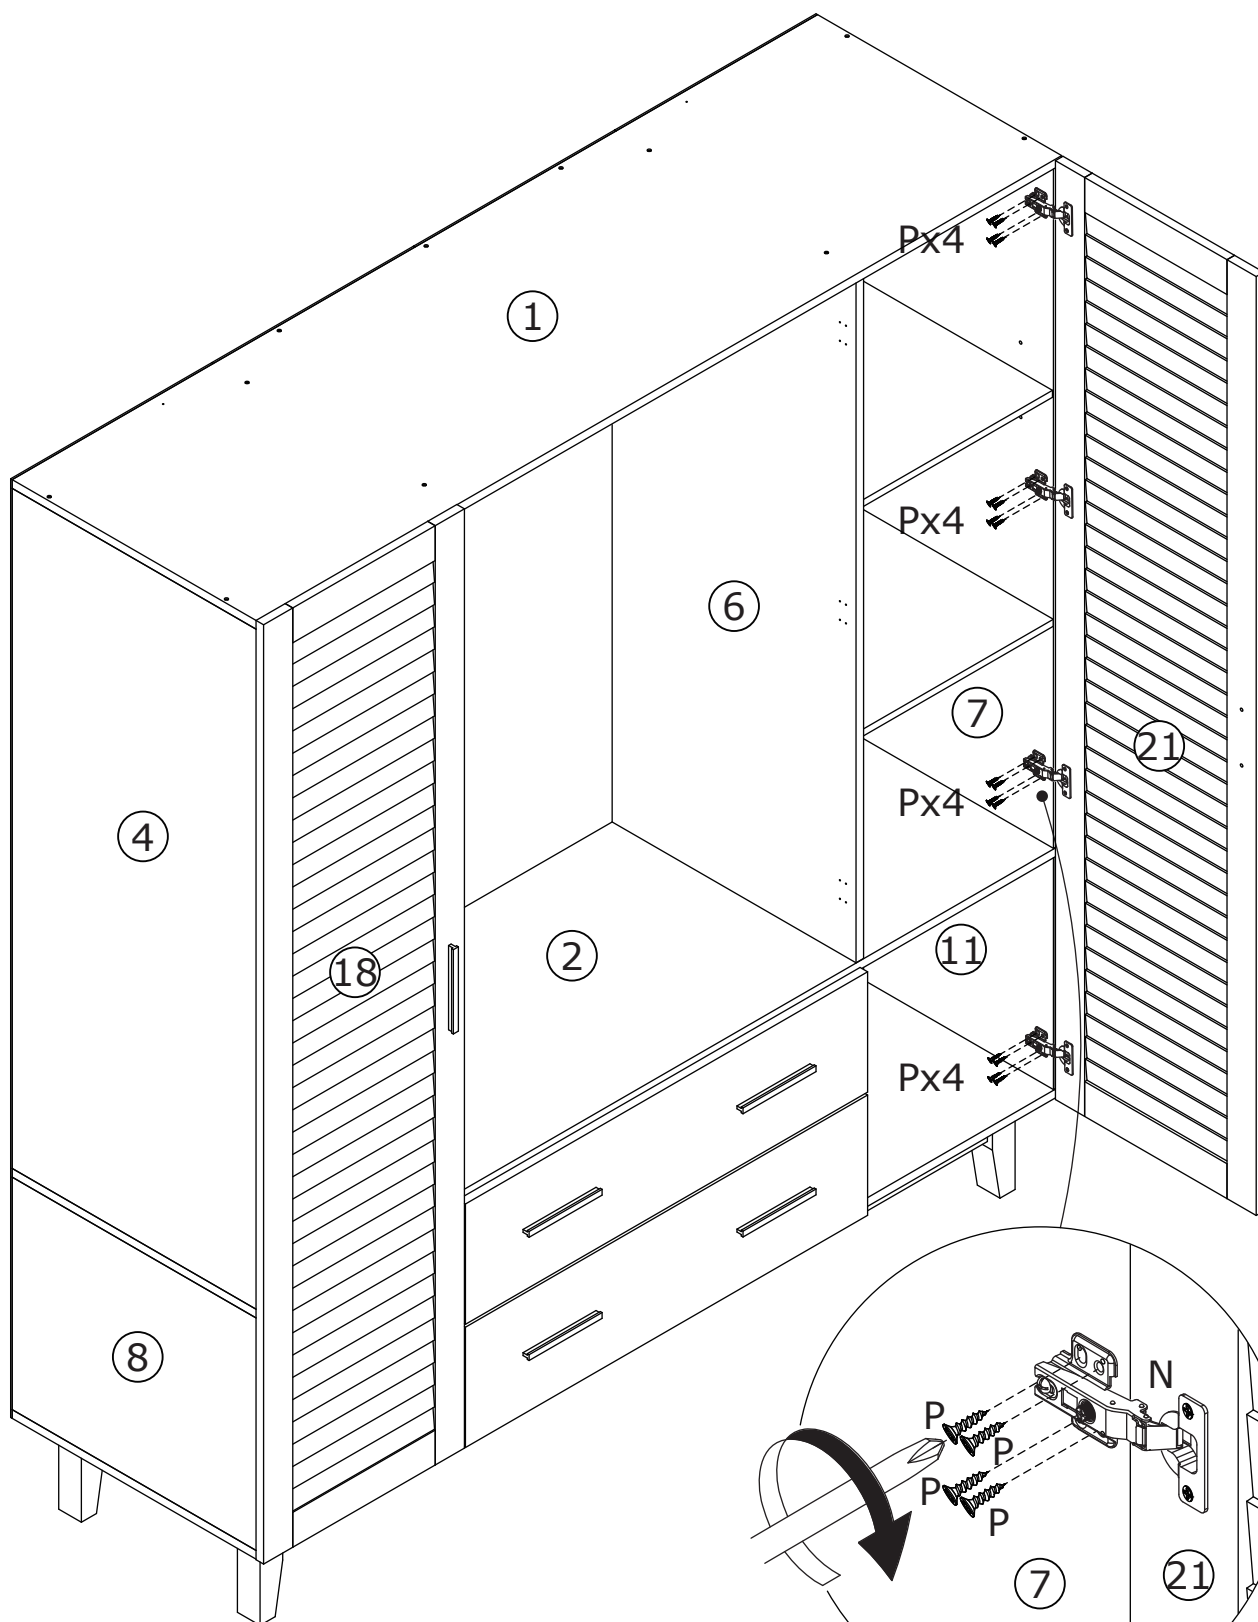

25



 Px12

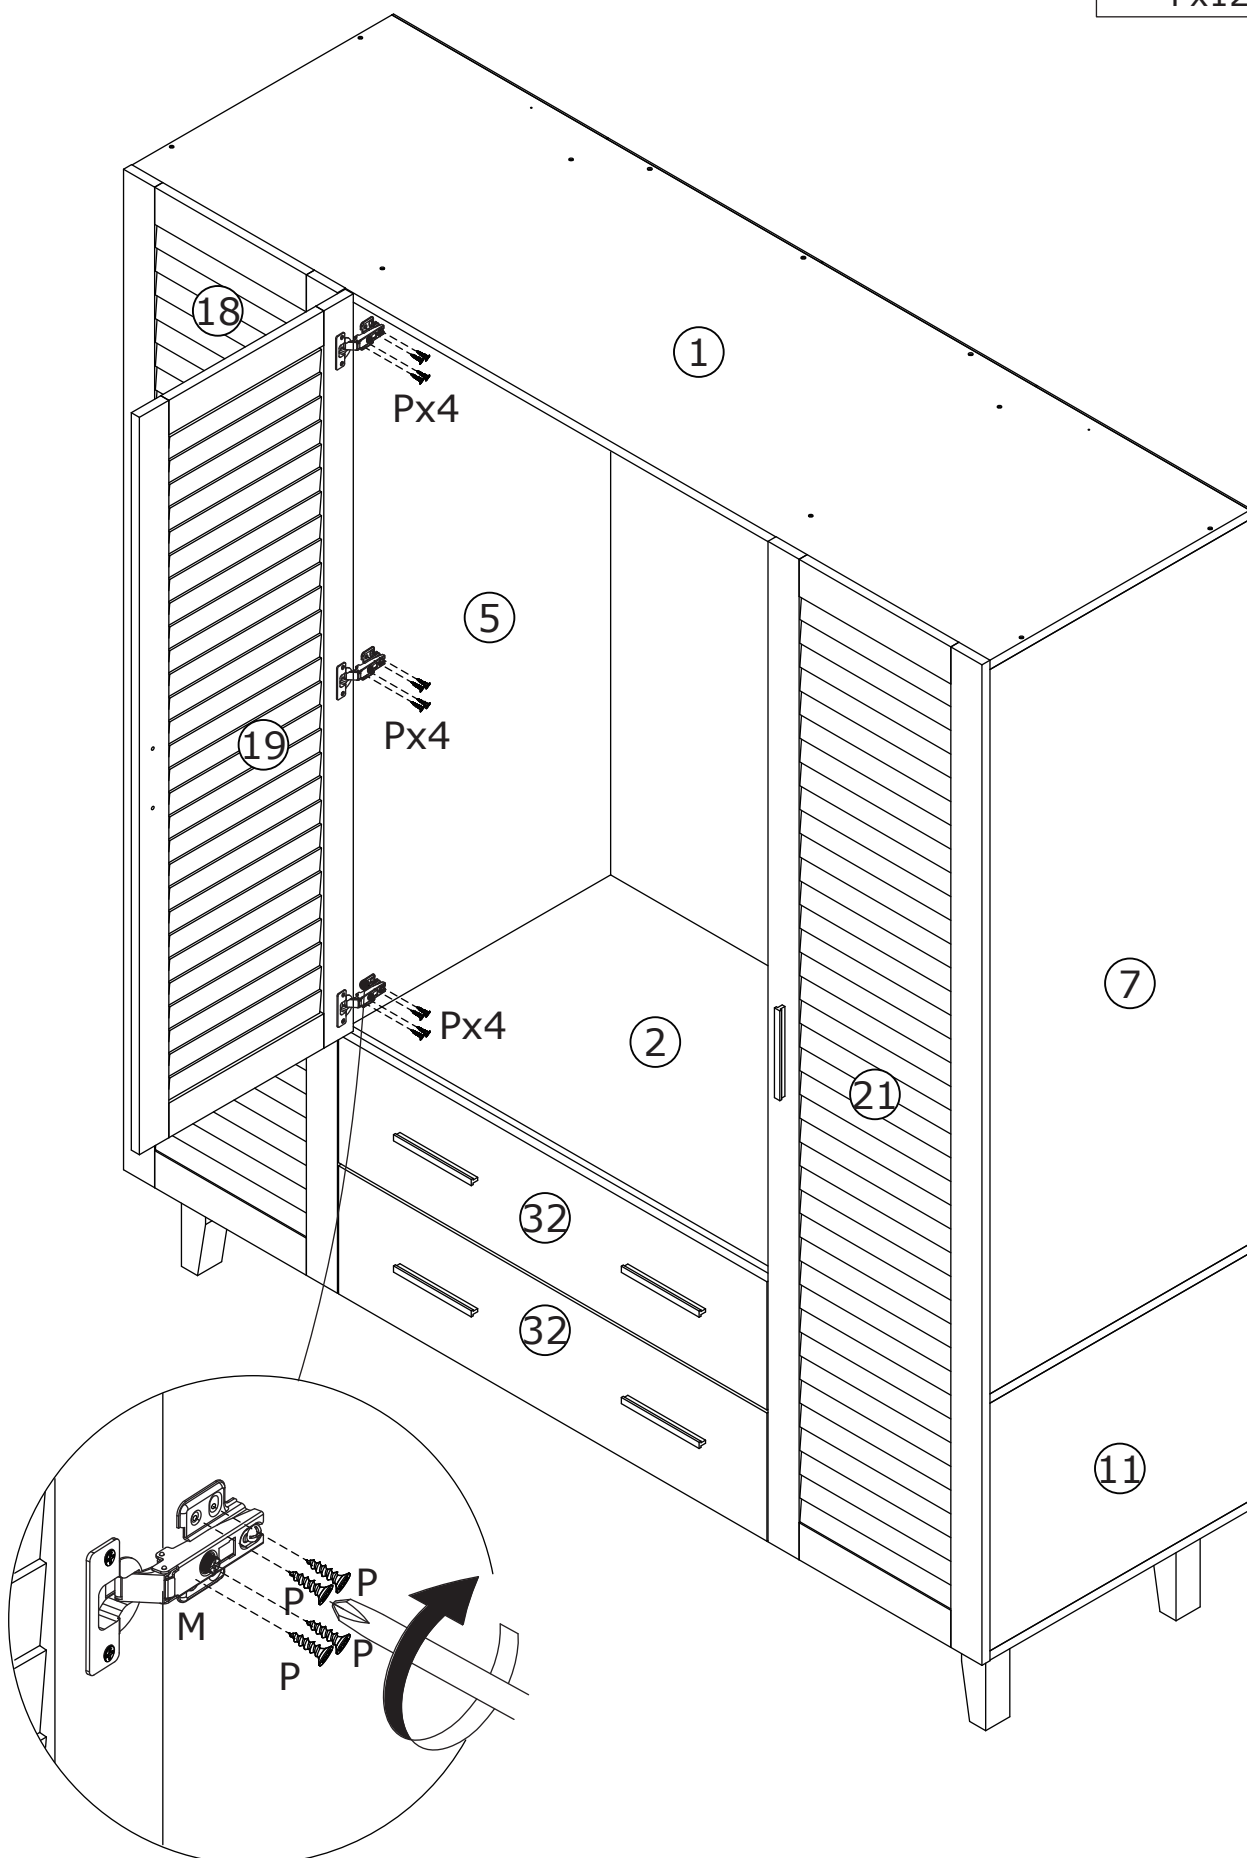


26


Please refer to the supplementary instructions for hinge adjustment on Page33.



 Px12

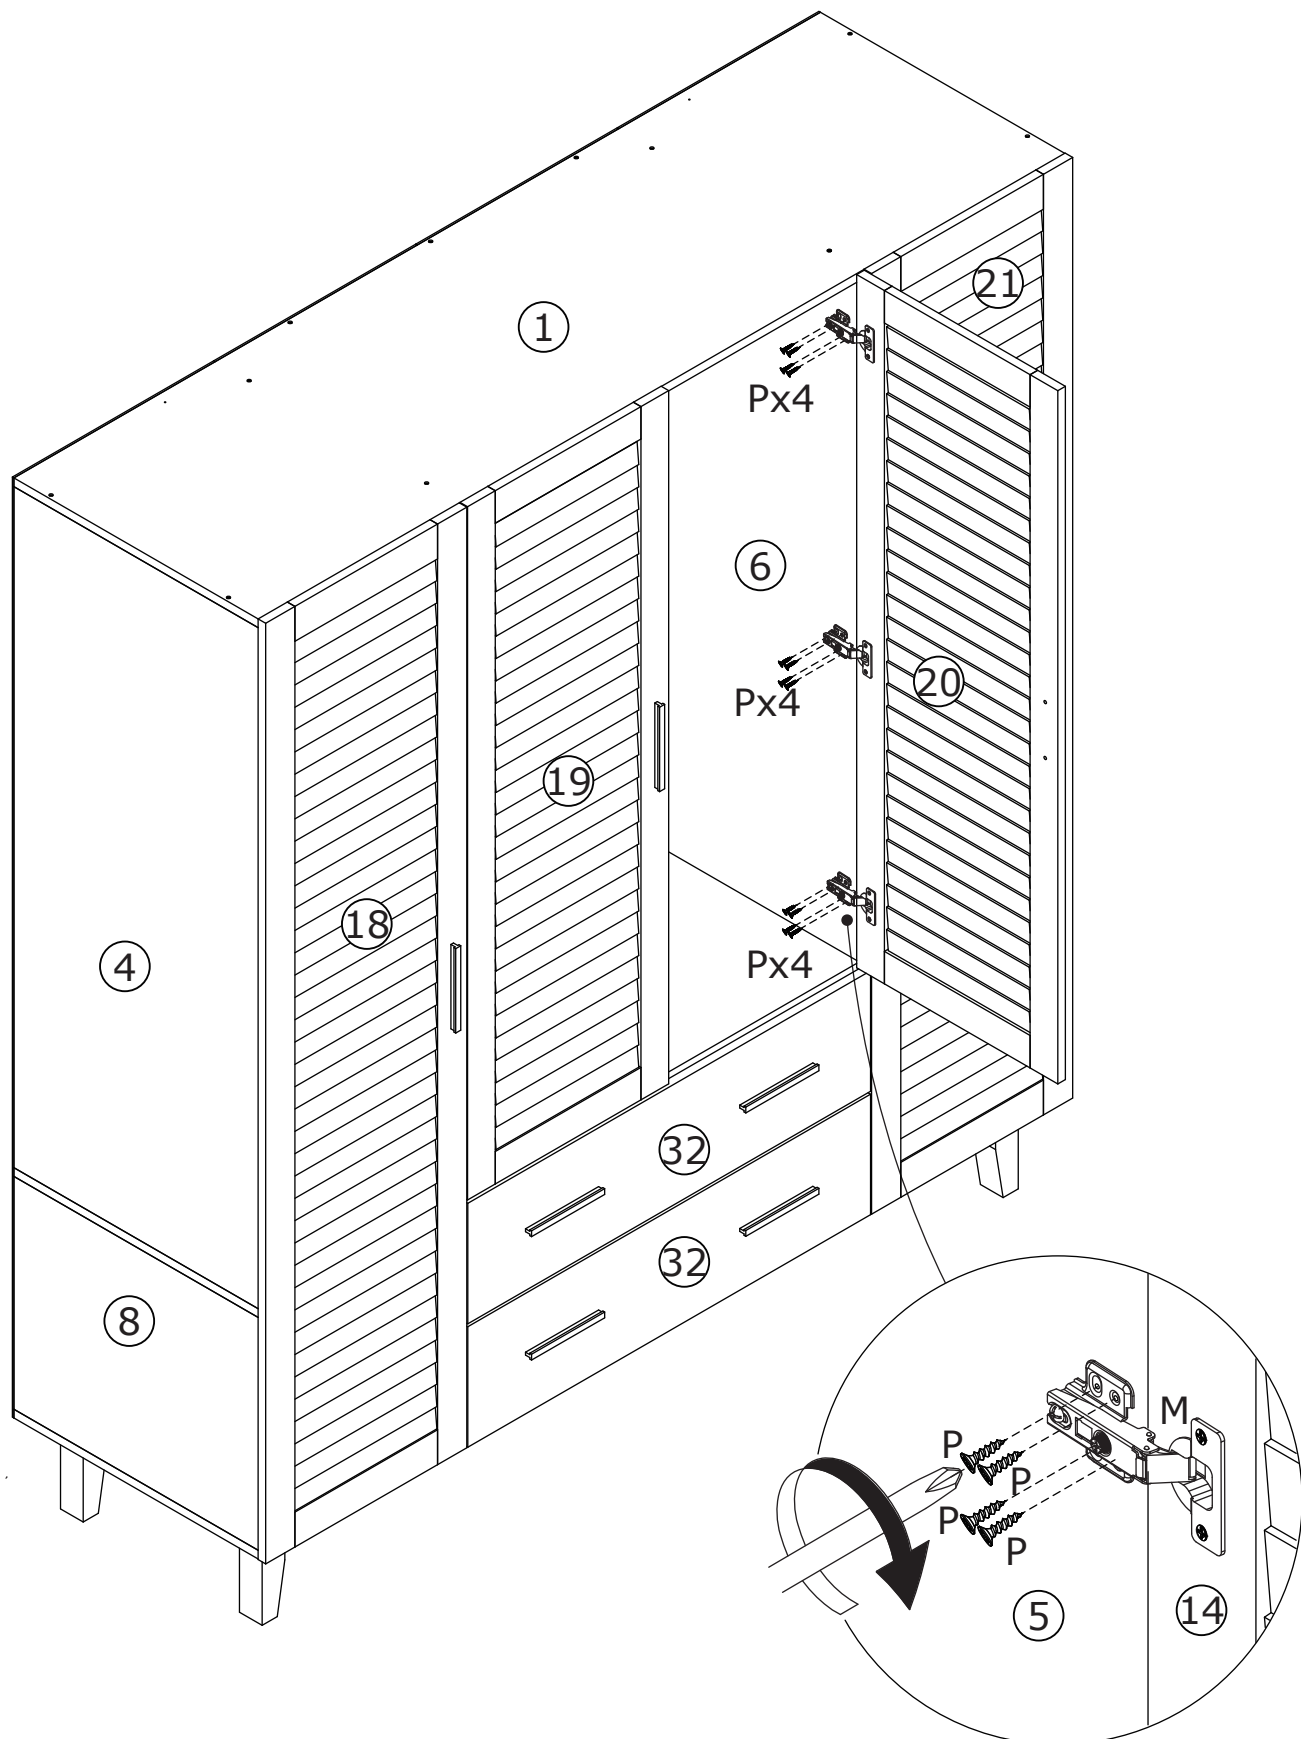

HINGE ADJUSTMENT SUPPLEMENT

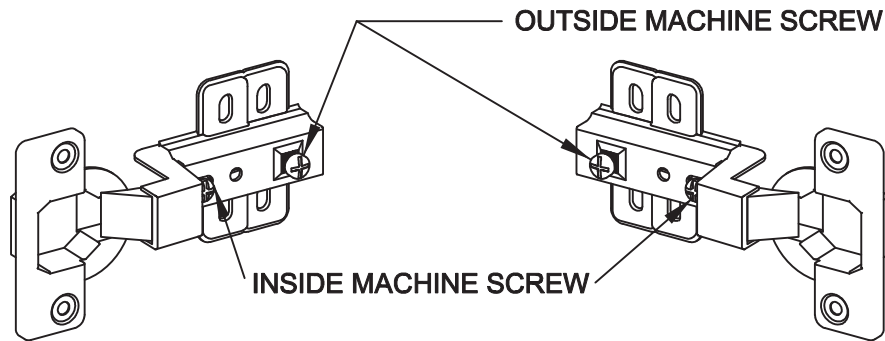 


In the event that the door does not align properly, the **INSIDE** Machine Screws located on the Hinges are for adjusting slightly to the Left or Right. **DO NOT LOOSEN THE OUTSIDE MACHINE SCREW FOR ADJUSTMENT.**

A. To adjust the door toward the **OUTSIDE** of the unit, turn the Inside Machine Screws to the **LEFT**, or **COUNTERCLOCKWISE**. (See Figure A)


B. To adjust the door toward the **INSIDE** of the unit, turn the Inside Machine Screws to the **RIGHT**, or **CLOCKWISE**. (See Figure B)

***Note: Please be patient, it may take several minutes to adjust properly.**

 Only once the door is in the desired position, fully tighten the **OUTSIDE** Machine Screws. This will ensure that the door is secure.

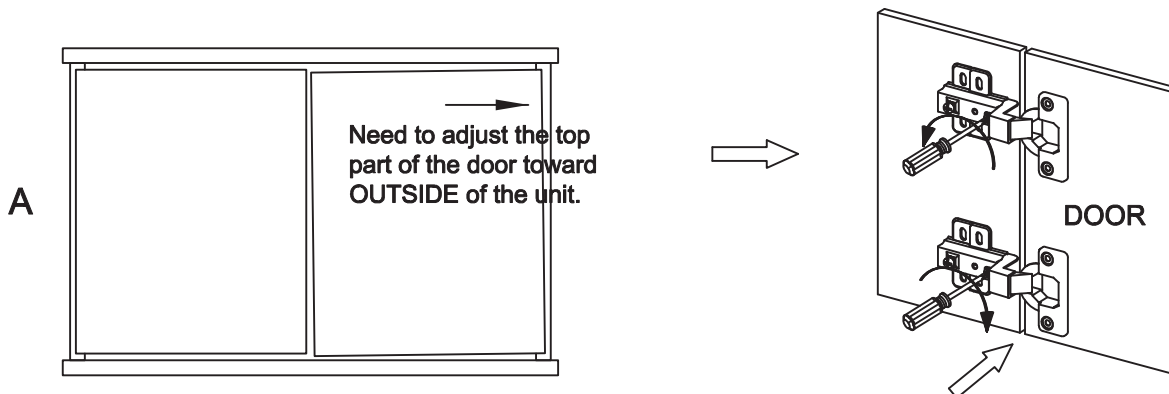

 You may also need to adjust slightly the lower part of the door toward **INSIDE** of the unit at the same time.

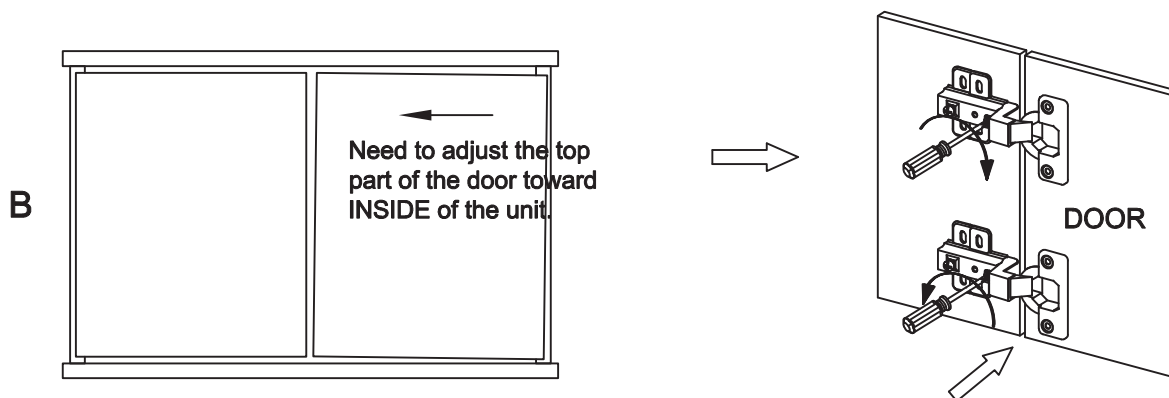

You may also need to adjust slightly the lower part of the door toward **OUTSIDE** of the unit at the same time.

27

Attention: For safety and stability, we suggest you have to secure the anti-tip accessories to the wall to prevent tipping, injury, and property damage.

