 
 
 


Product Installation Instructions

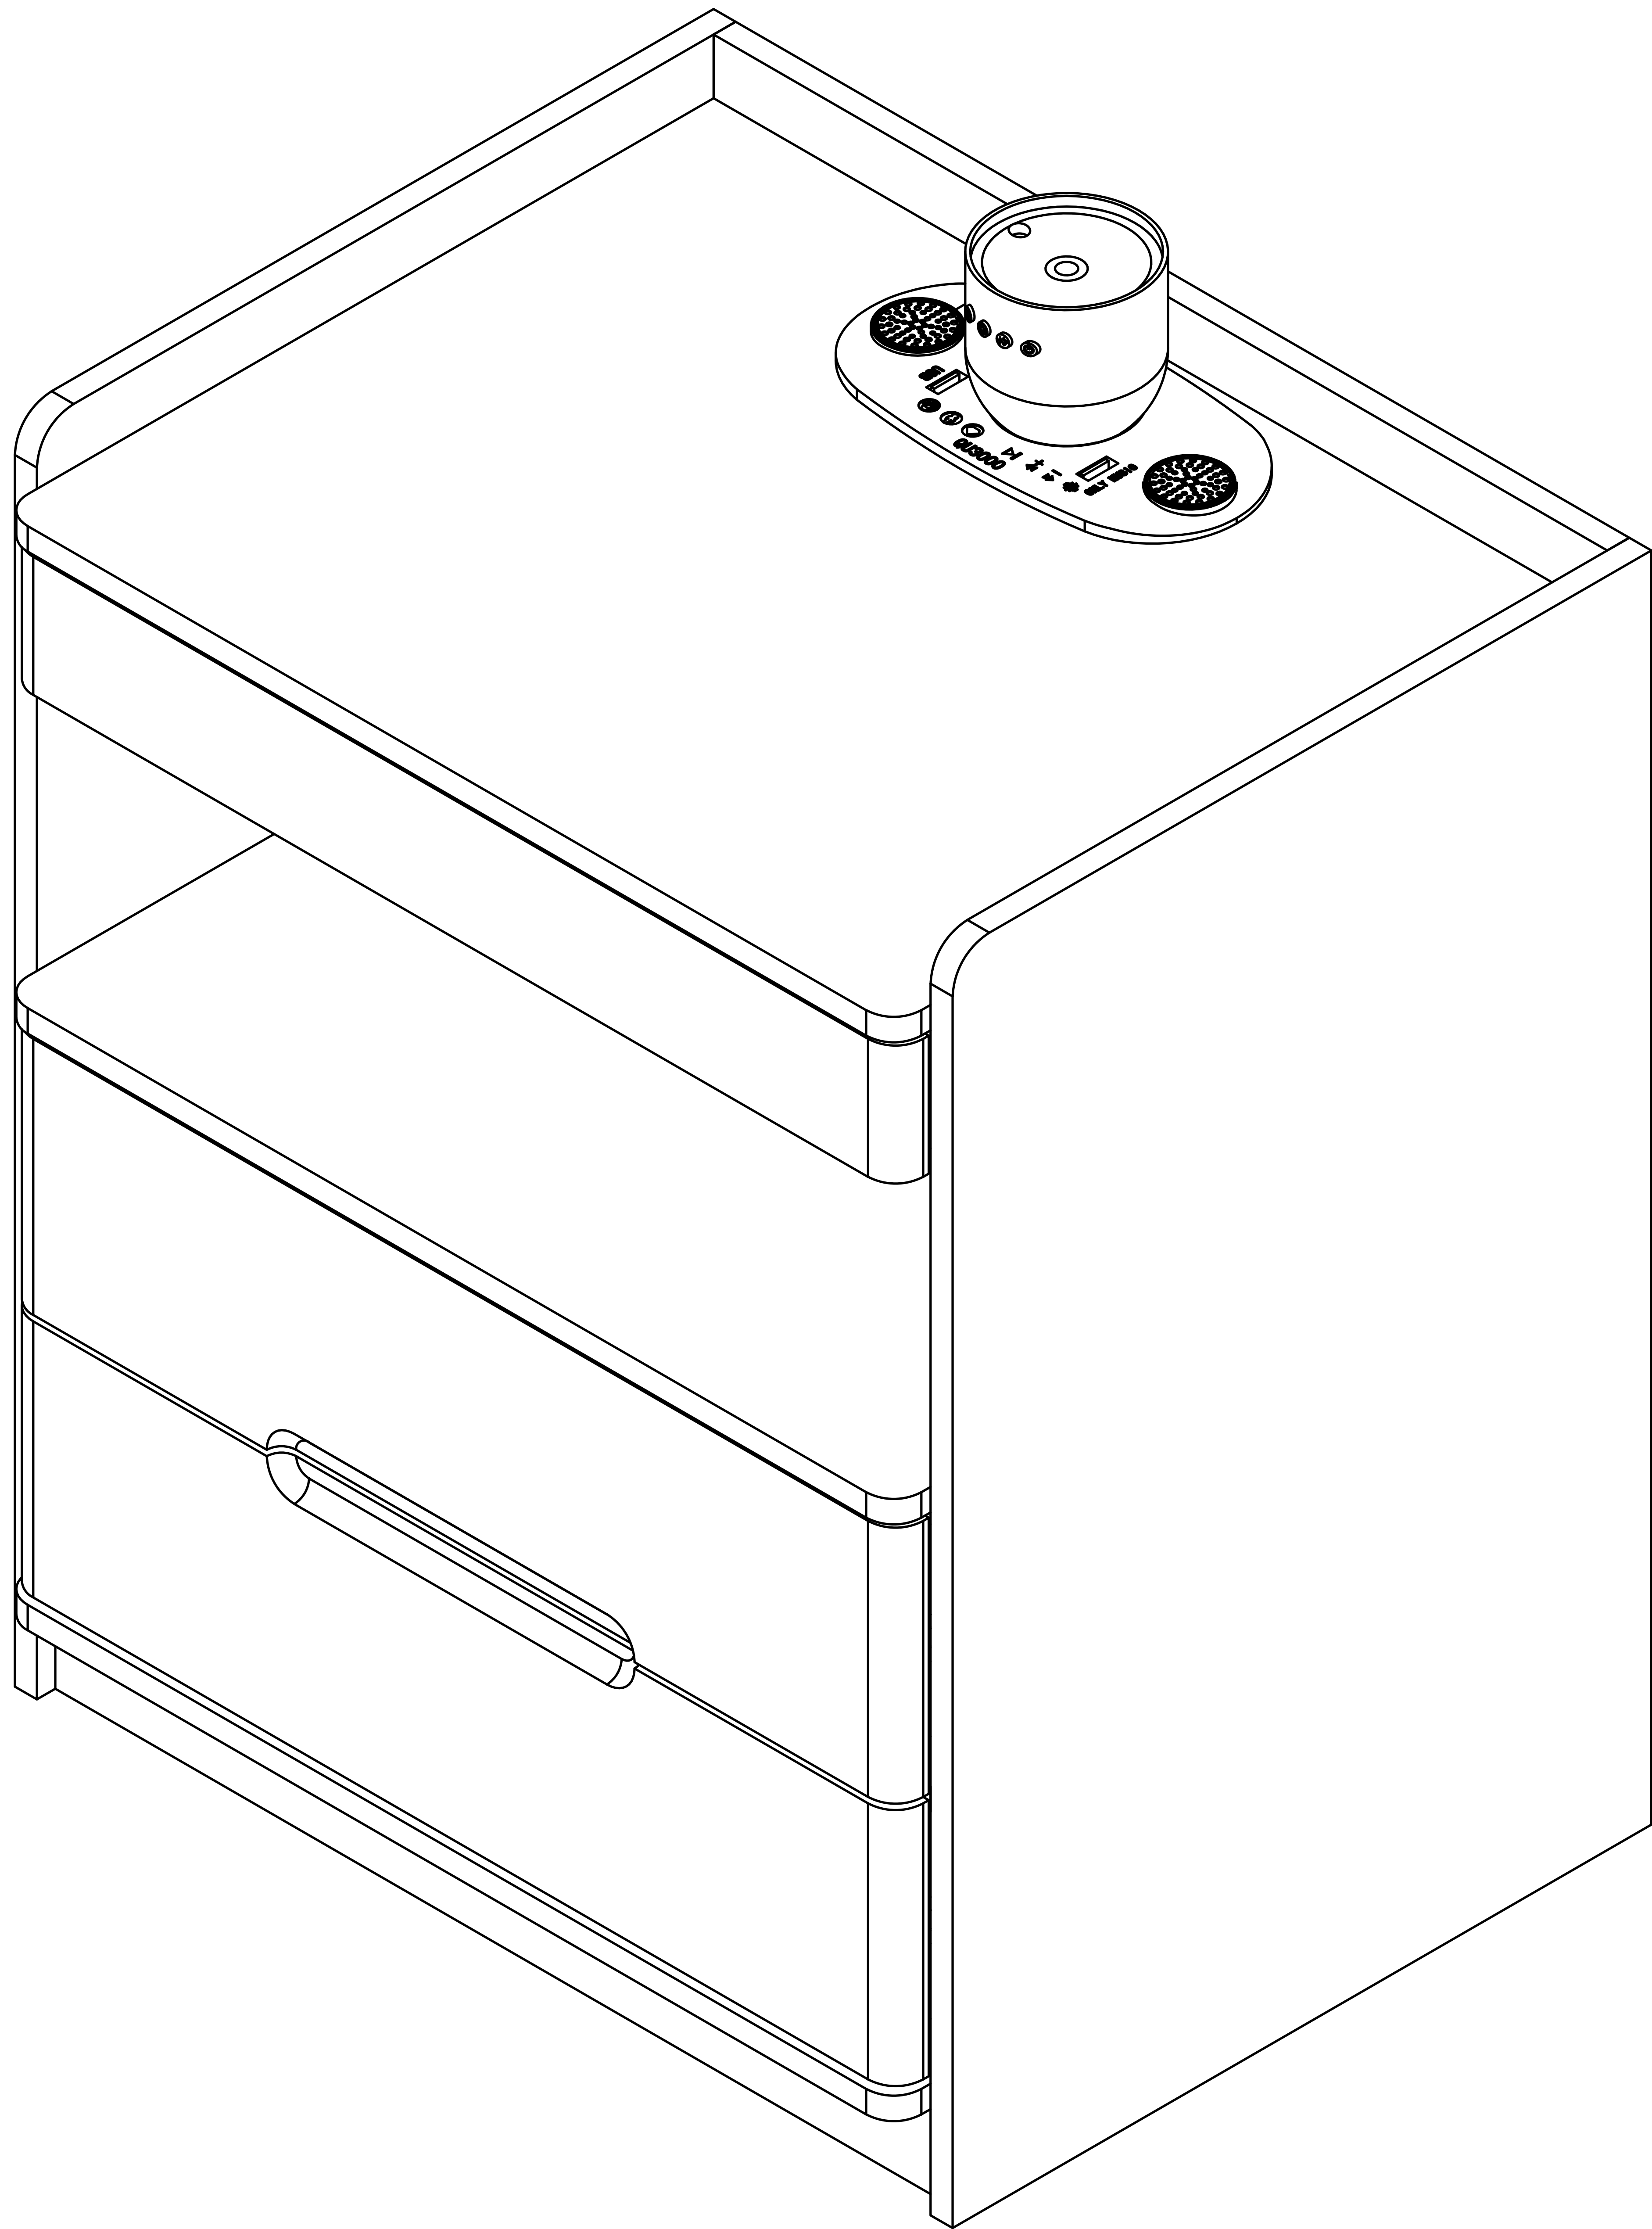


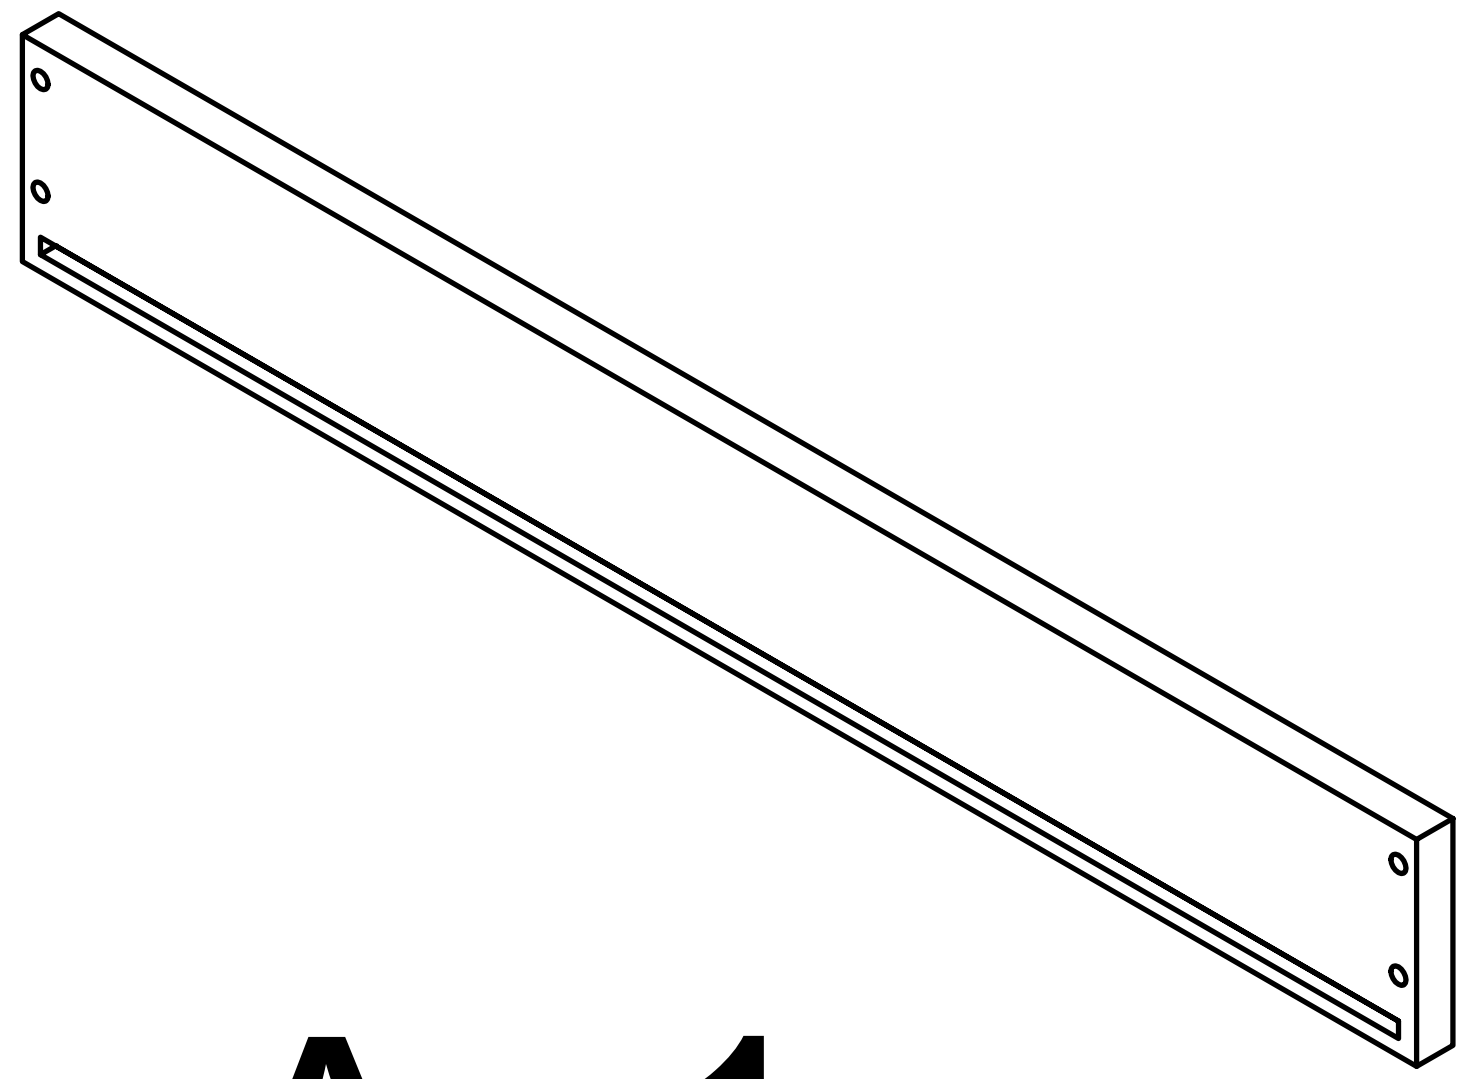


Ax1

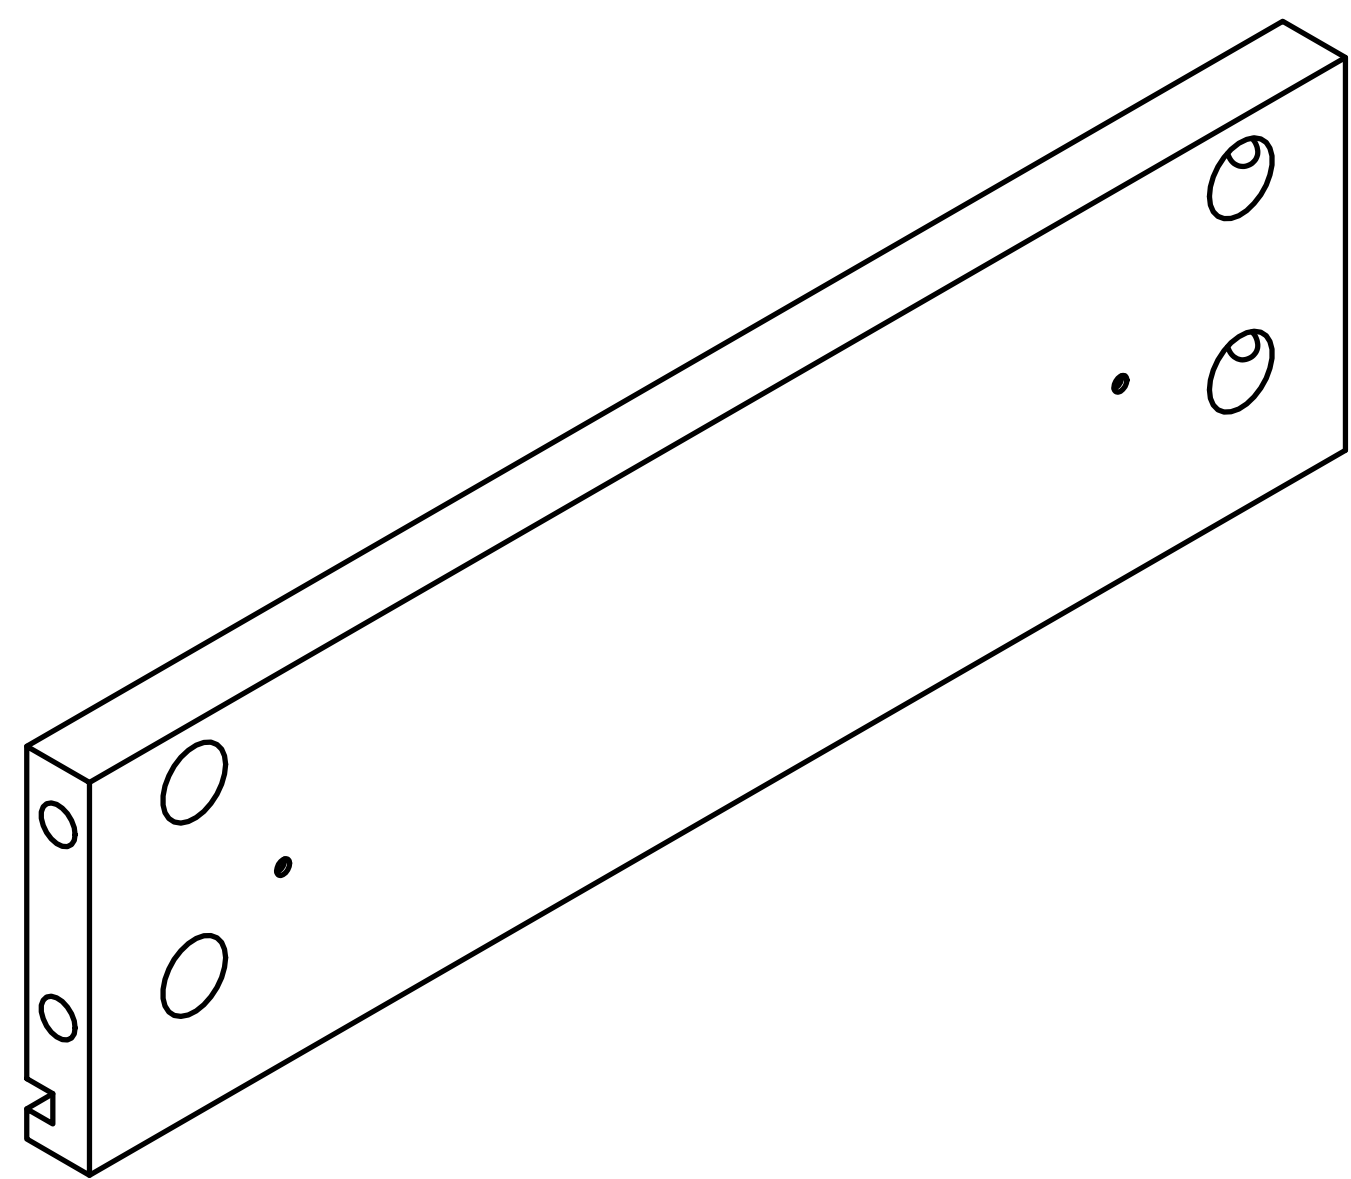

 
Bx1

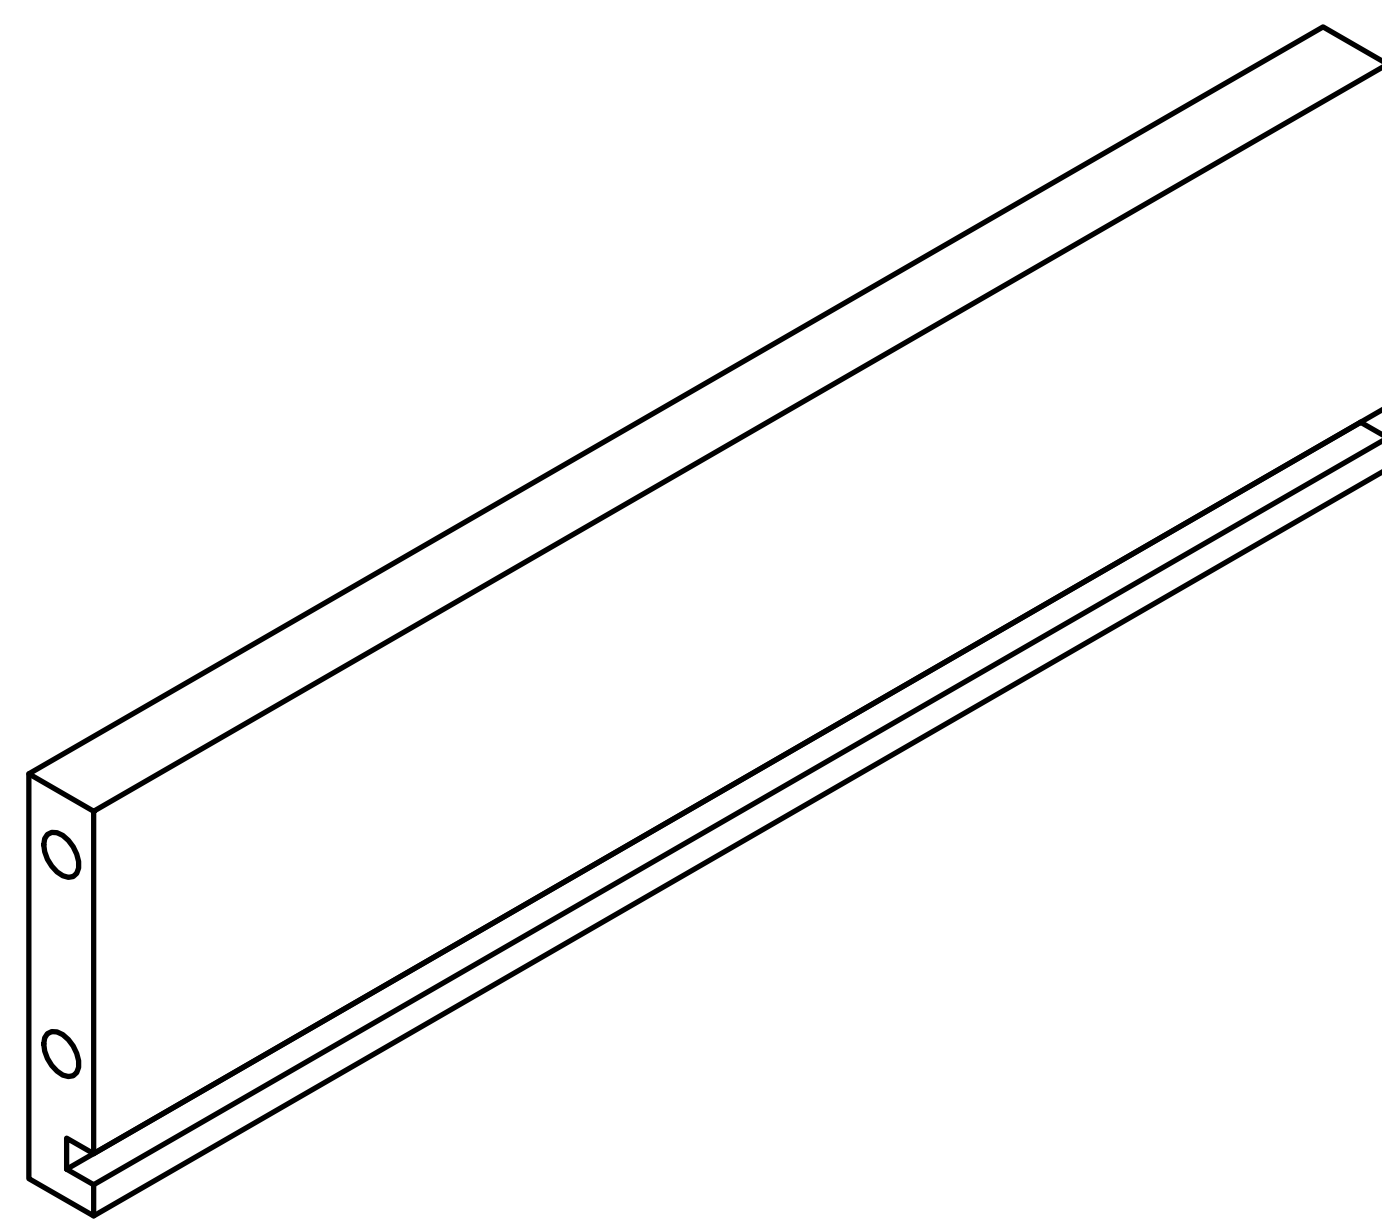


Cx1

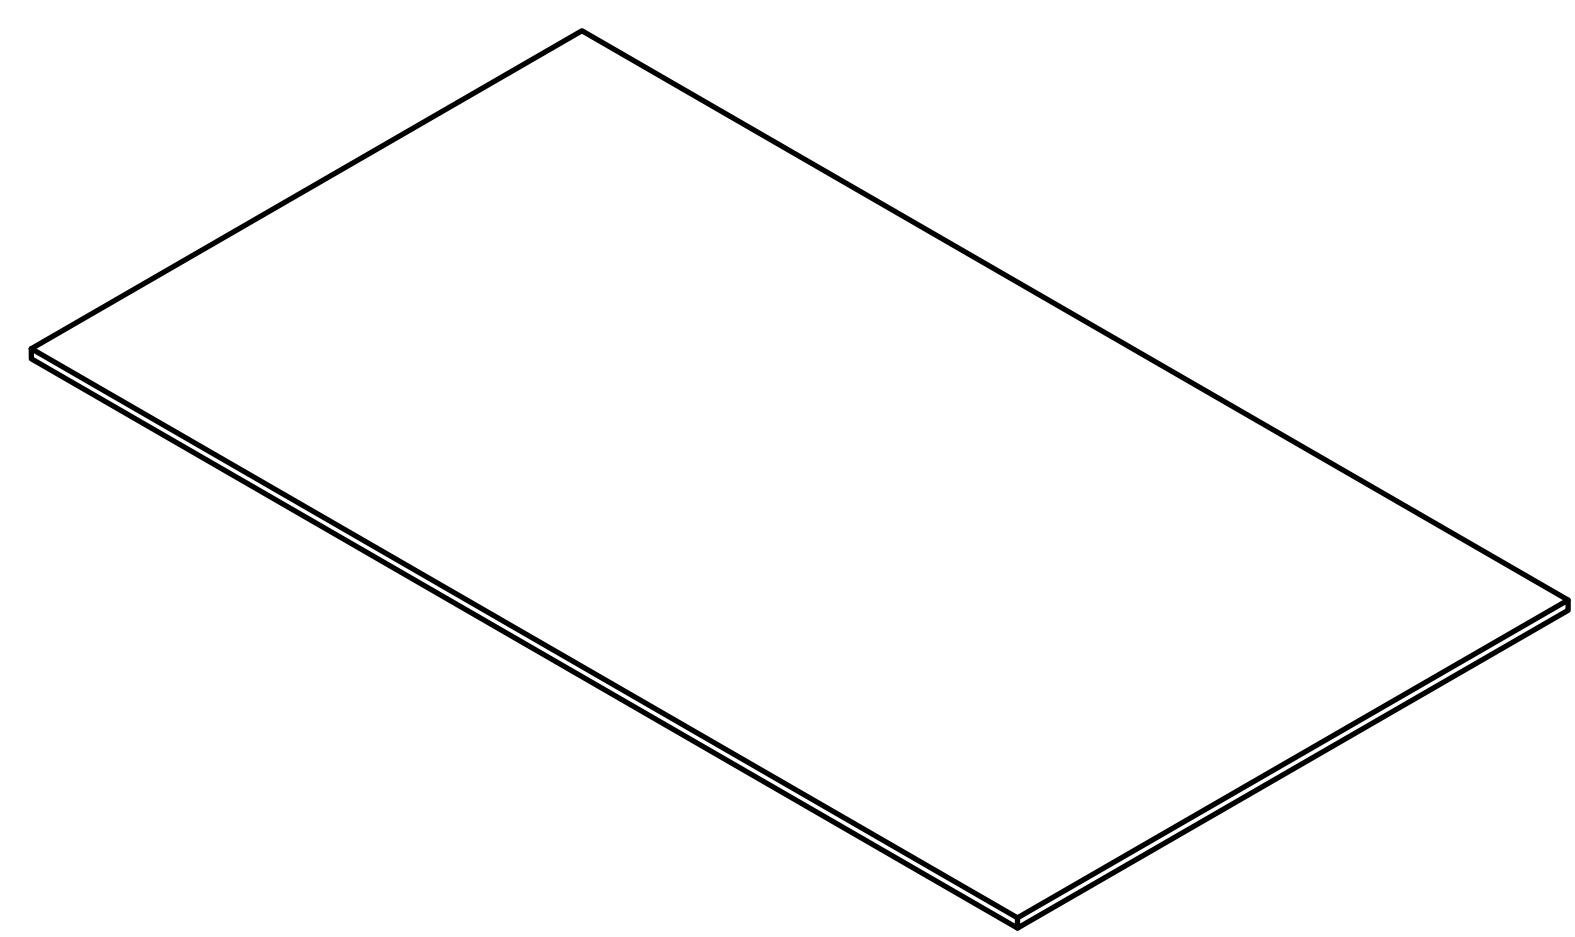 


Dx1

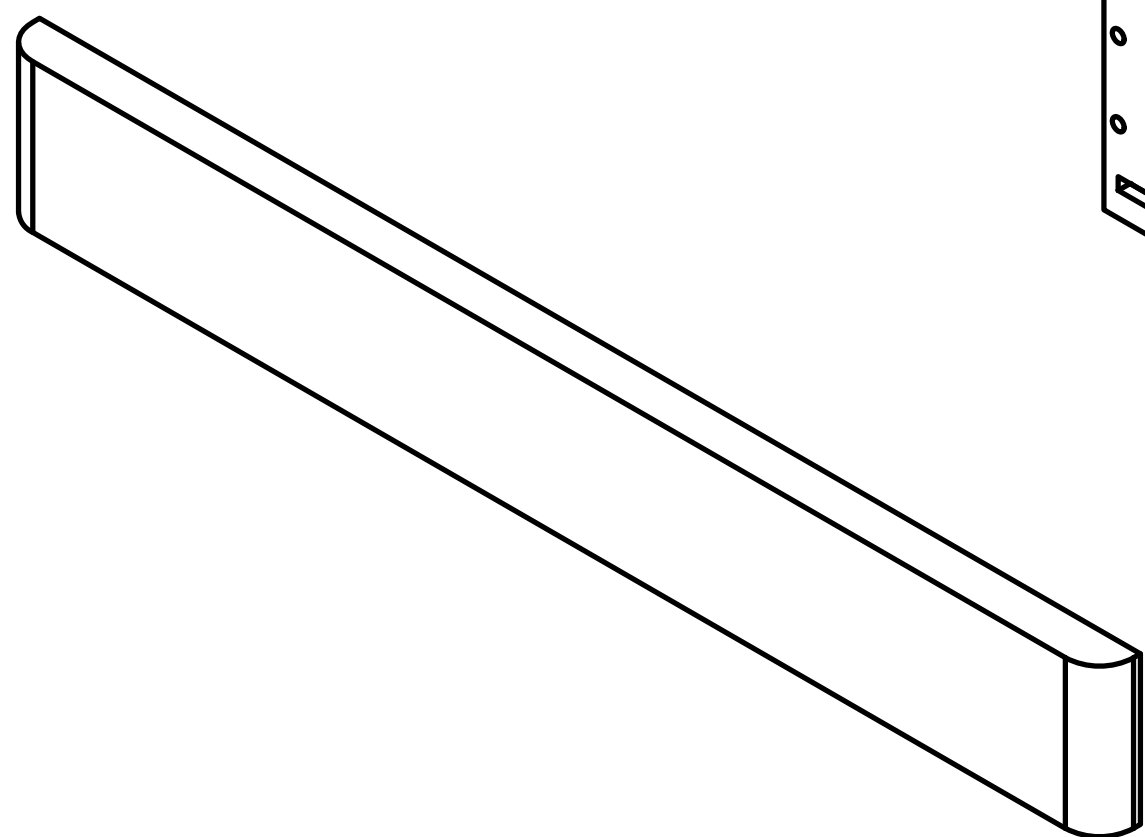 


Ex1

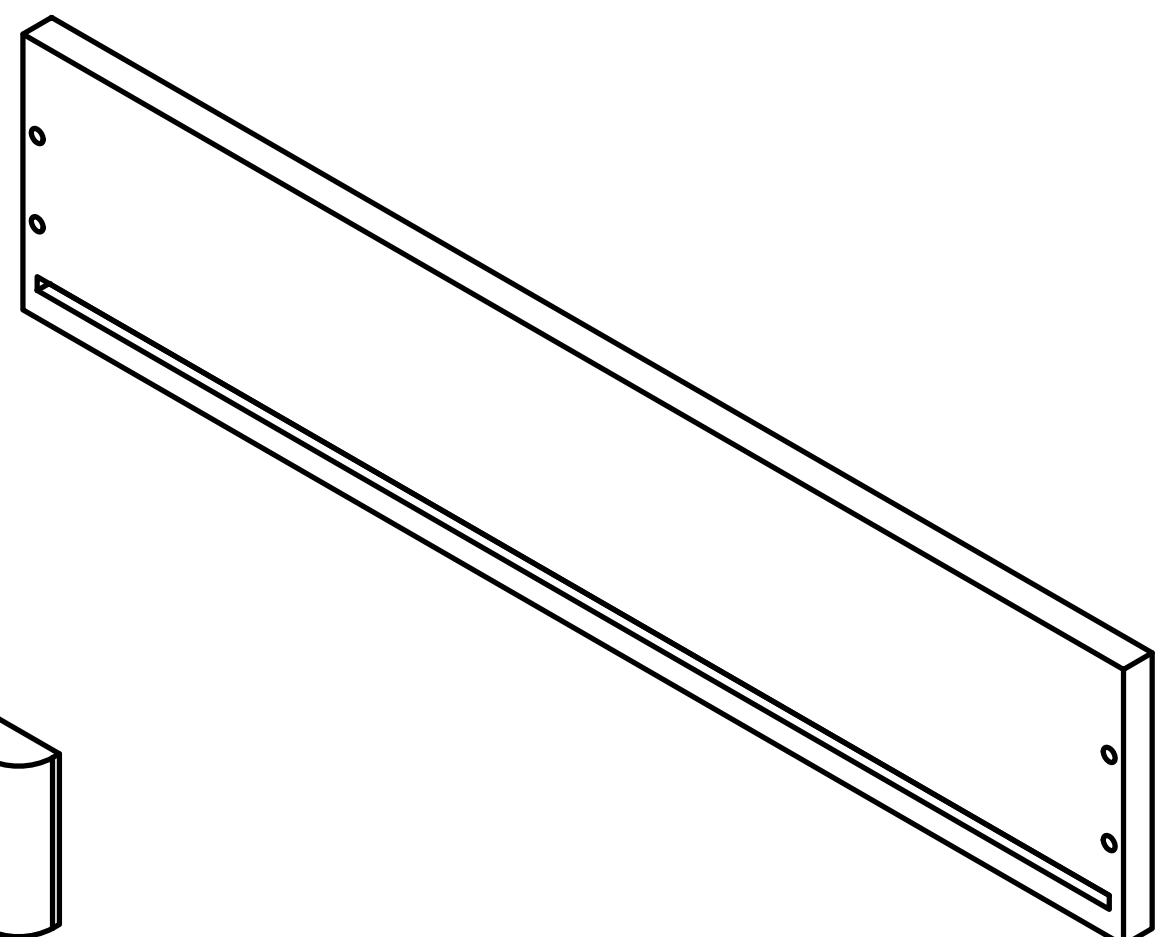 


Fx2

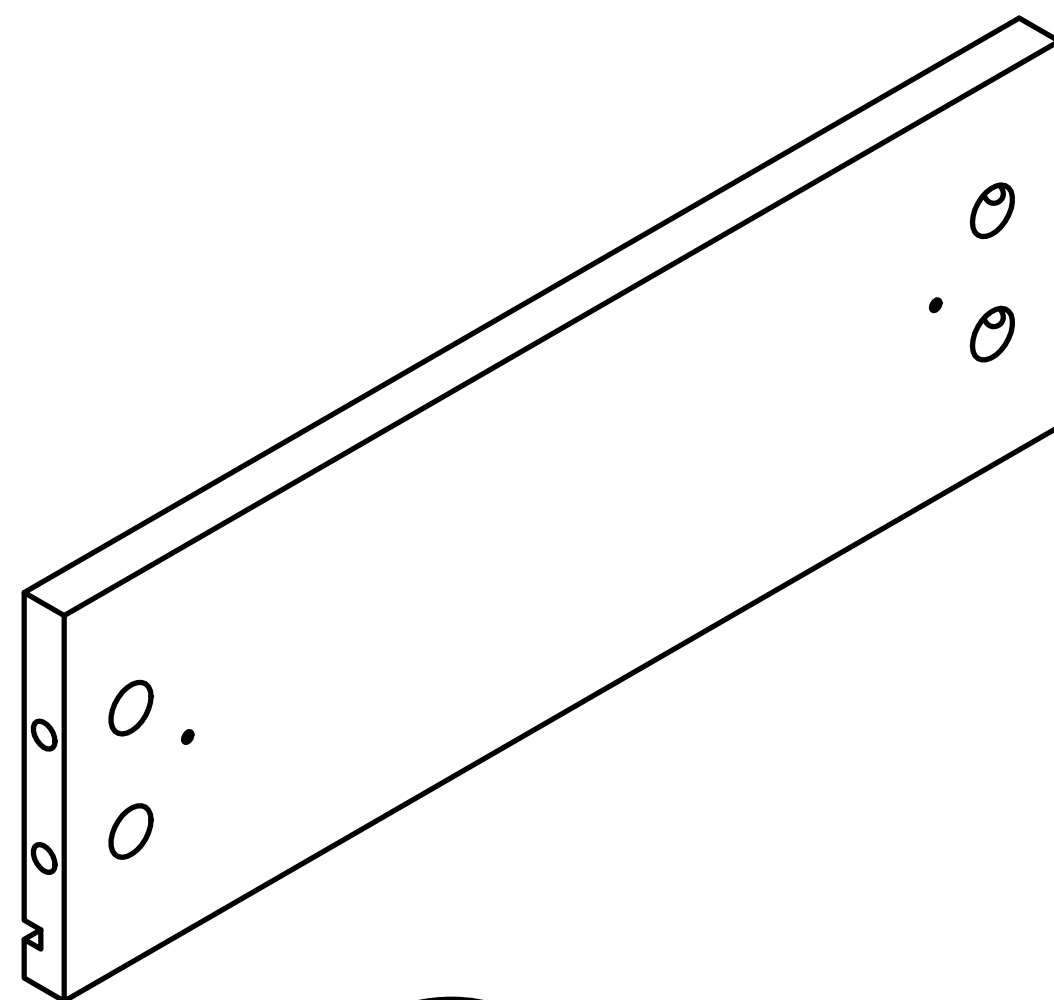 


Gx4

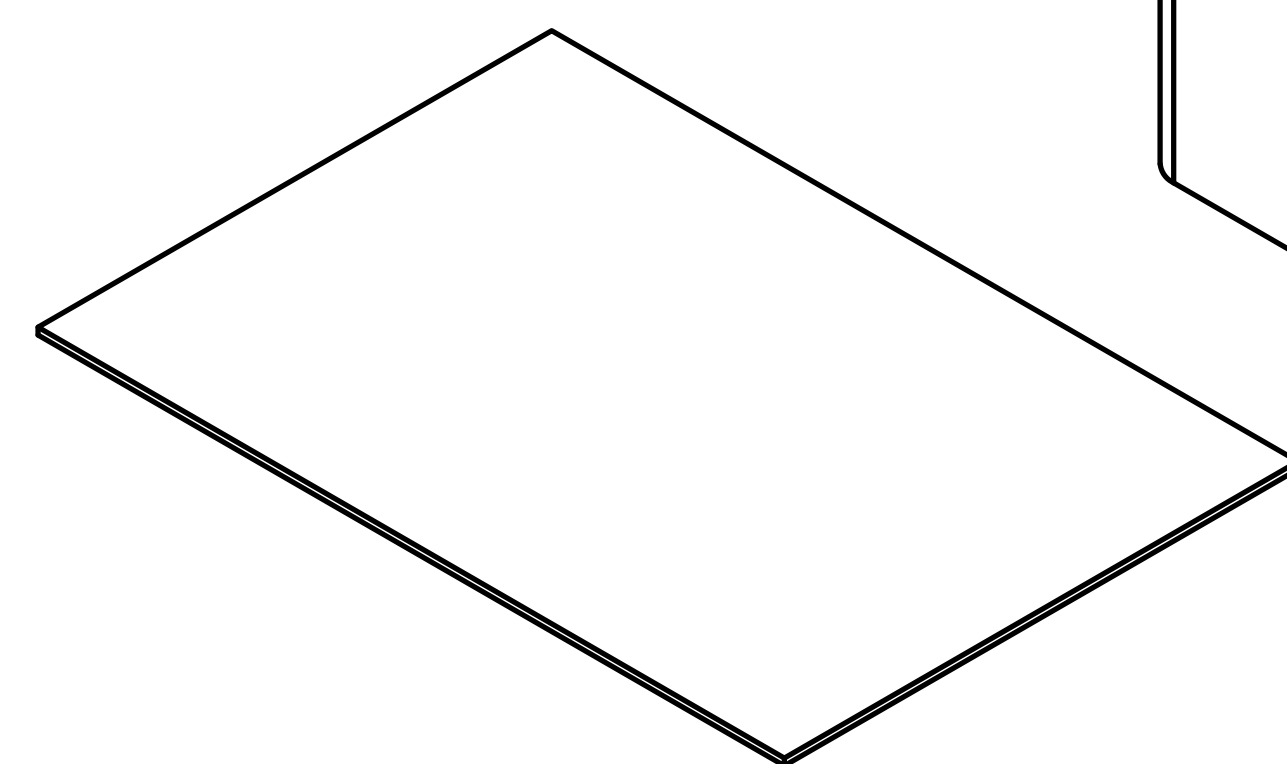 


Hx2

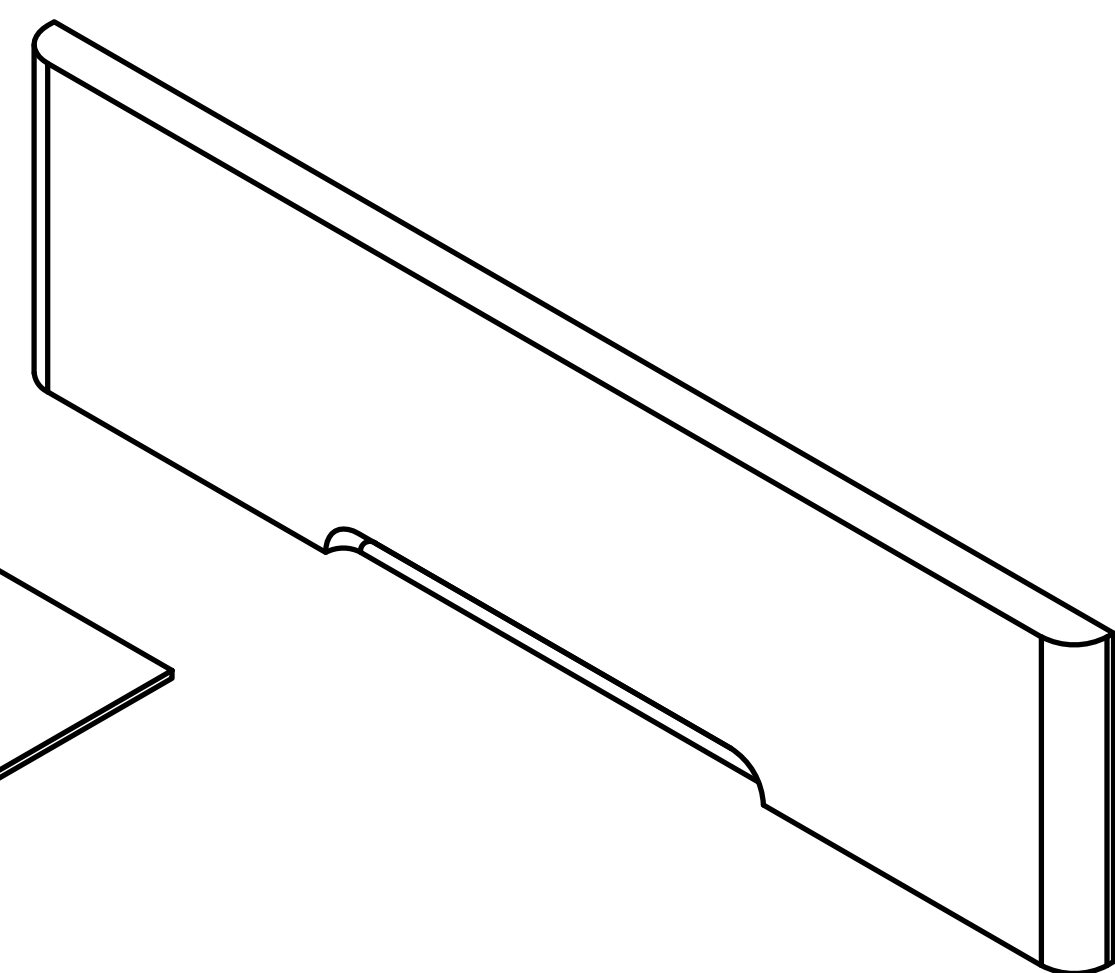 


Ix1

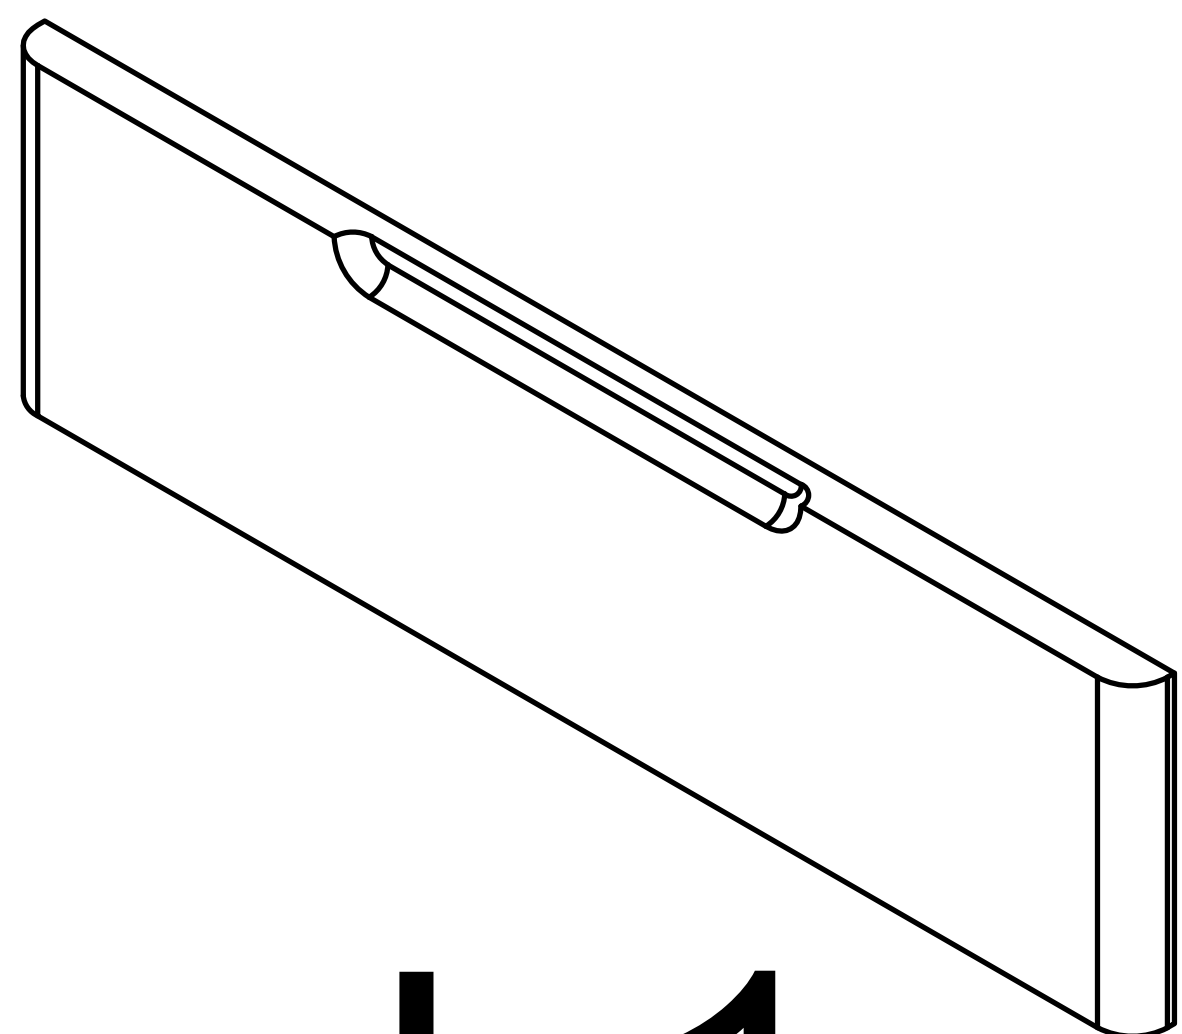 


Jx1

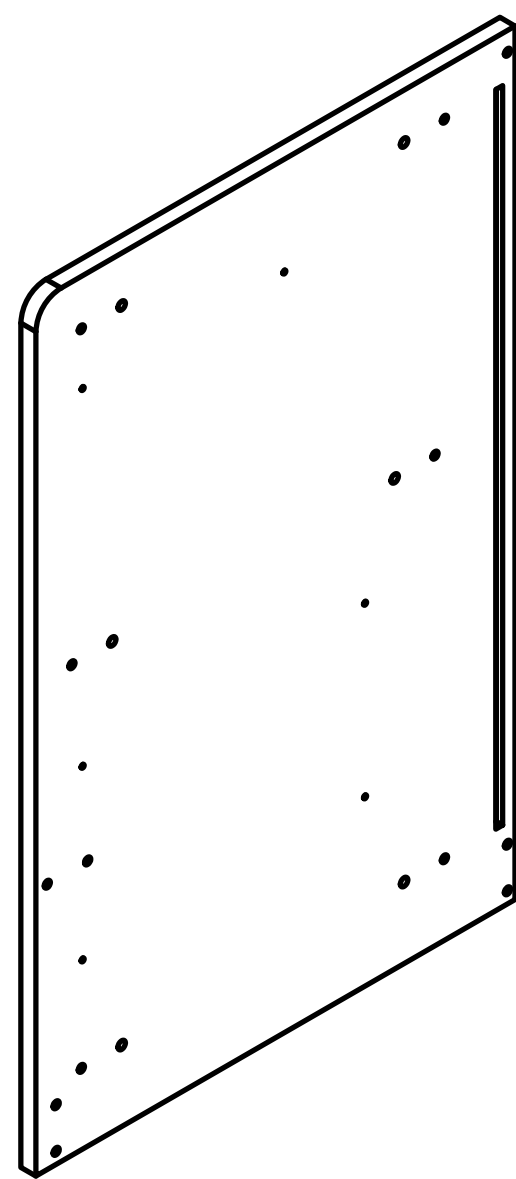 


Kx1

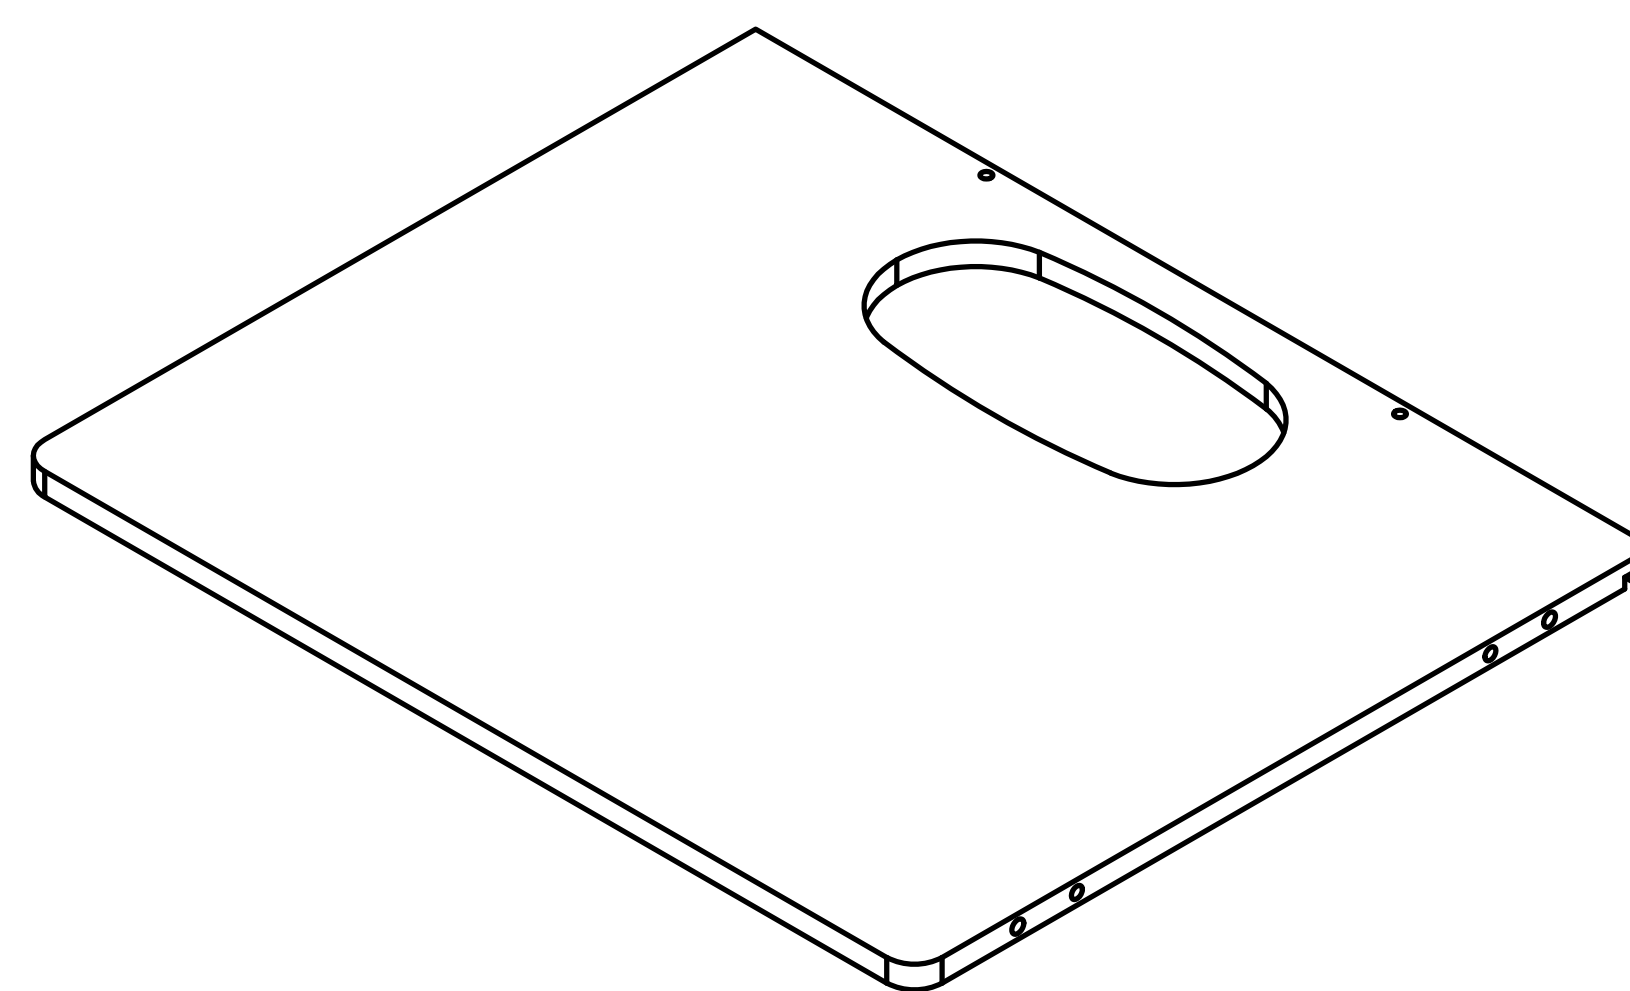 


Lx1

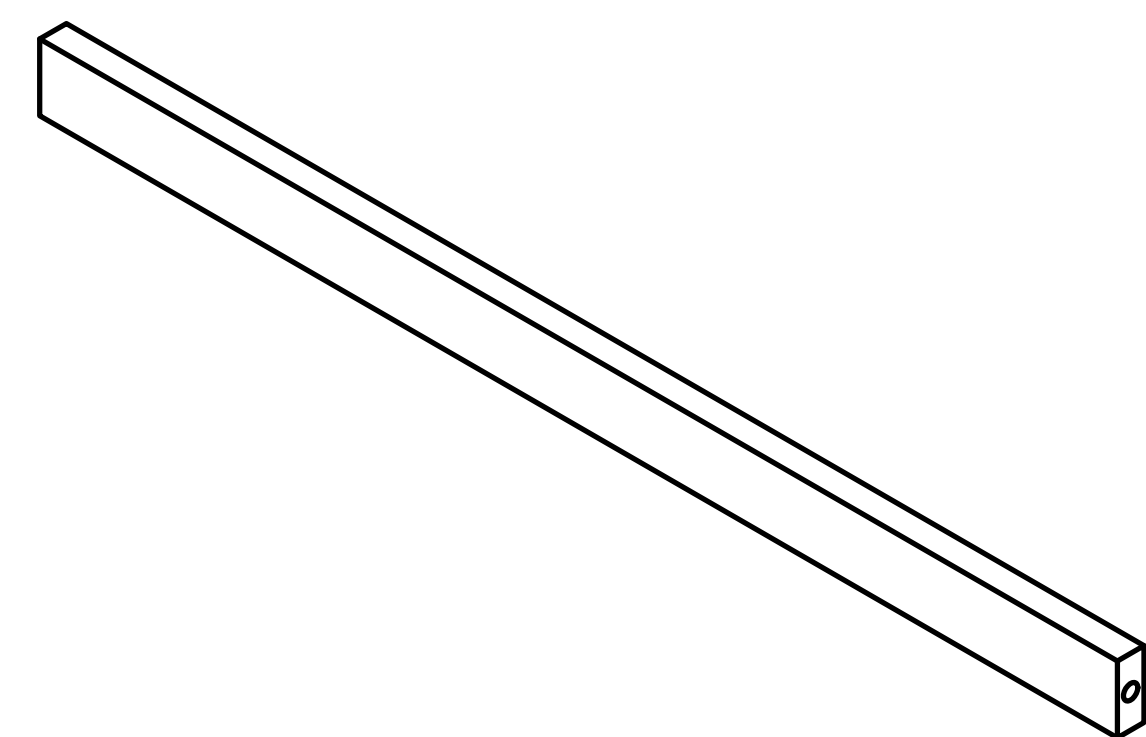 


Mx1

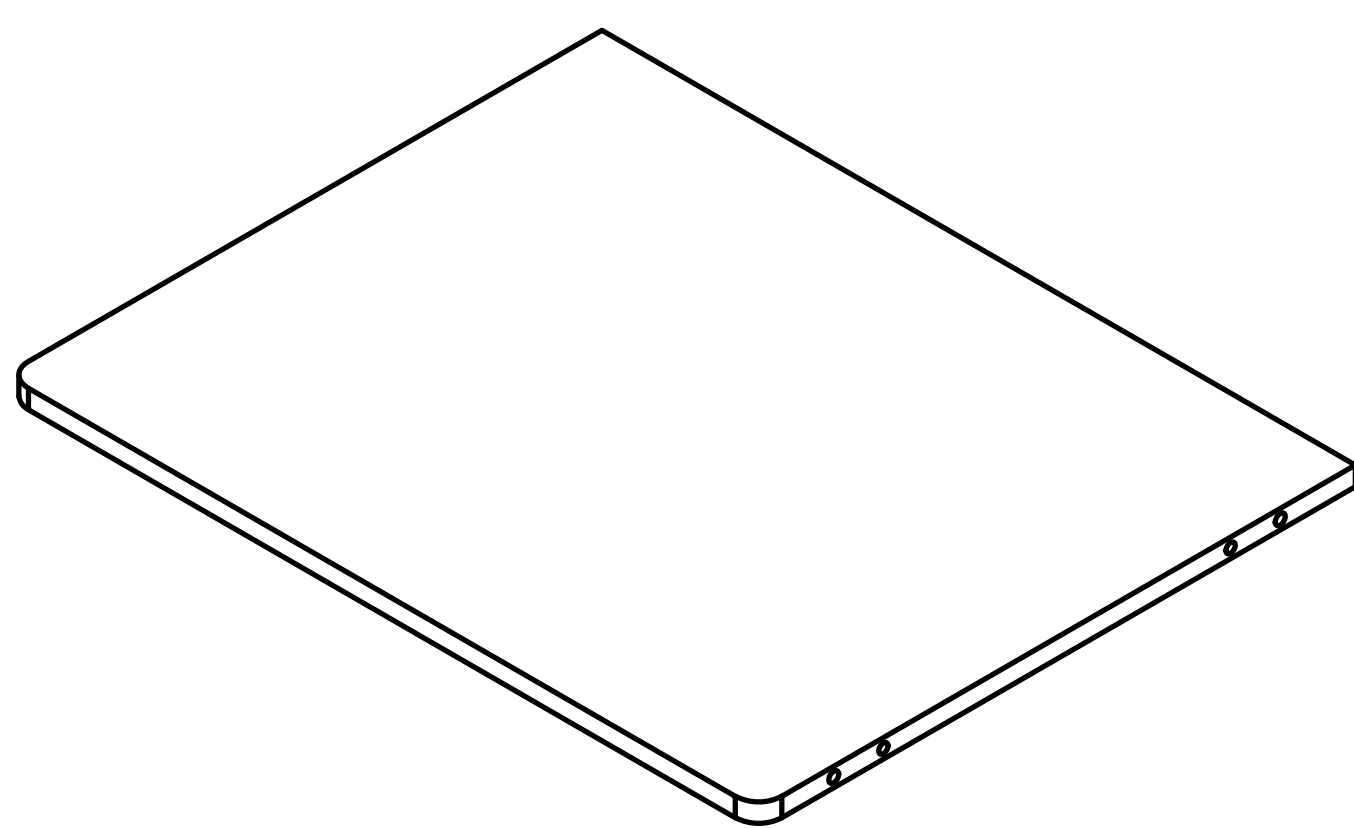 


Nx1

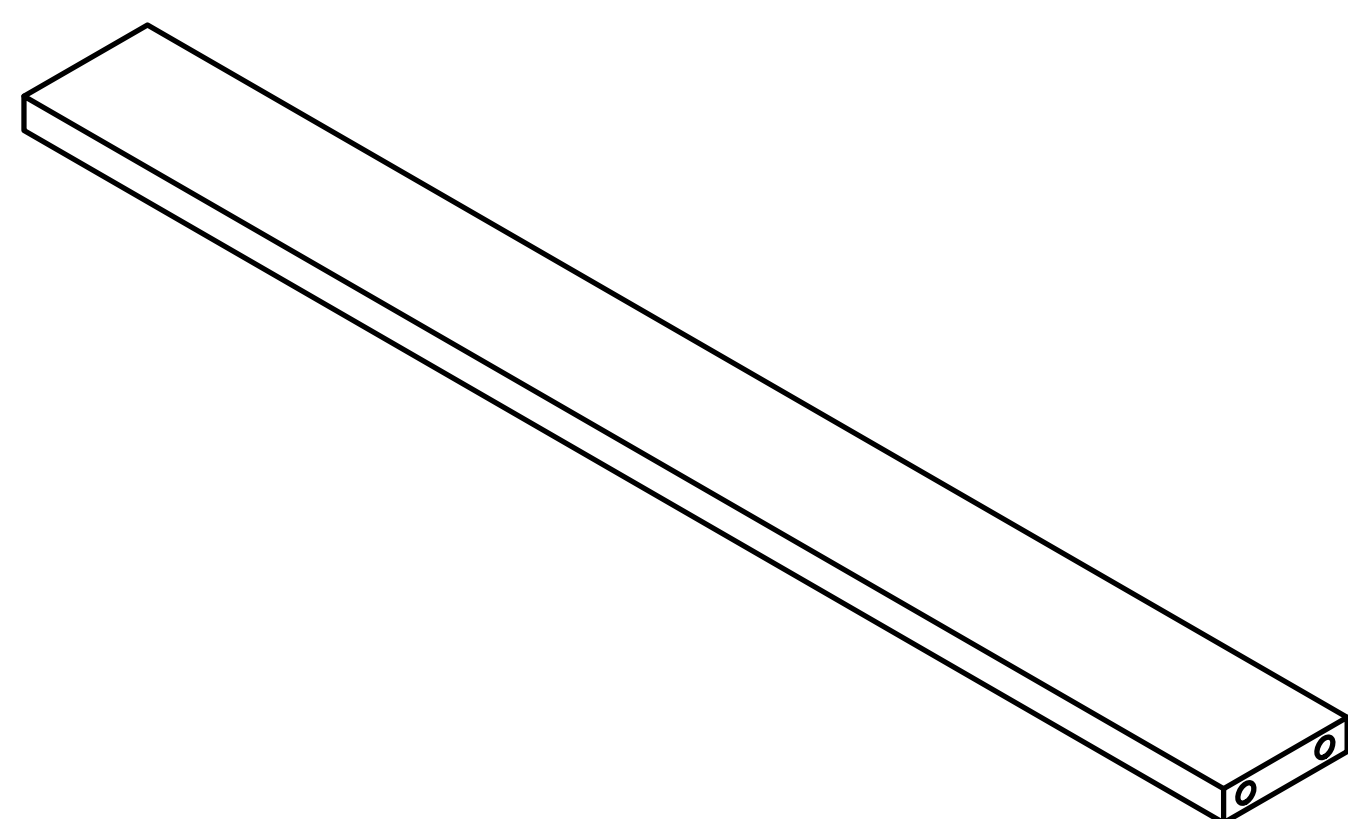 


Ox1

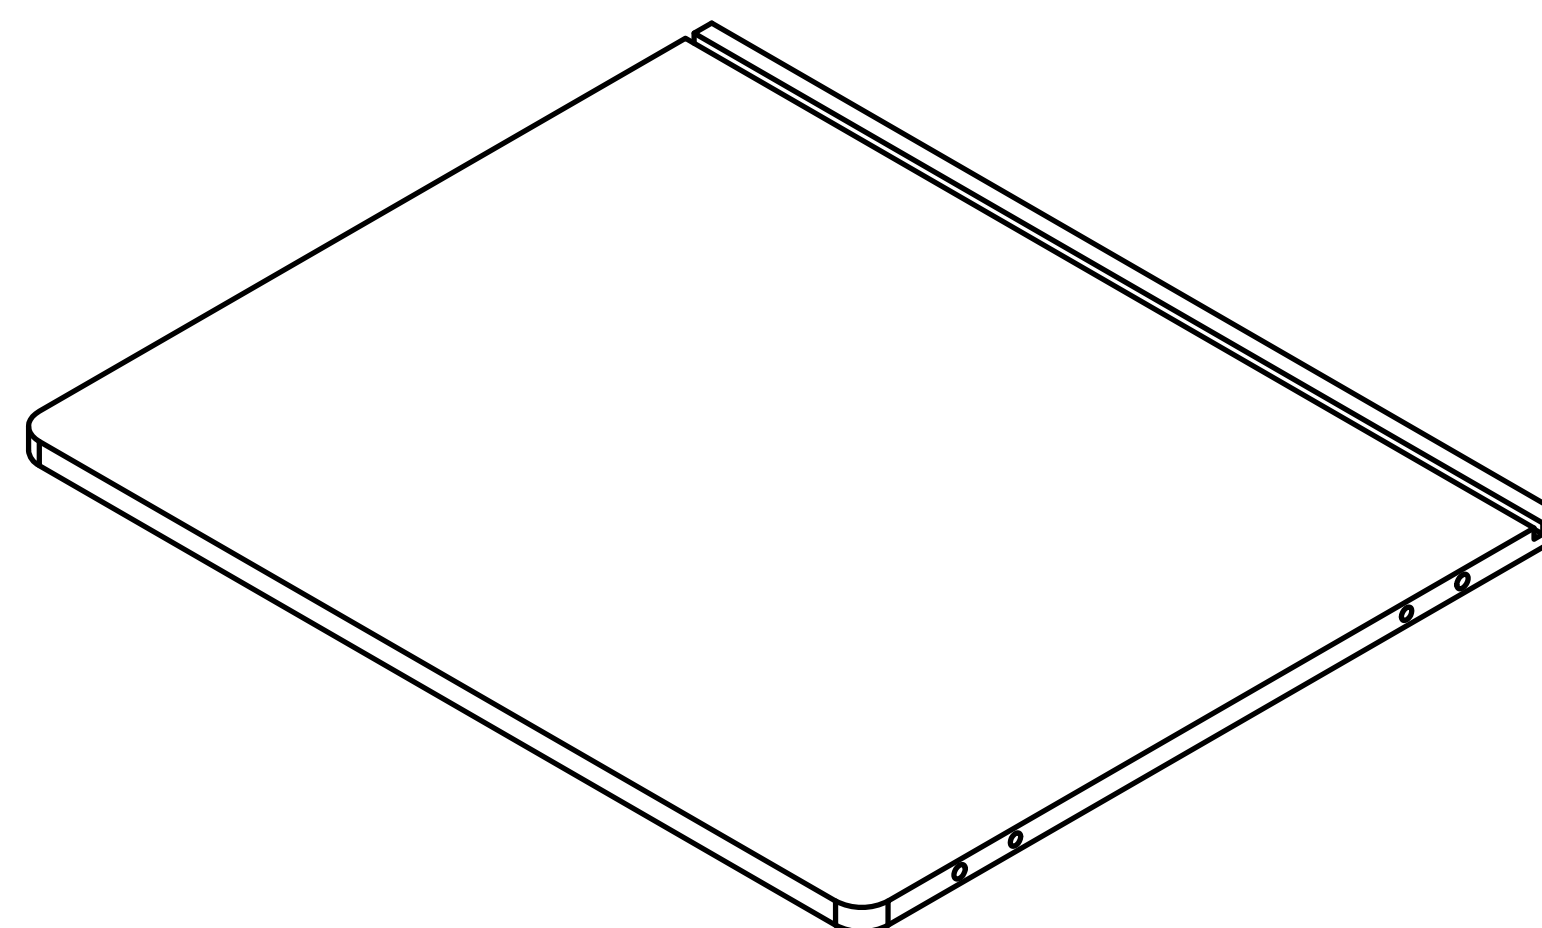 


Px1

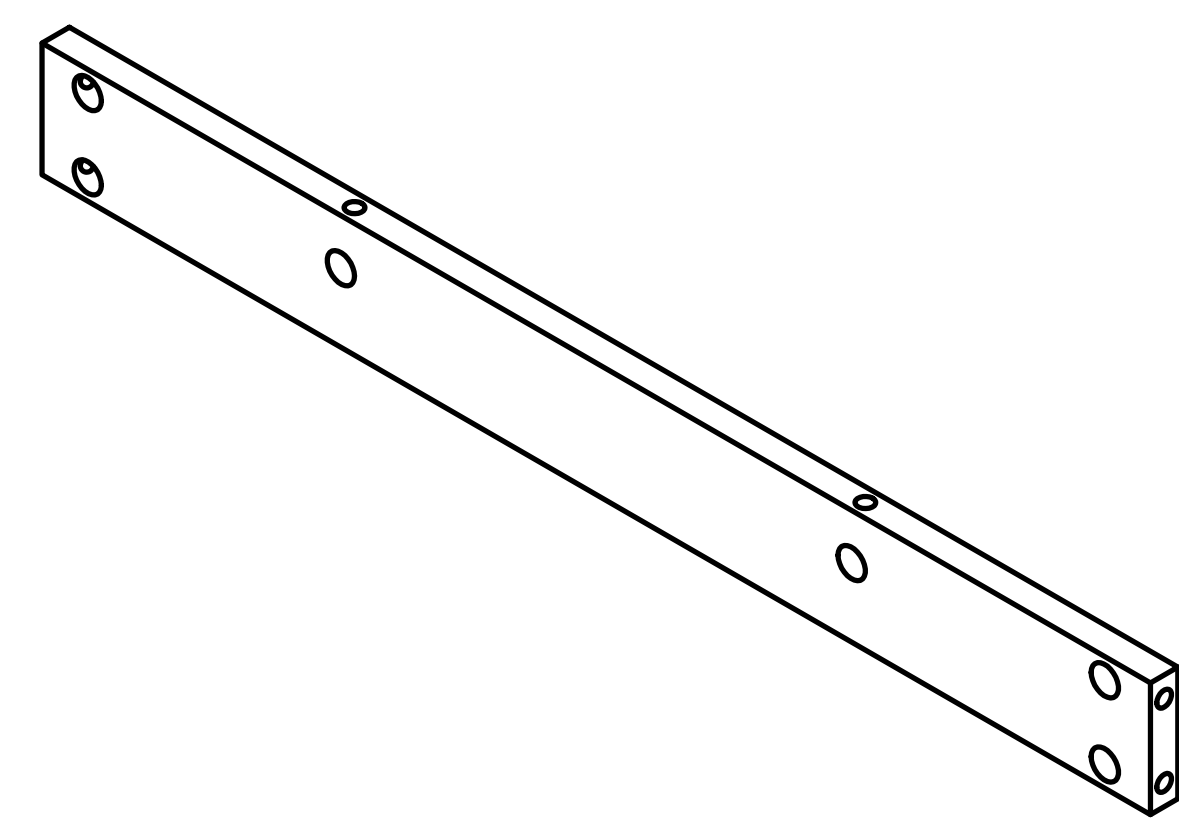 


Qx2

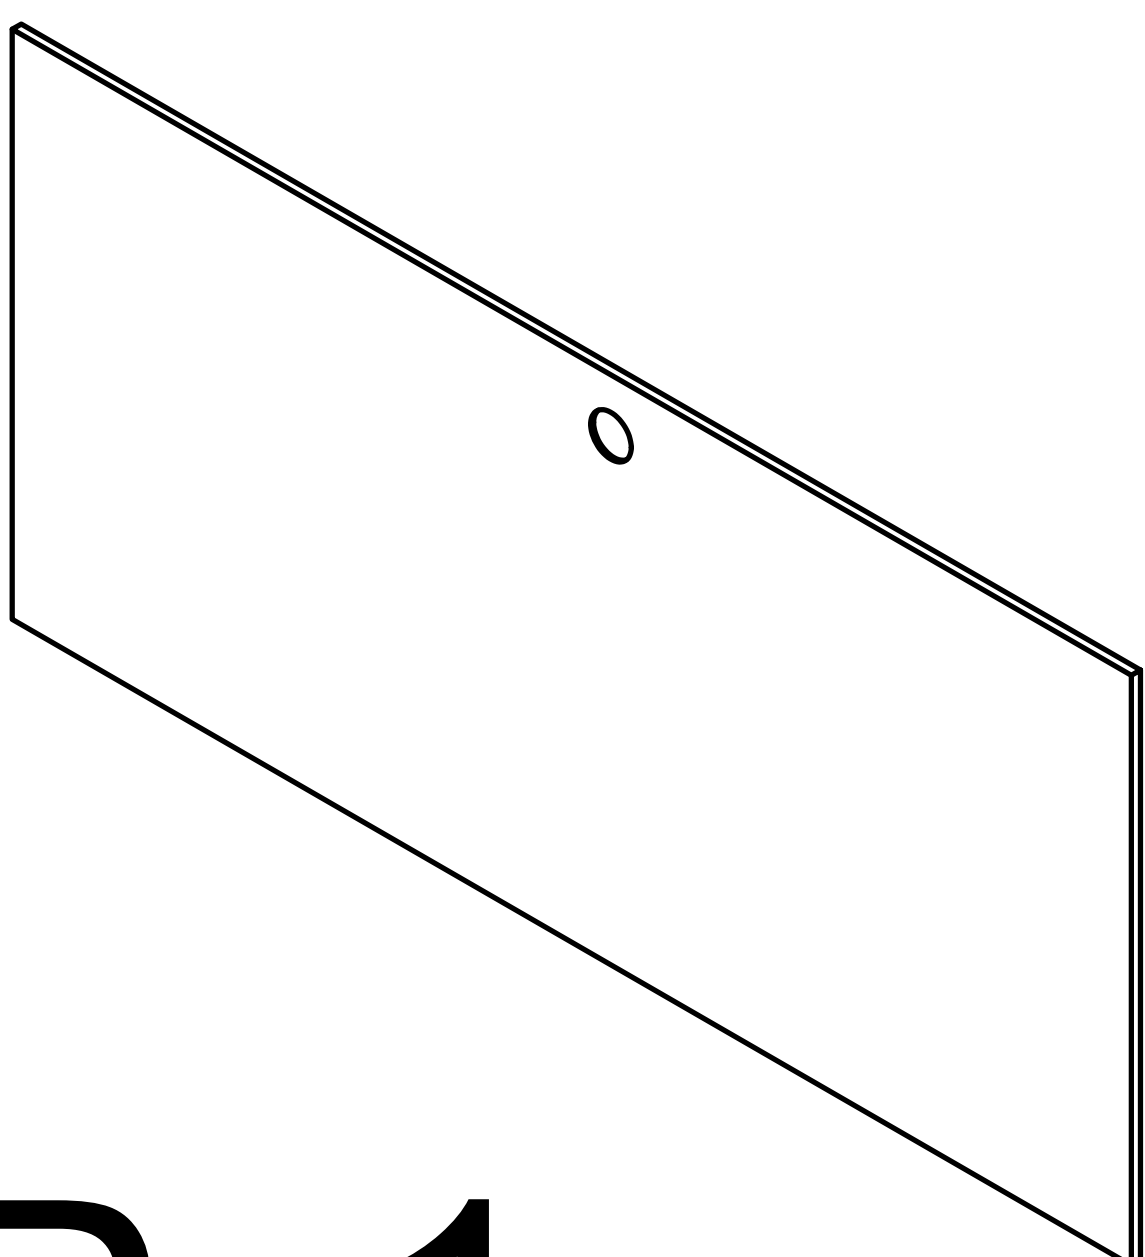 


Rx1

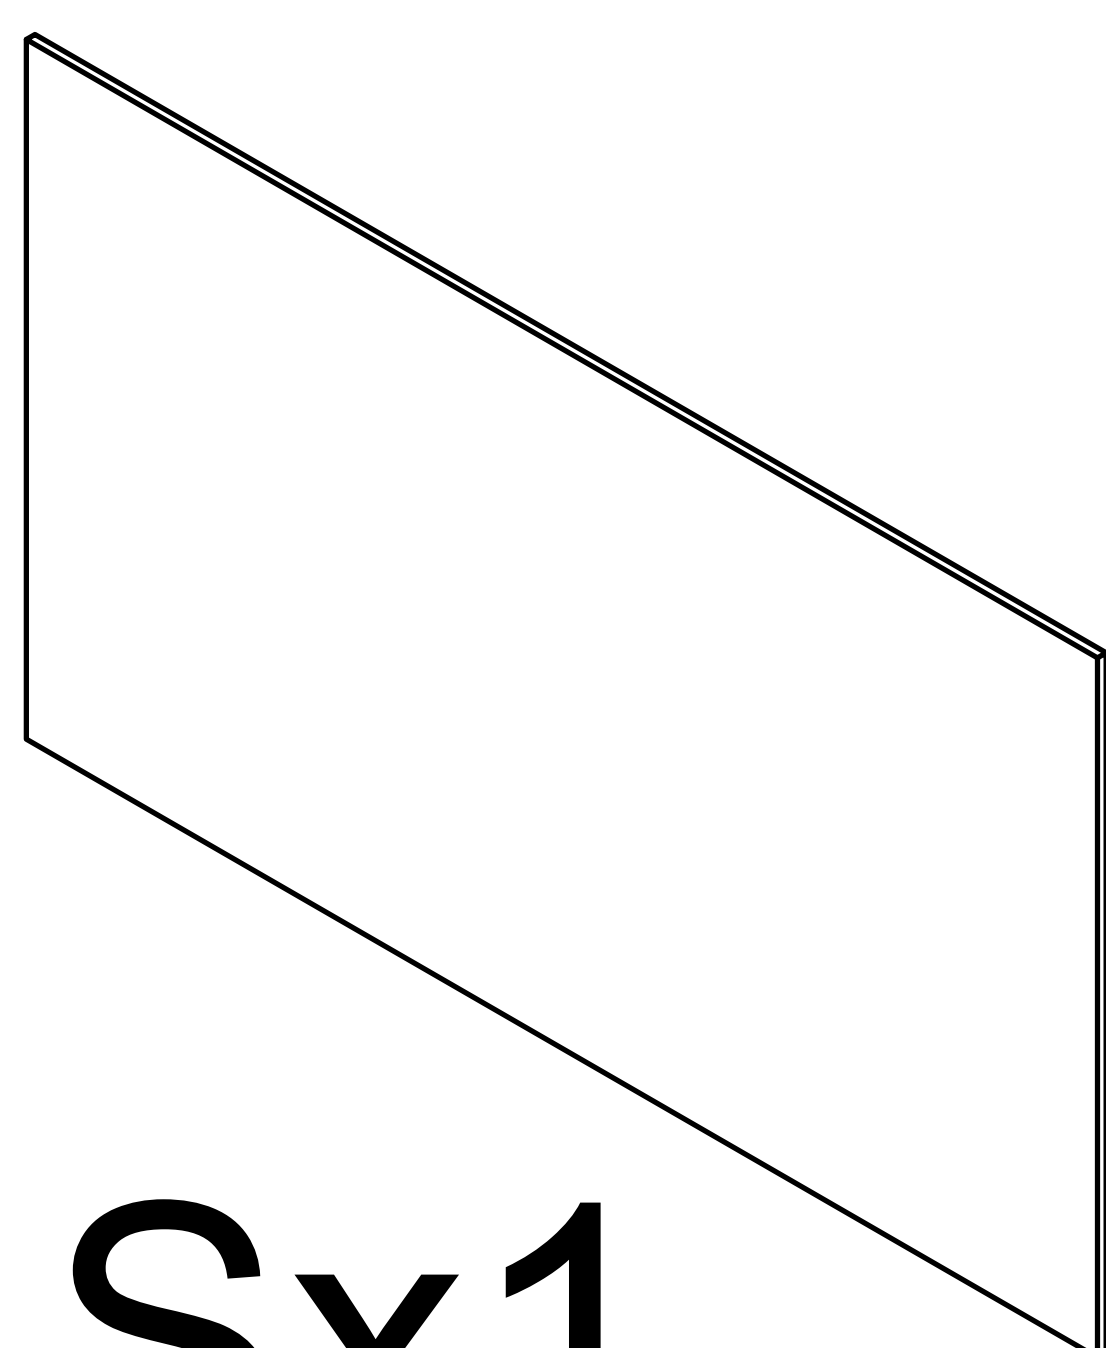 


Sx1

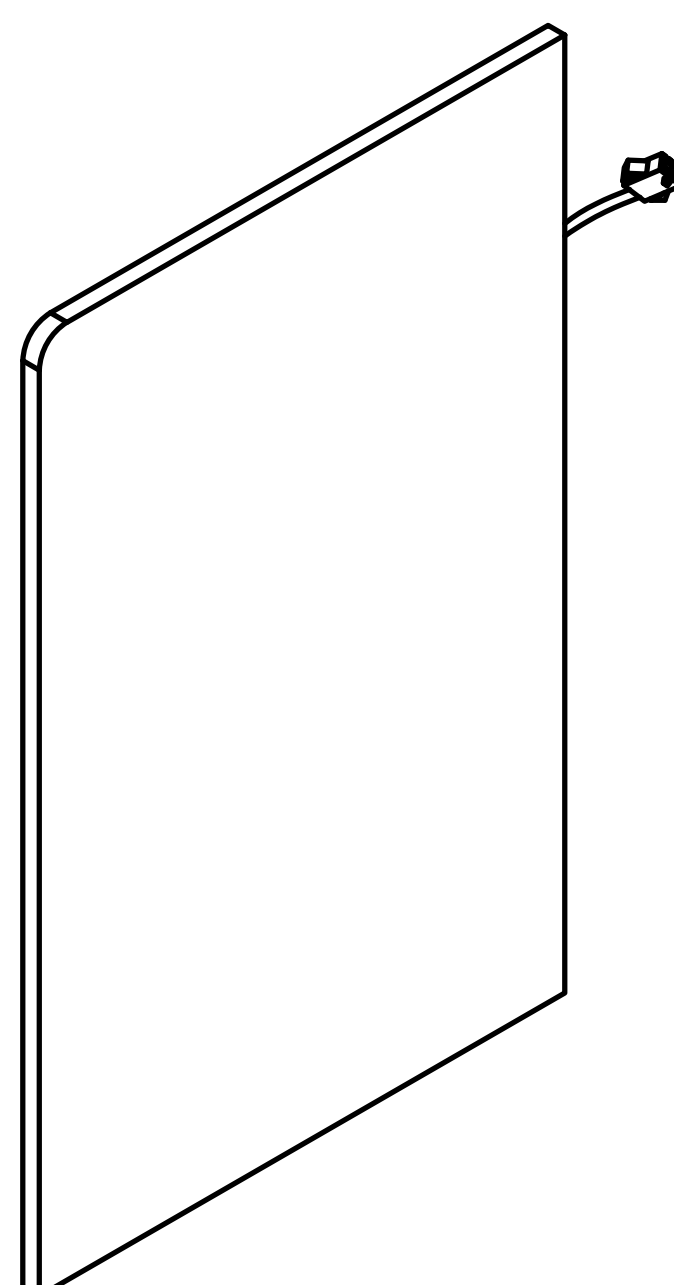 













Tx1

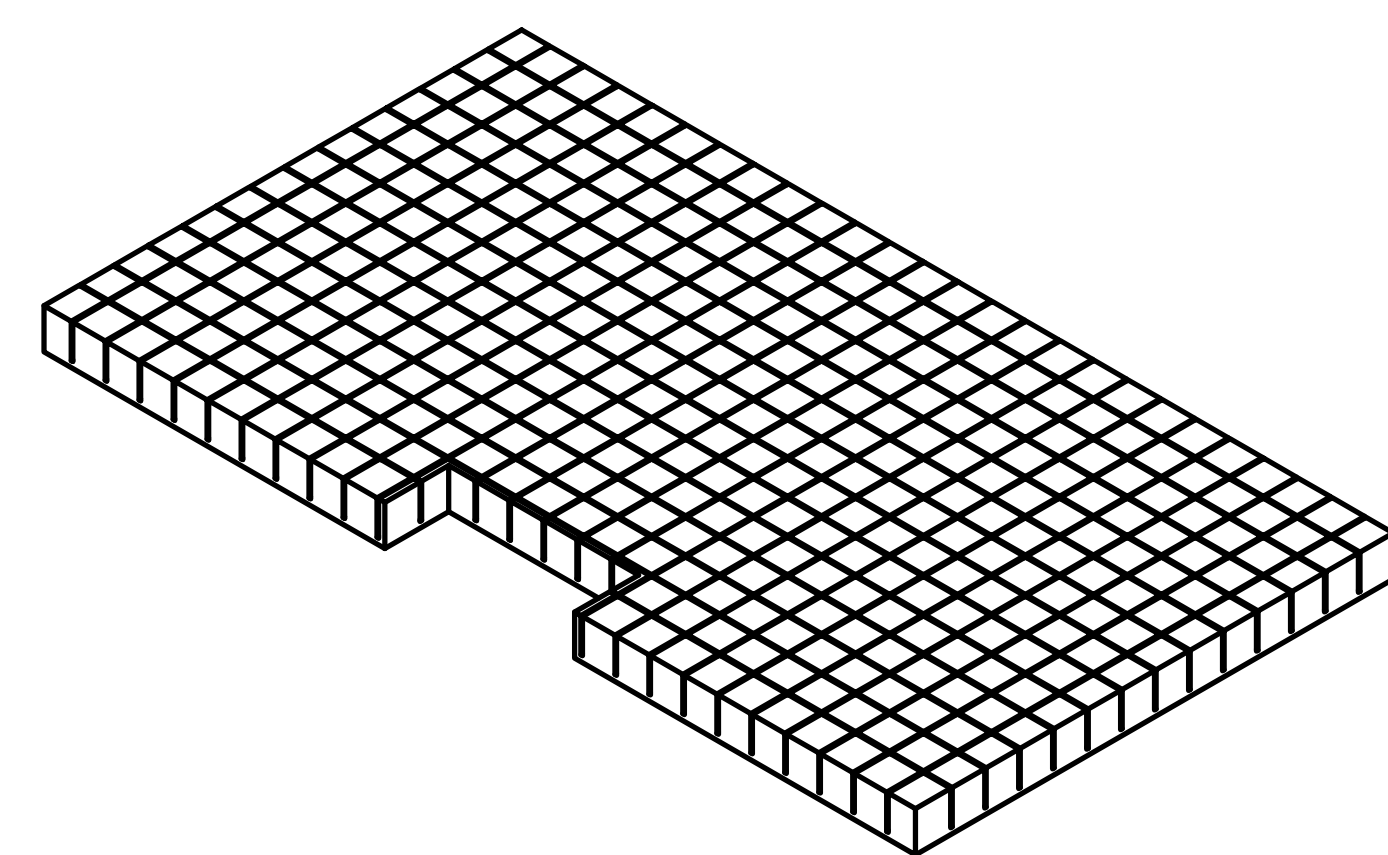 


Ux1

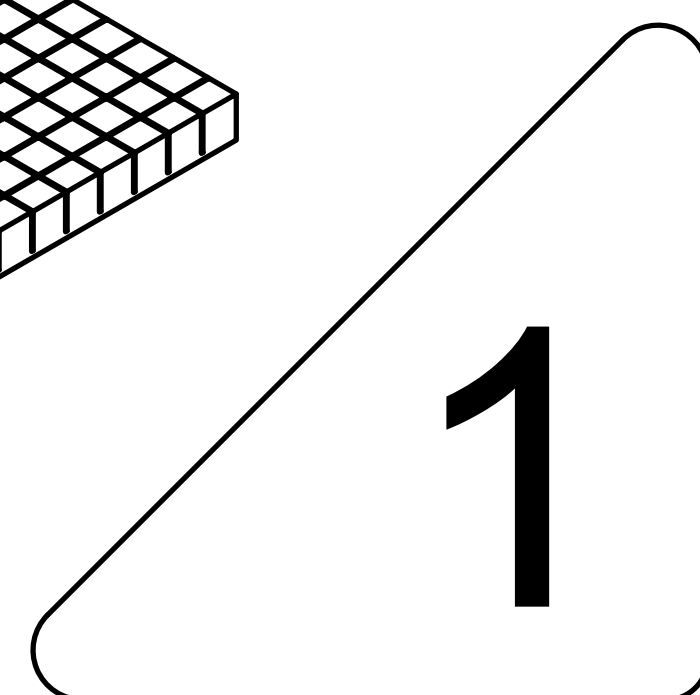 



1

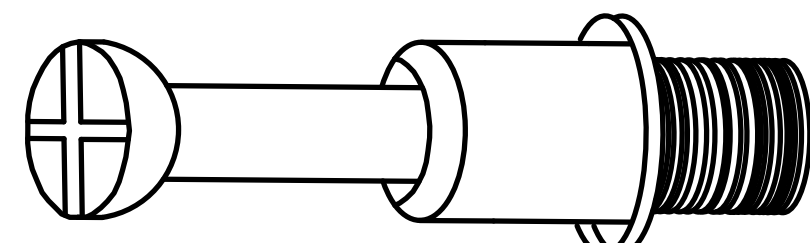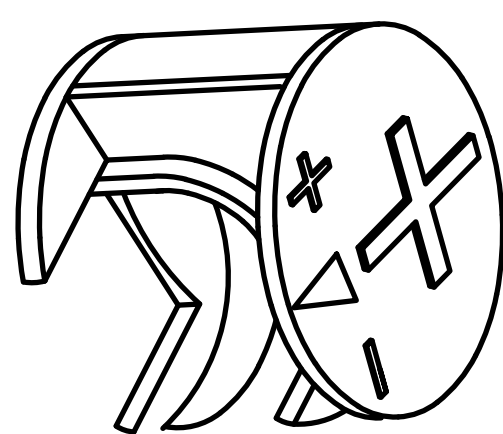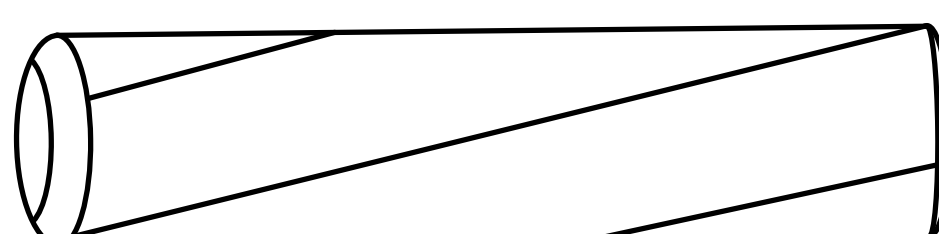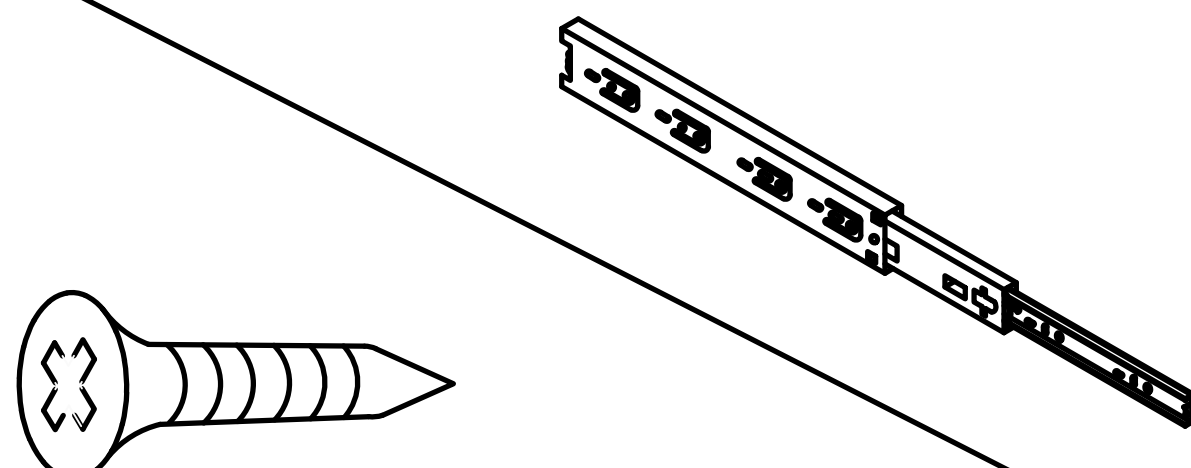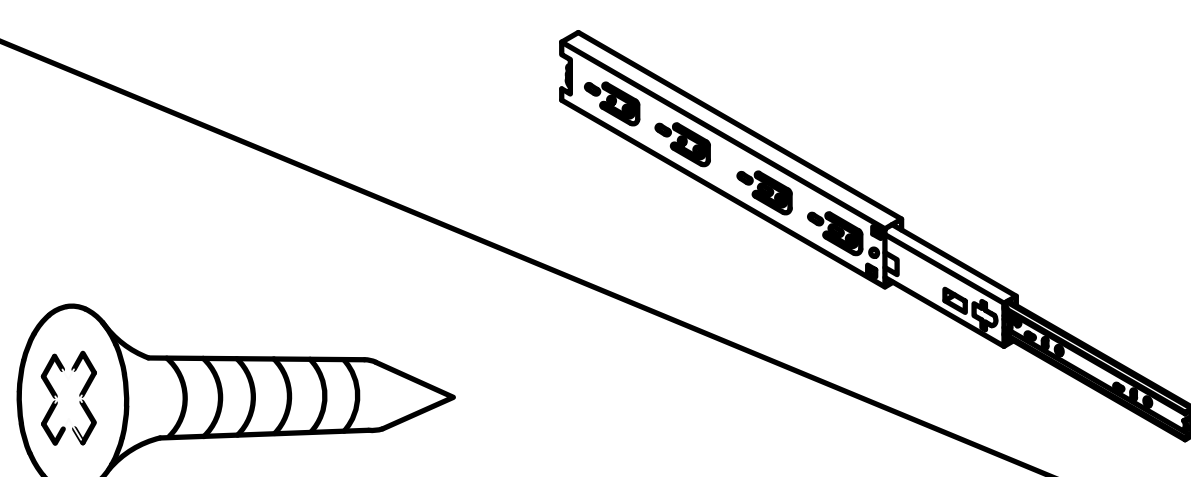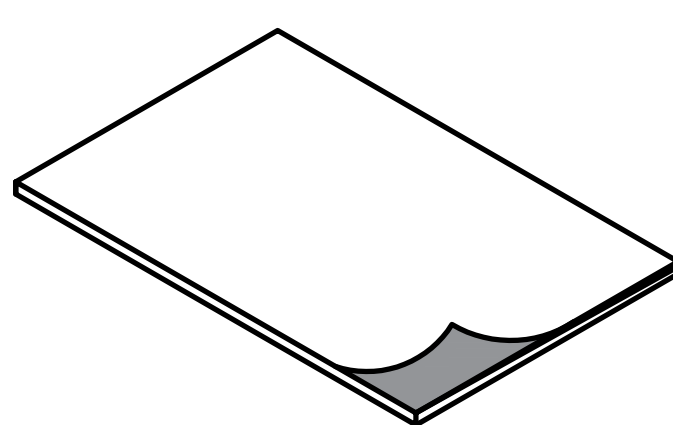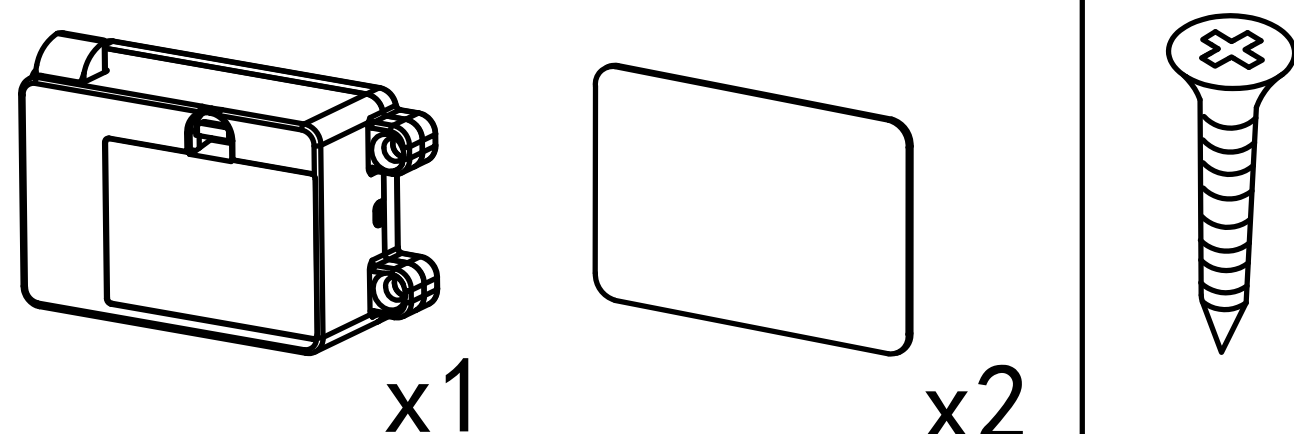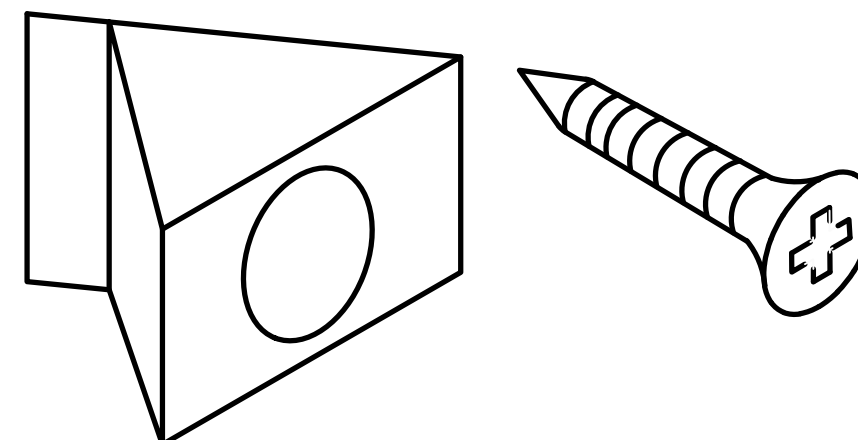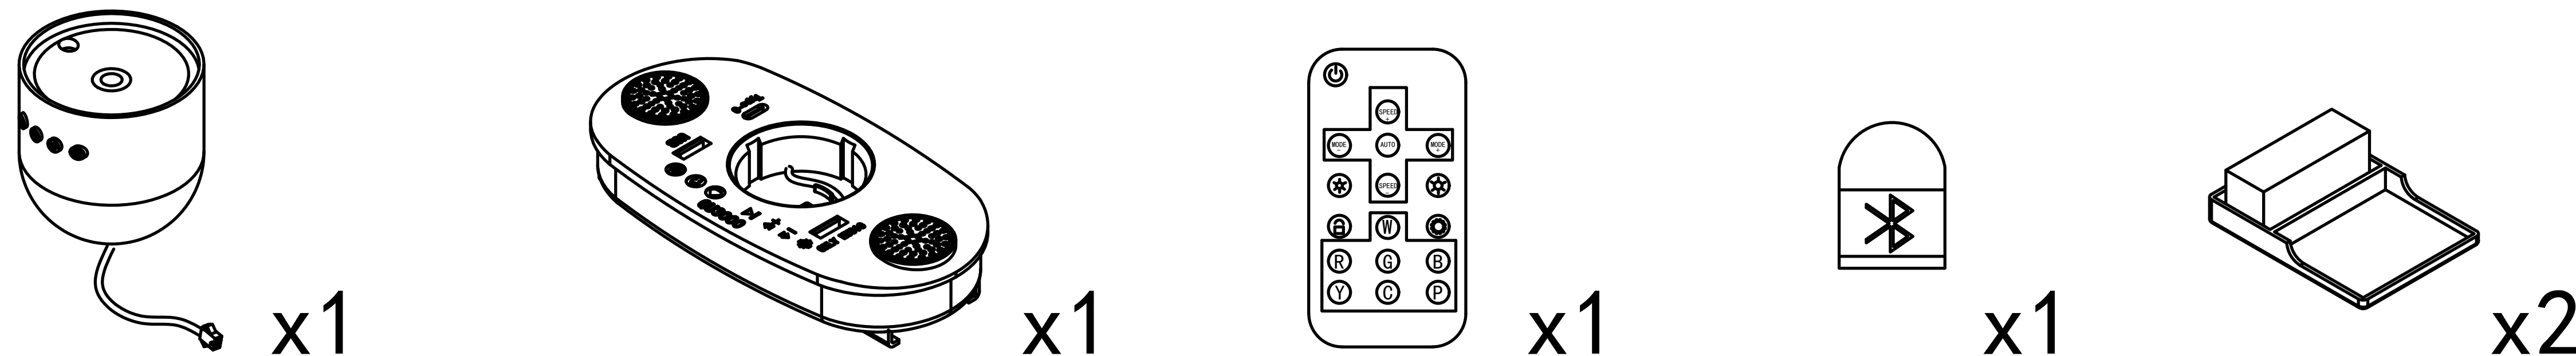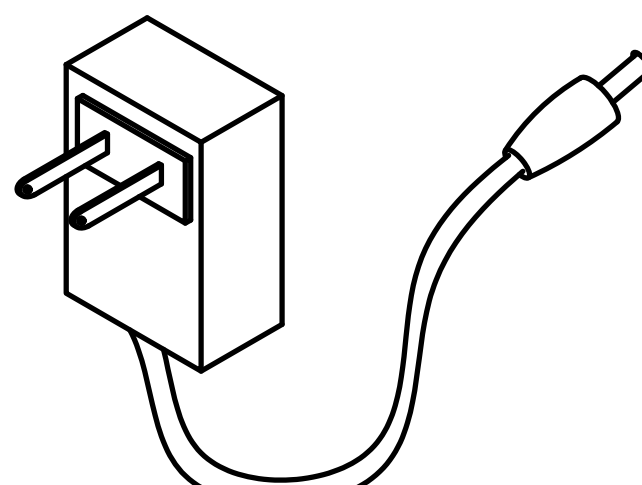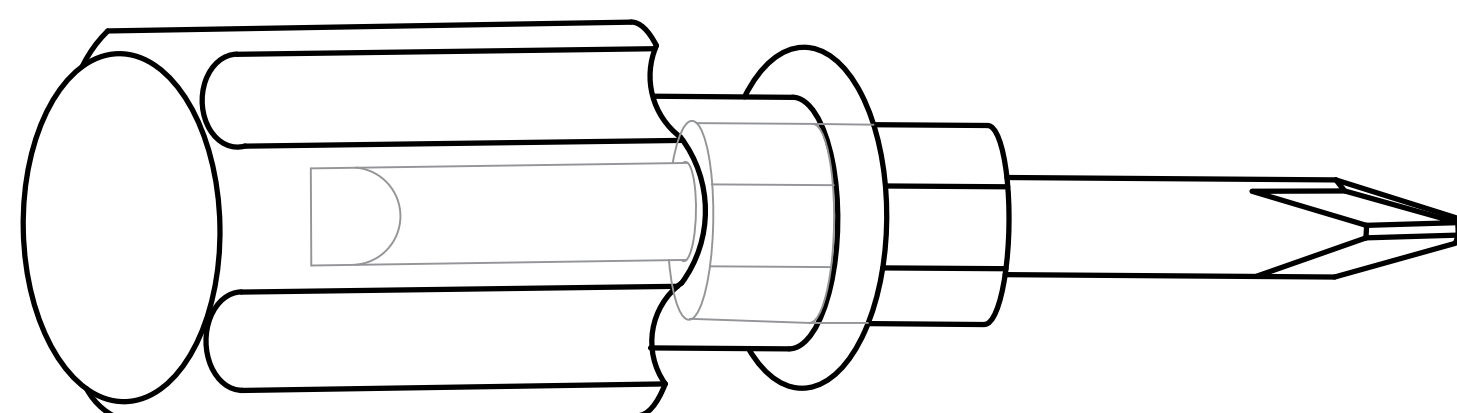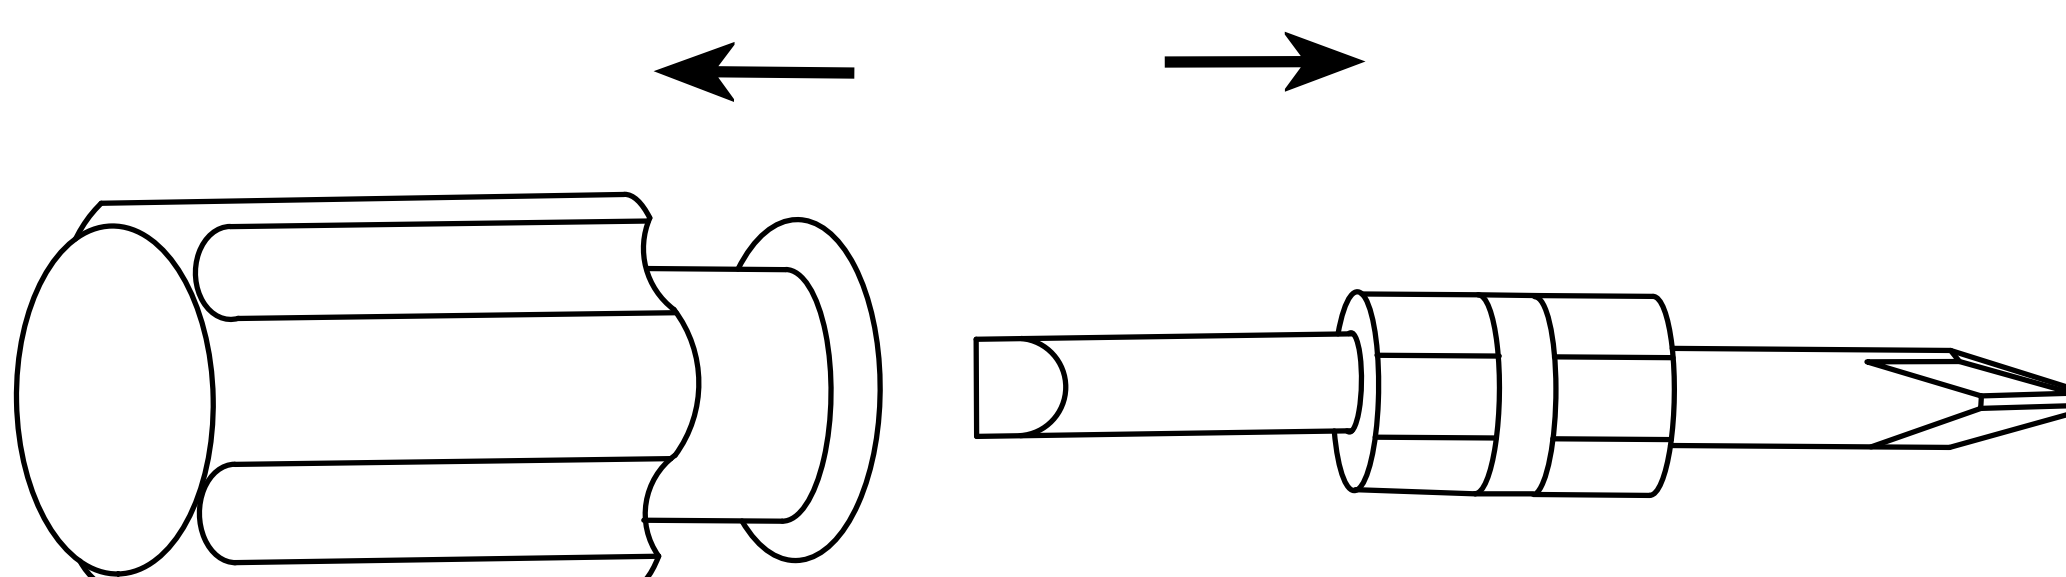            1		Two In One Screw (6x28mm)	56pcs +4pcs
2		Two In One Nut (10x12mm)	56pcs +4pcs
3		Wood Chipping (6x30mm)	12pcs +2pcs
4		Screw & Guide (24cm) (3.5x12mm)	10pcs +2pcs 2pcs
5		Screw & Guide (29cm) (3.5x12mm)	20pcs +4pcs 4pcs
6		Non-slip pads (50x10mm)	4pcs +2pcs
7		Smart card lock device & Screw (3.5x20mm)	1pcs 4pcs +1pcs
8		Fixing Clip & Screw (3x16mm)	4pcs +1pcs
Electronic Module Assembly			1pcs
			
			1pcs
			2
1pcs			
			Double-head screwdriver, use as required
2			

   Product structure decomposition

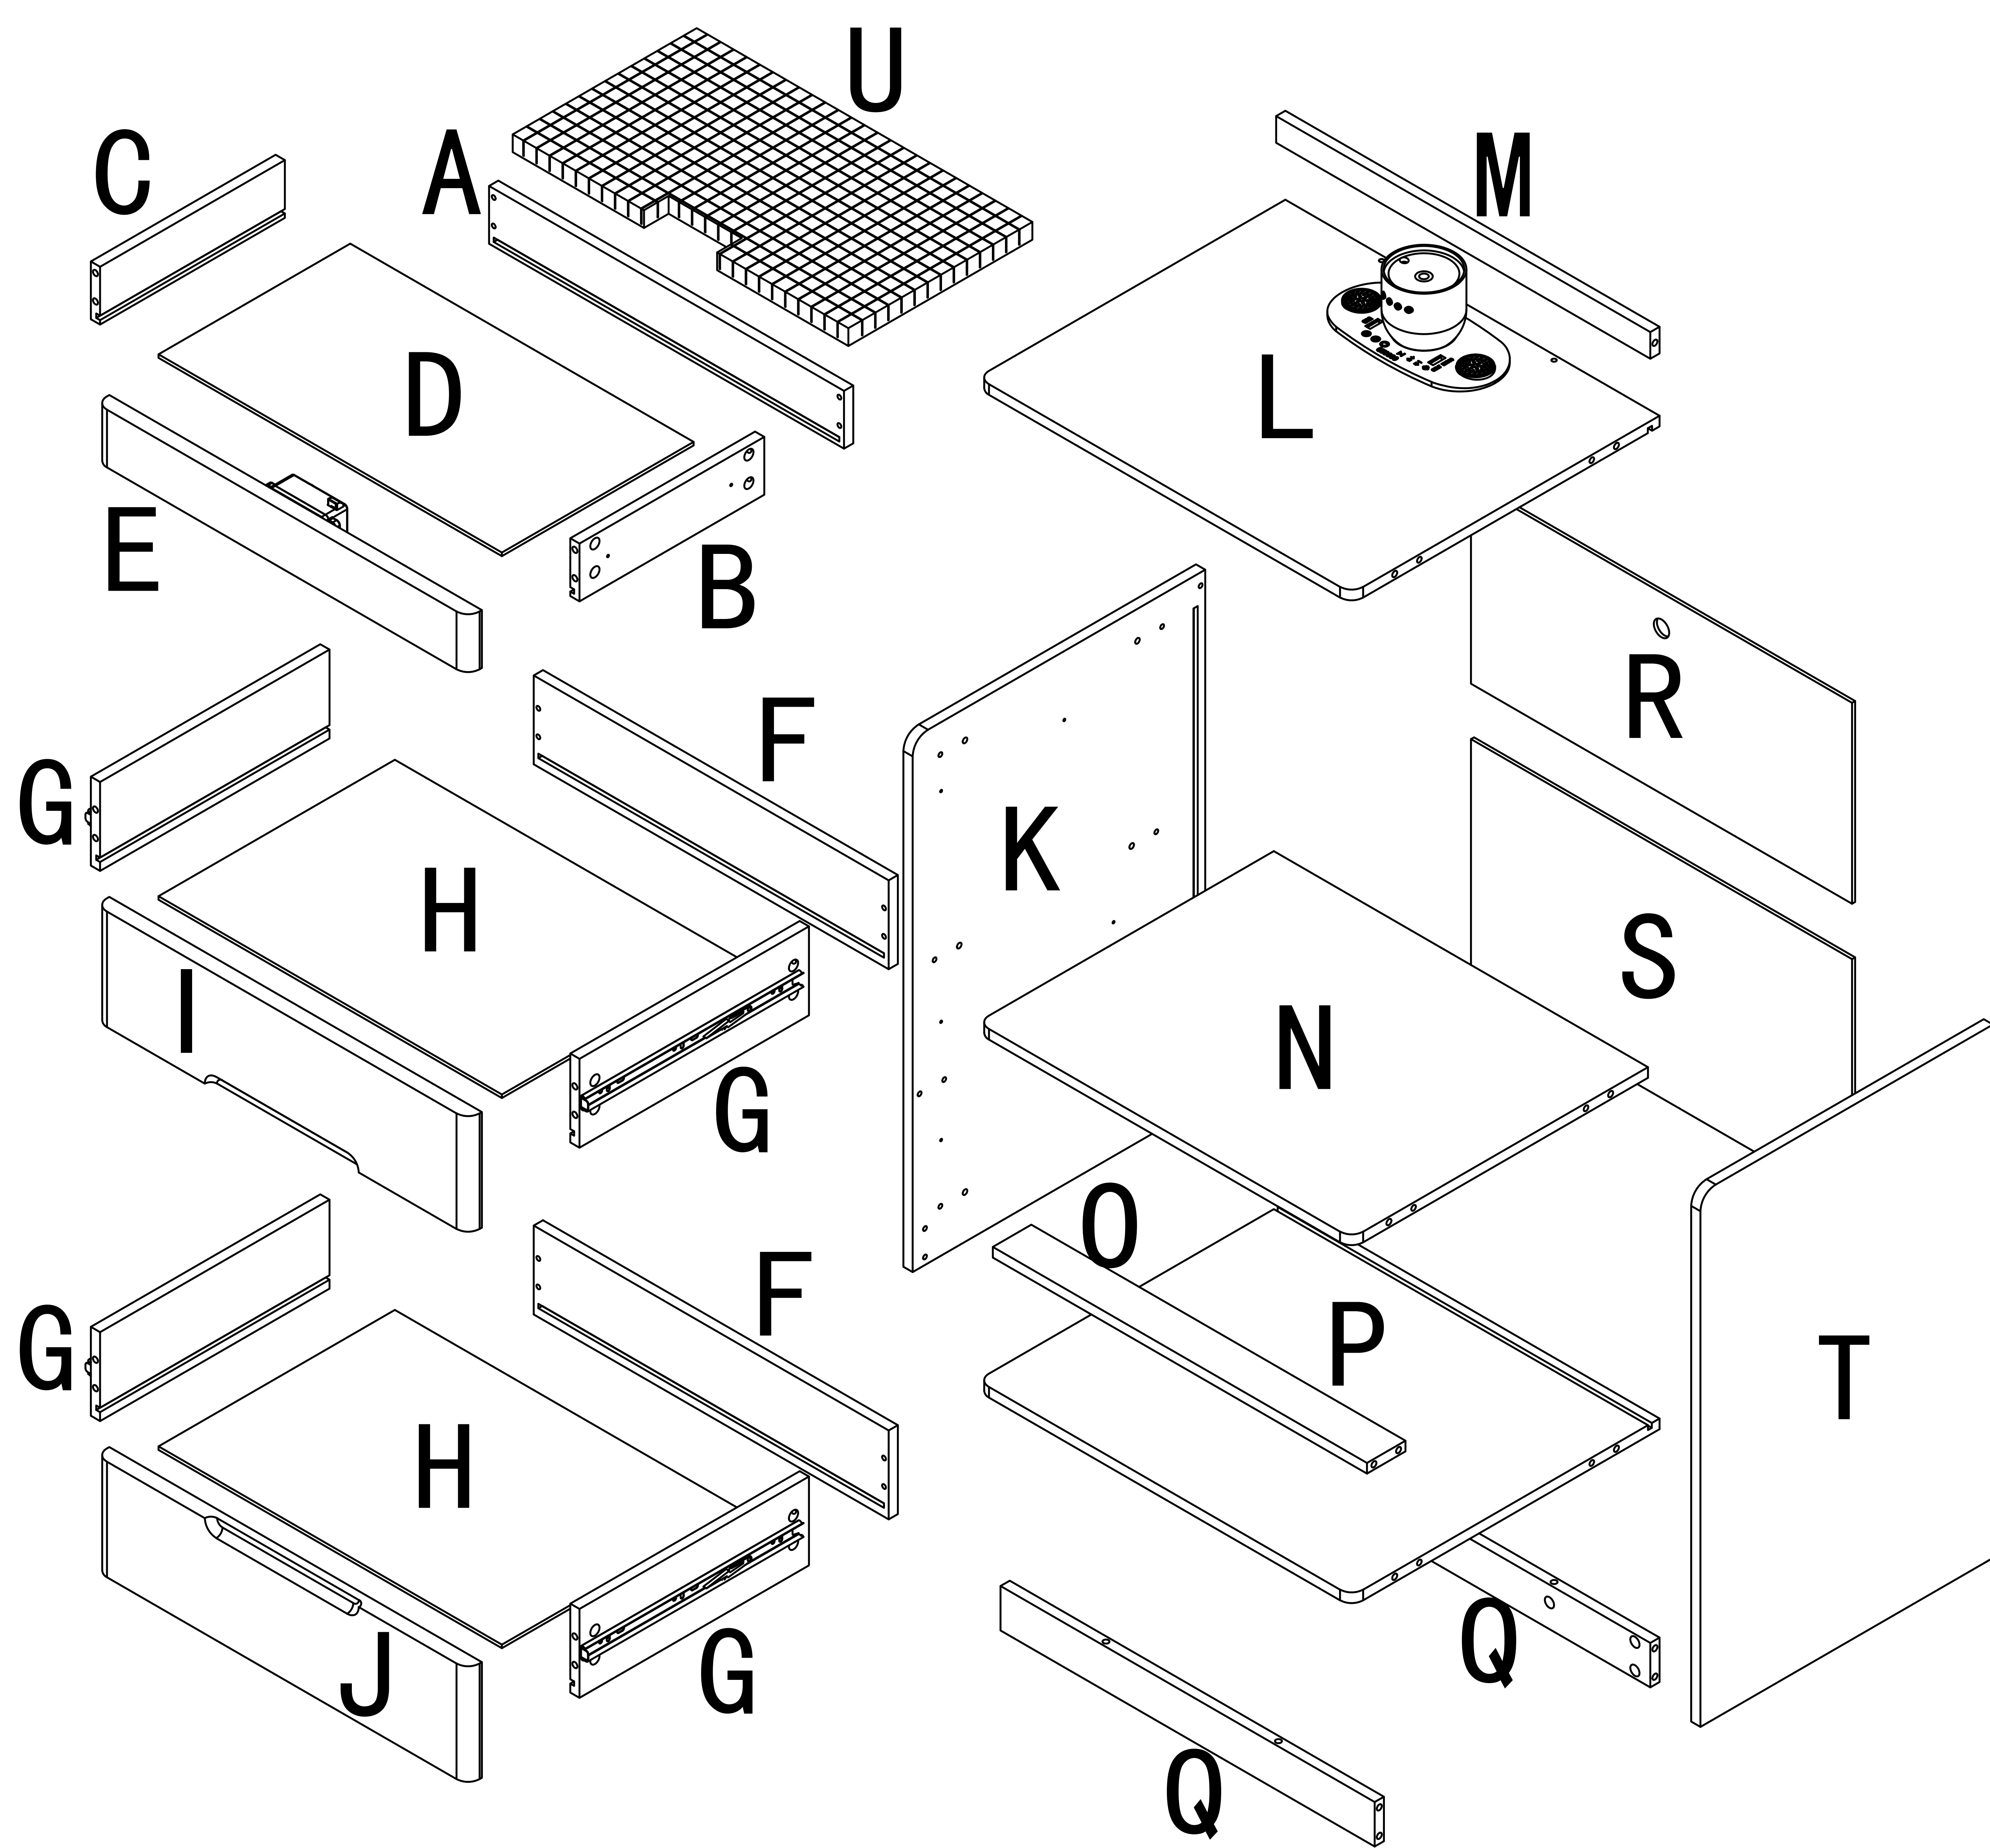

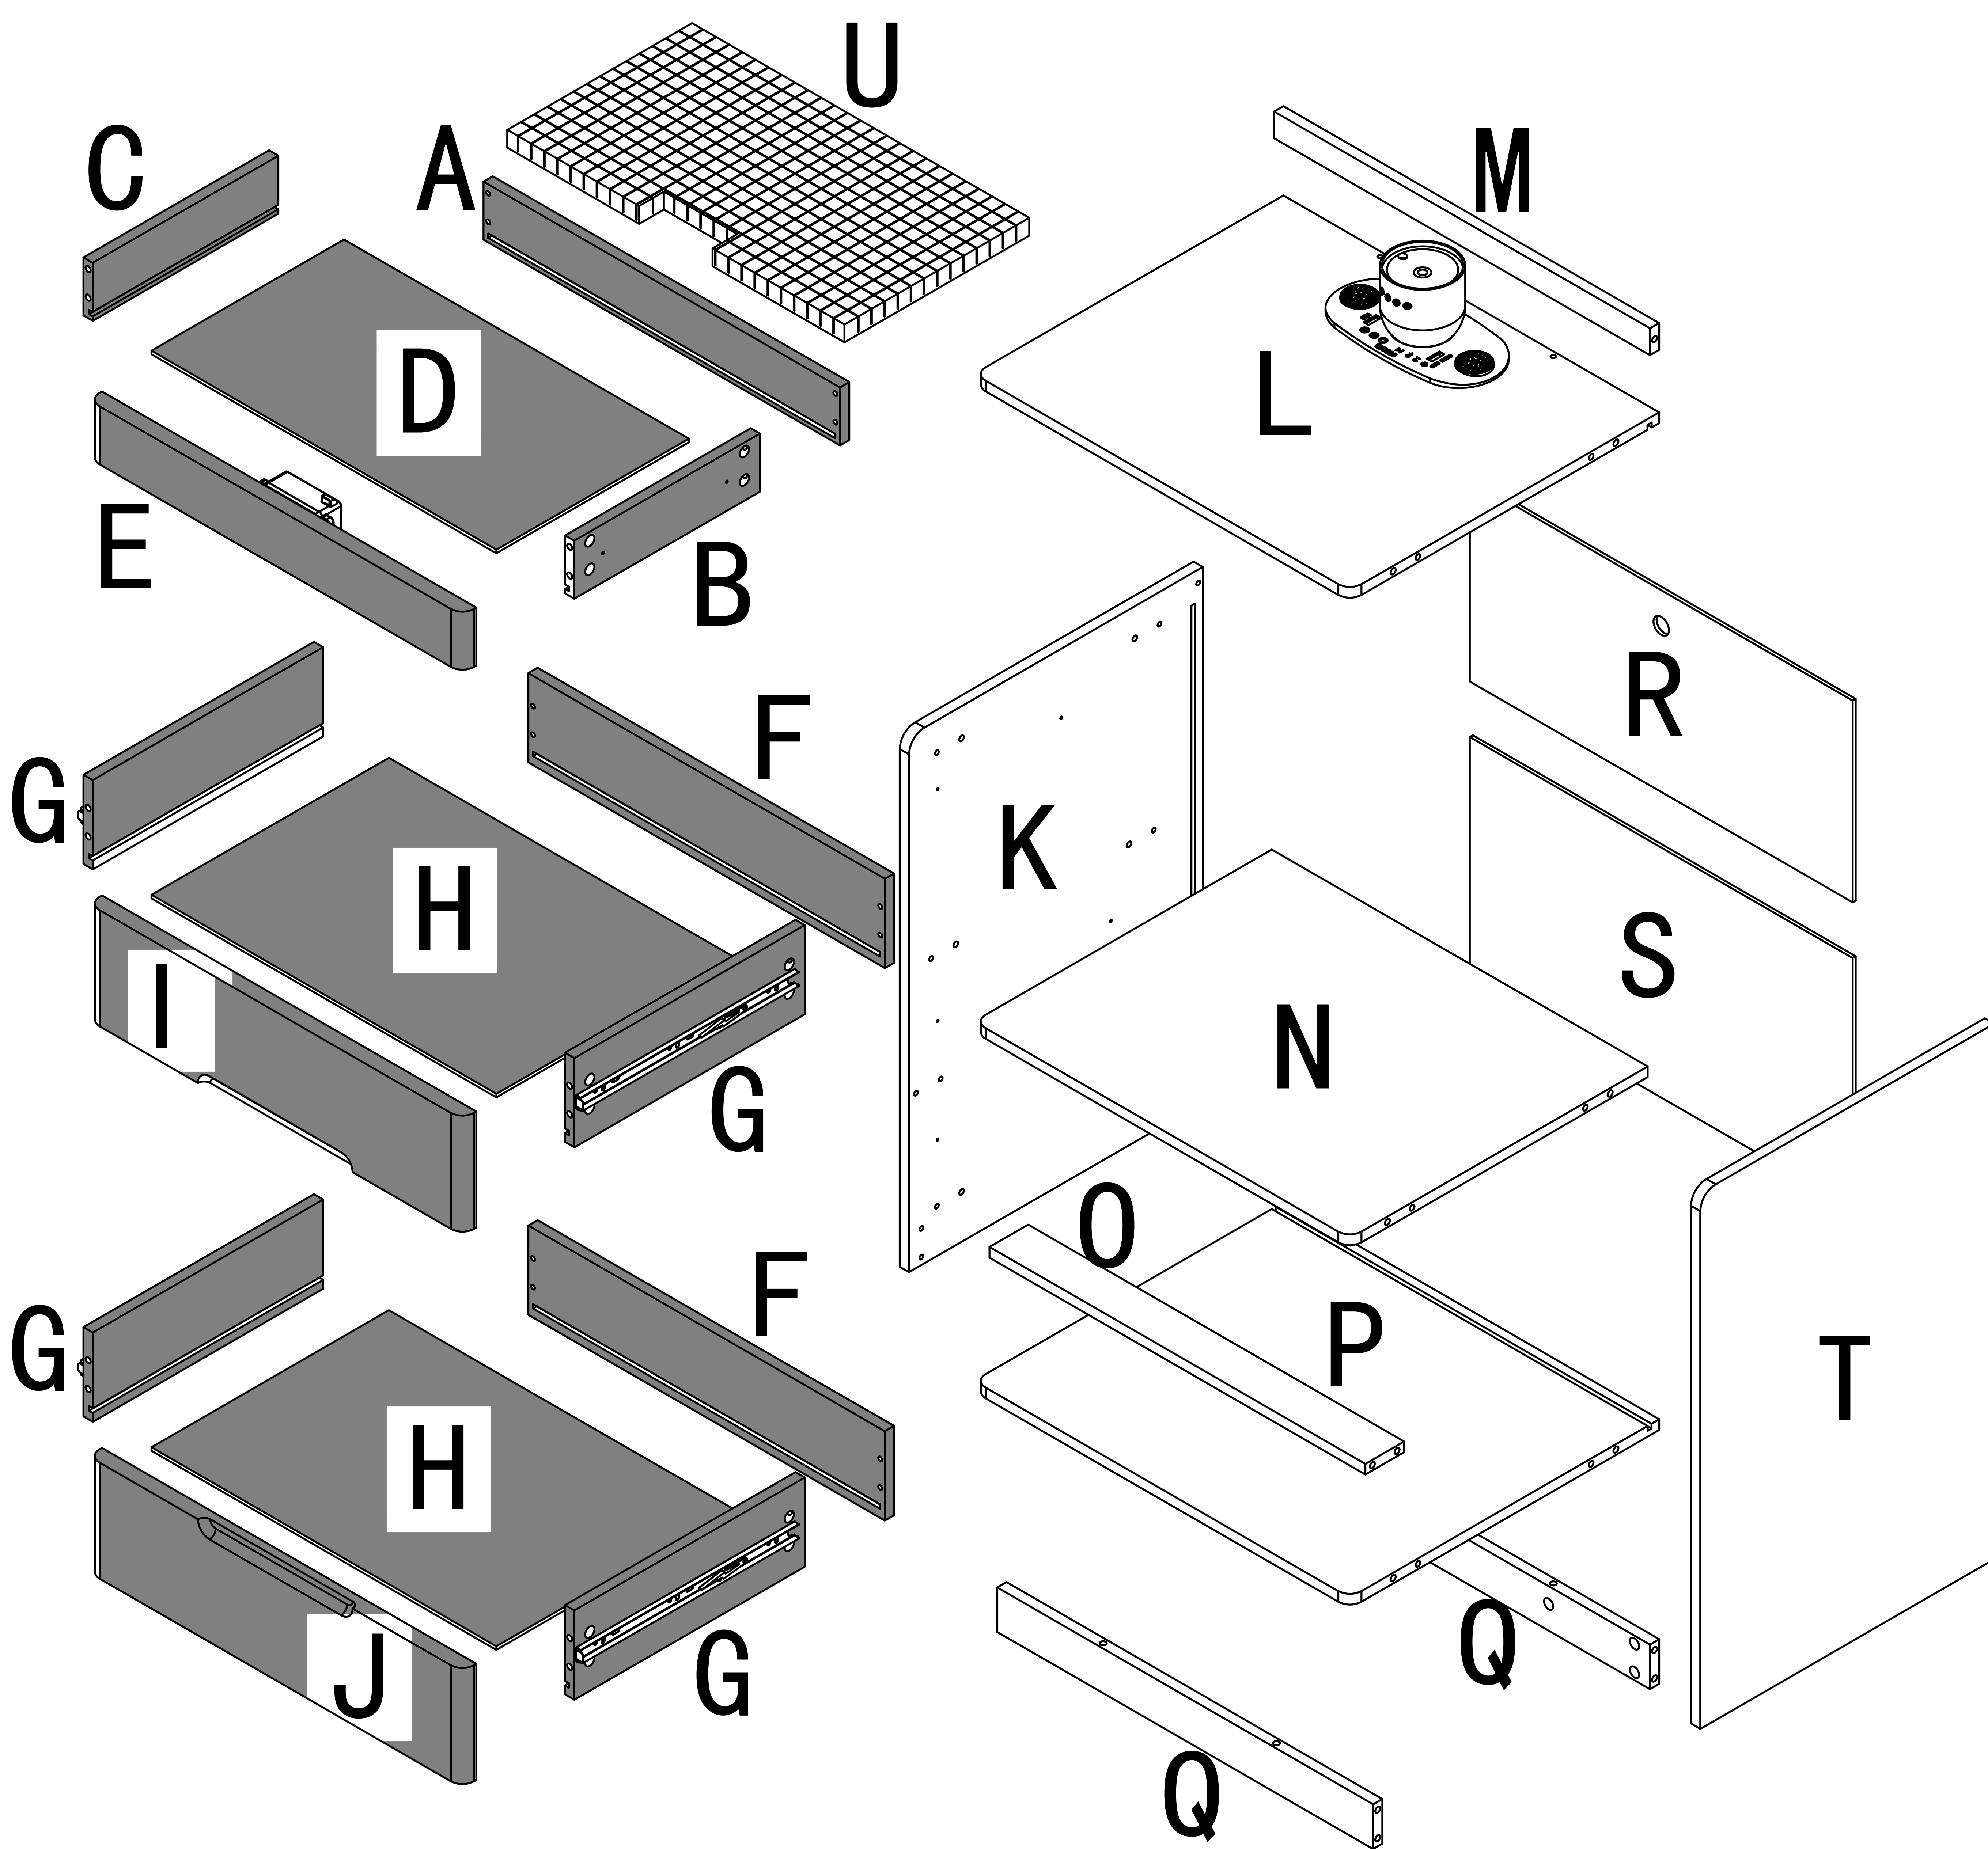

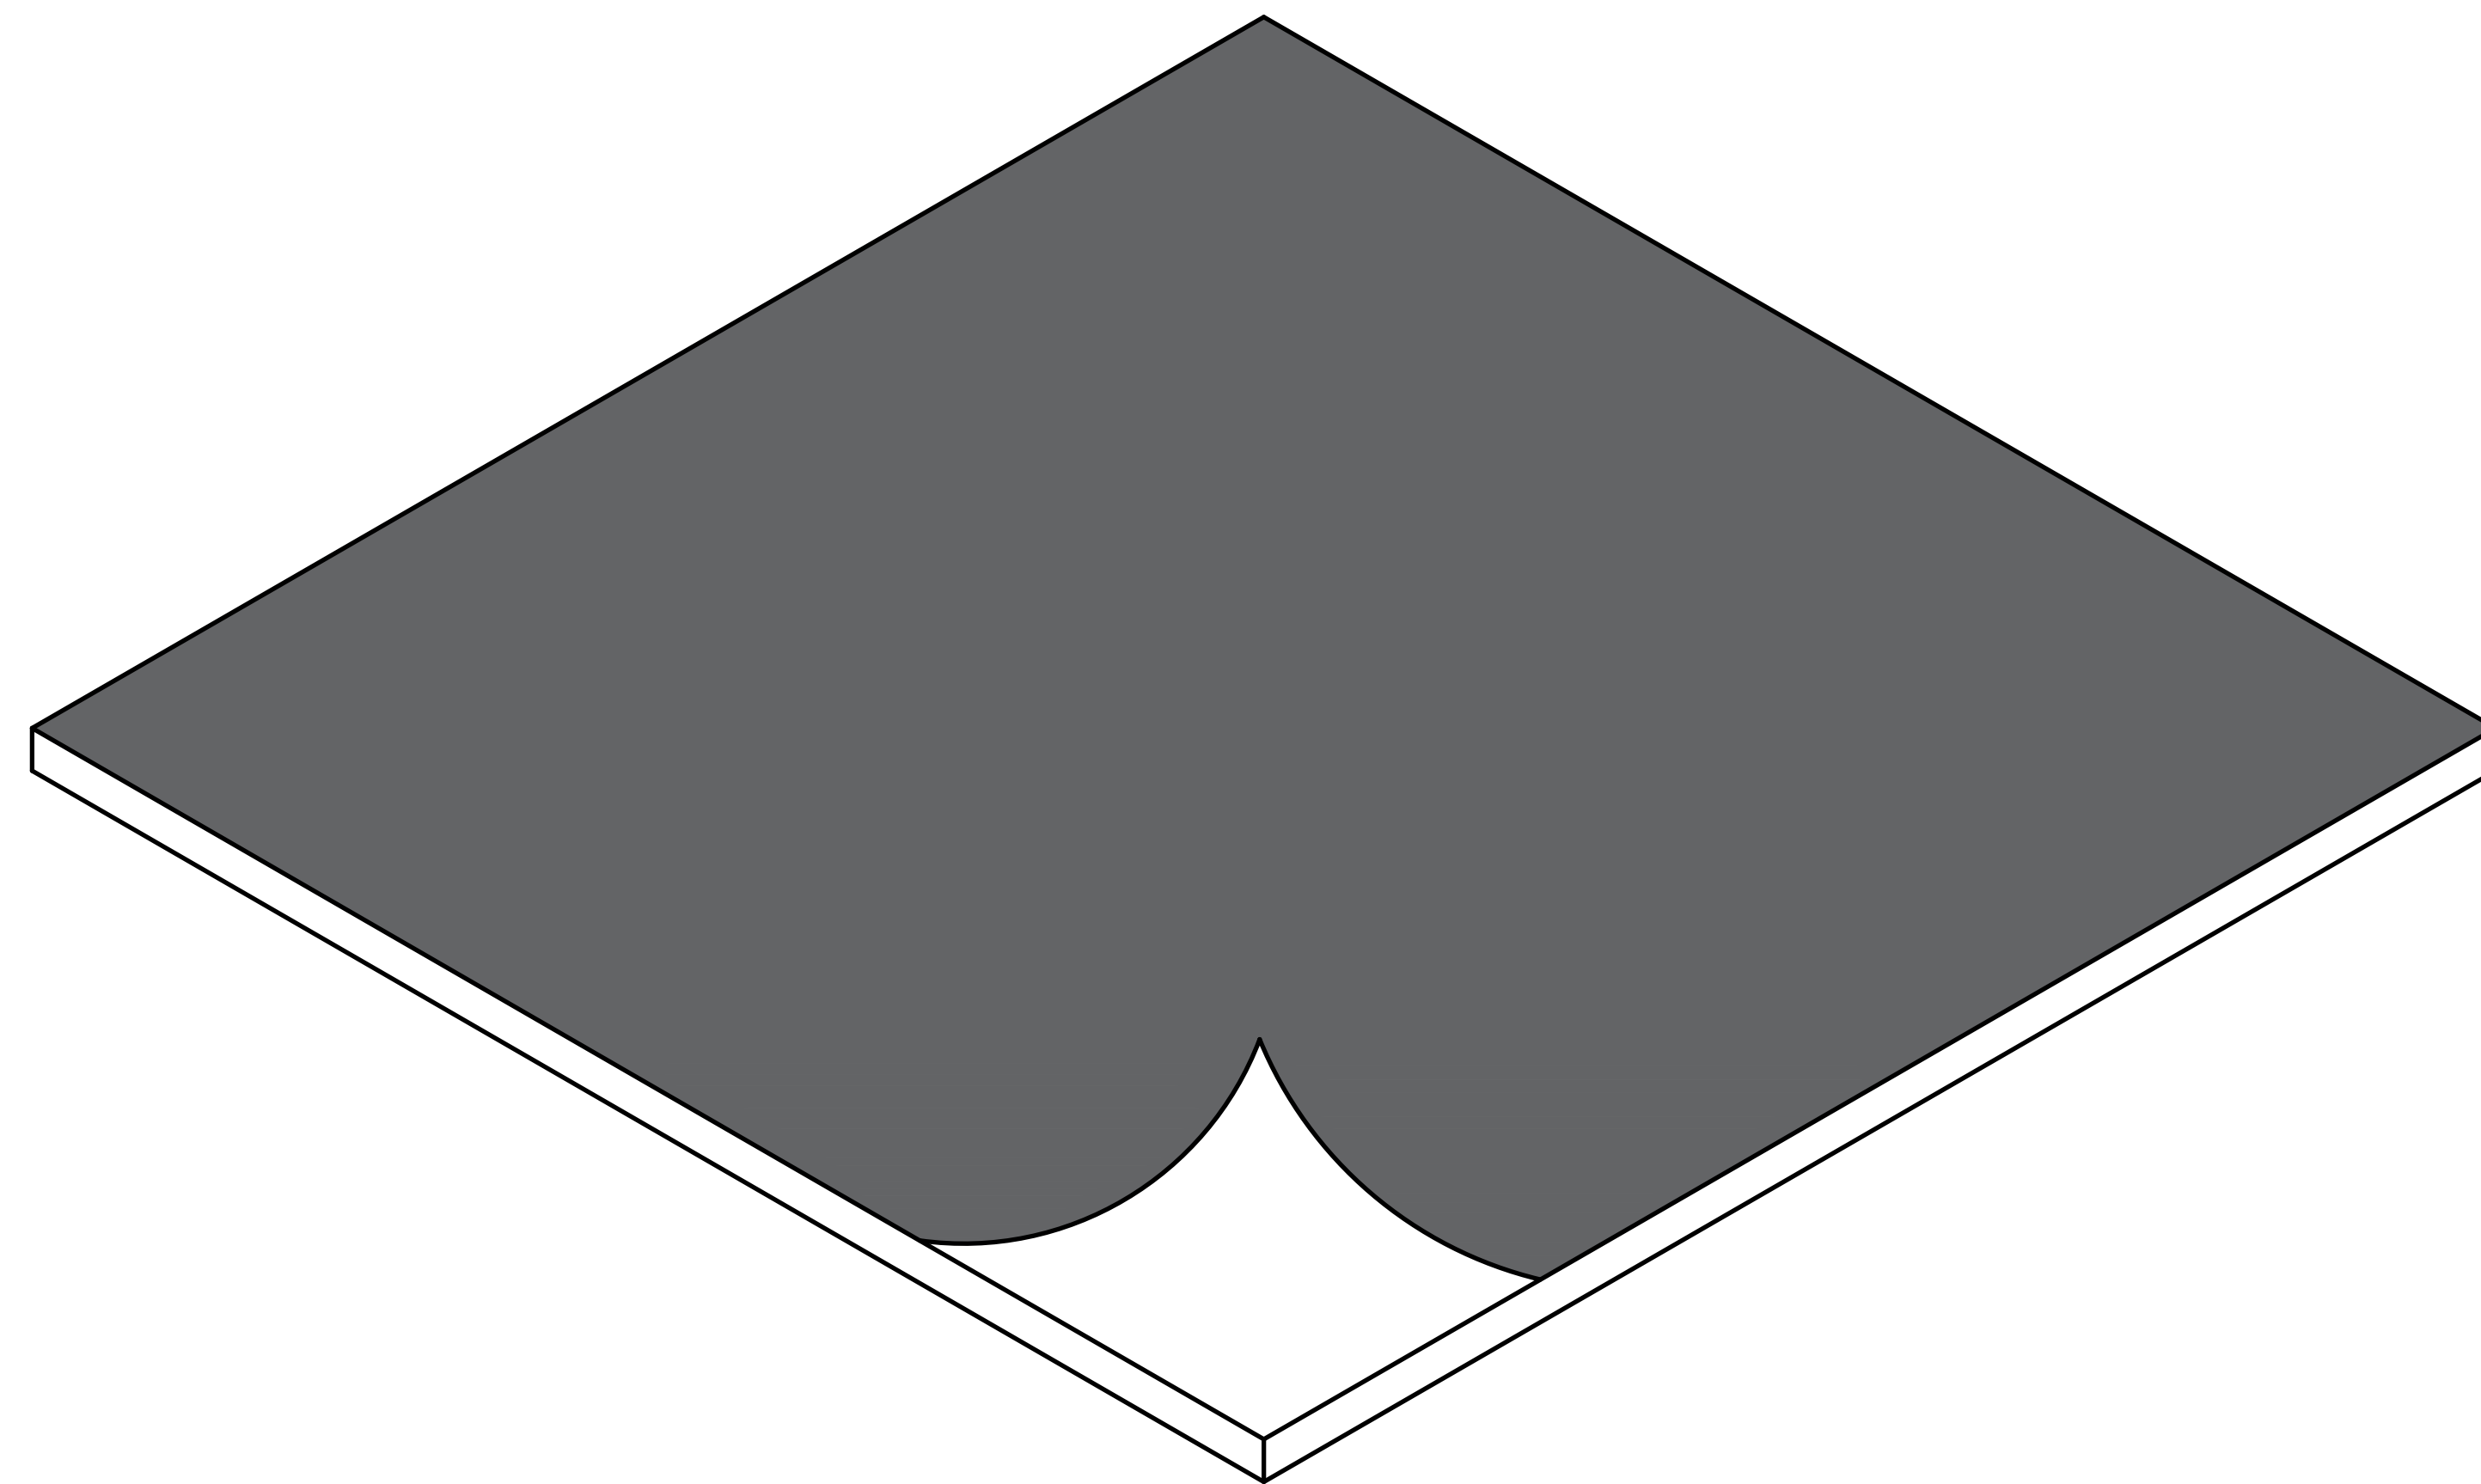

The plates used in this product are bright plates,

With a transparent protective film

 
The function of the protective film is prevent the product from
being scratched during transportation

Please remove the protective film before installing the product,


Avoid difficult removal of the protective film after installation

Use parts ① and ②




Step1

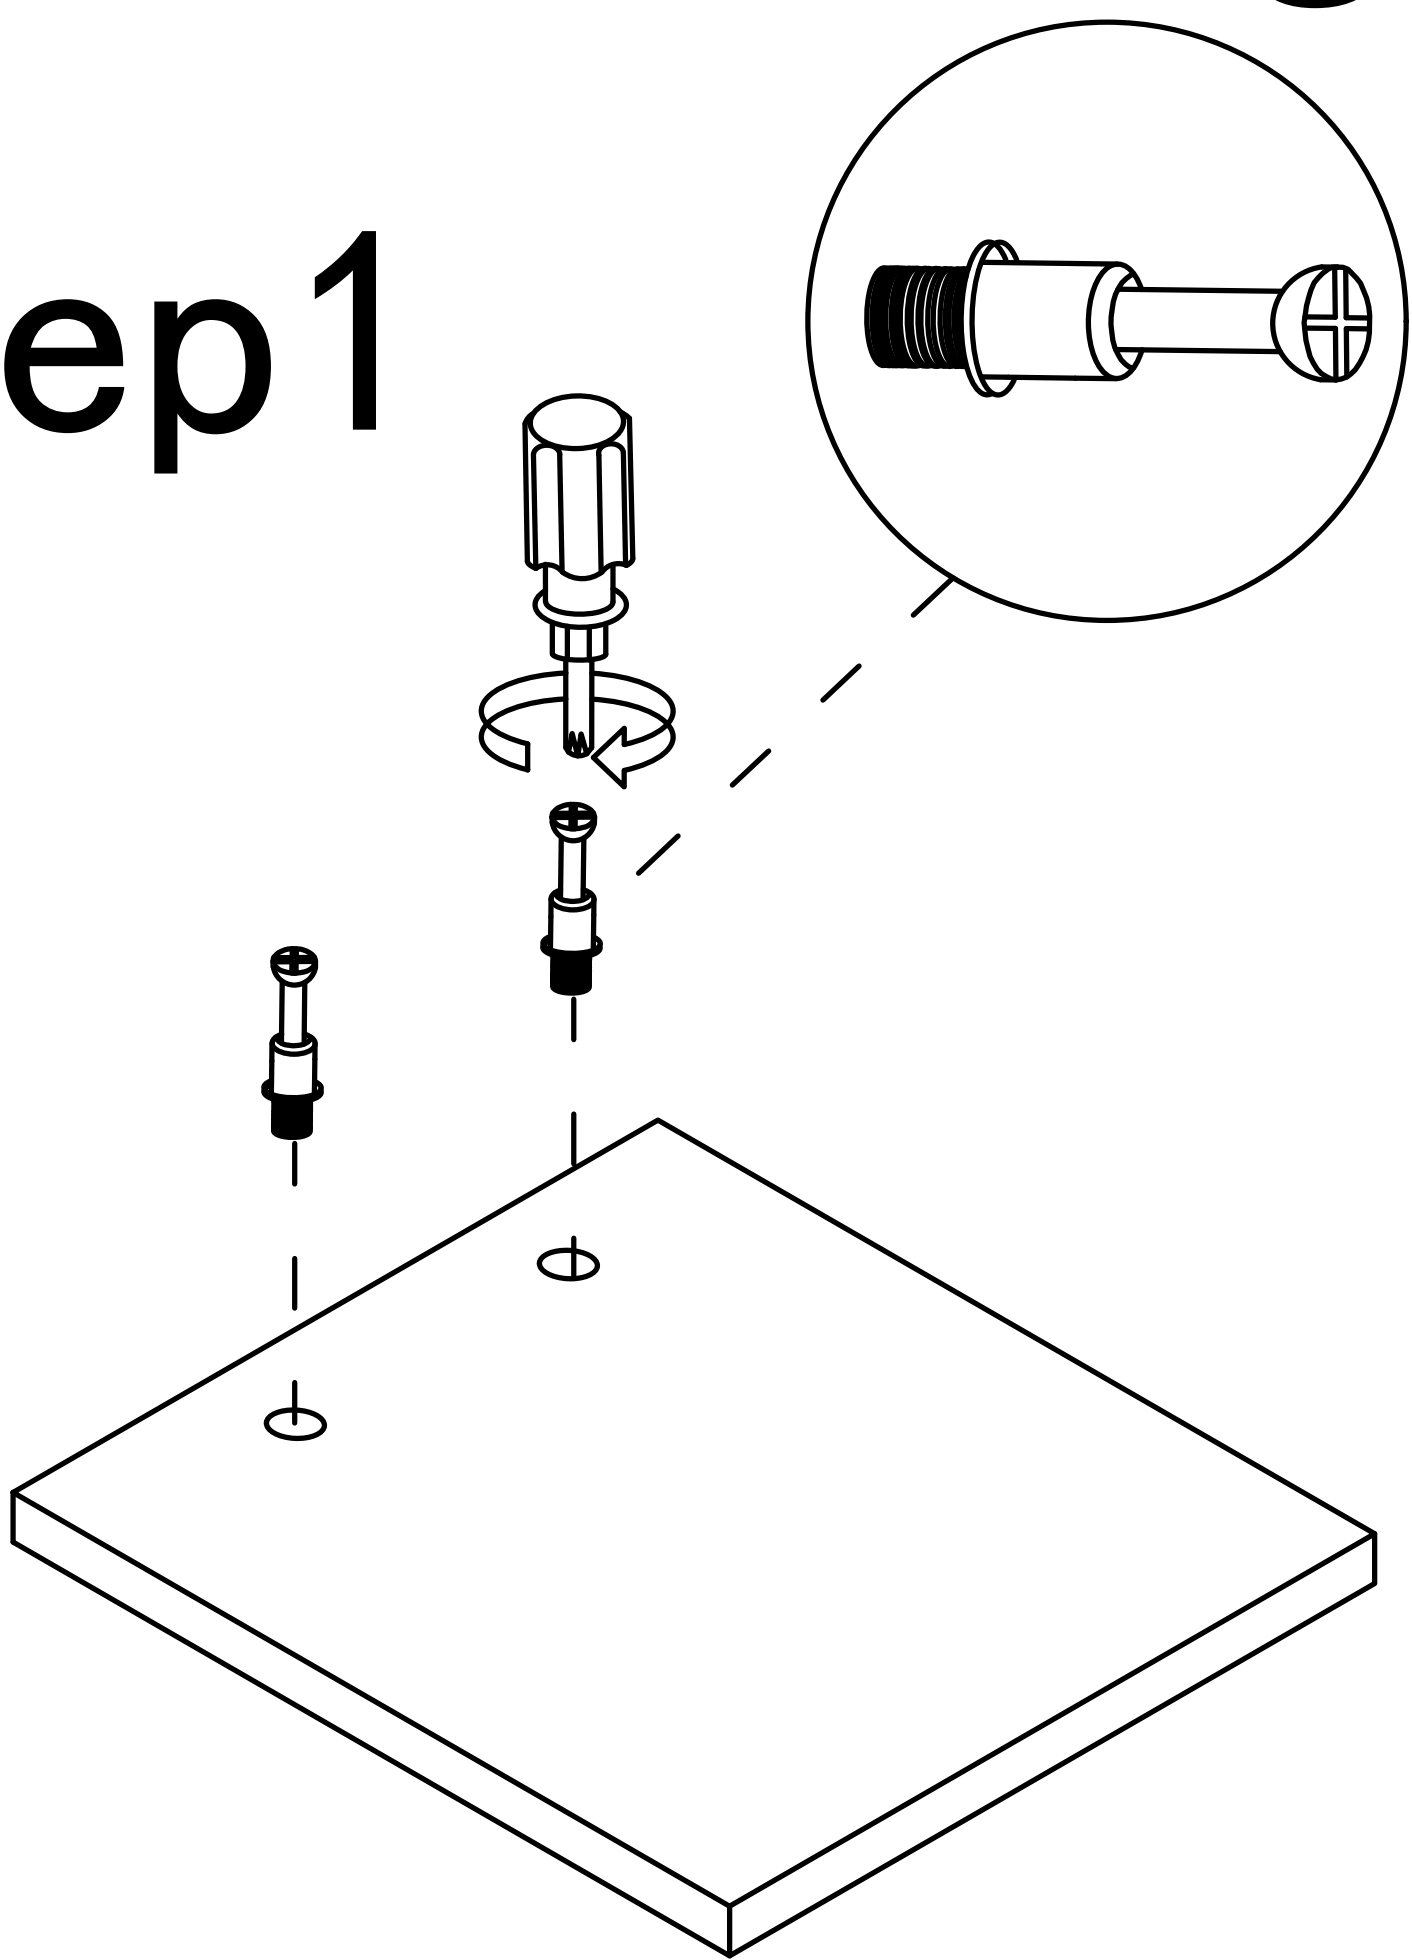

 Step2

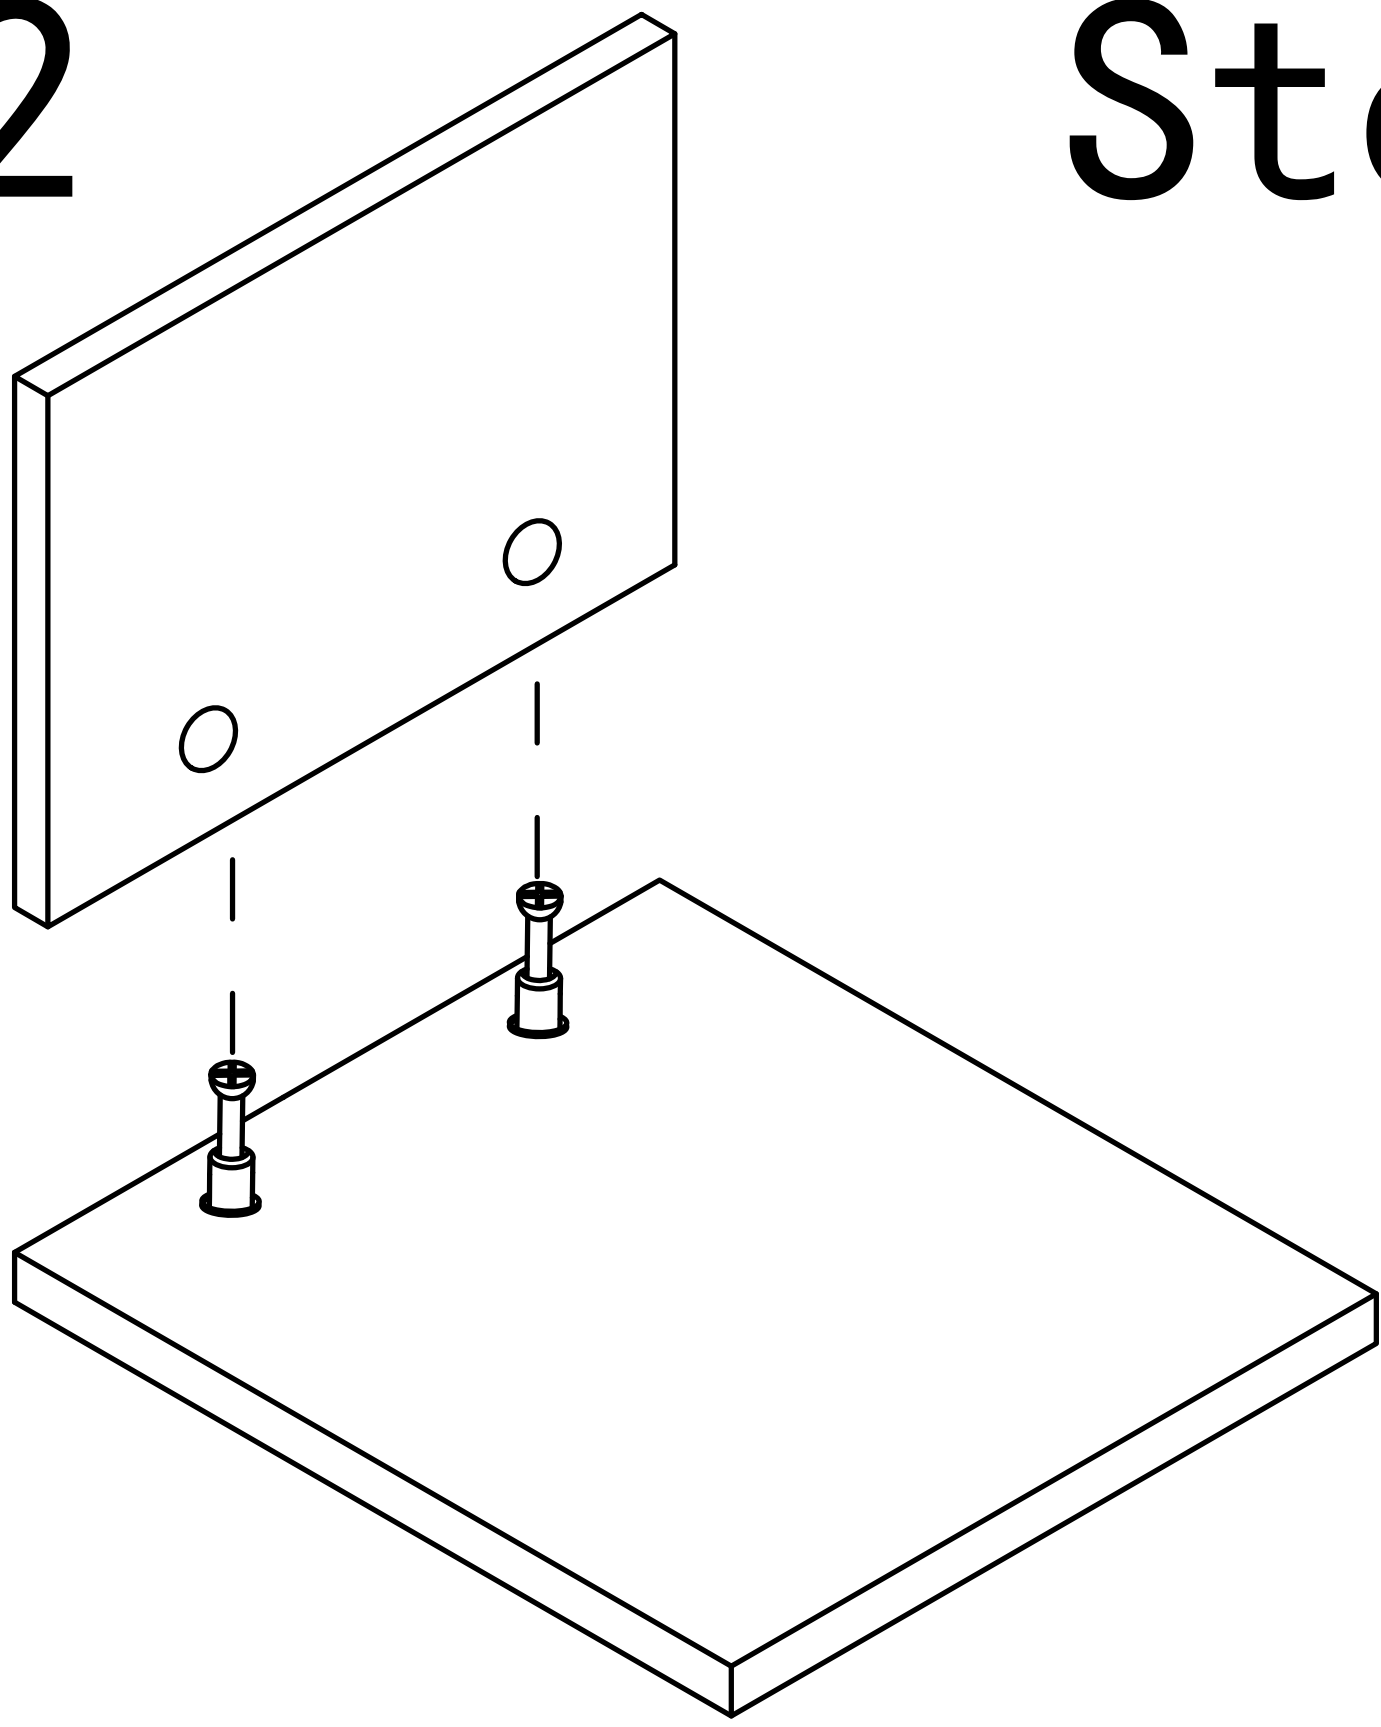

  
 
Step3

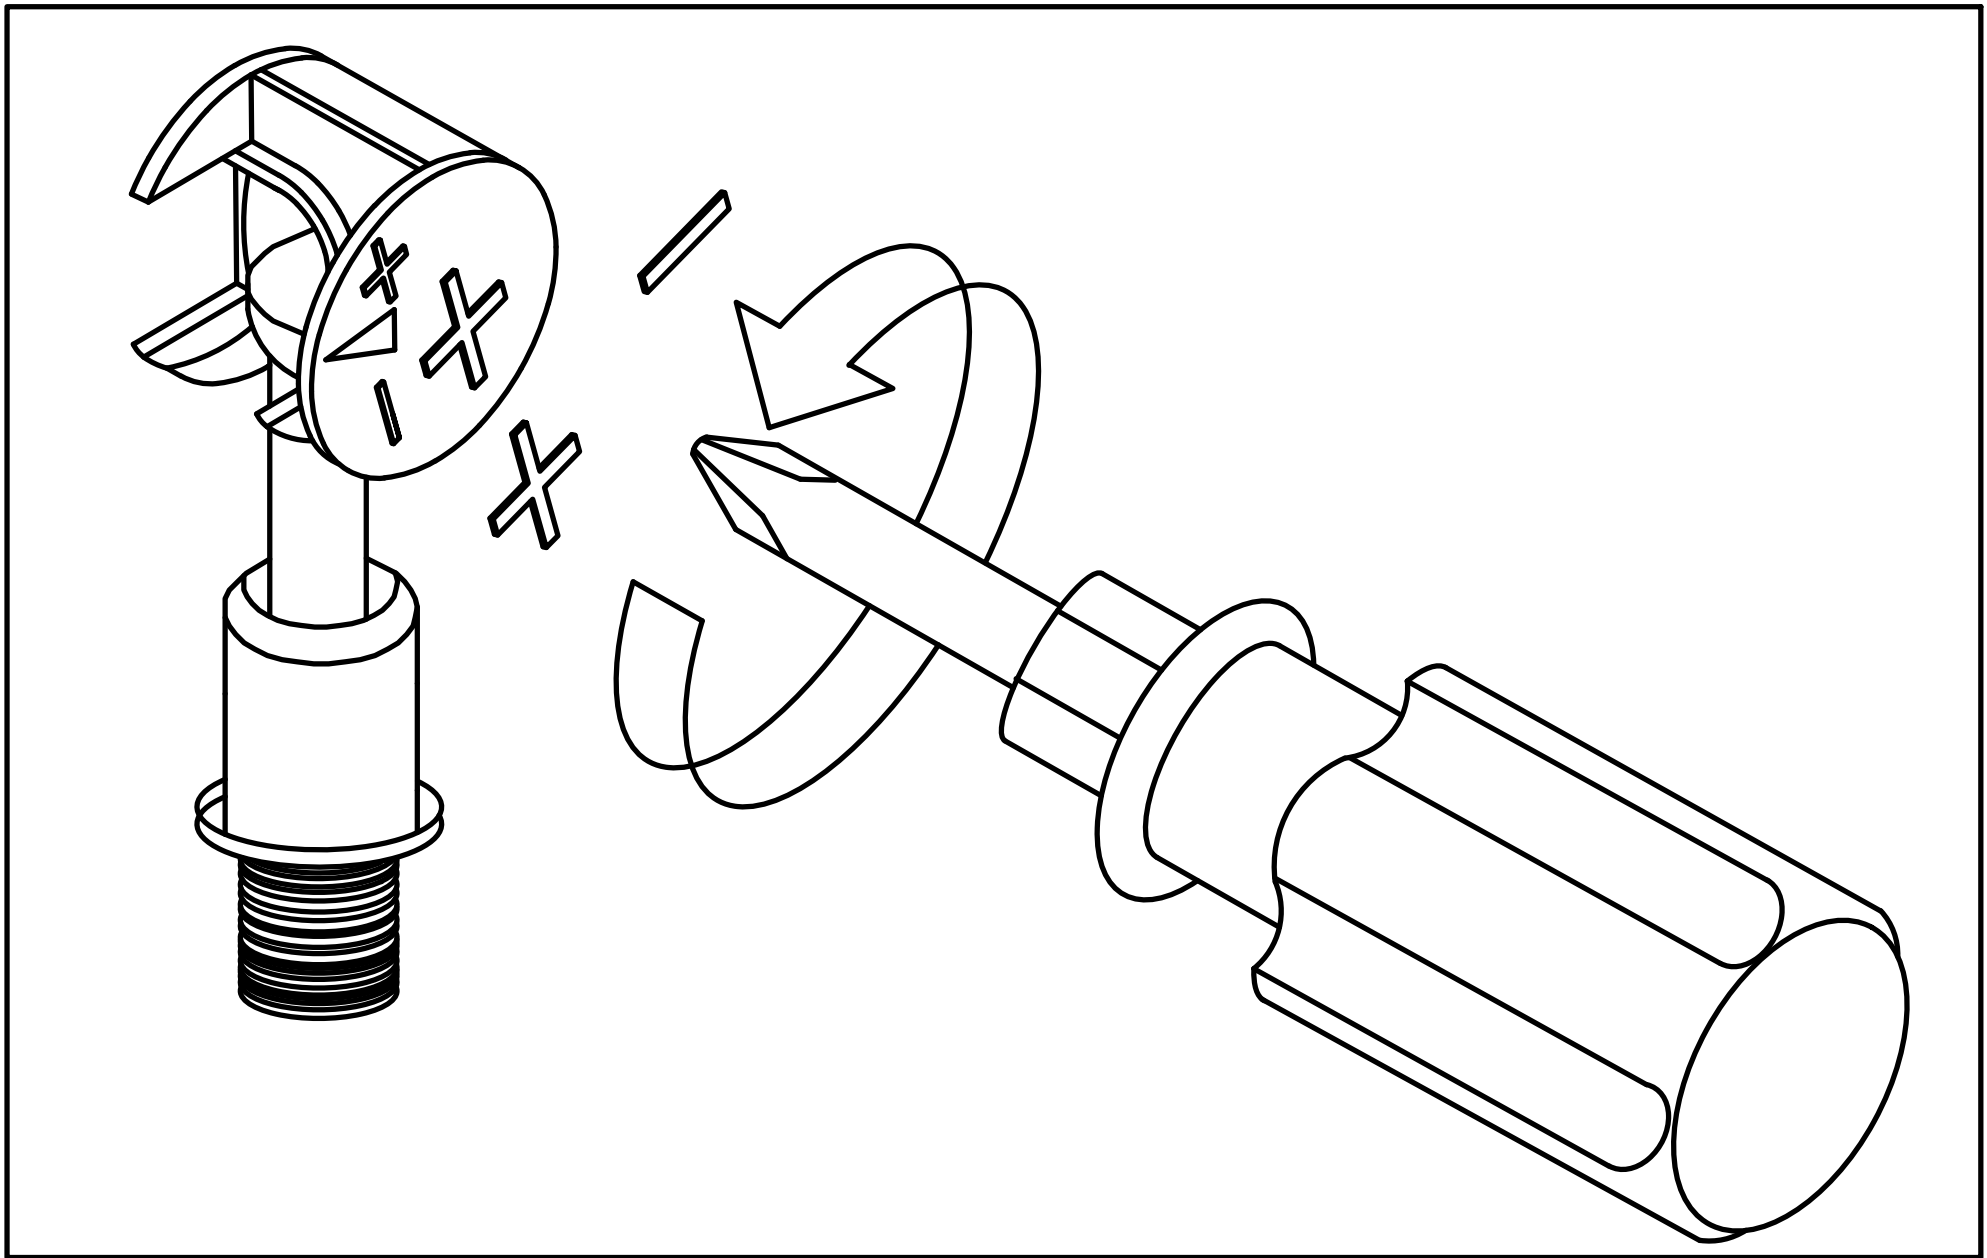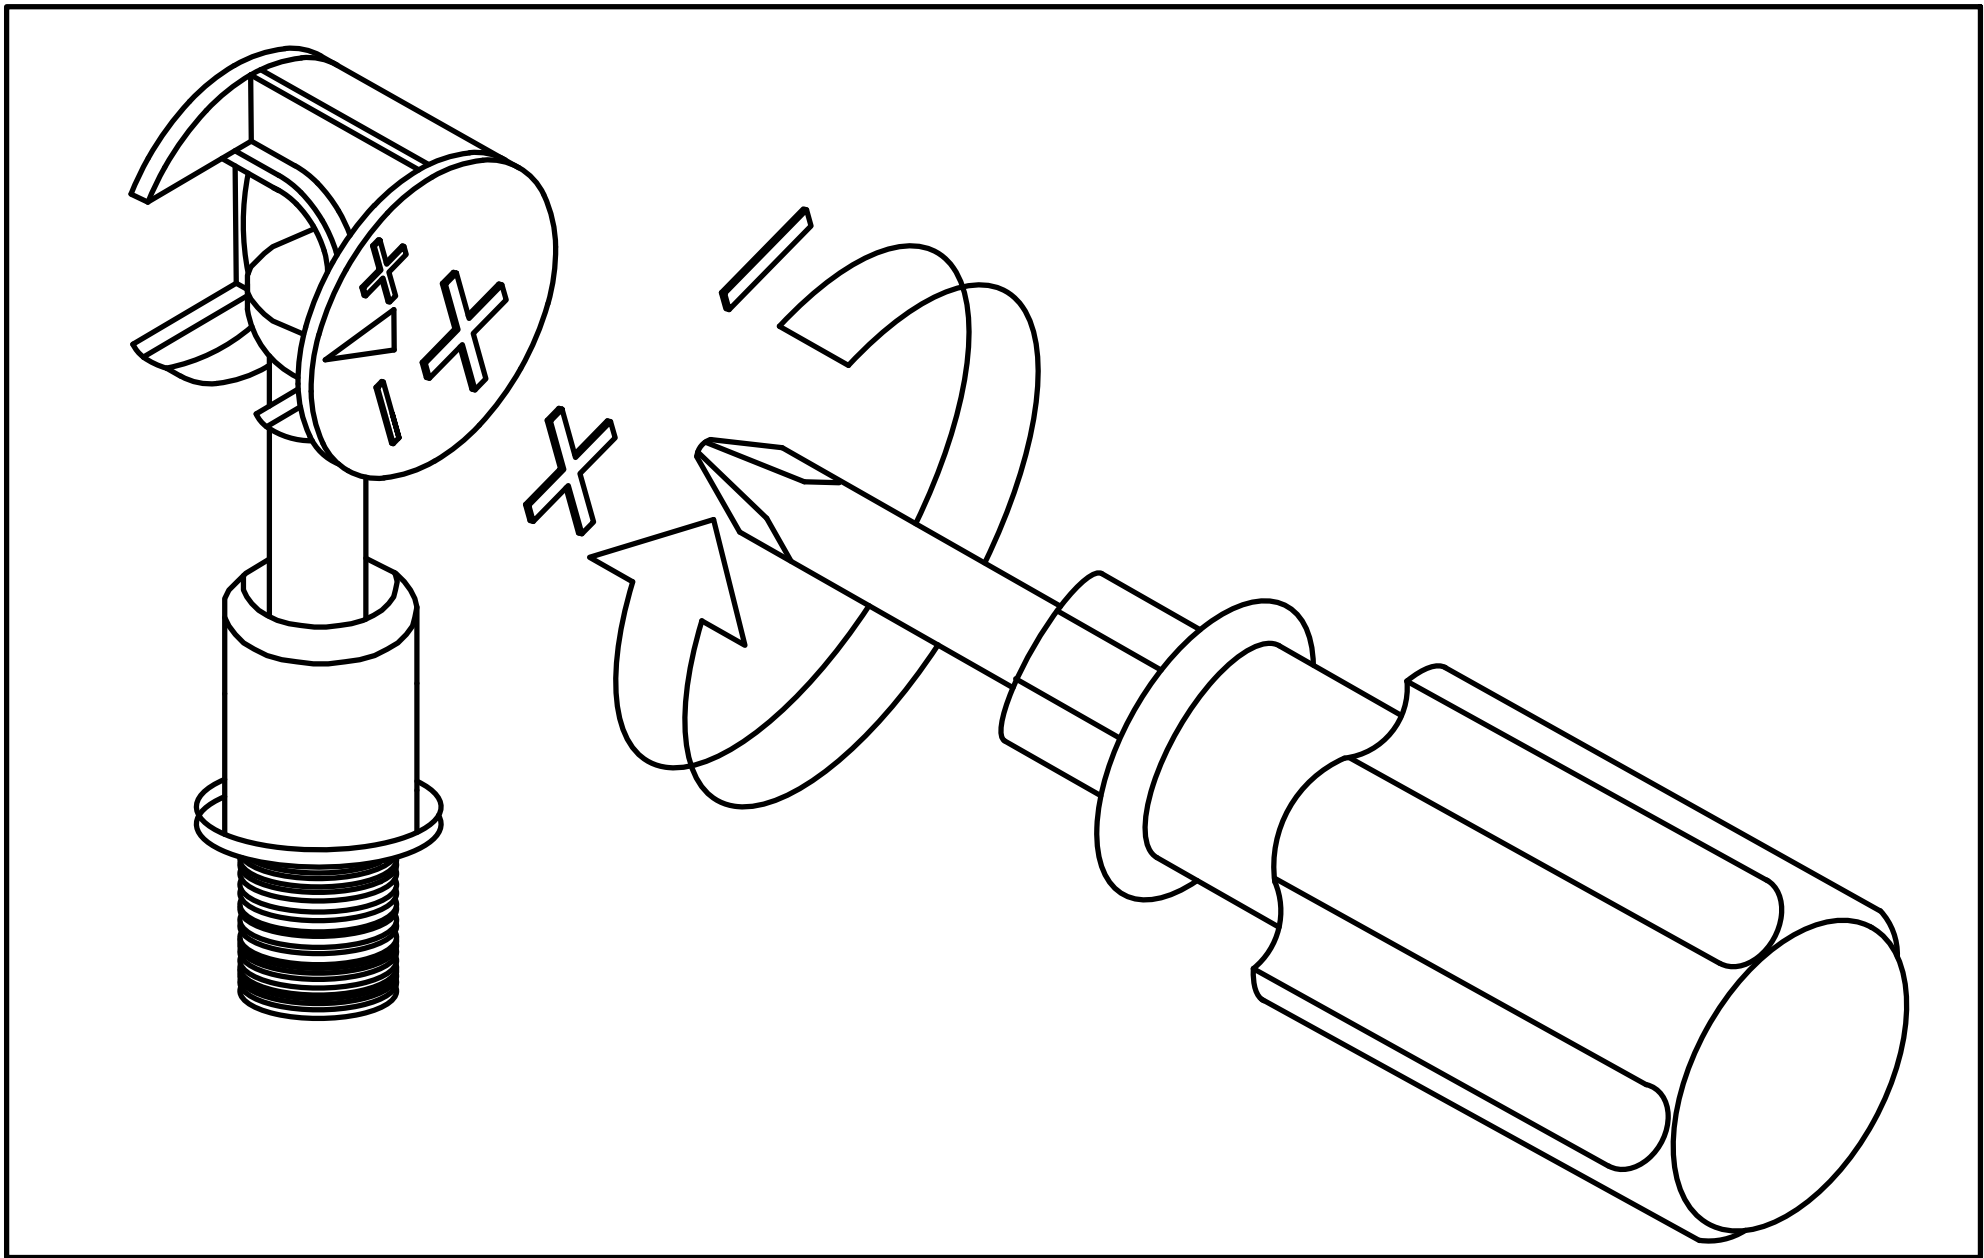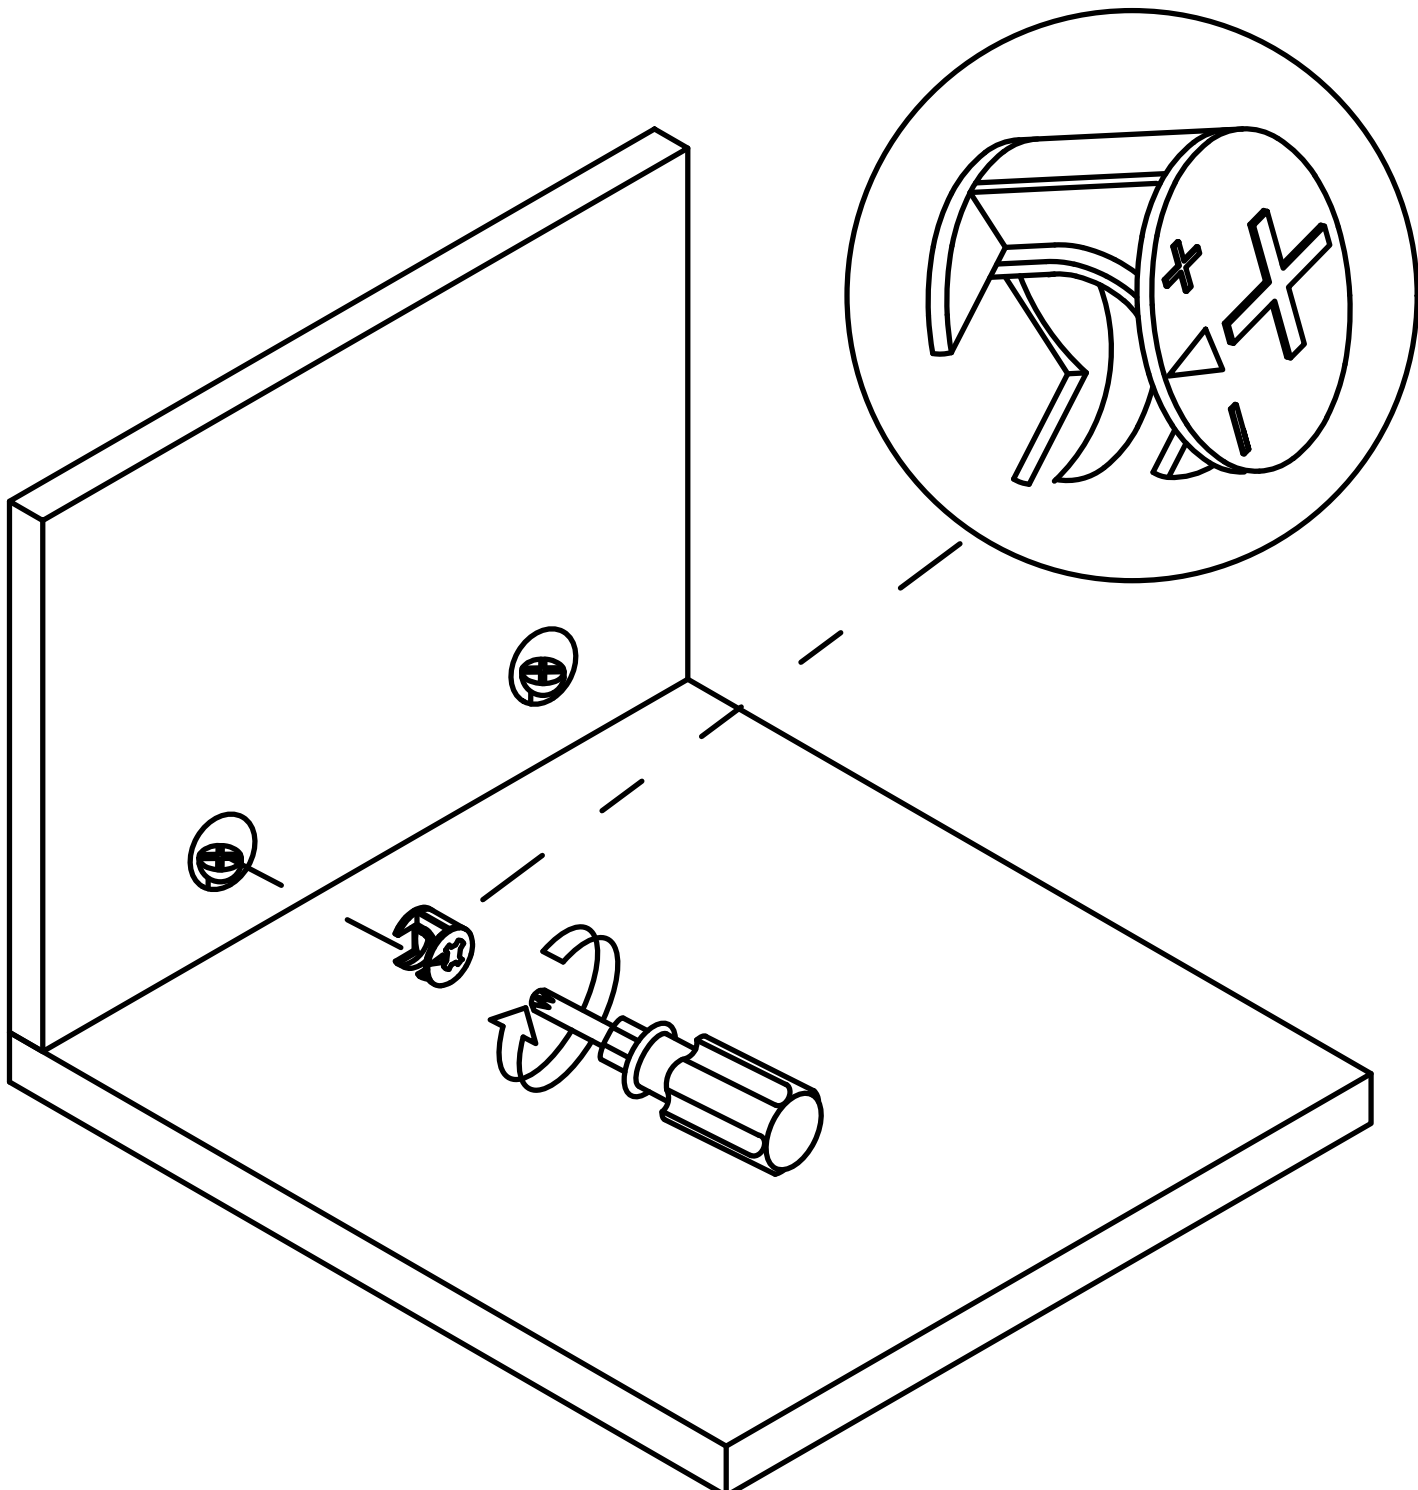


Use a screwdriver to lock in the direction of the "+" sign

Disassemble along the direction of "-" sign

  
Step 1

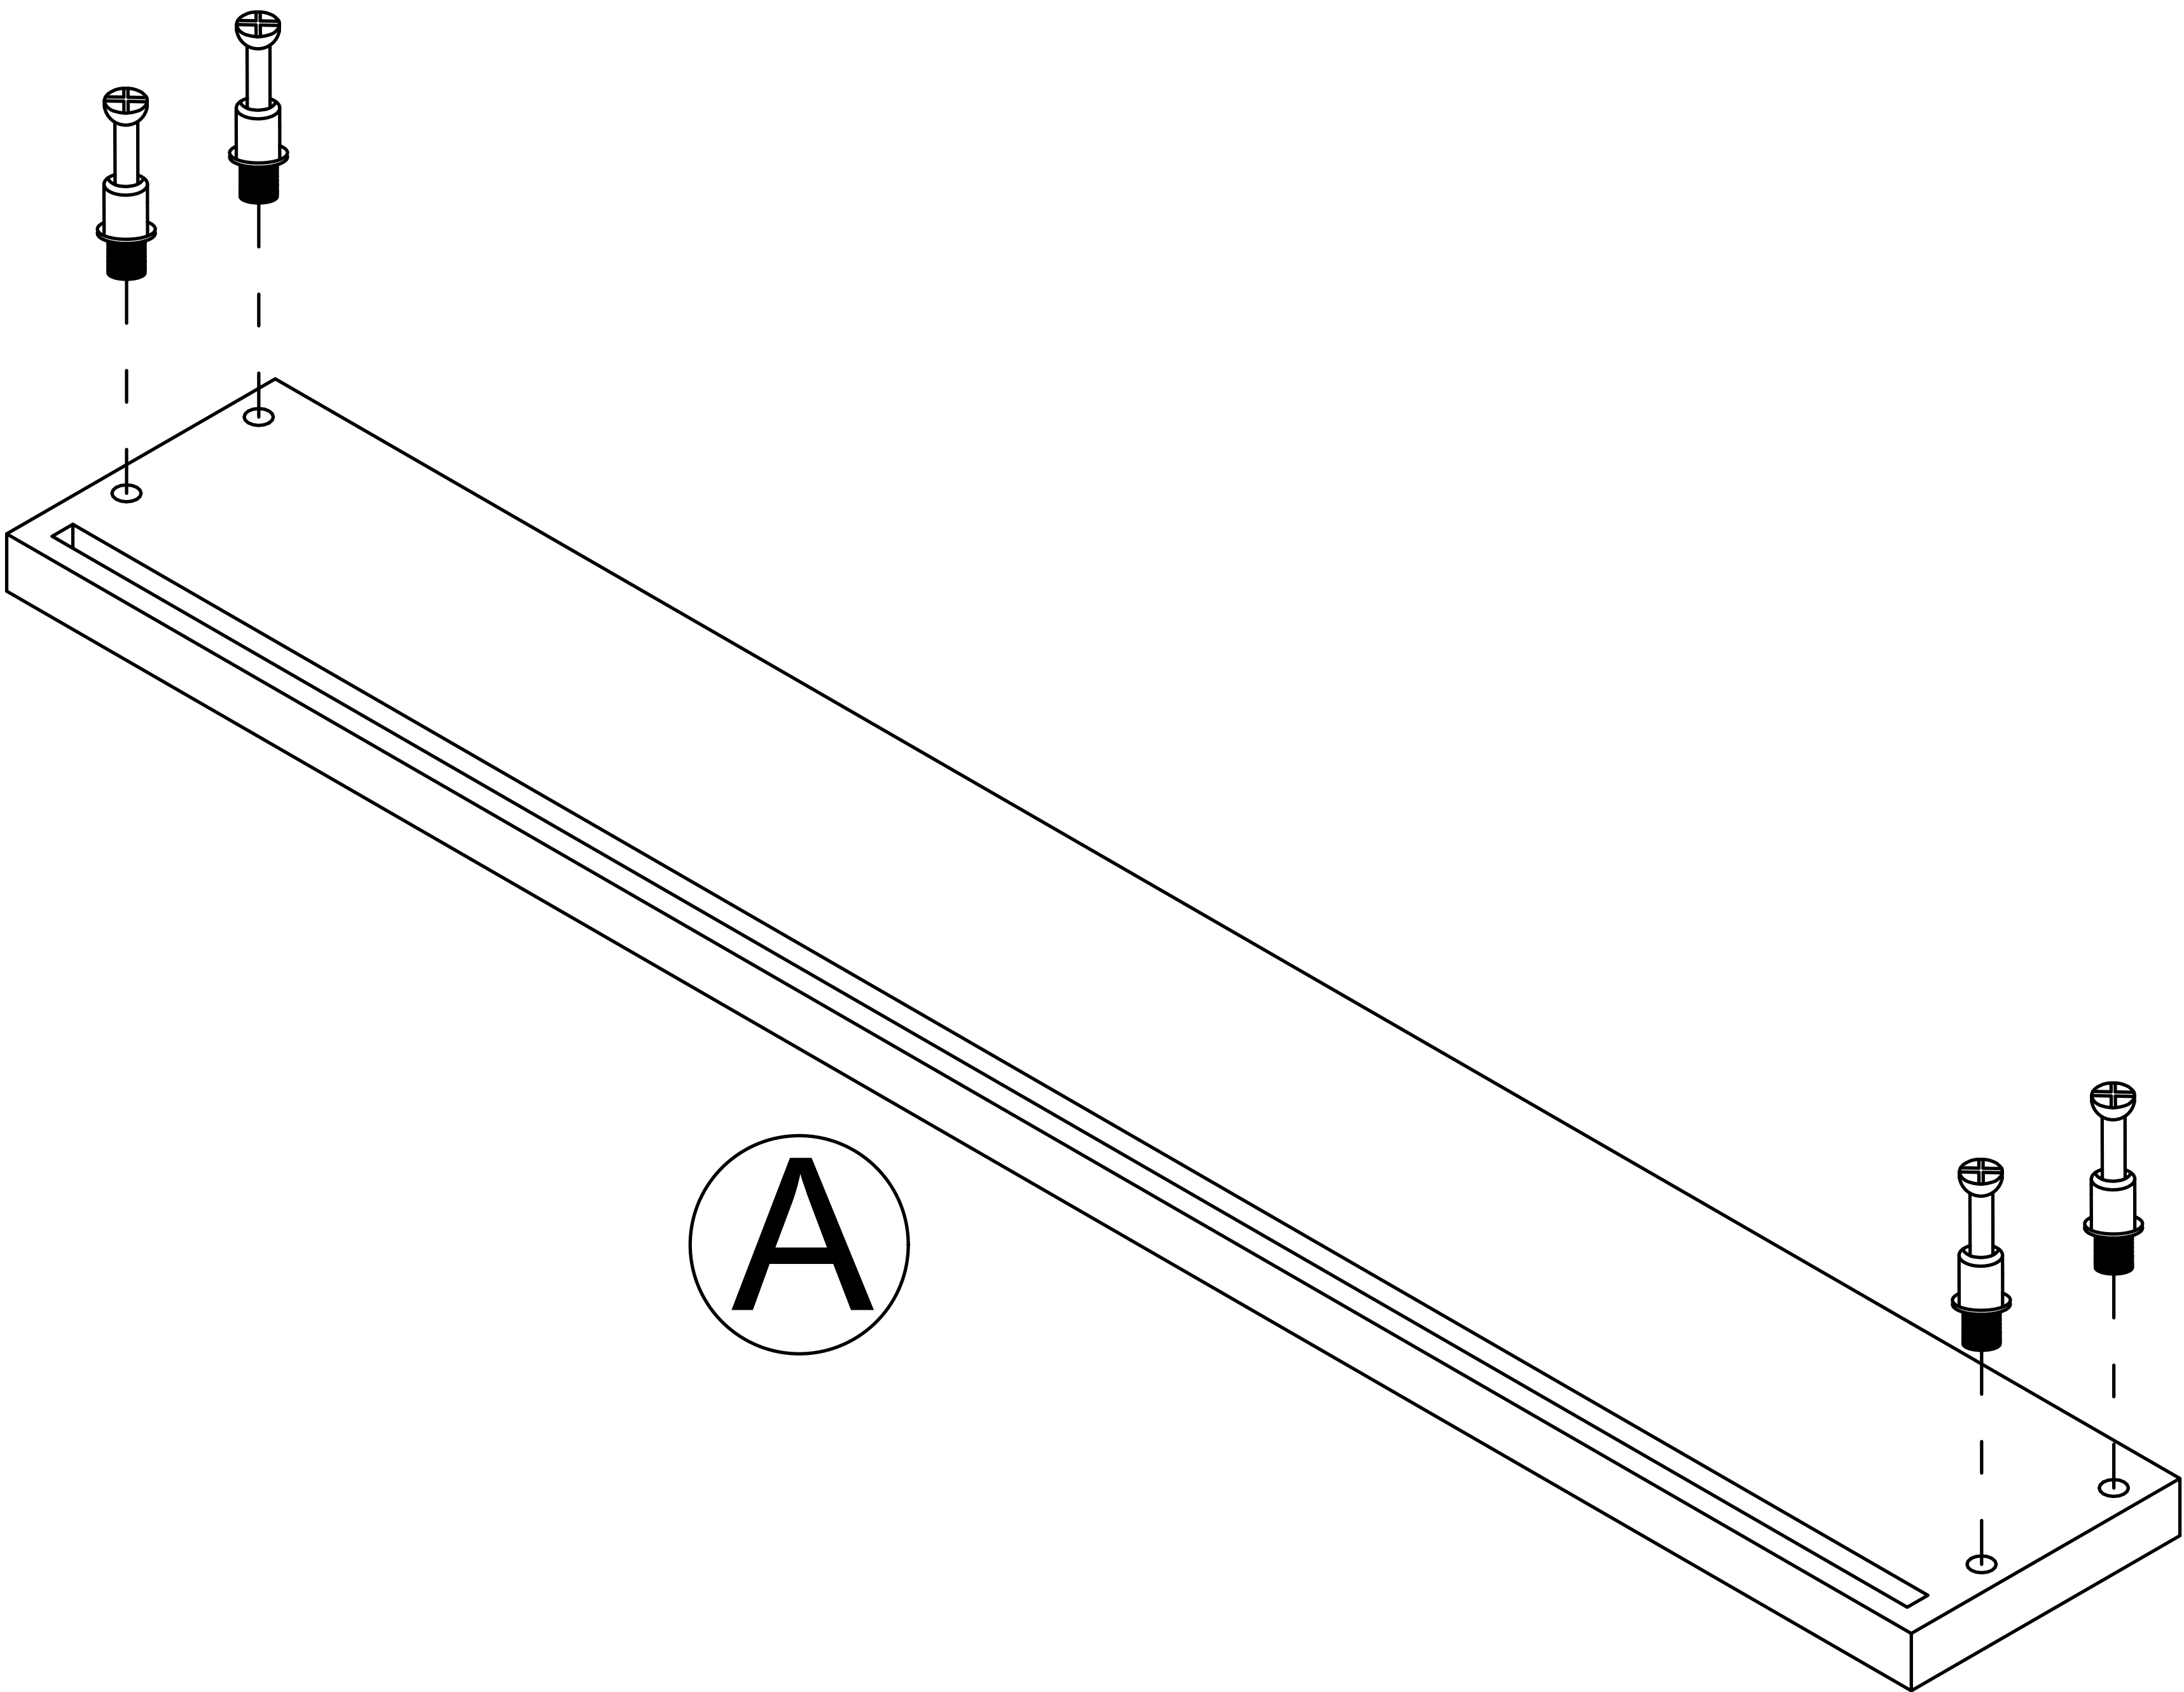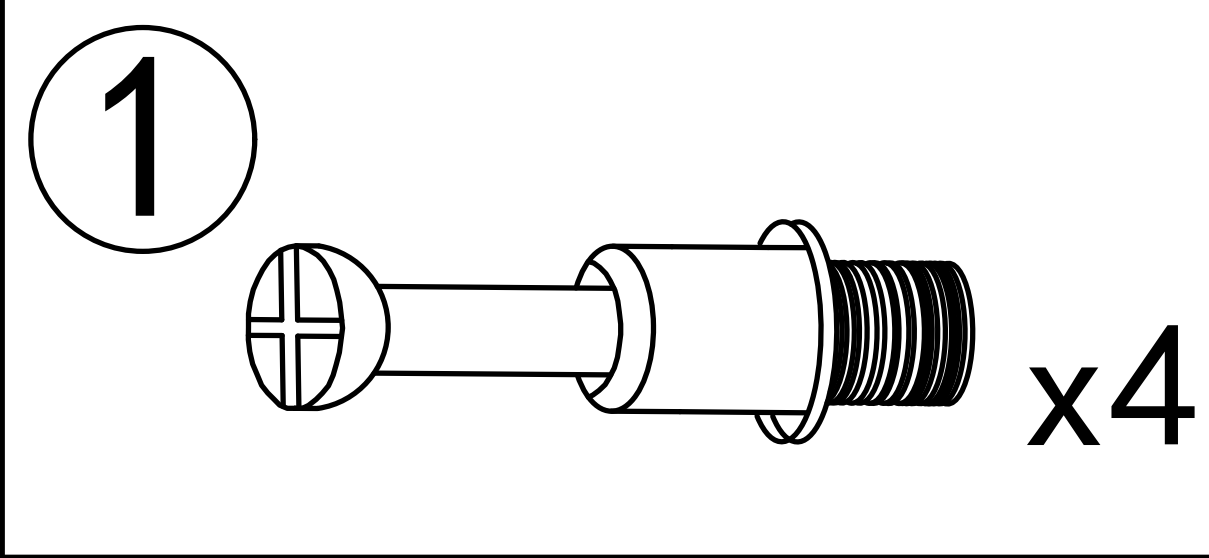

 Step 2

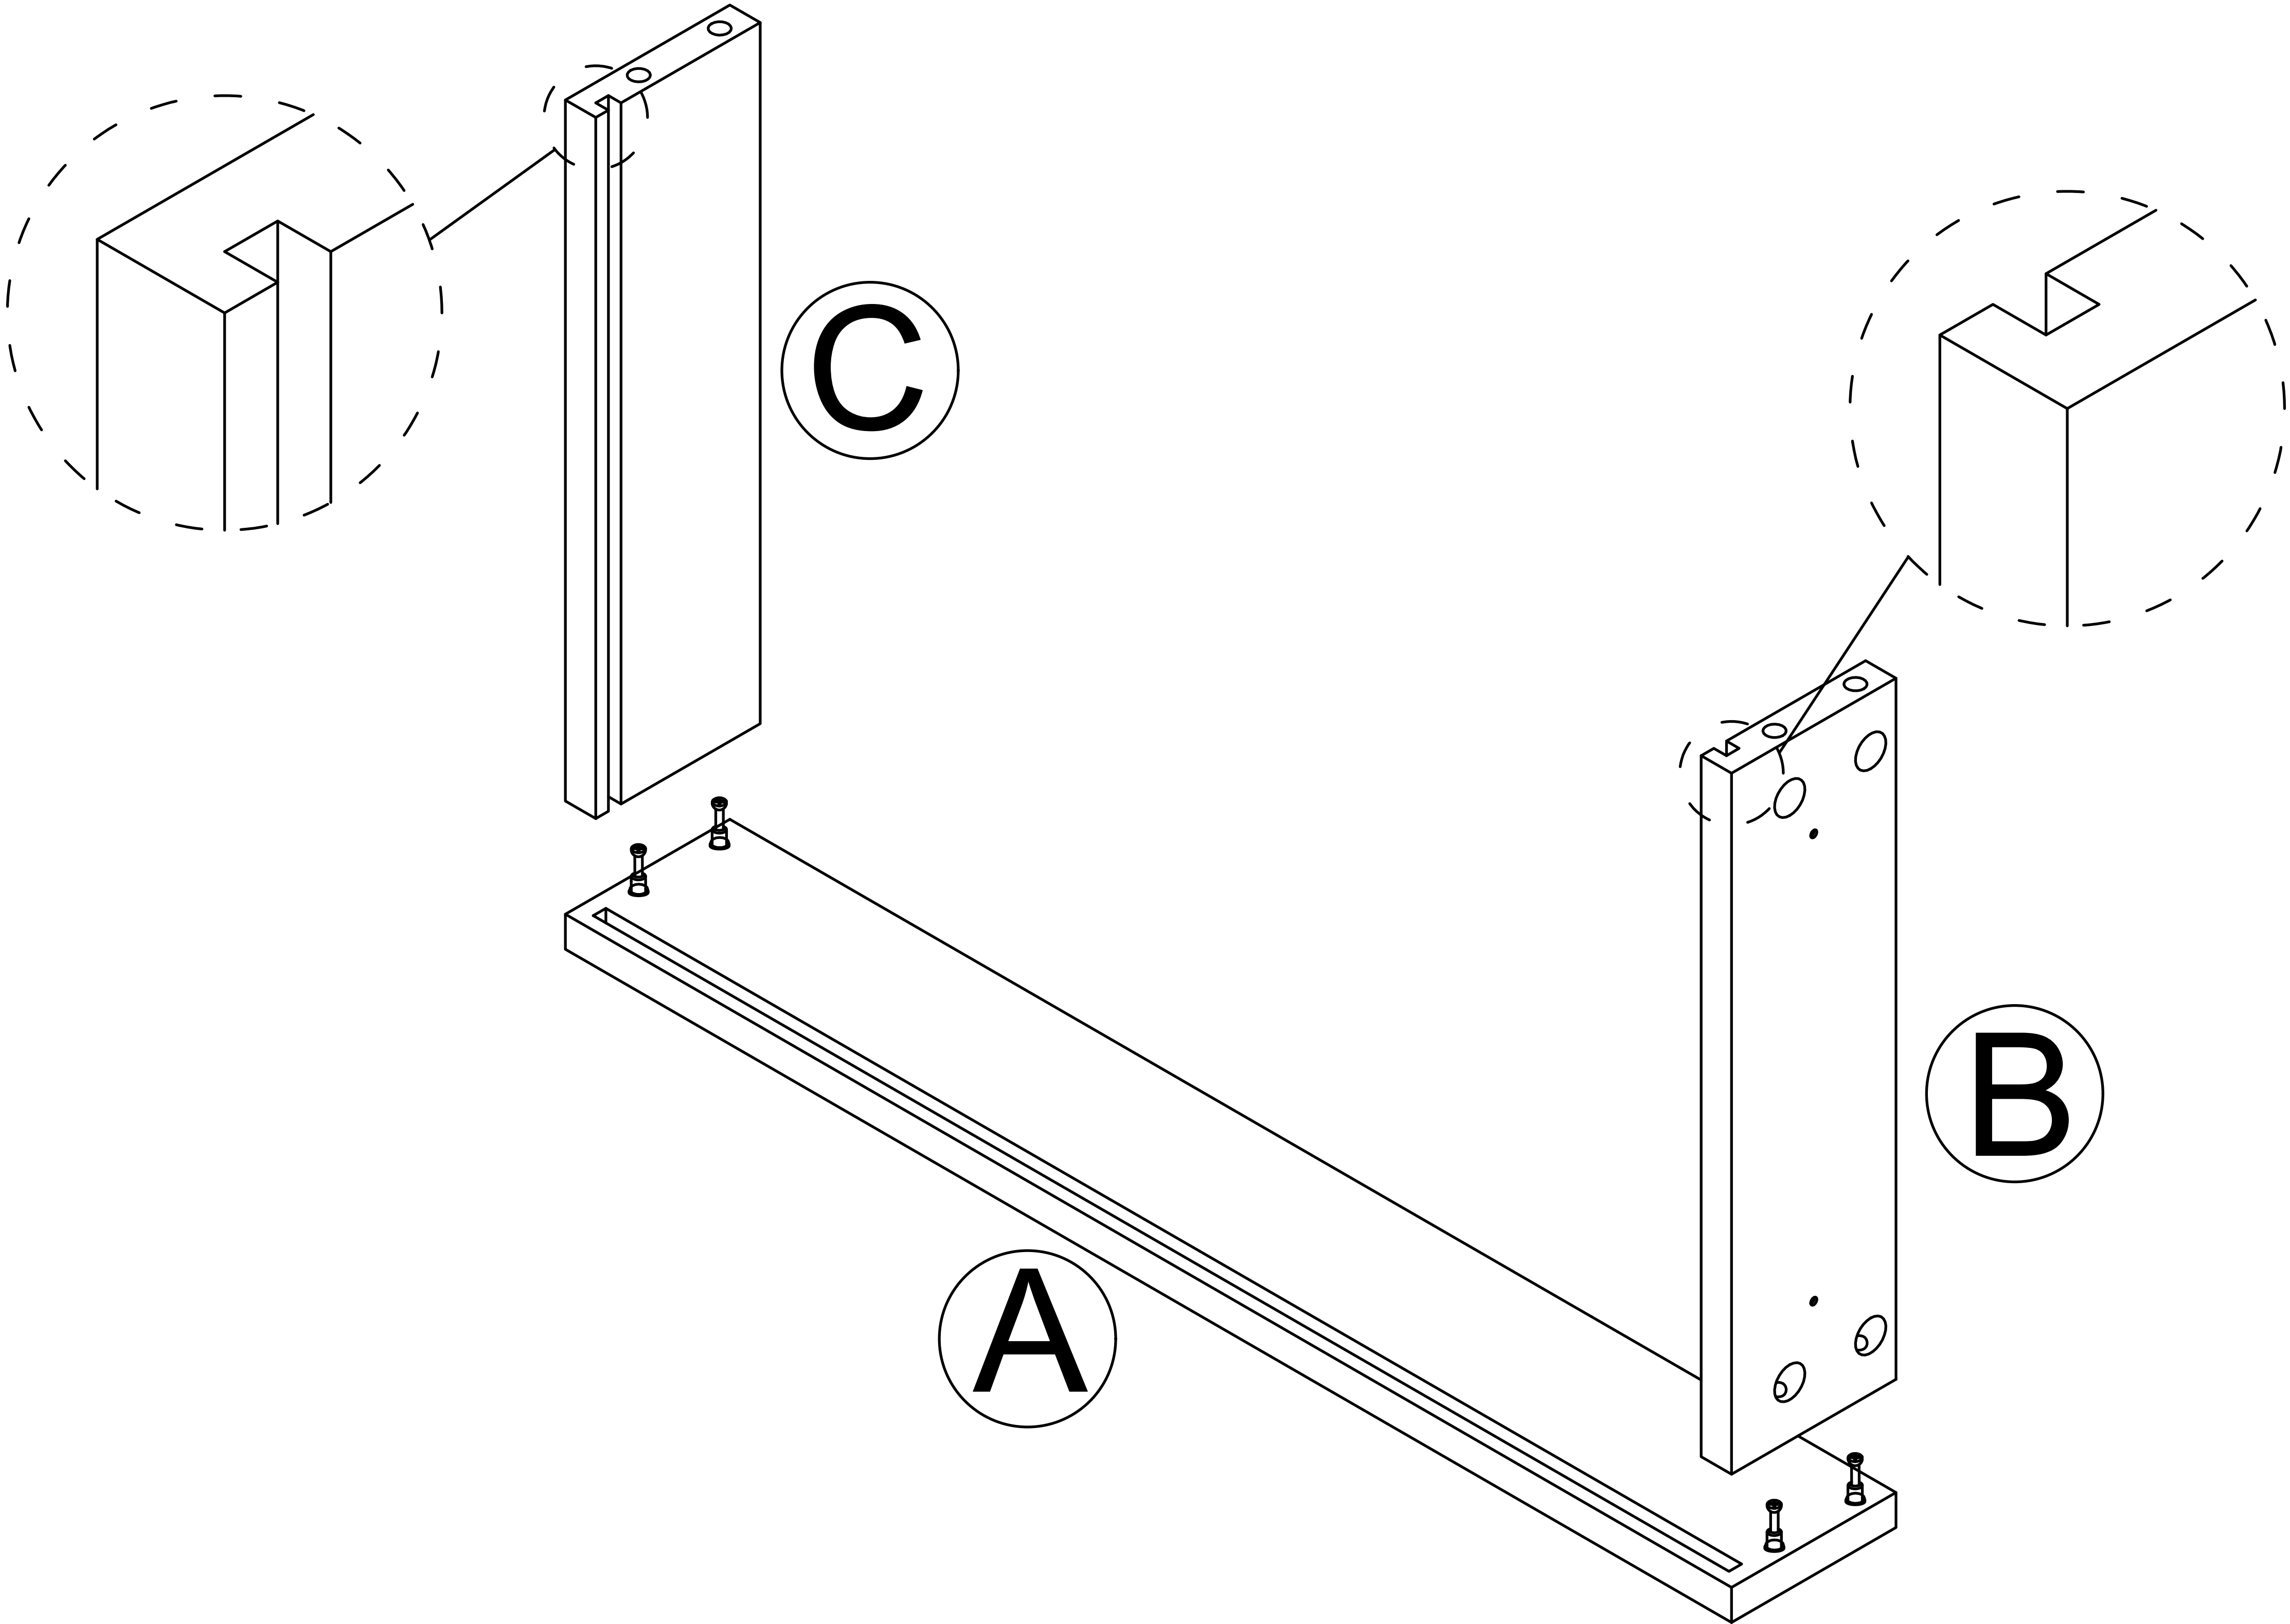


 
Step 3

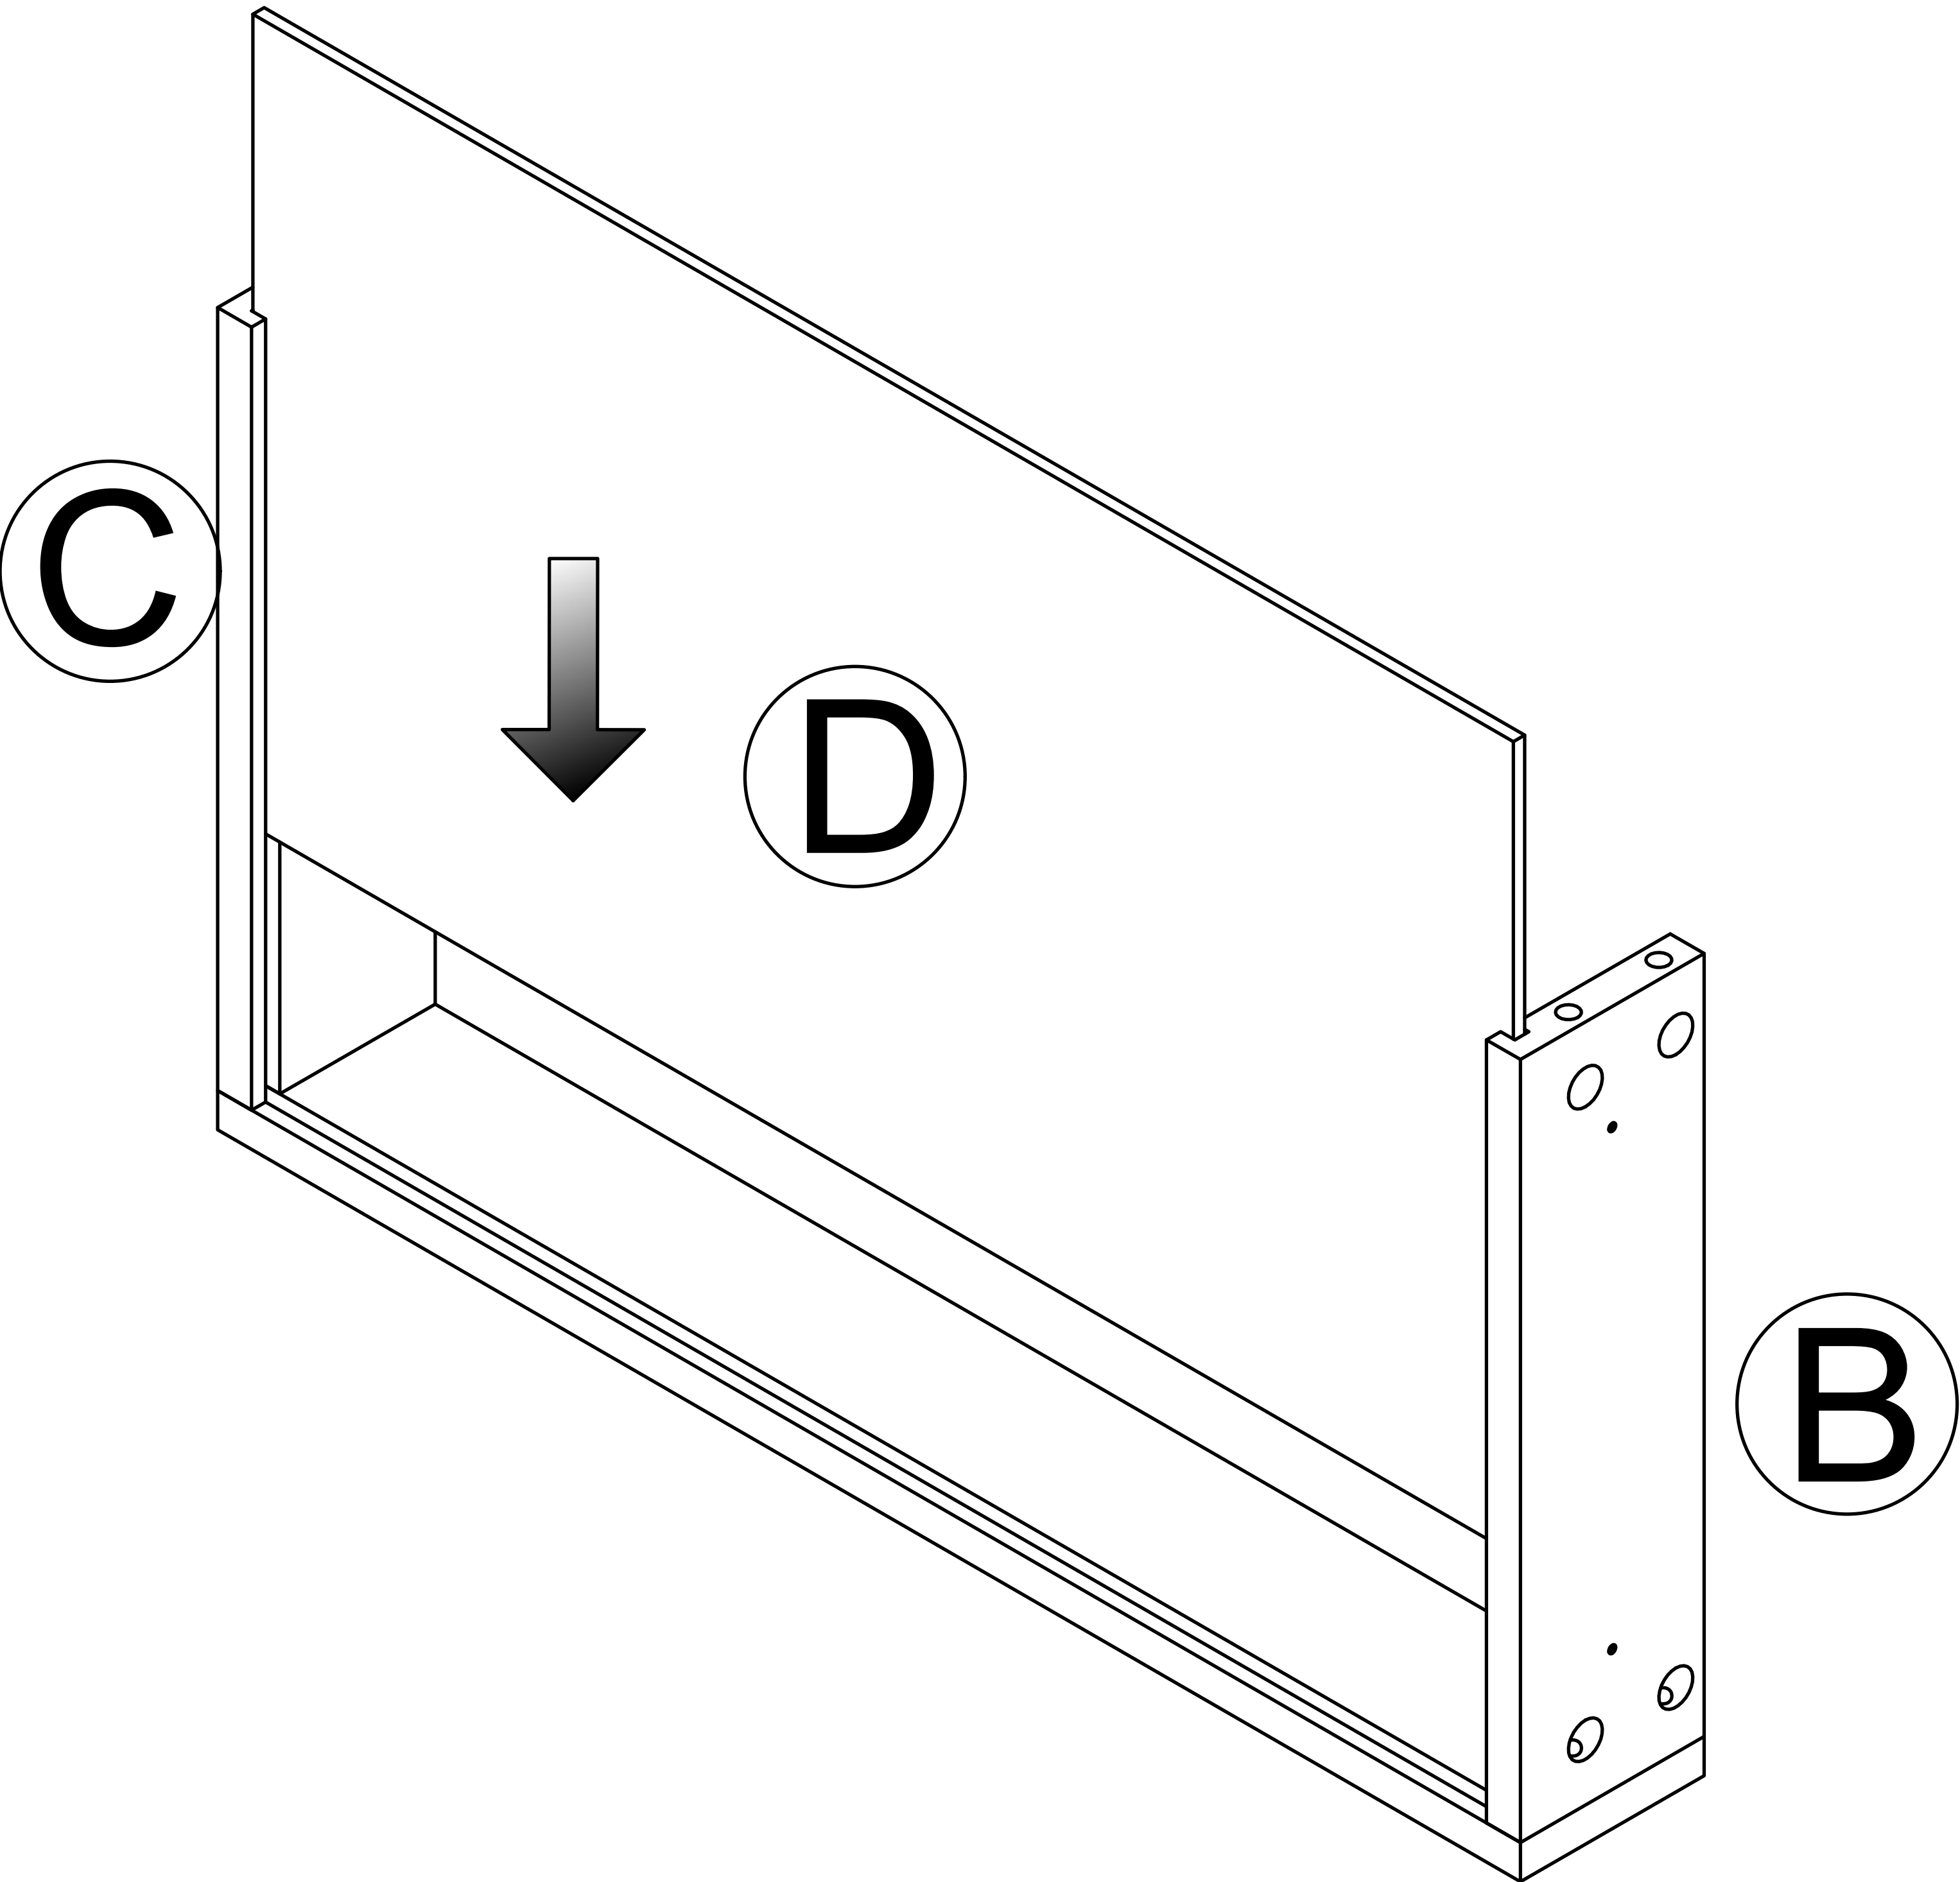

Step 4

 
1

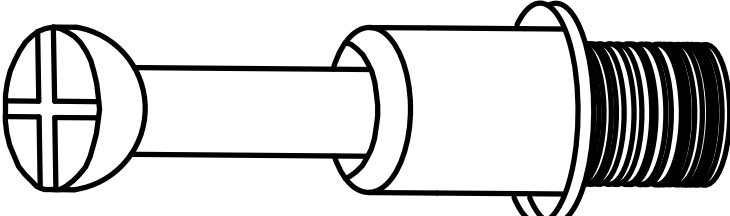
 x4

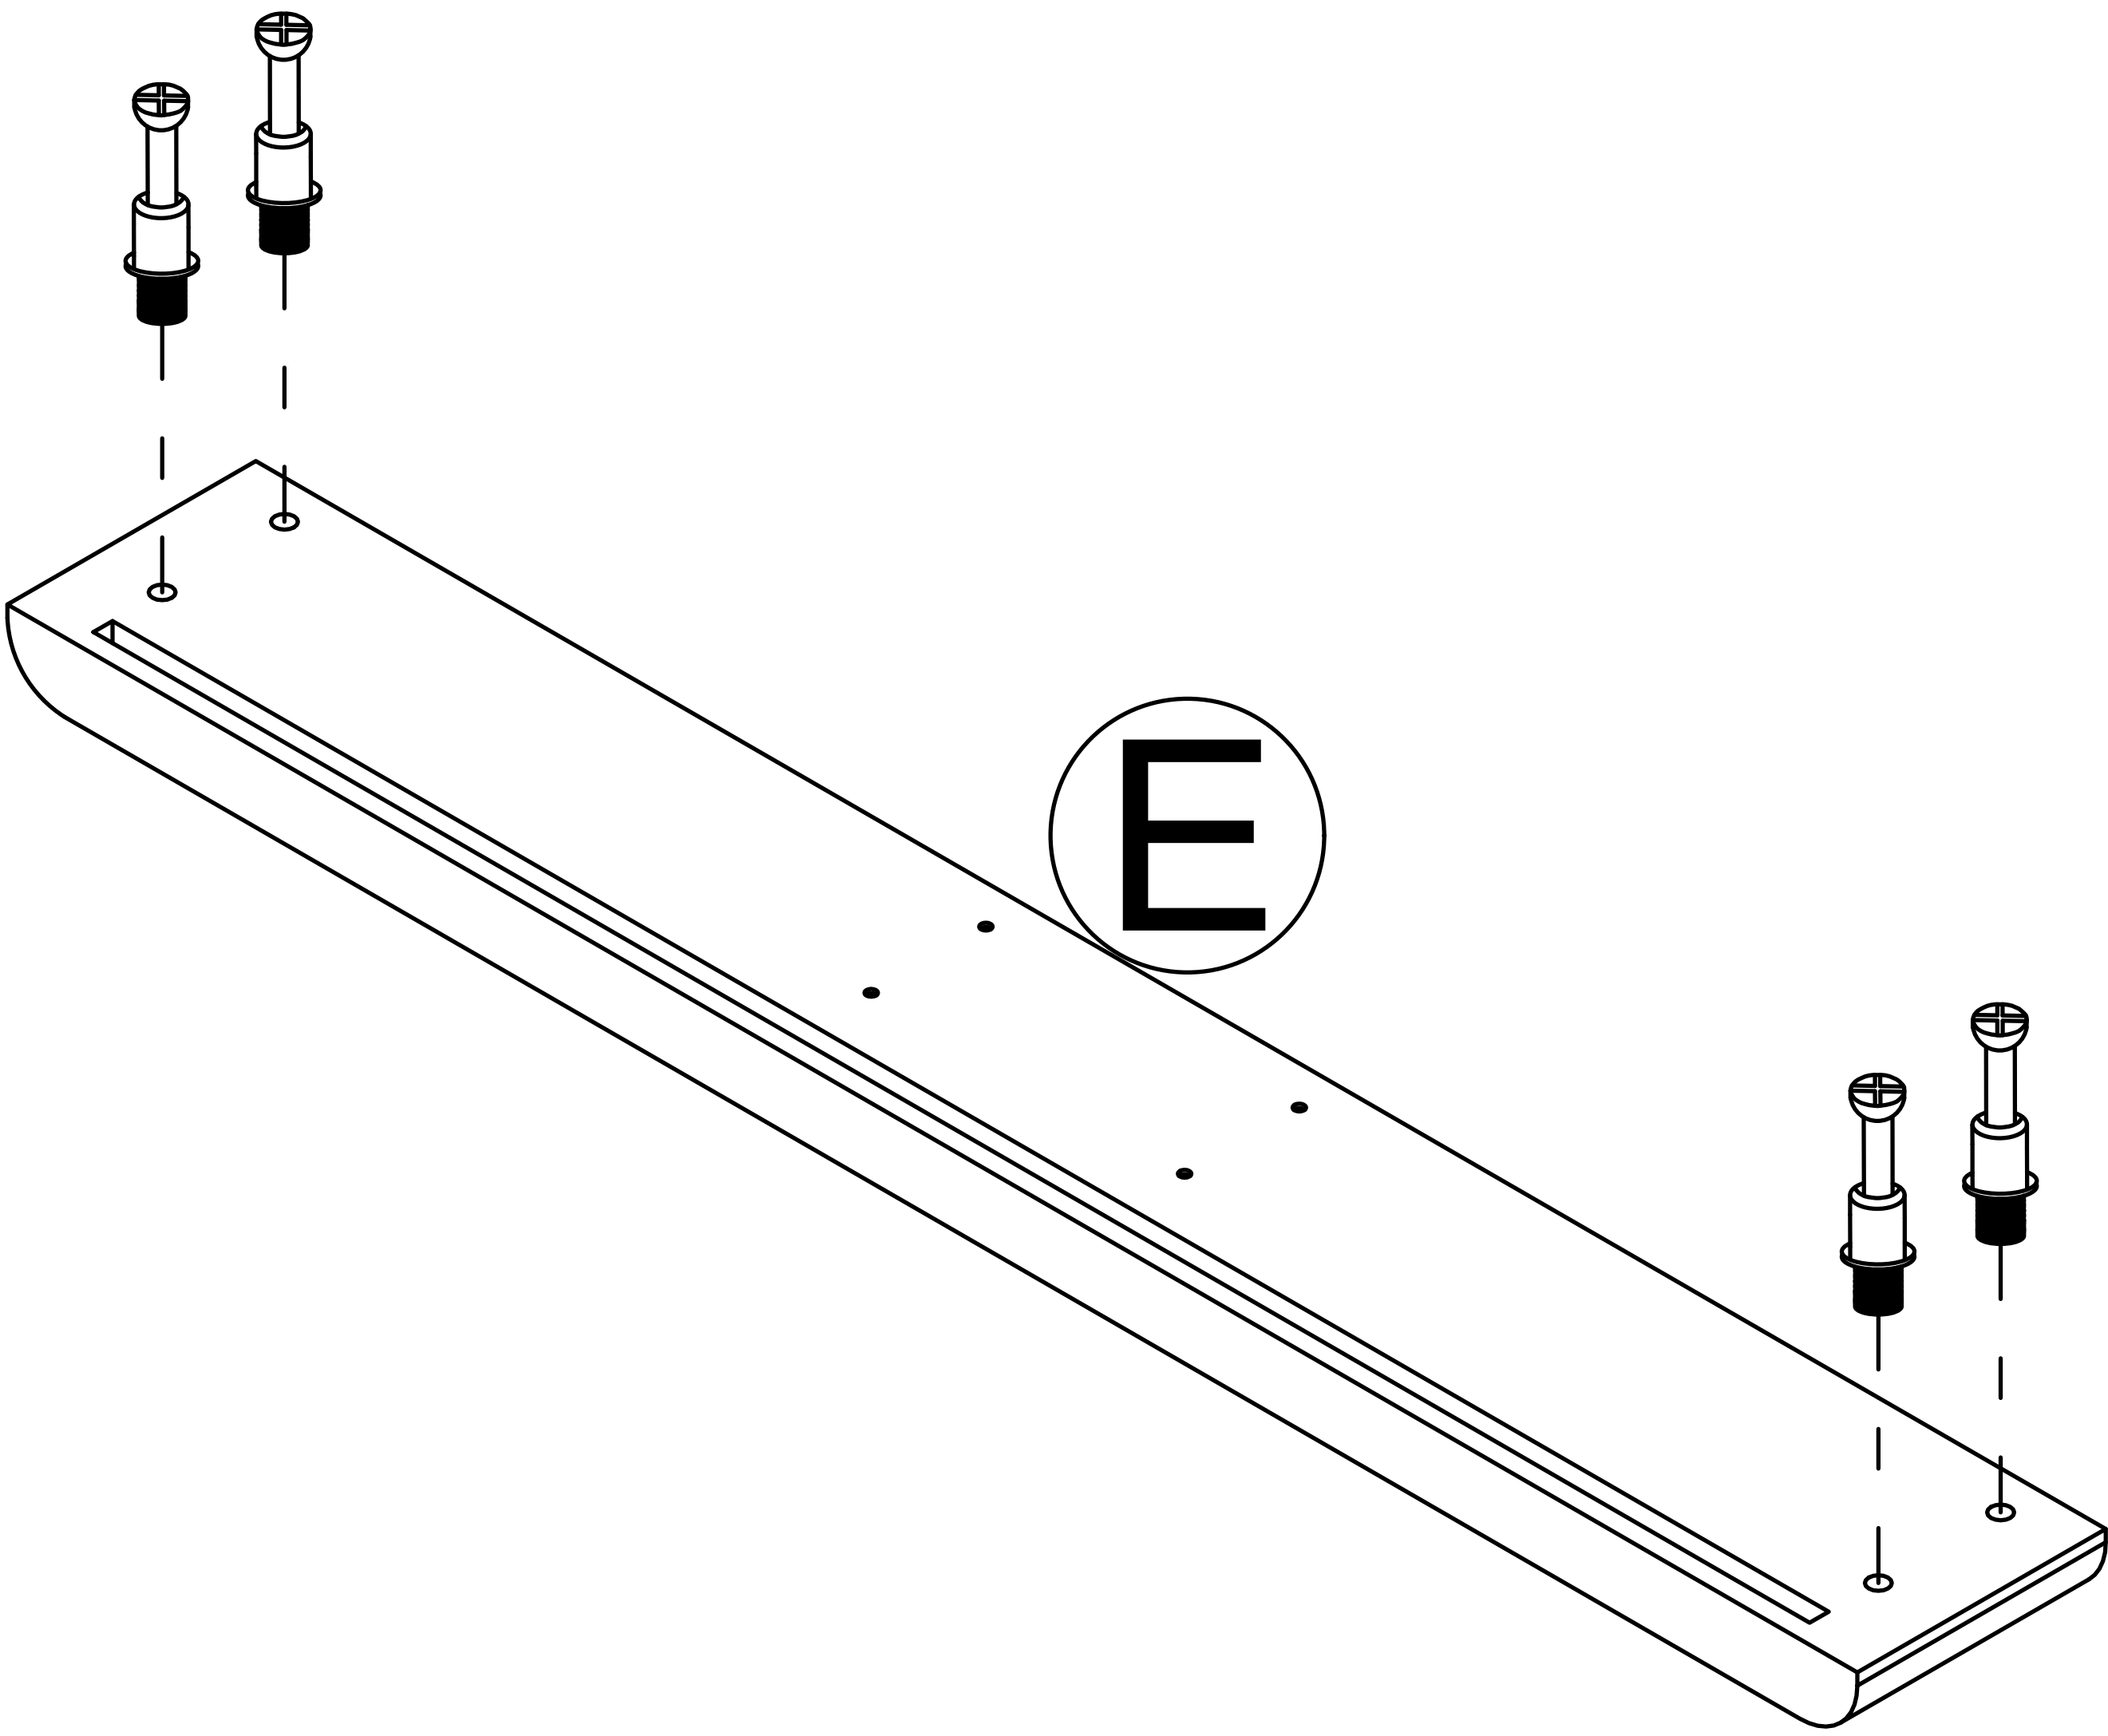 


Step 5

 2

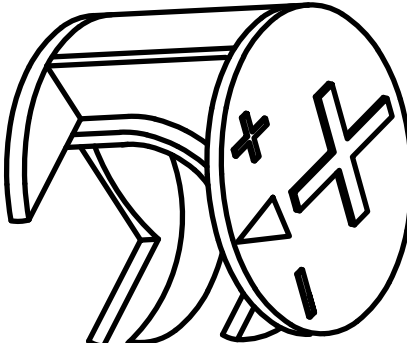 x8

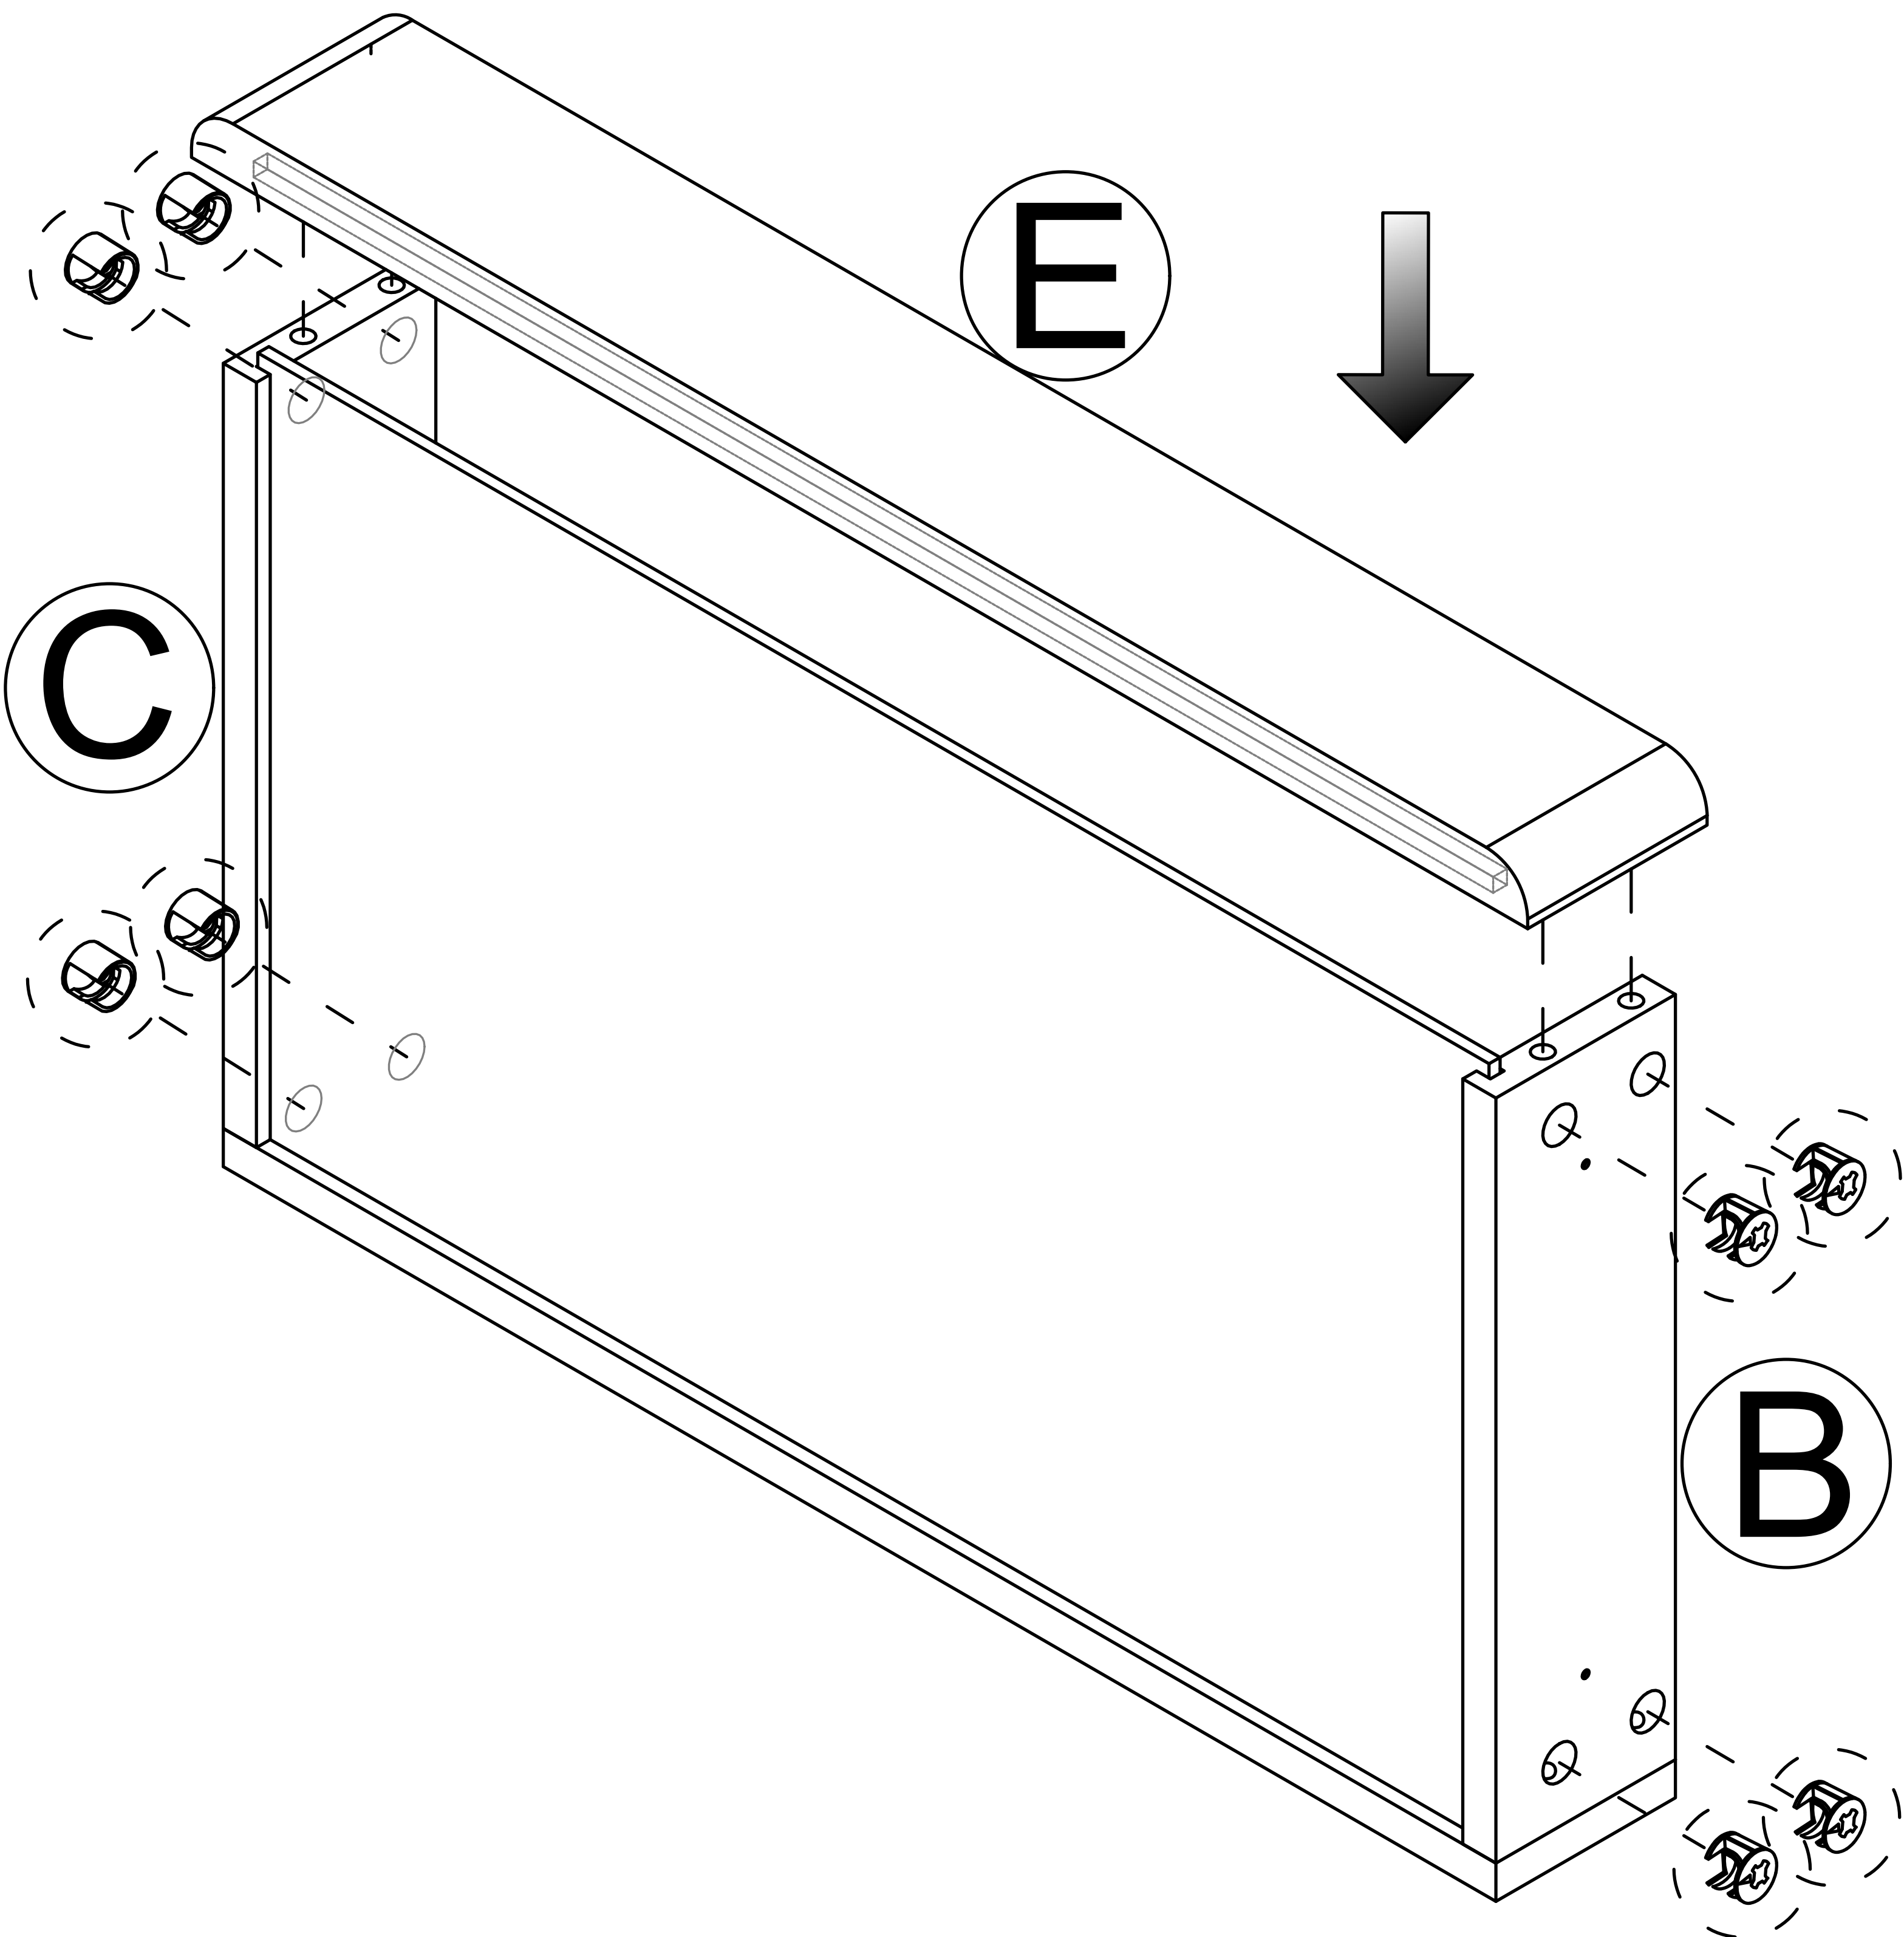 


Drawer rail breakdown diagram

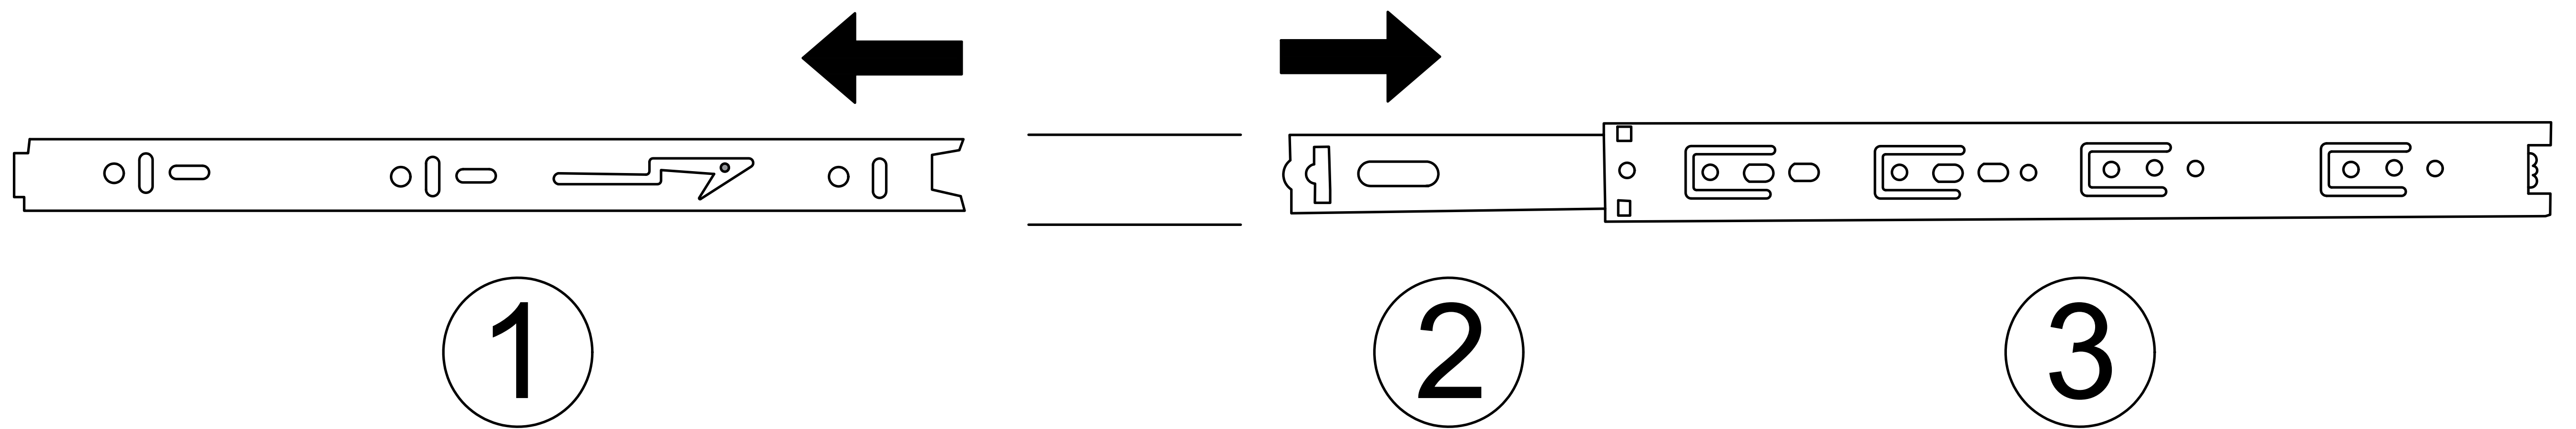 


① Dismantle the schematic diagram

 Step 1 : Pull the rails apart

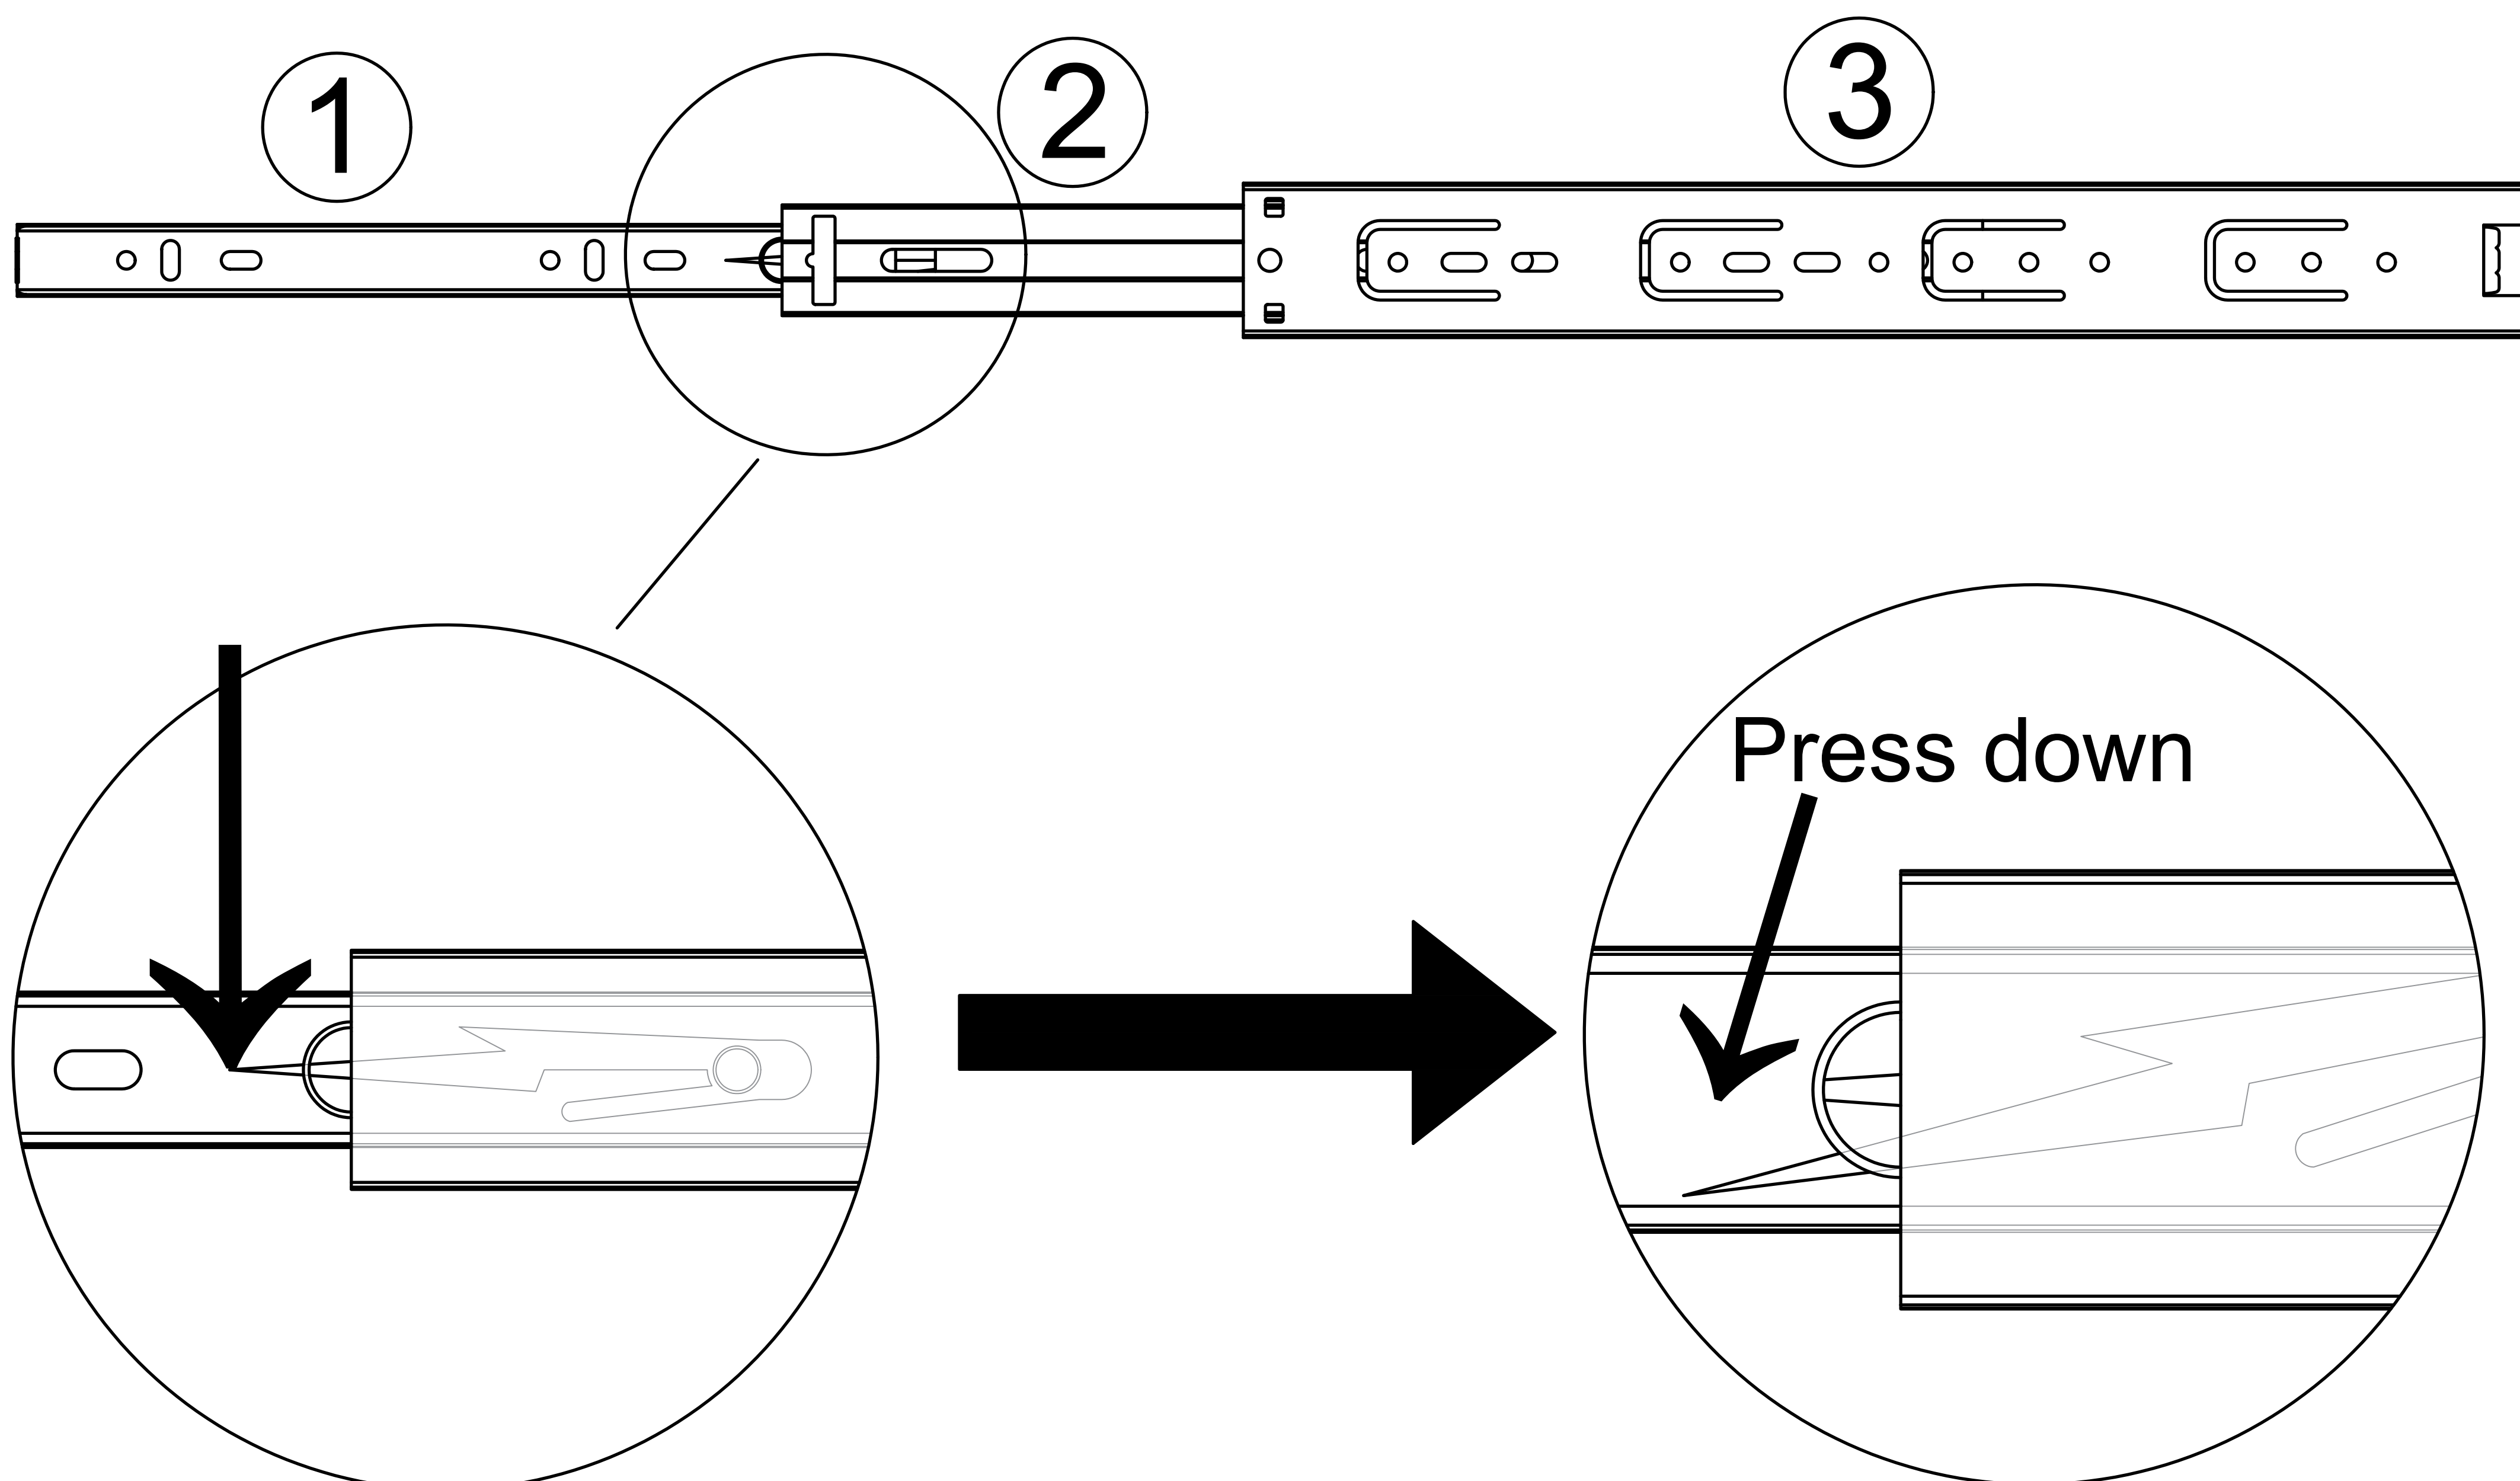


Step 2 : Press the nylon button and pull out ①.

 
Drawer rail decomposition completed schematic diagram

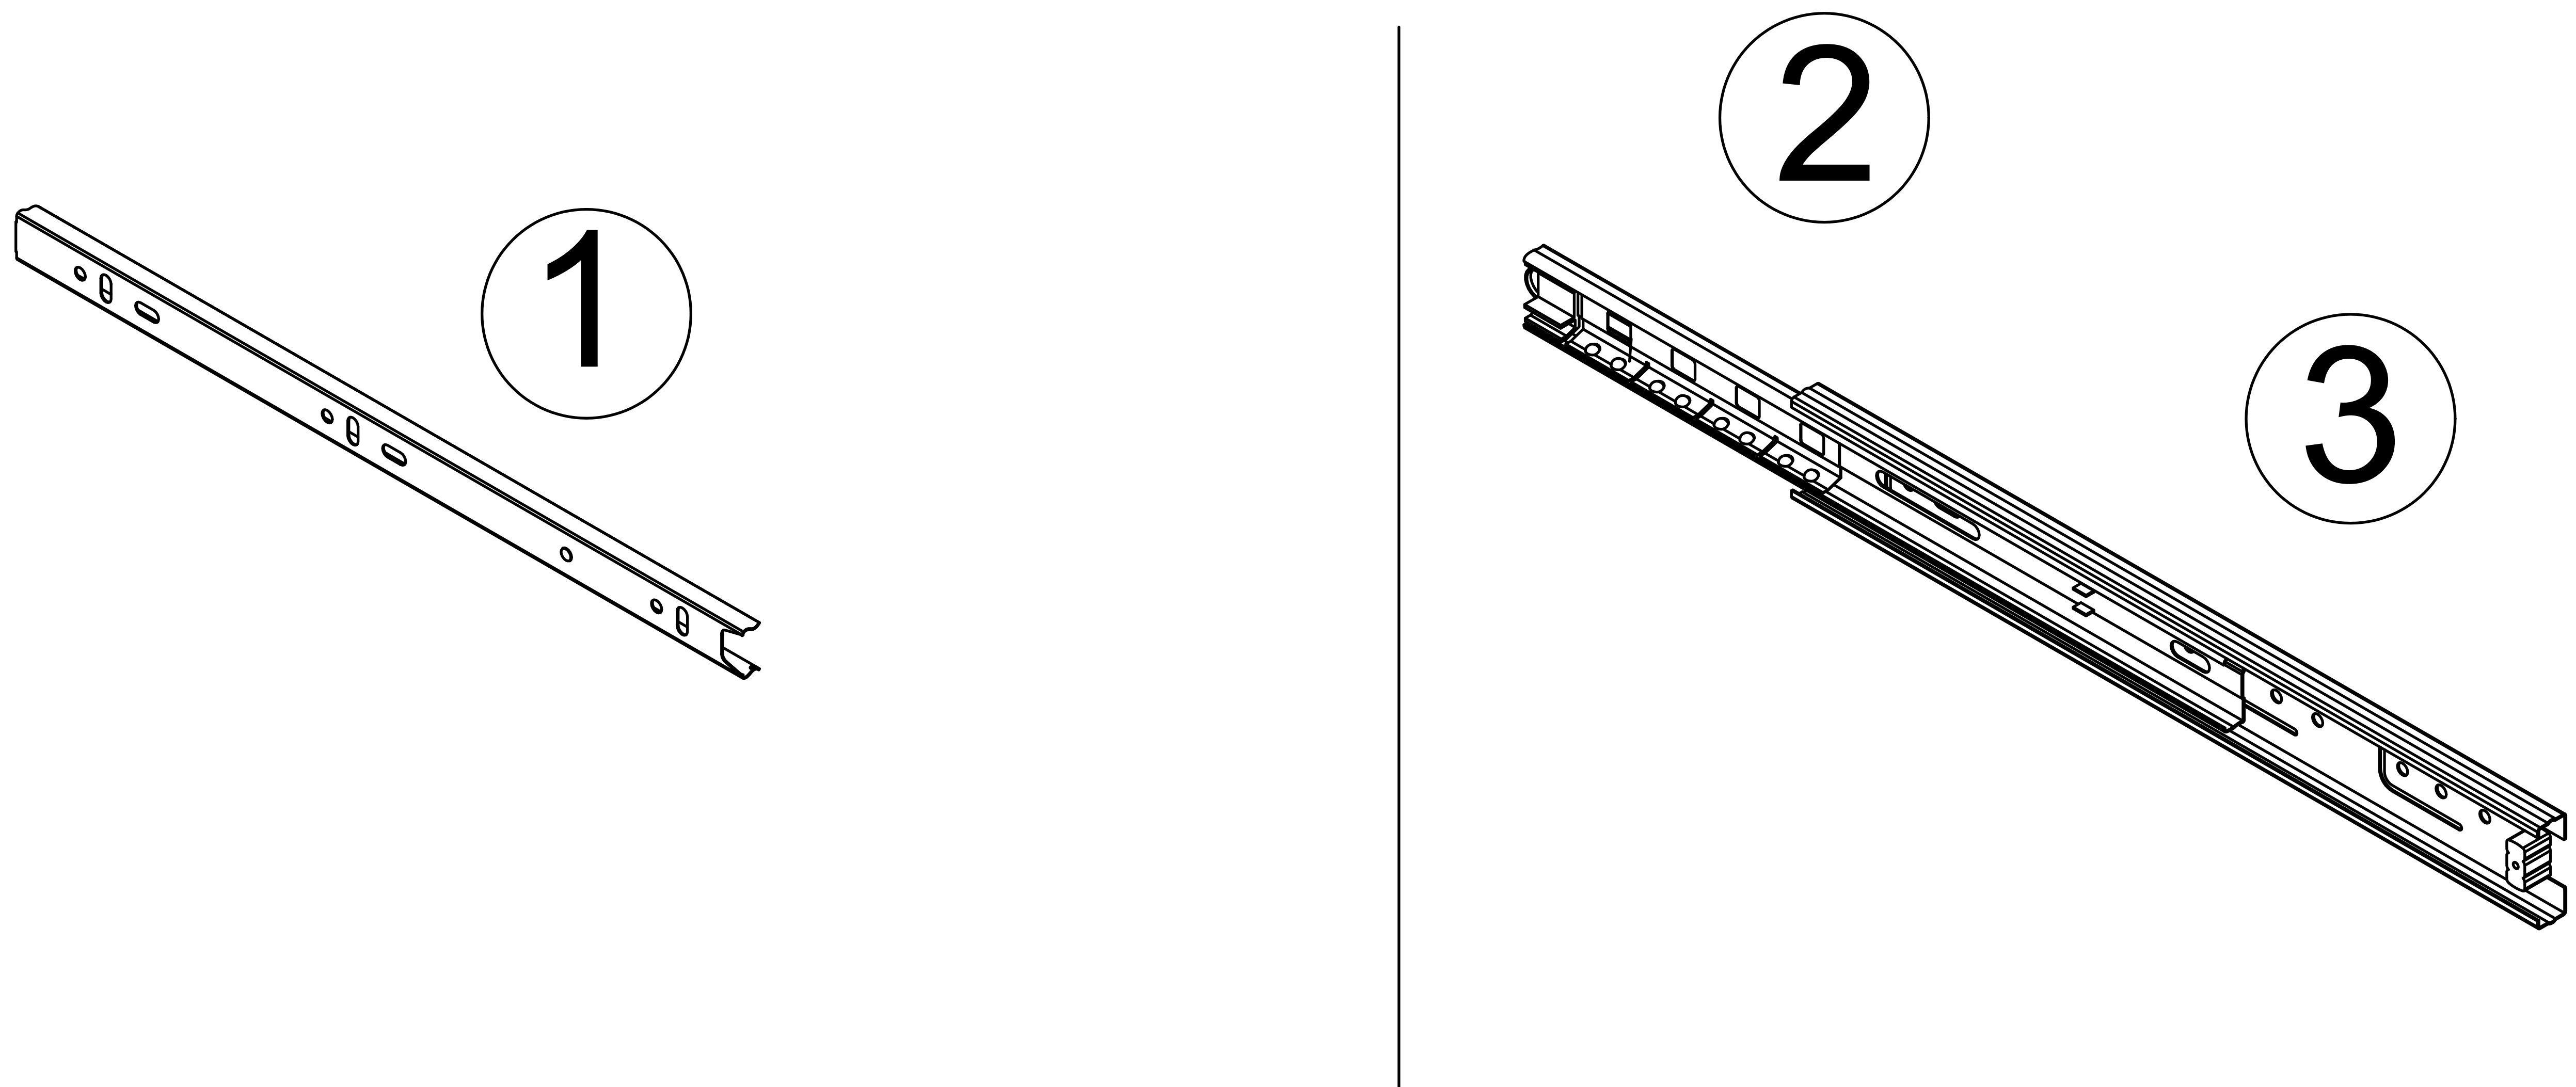


 
Step 6

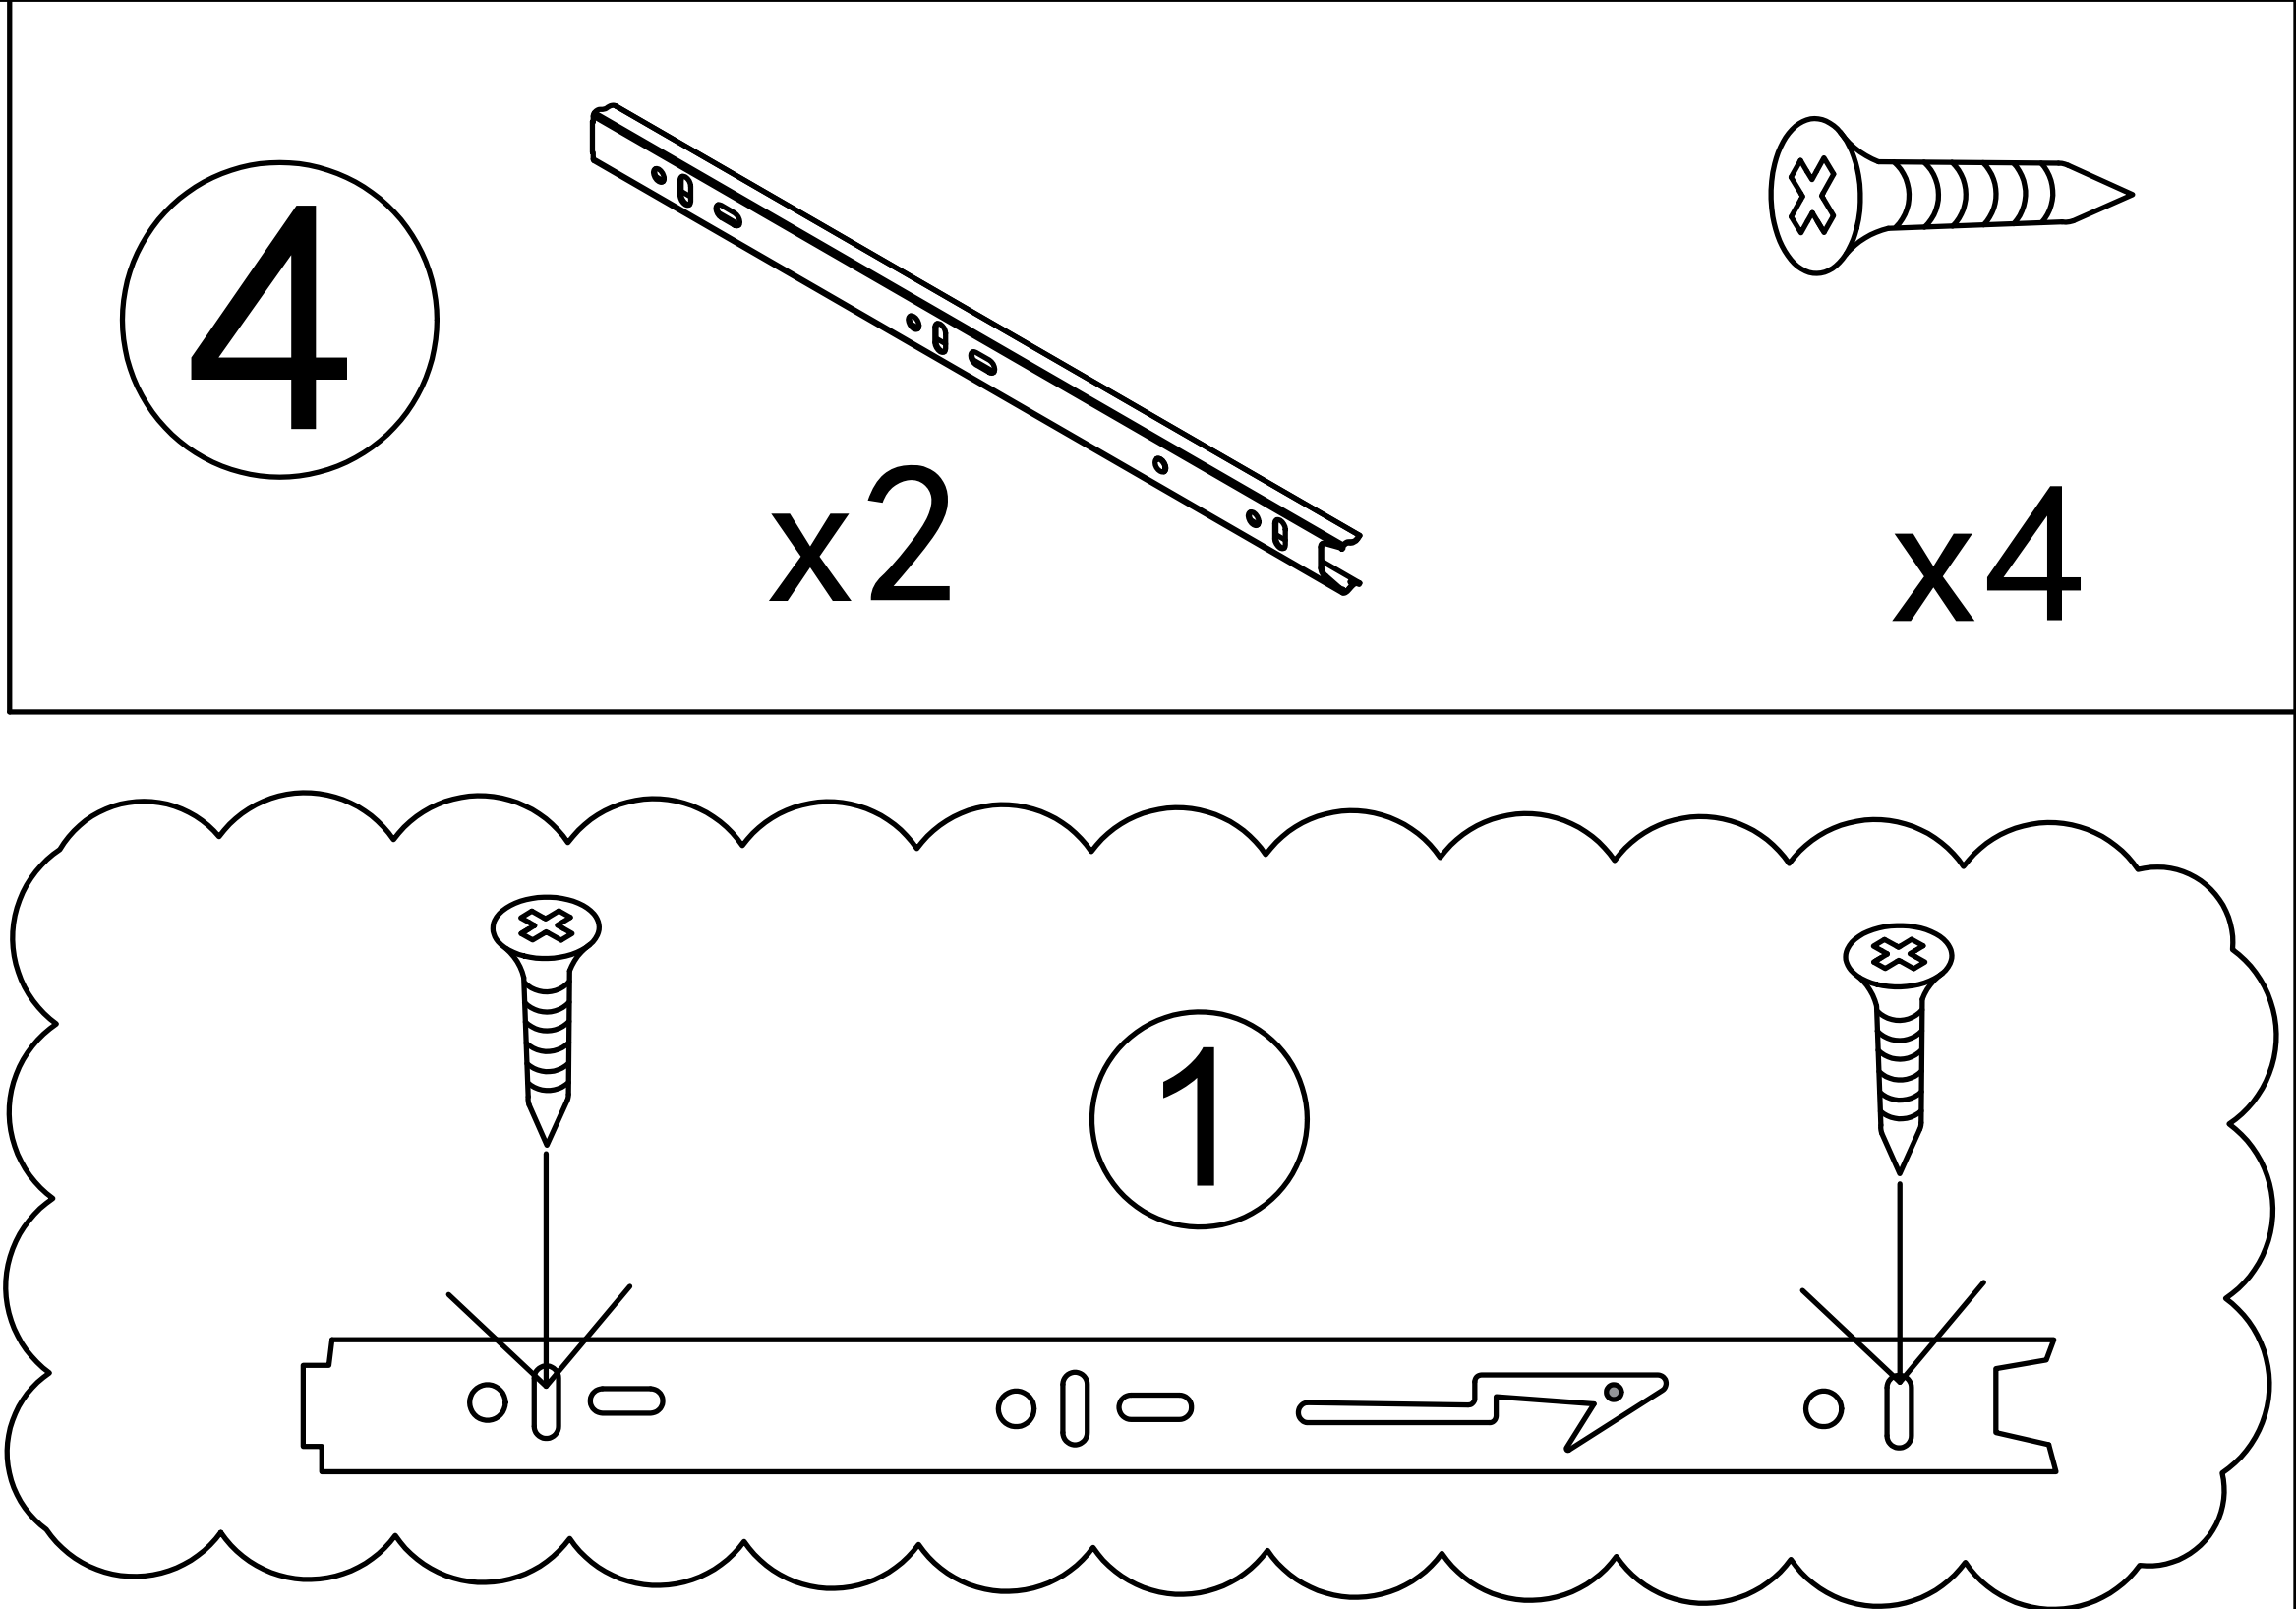

Install with Material No.④ here.

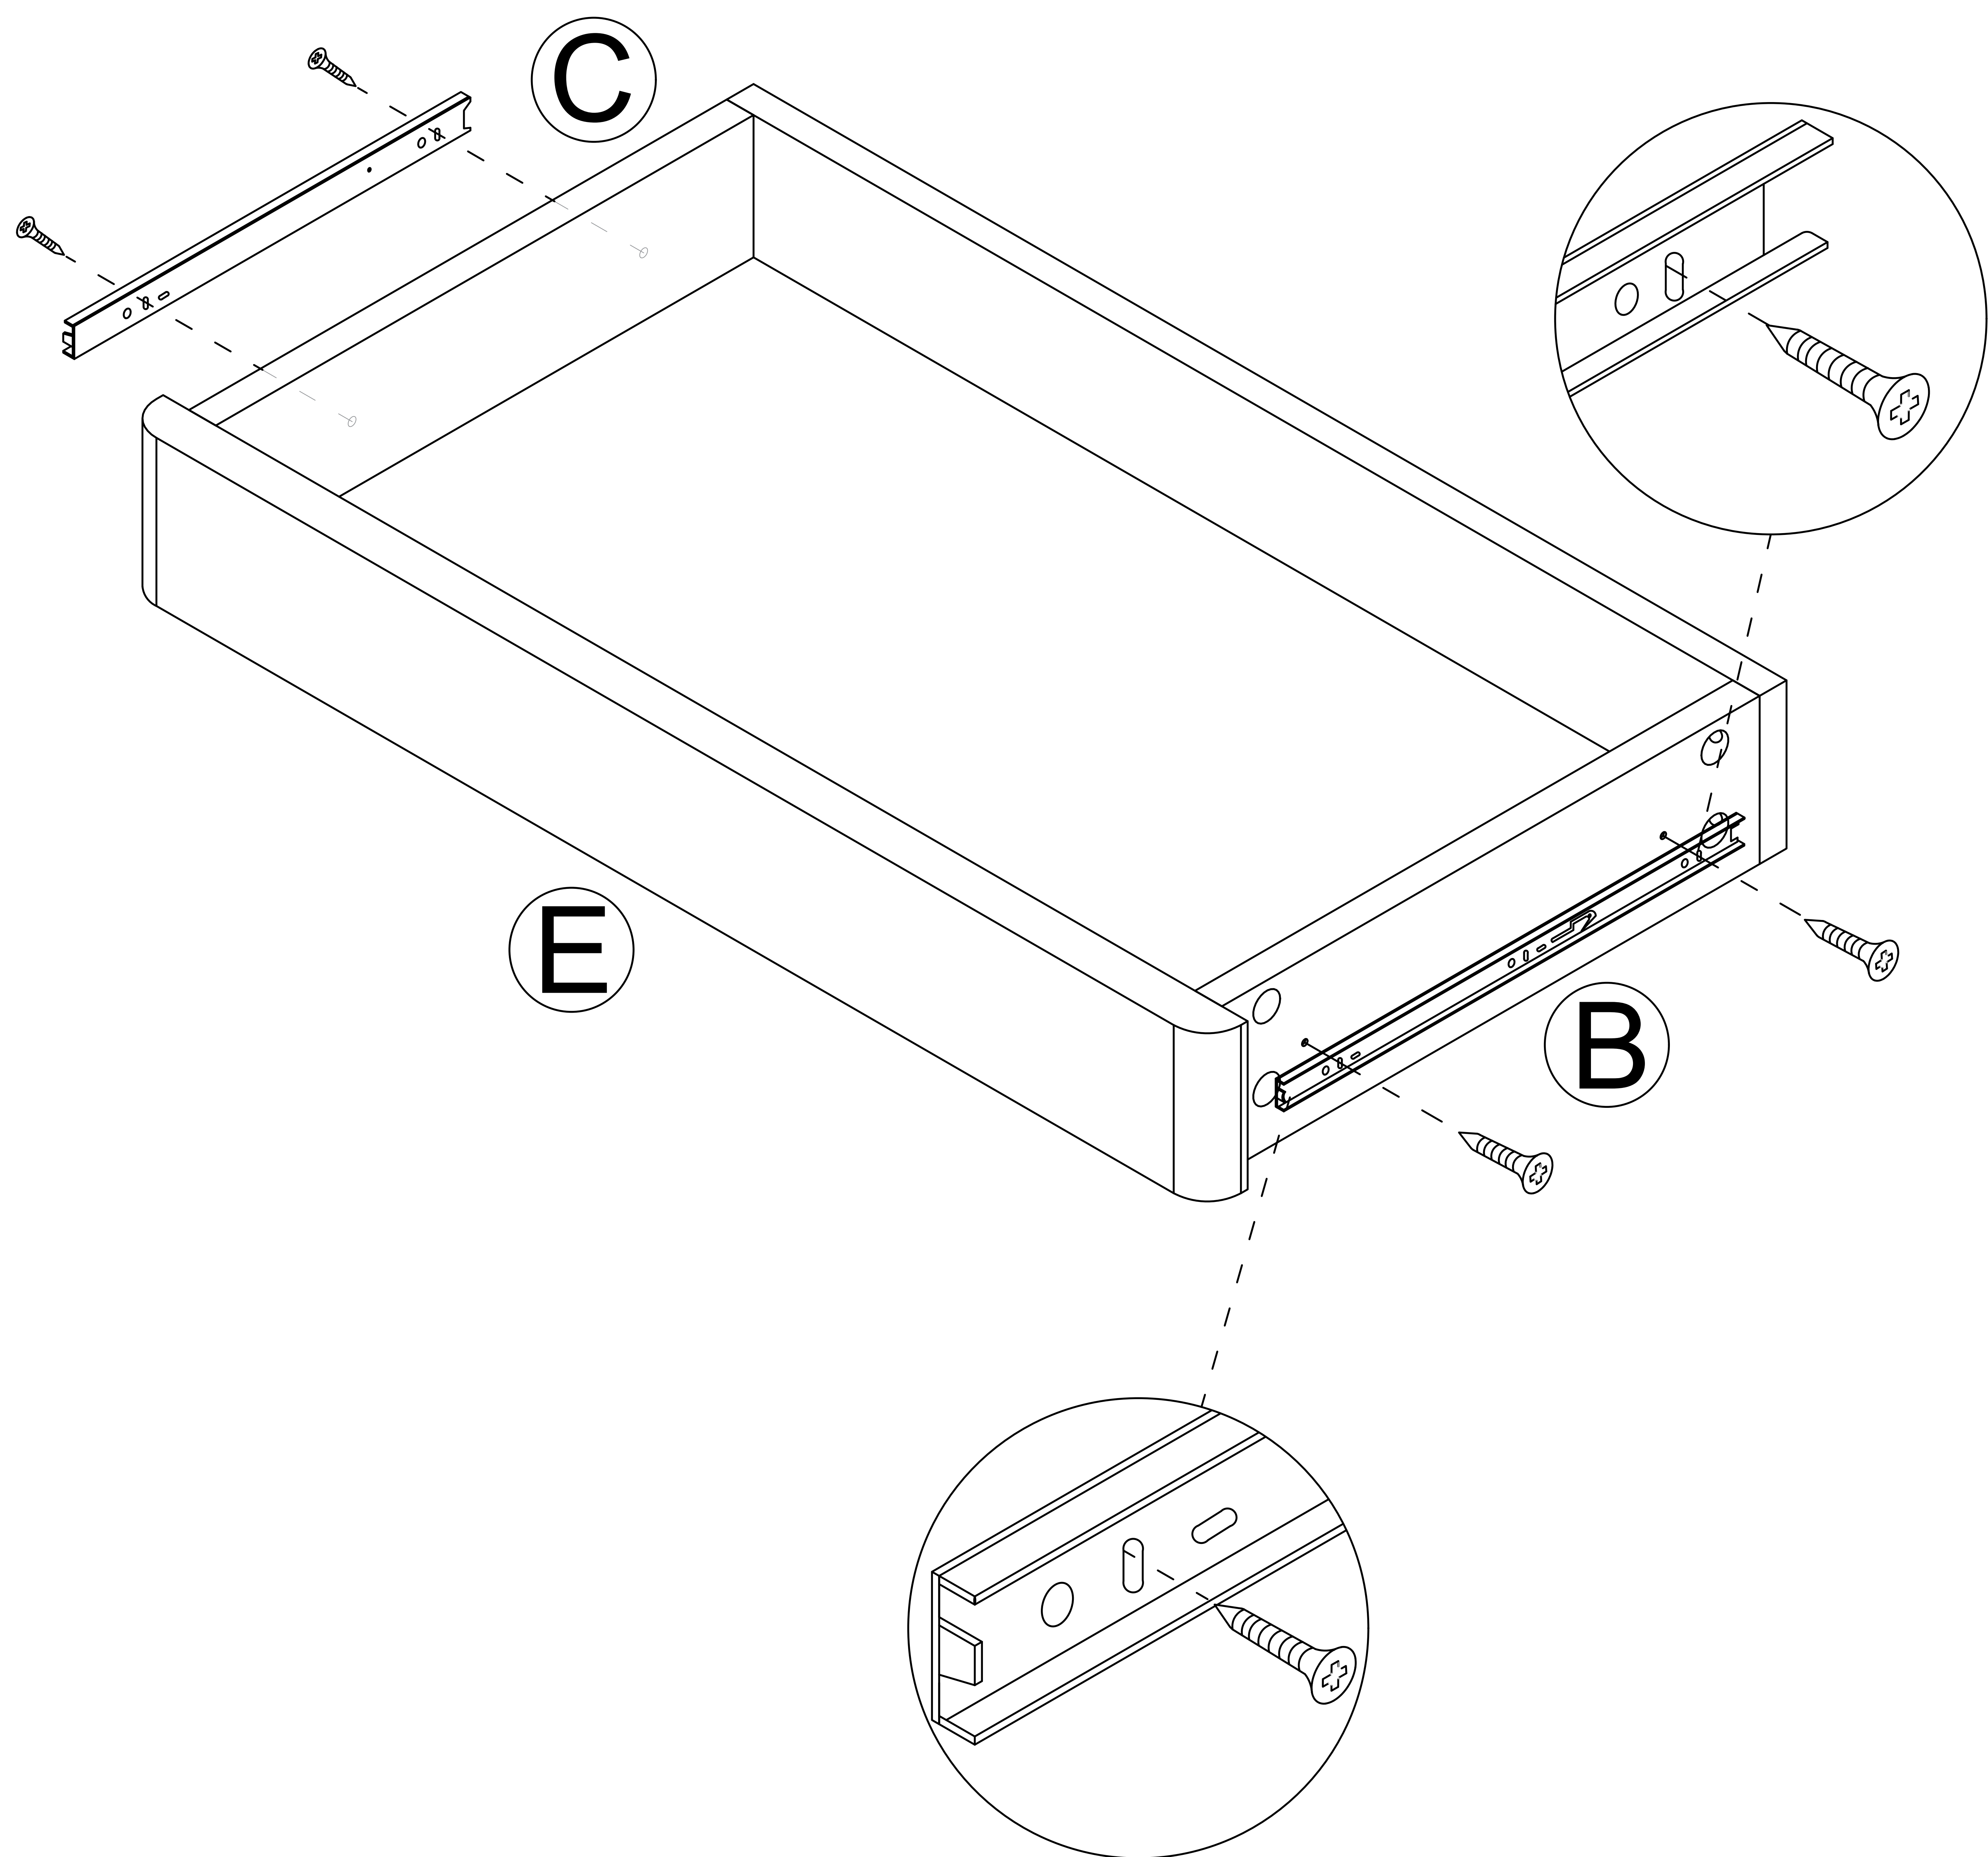 


  Step 7

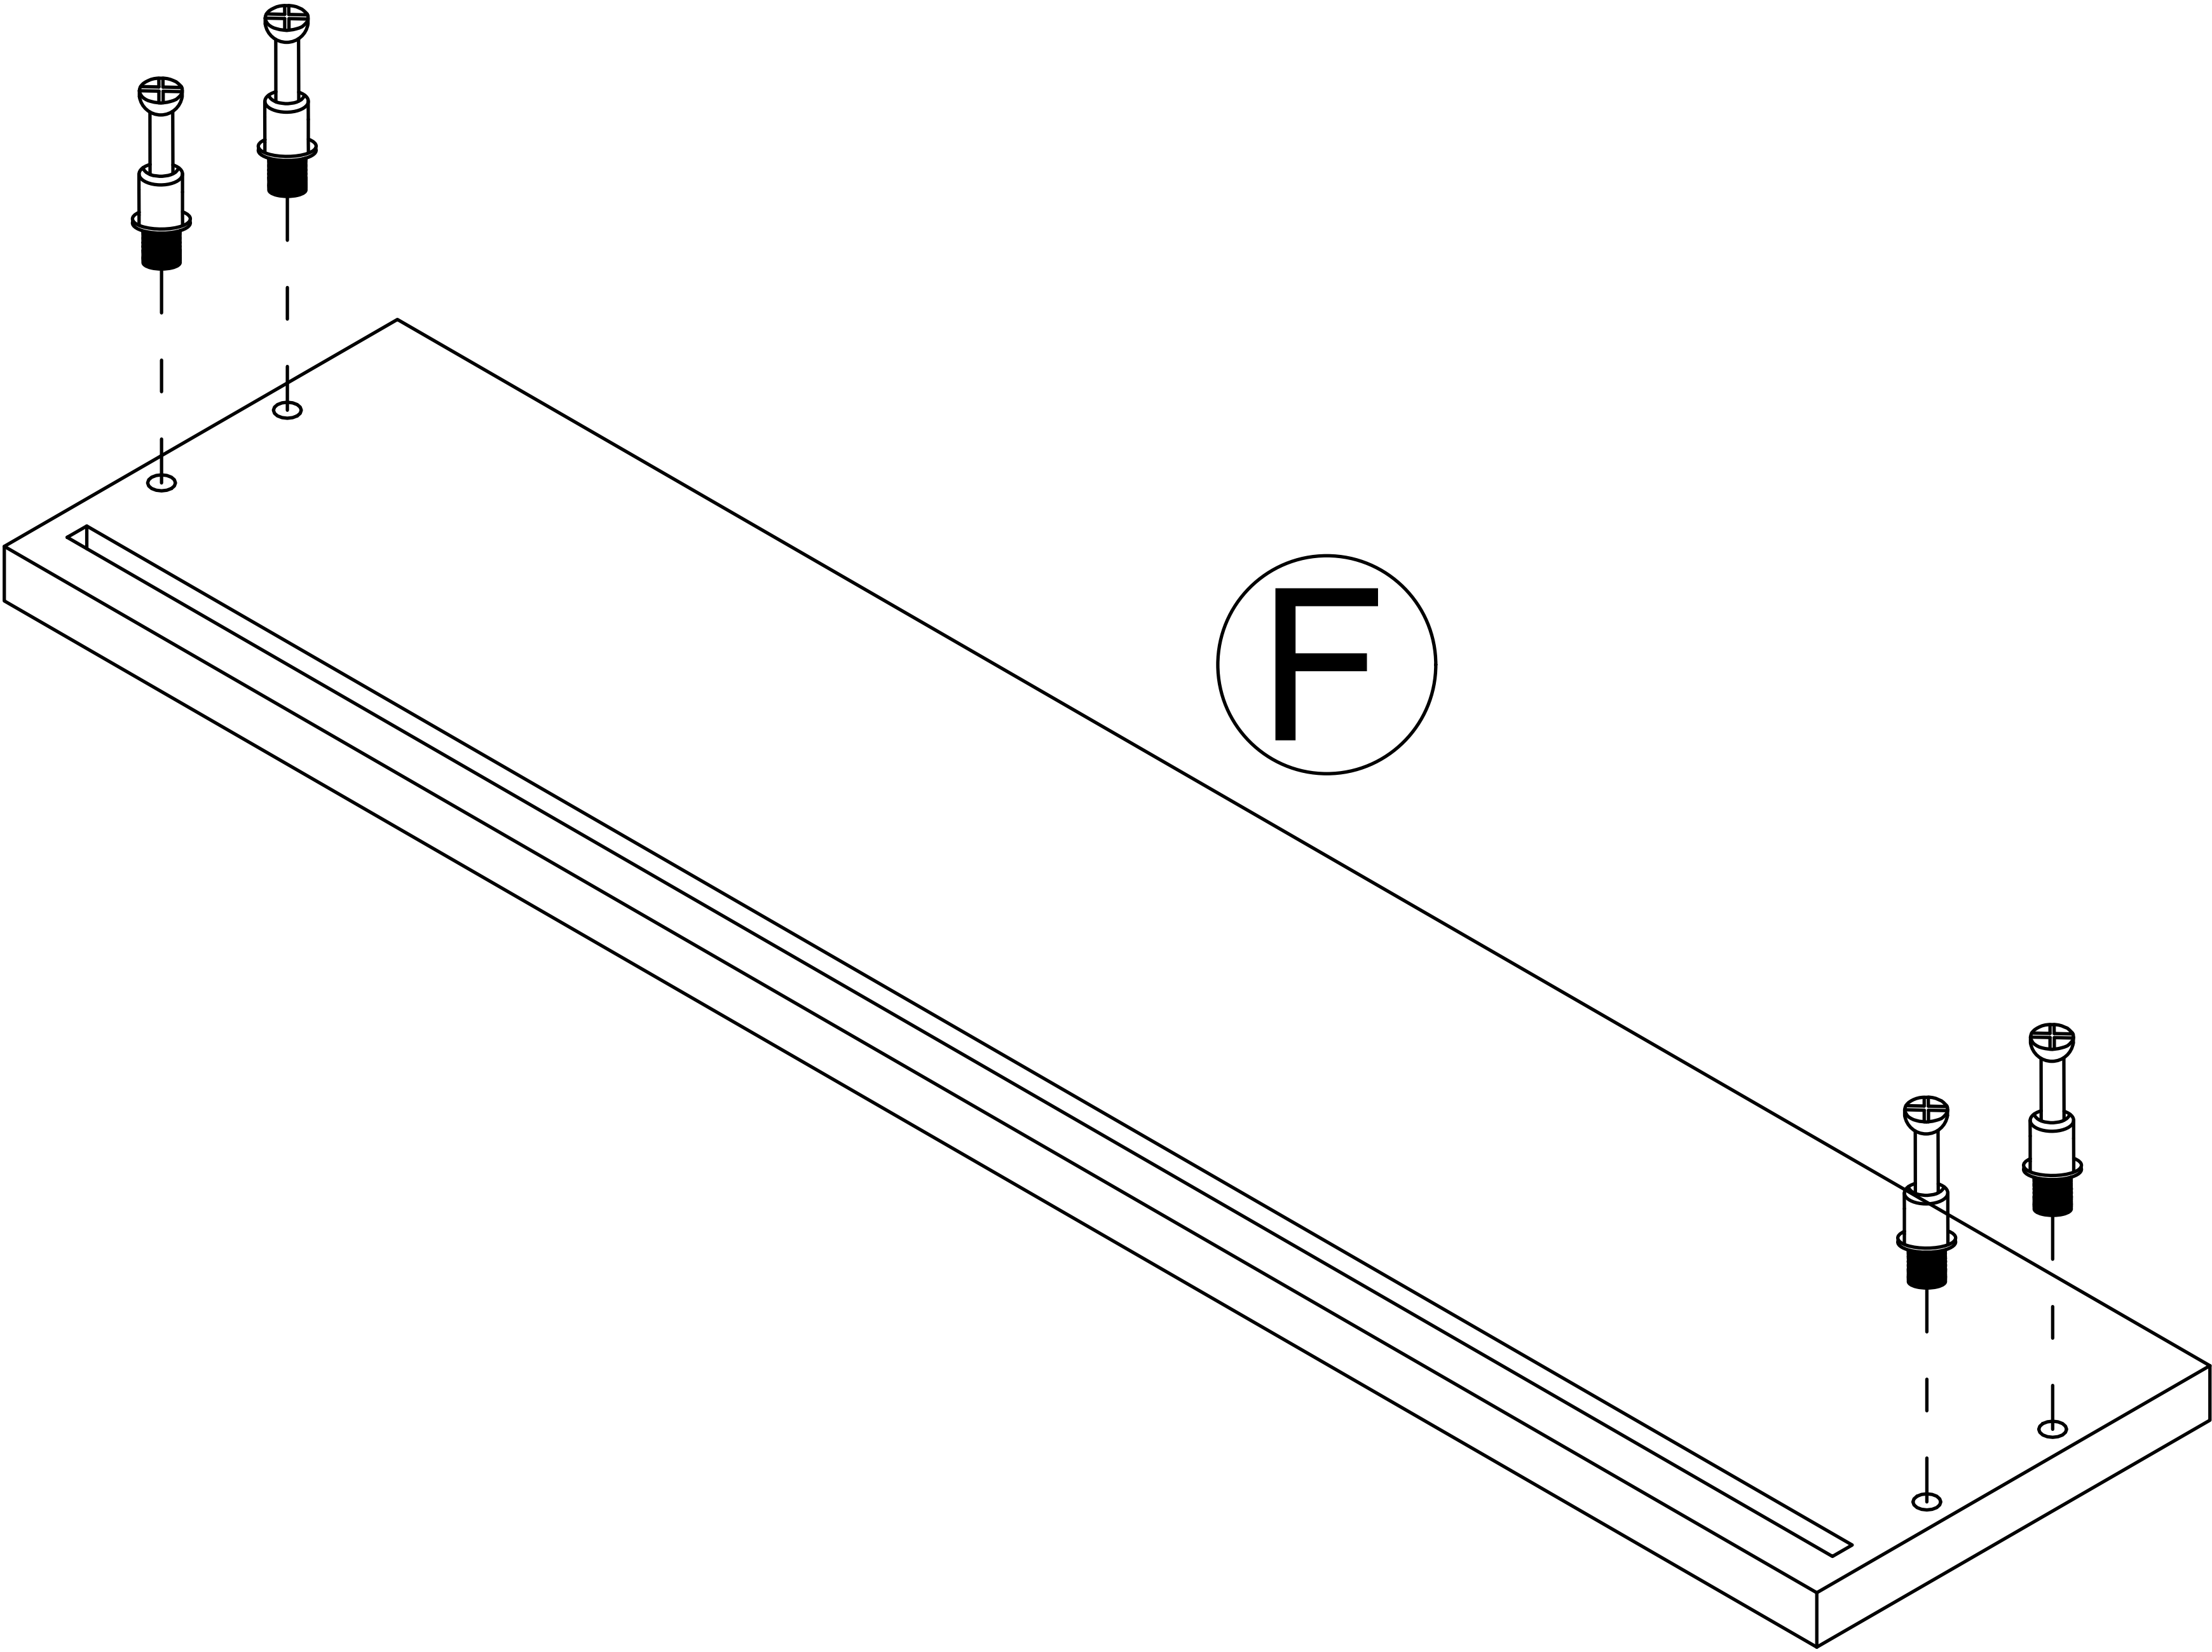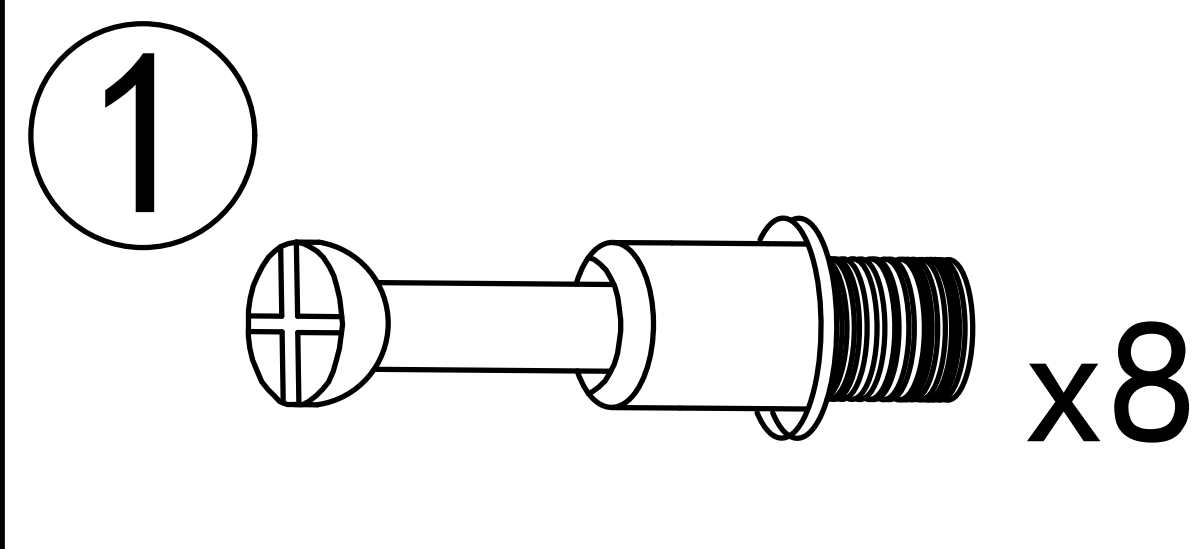


Steps and objects x2

 Step 8

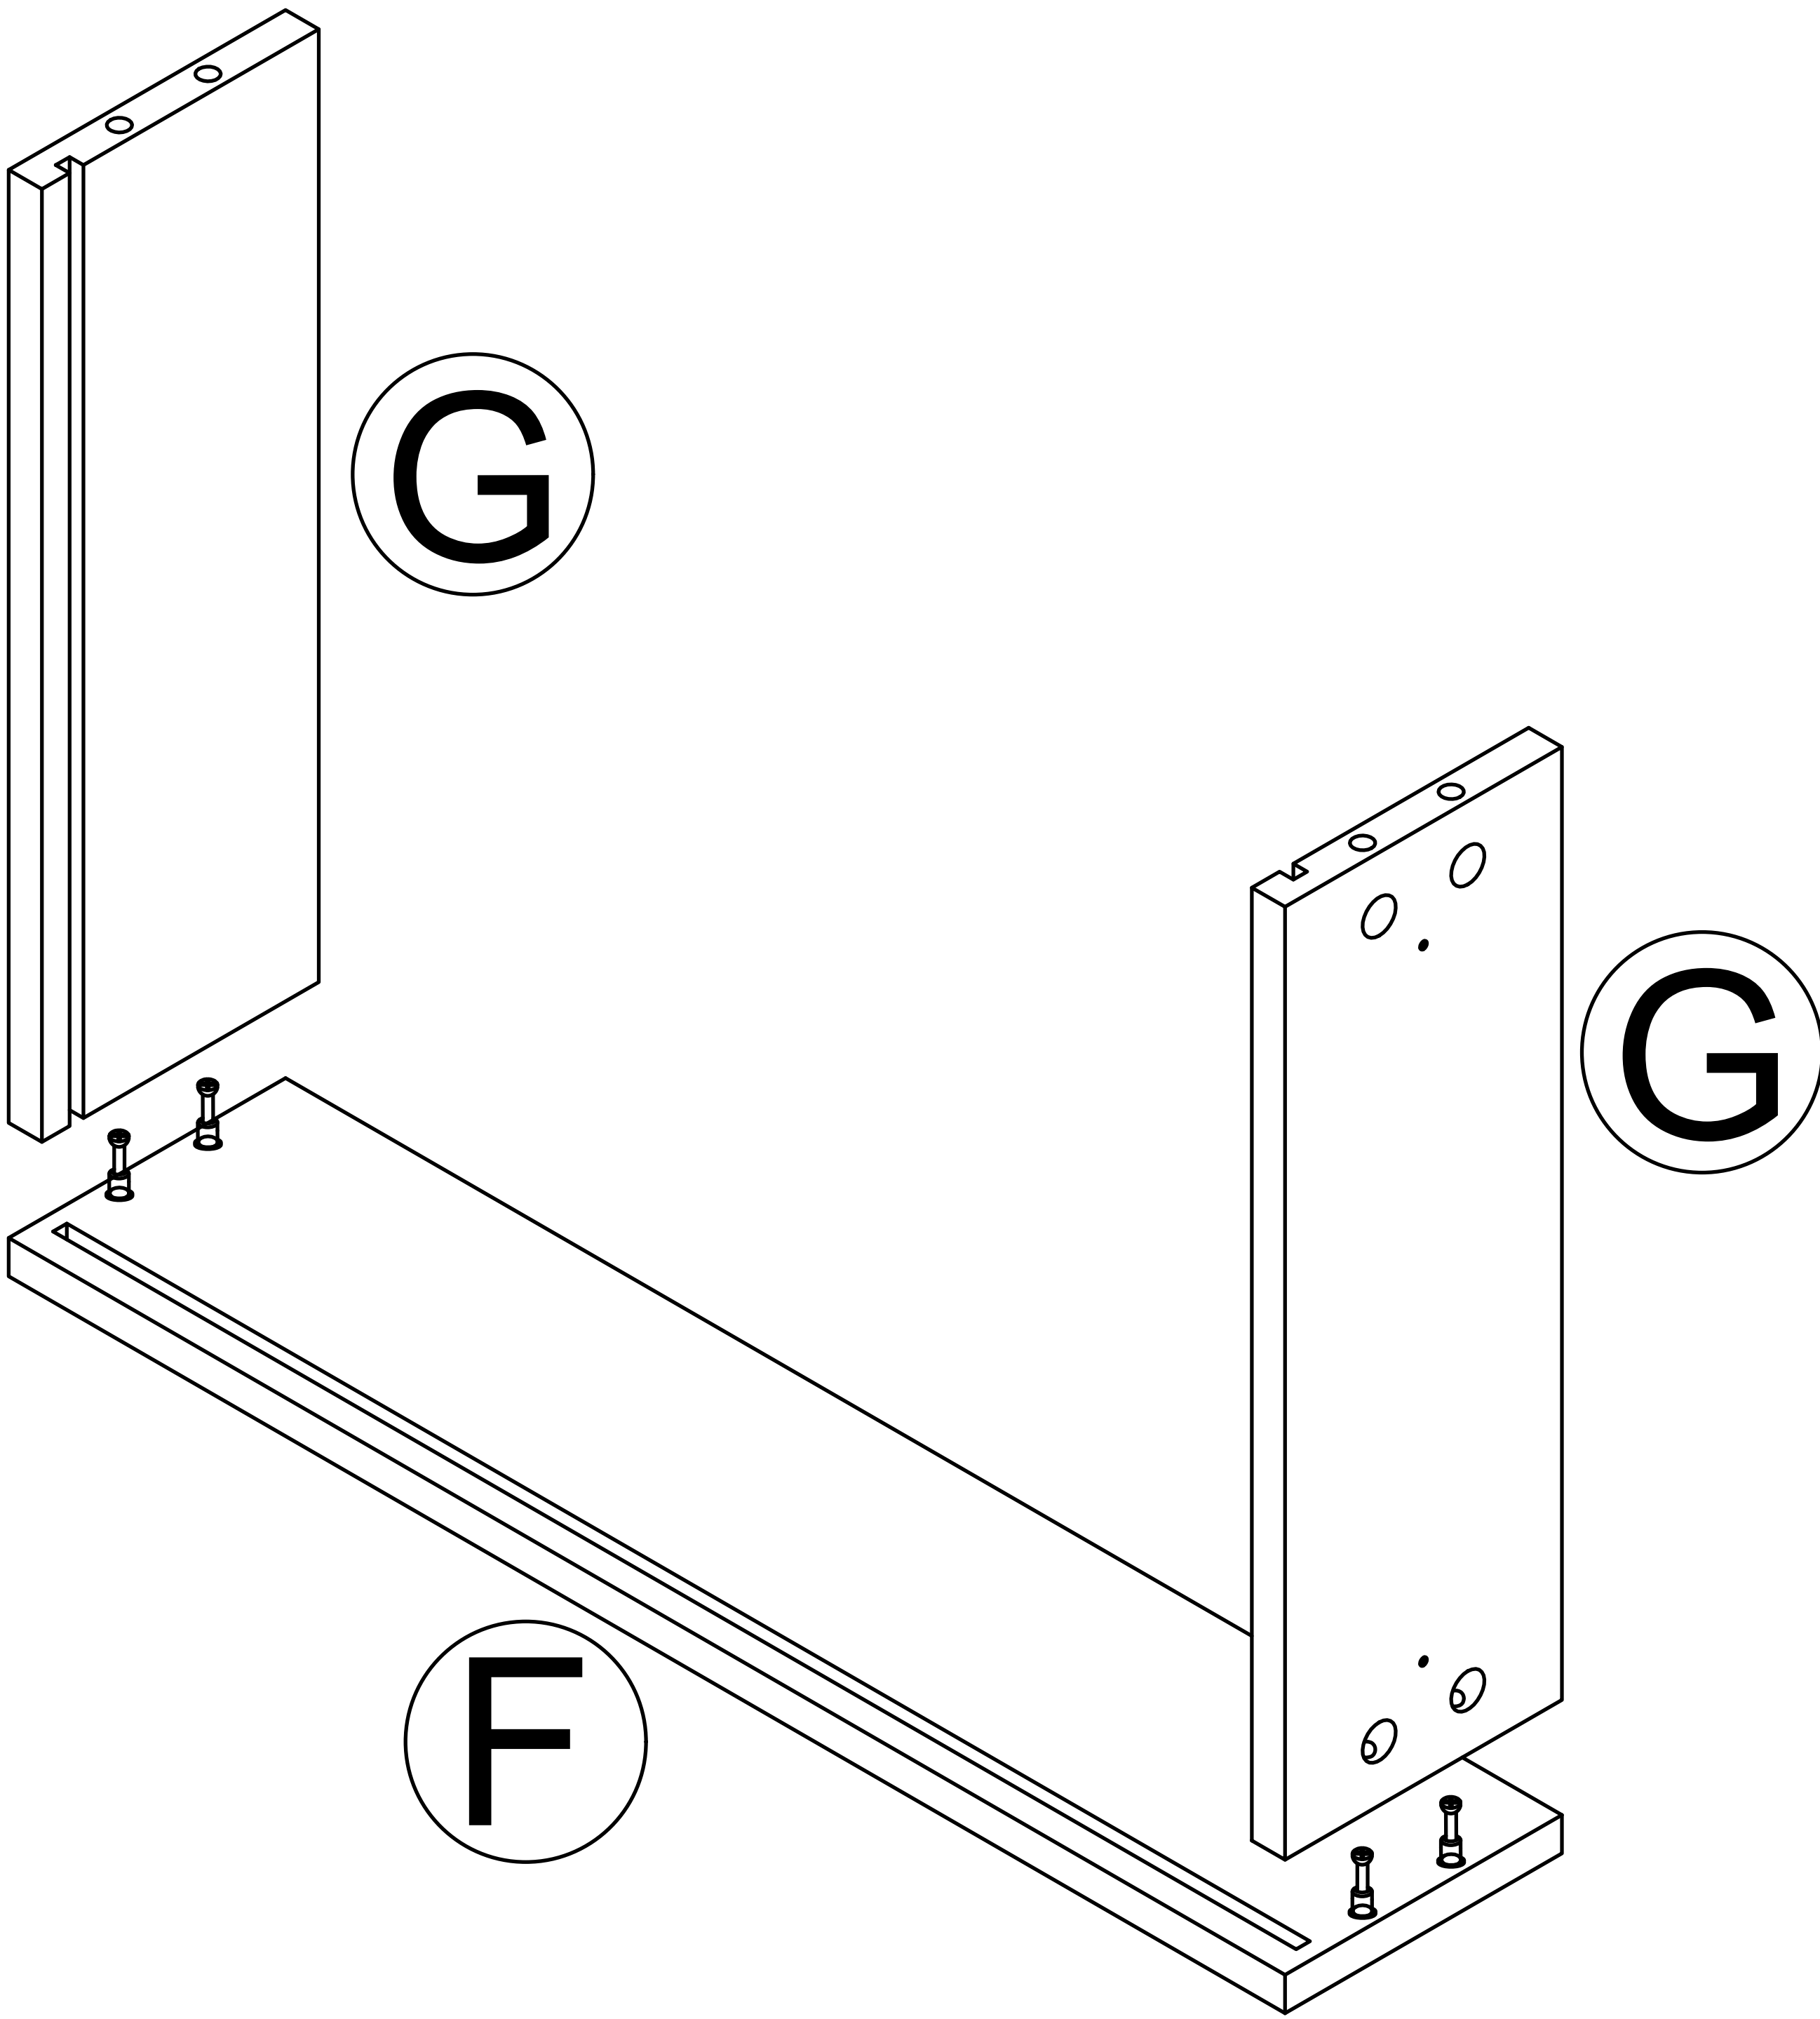



Steps and objects x2

 Step 9

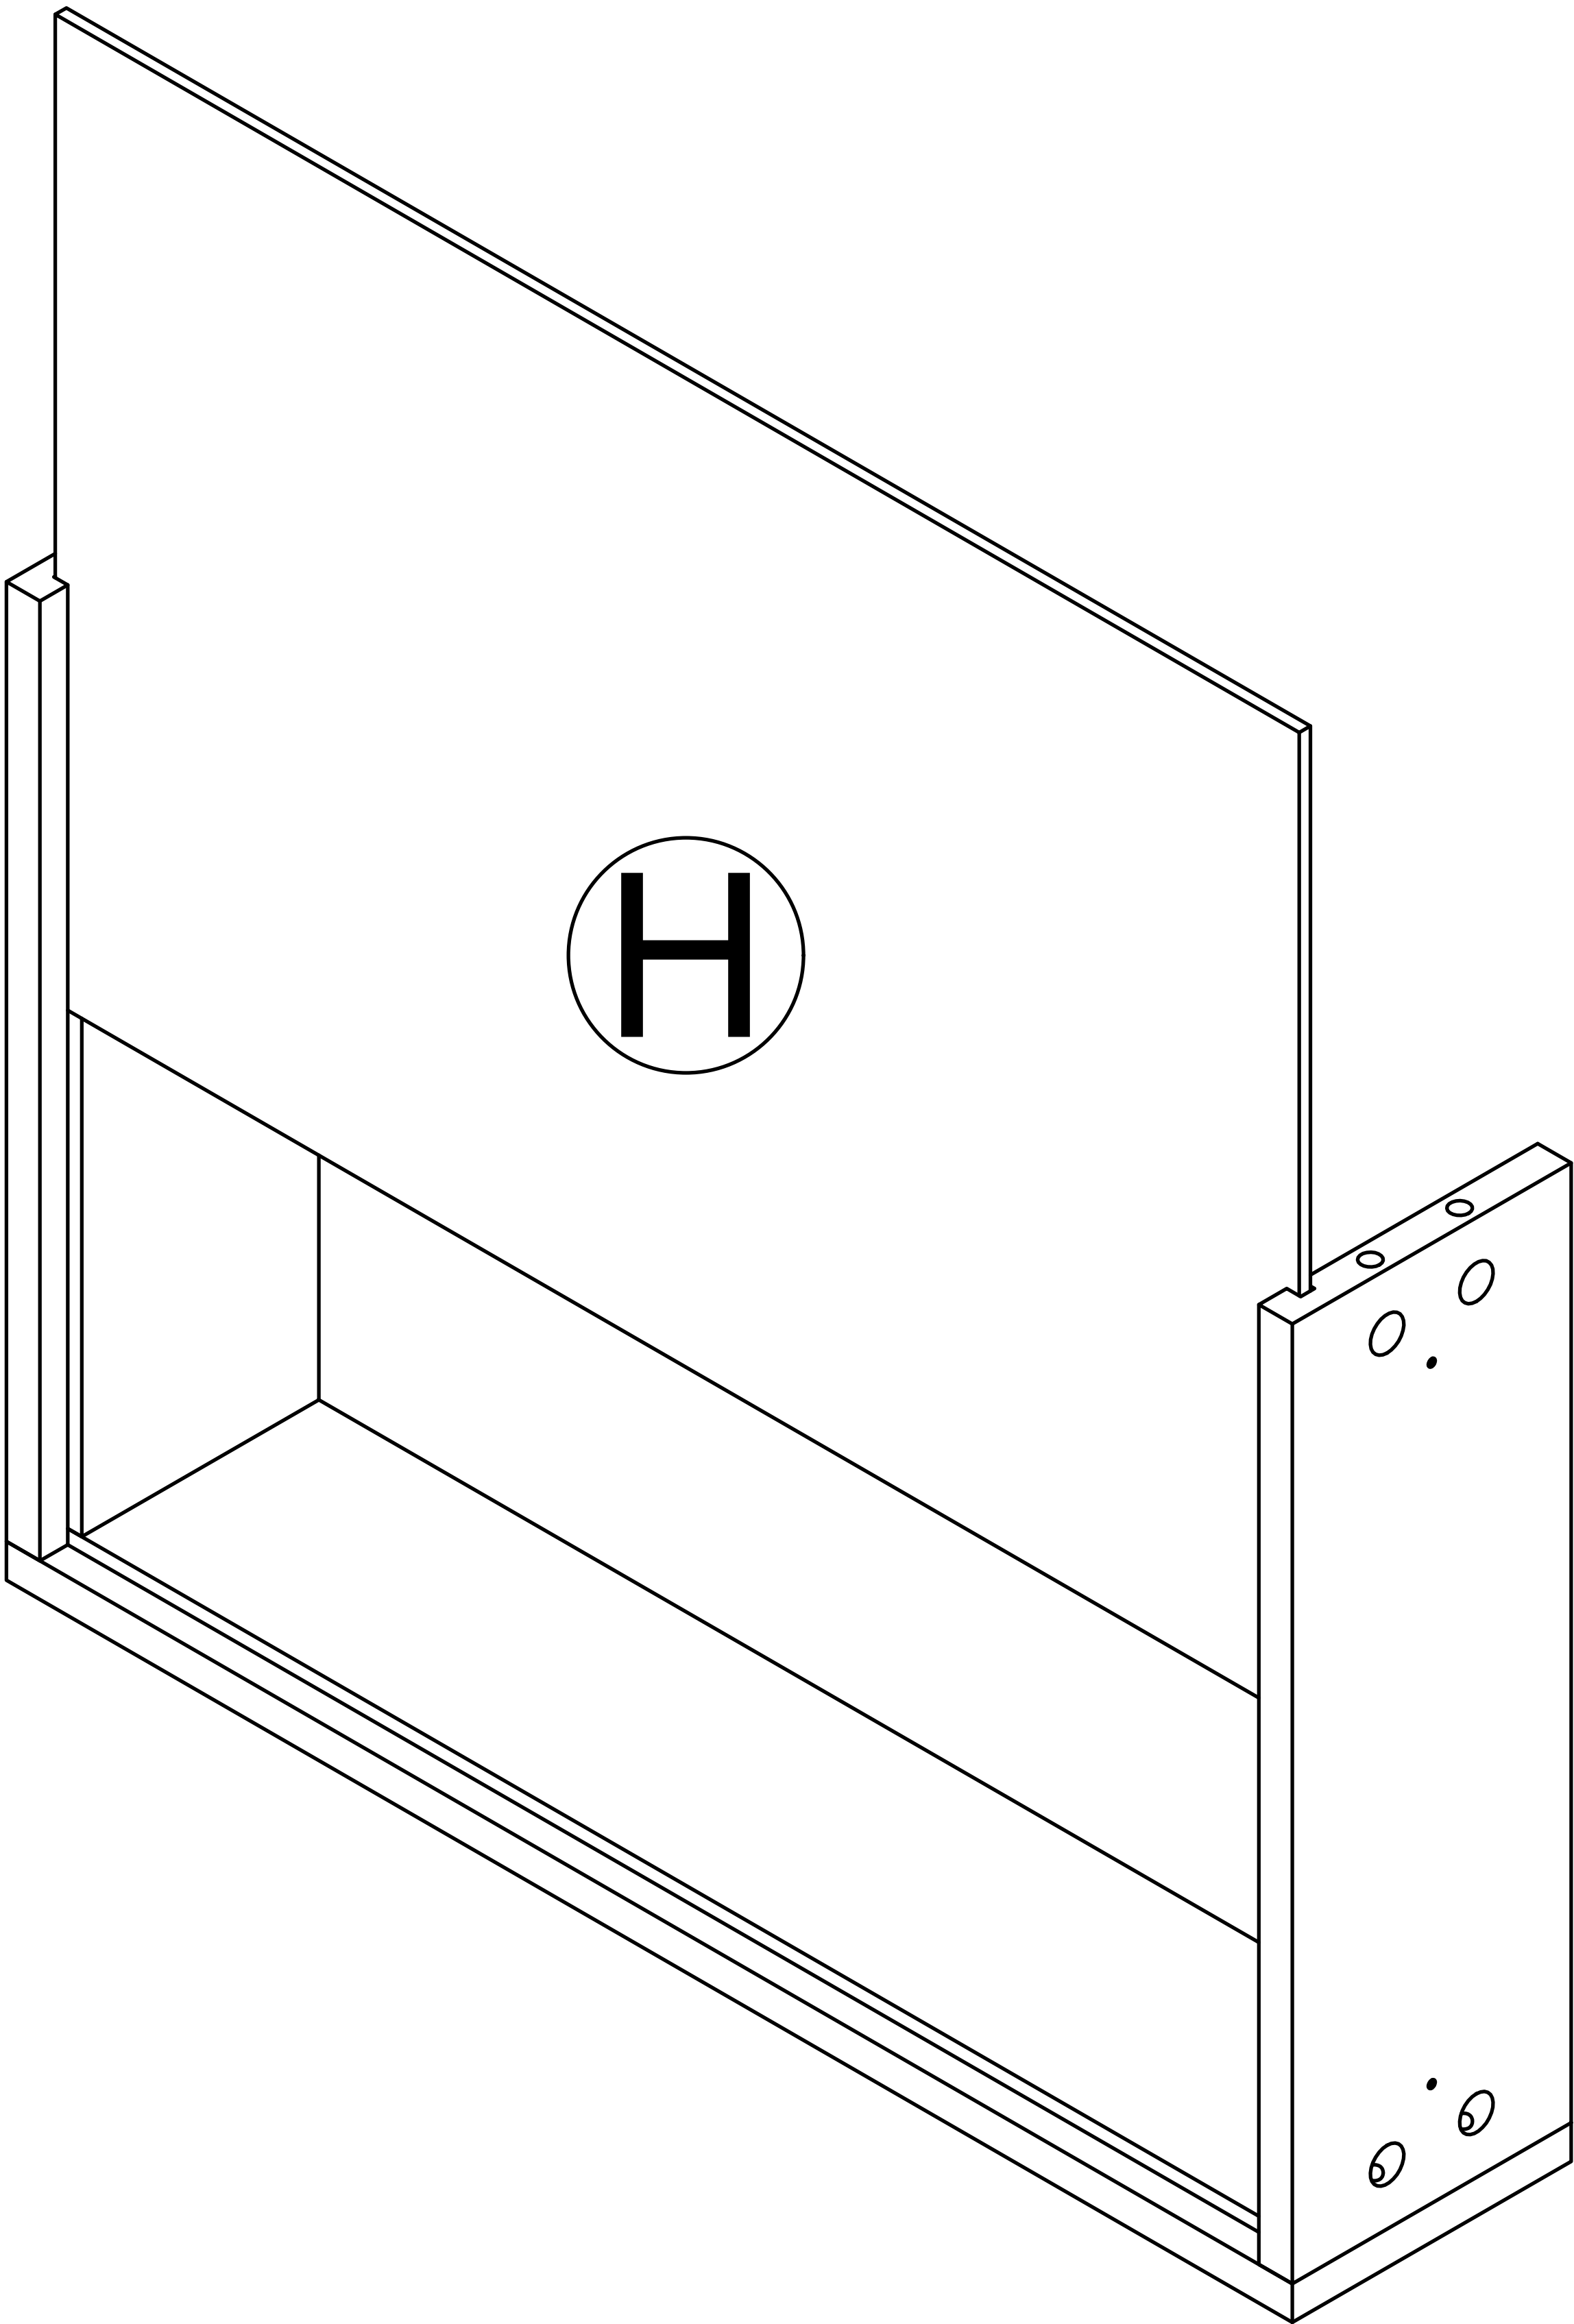


Steps and objects x2

  Step 10

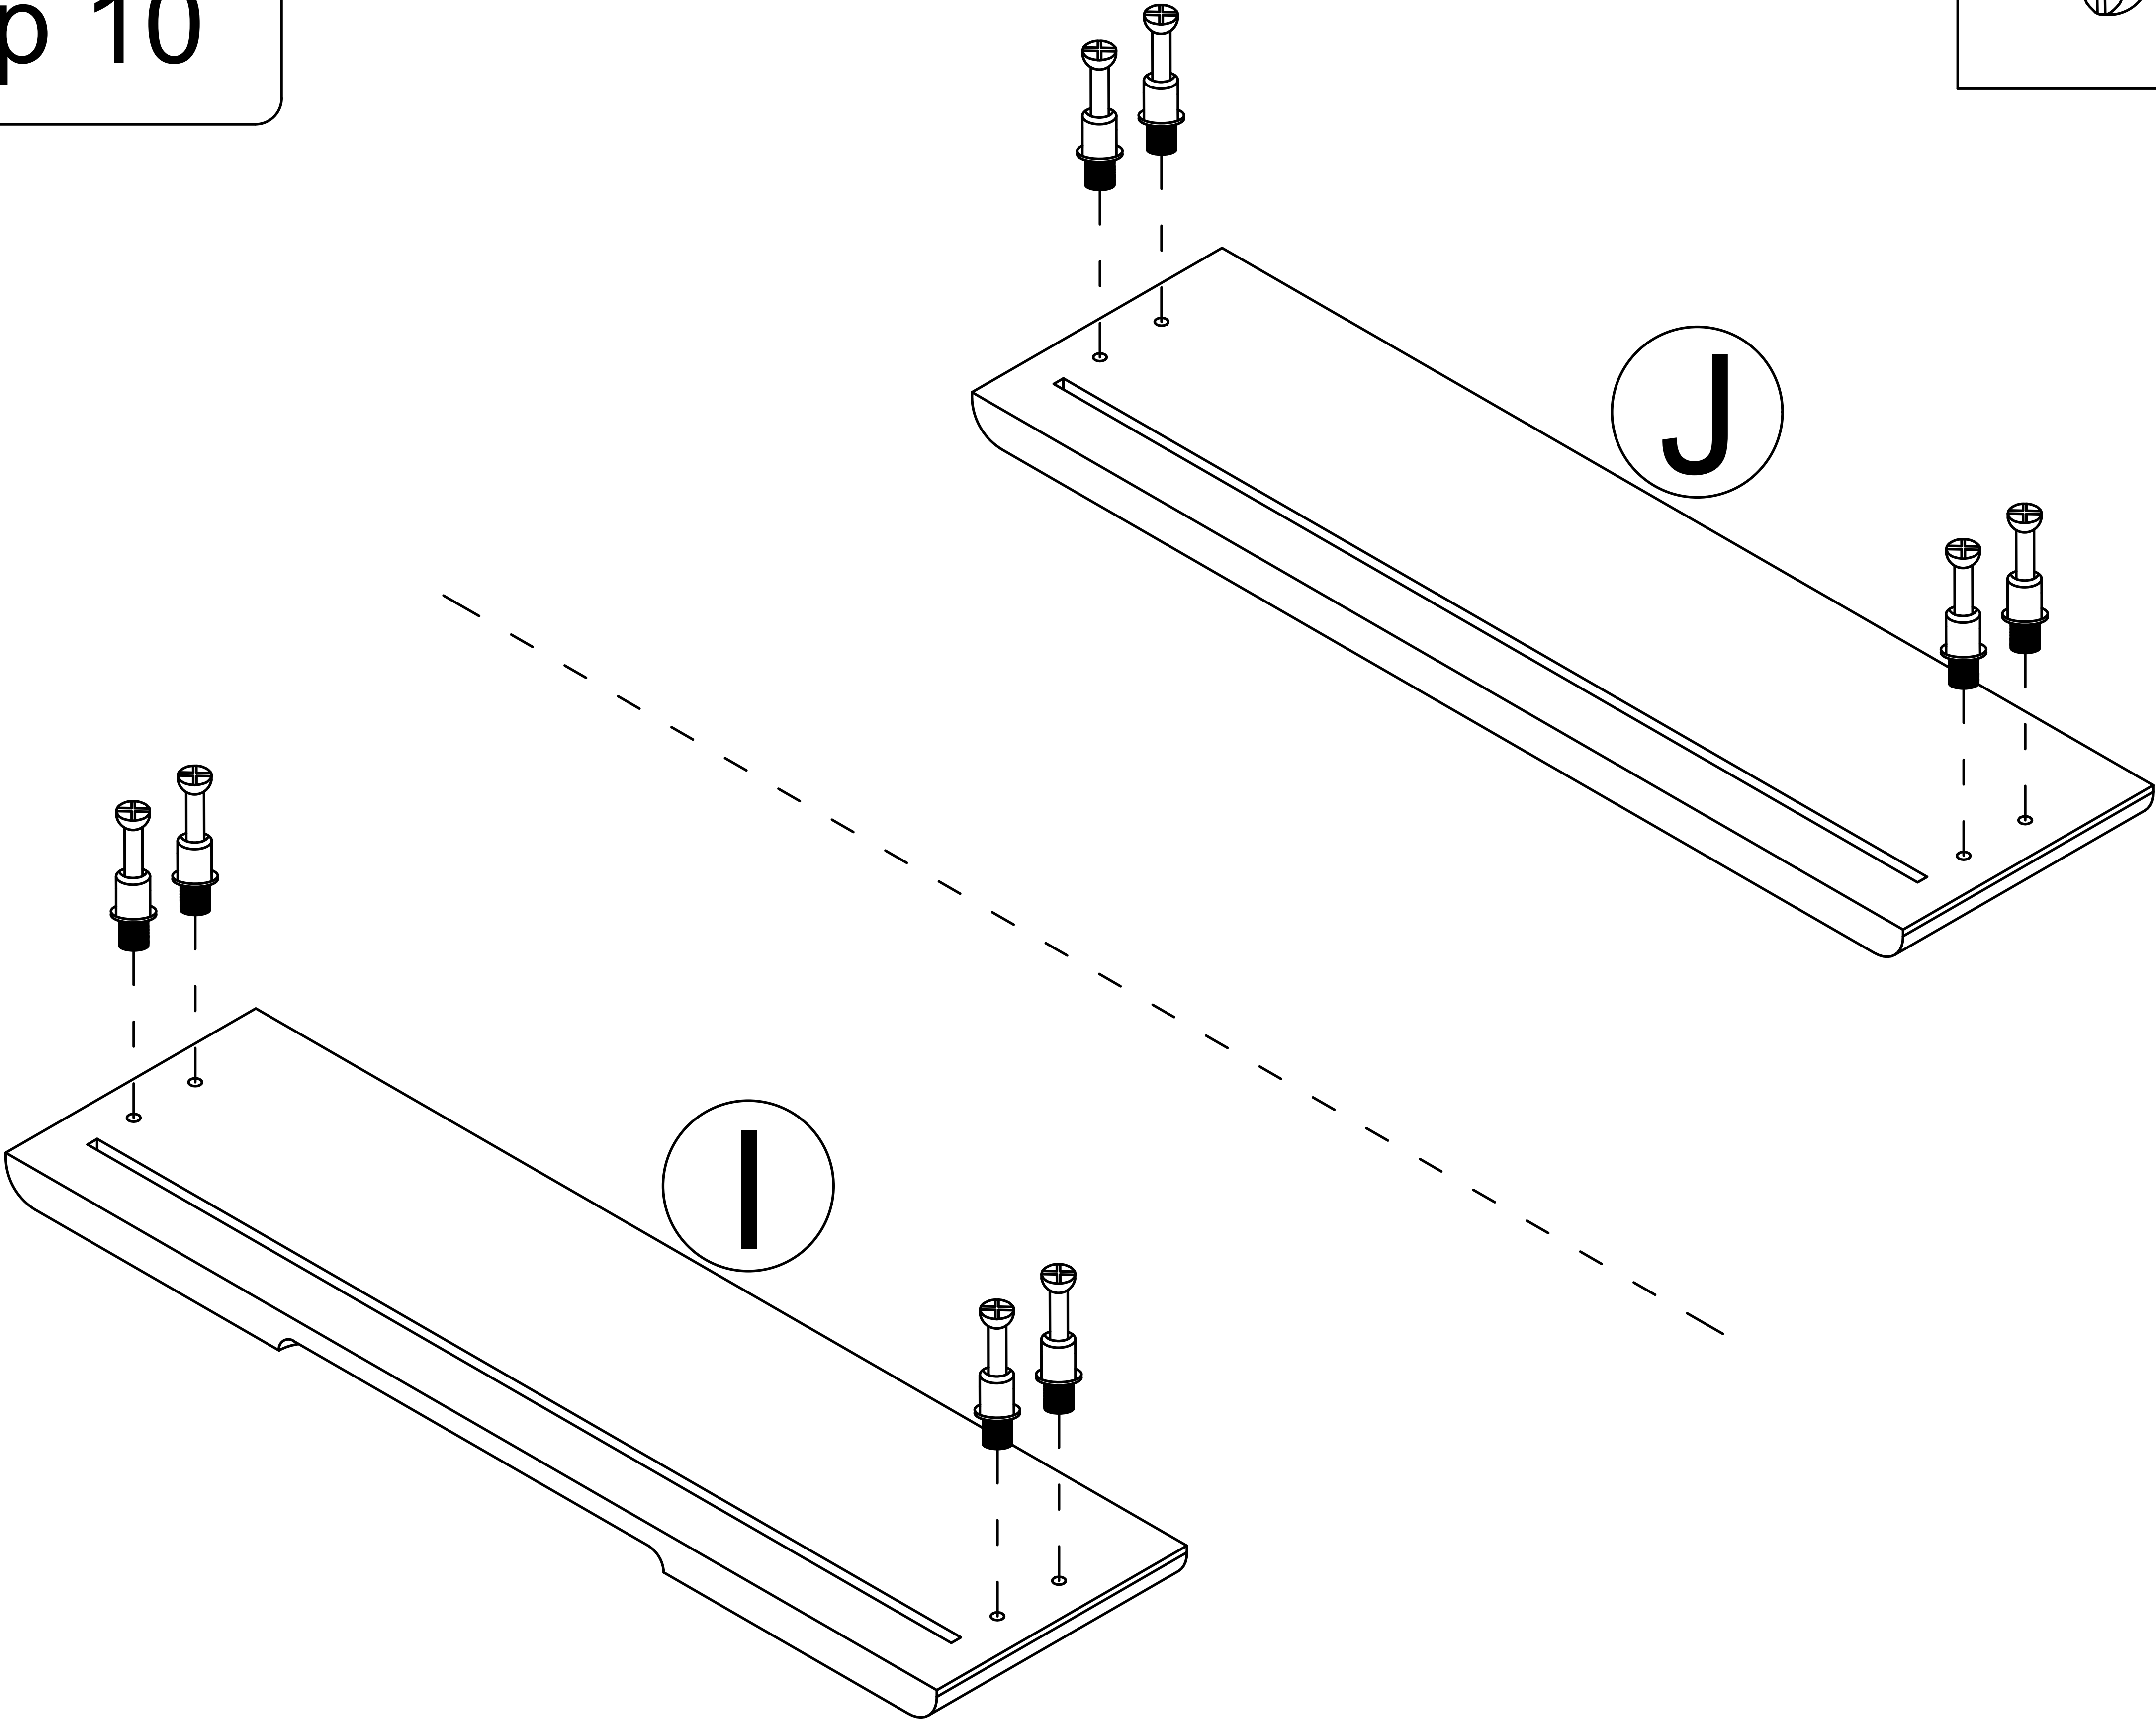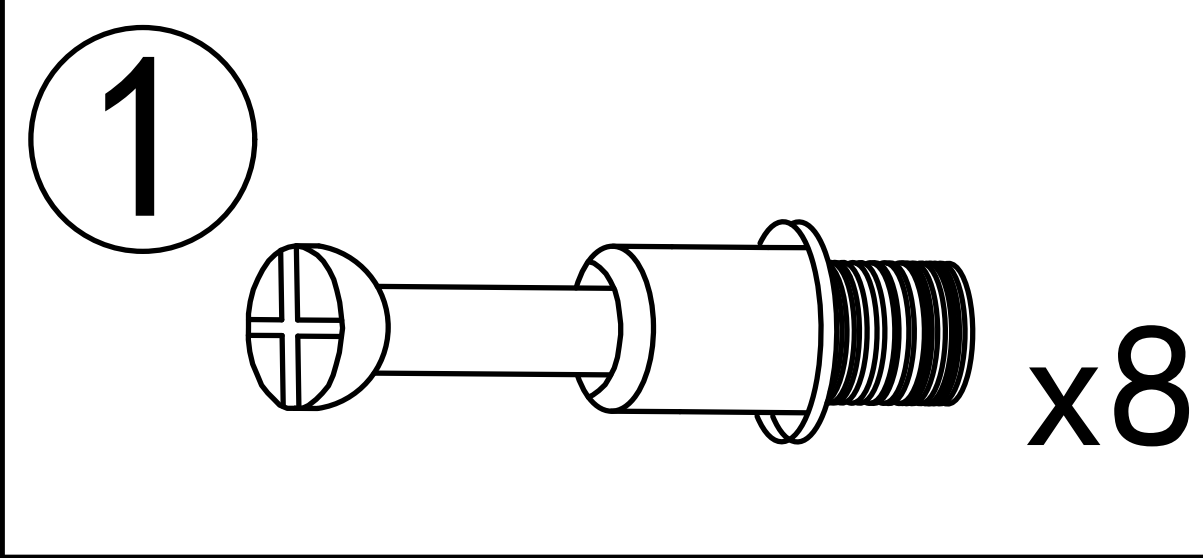


Step 11

 2

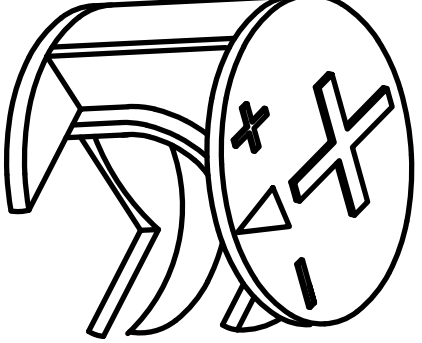


x8

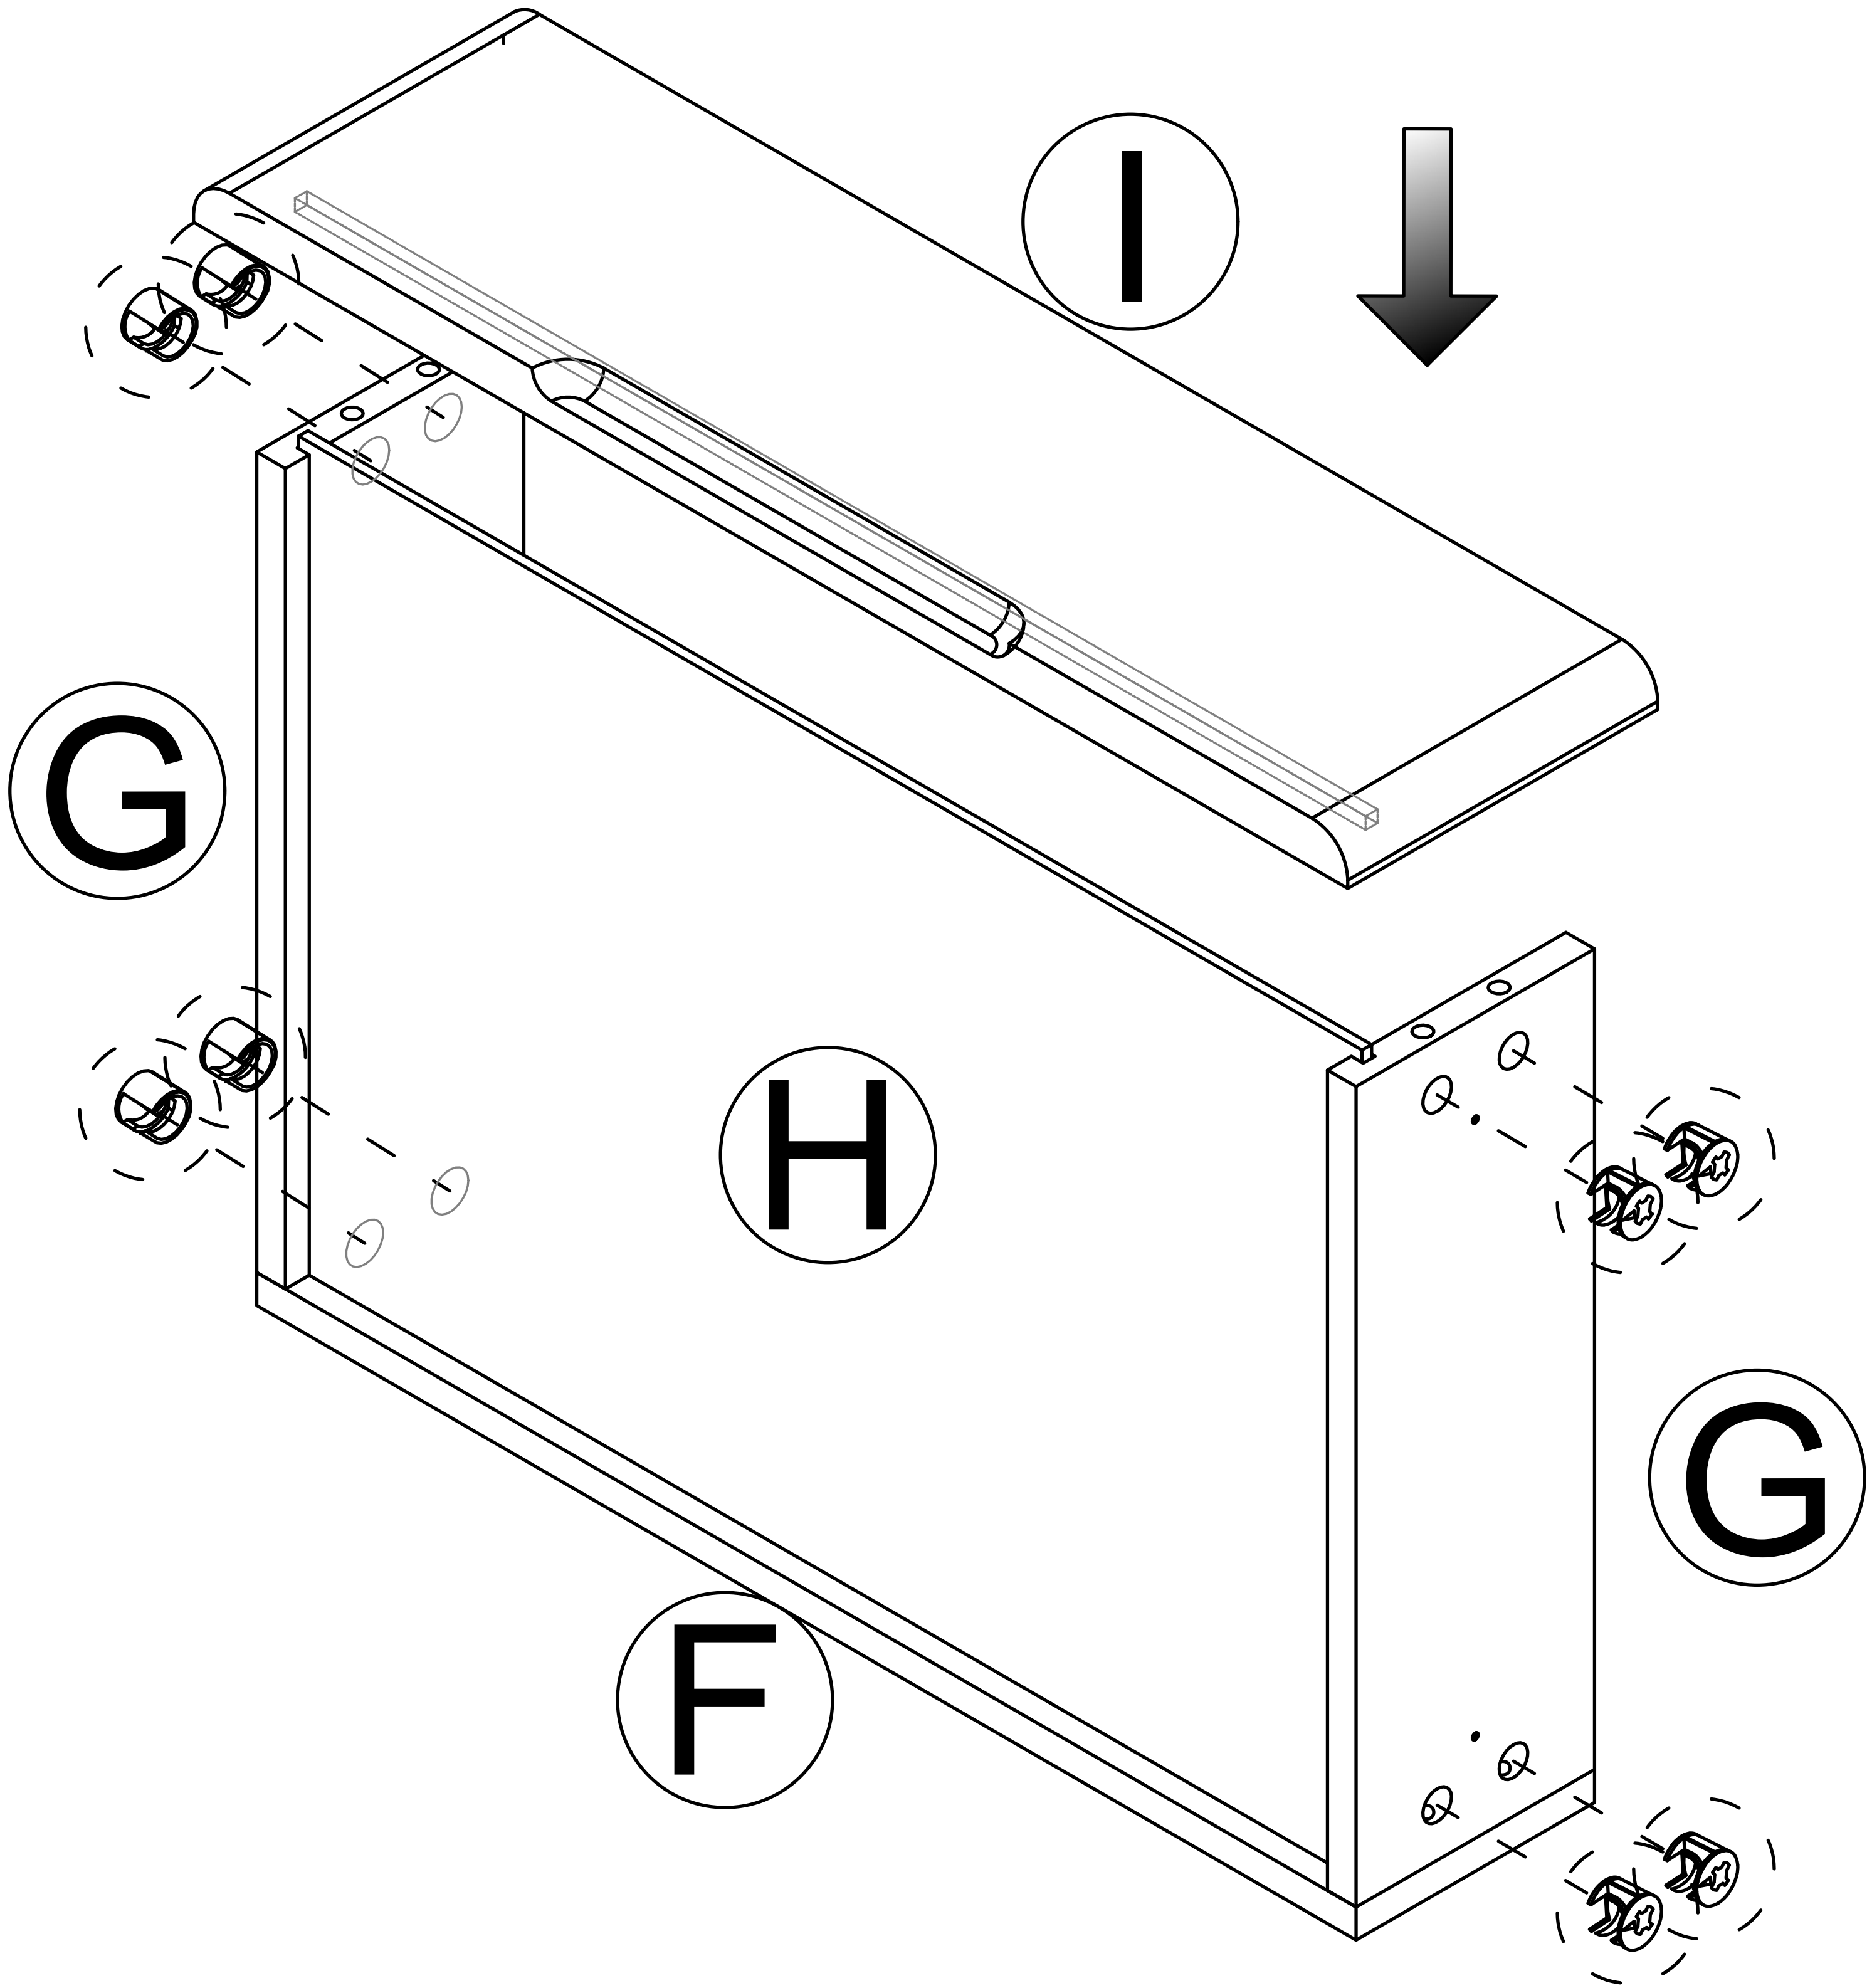 


Step 12

 2


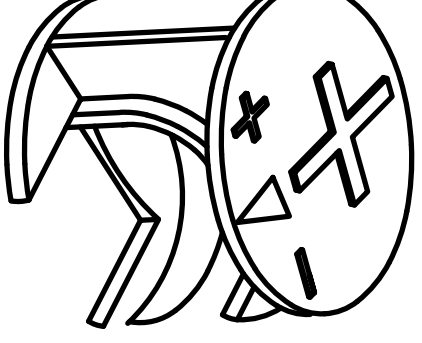



x8

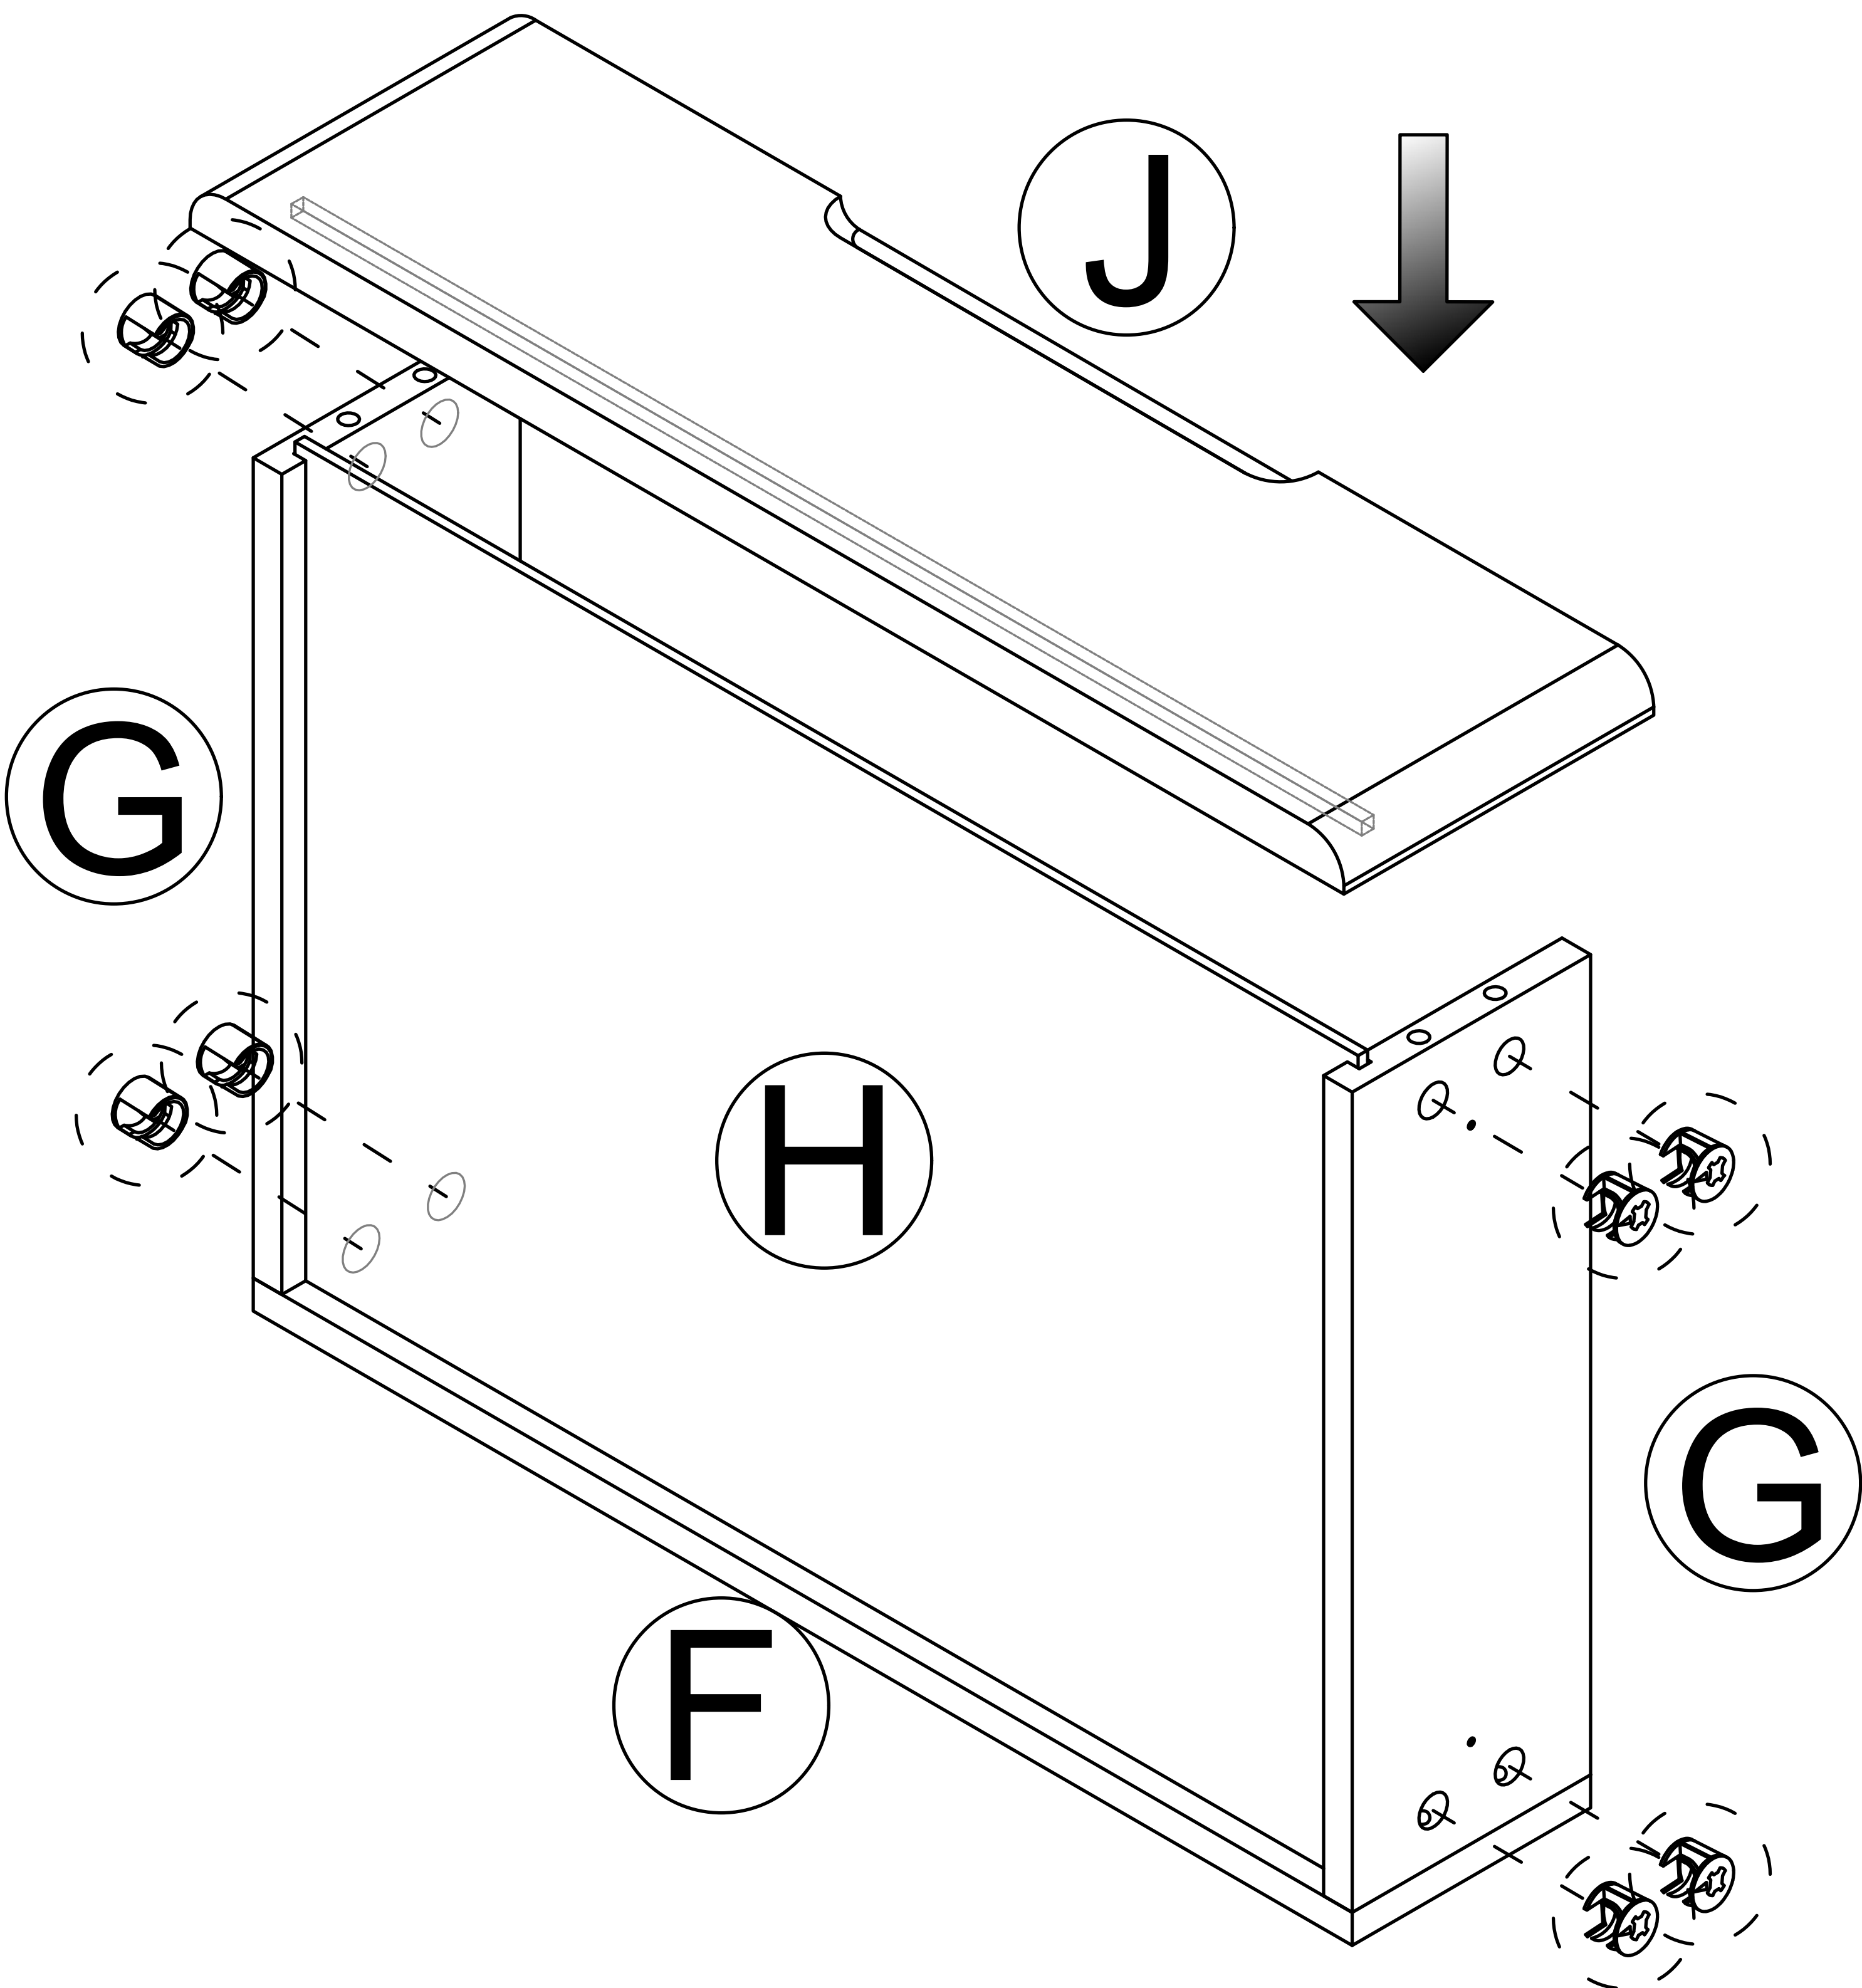 


Step 13

   Install with Material No.⑤ here.

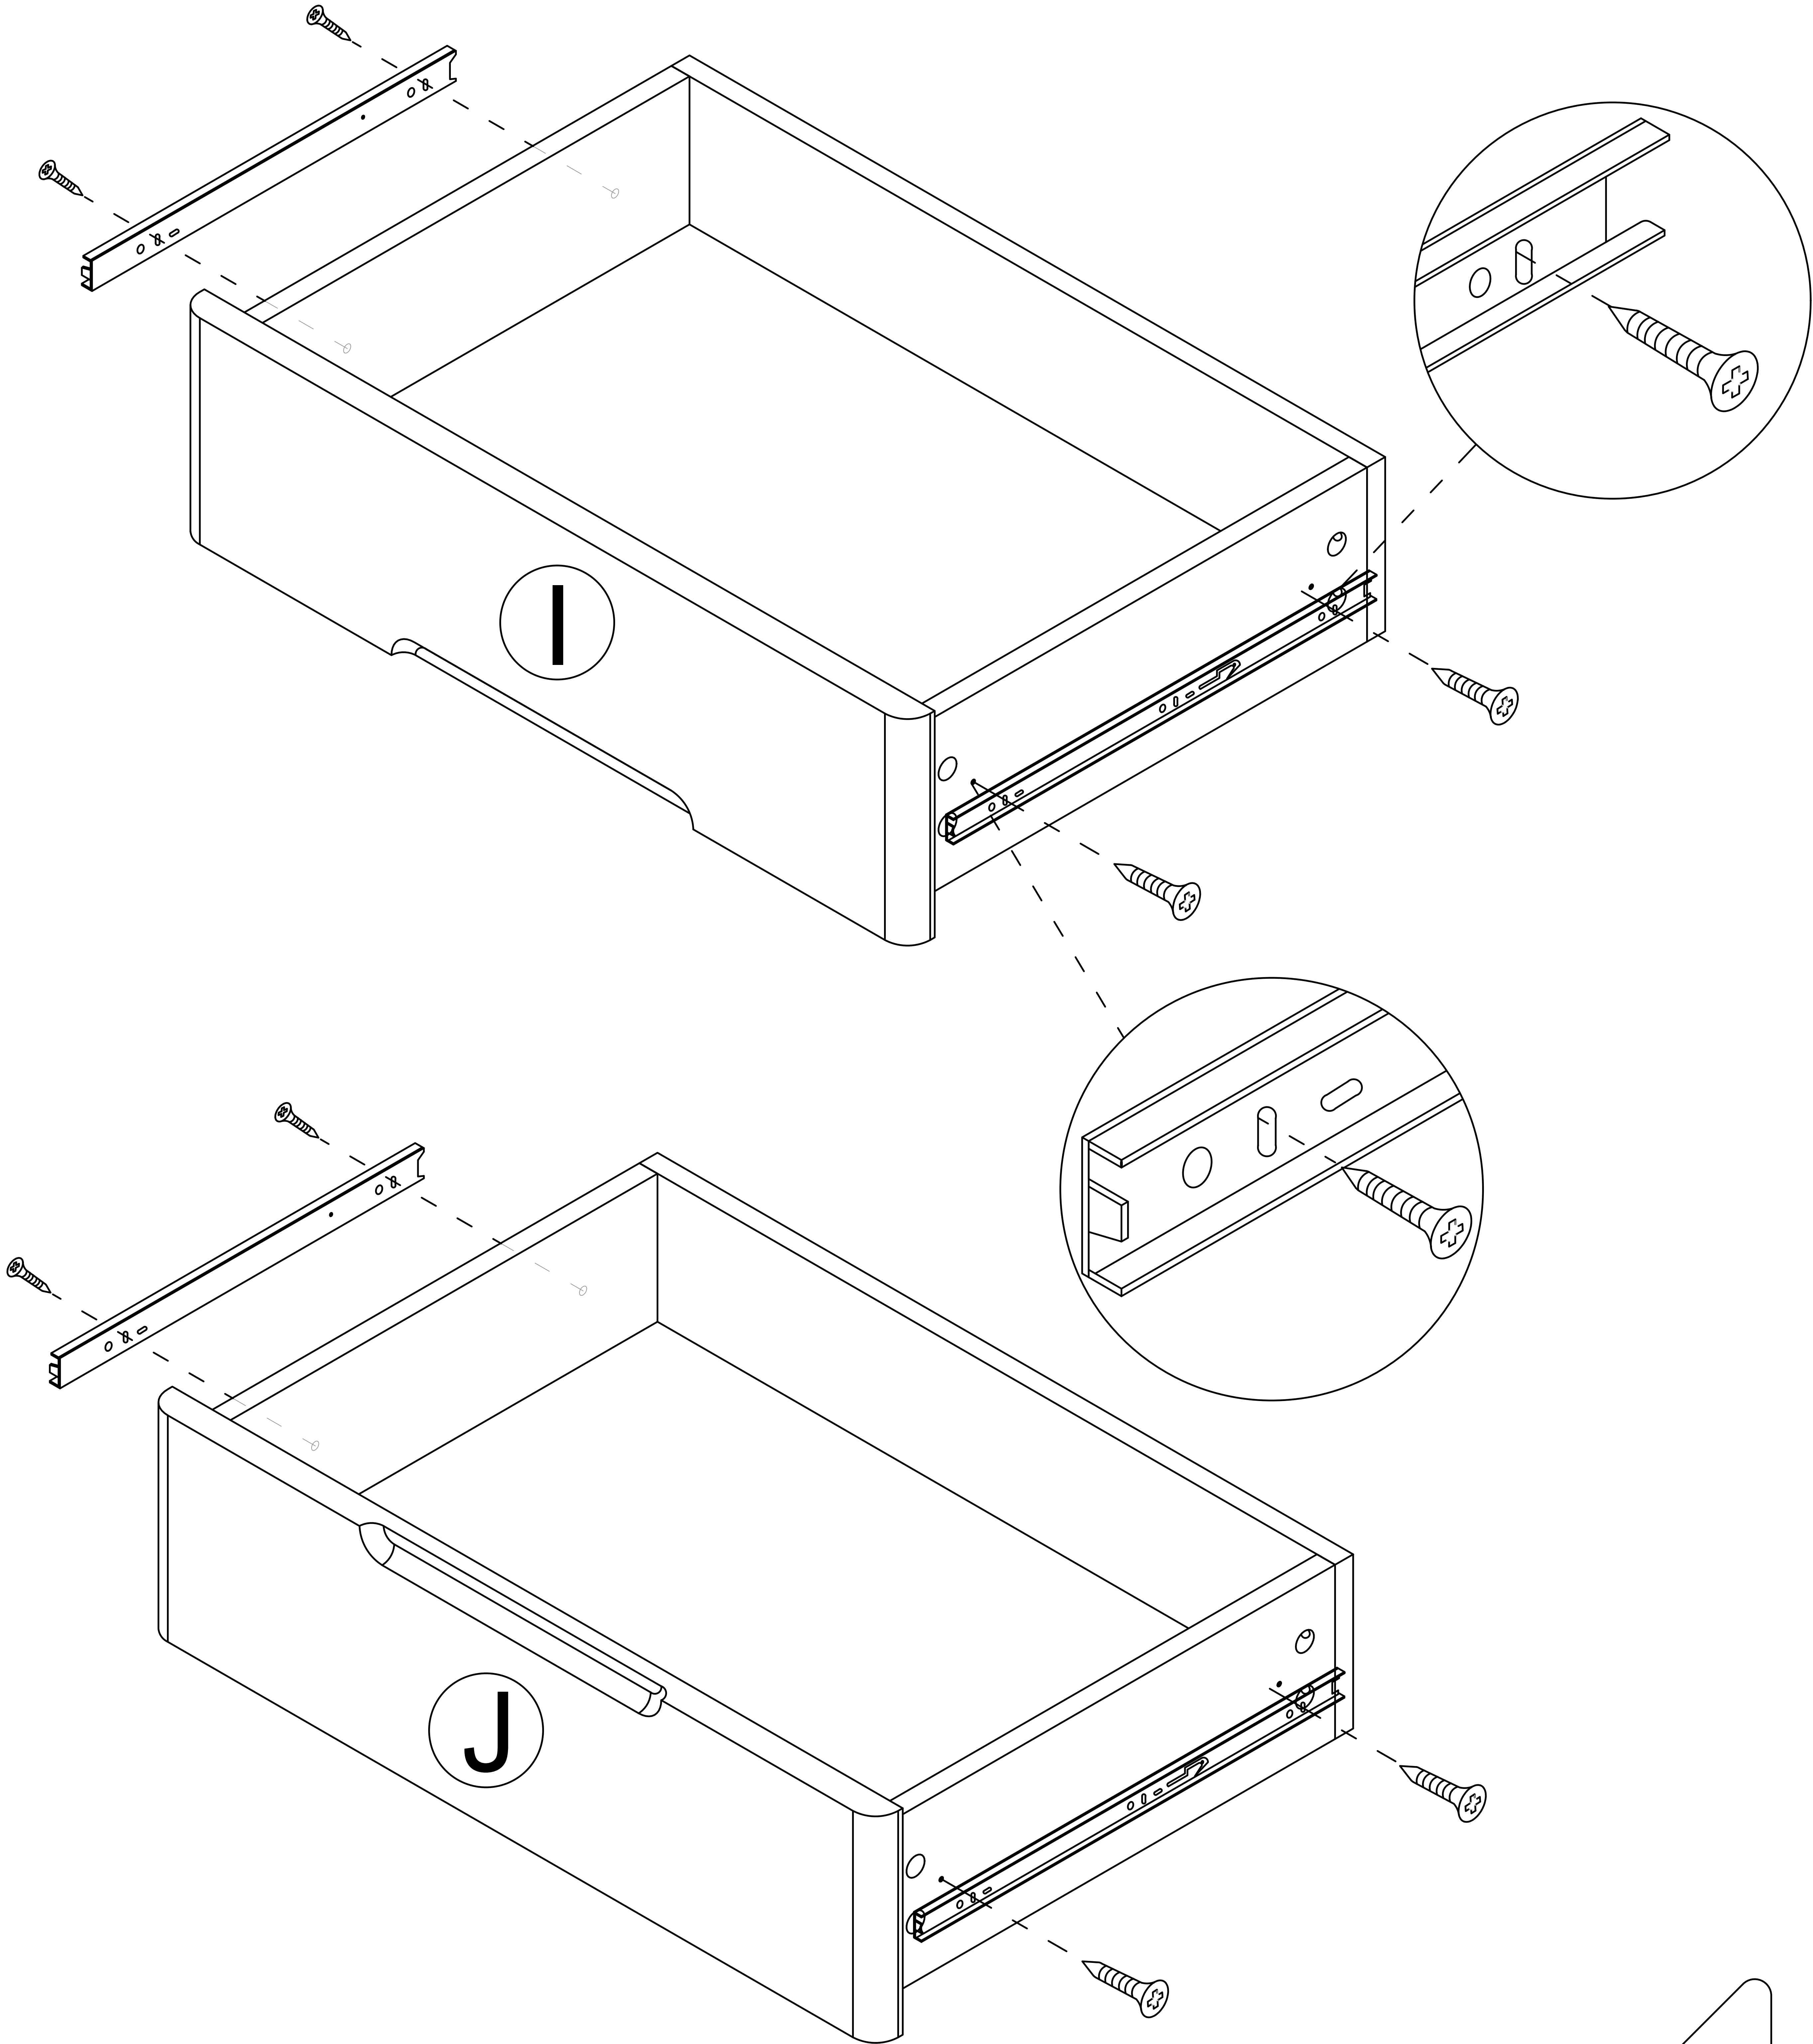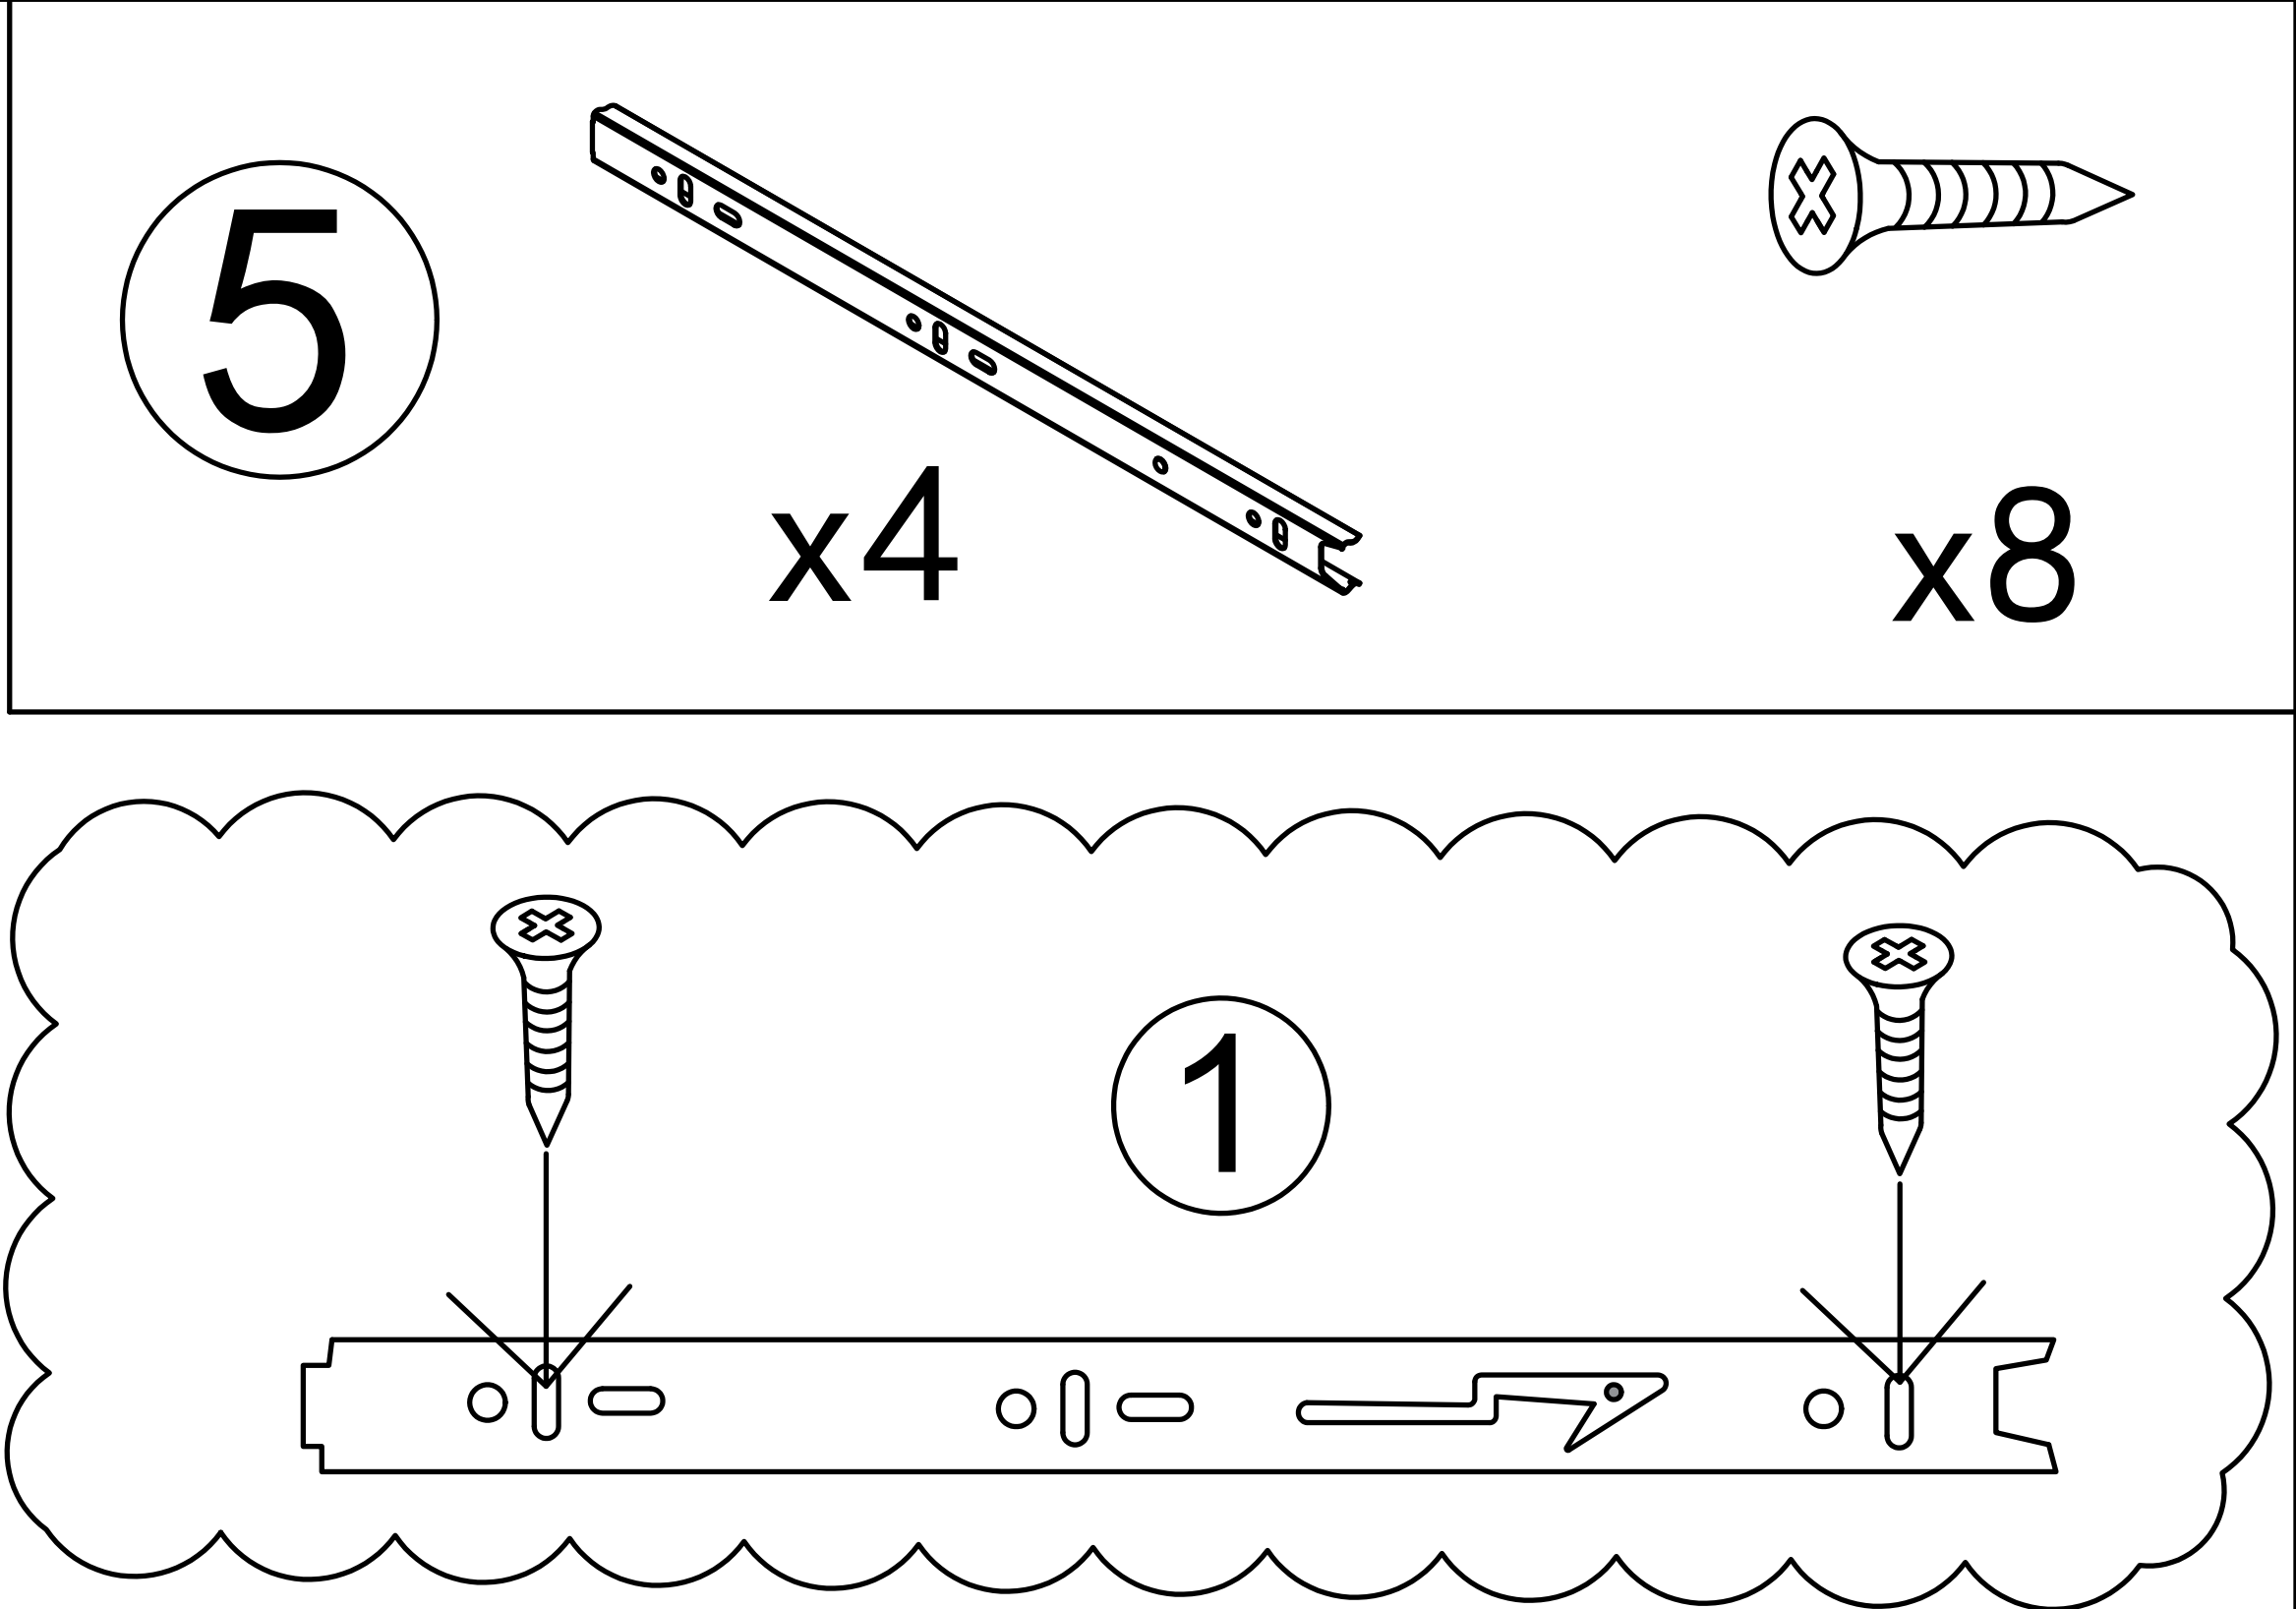


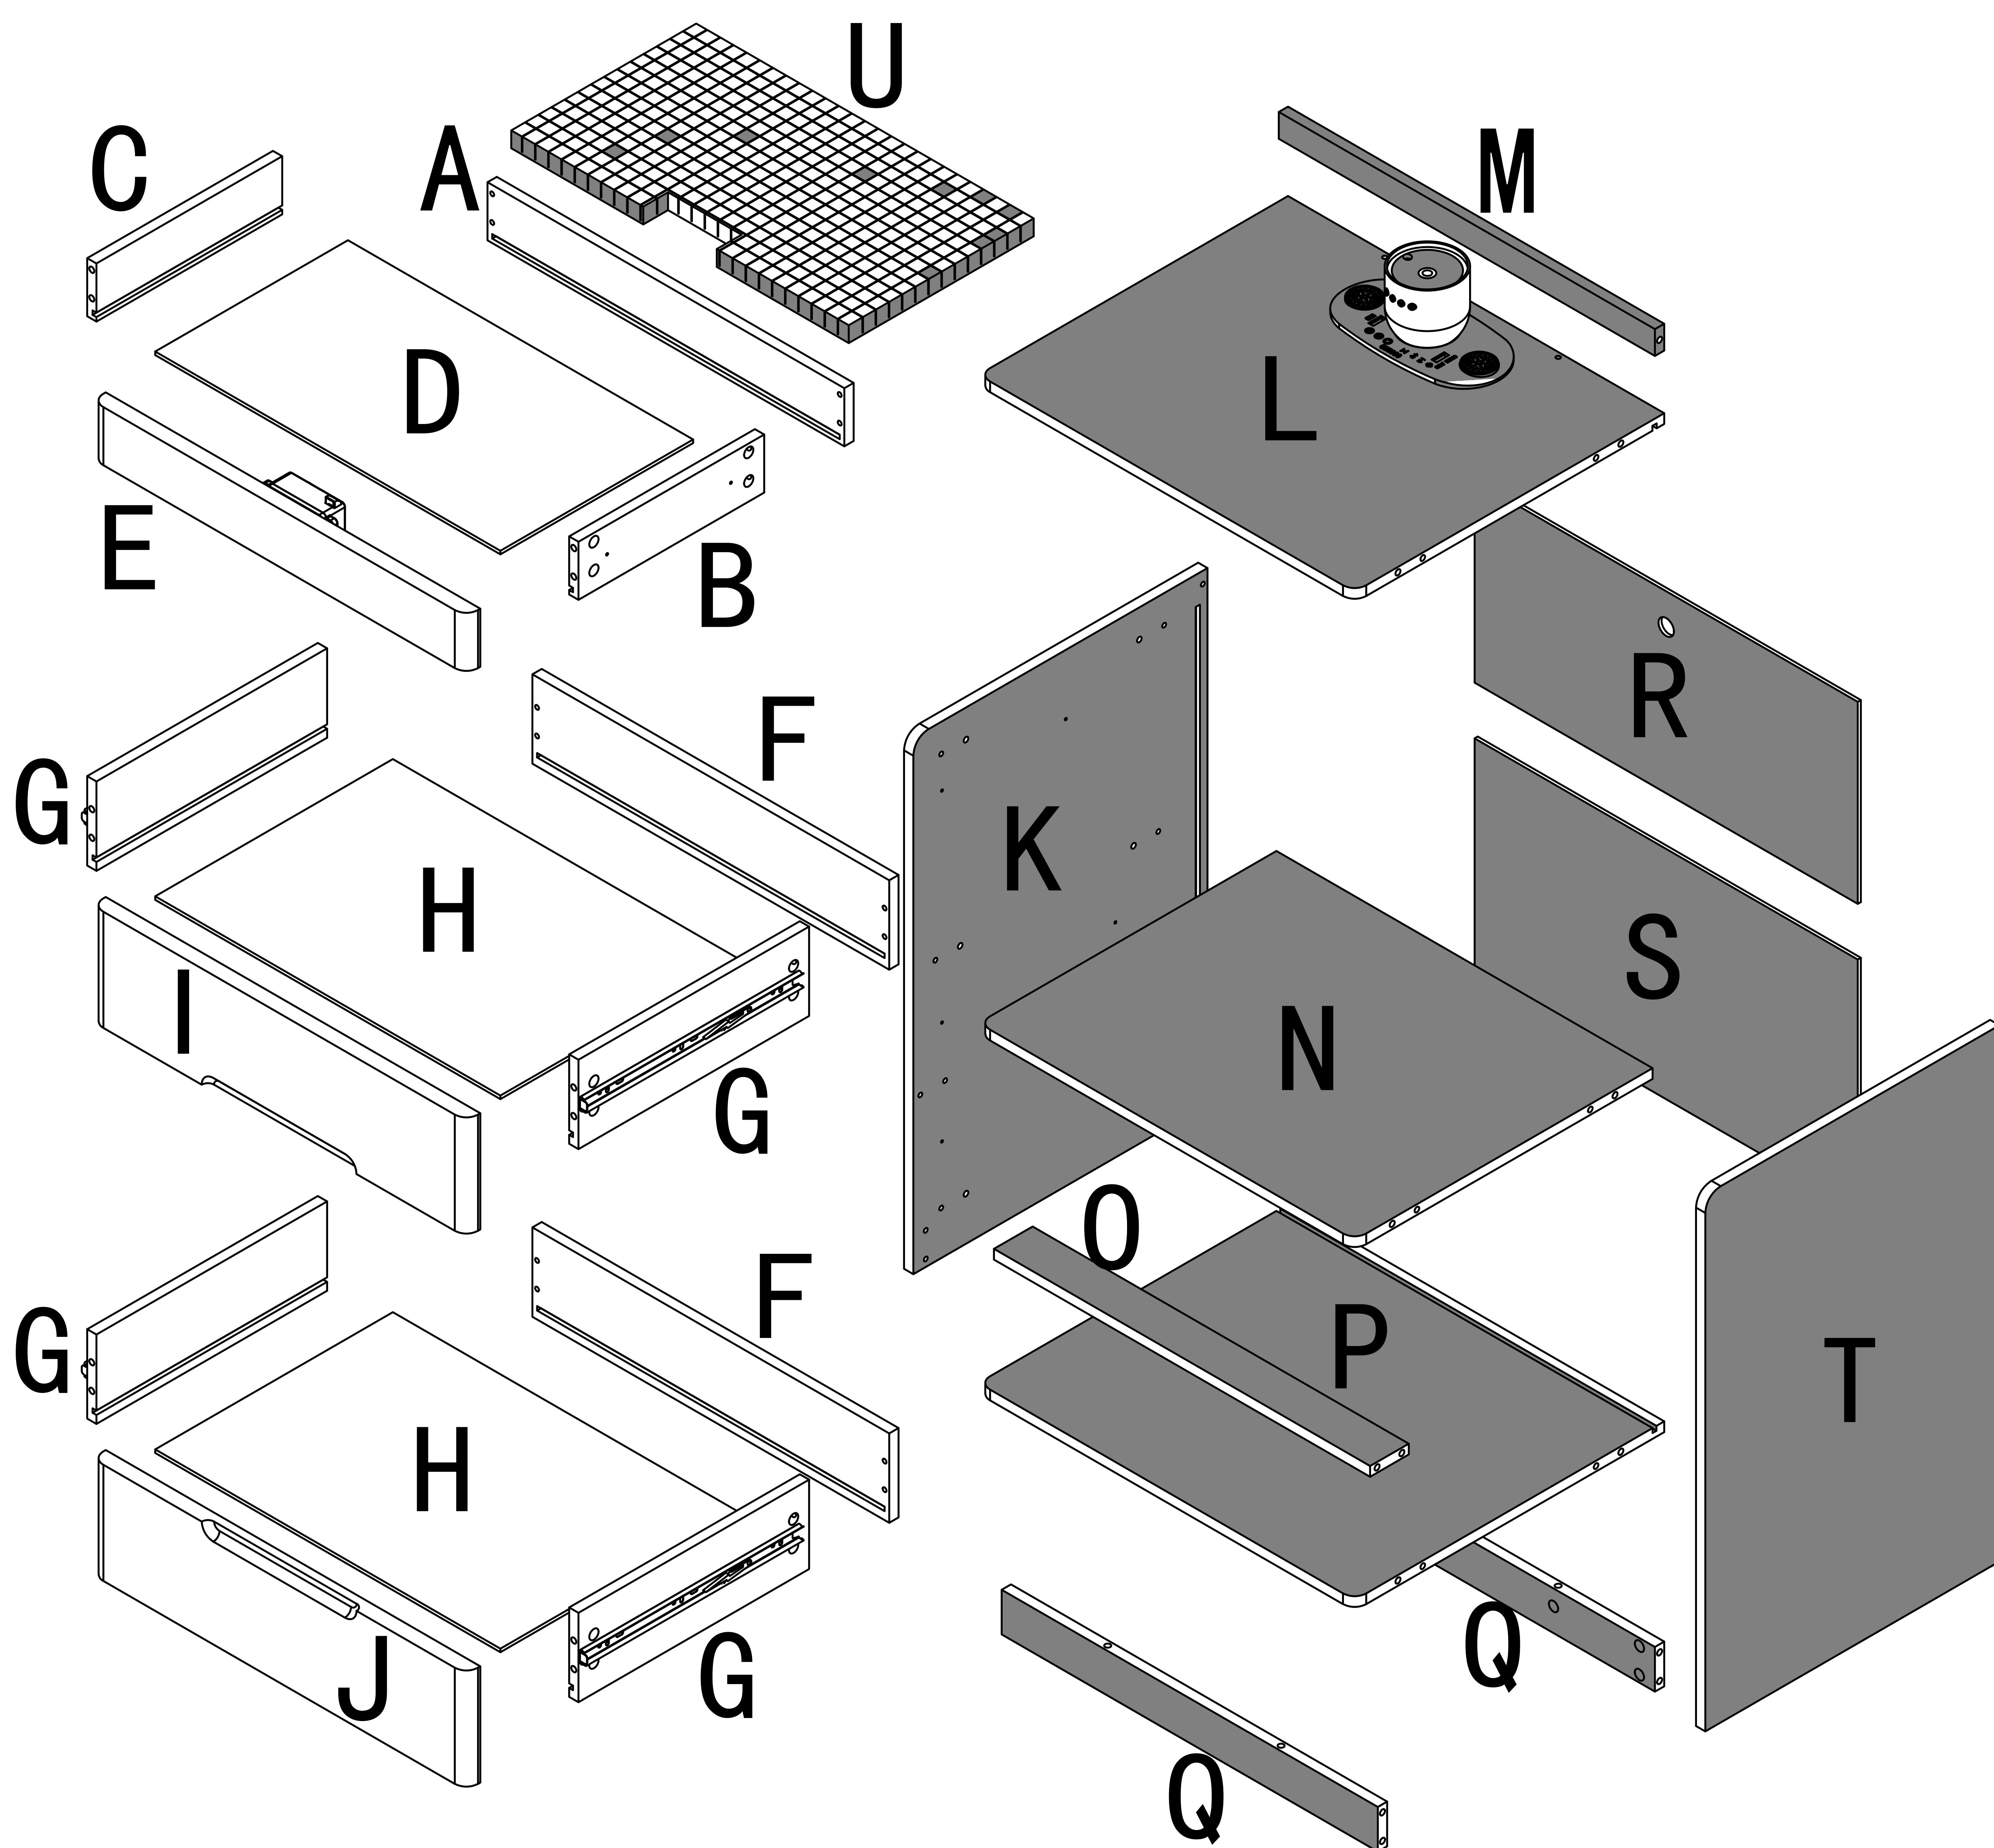

 Step 14

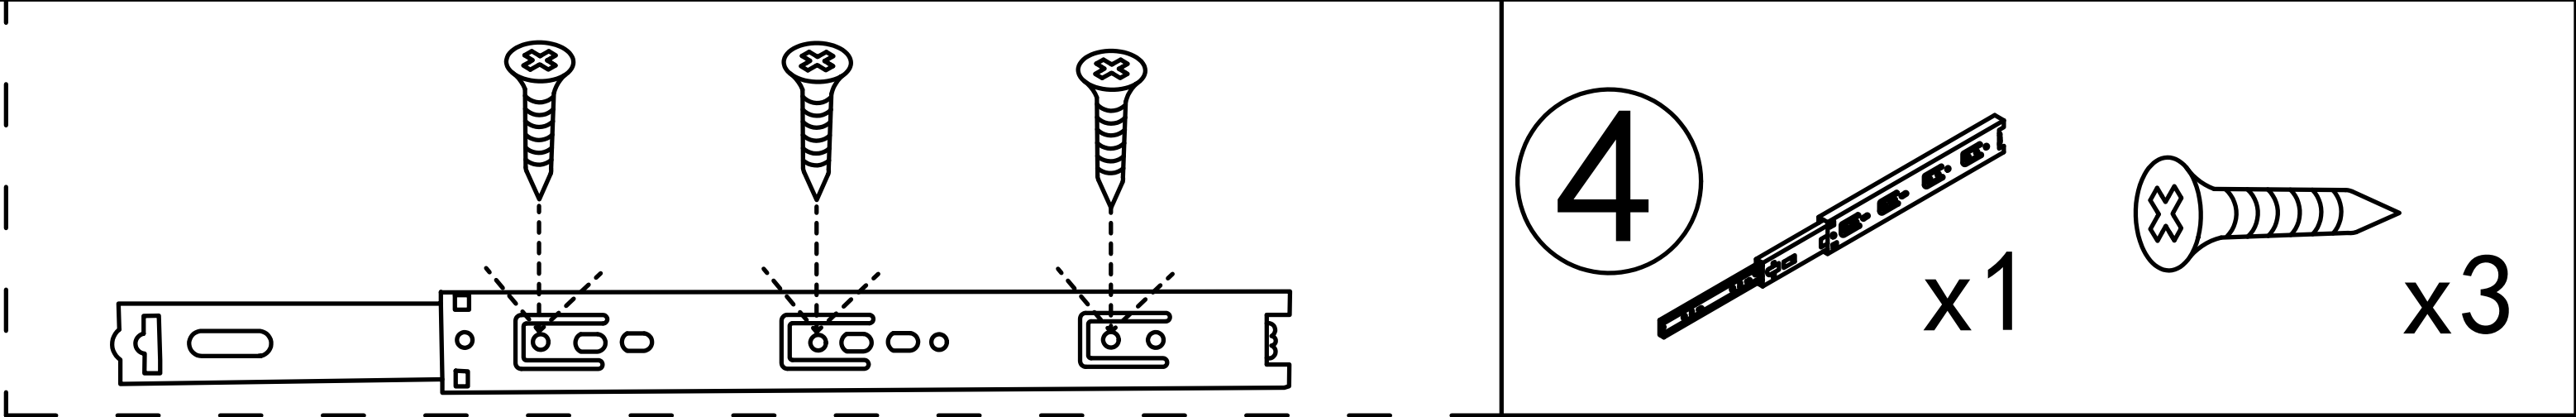


Install with Material No. ④ here.

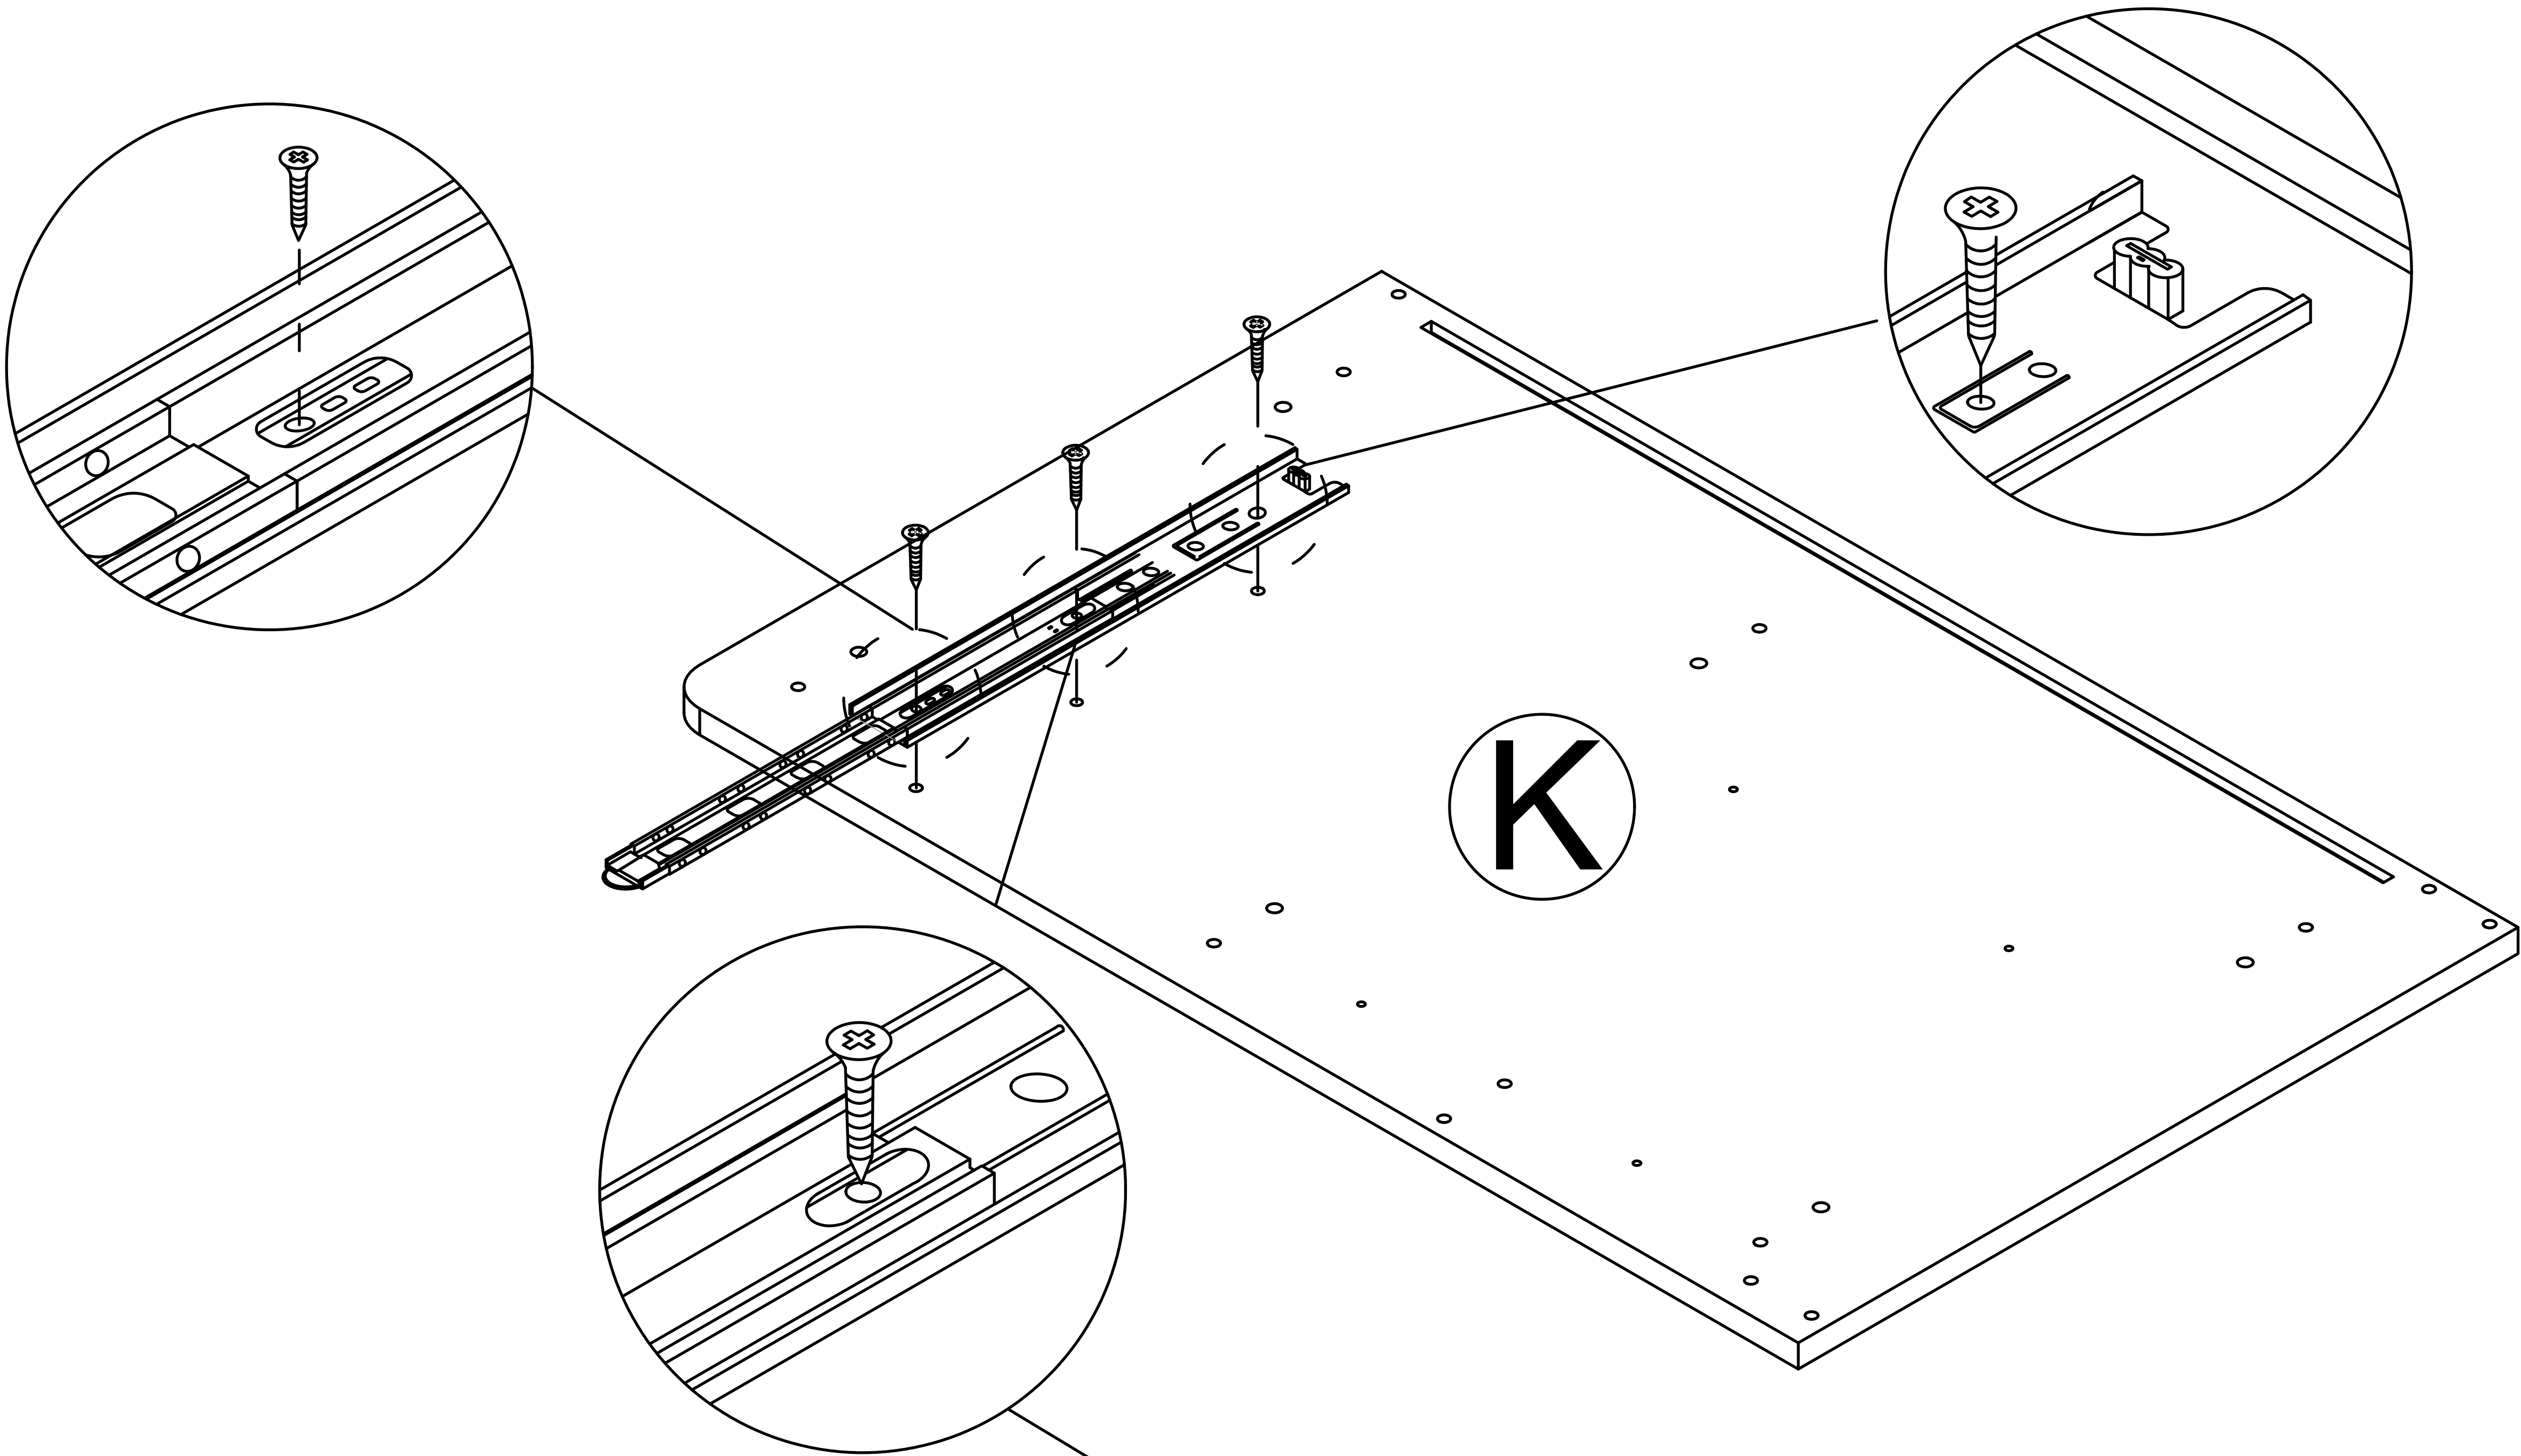 


This hole is for strengthening fixed hole customers can choose to install according to their needs.

 Step 15


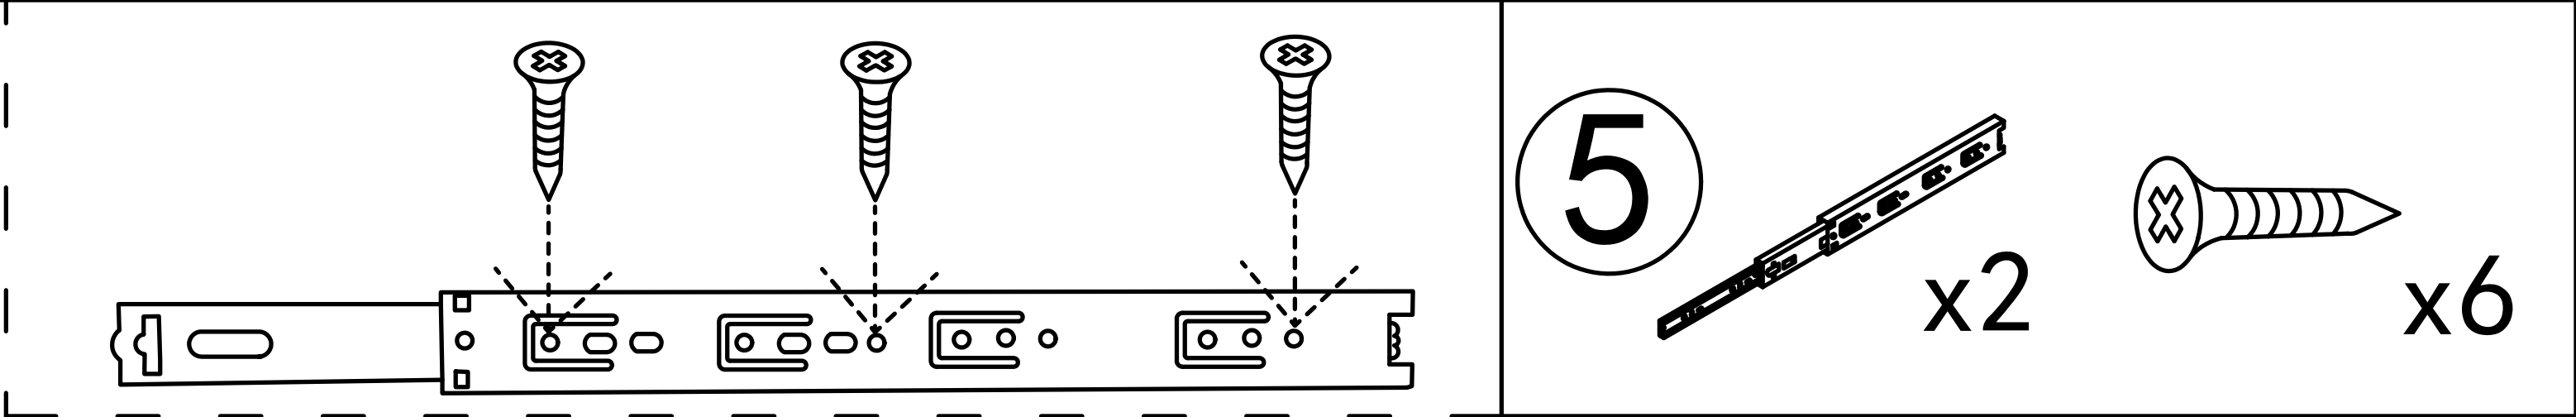


Install with Material No. ⑤ here.


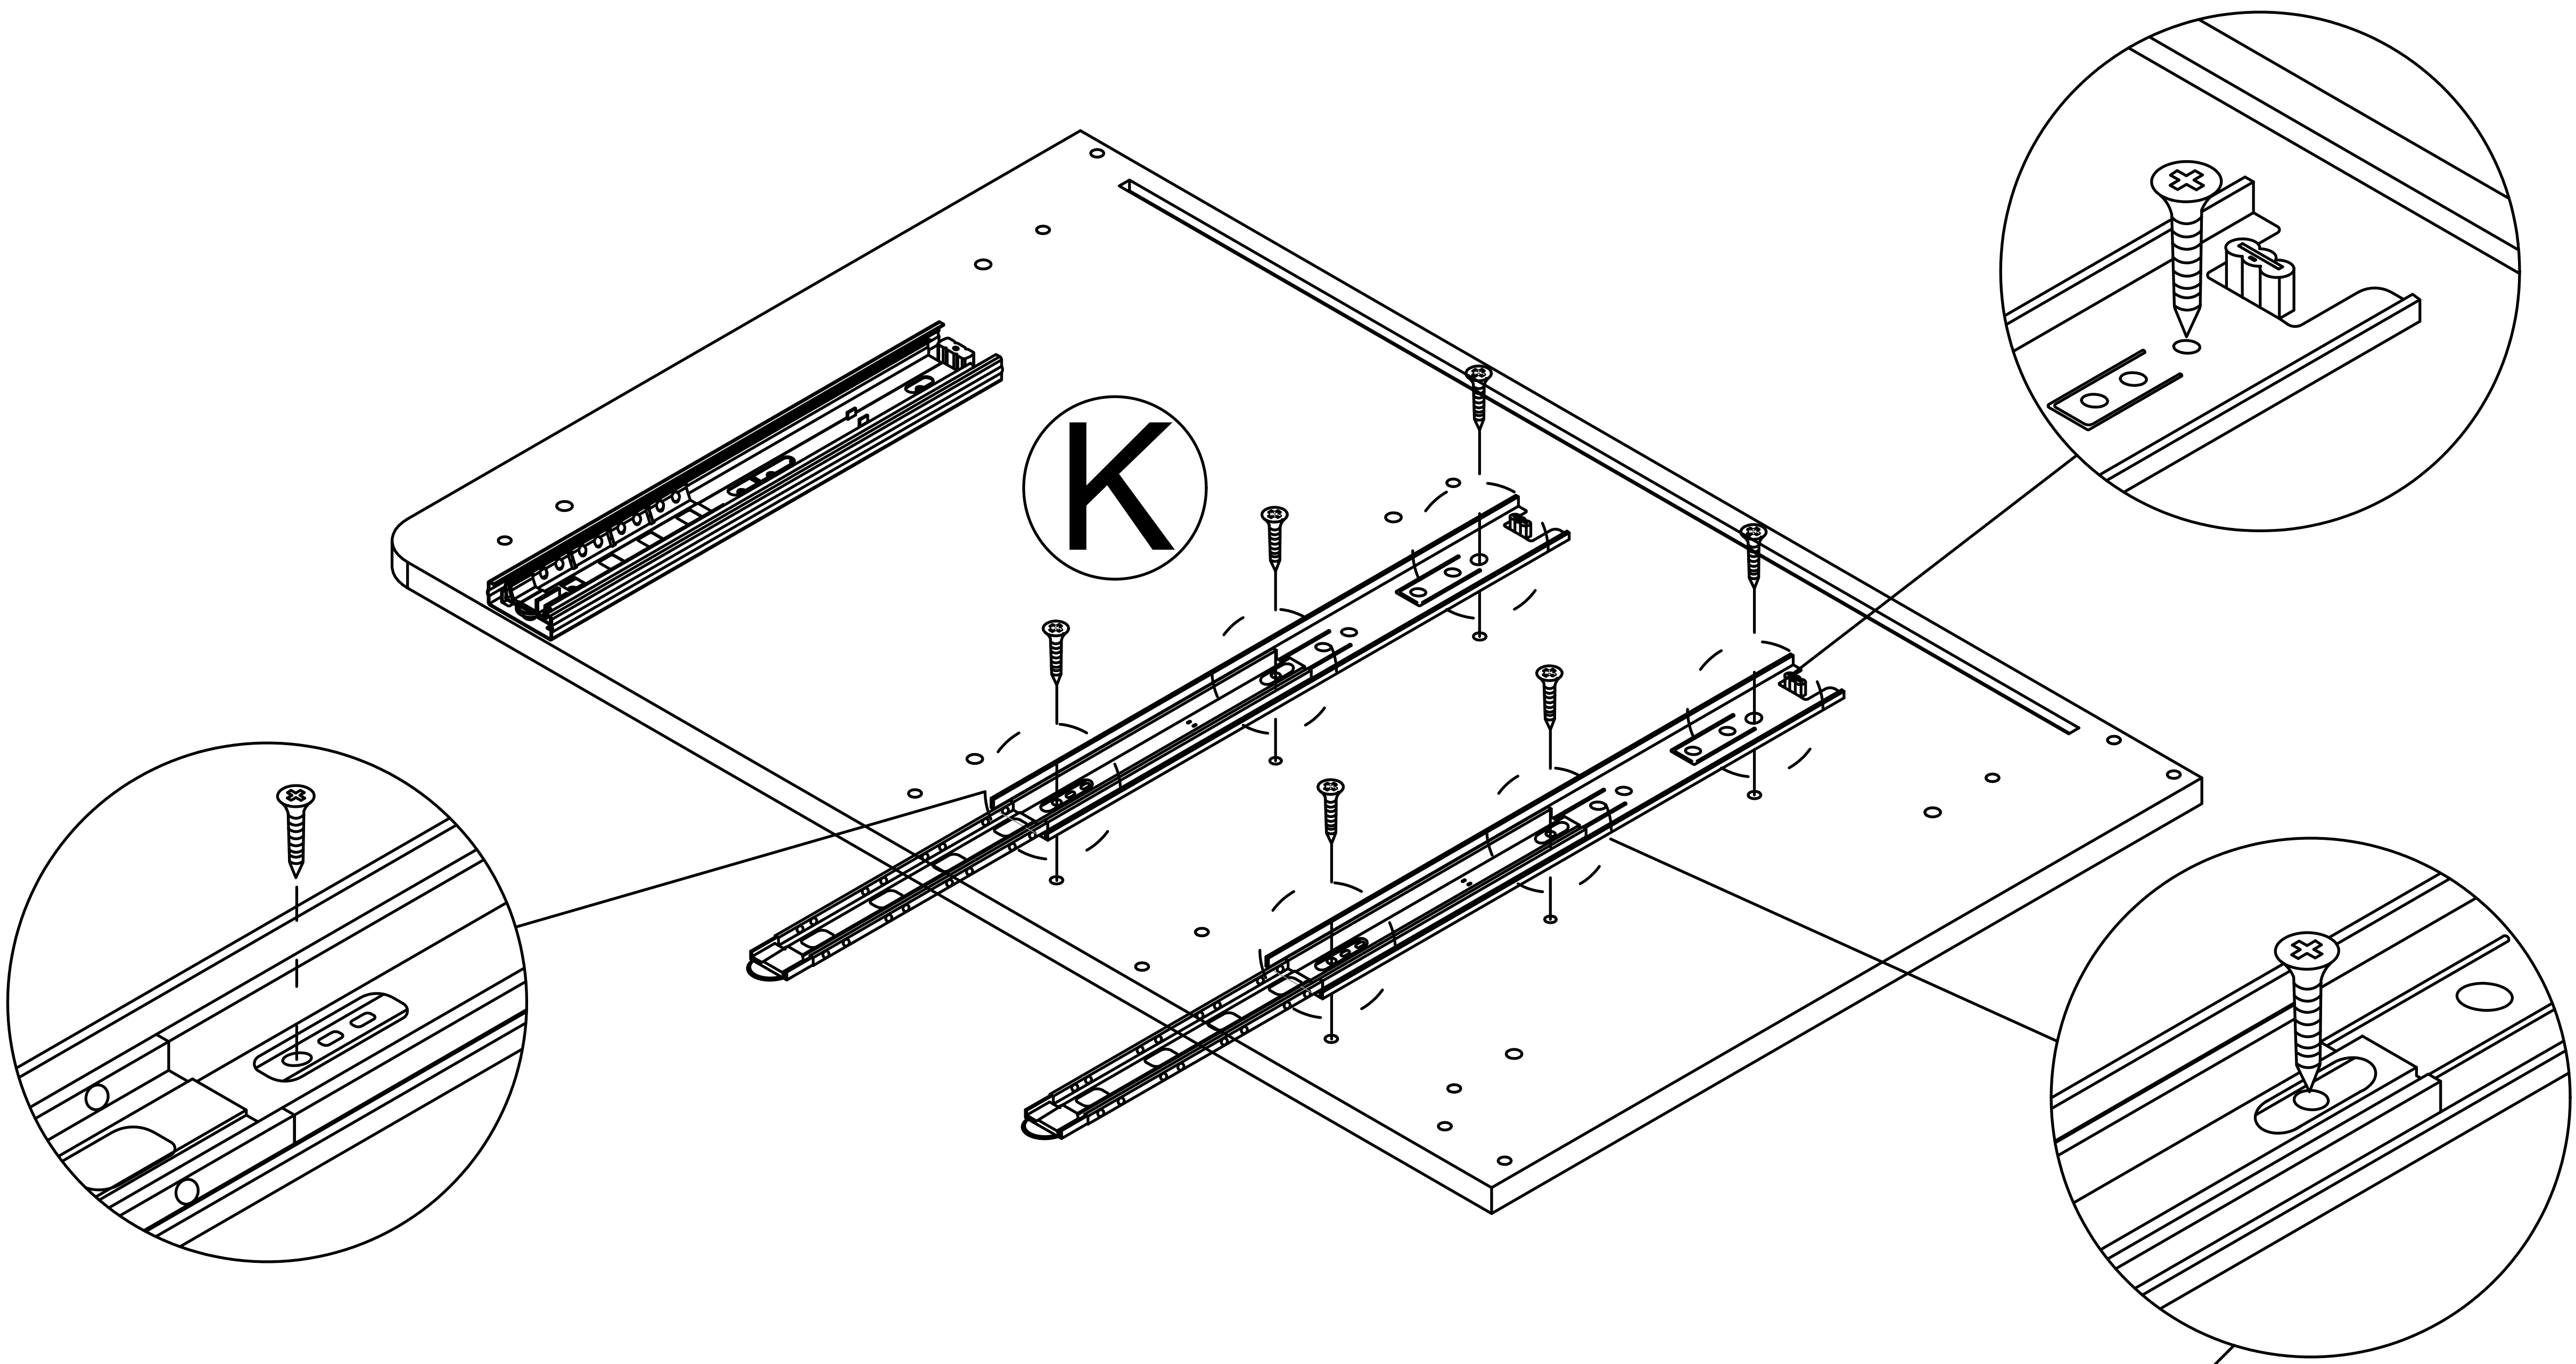 


This hole is for strengthening fixed hole customers can choose to install according to their needs.

  
Step 16

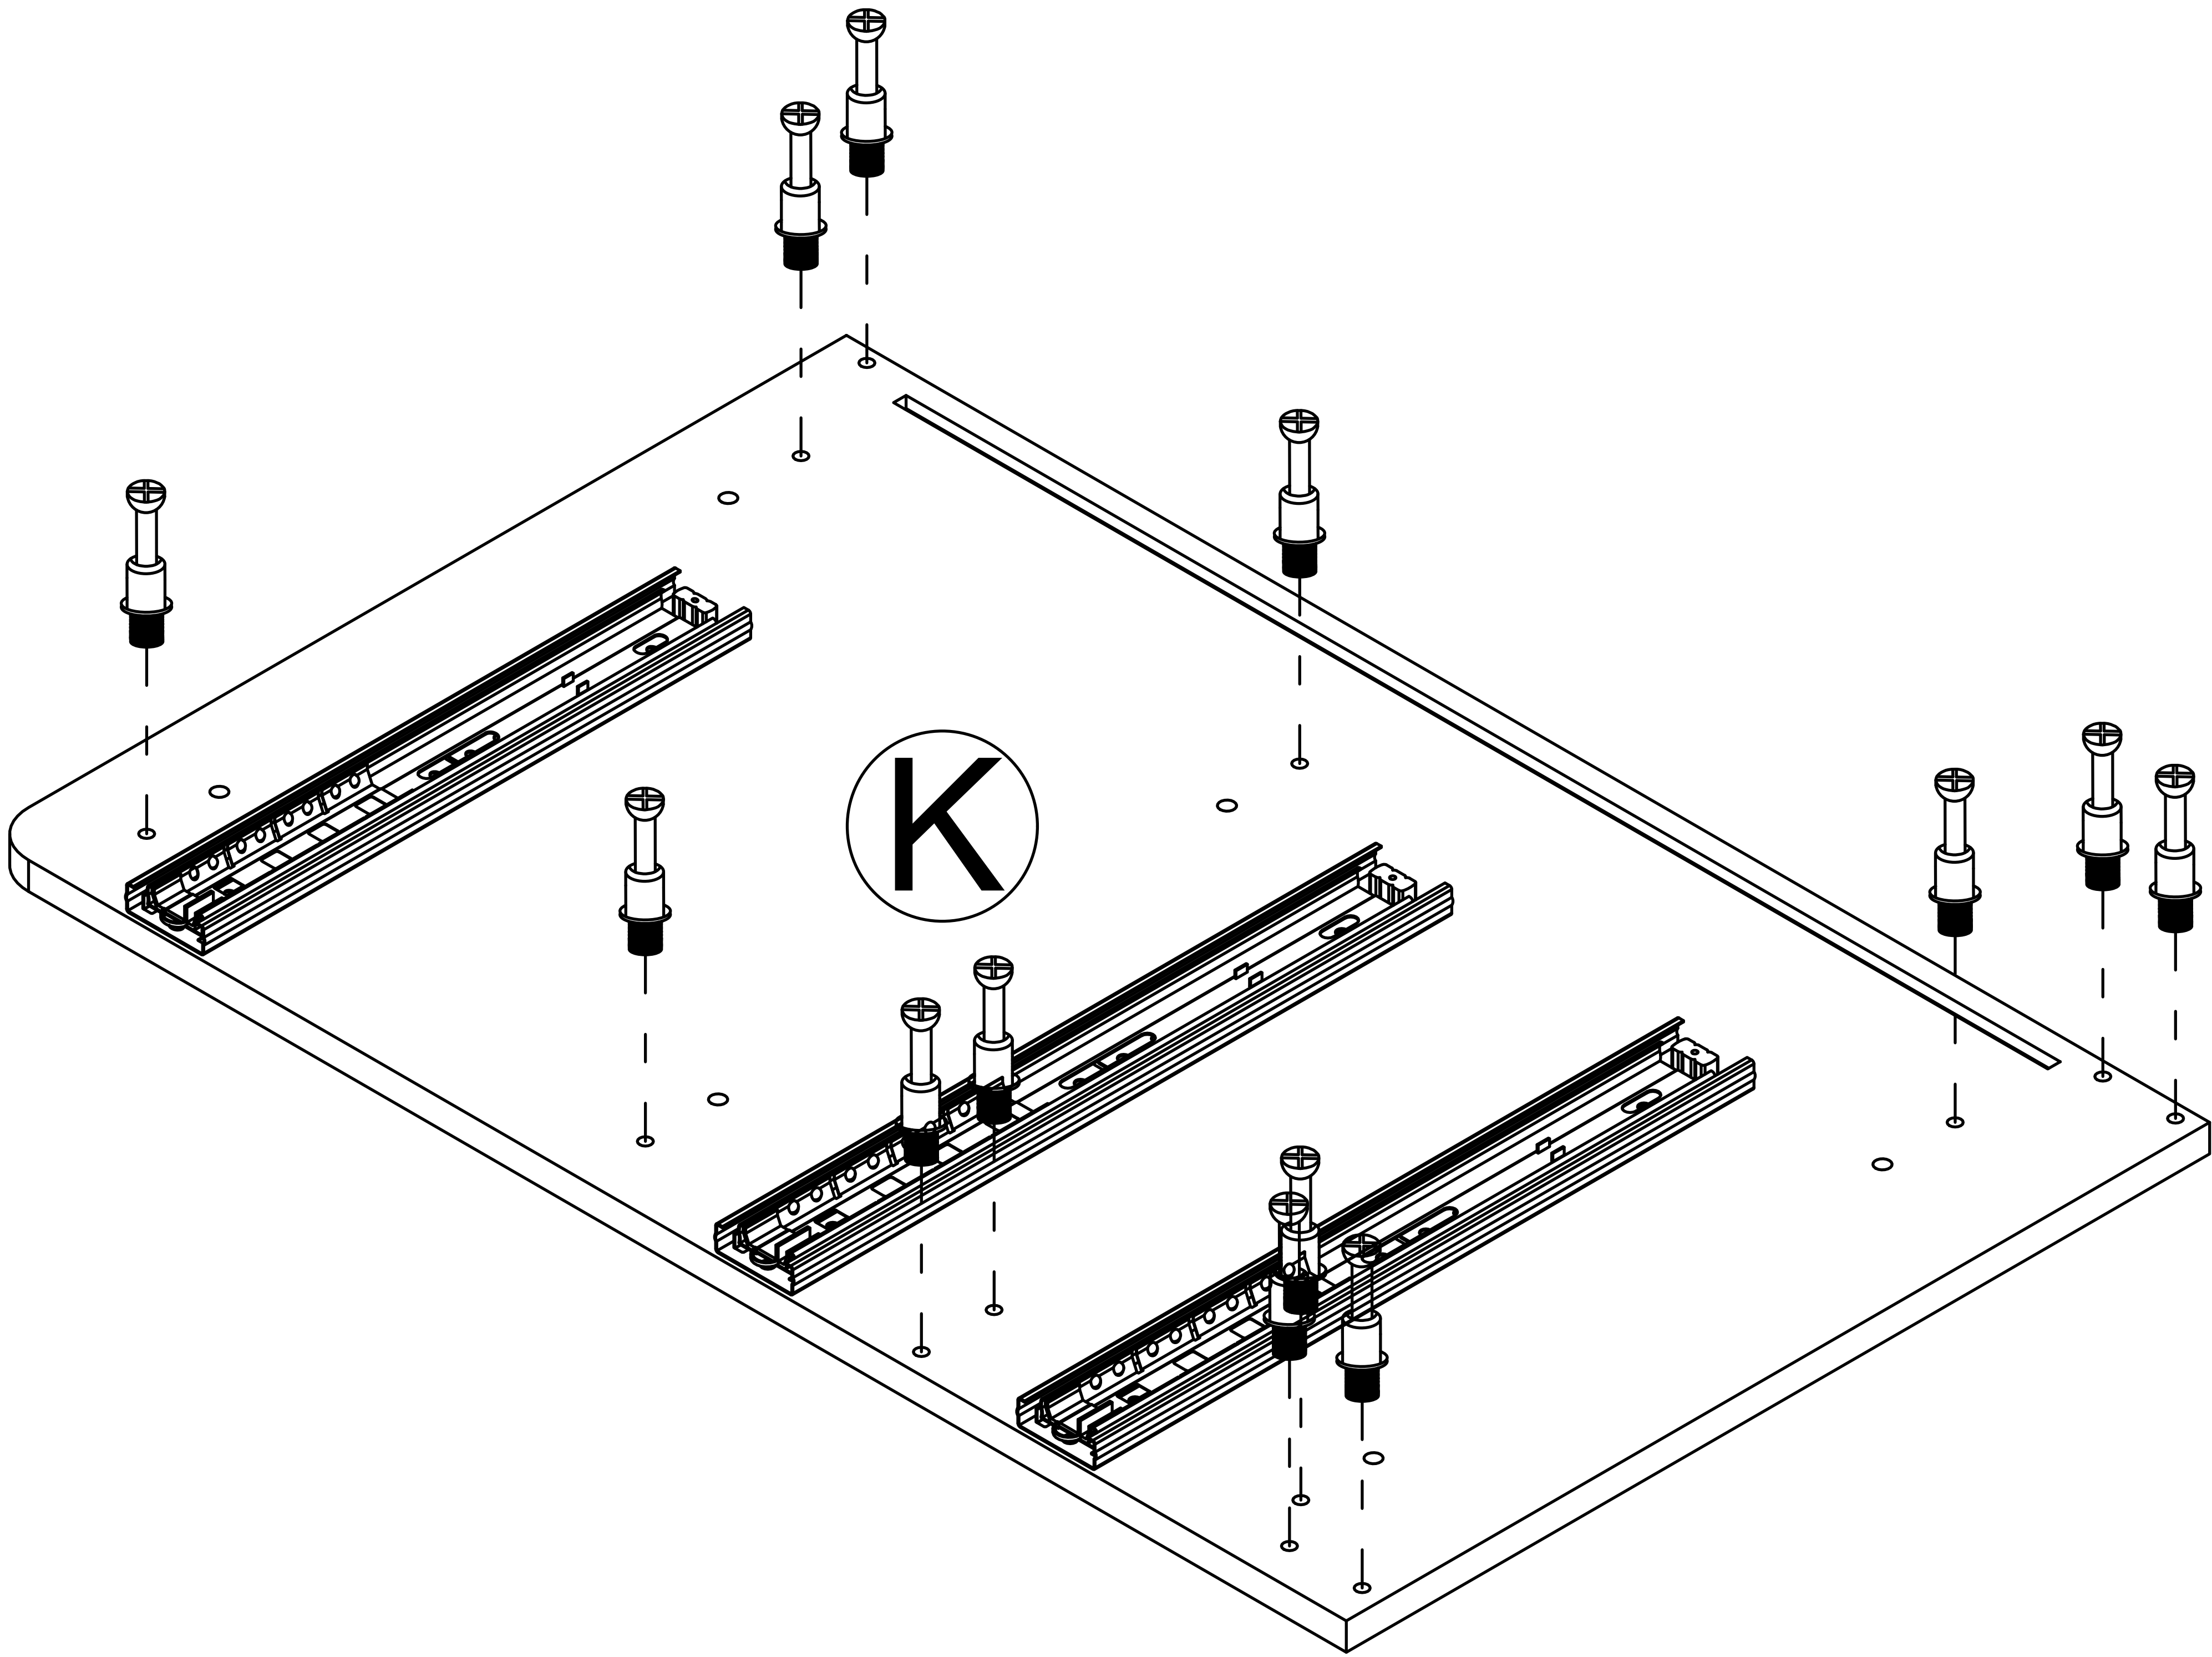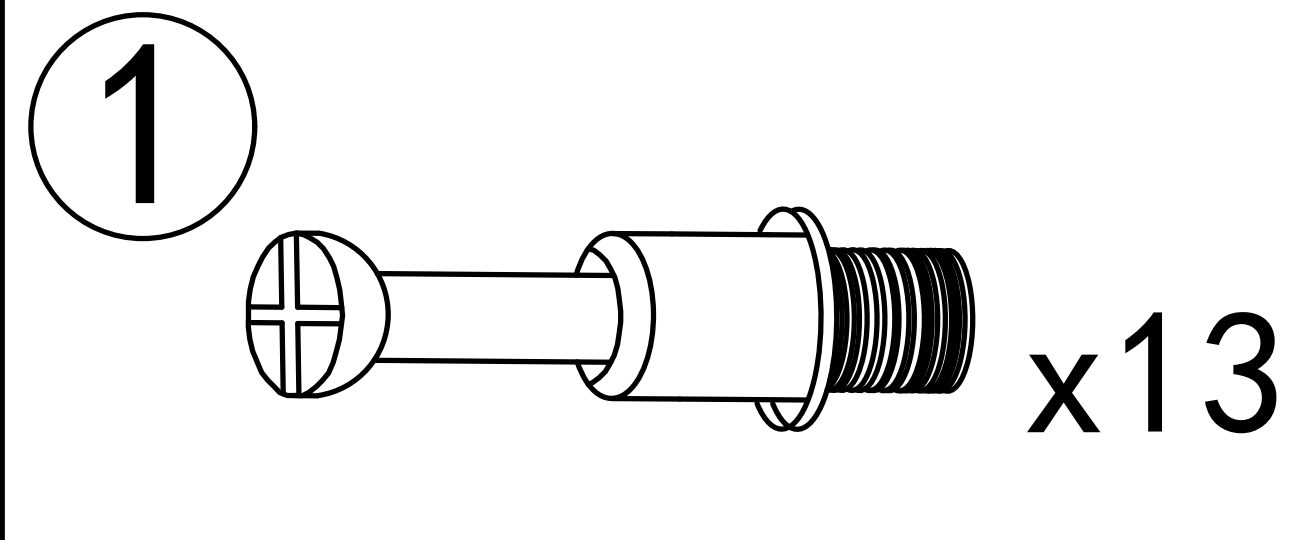


  Step 17

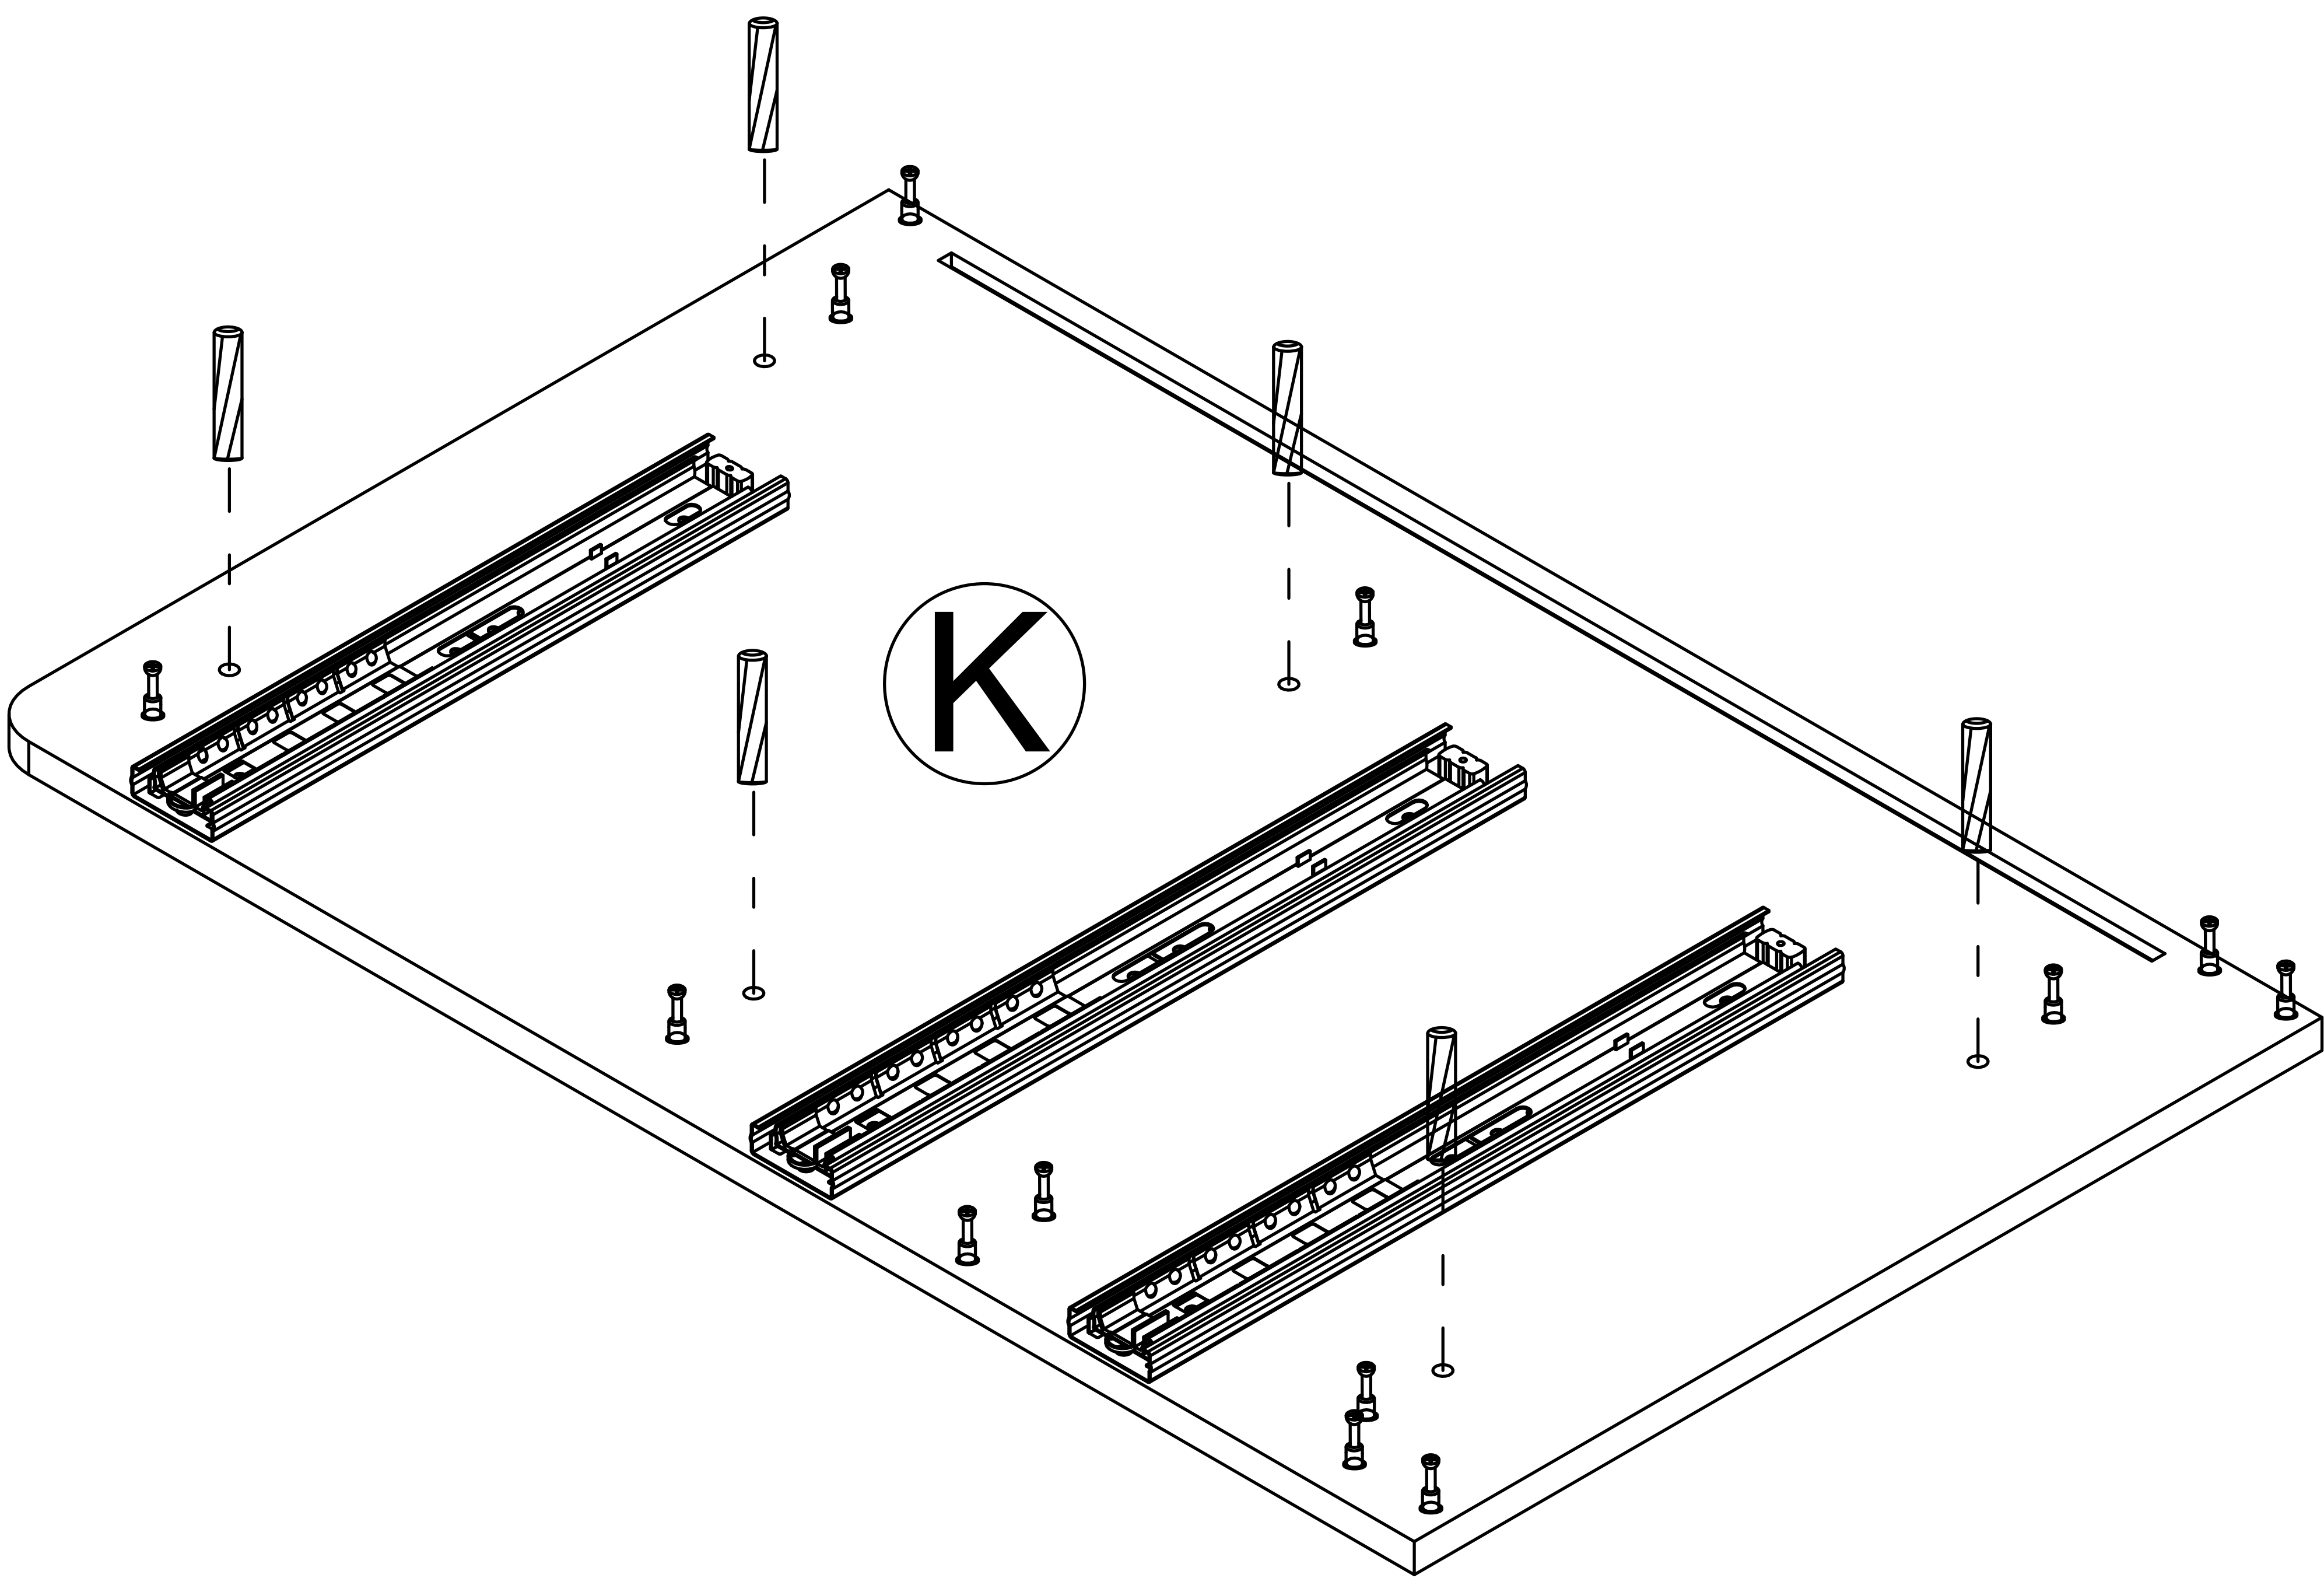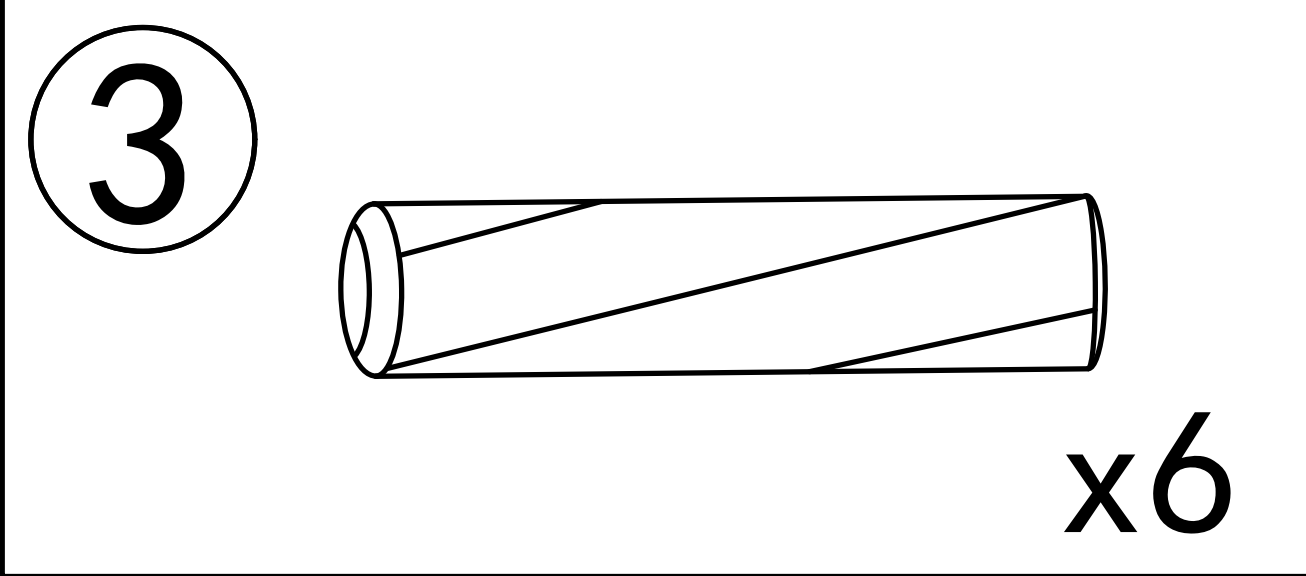


 
Step 18

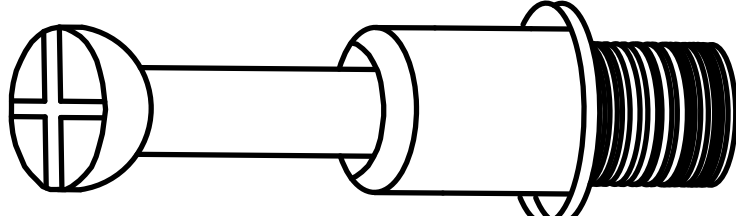1  x2

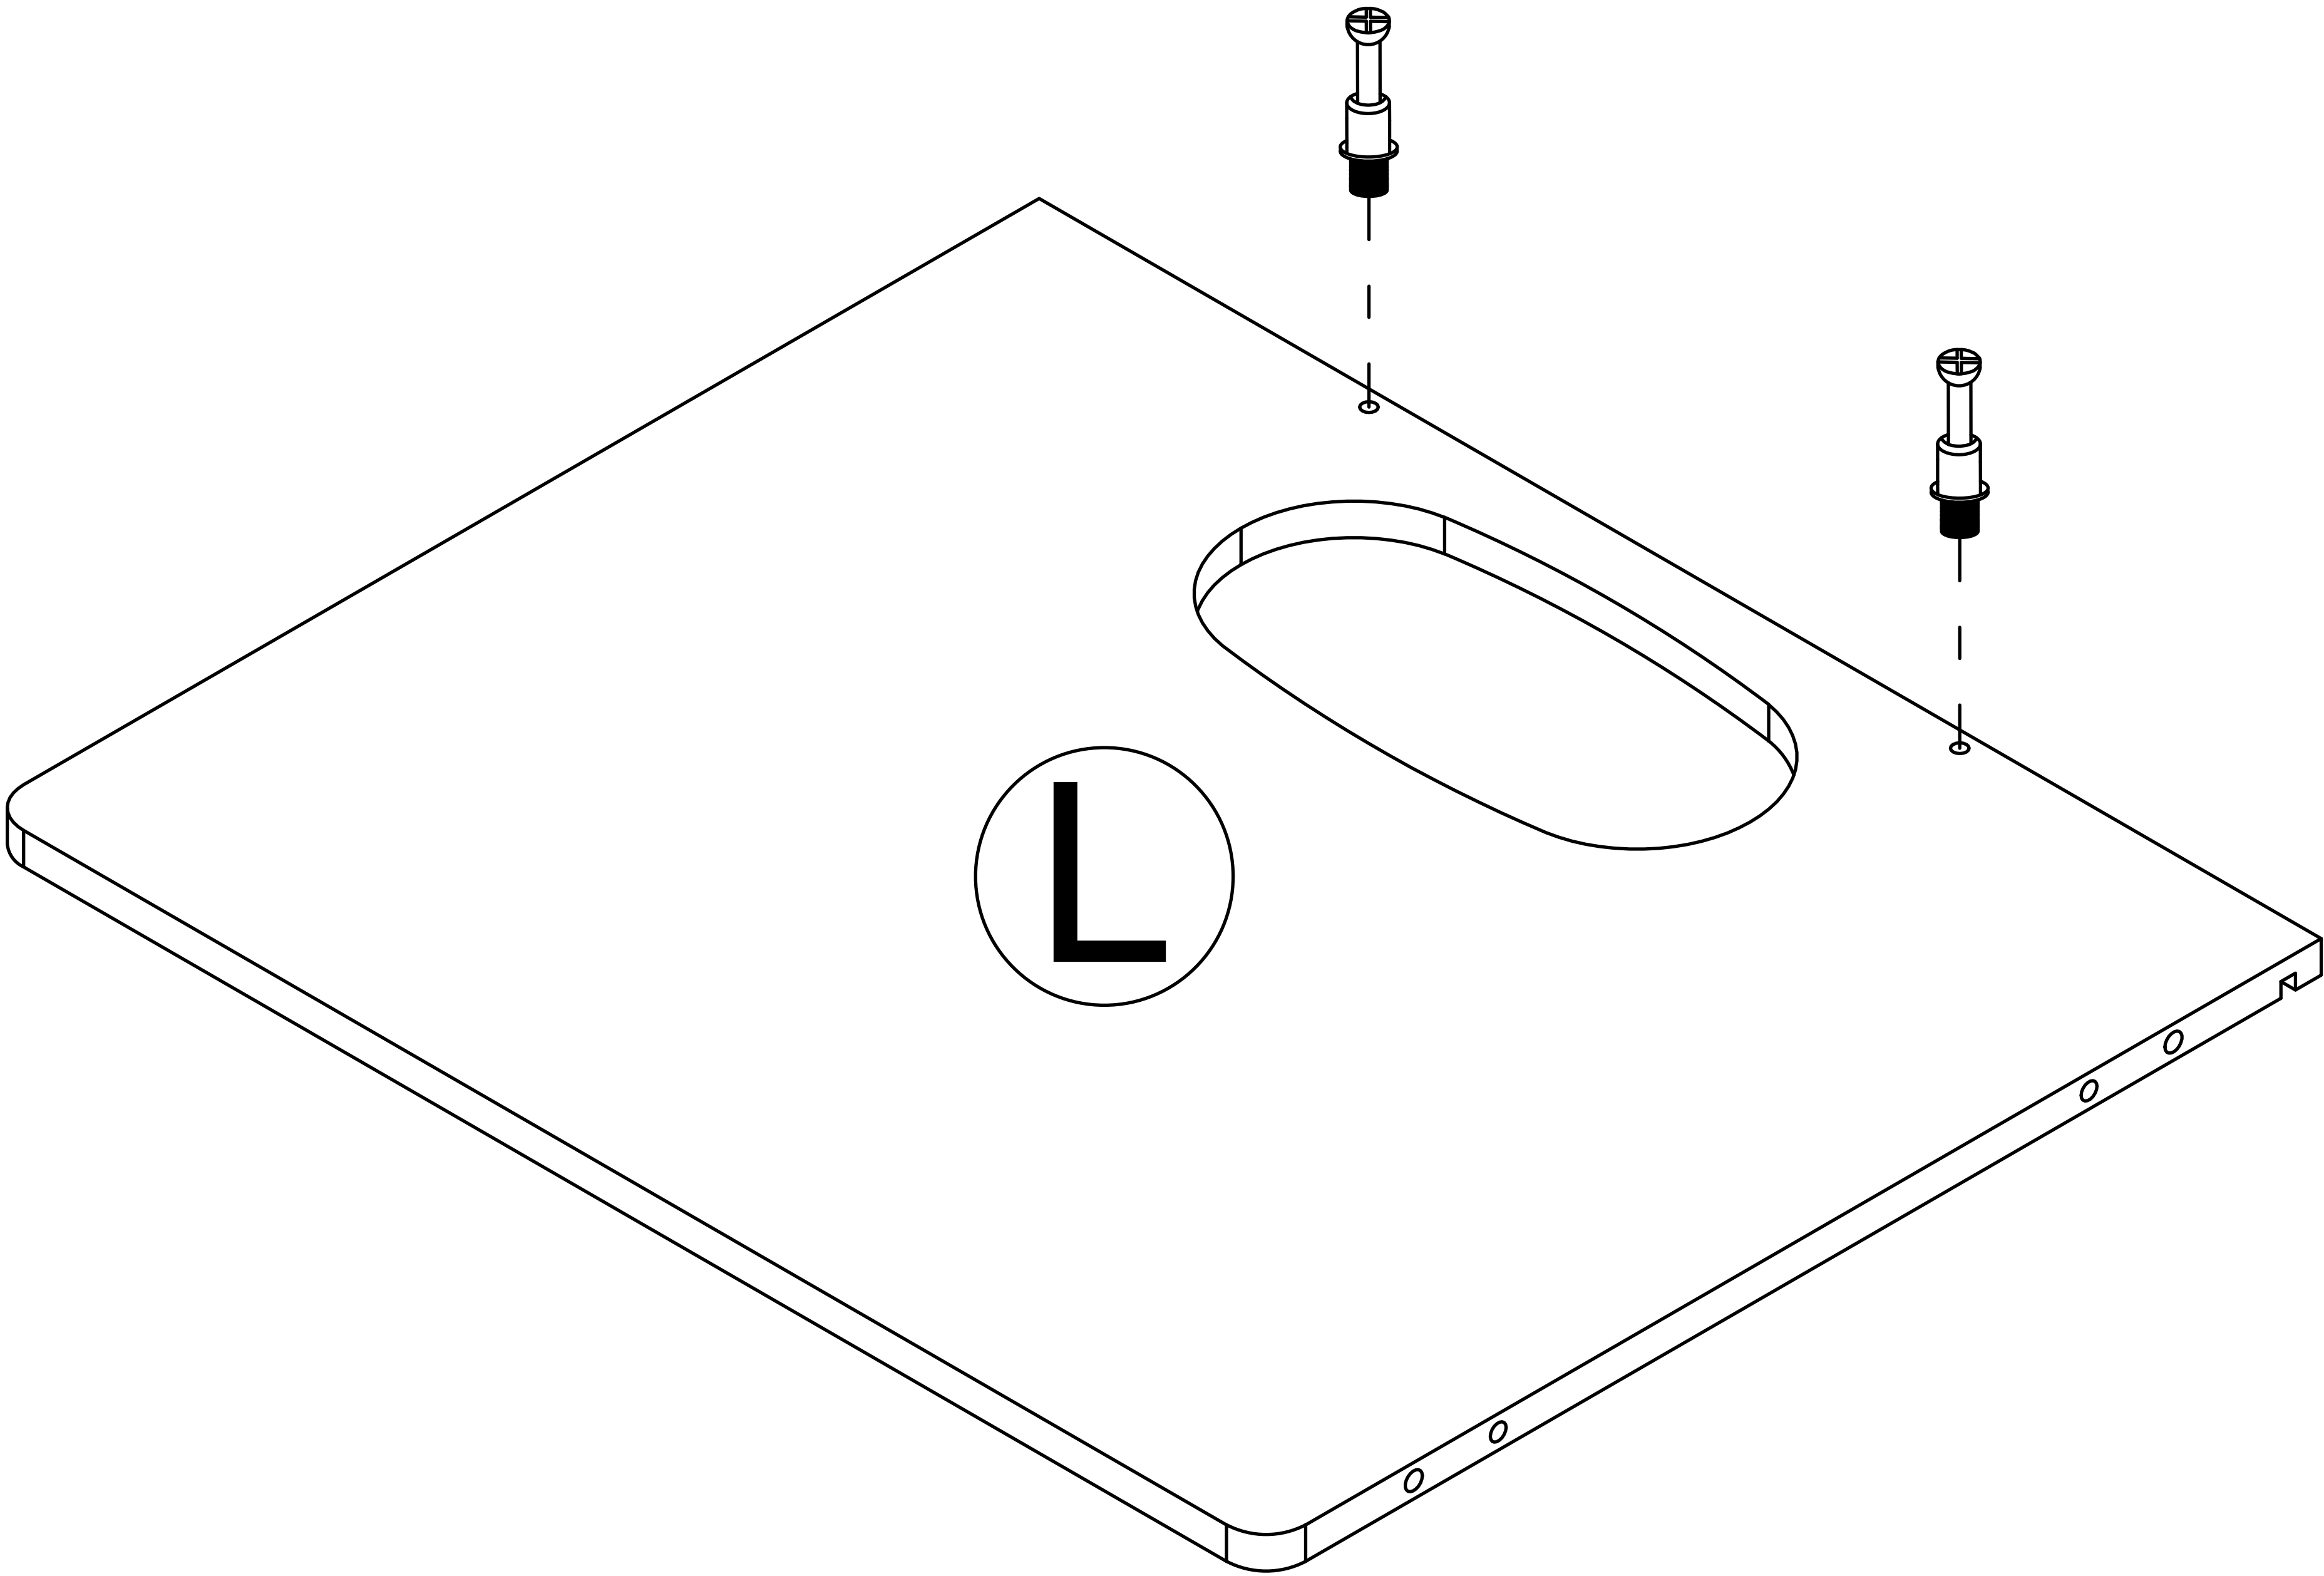 


 
Step 19

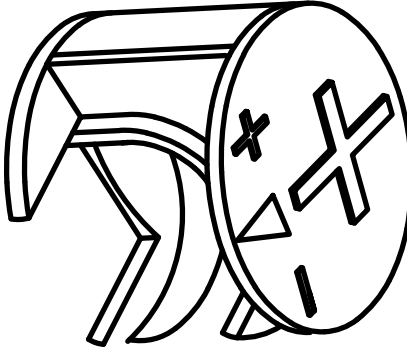2  x2

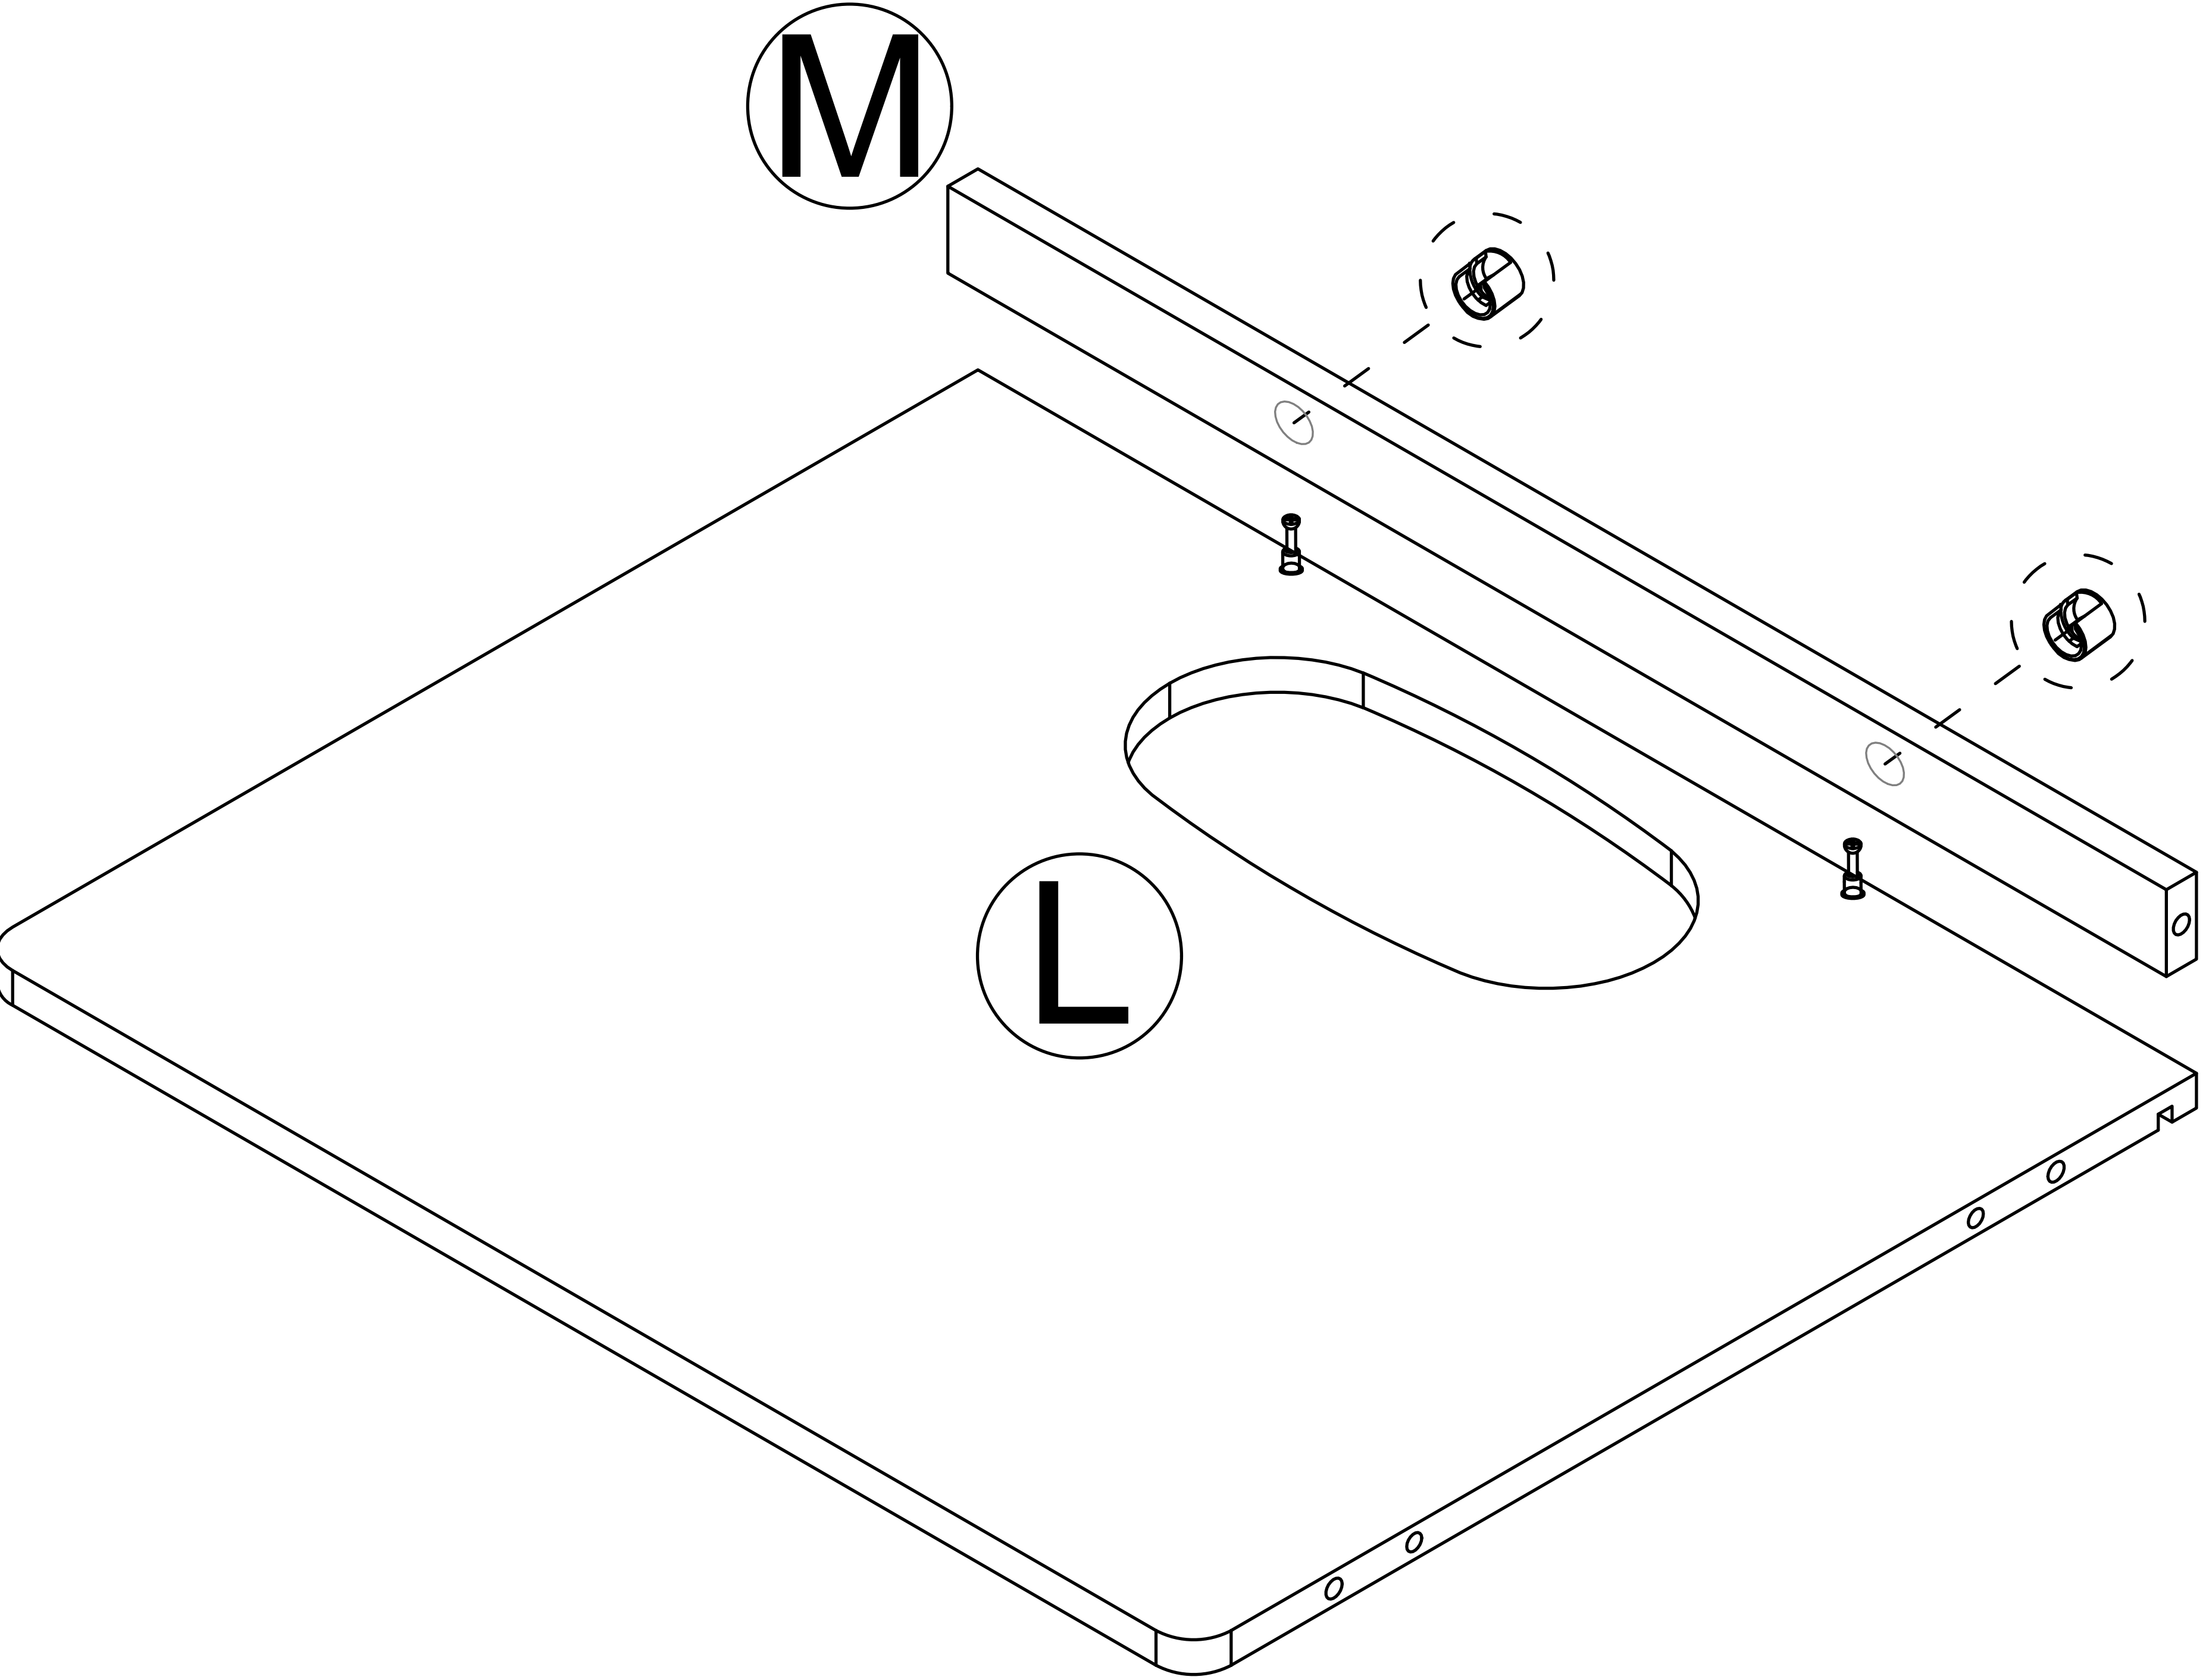 


 
Step 20

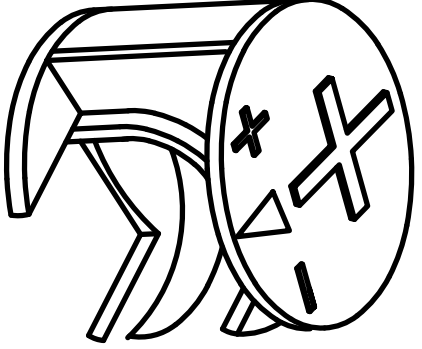2  x3

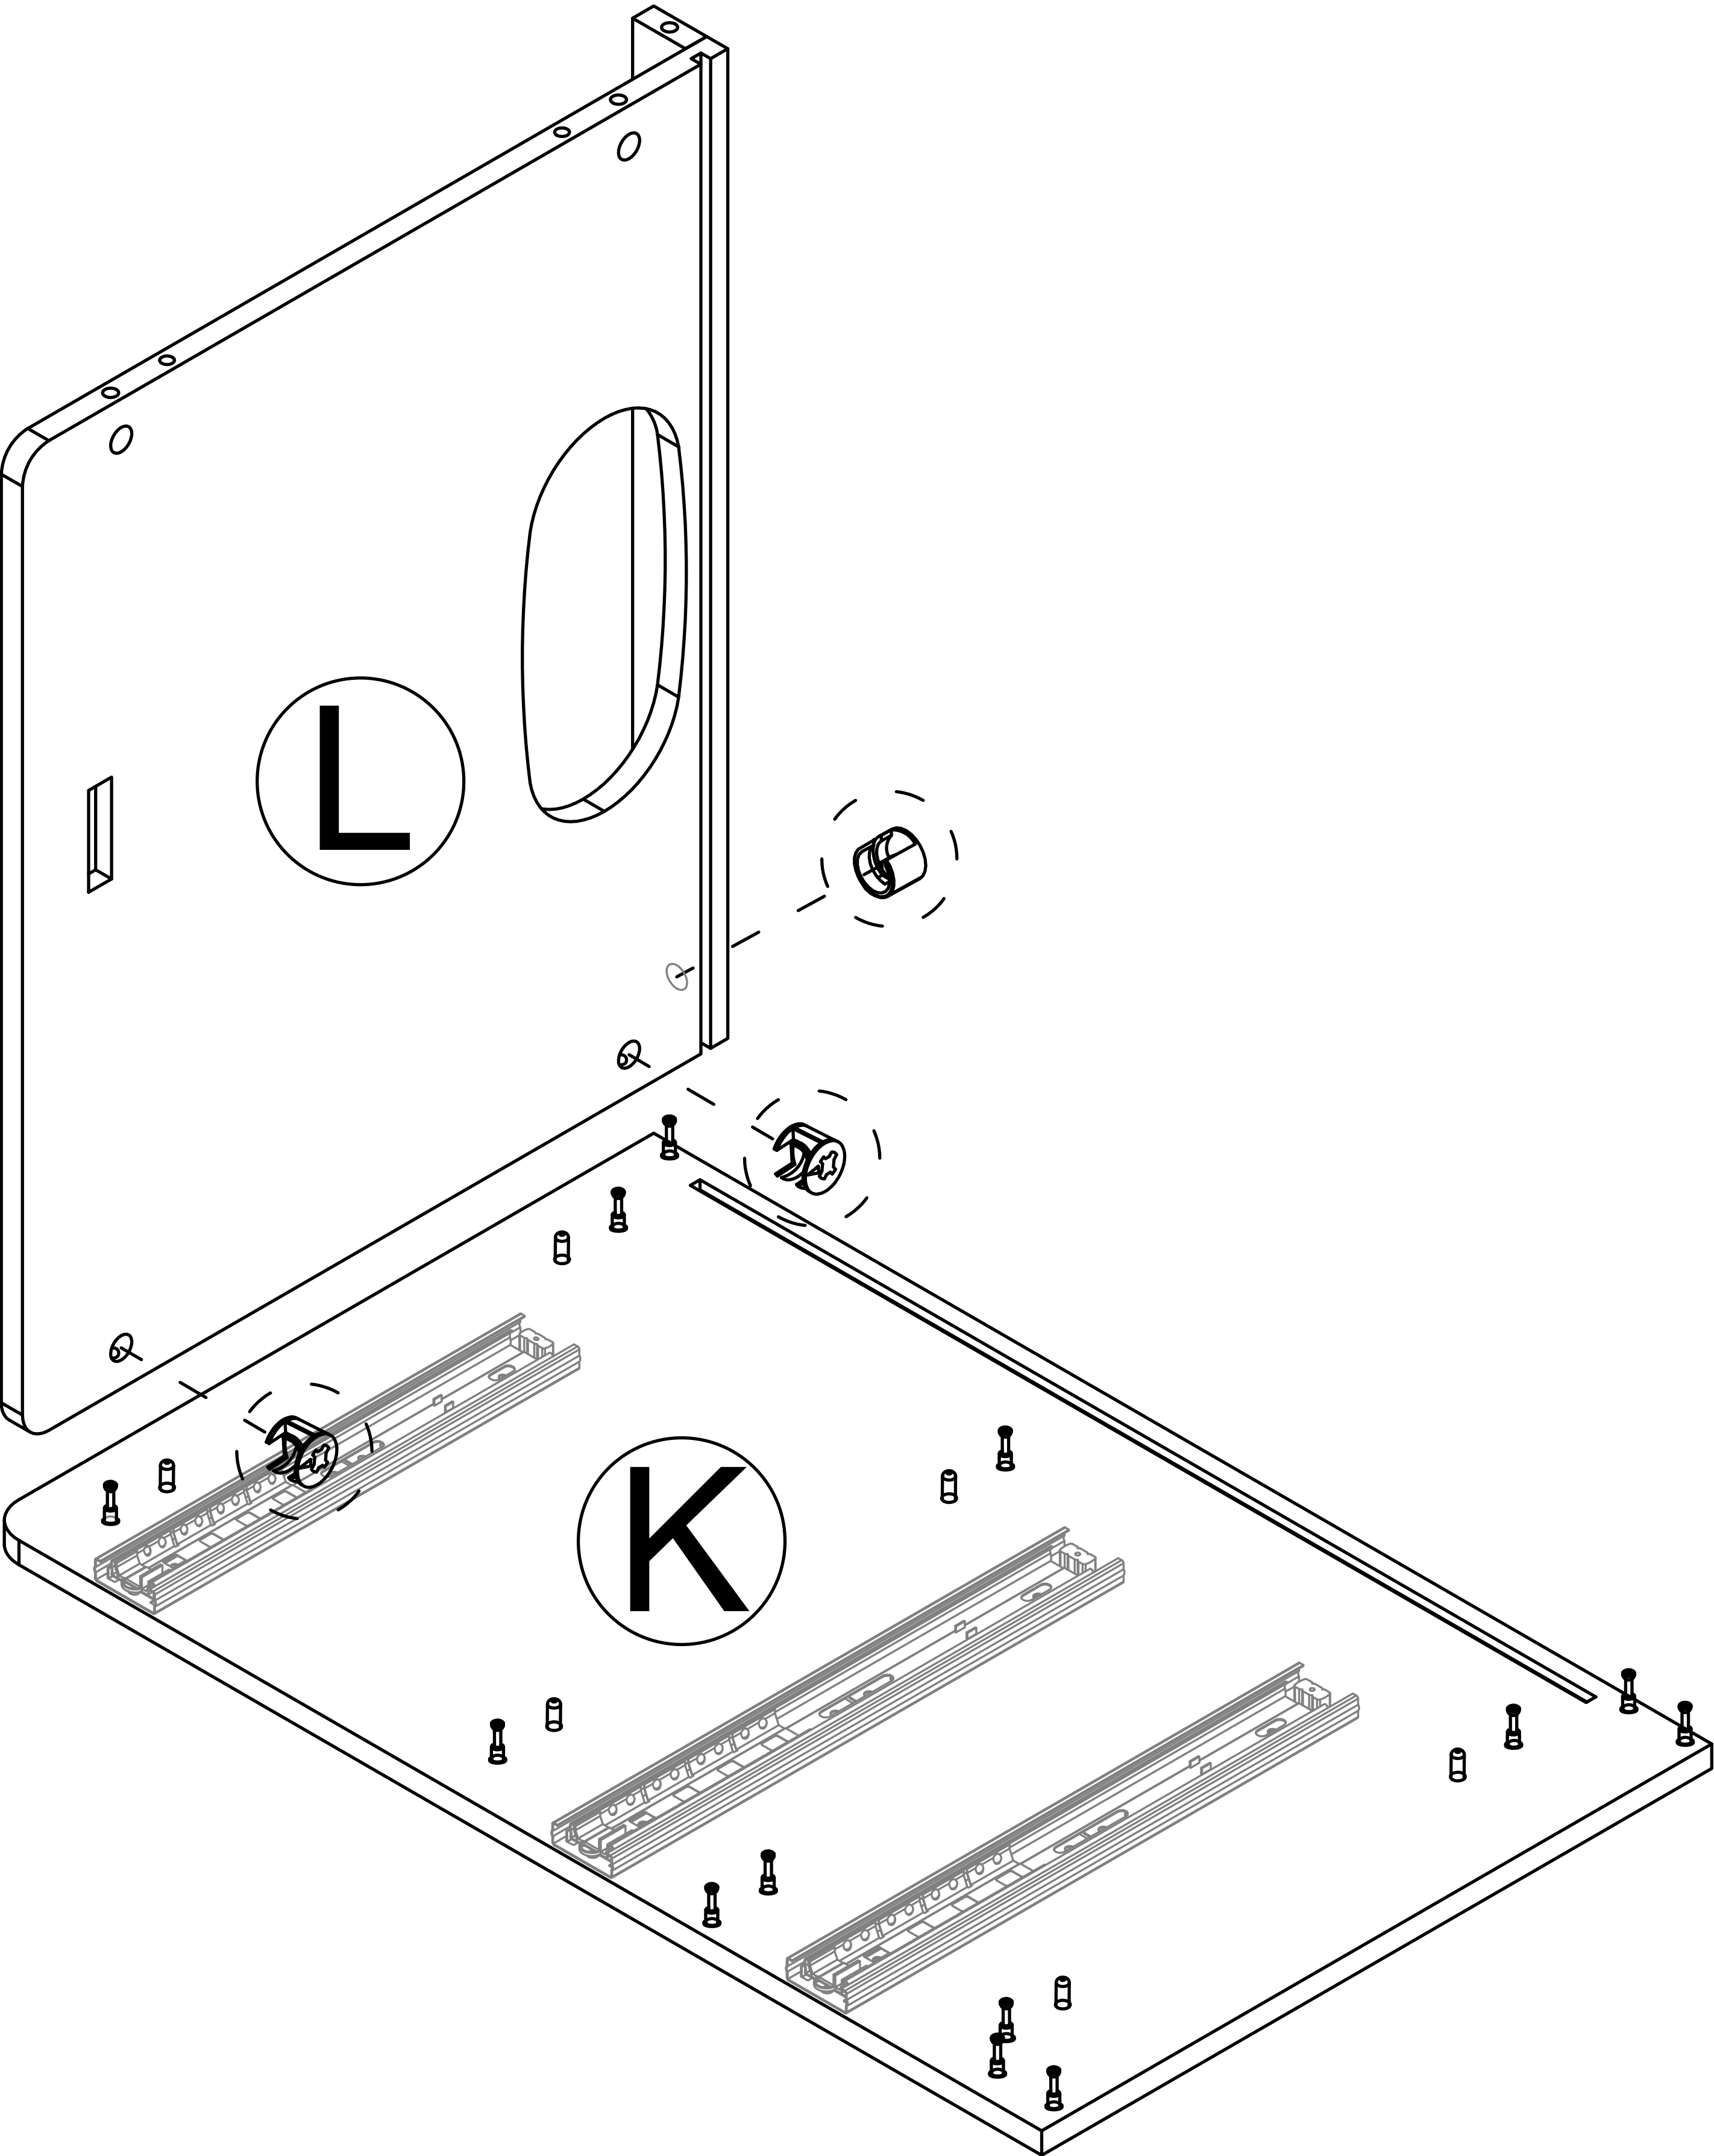 

 
Step 21

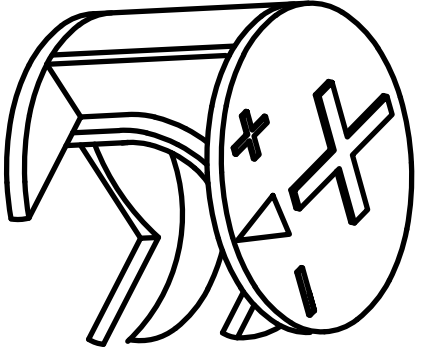2  x2

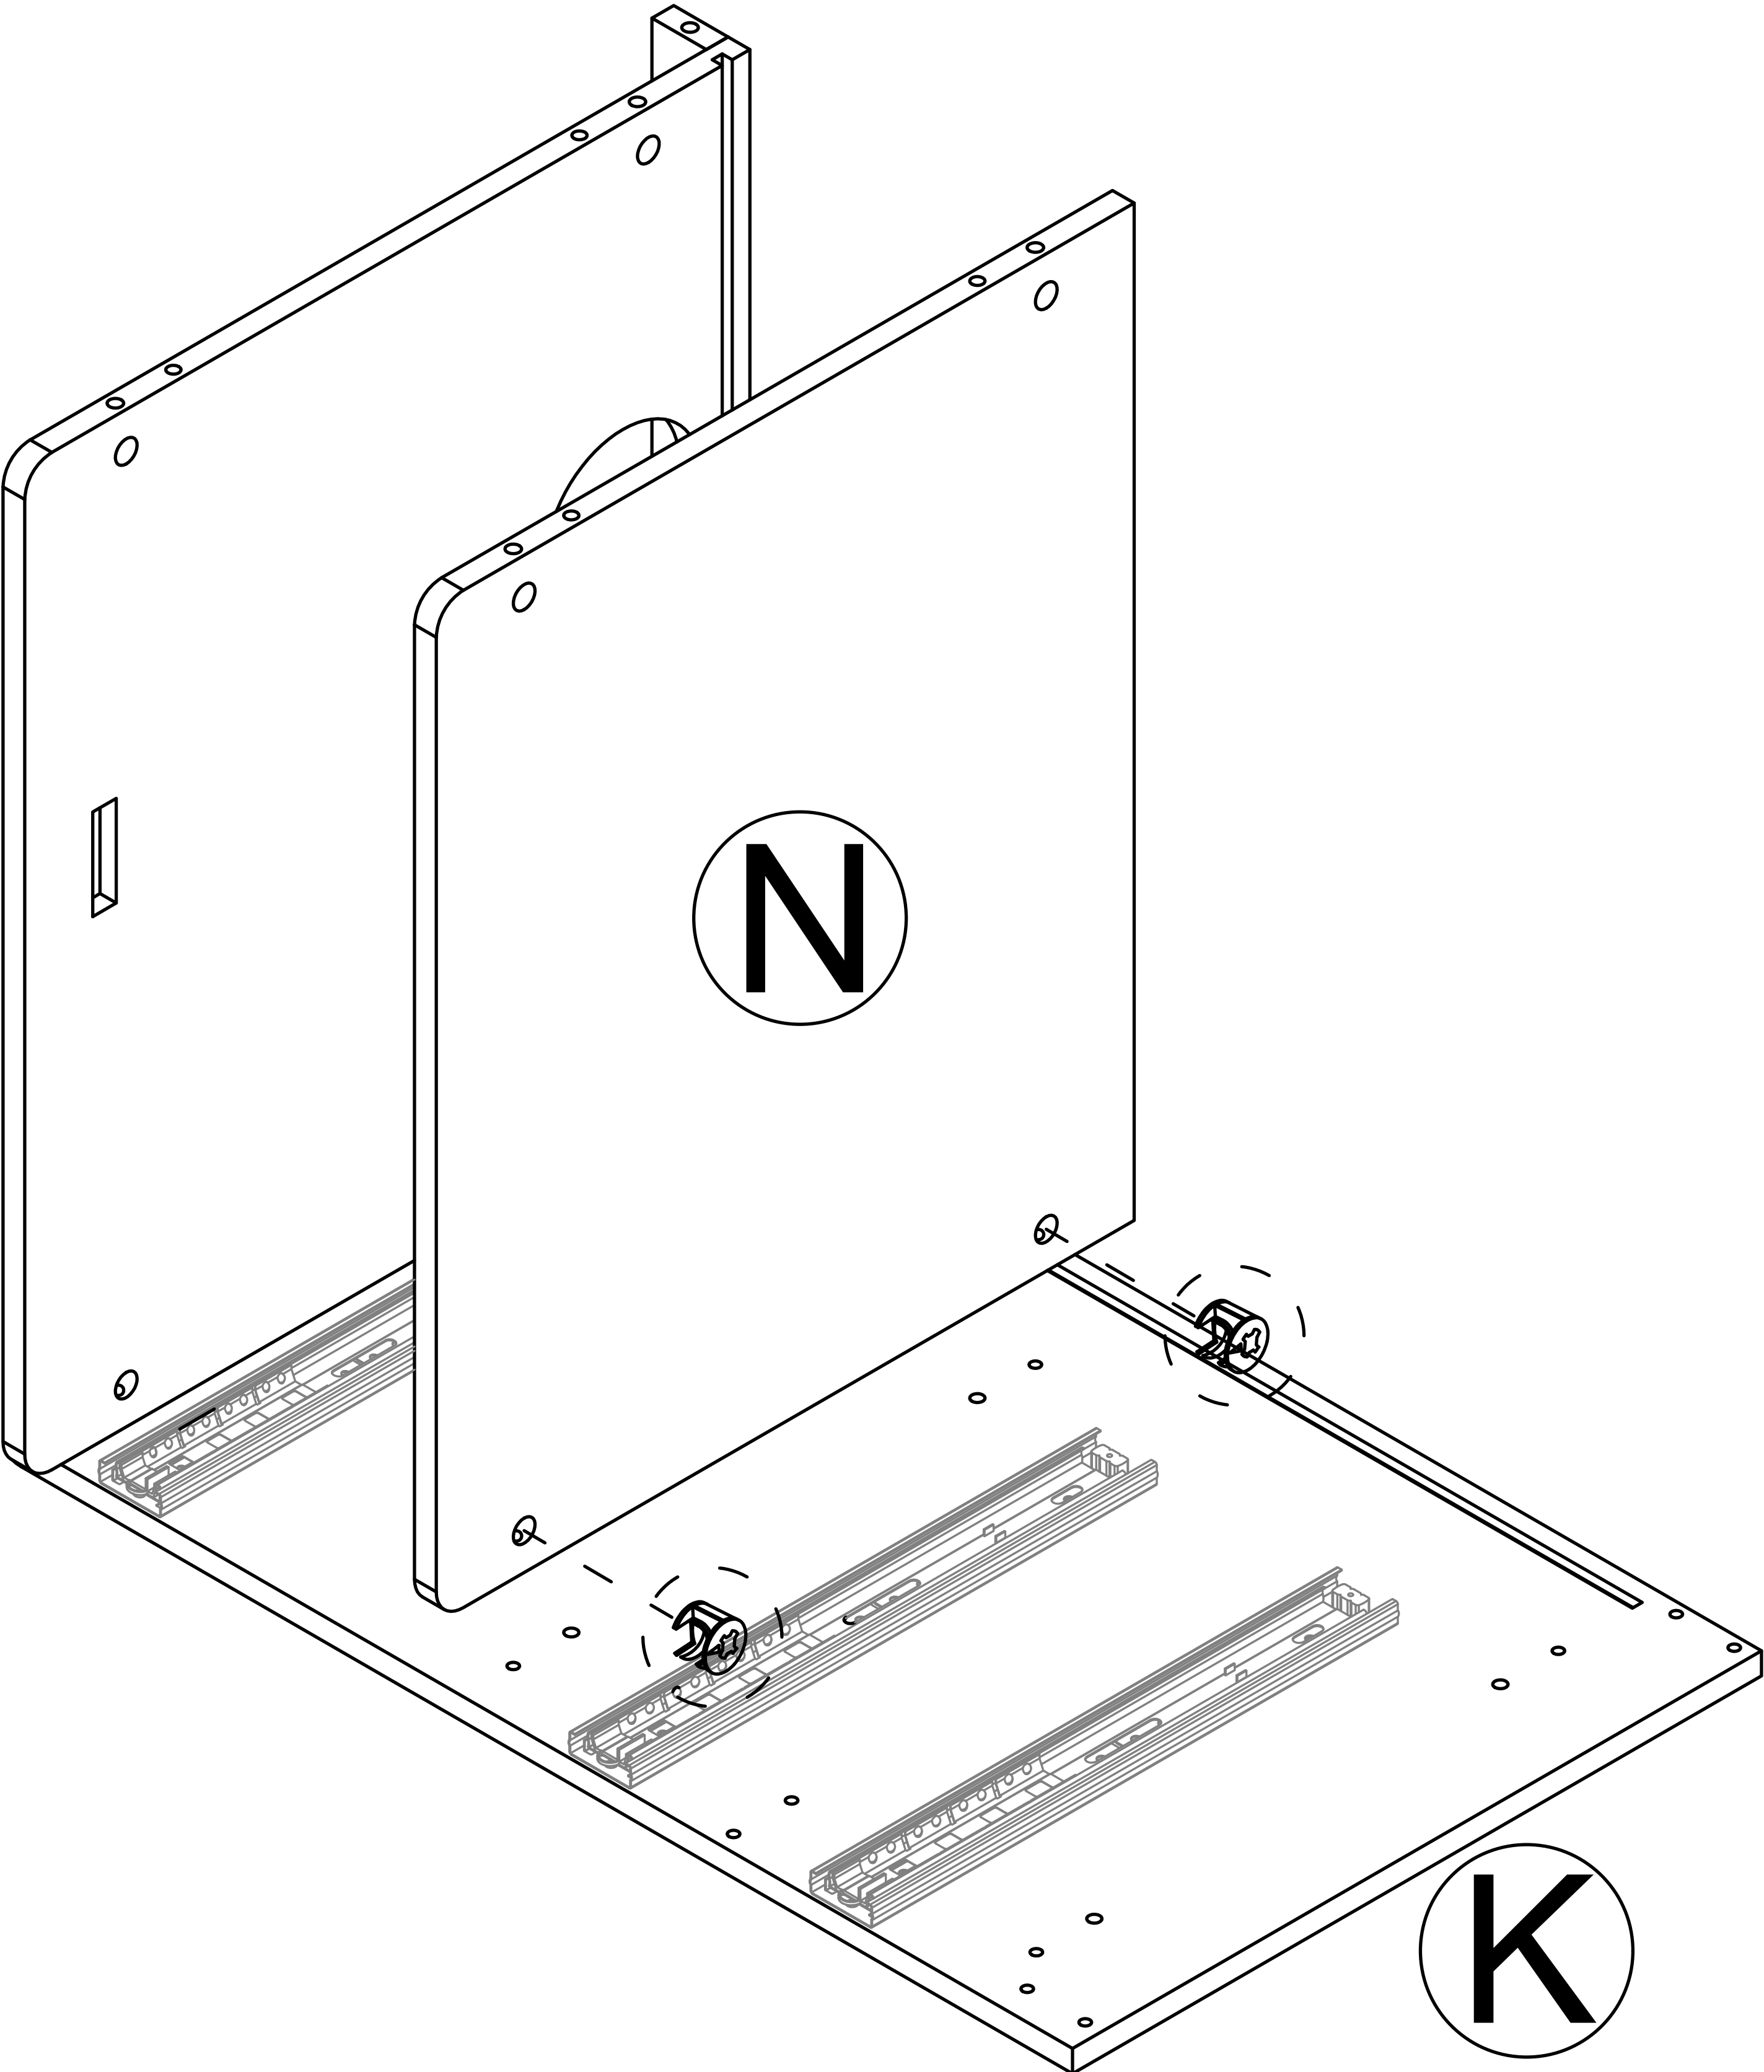 


Step 22

 2

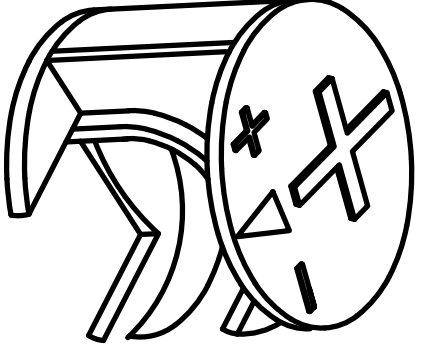


x2

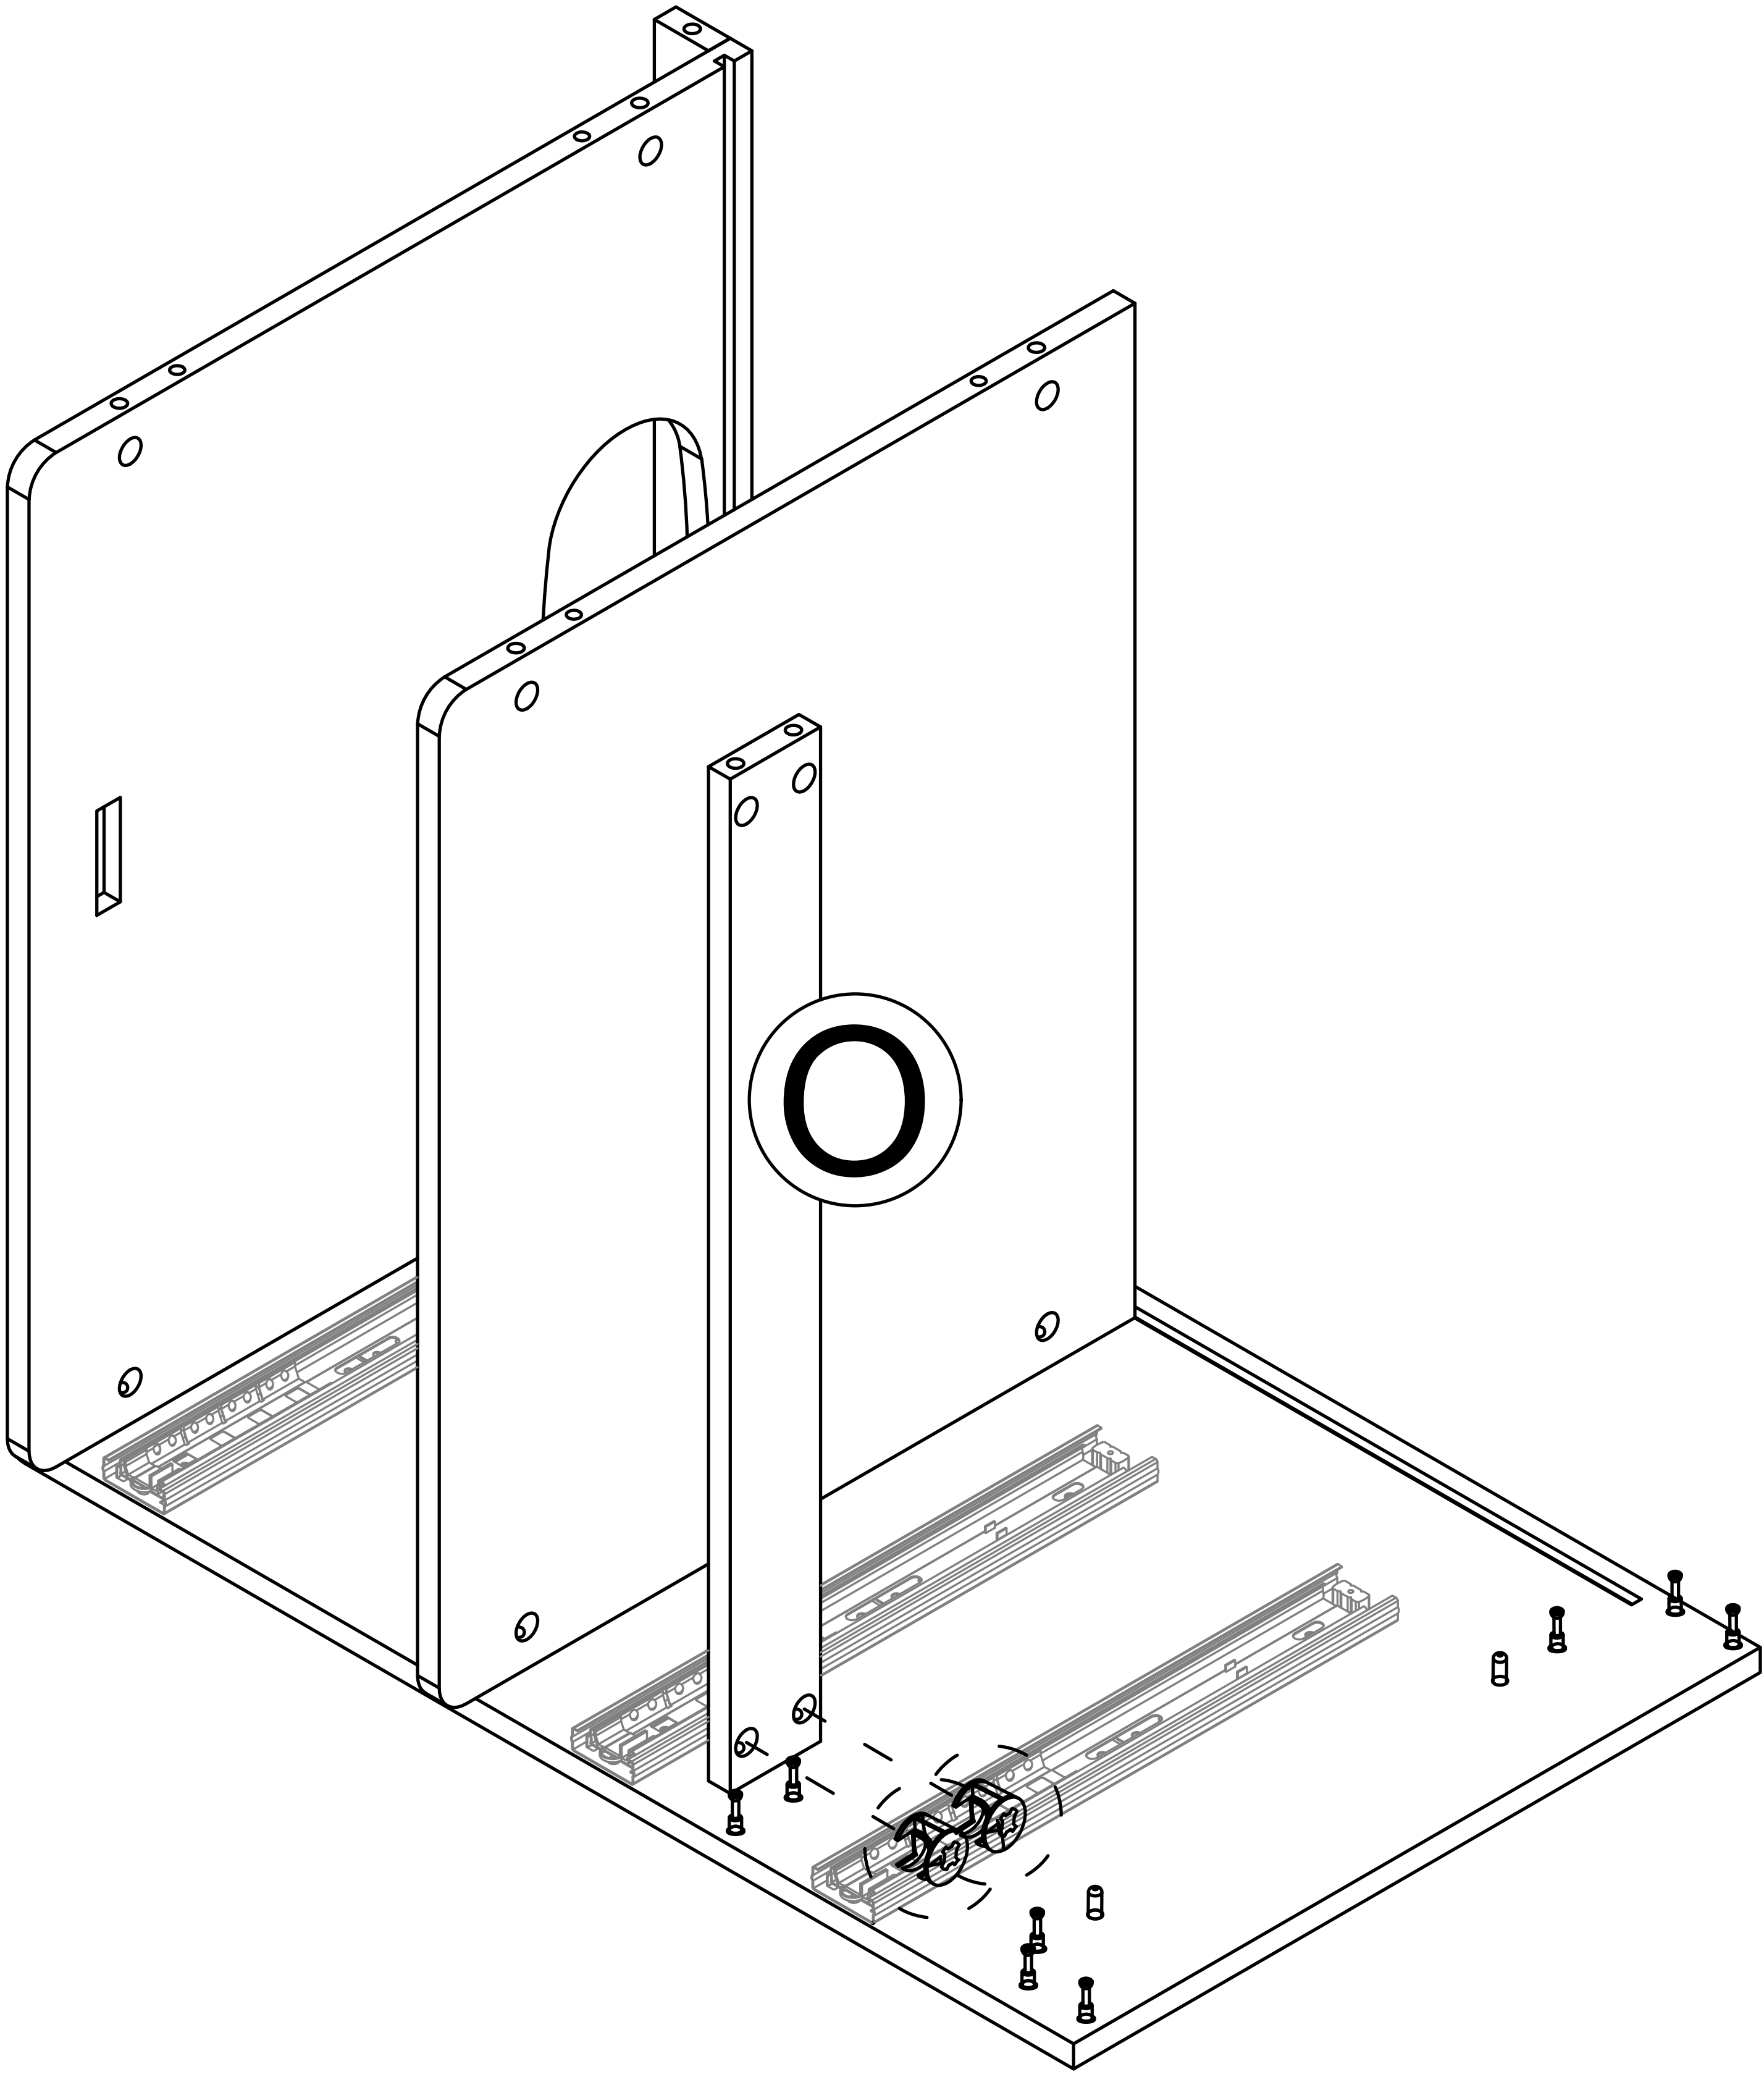 


Step 23

 1

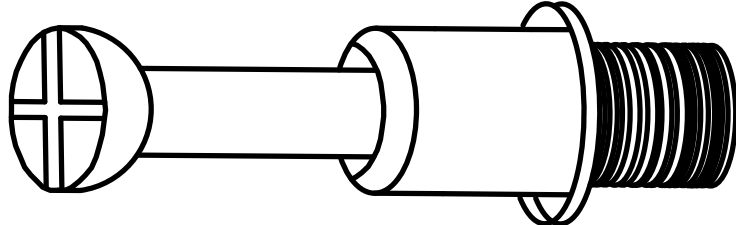


x4

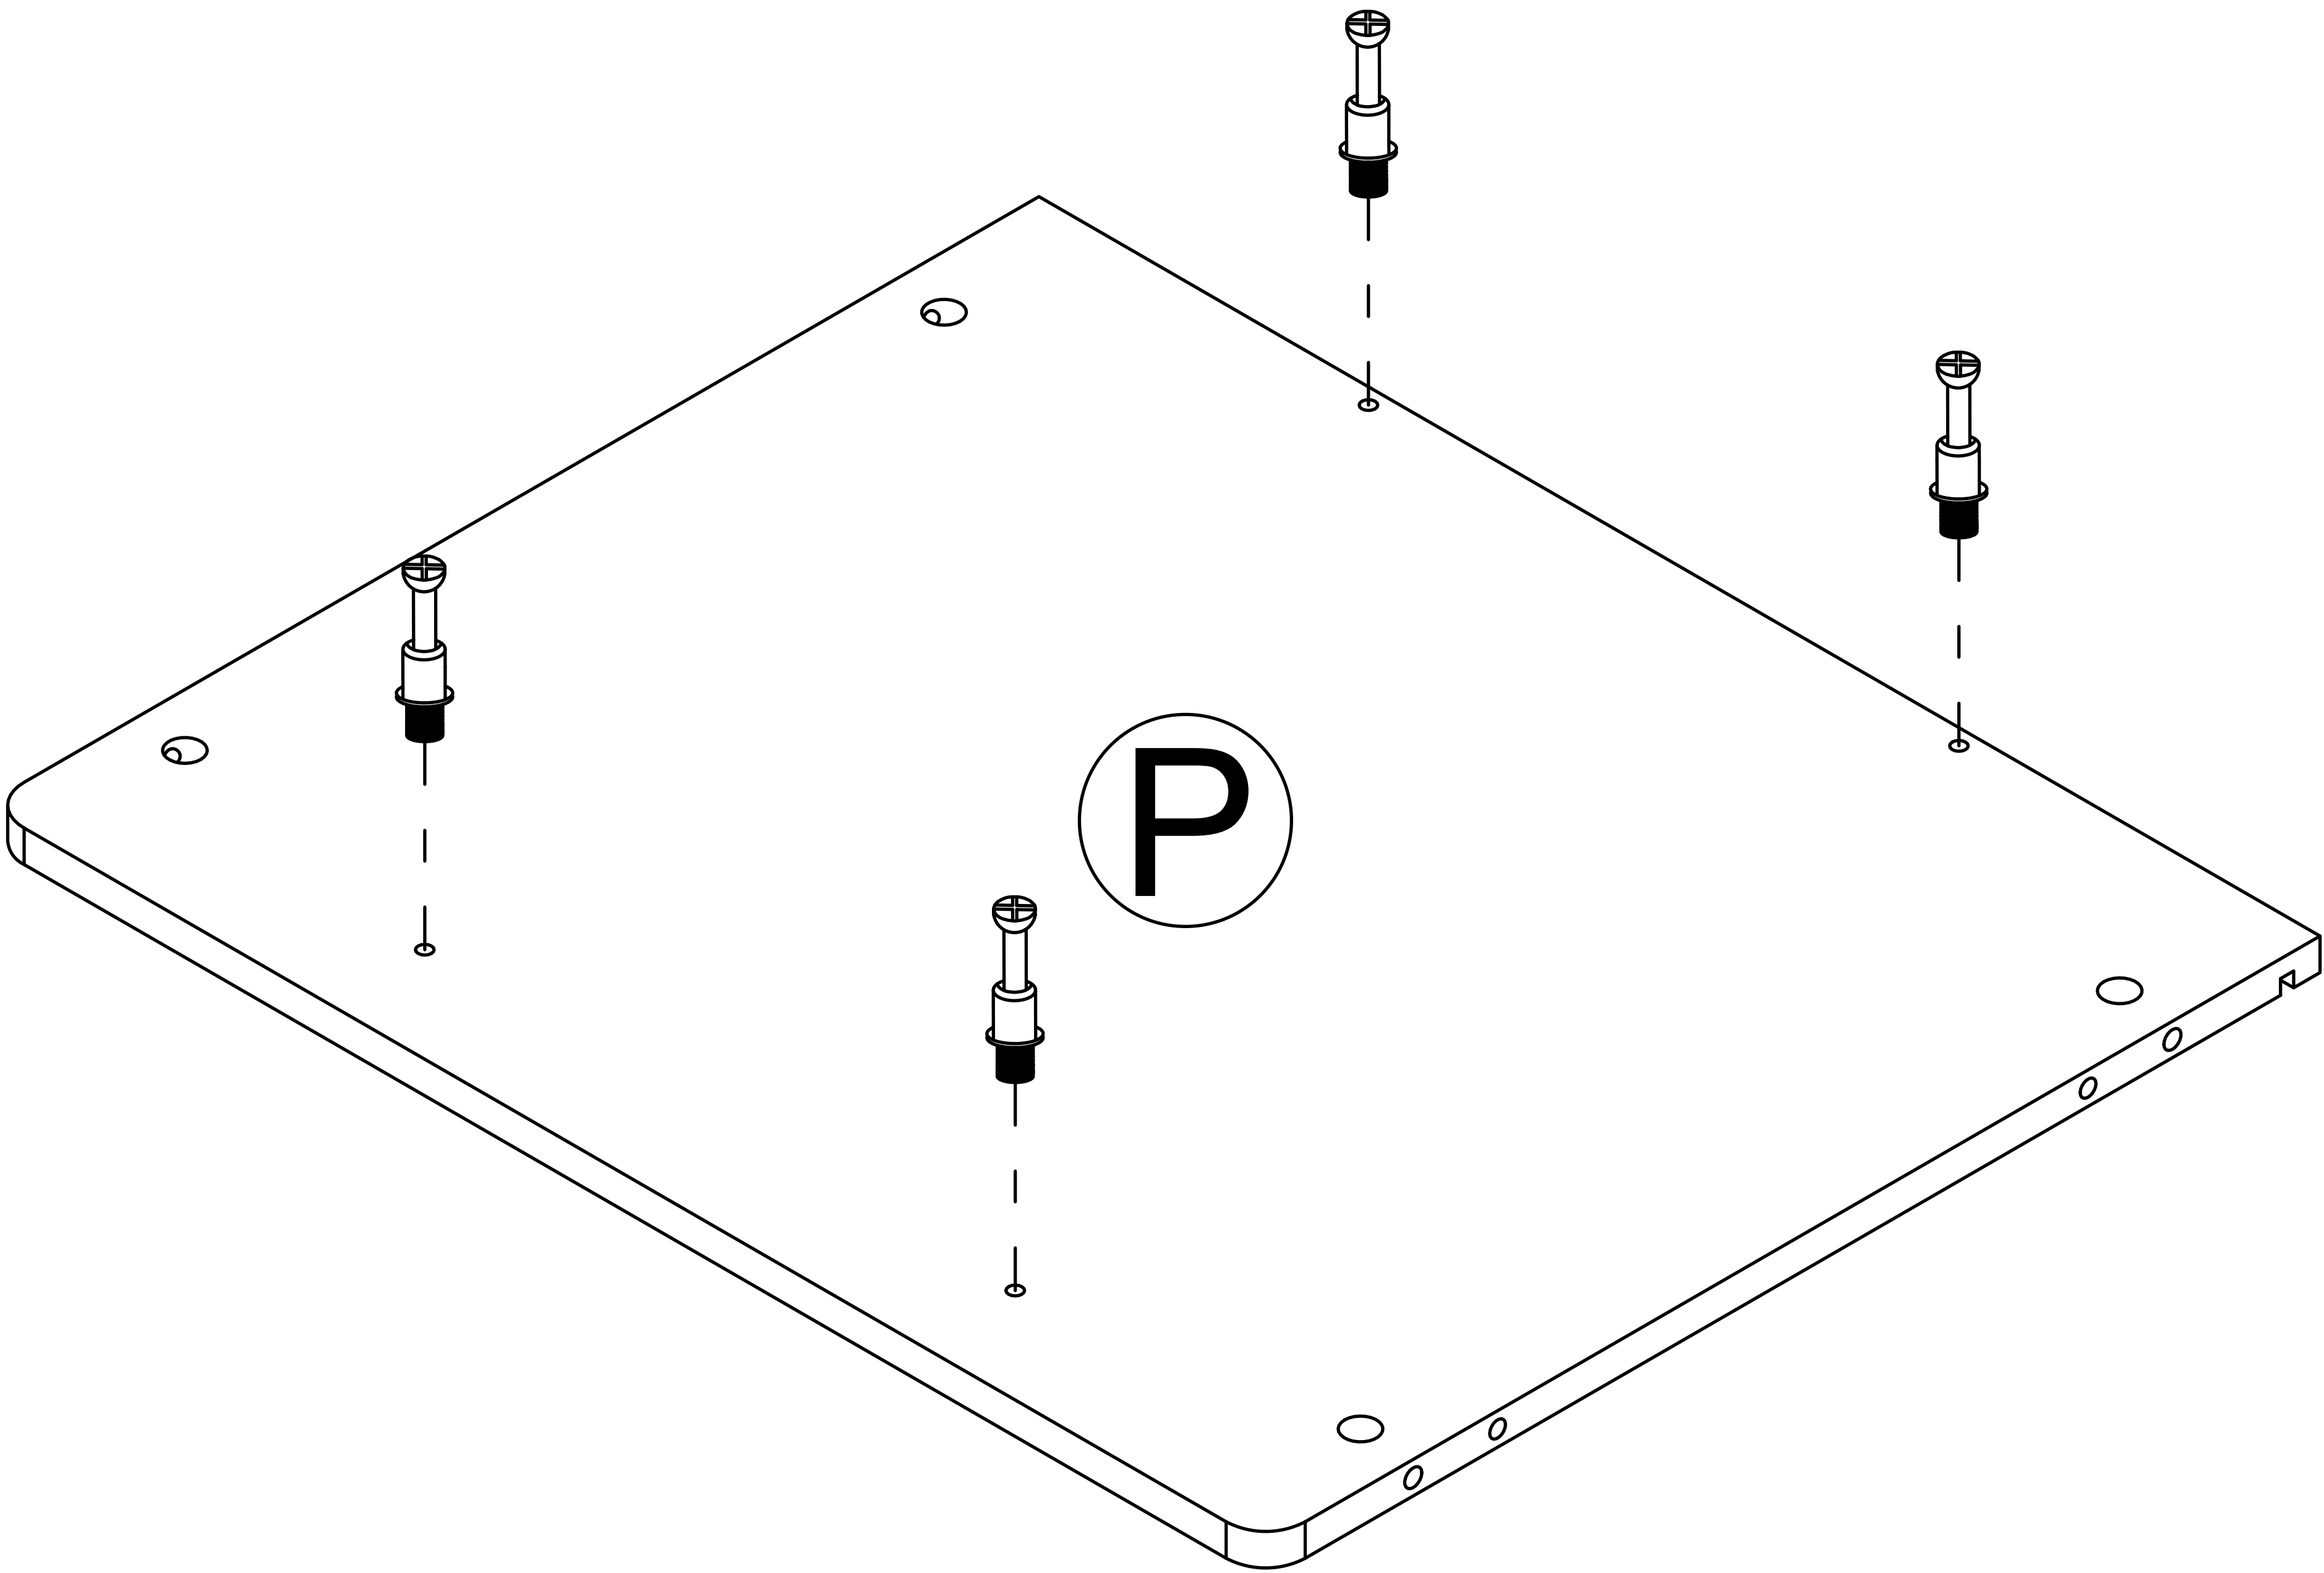 


Step 24

 2

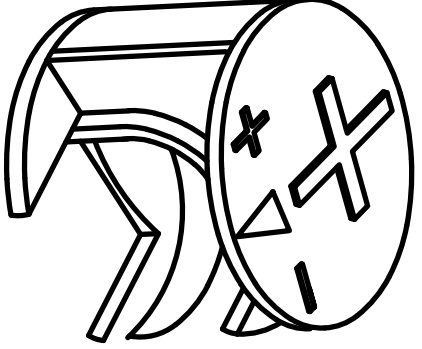


x4

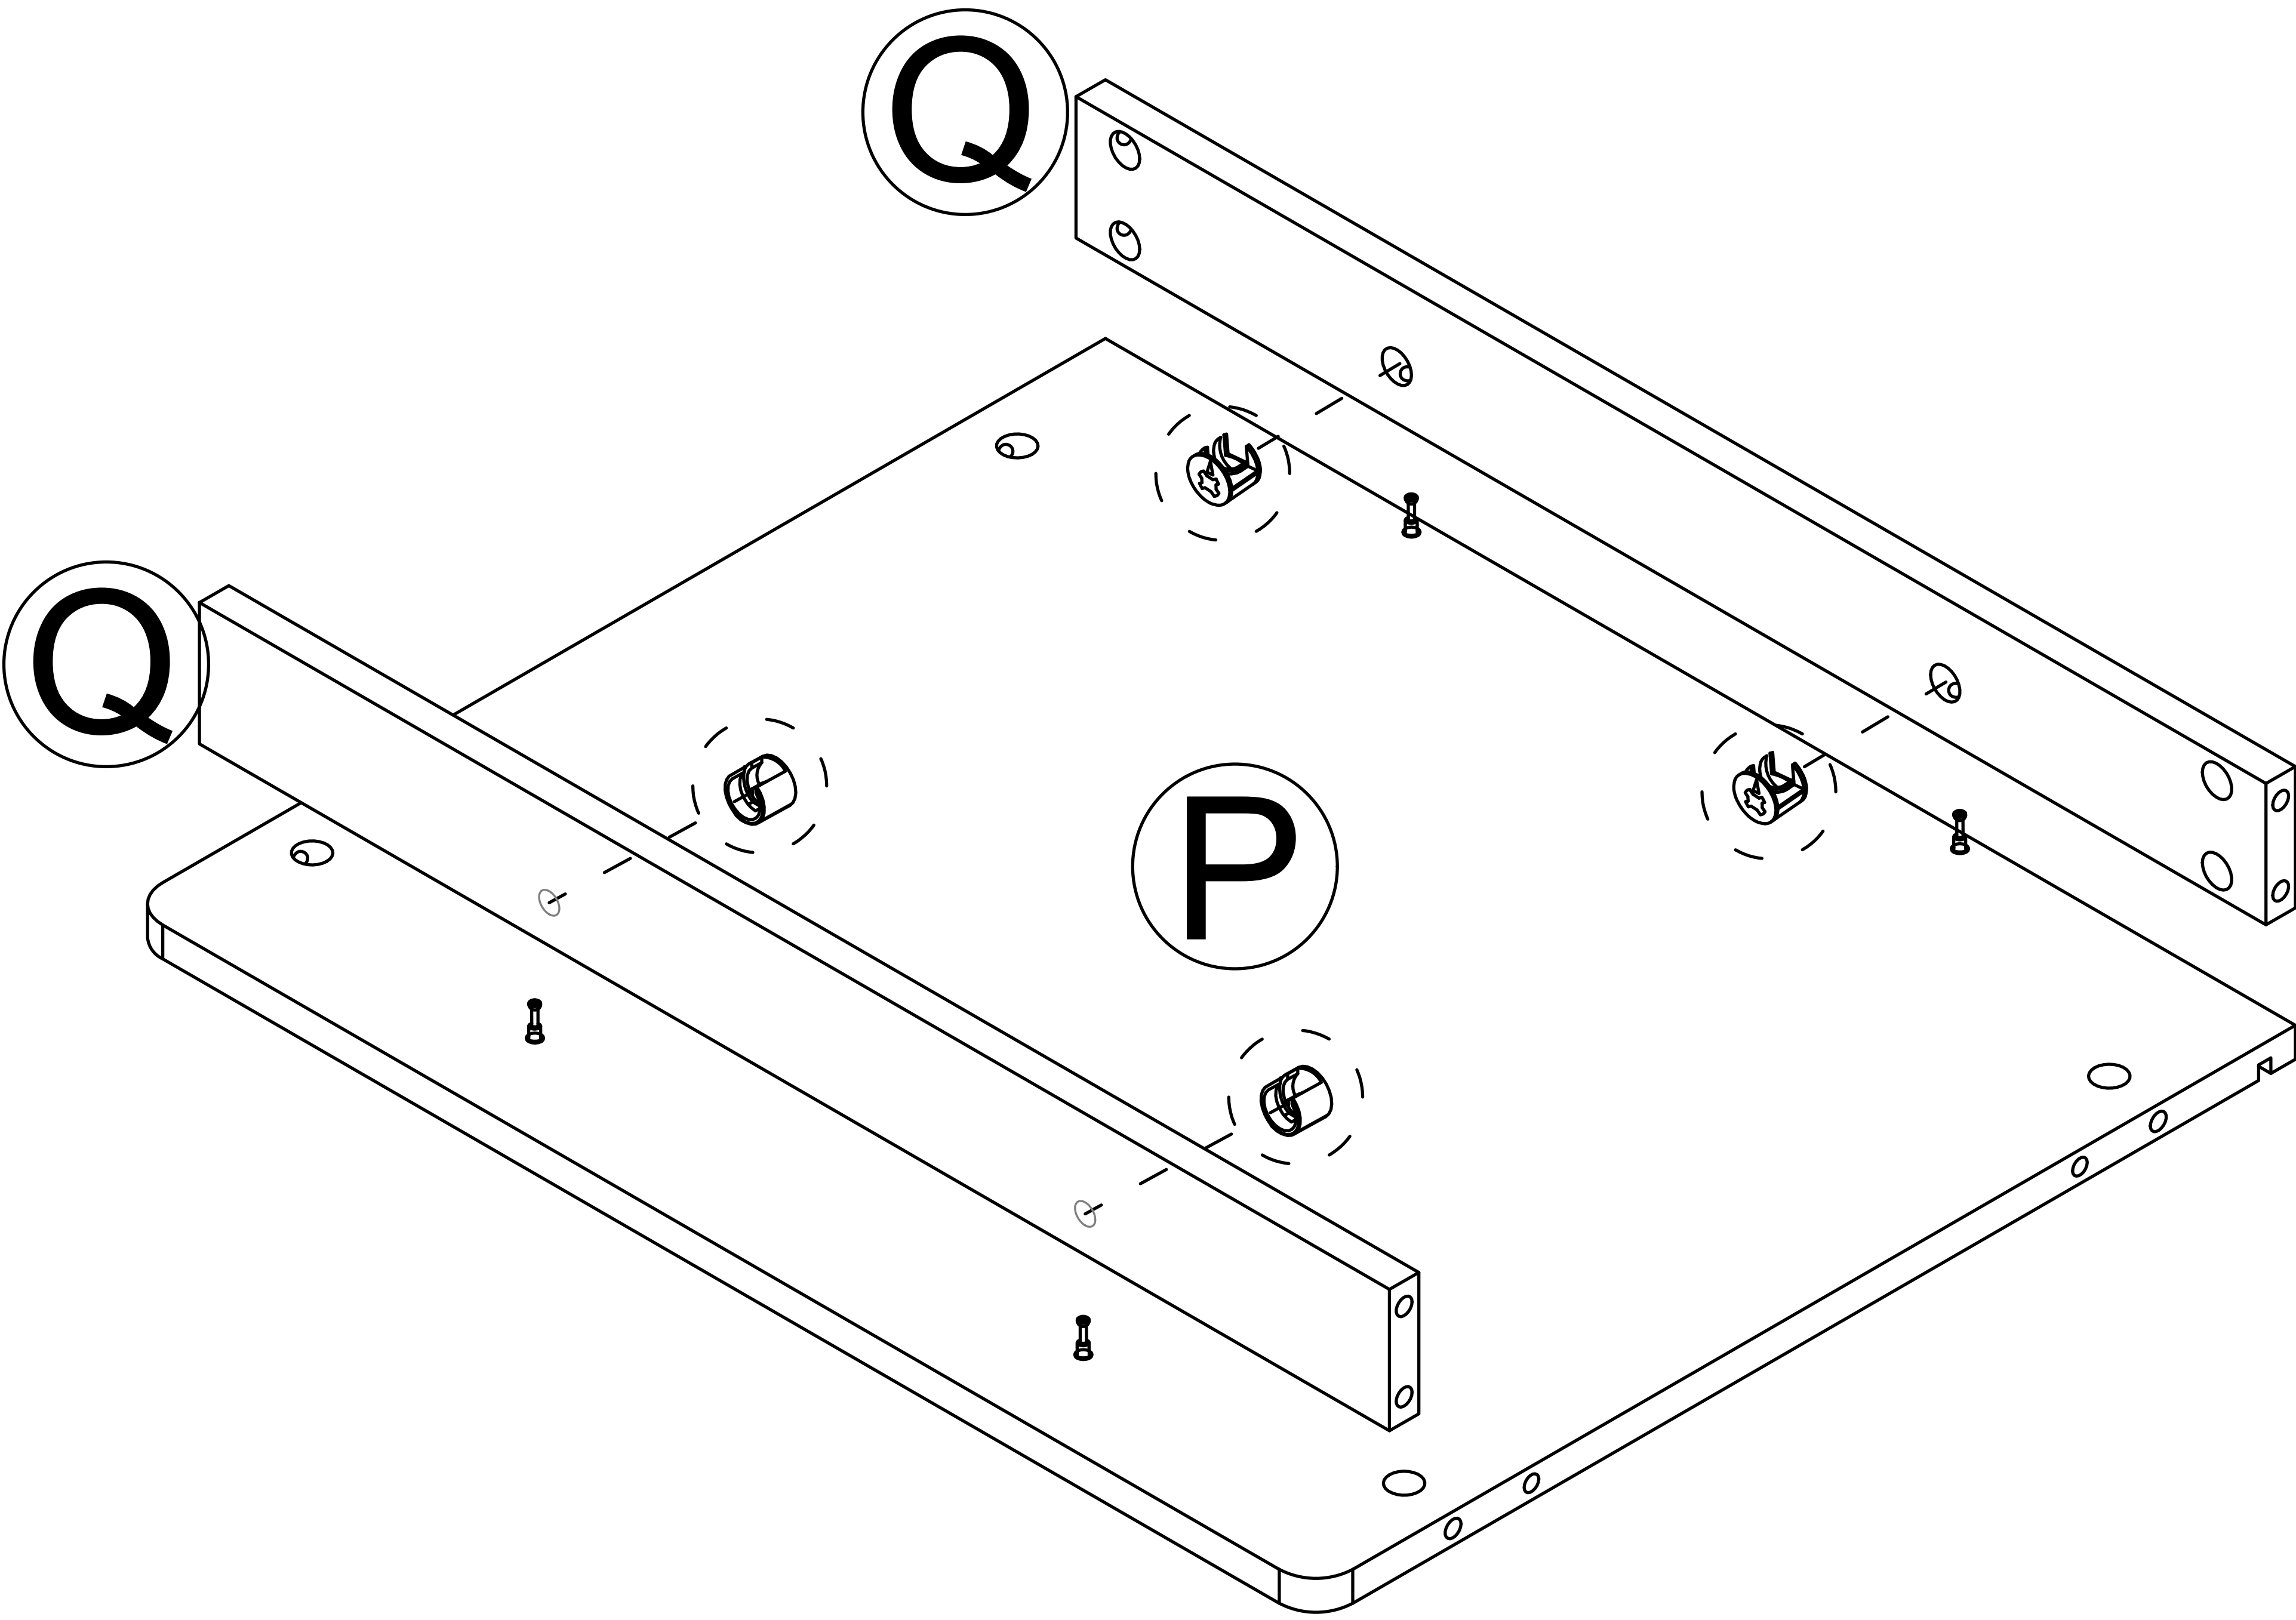 


Step 25

 
2

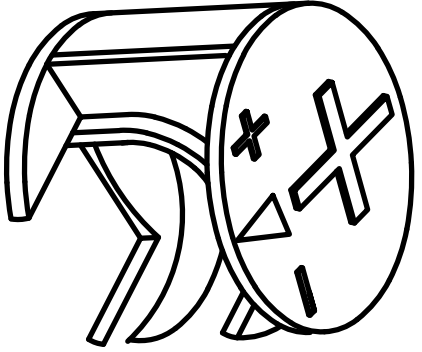


x6

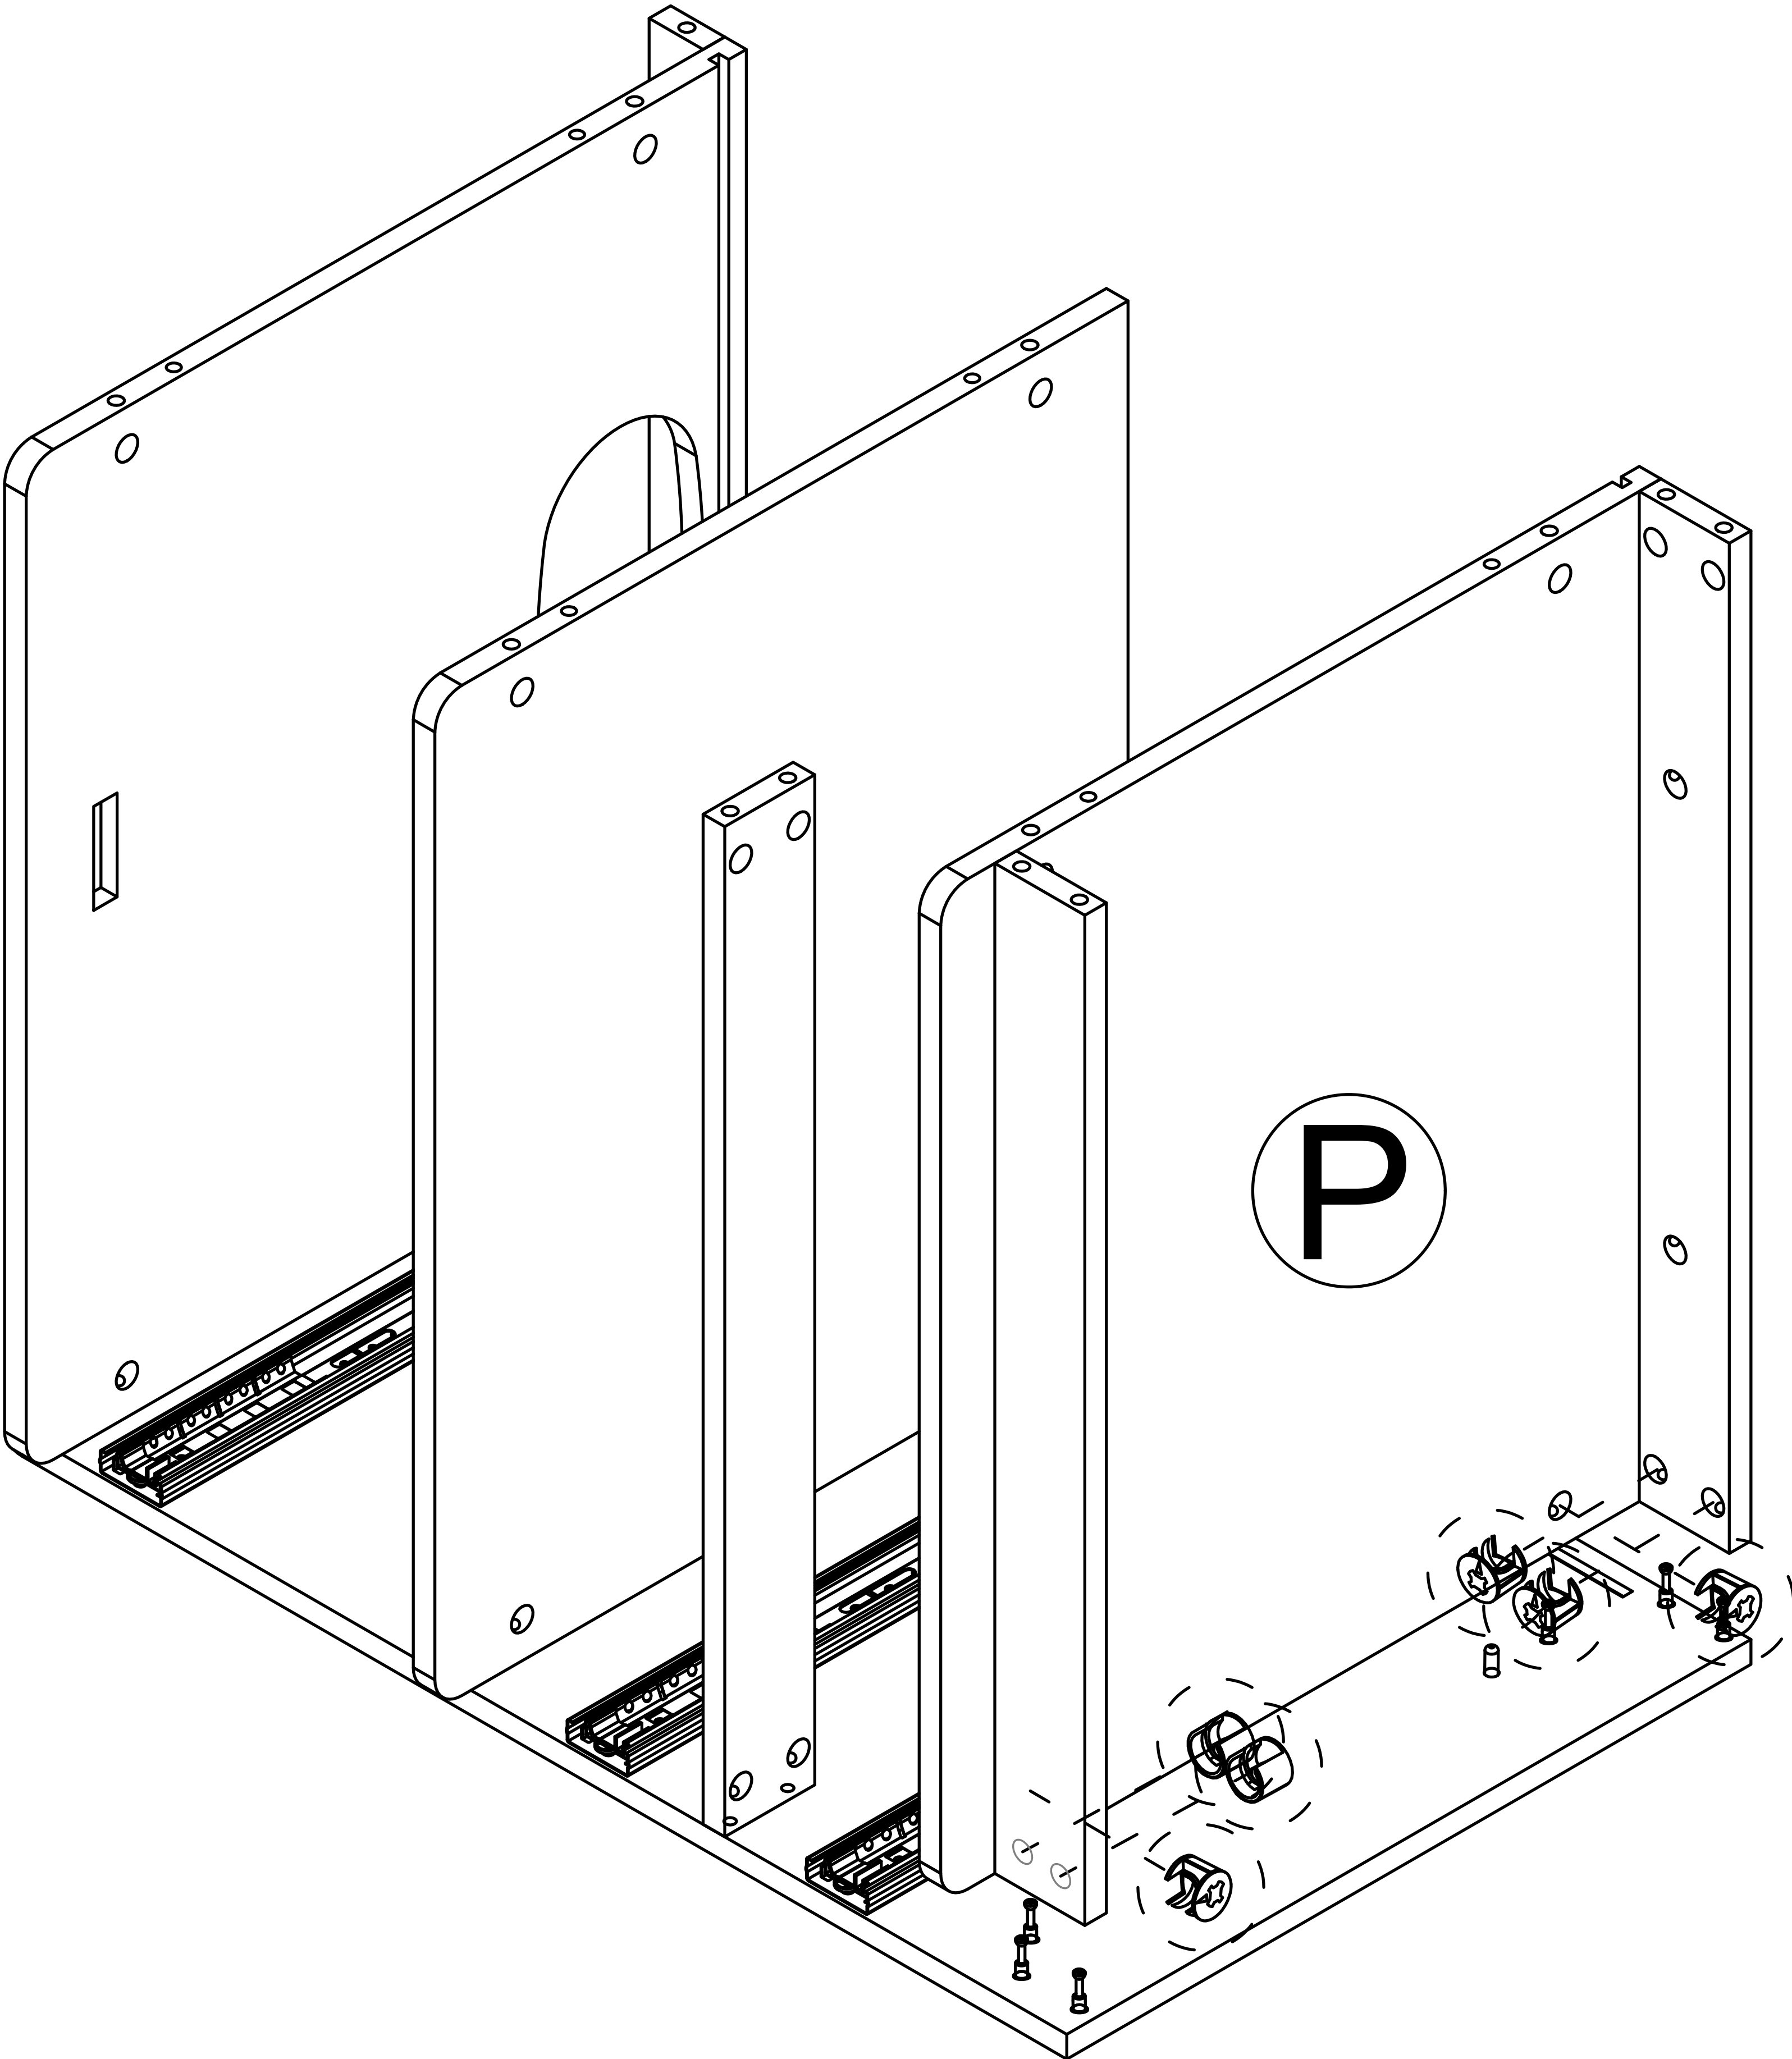 

 
Step 26

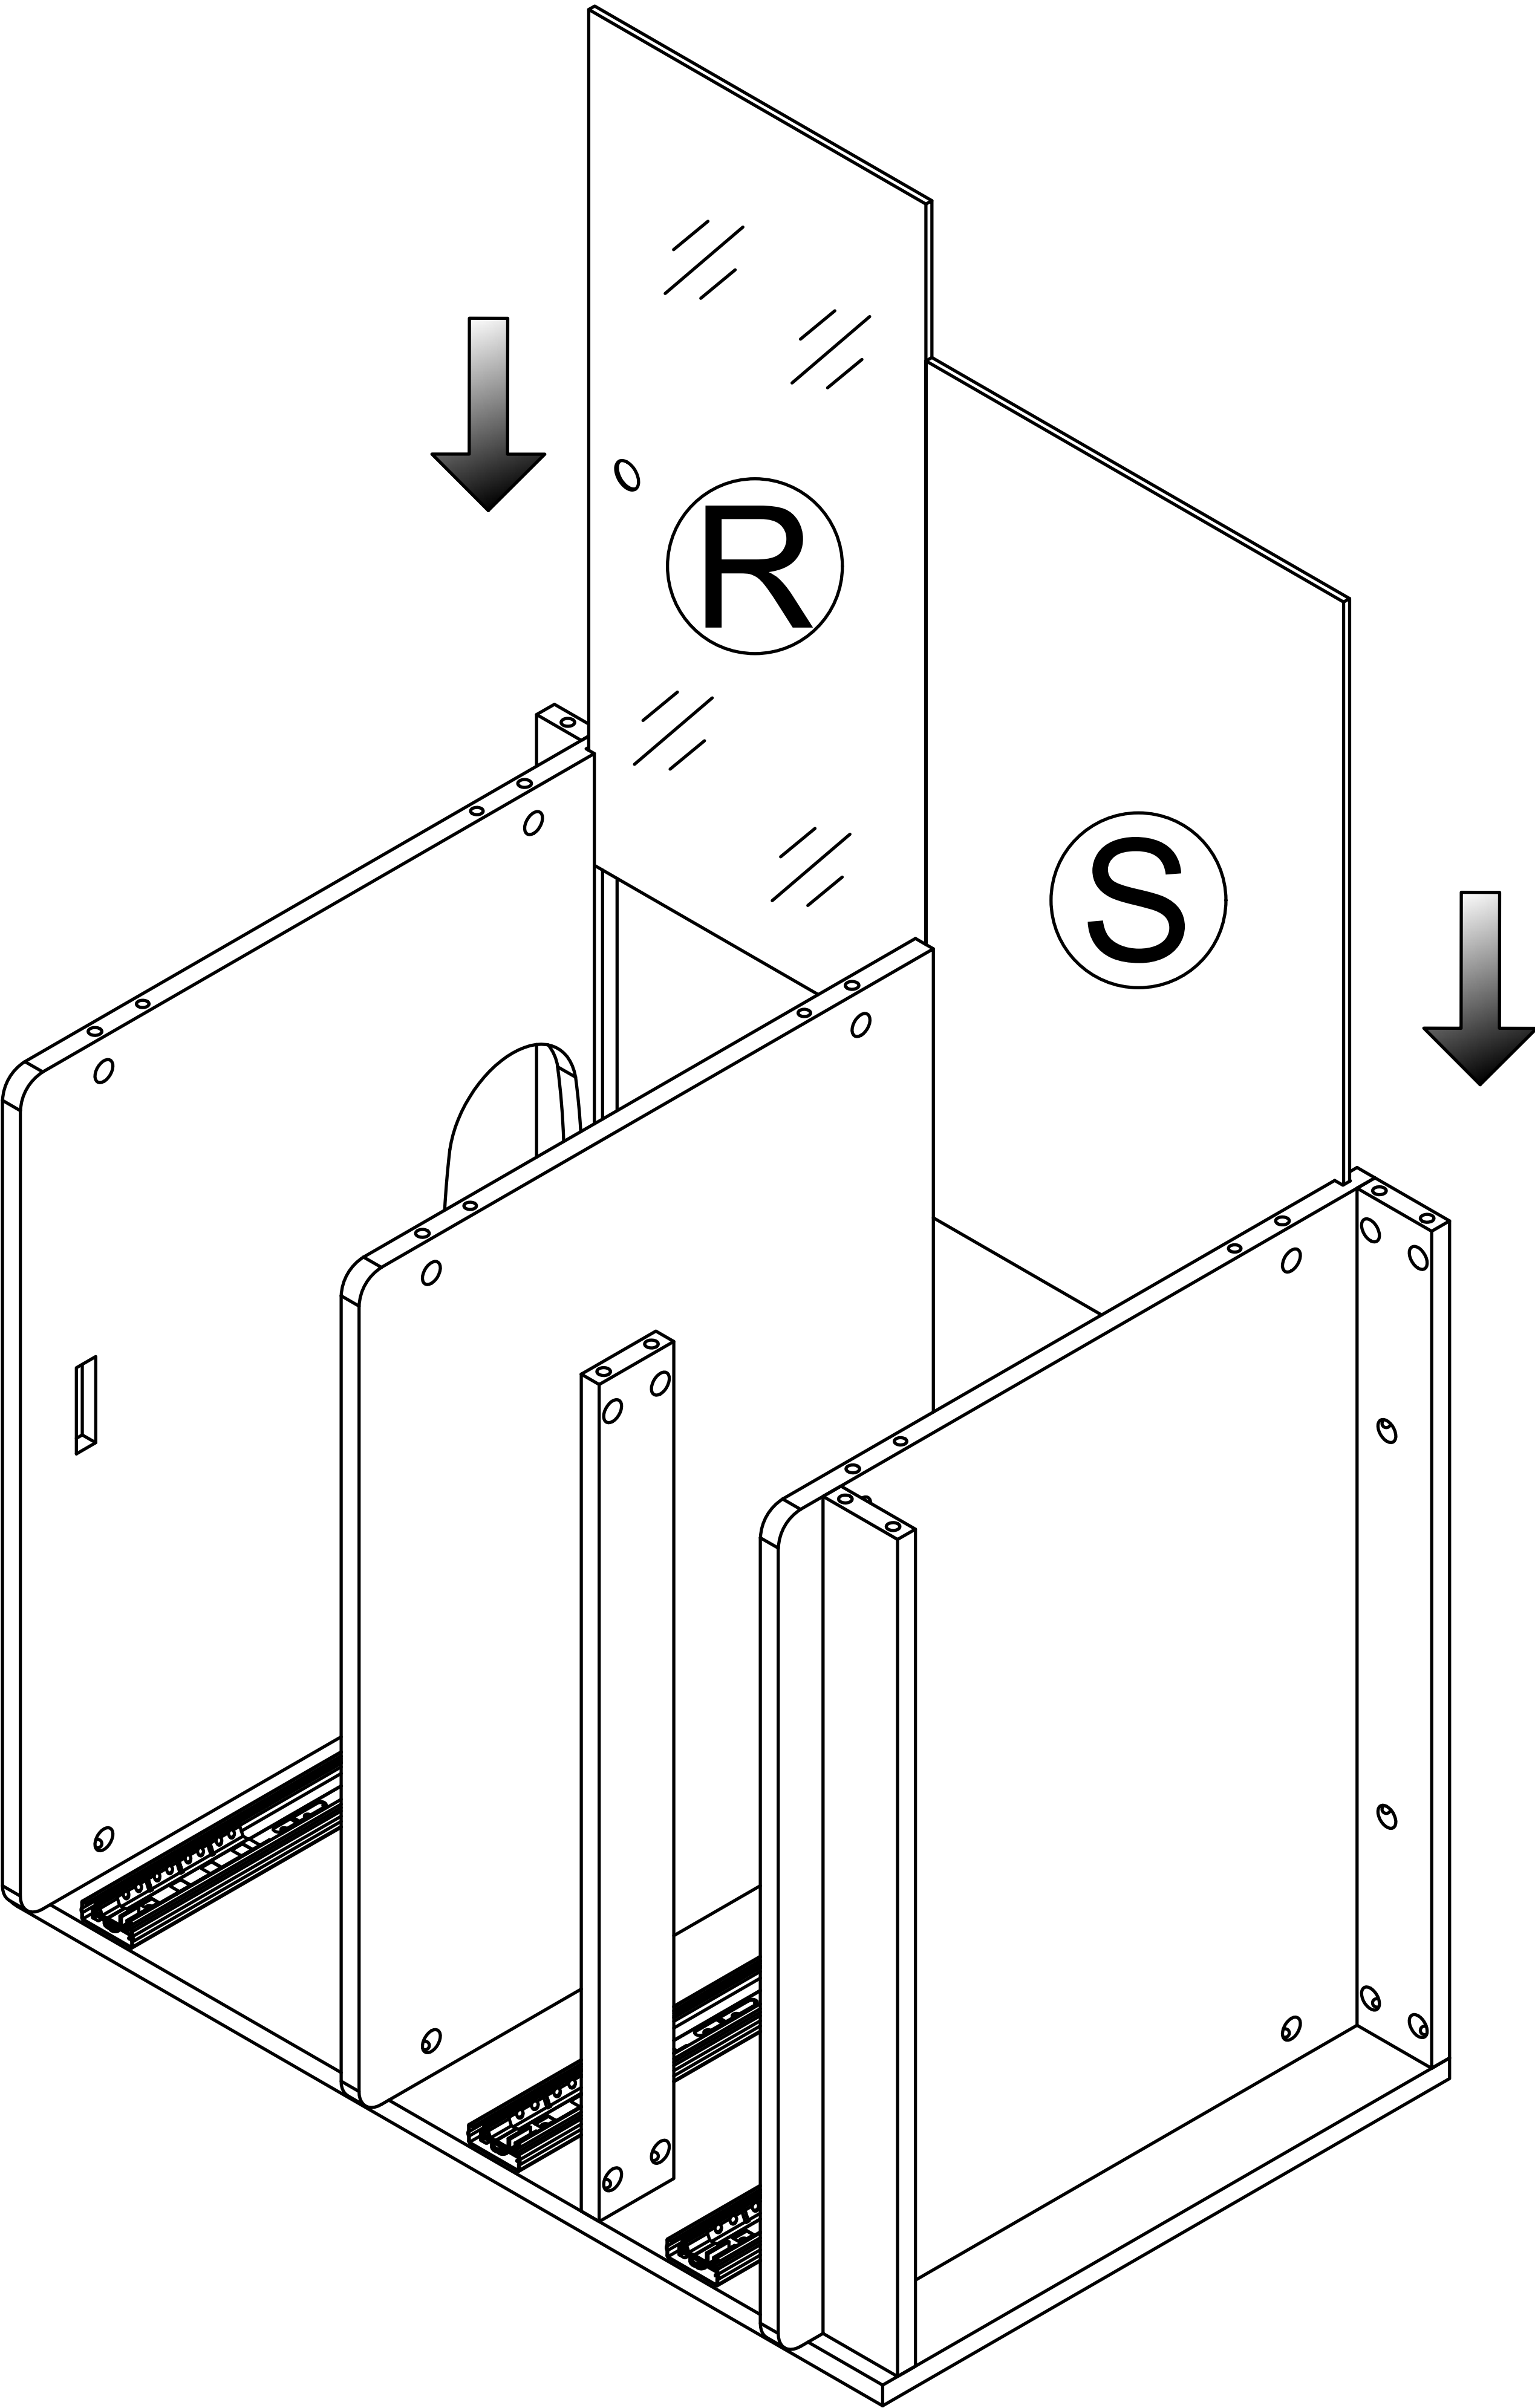

 Step 27

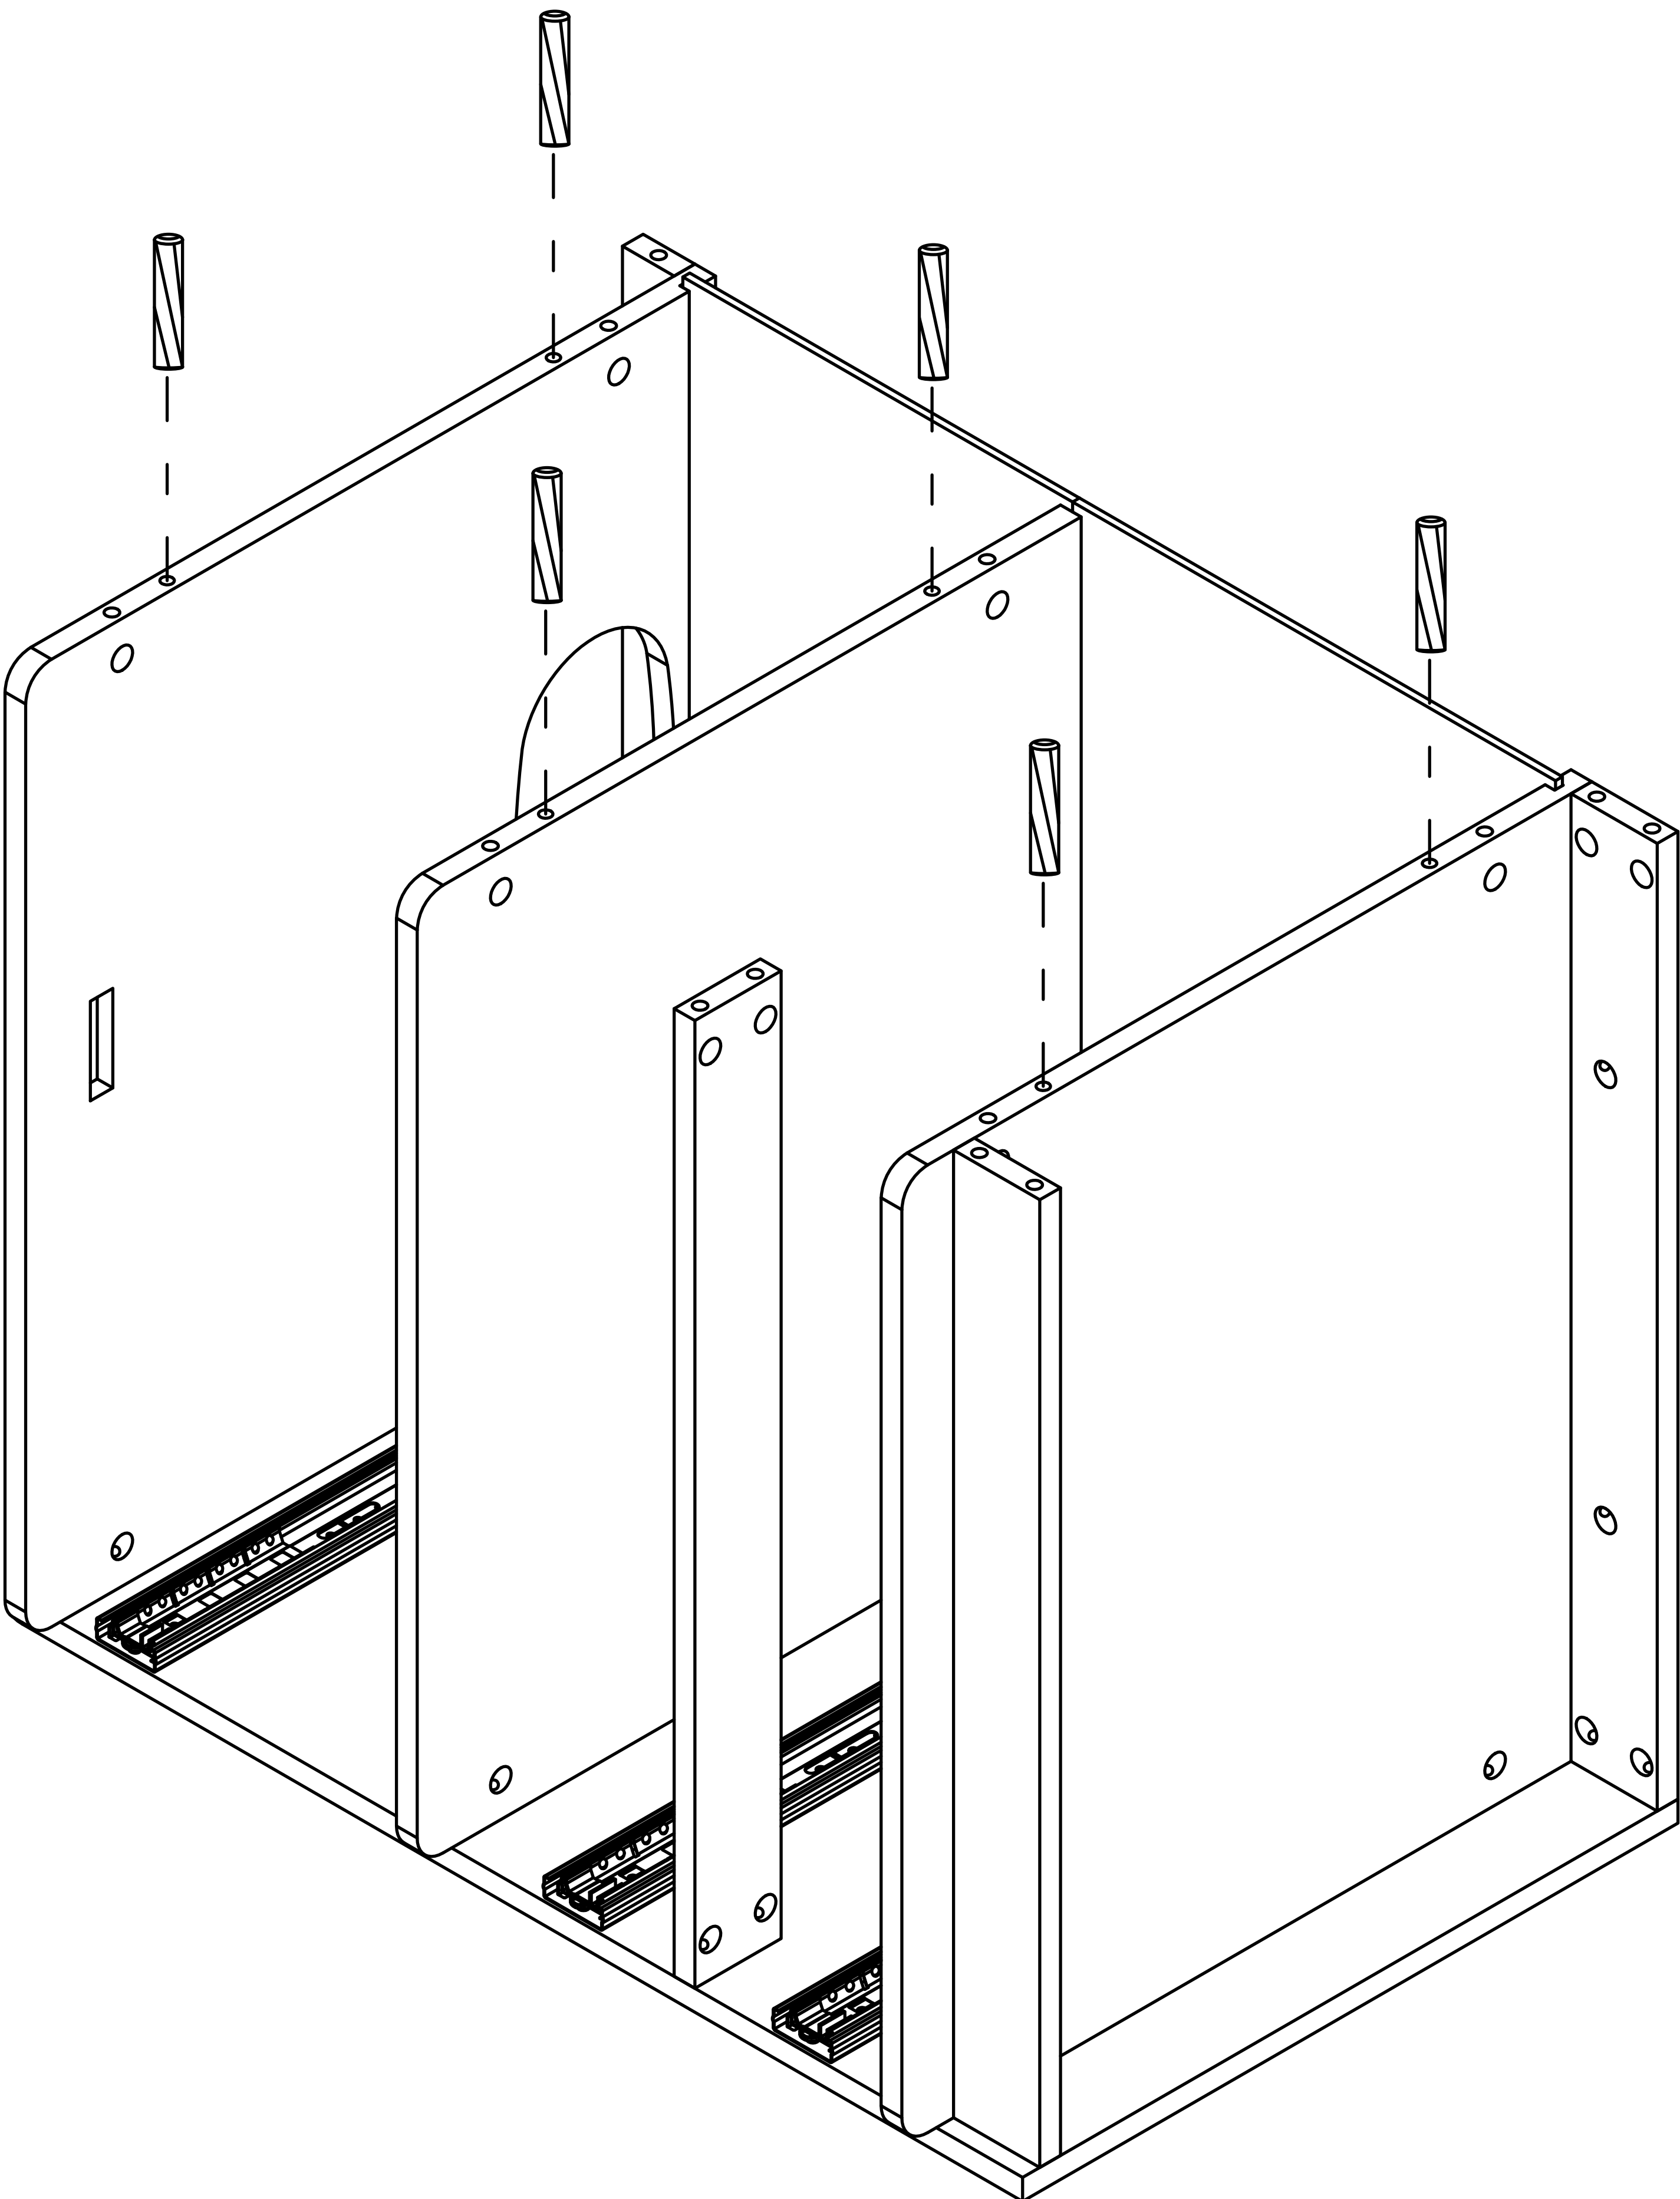


3

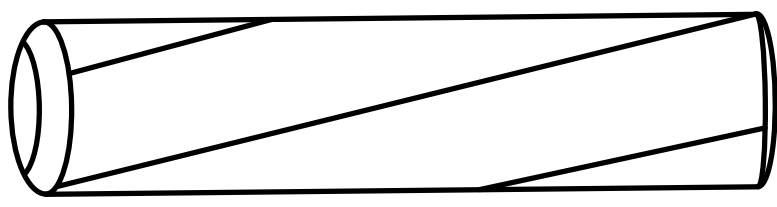 


x6

 Step 28

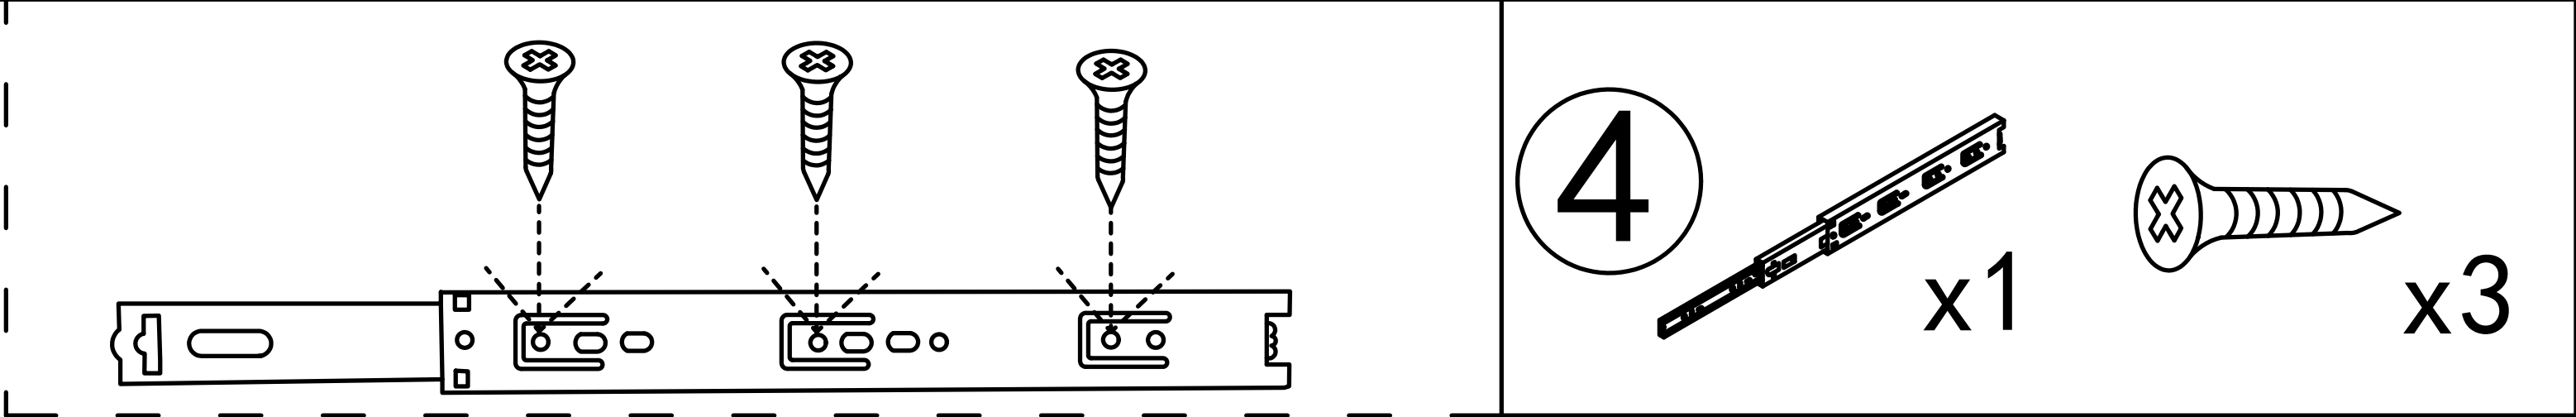


Install with Material No. ④ here.

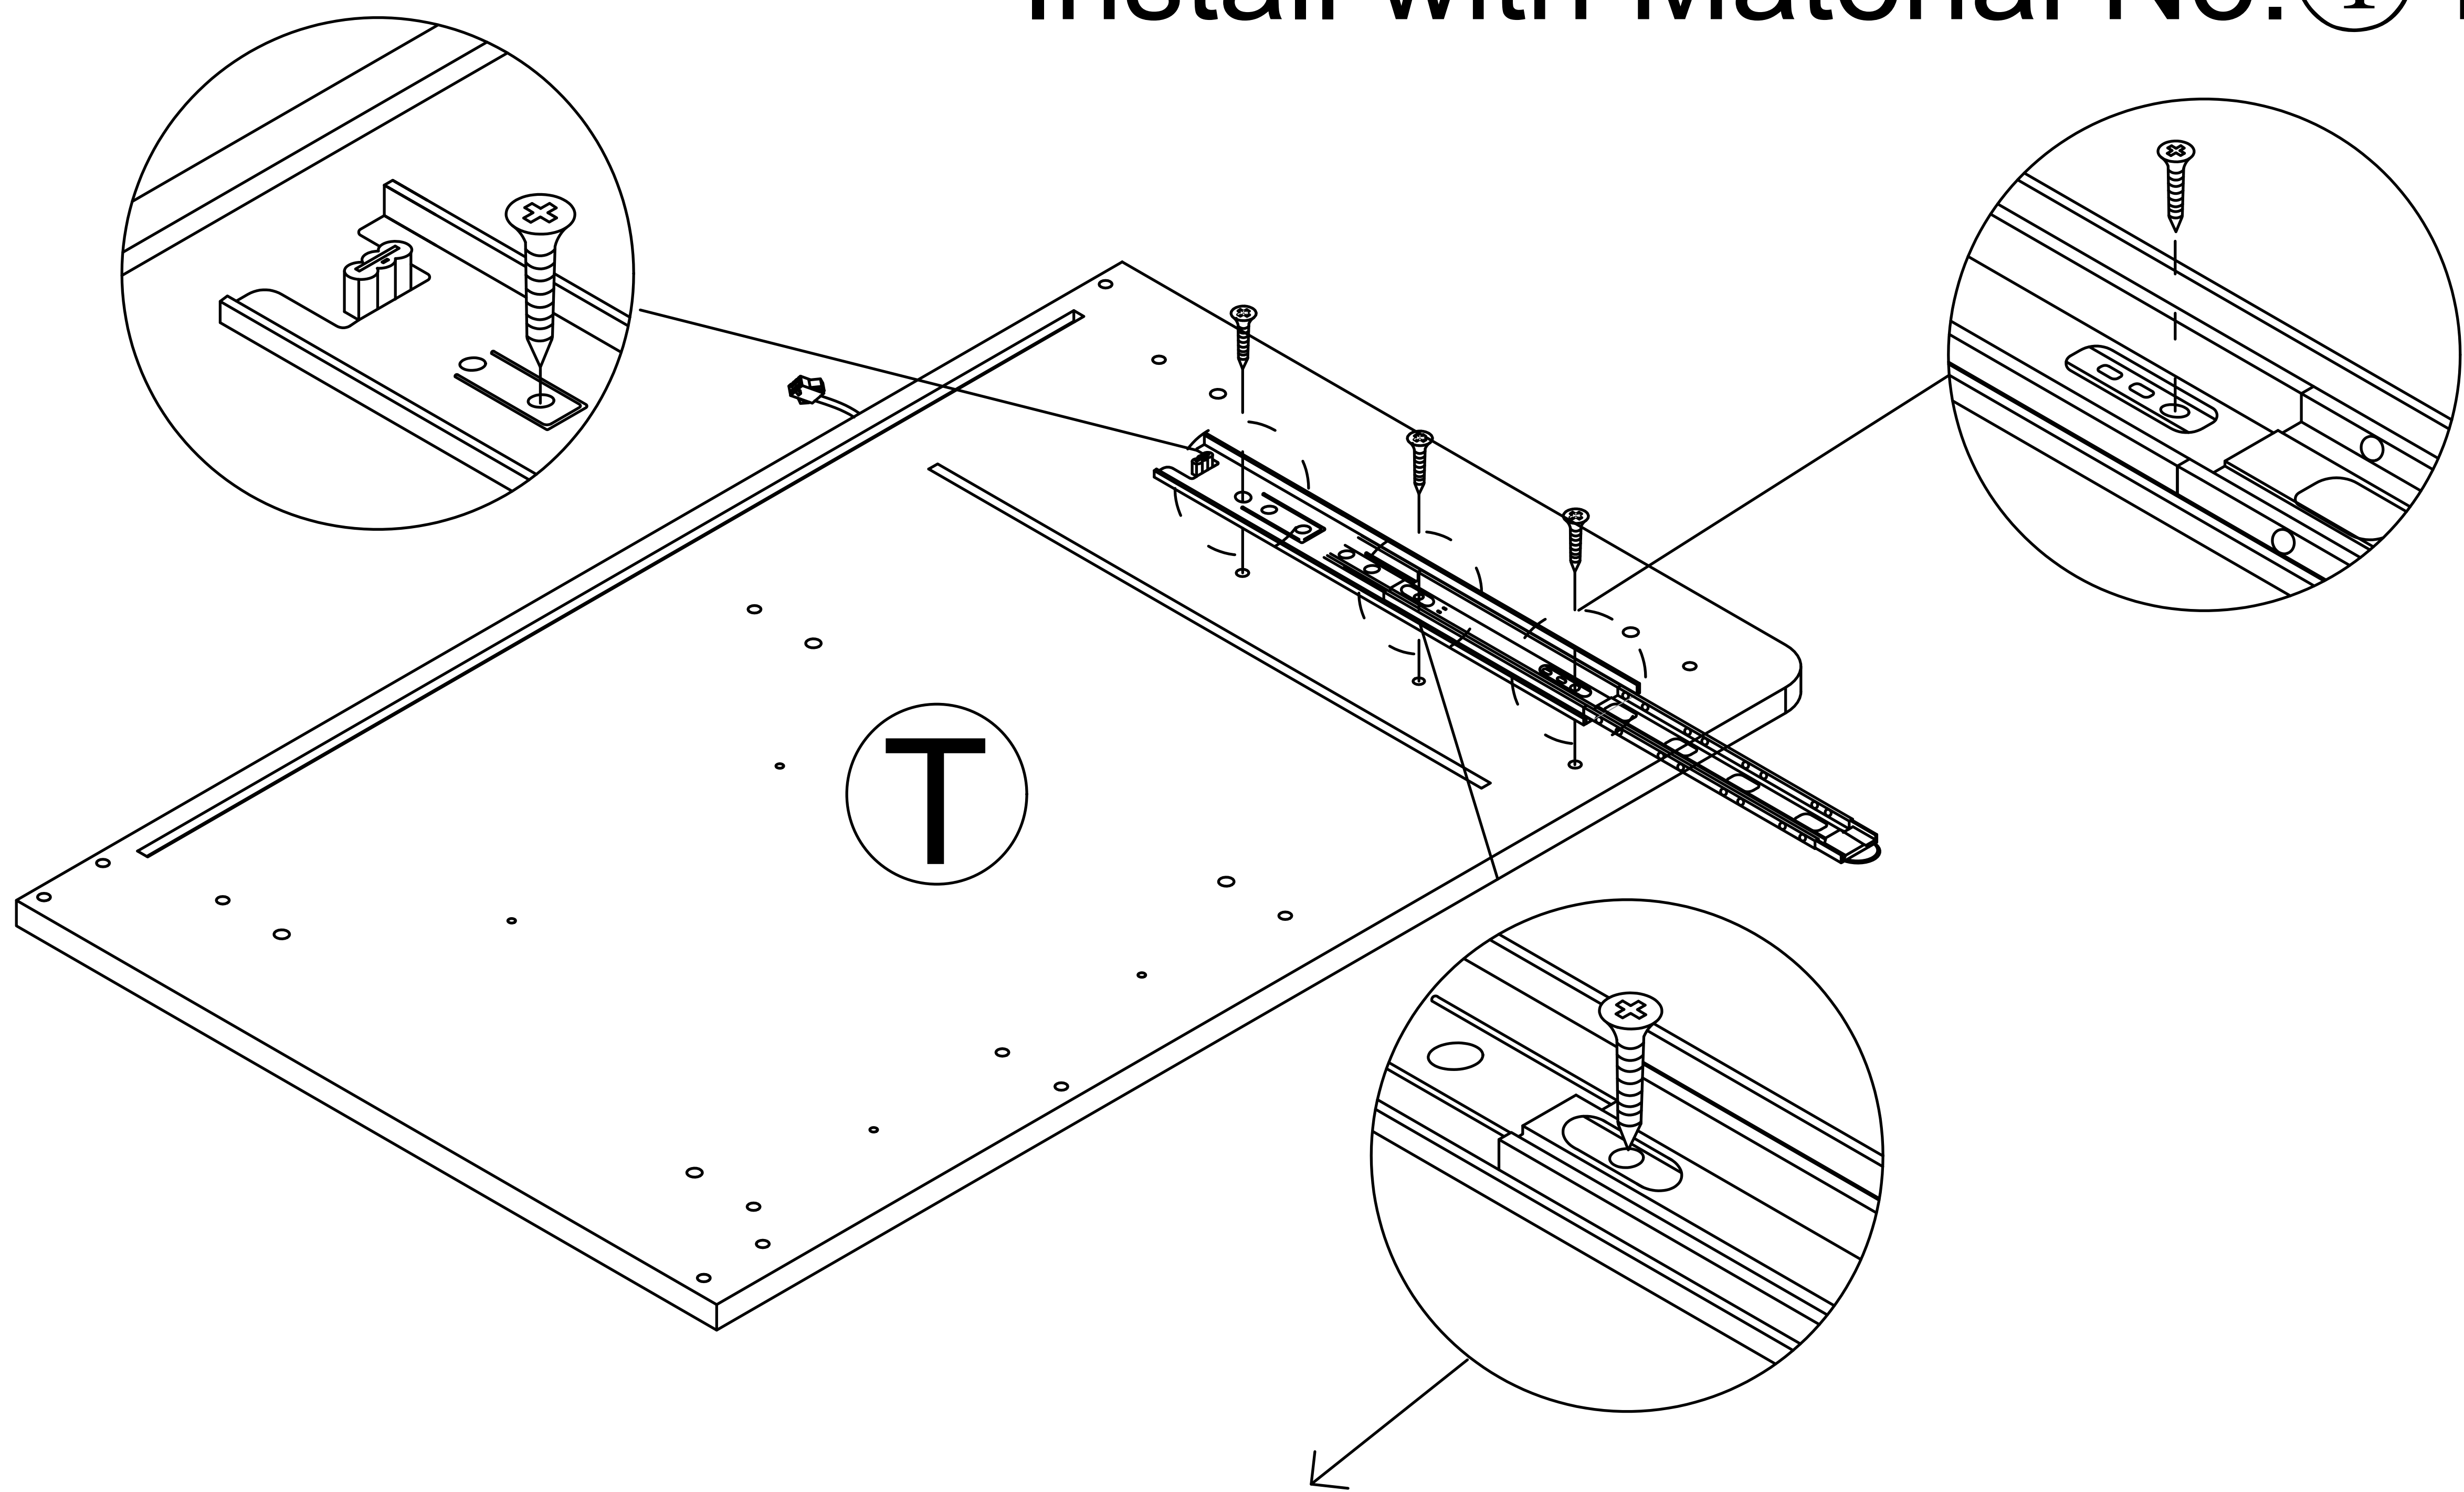 


This hole is for strengthening fixed hole customers can choose to install according to their needs.

 Step 29

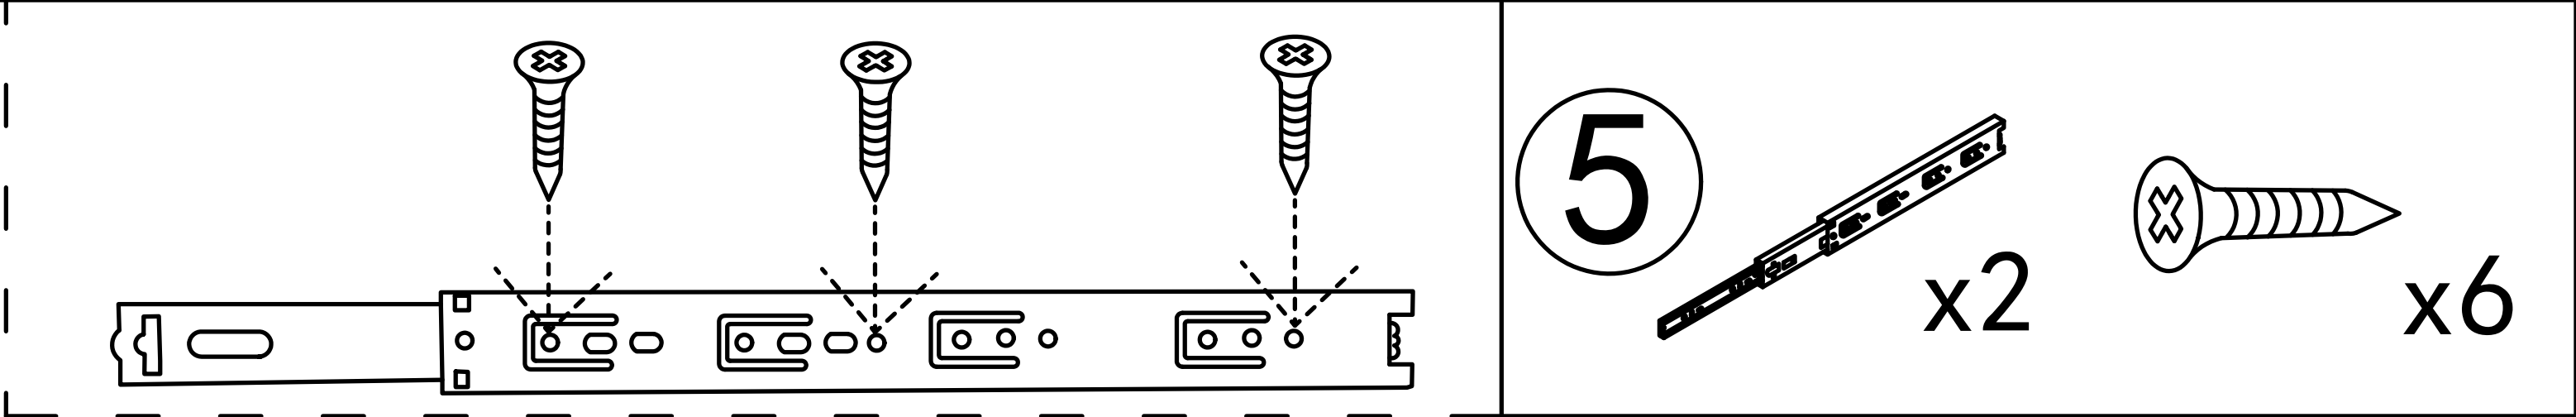



Install with Material No. ⑤ here.

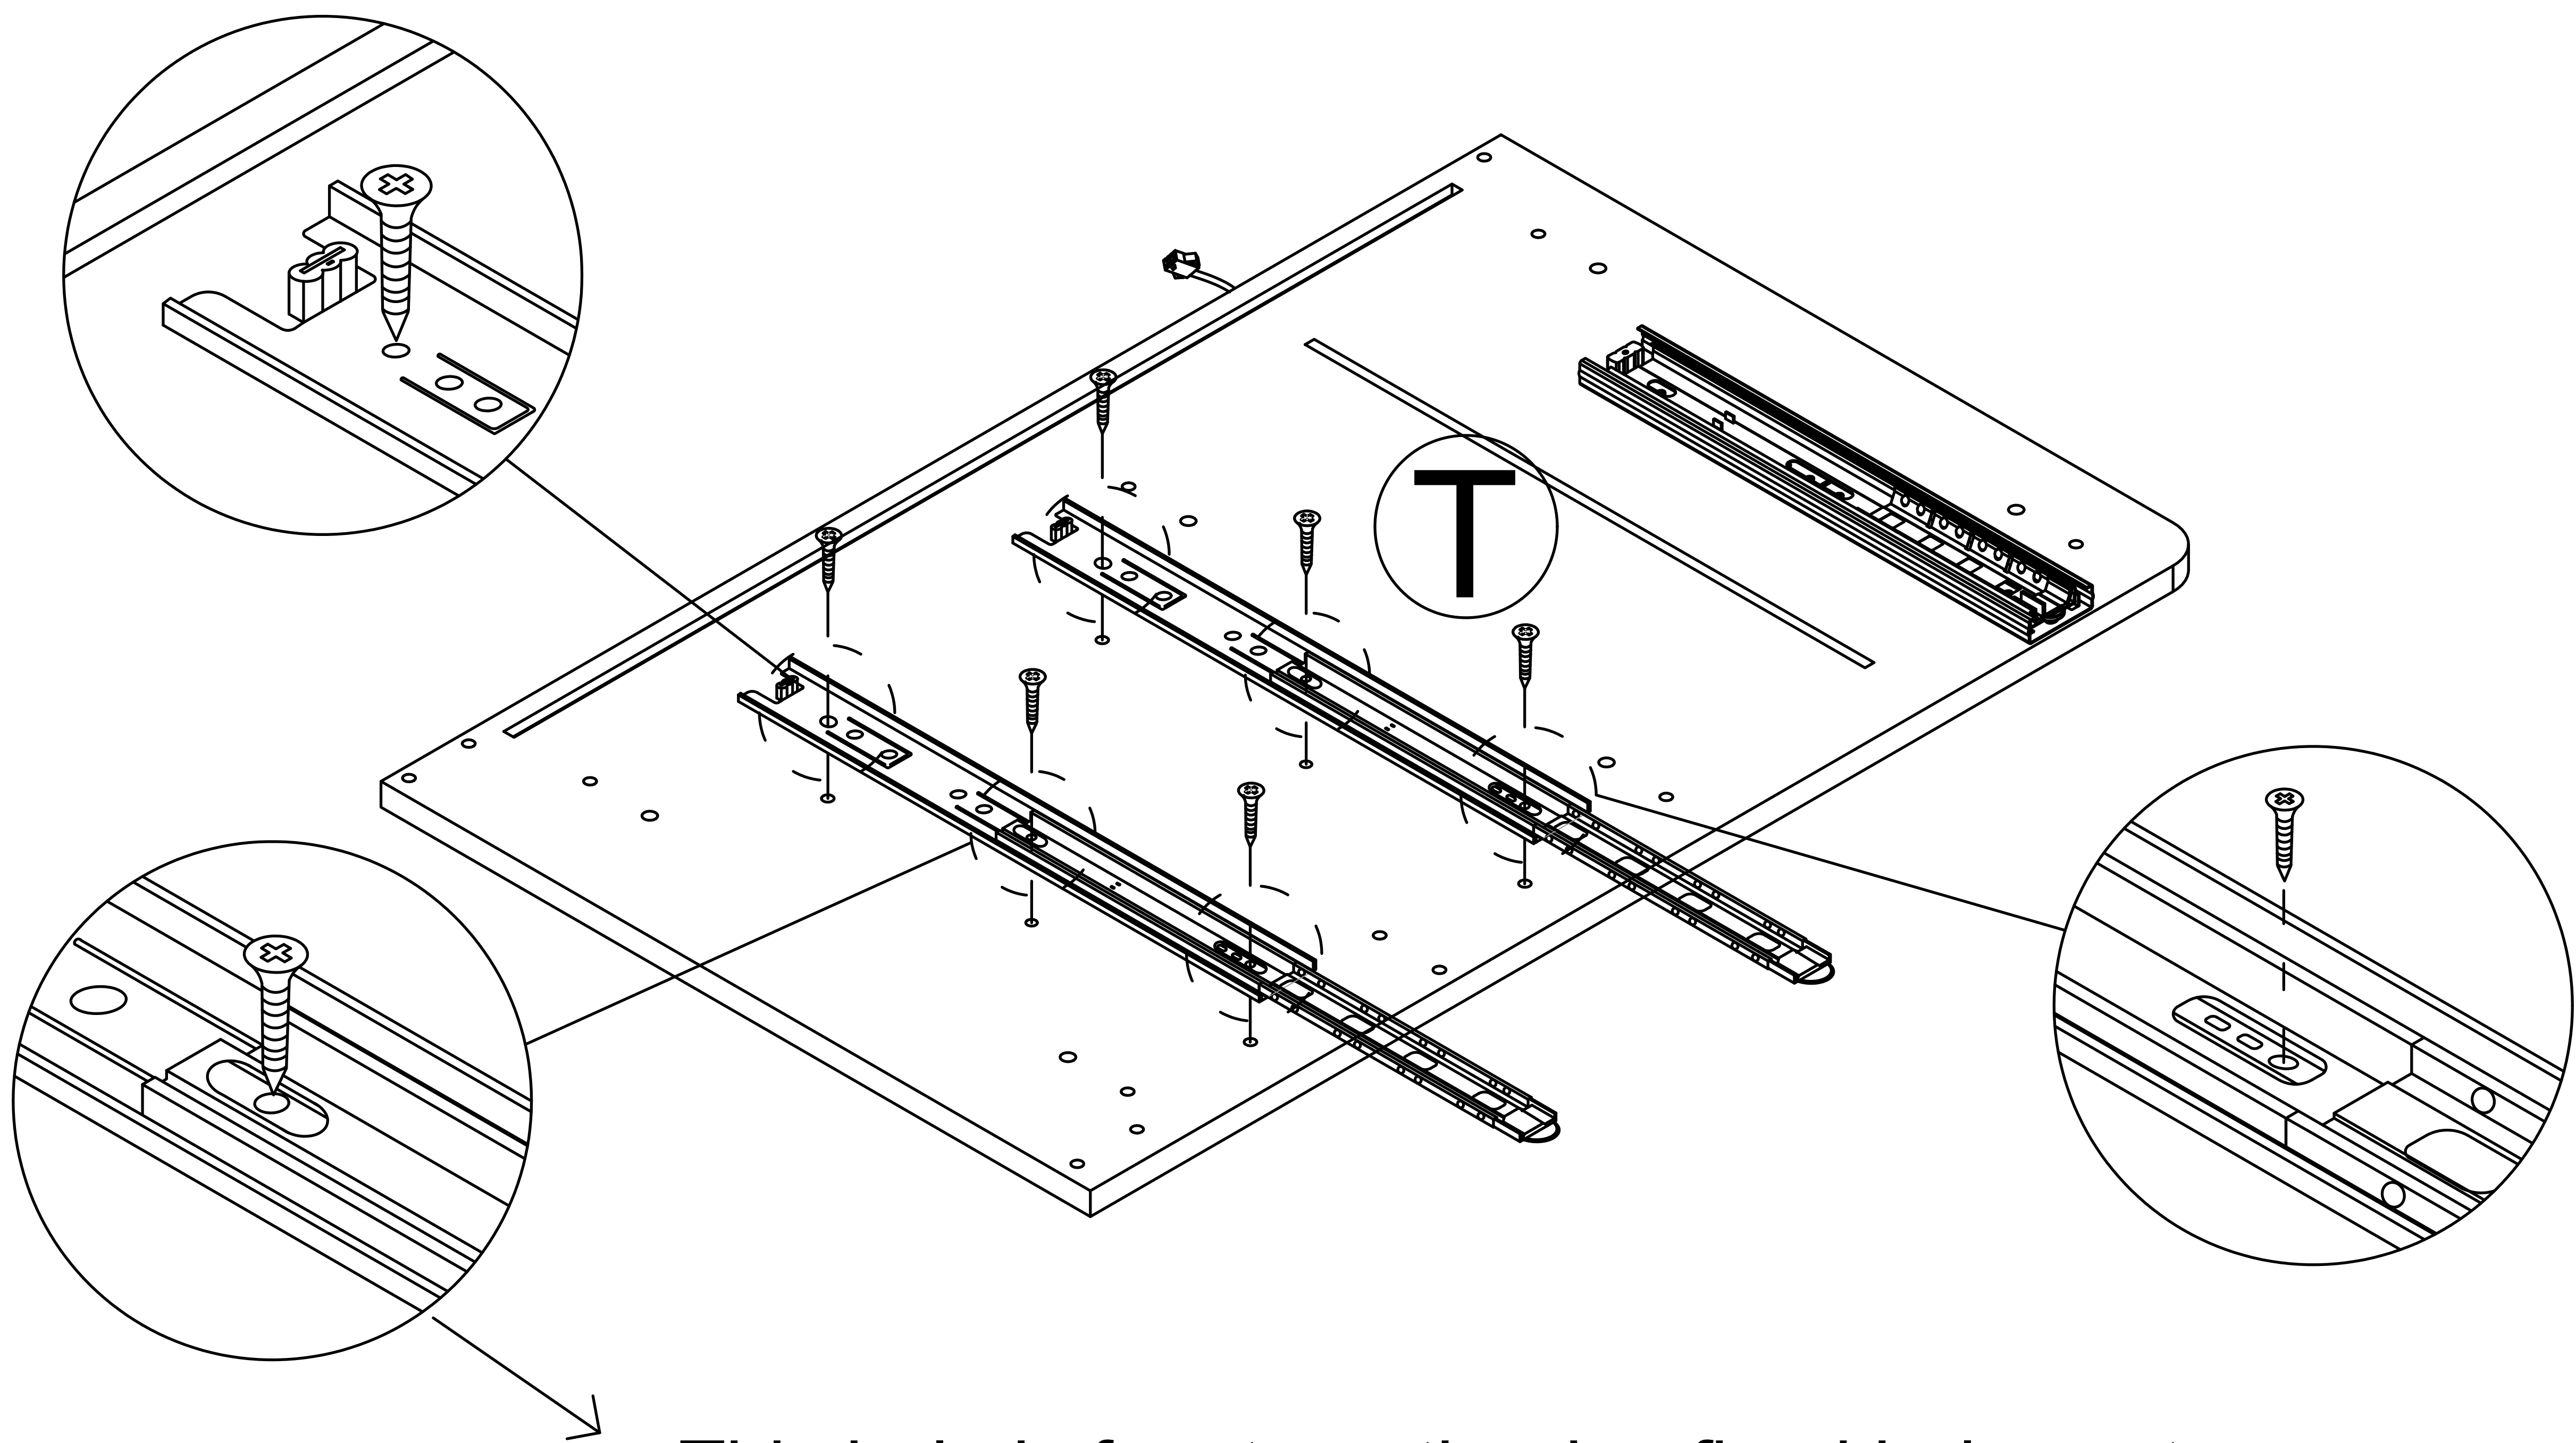 


This hole is for strengthening fixed hole customers can choose to install according to their needs.

 
Step 30

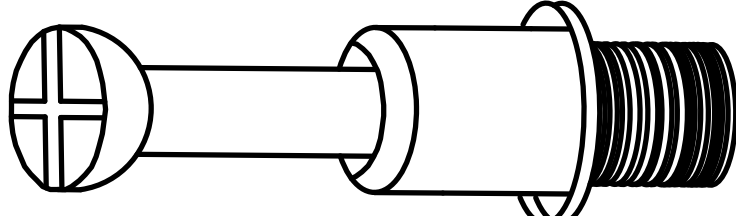1  x13

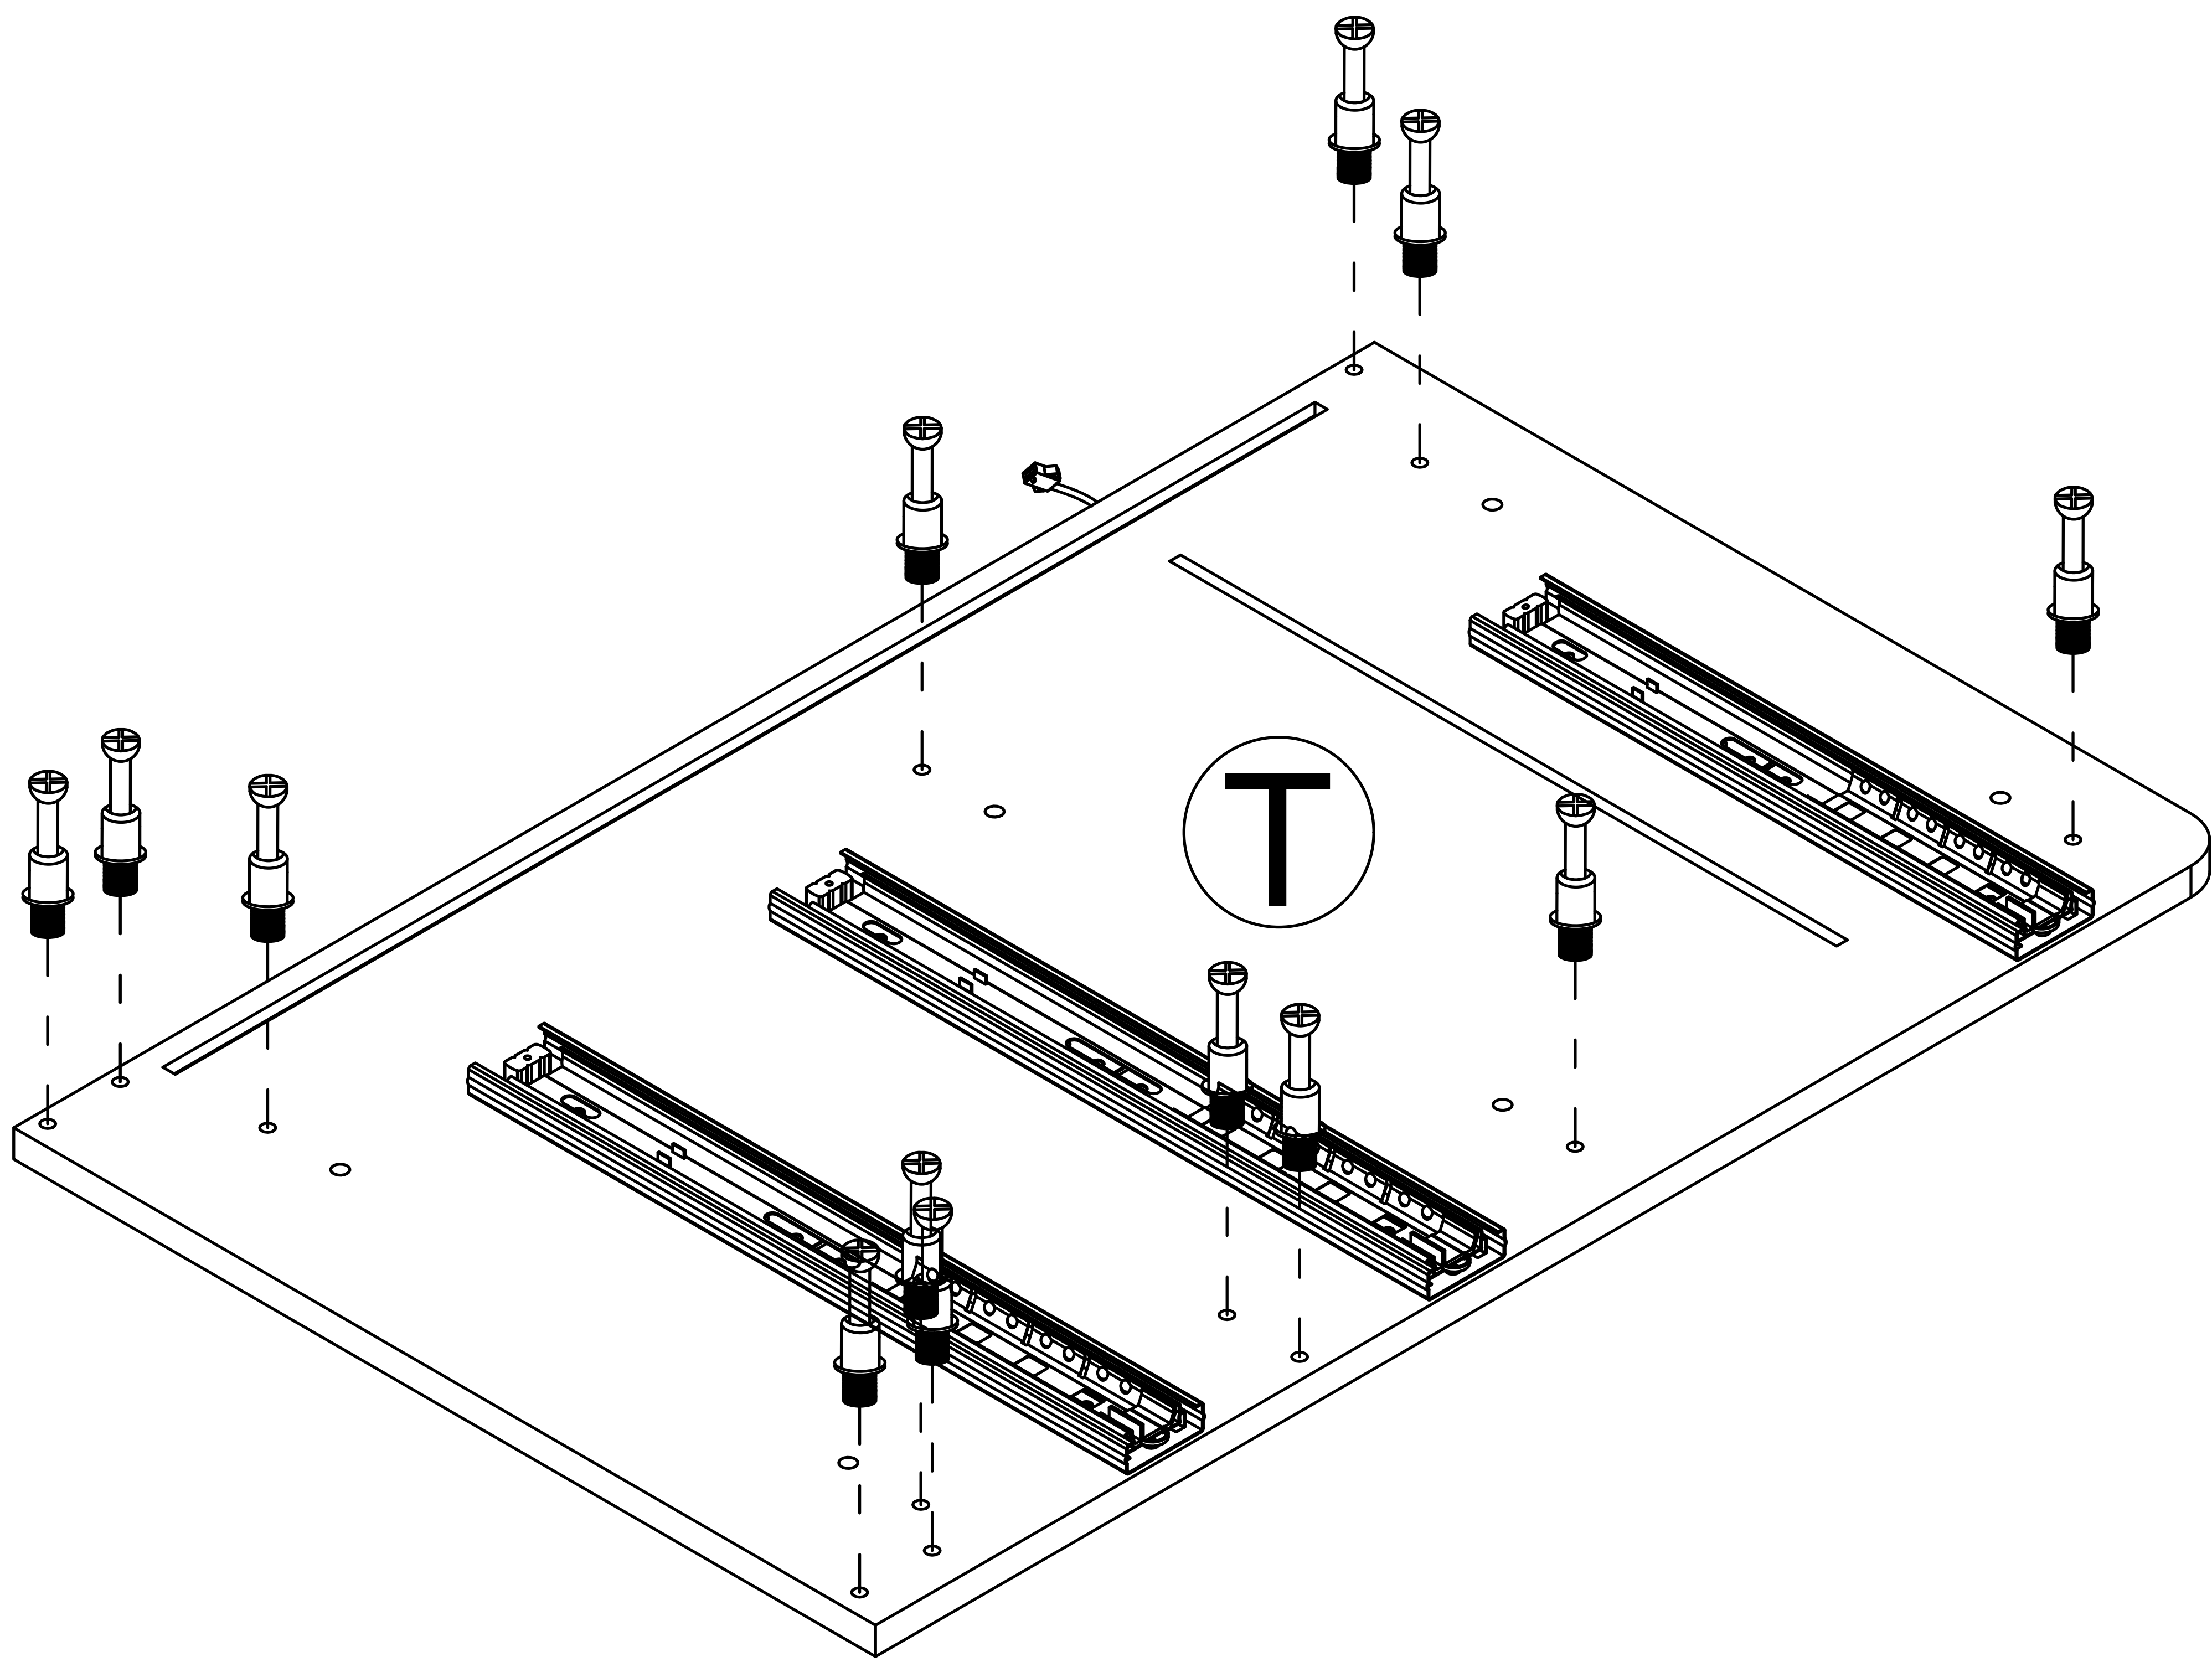 

 Step 31

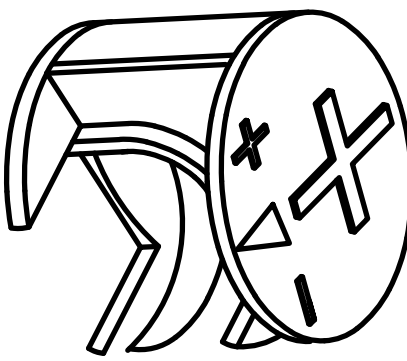
2  x13

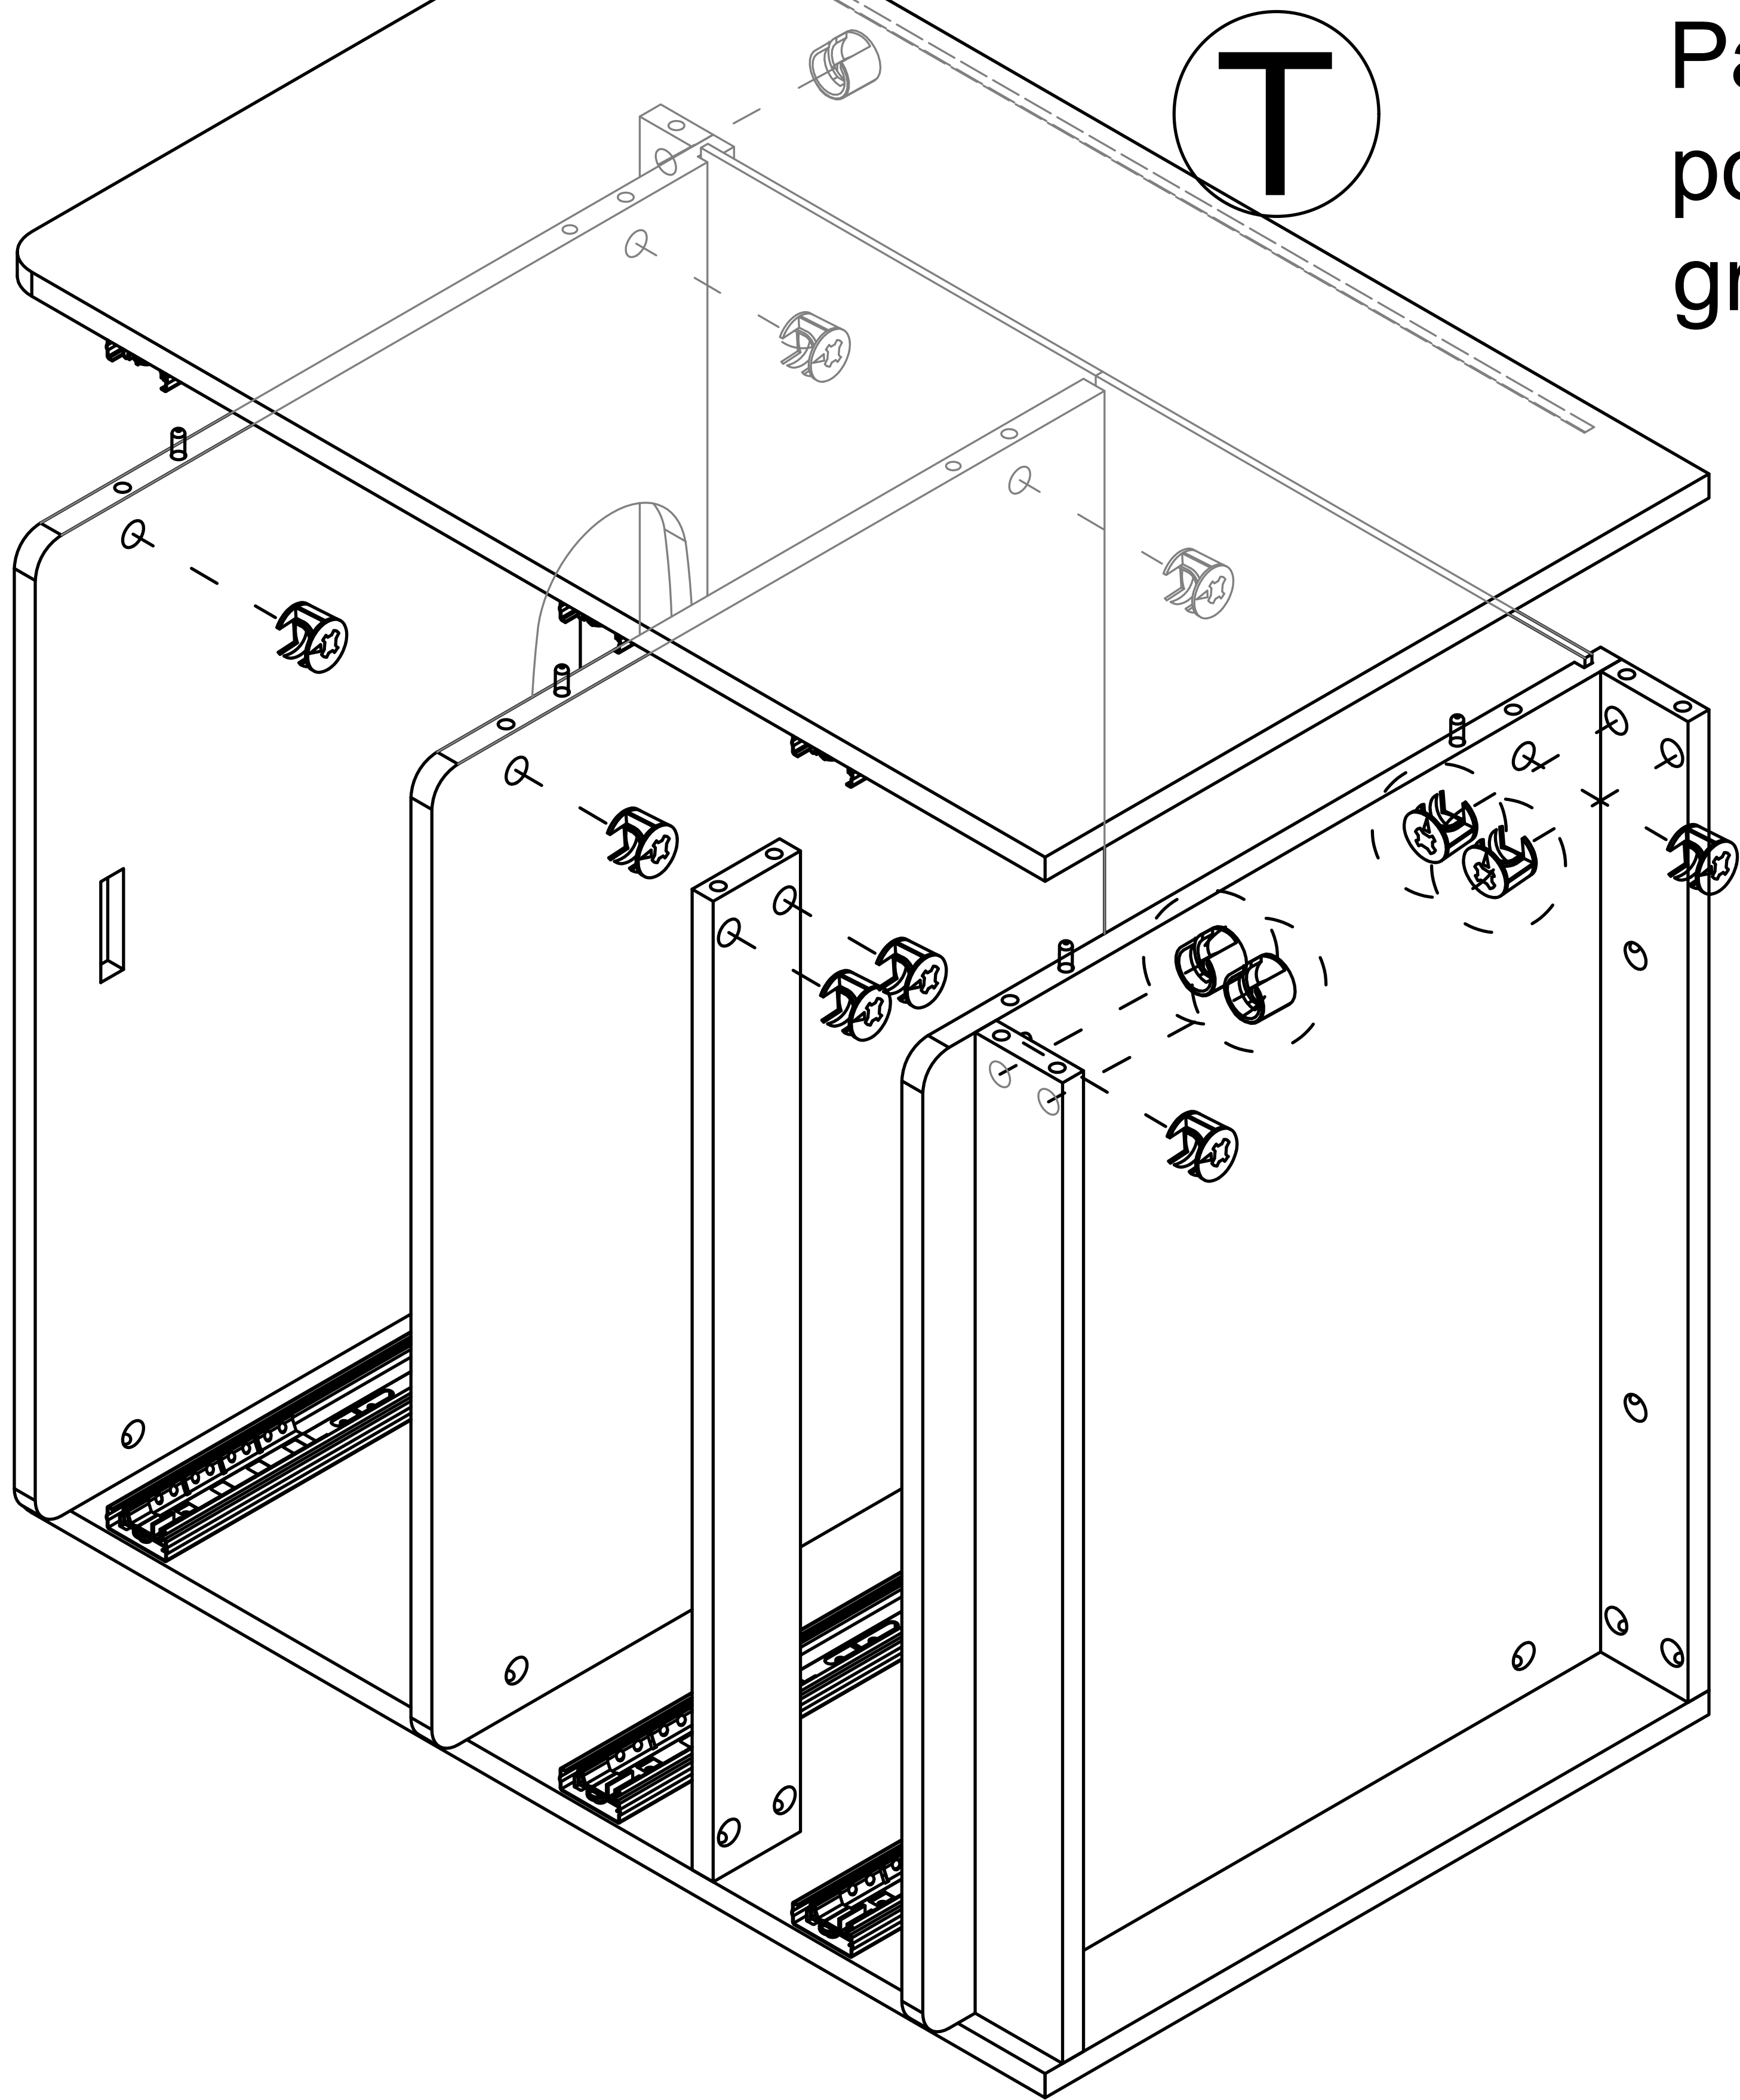 


Pay attention to the position of the plate groove.

Step 32

 6





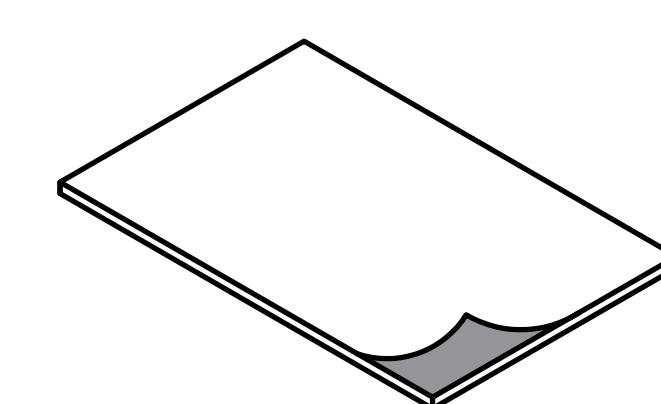


x4

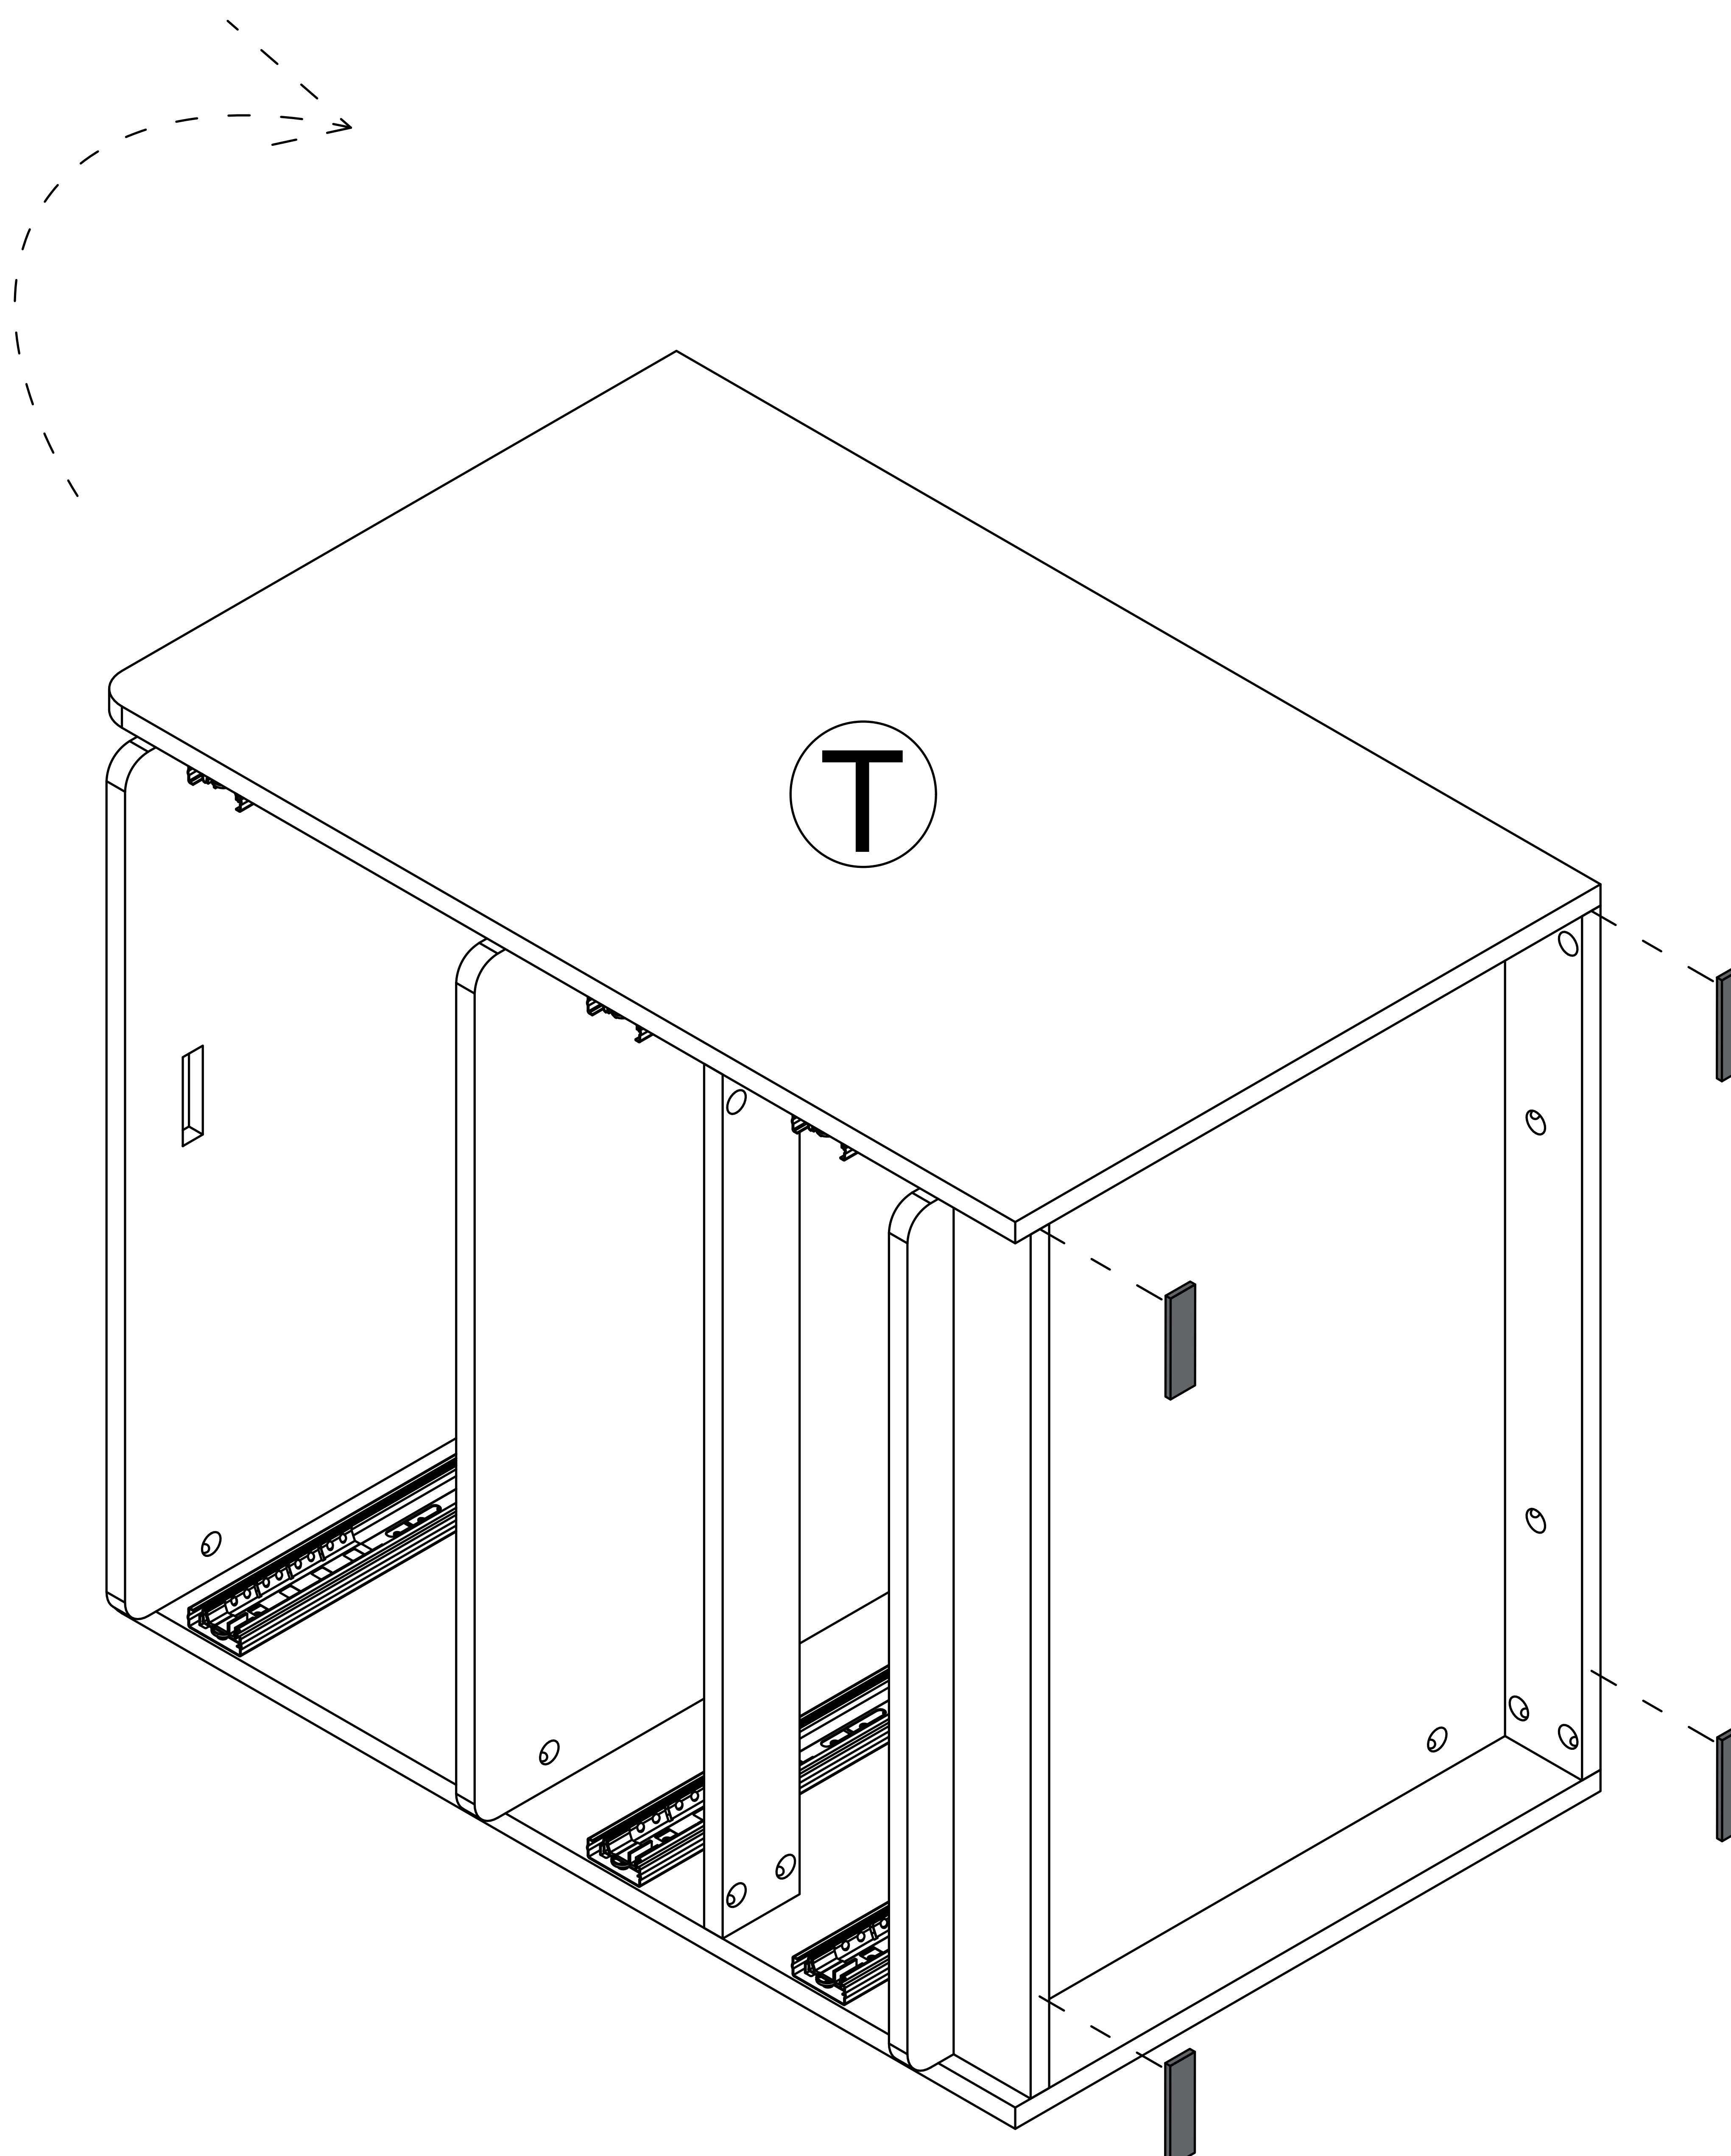 


Tear off release paper and stick the black foot pad on the board

     Step 33

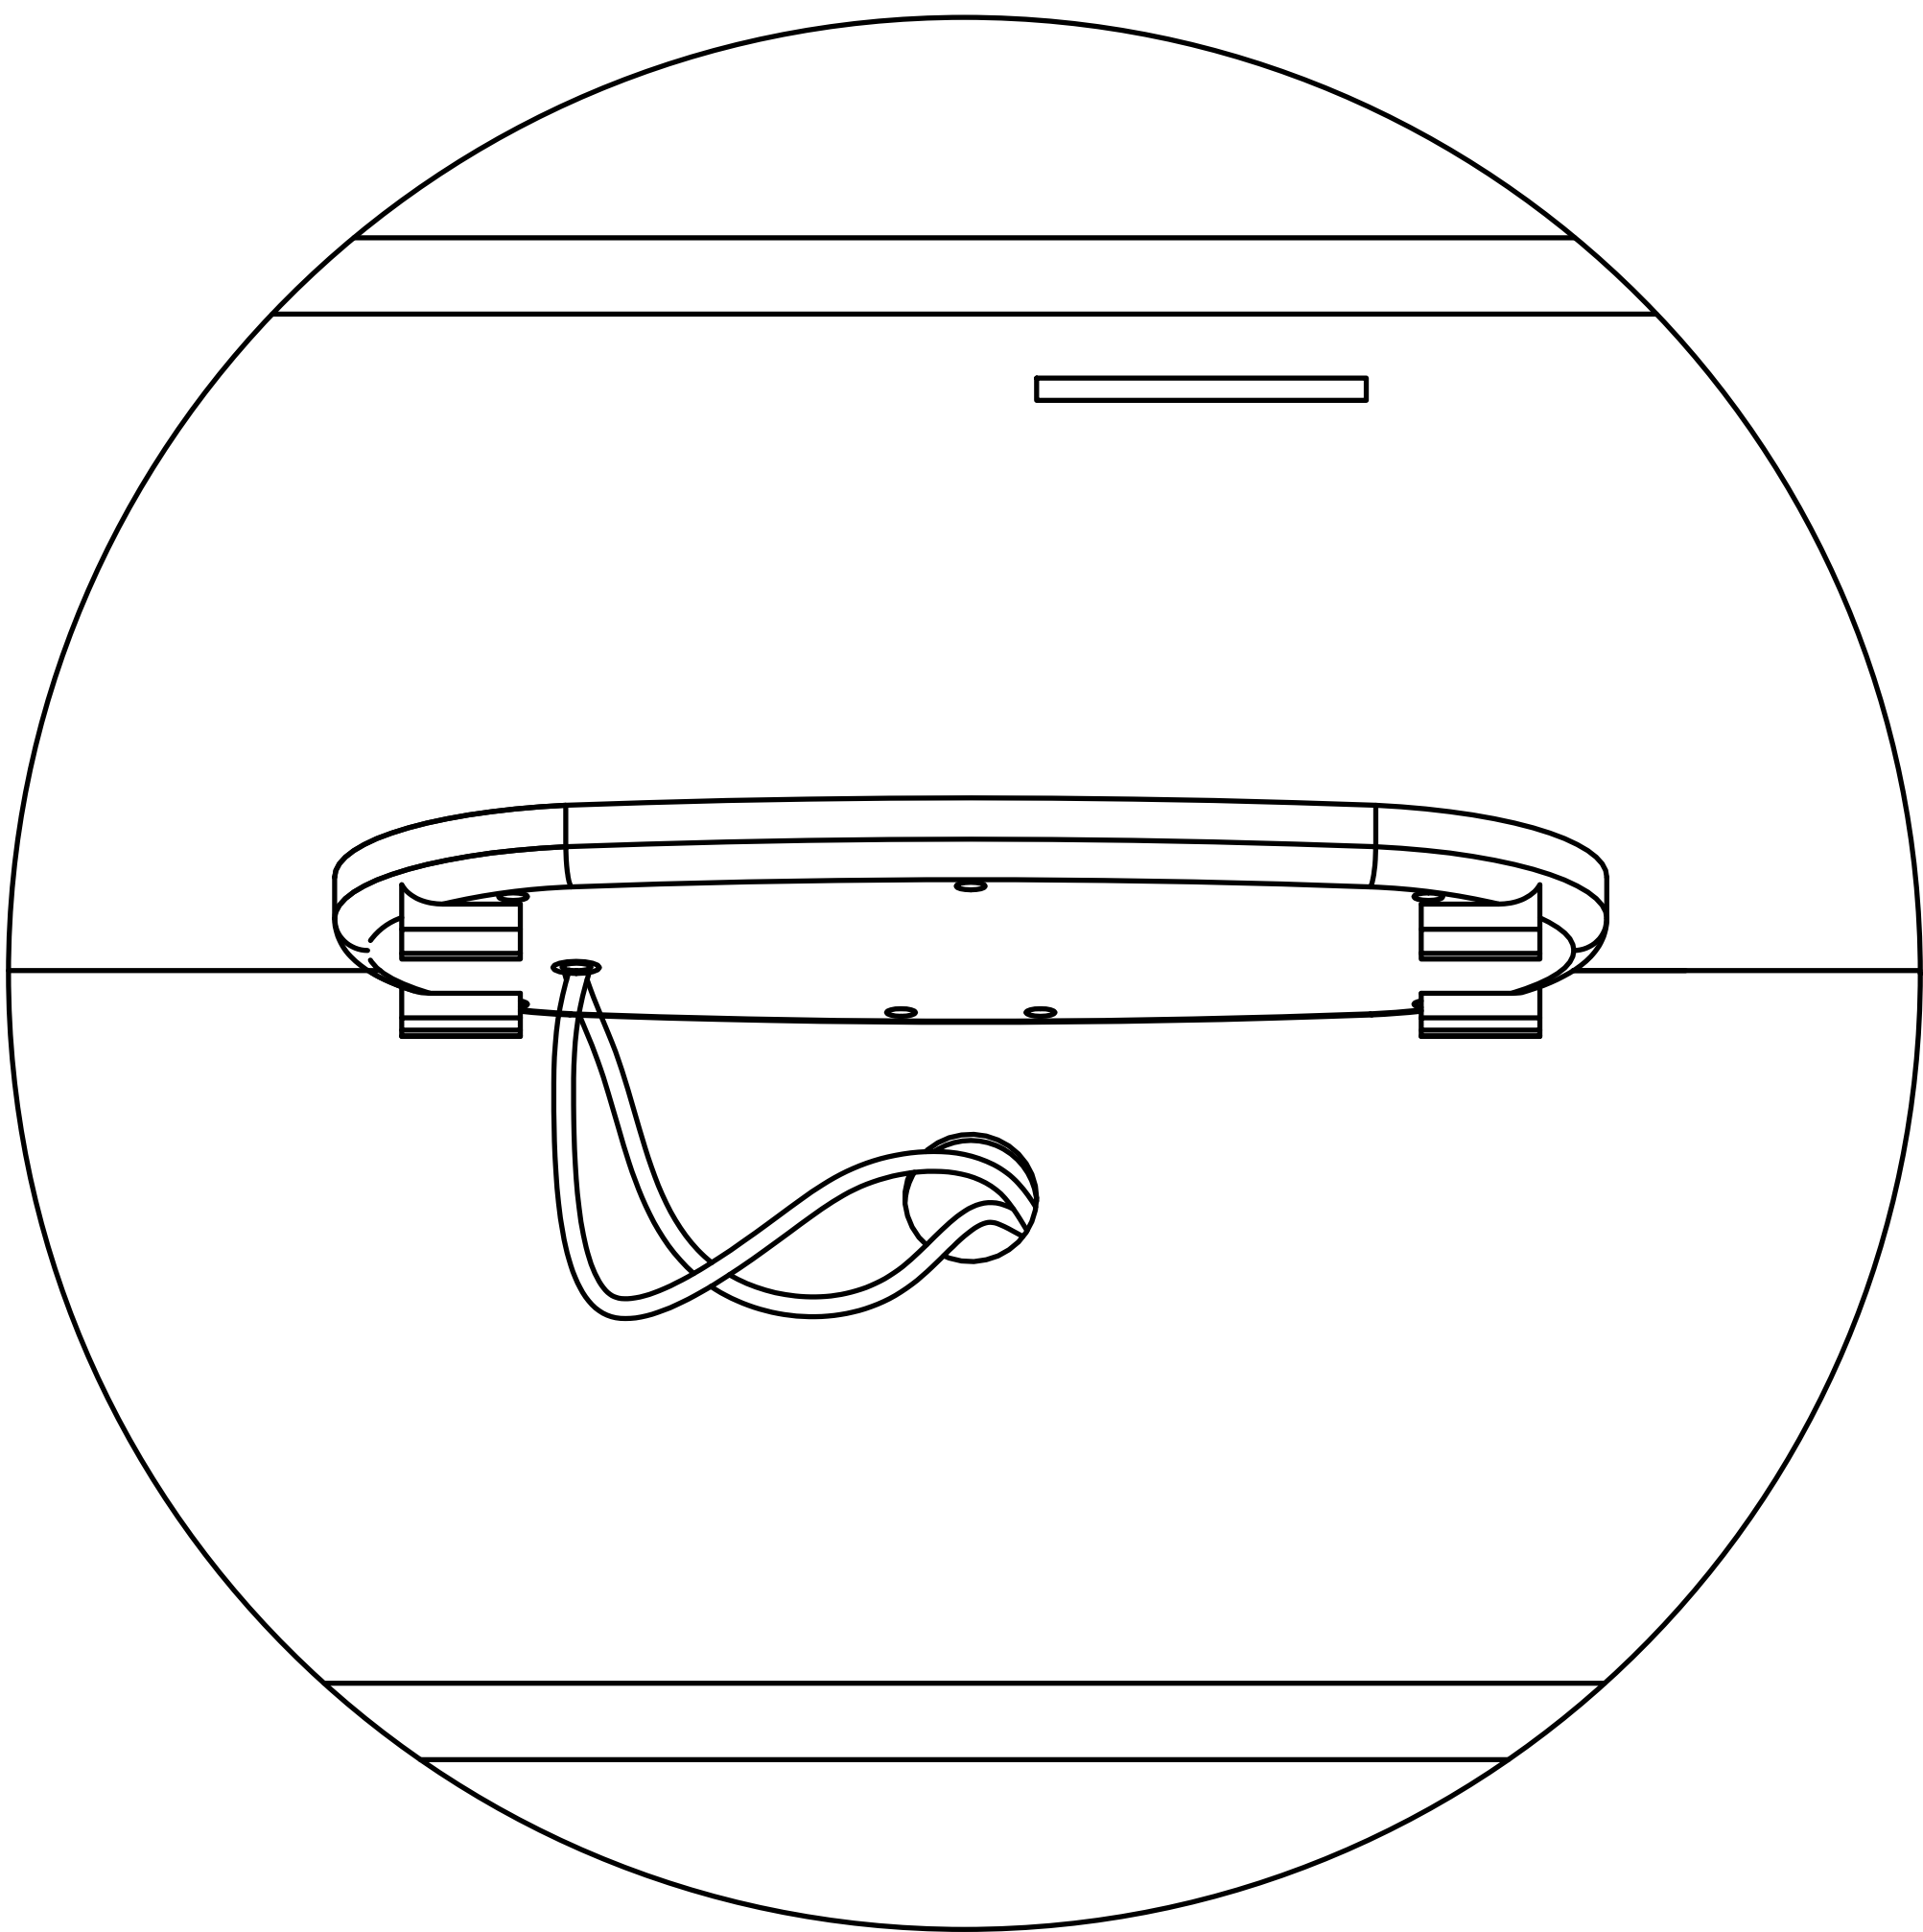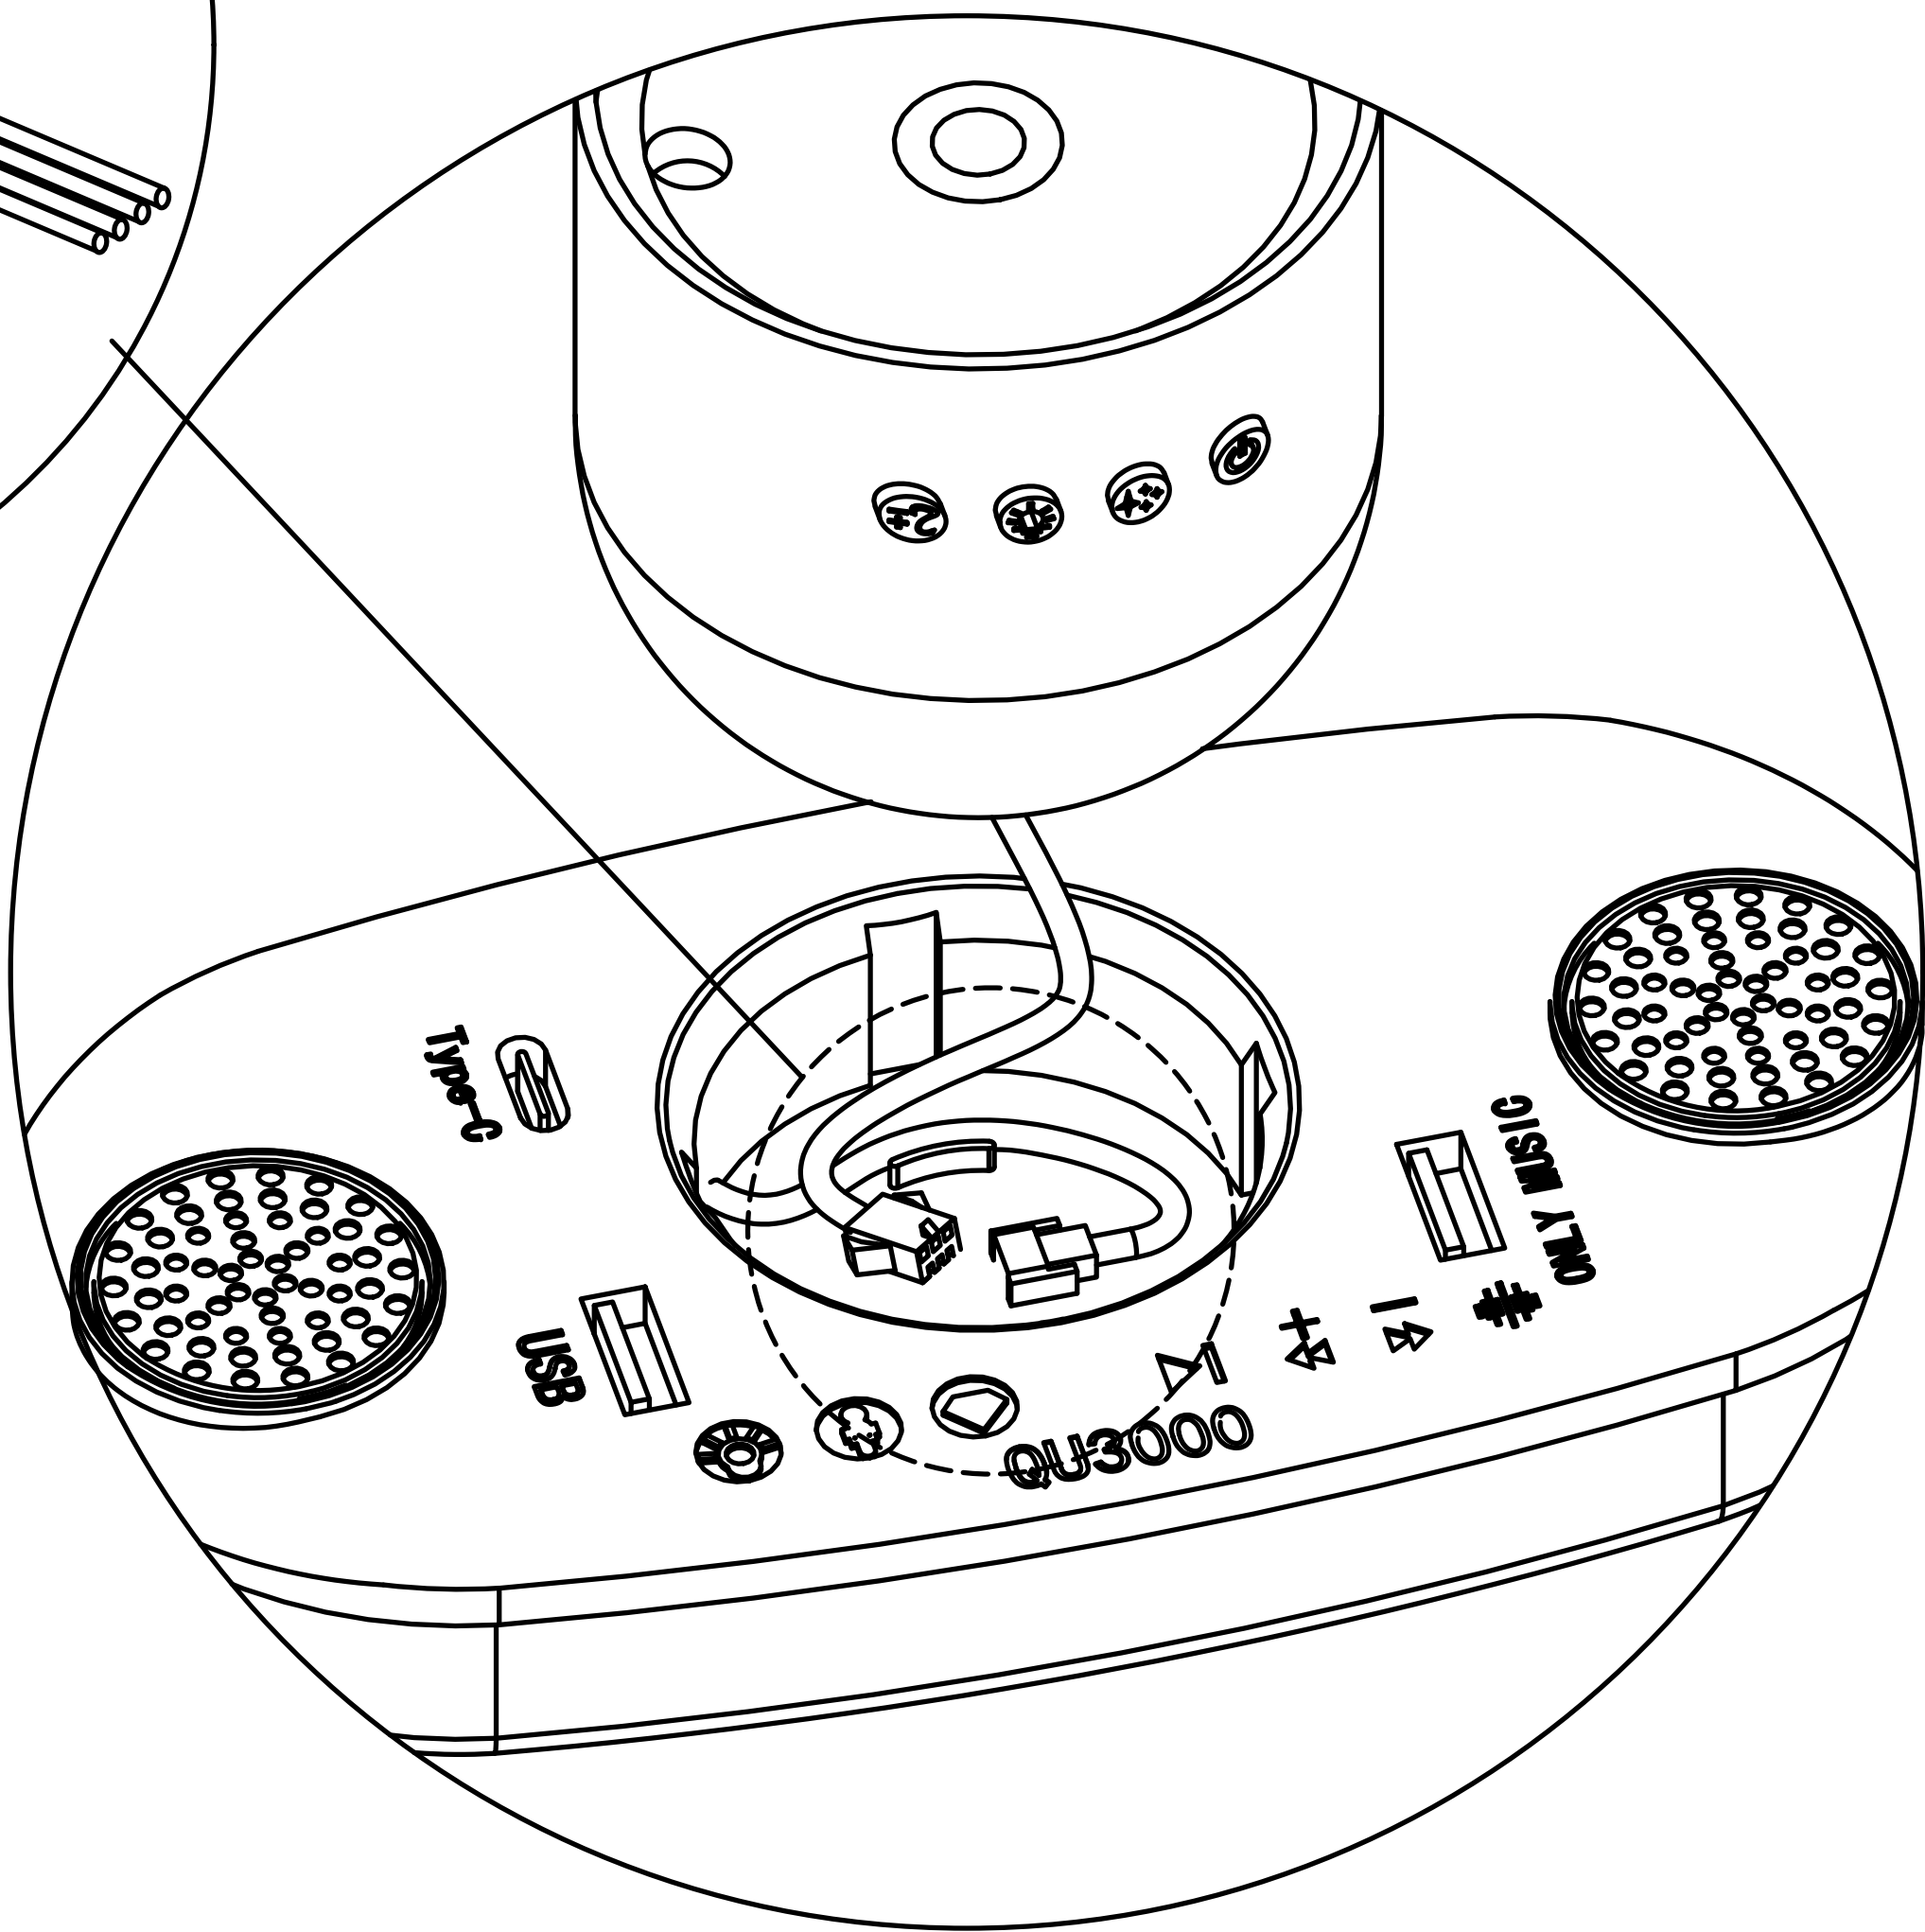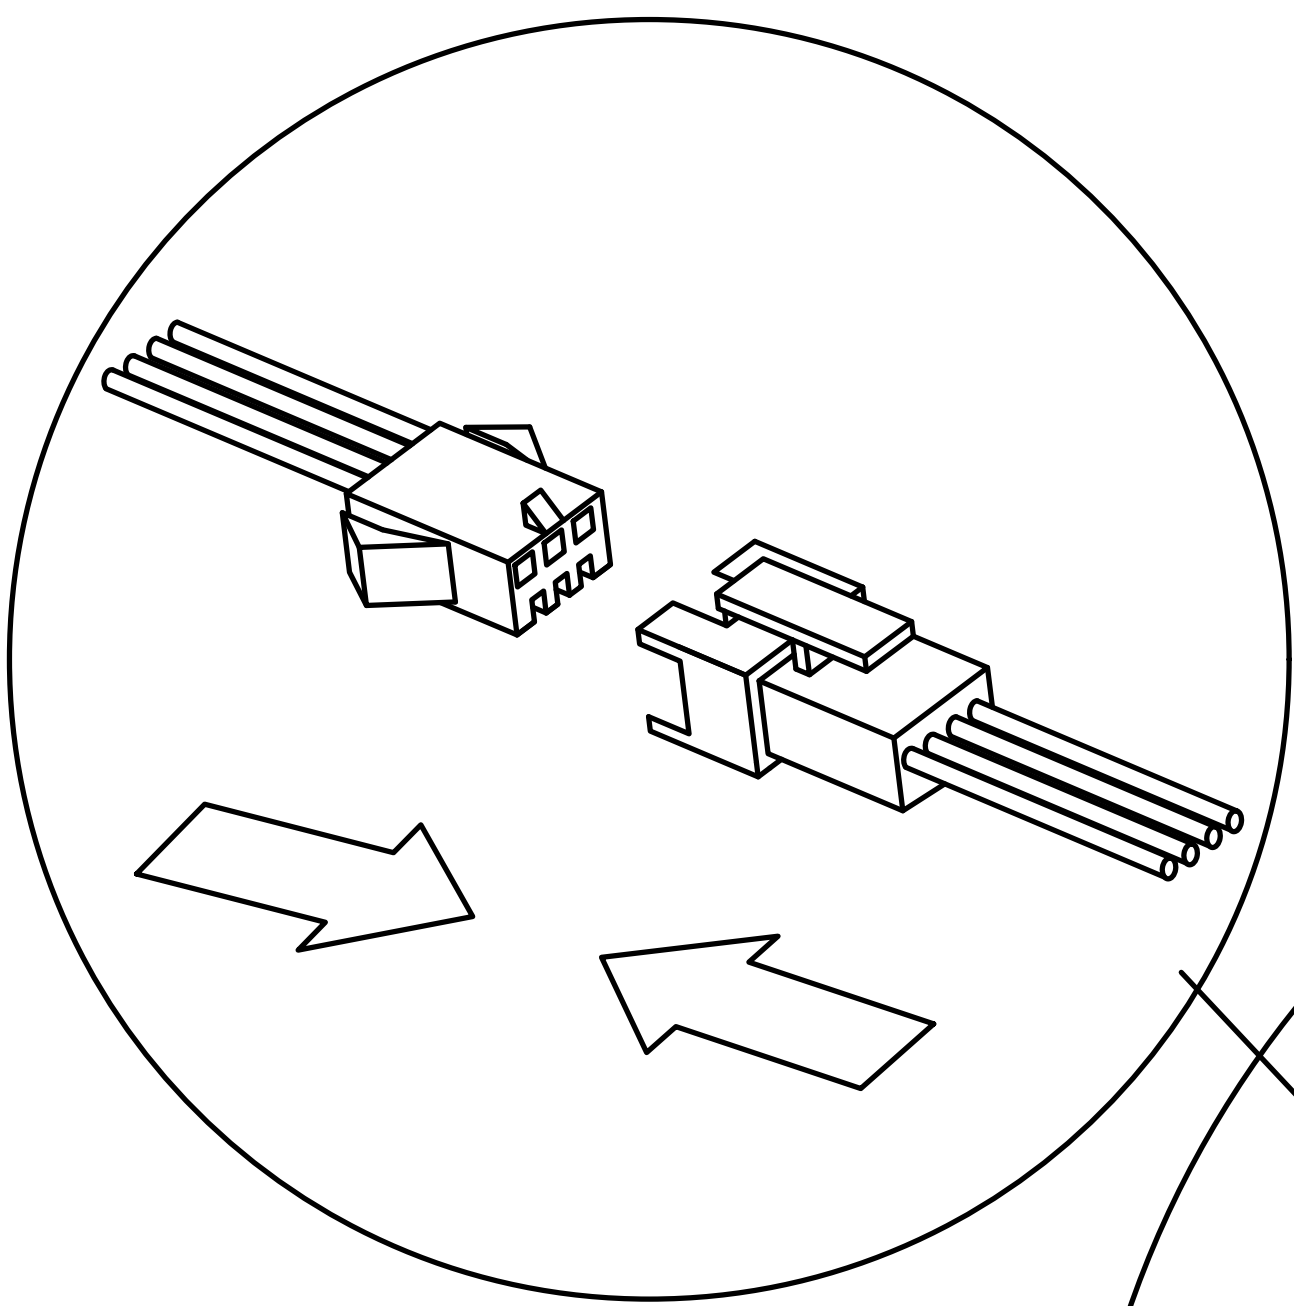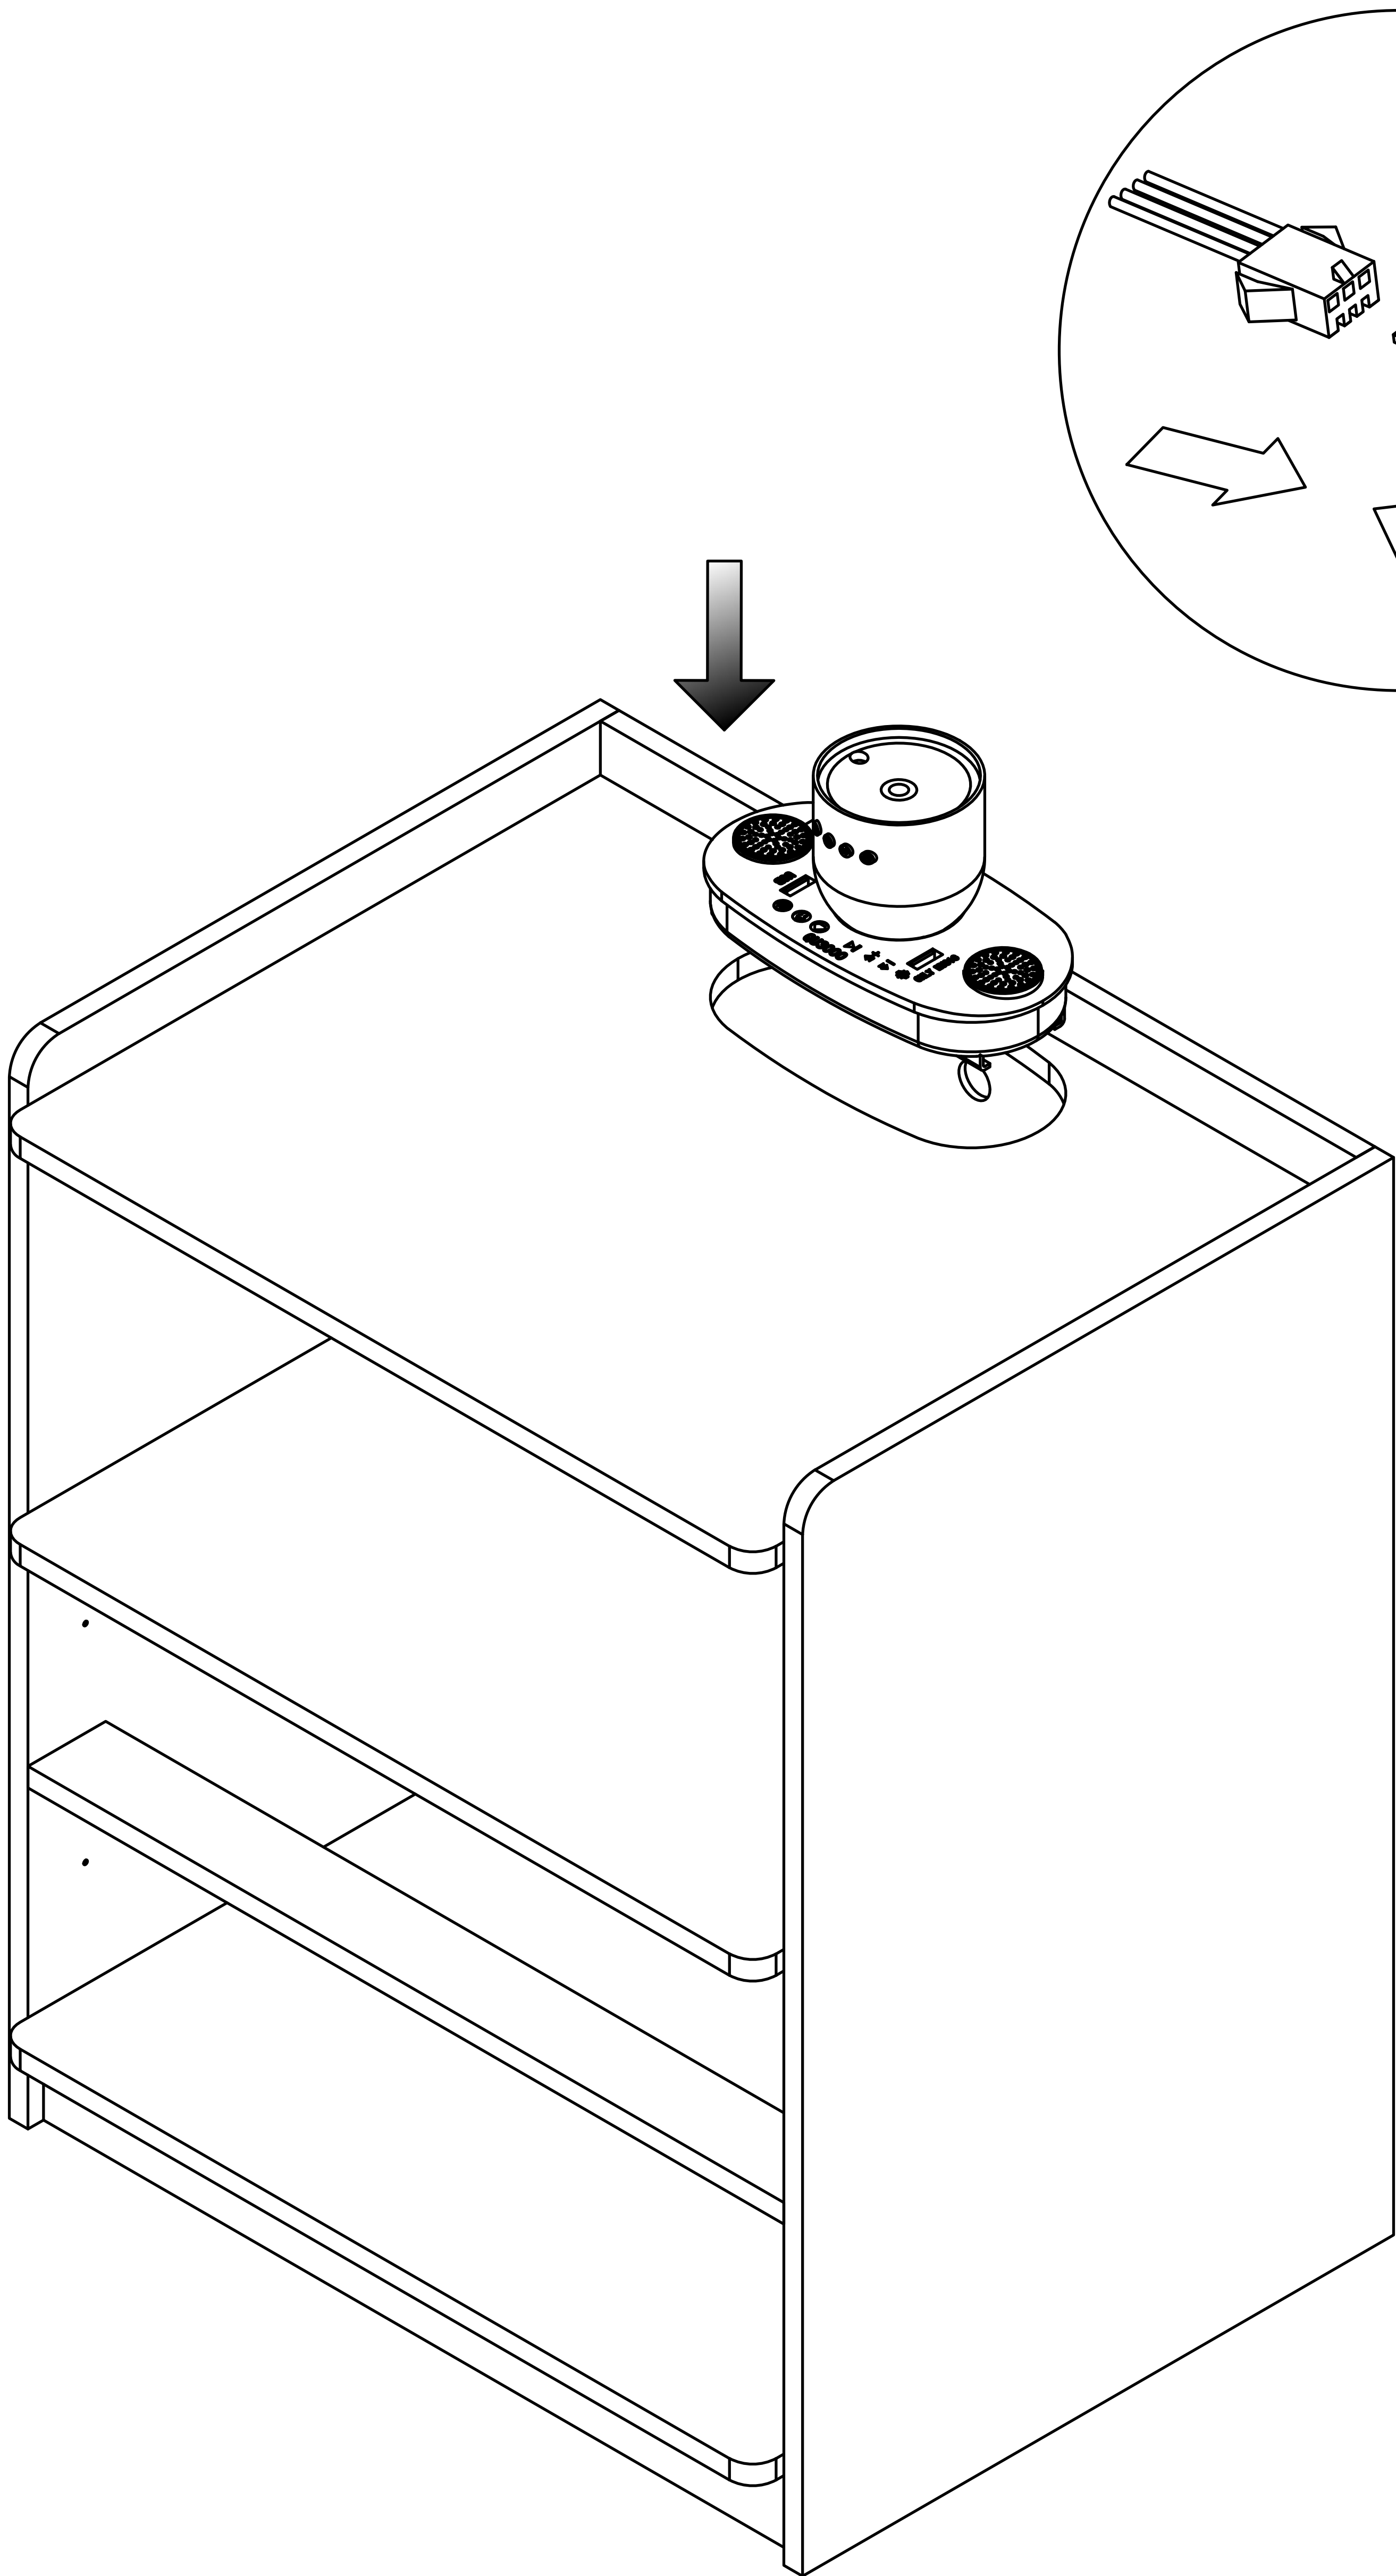
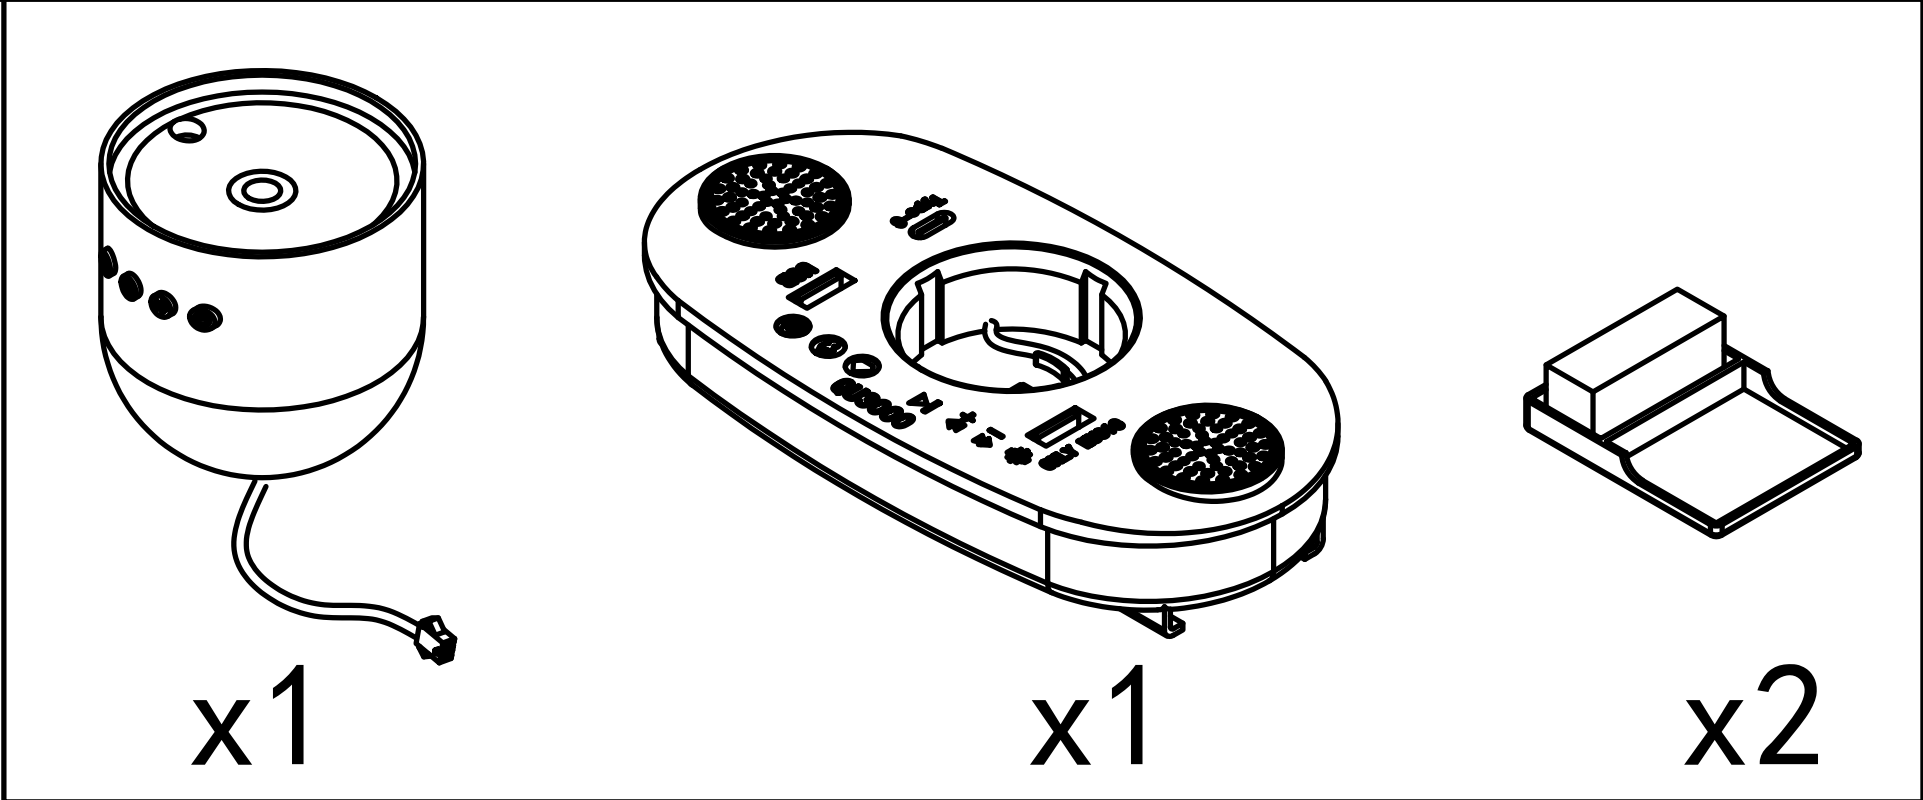


 The wire exits through the back panel hole.

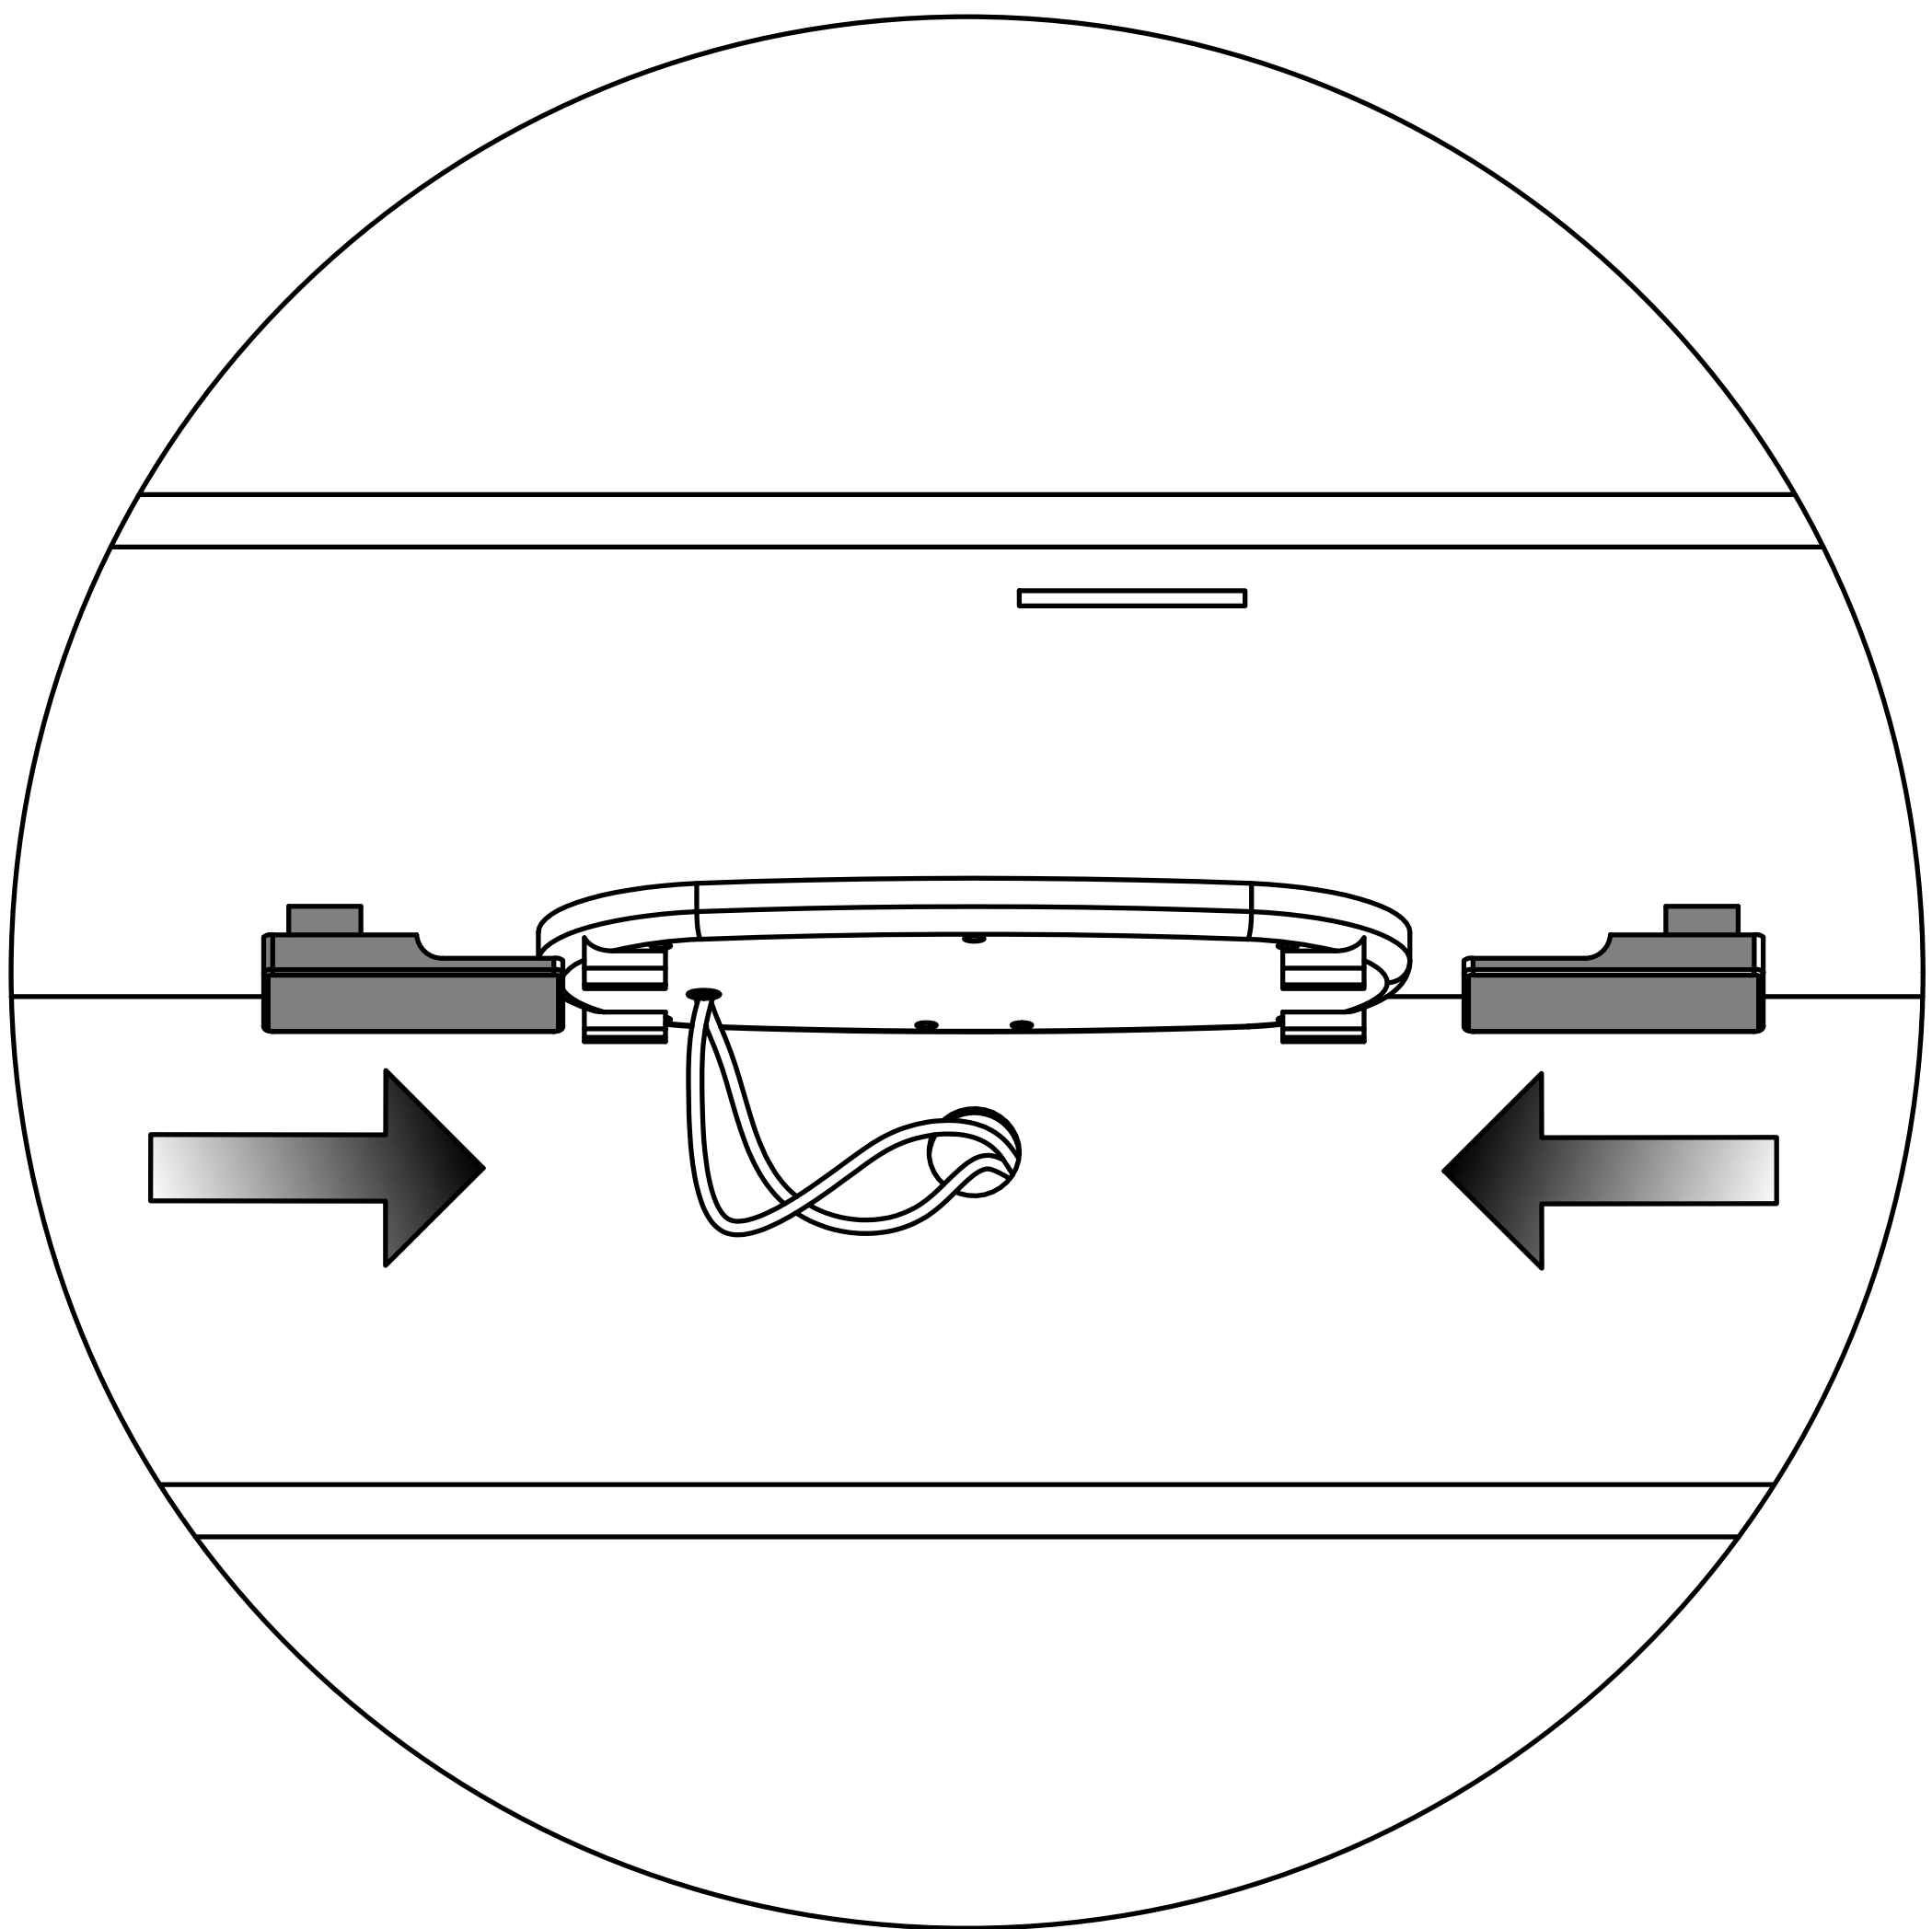


Lock the electronic module with two small parts.

  Step 34

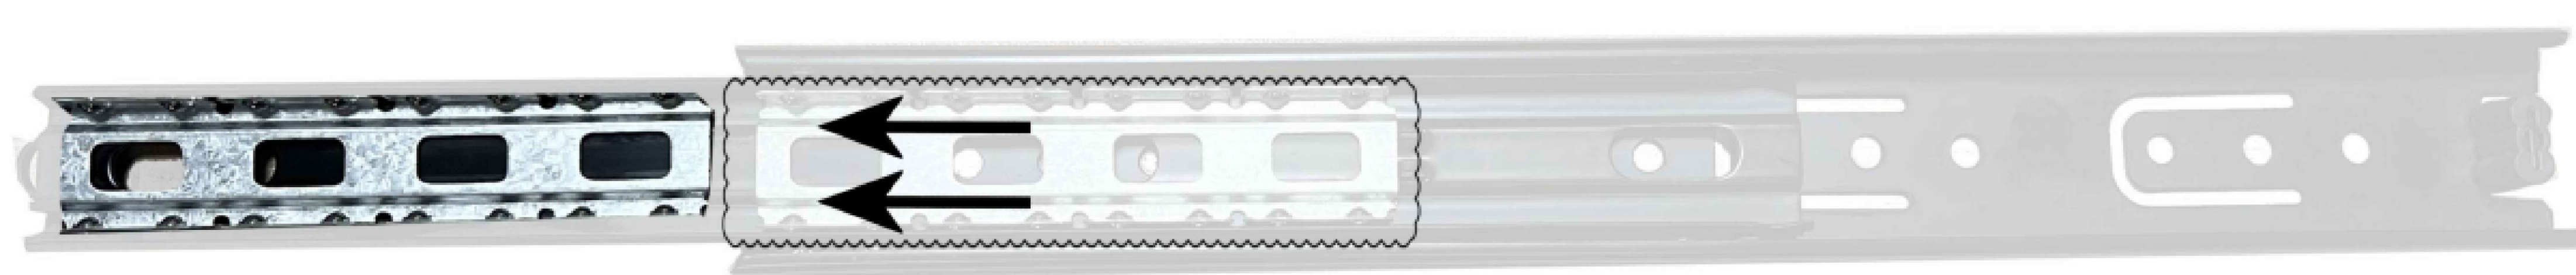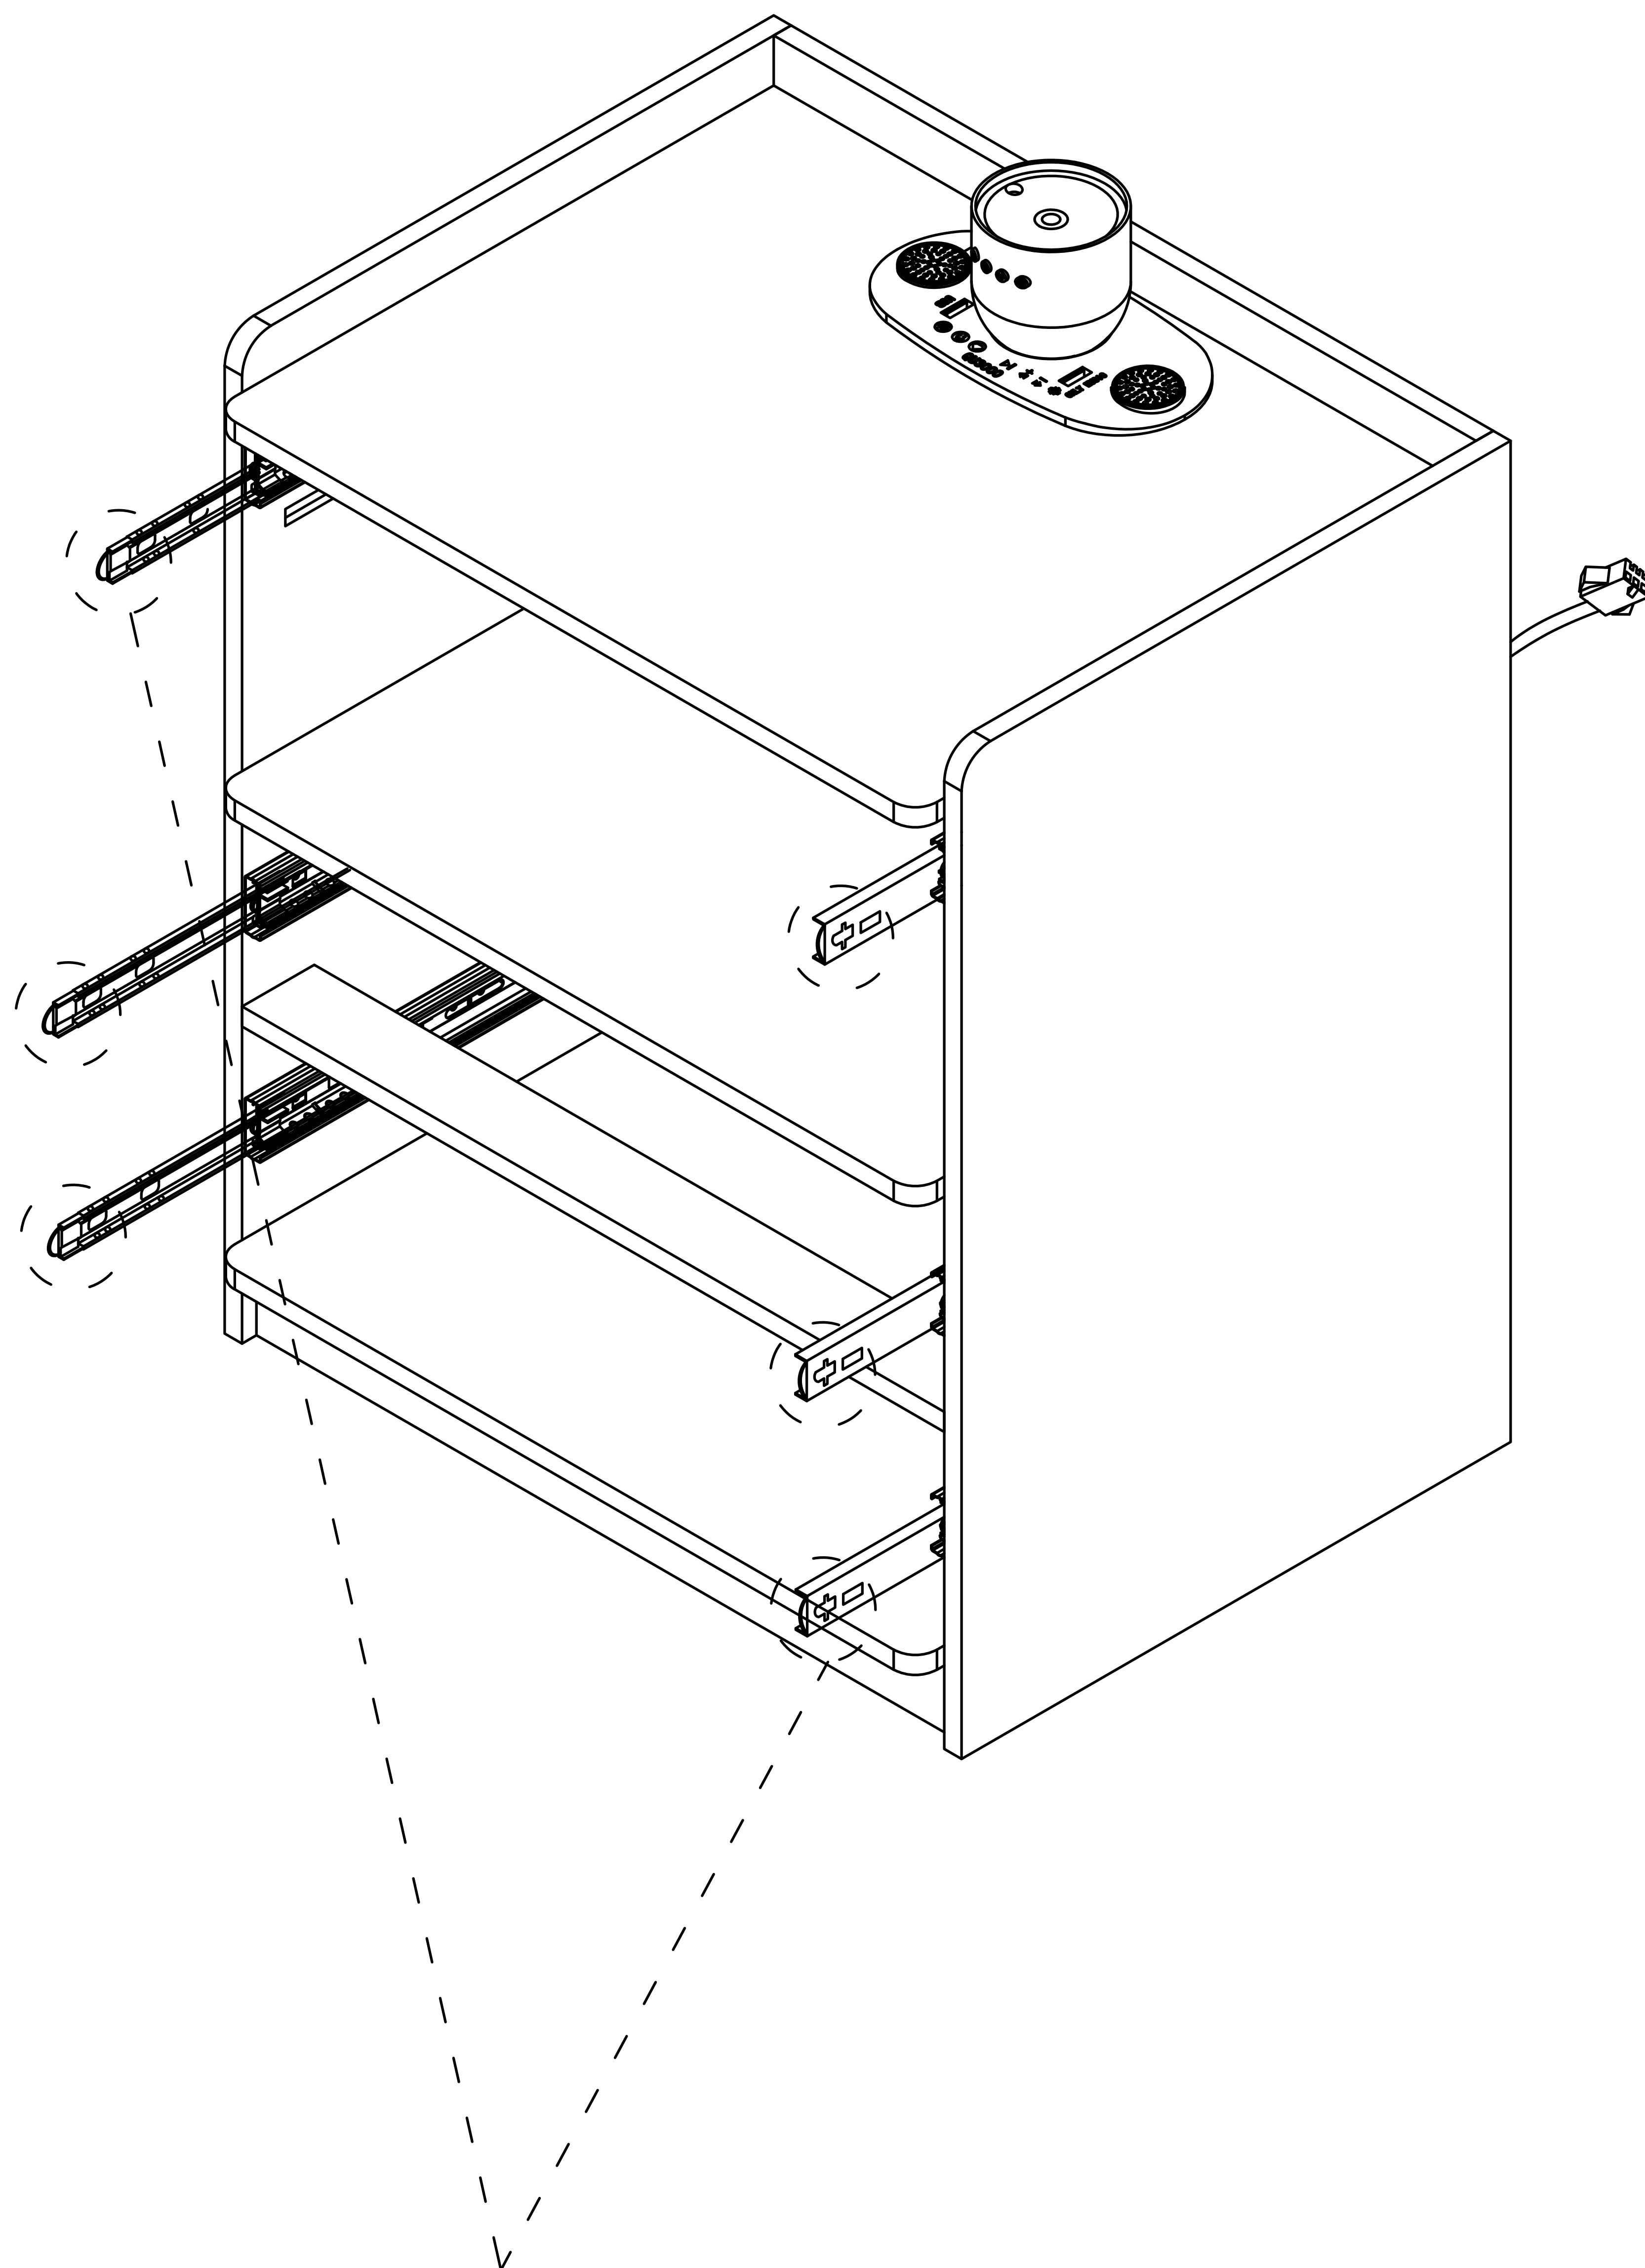


As shown, When installing the drawer, pull the guide rail out first, Slide beads are also pulled out.

 
Step 35

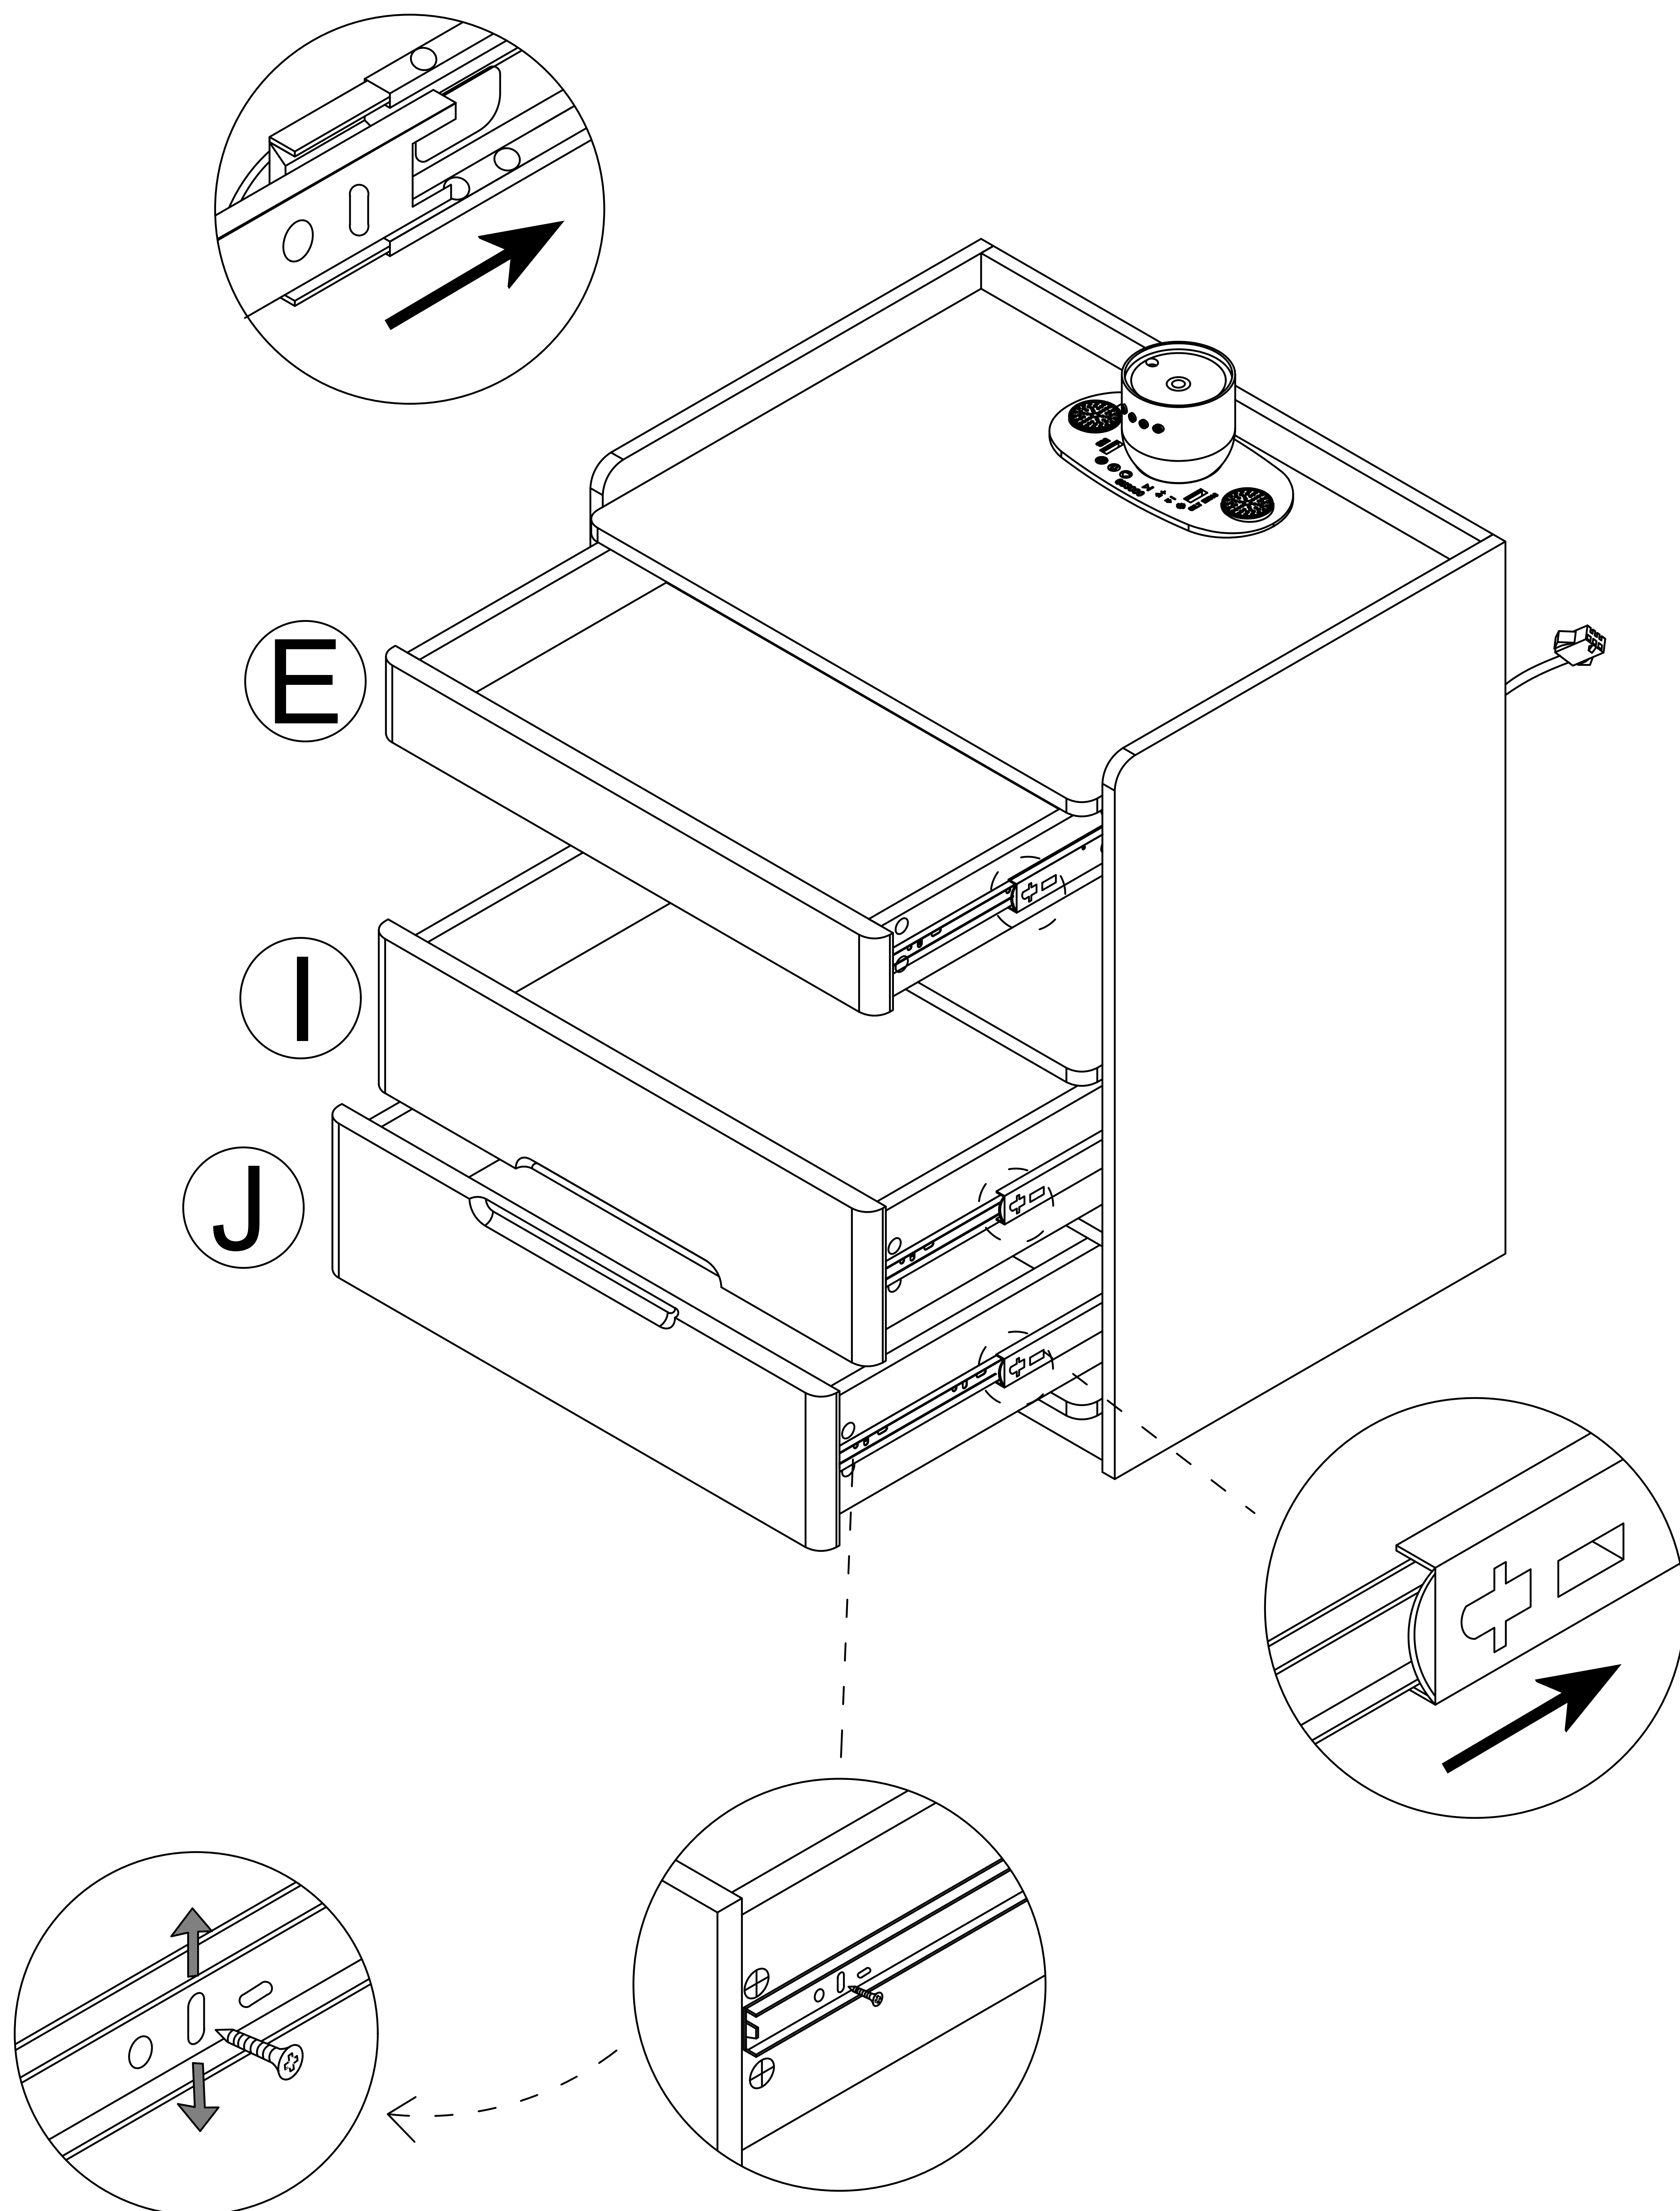

 
If a large gap is found after installing the drawer the slide rail can be moved up and down to adjust the gap

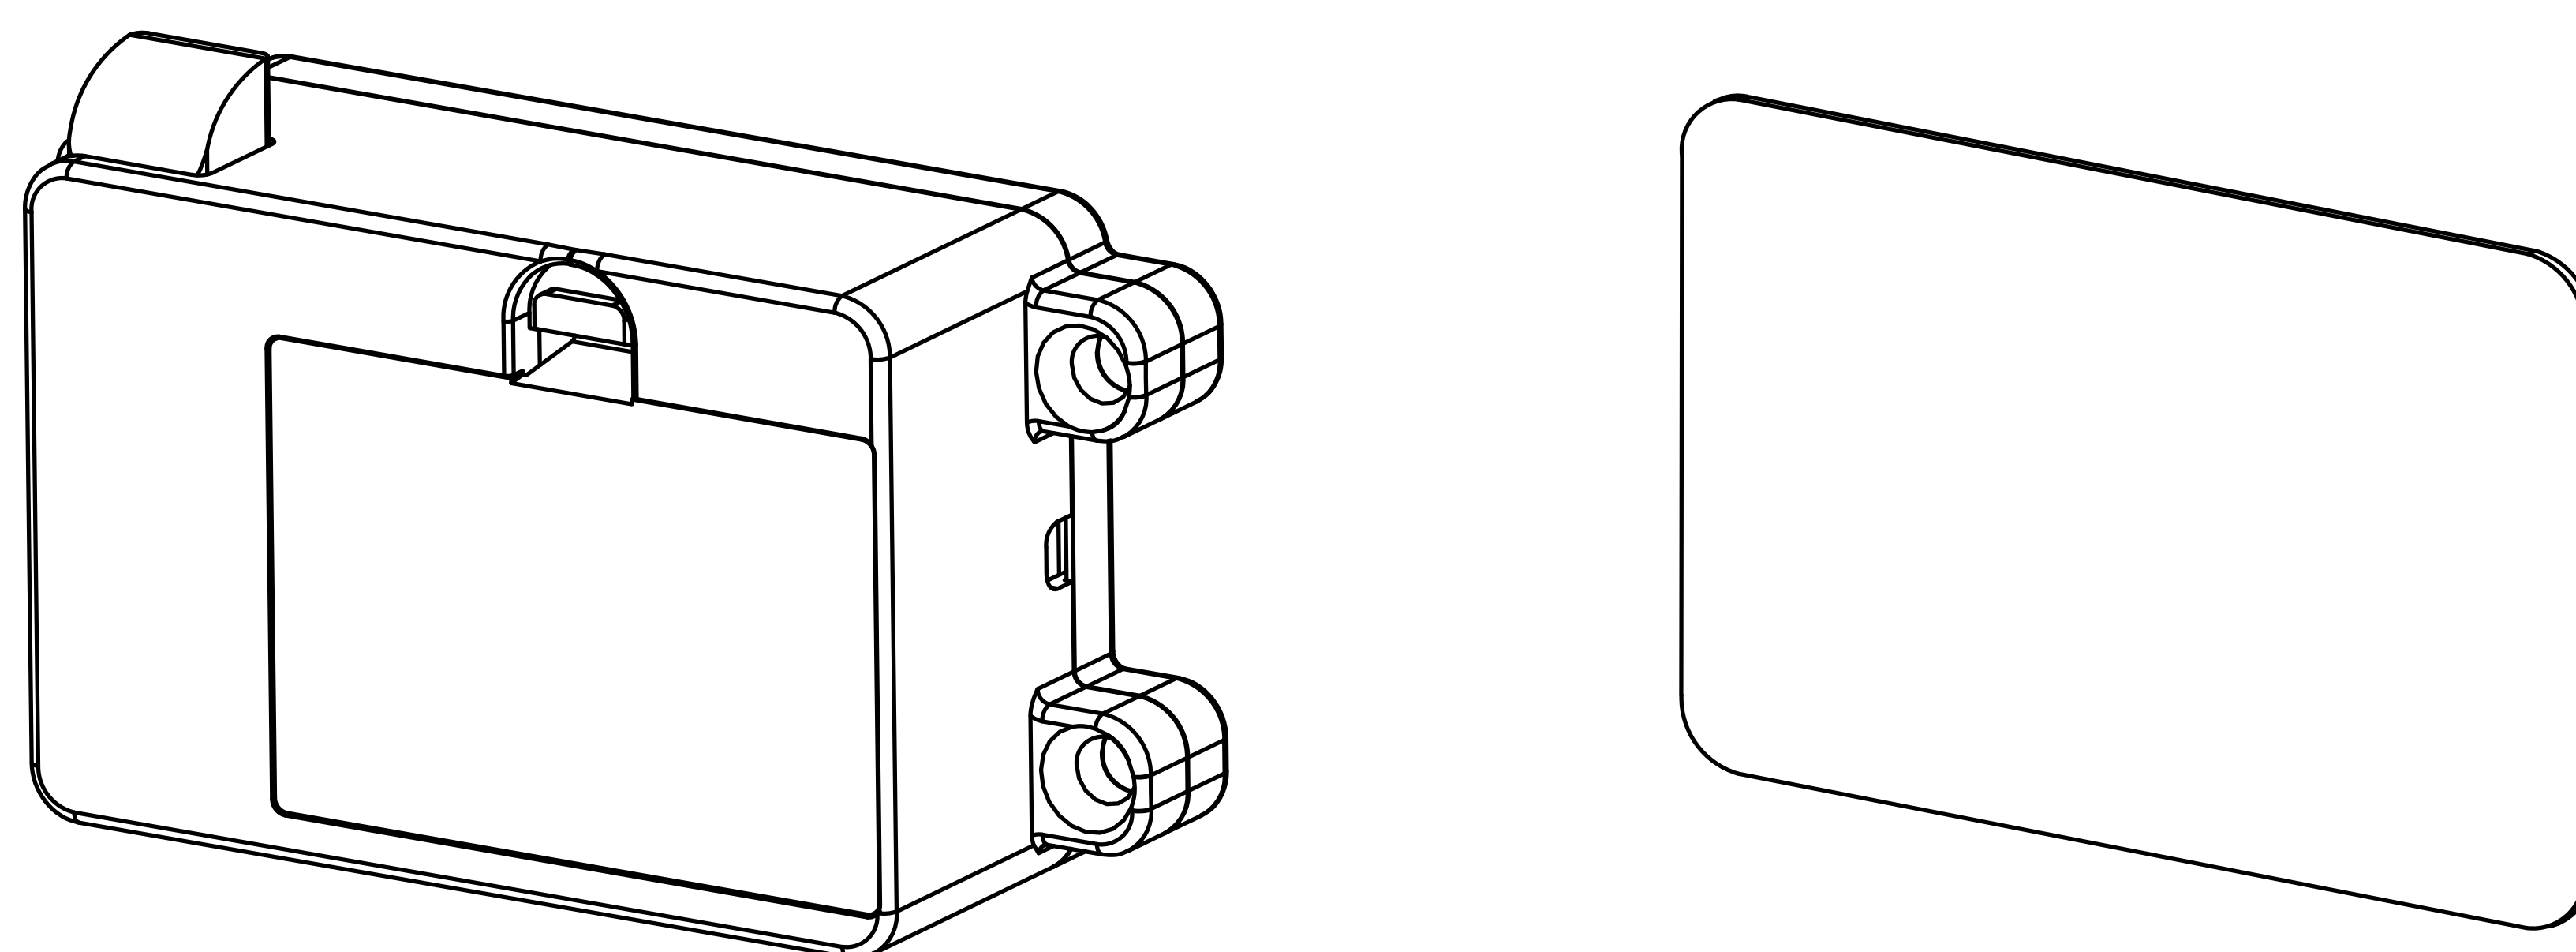

 You need to open the cover before installing the battery.
Purchase three AAA or 7# batteries by oneself

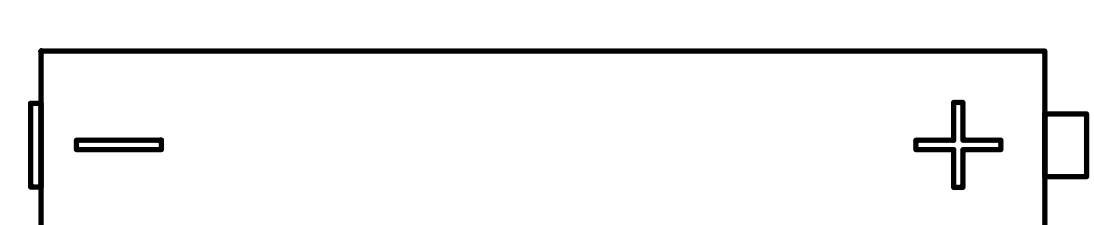

negative pole —

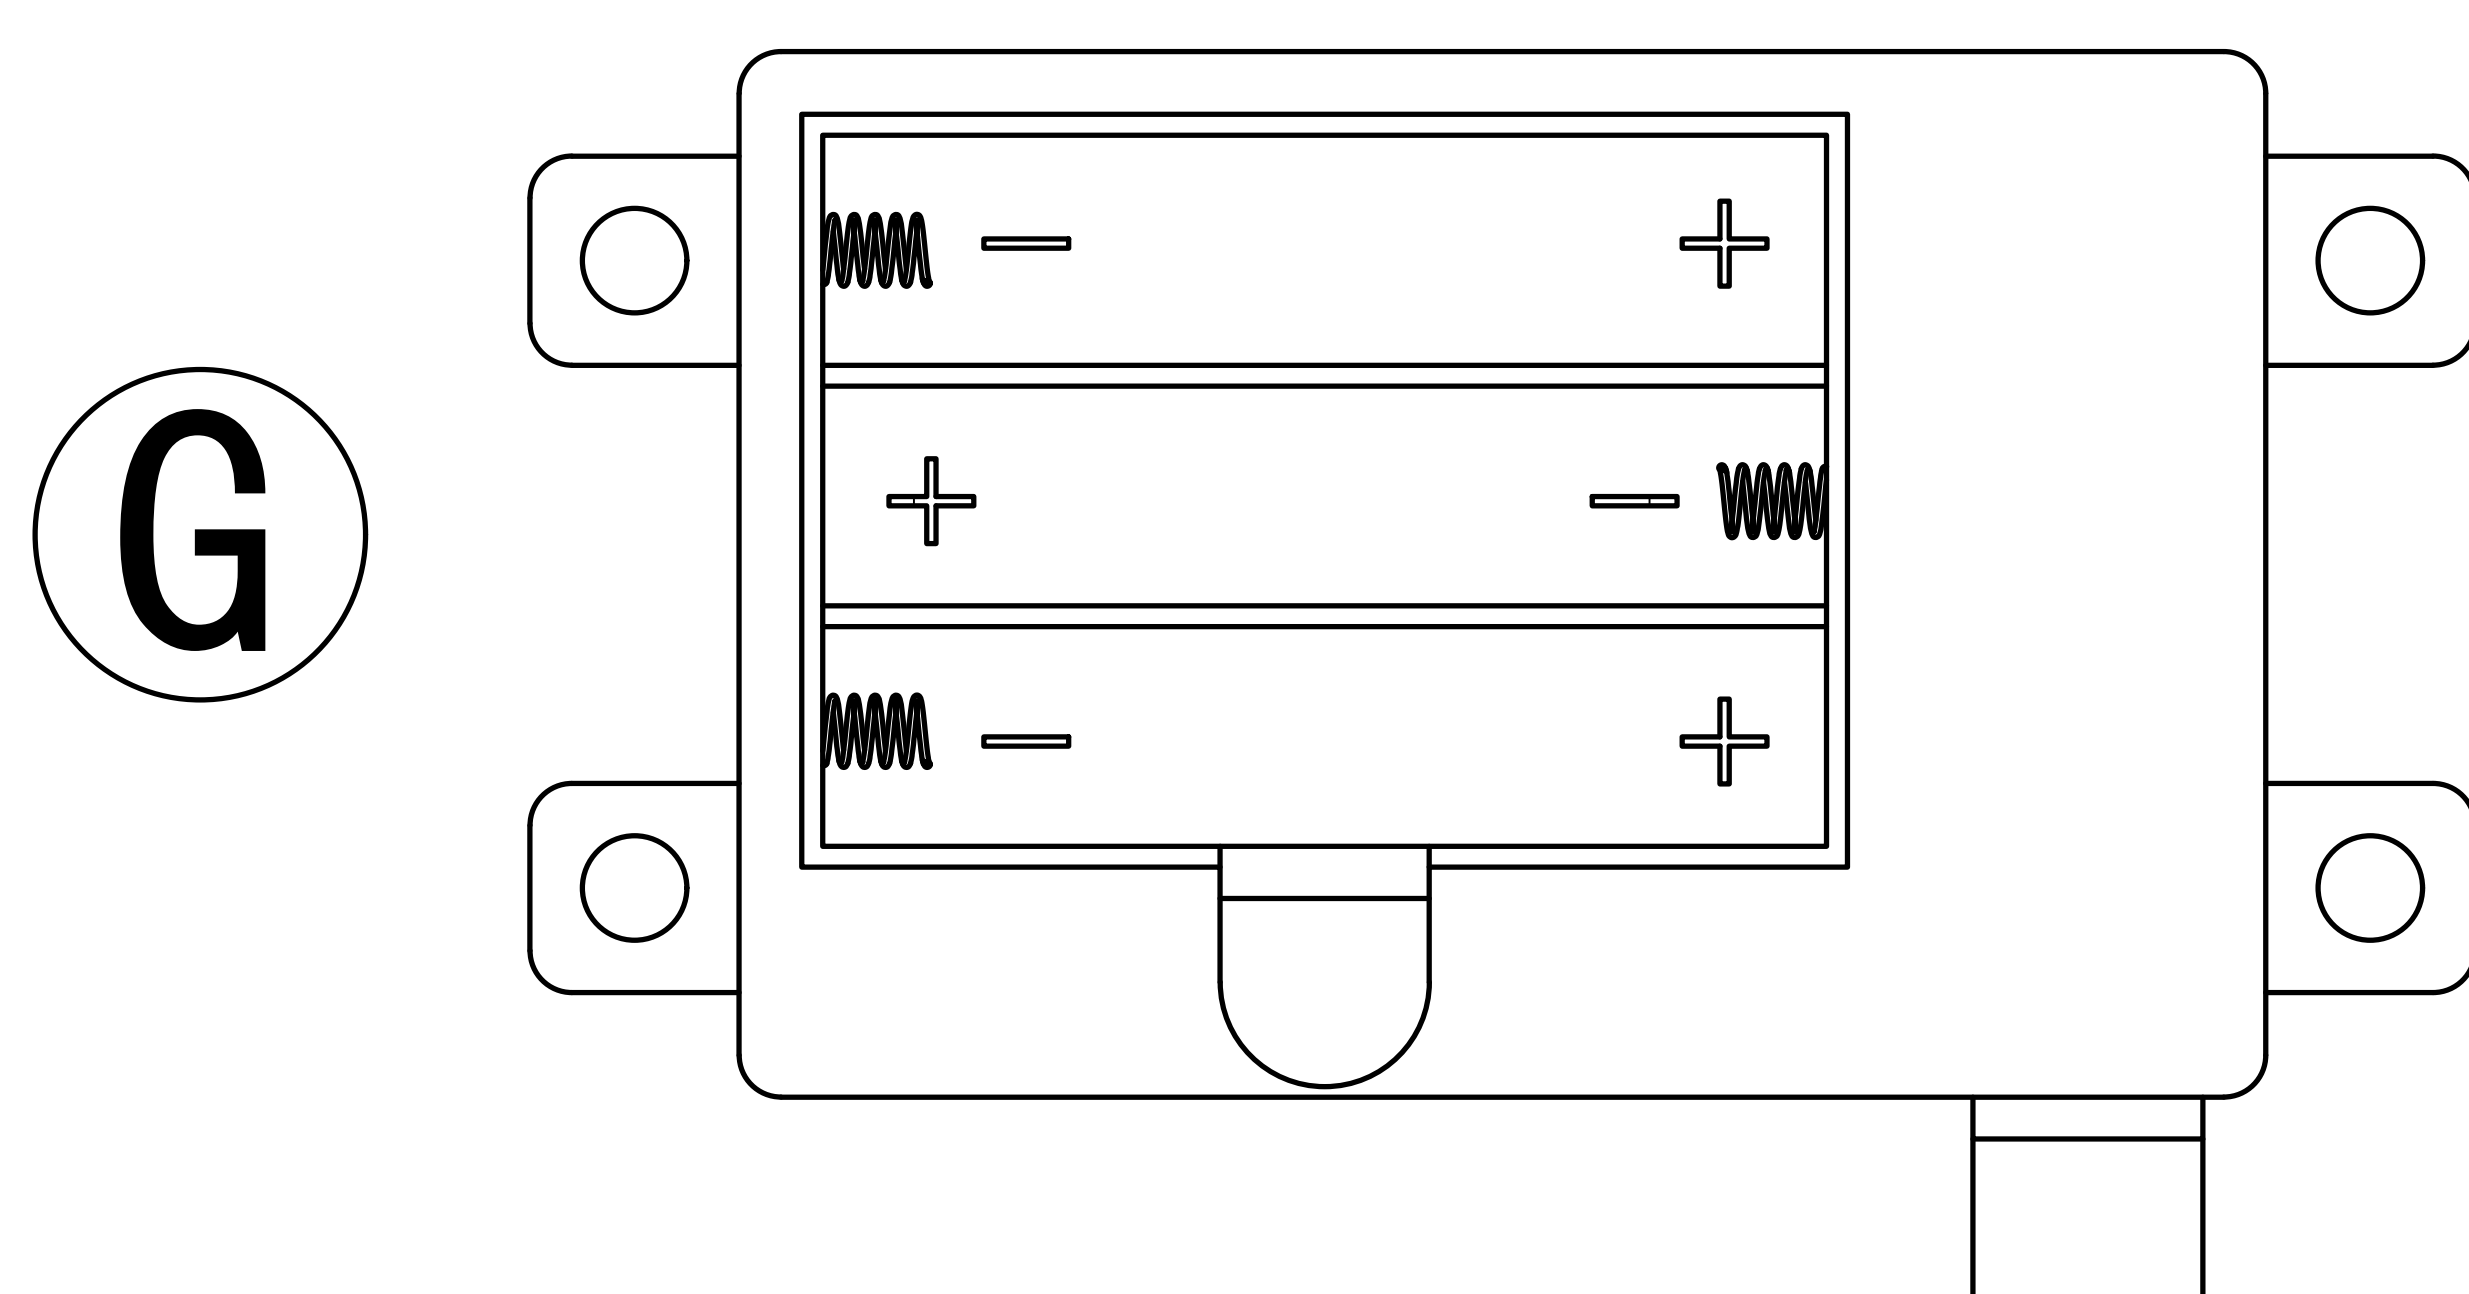 


positive pole +


Install the battery into the lock according to the positive and negative poles on the picture.
After installing the battery, please cover it.

Step 36


 
7

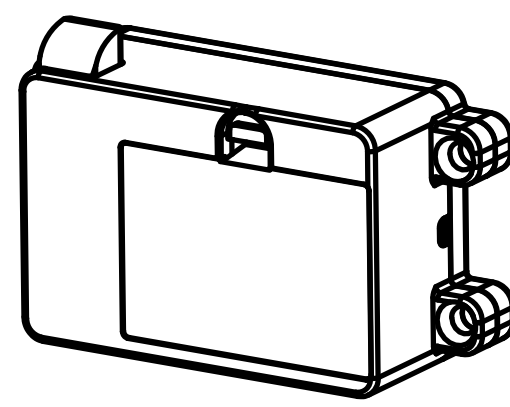


x1

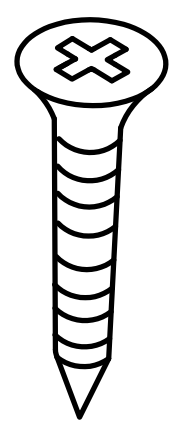 

x4

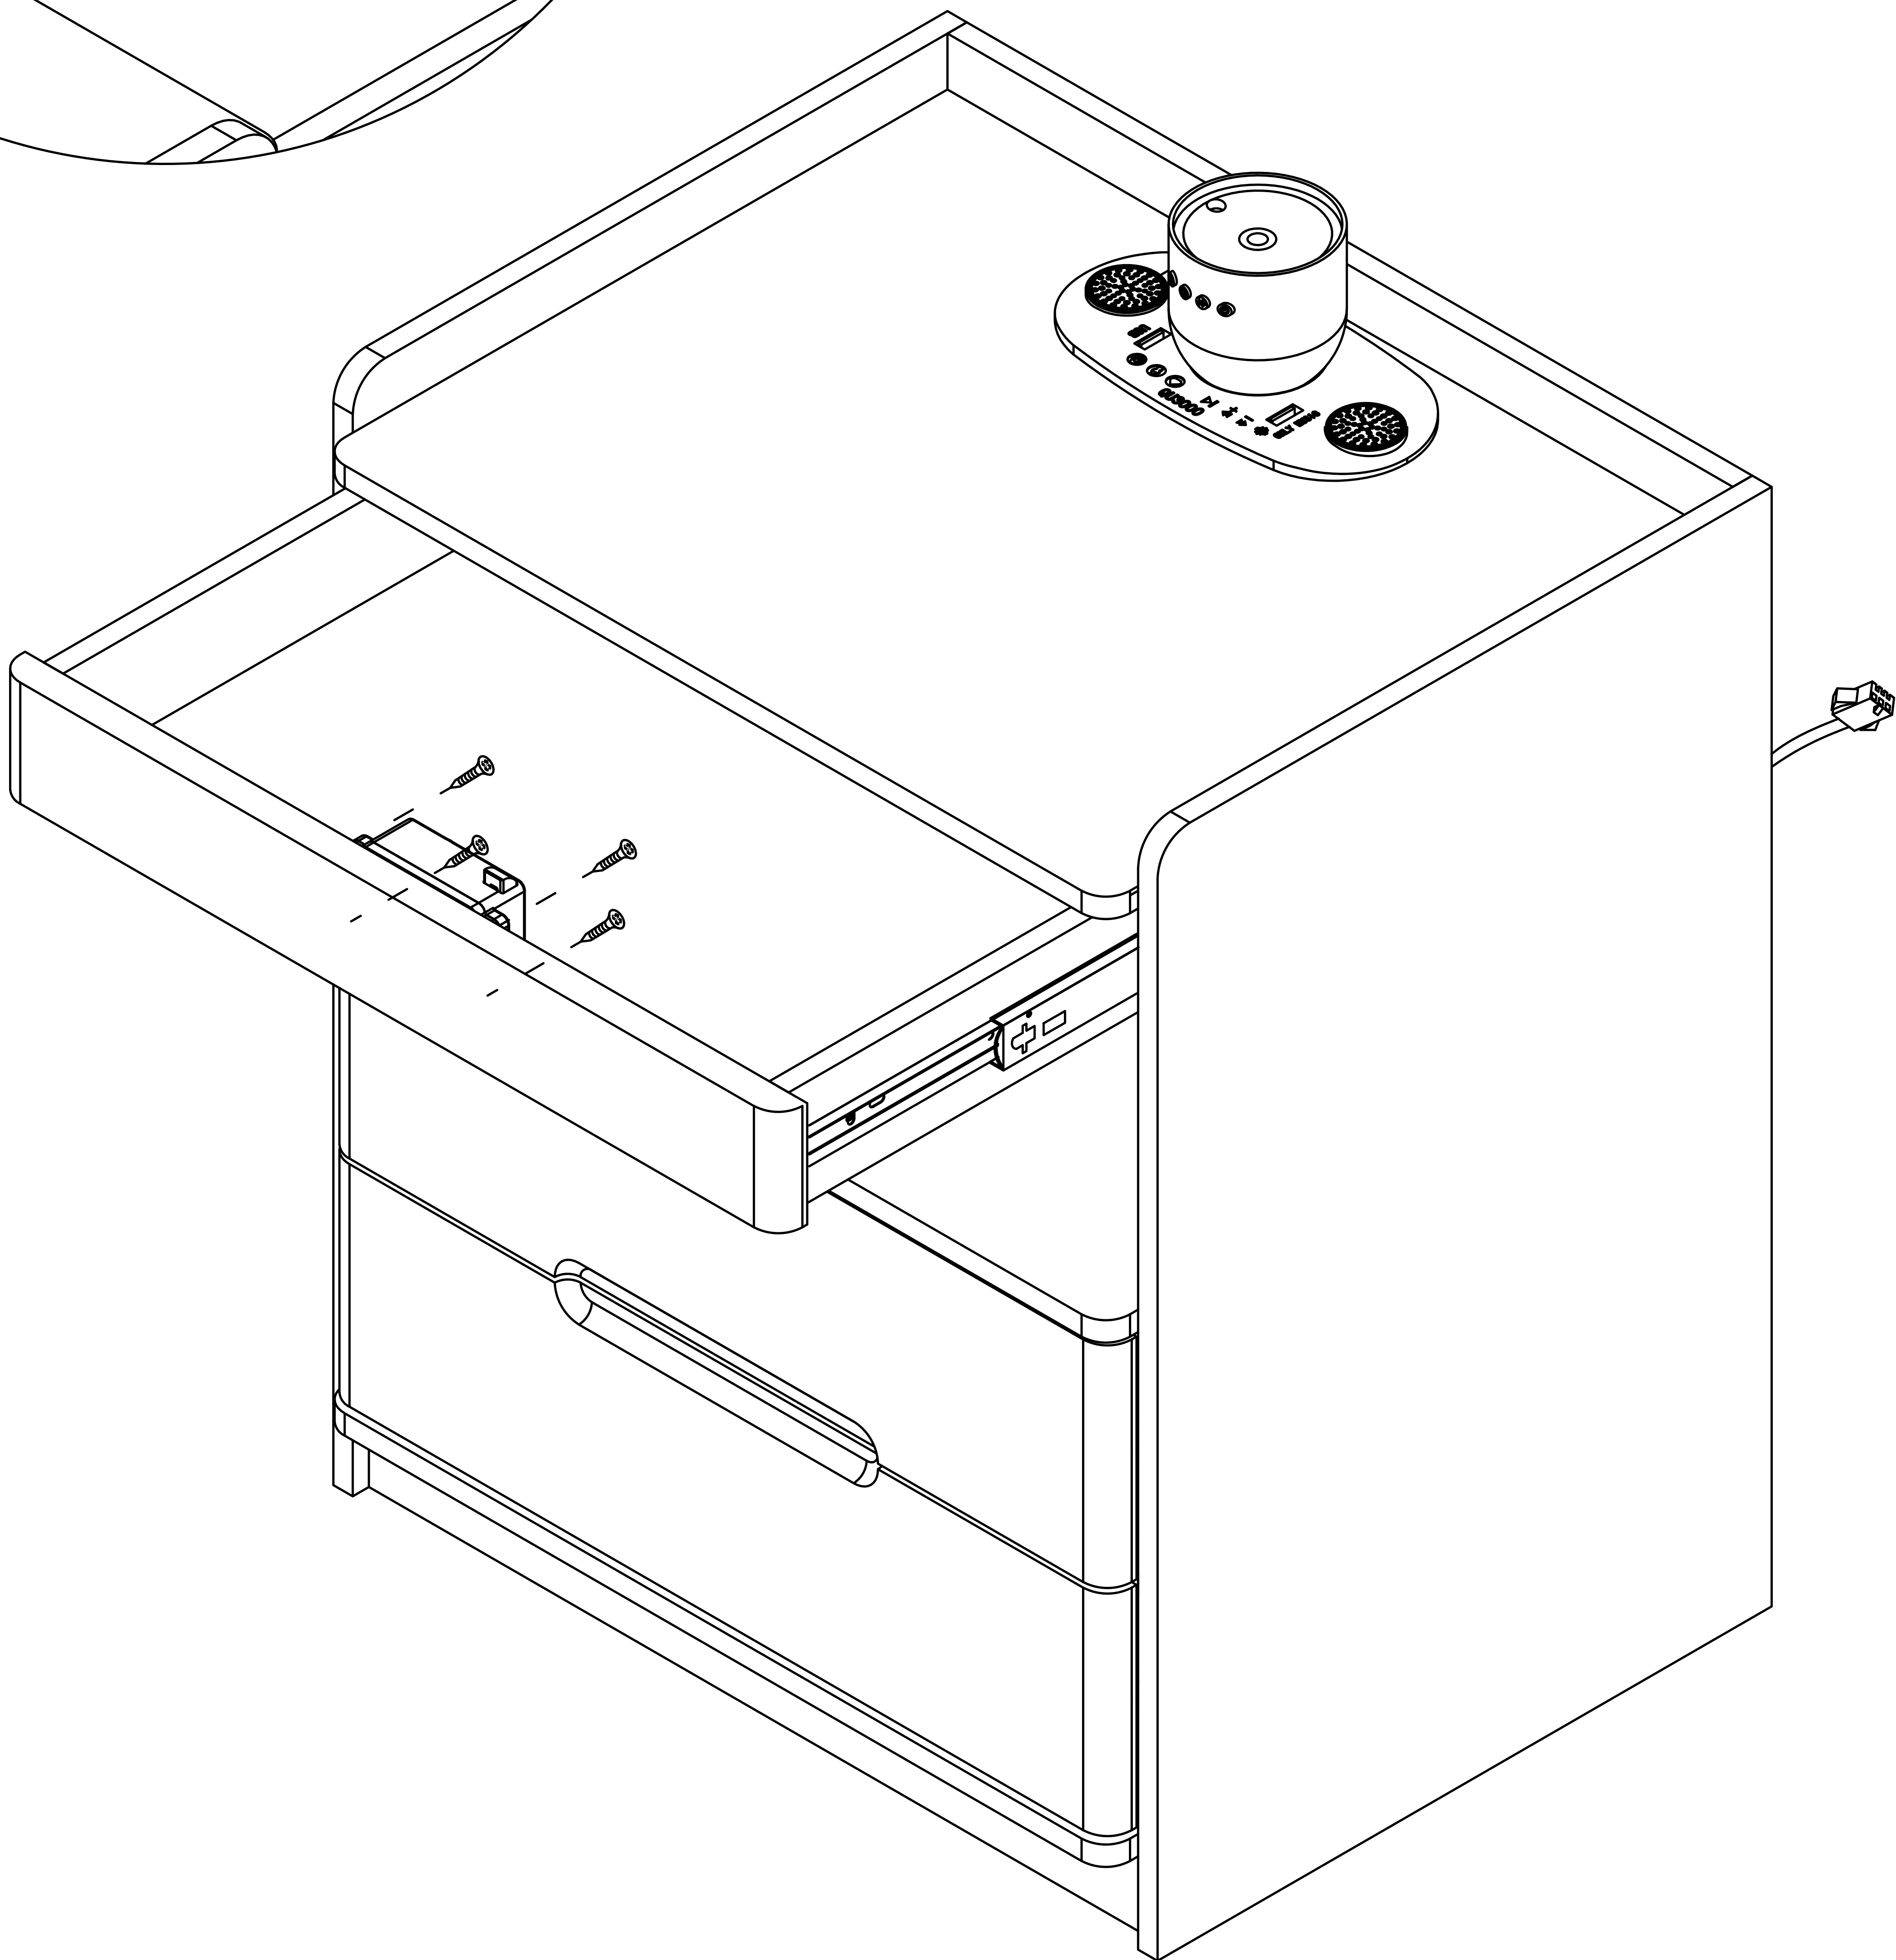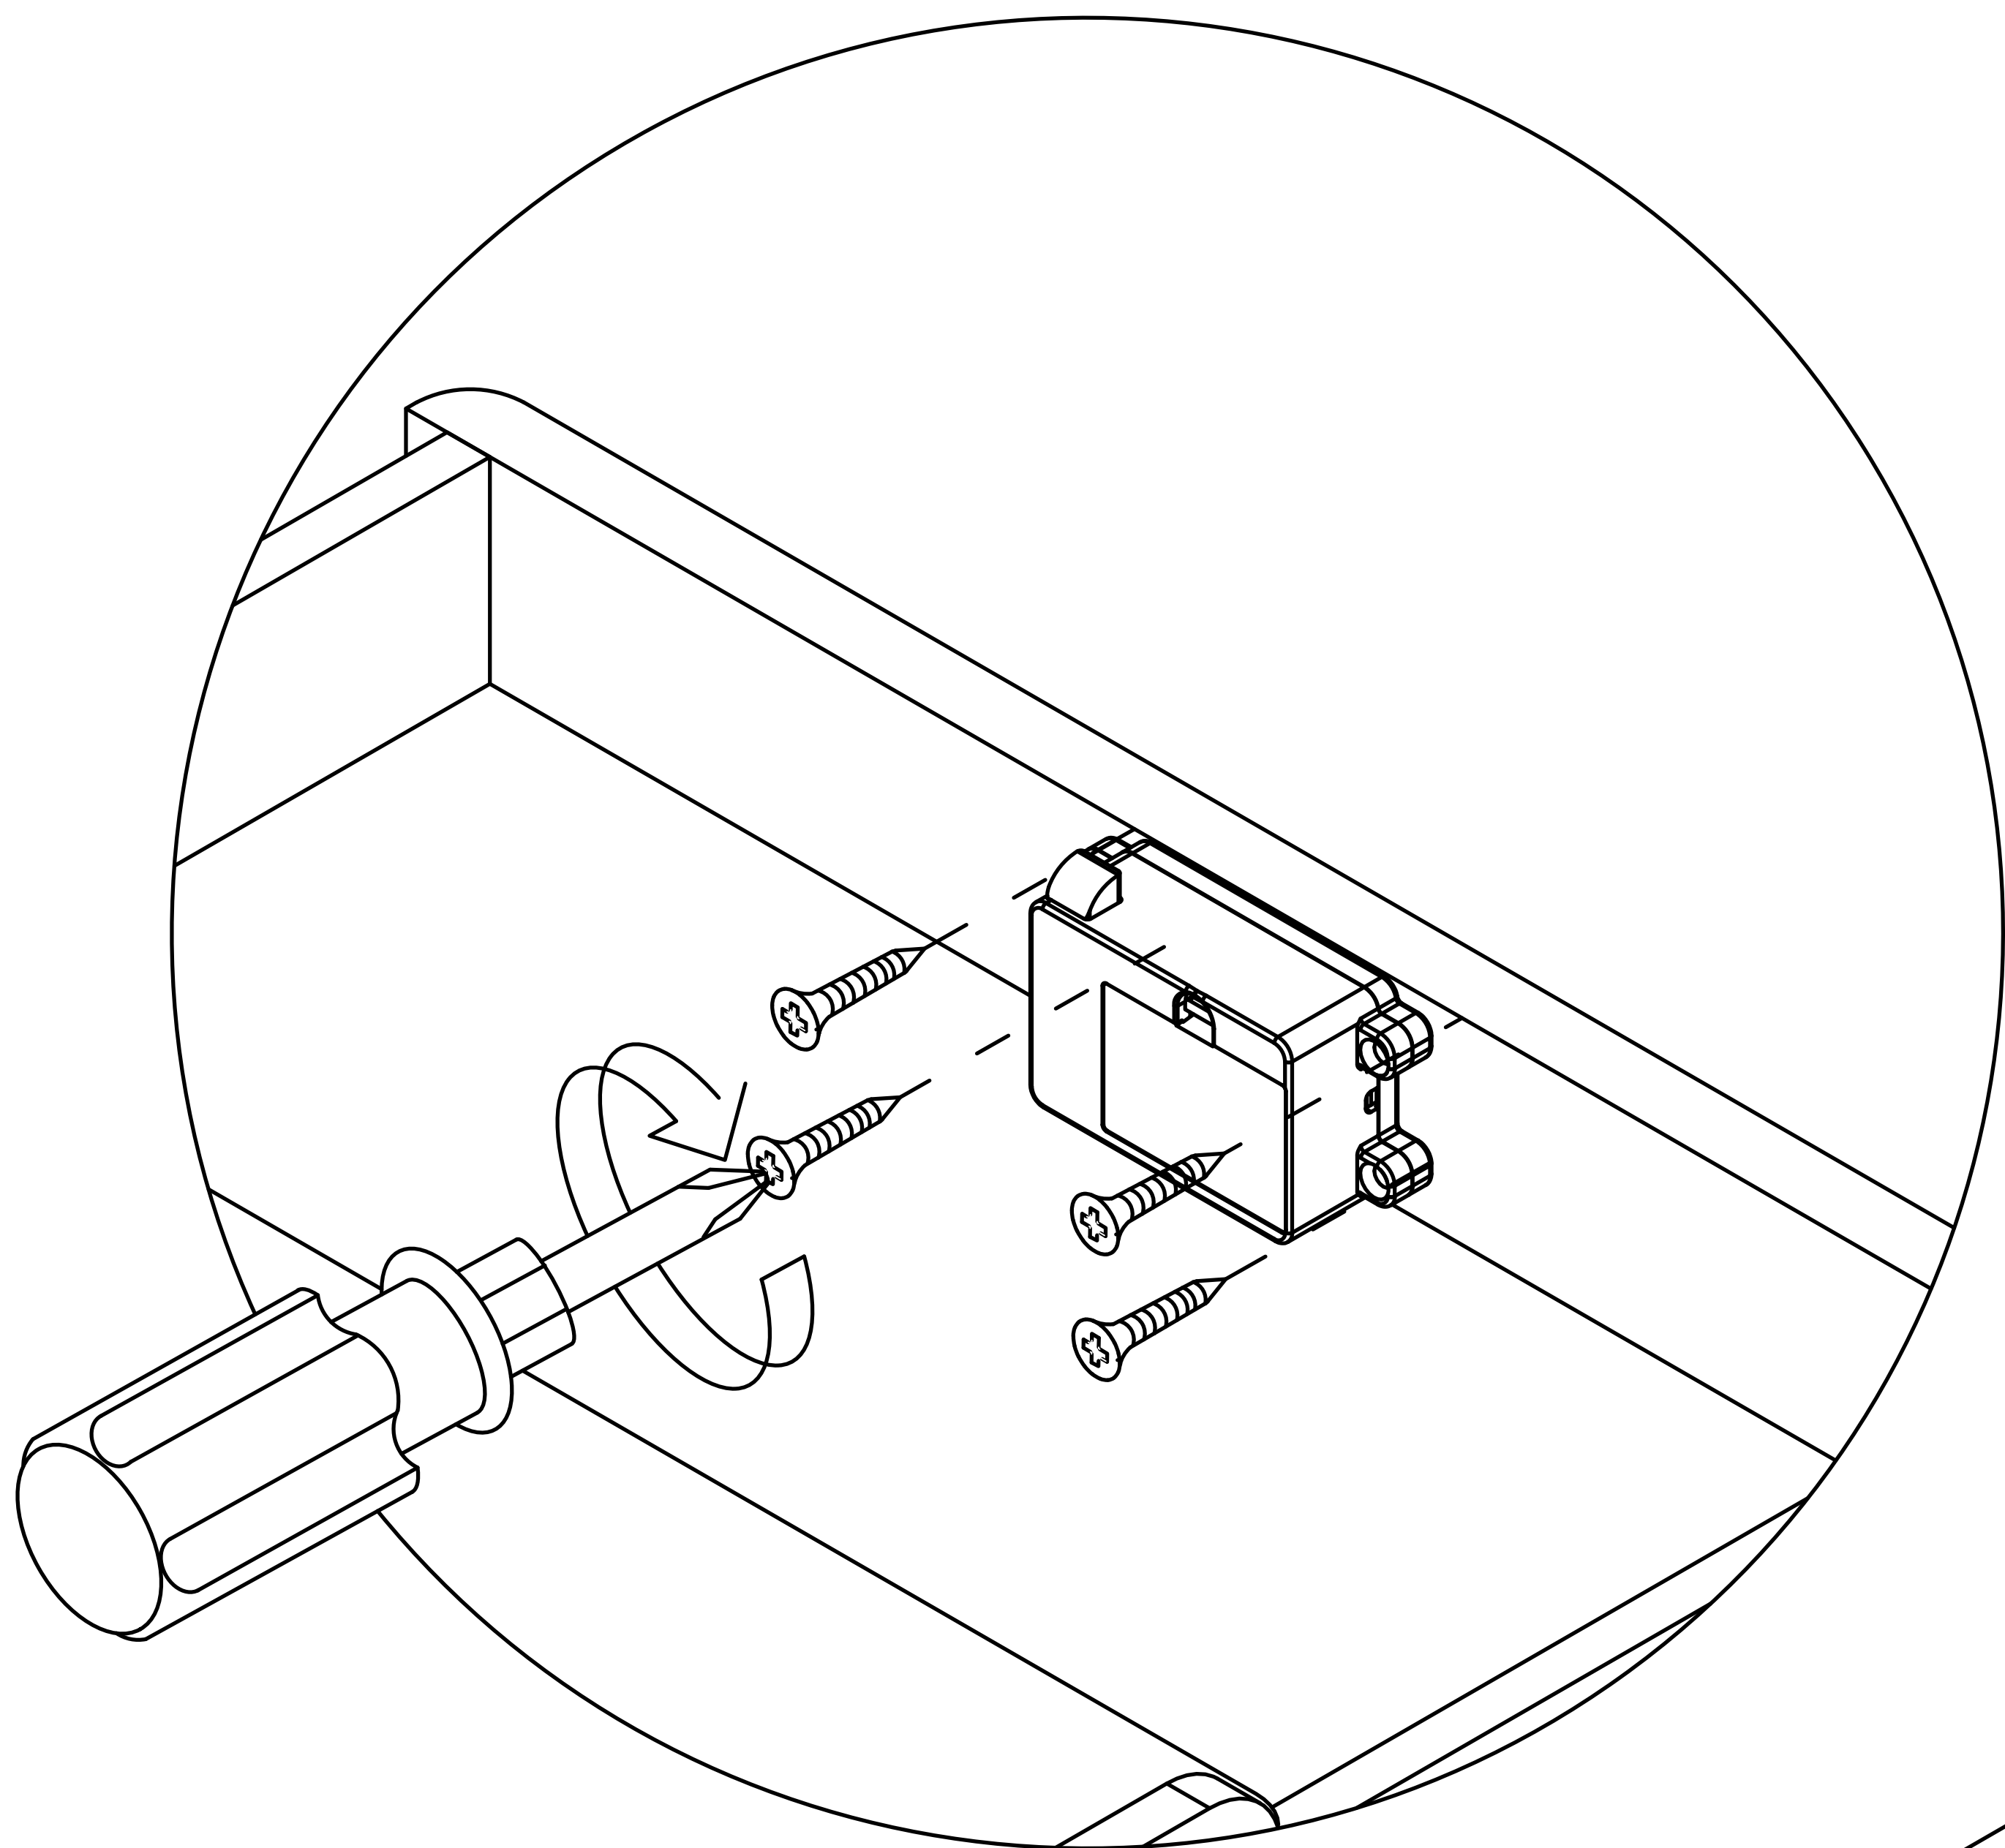  

 Step 37

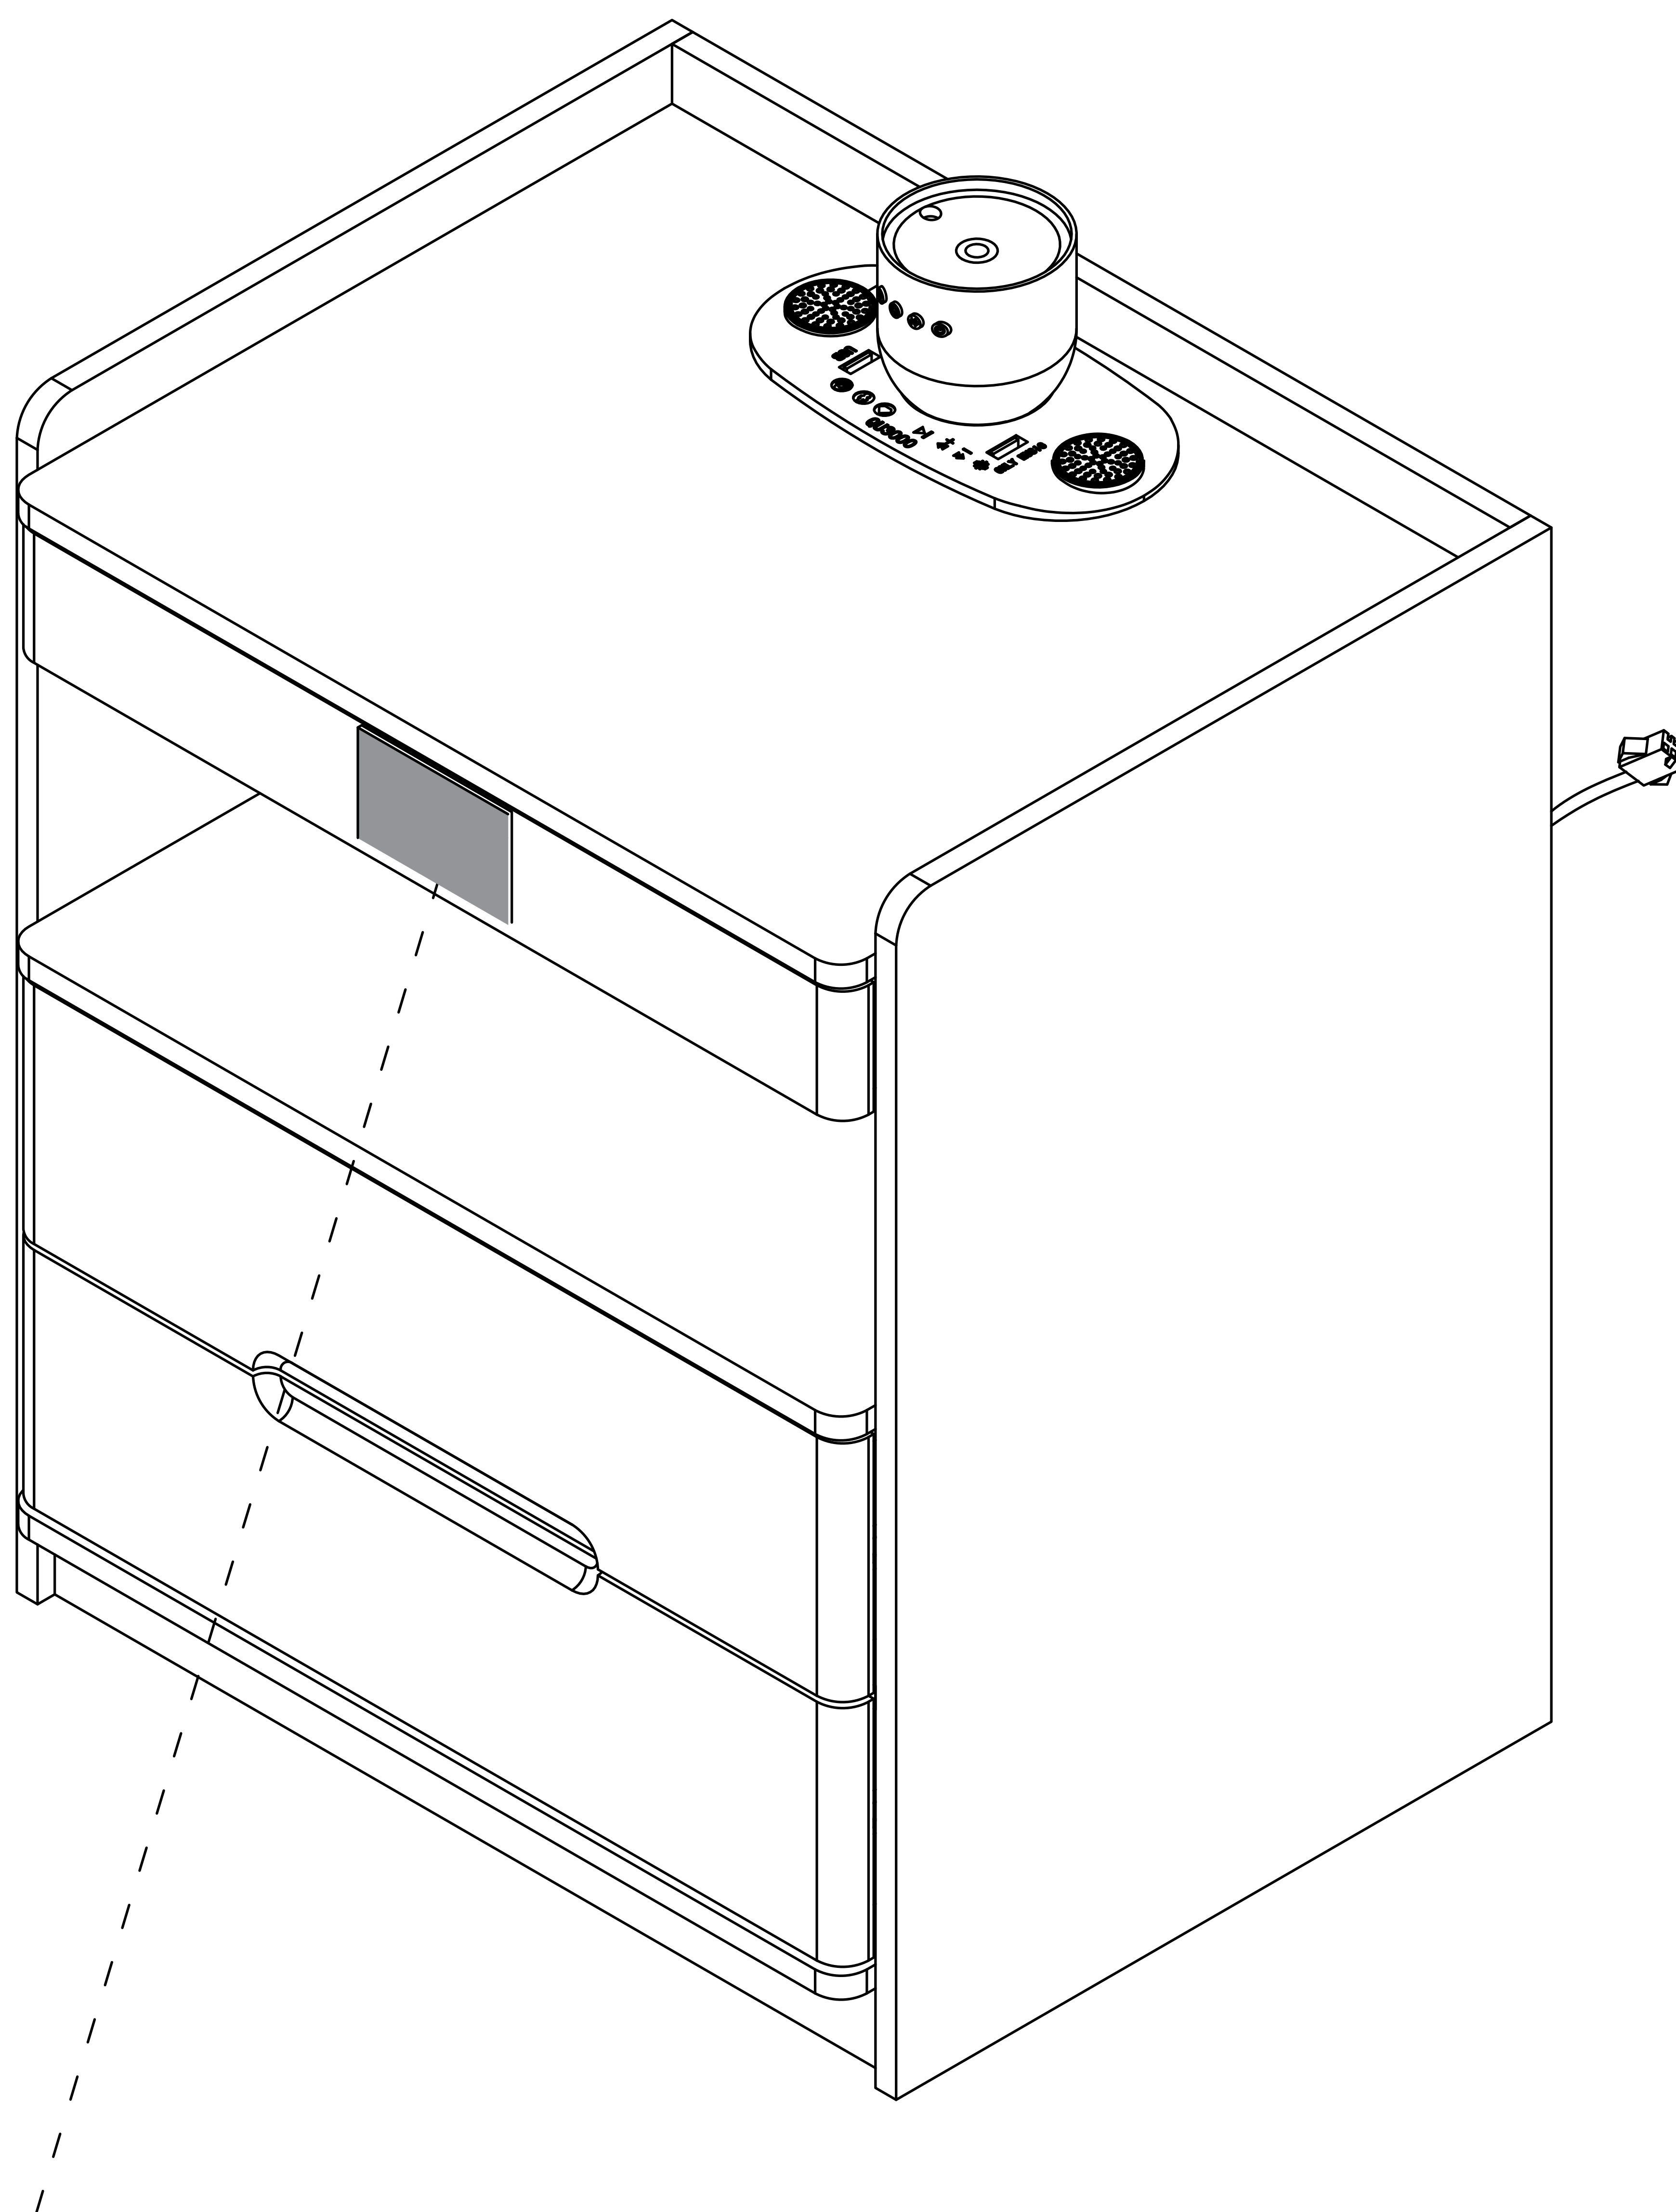


Put the card in this position and you can open the small drawer.

Precautions for card lock


When unlocking the drawer, you need to pay attention to it. Please open the drawer within 4 seconds after hearing a drip, otherwise the lock will lock the drawer.

If you find that you can open the drawer without swiping your card, please check whether the battery in the lock is dead or loose.

 When you find that the lock is not working, you need to check the state of the battery.

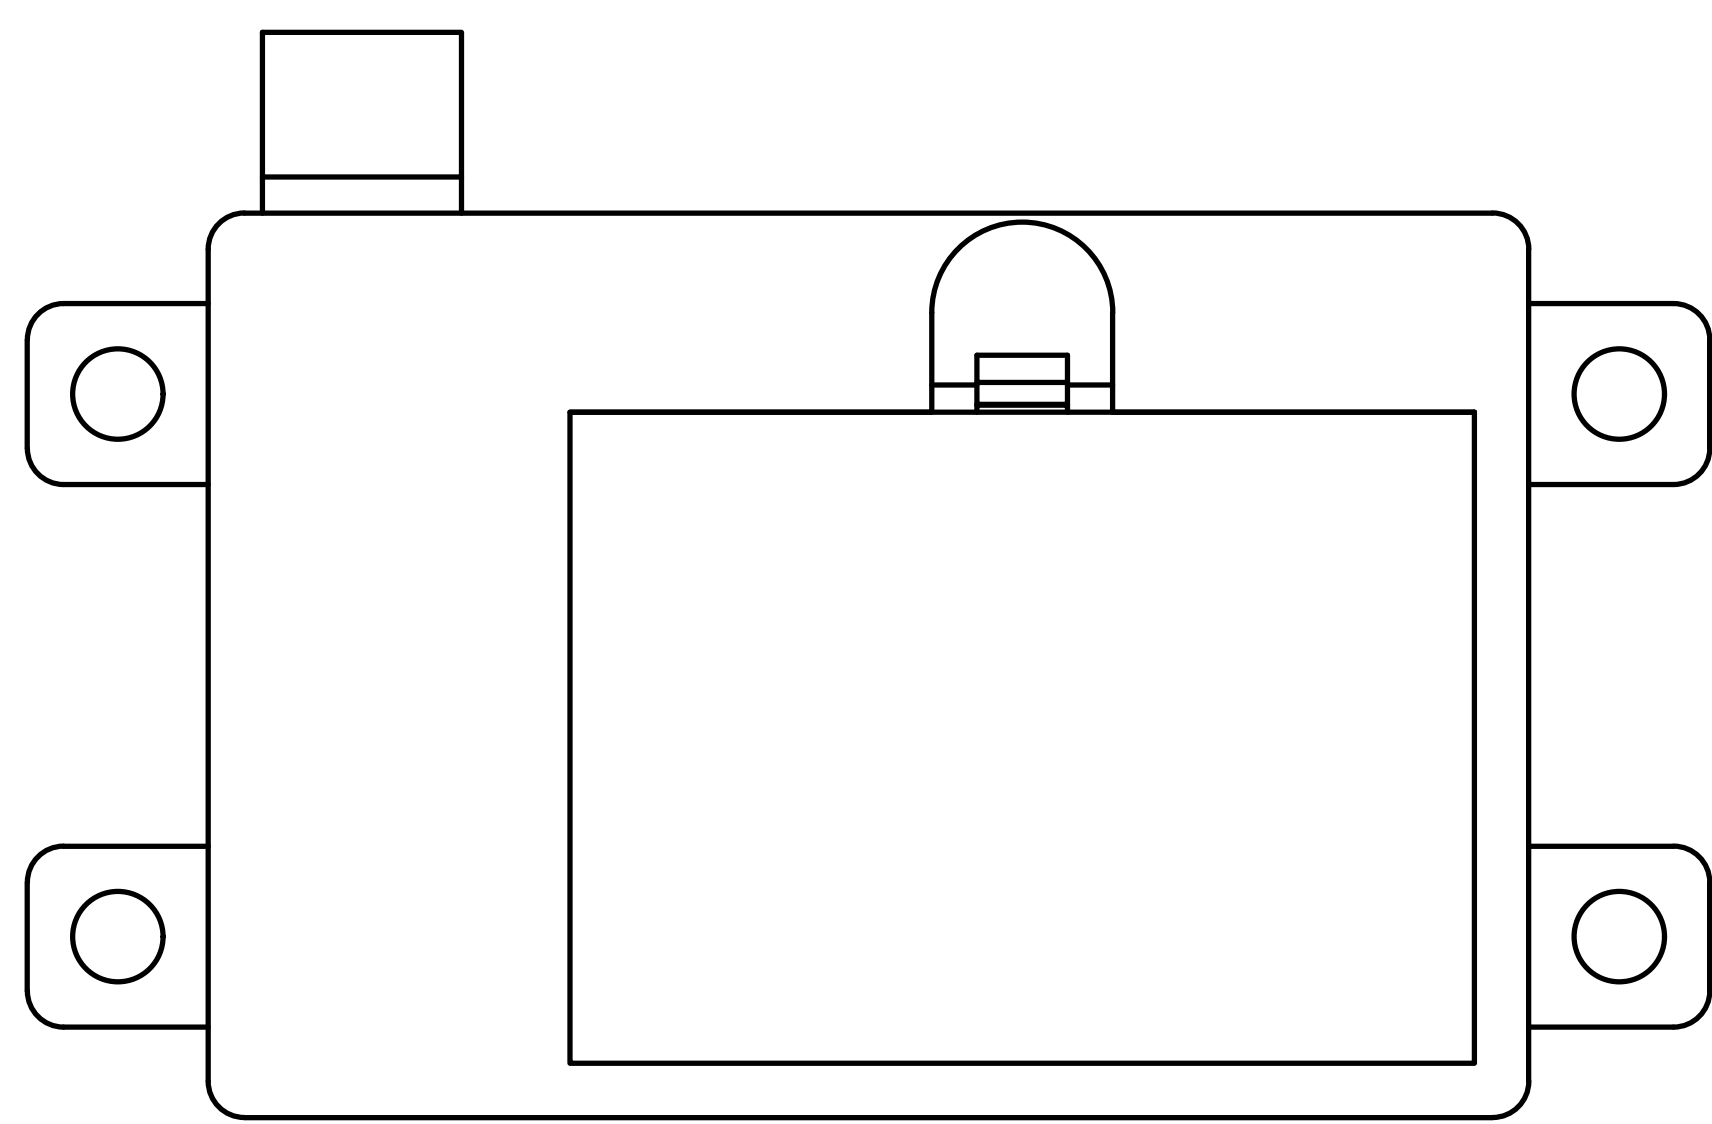


normal

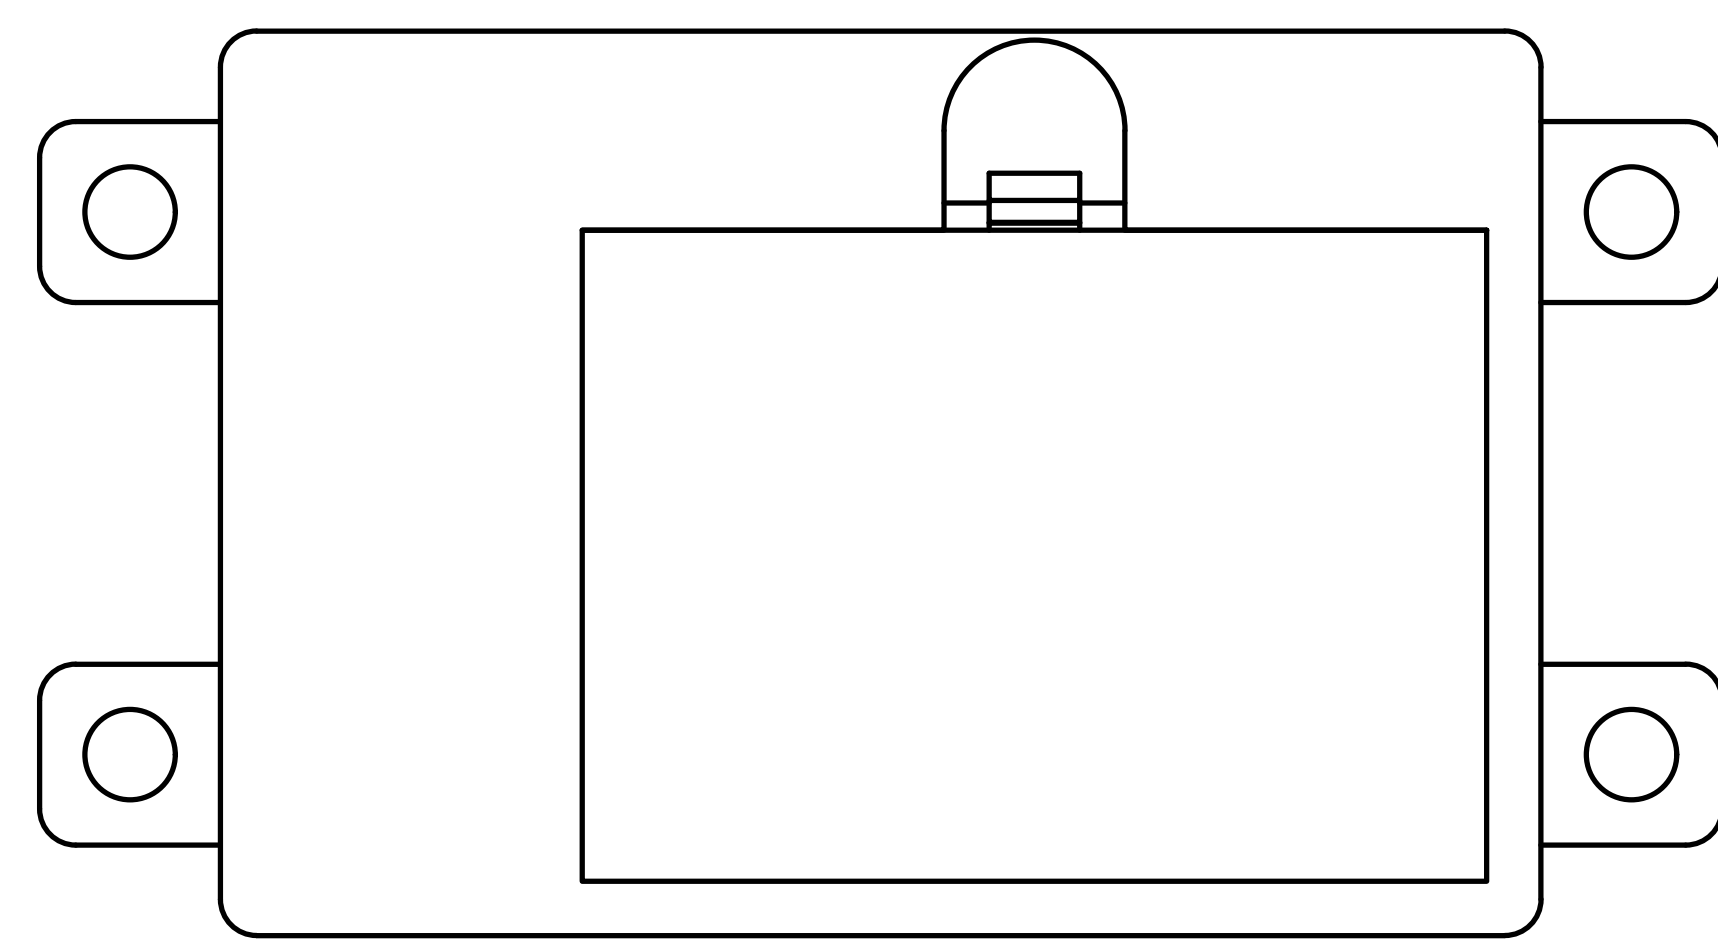 


abnormality

 Step 38

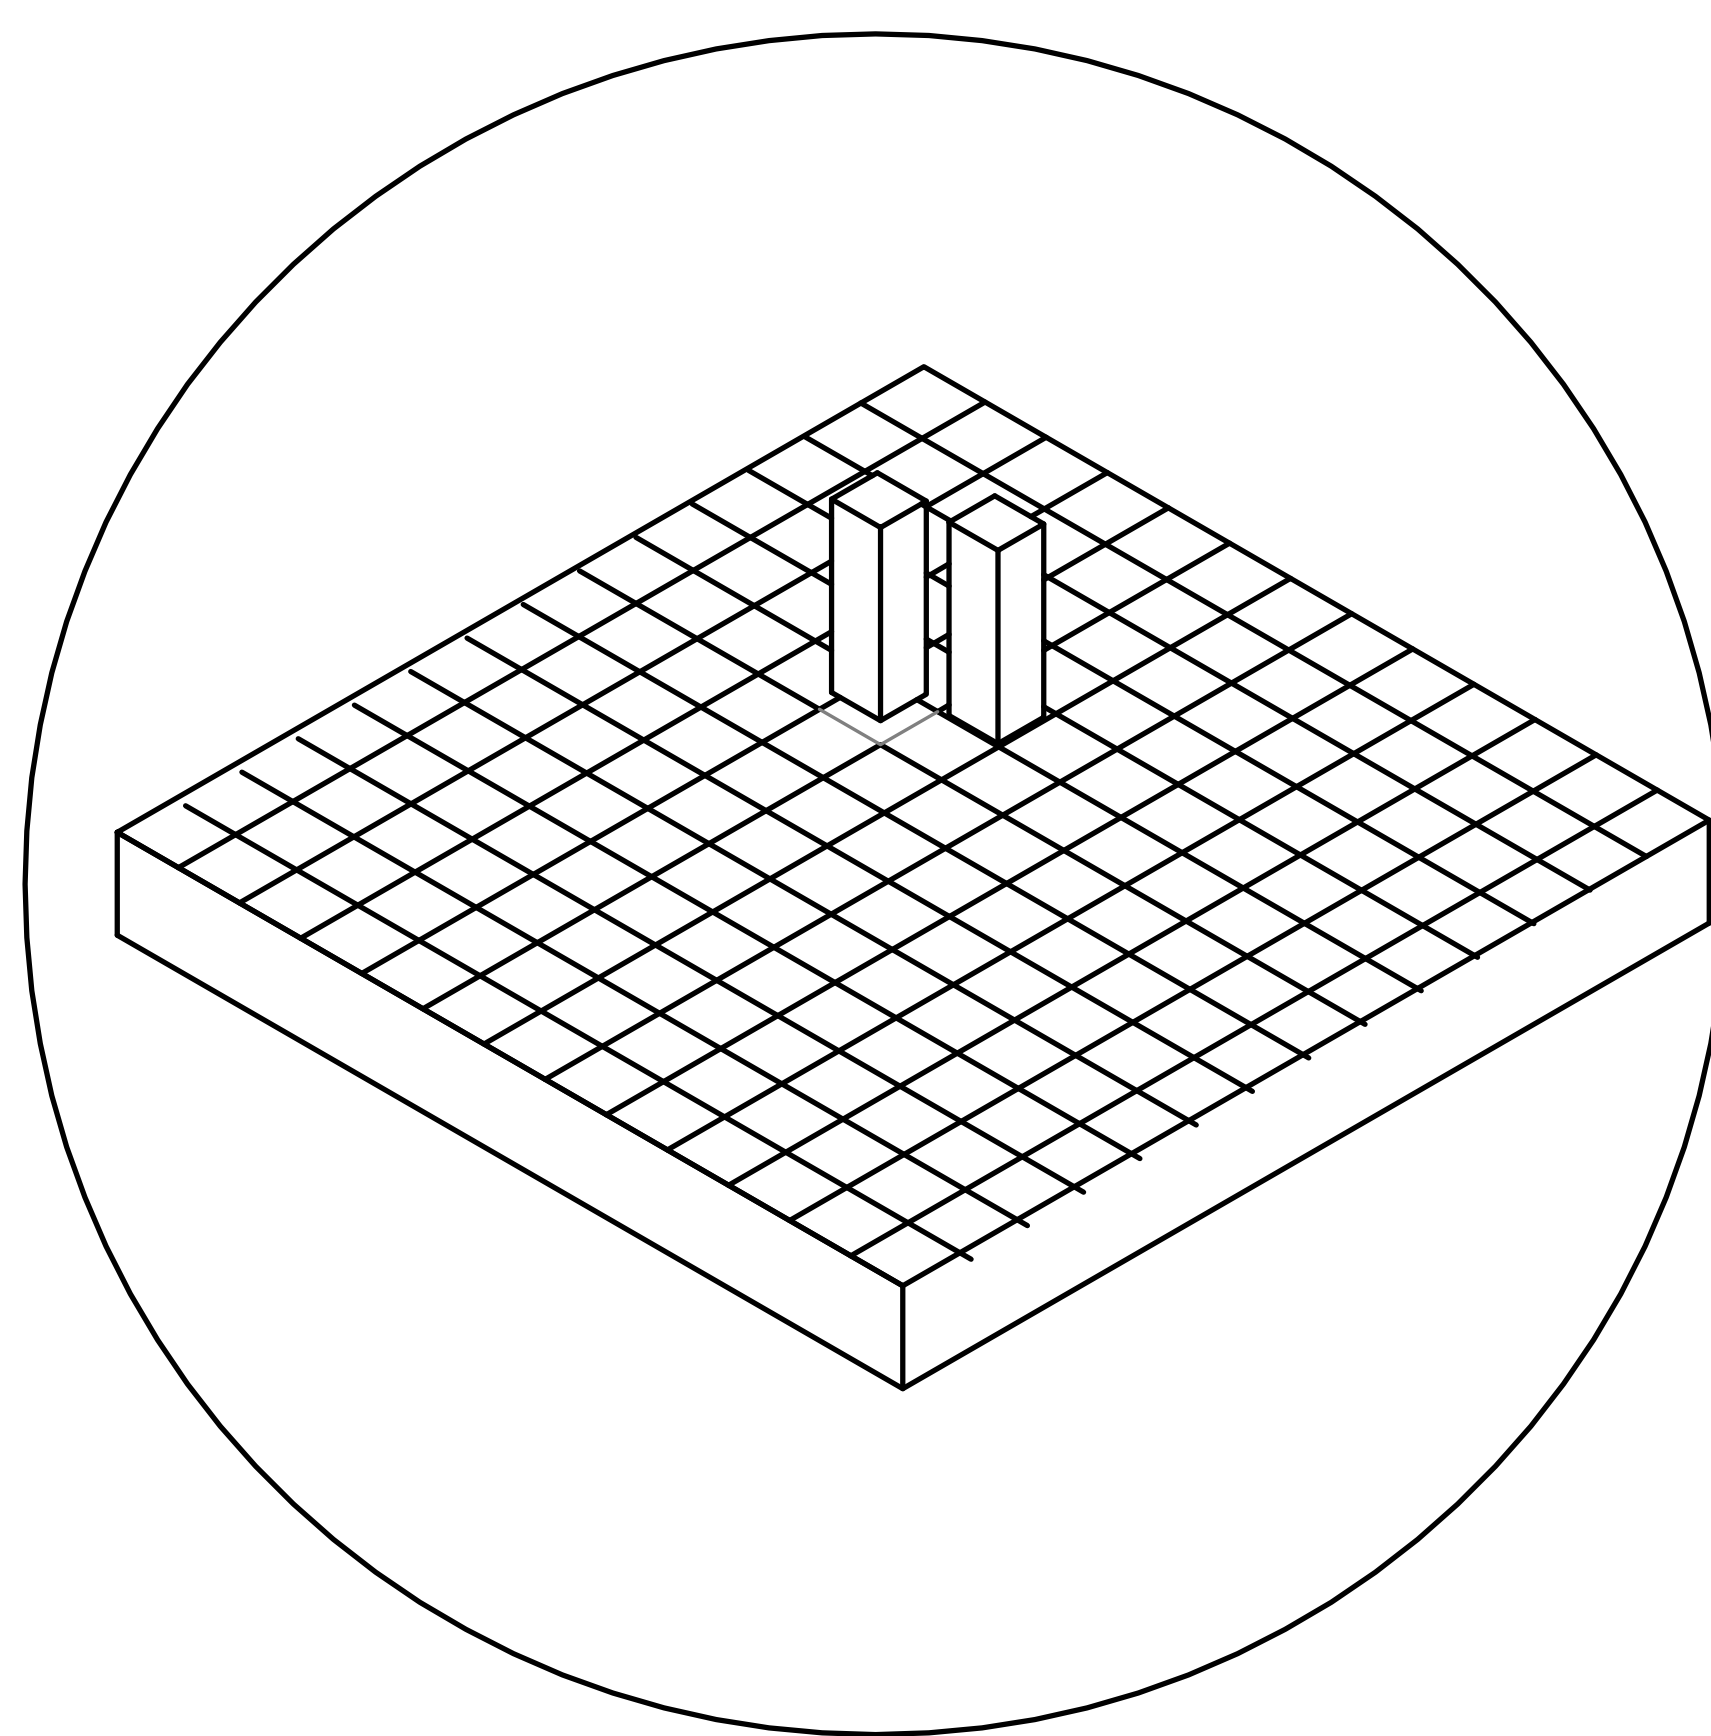


 Black pearl cotton can be molded into the desired shape by deducting small squares

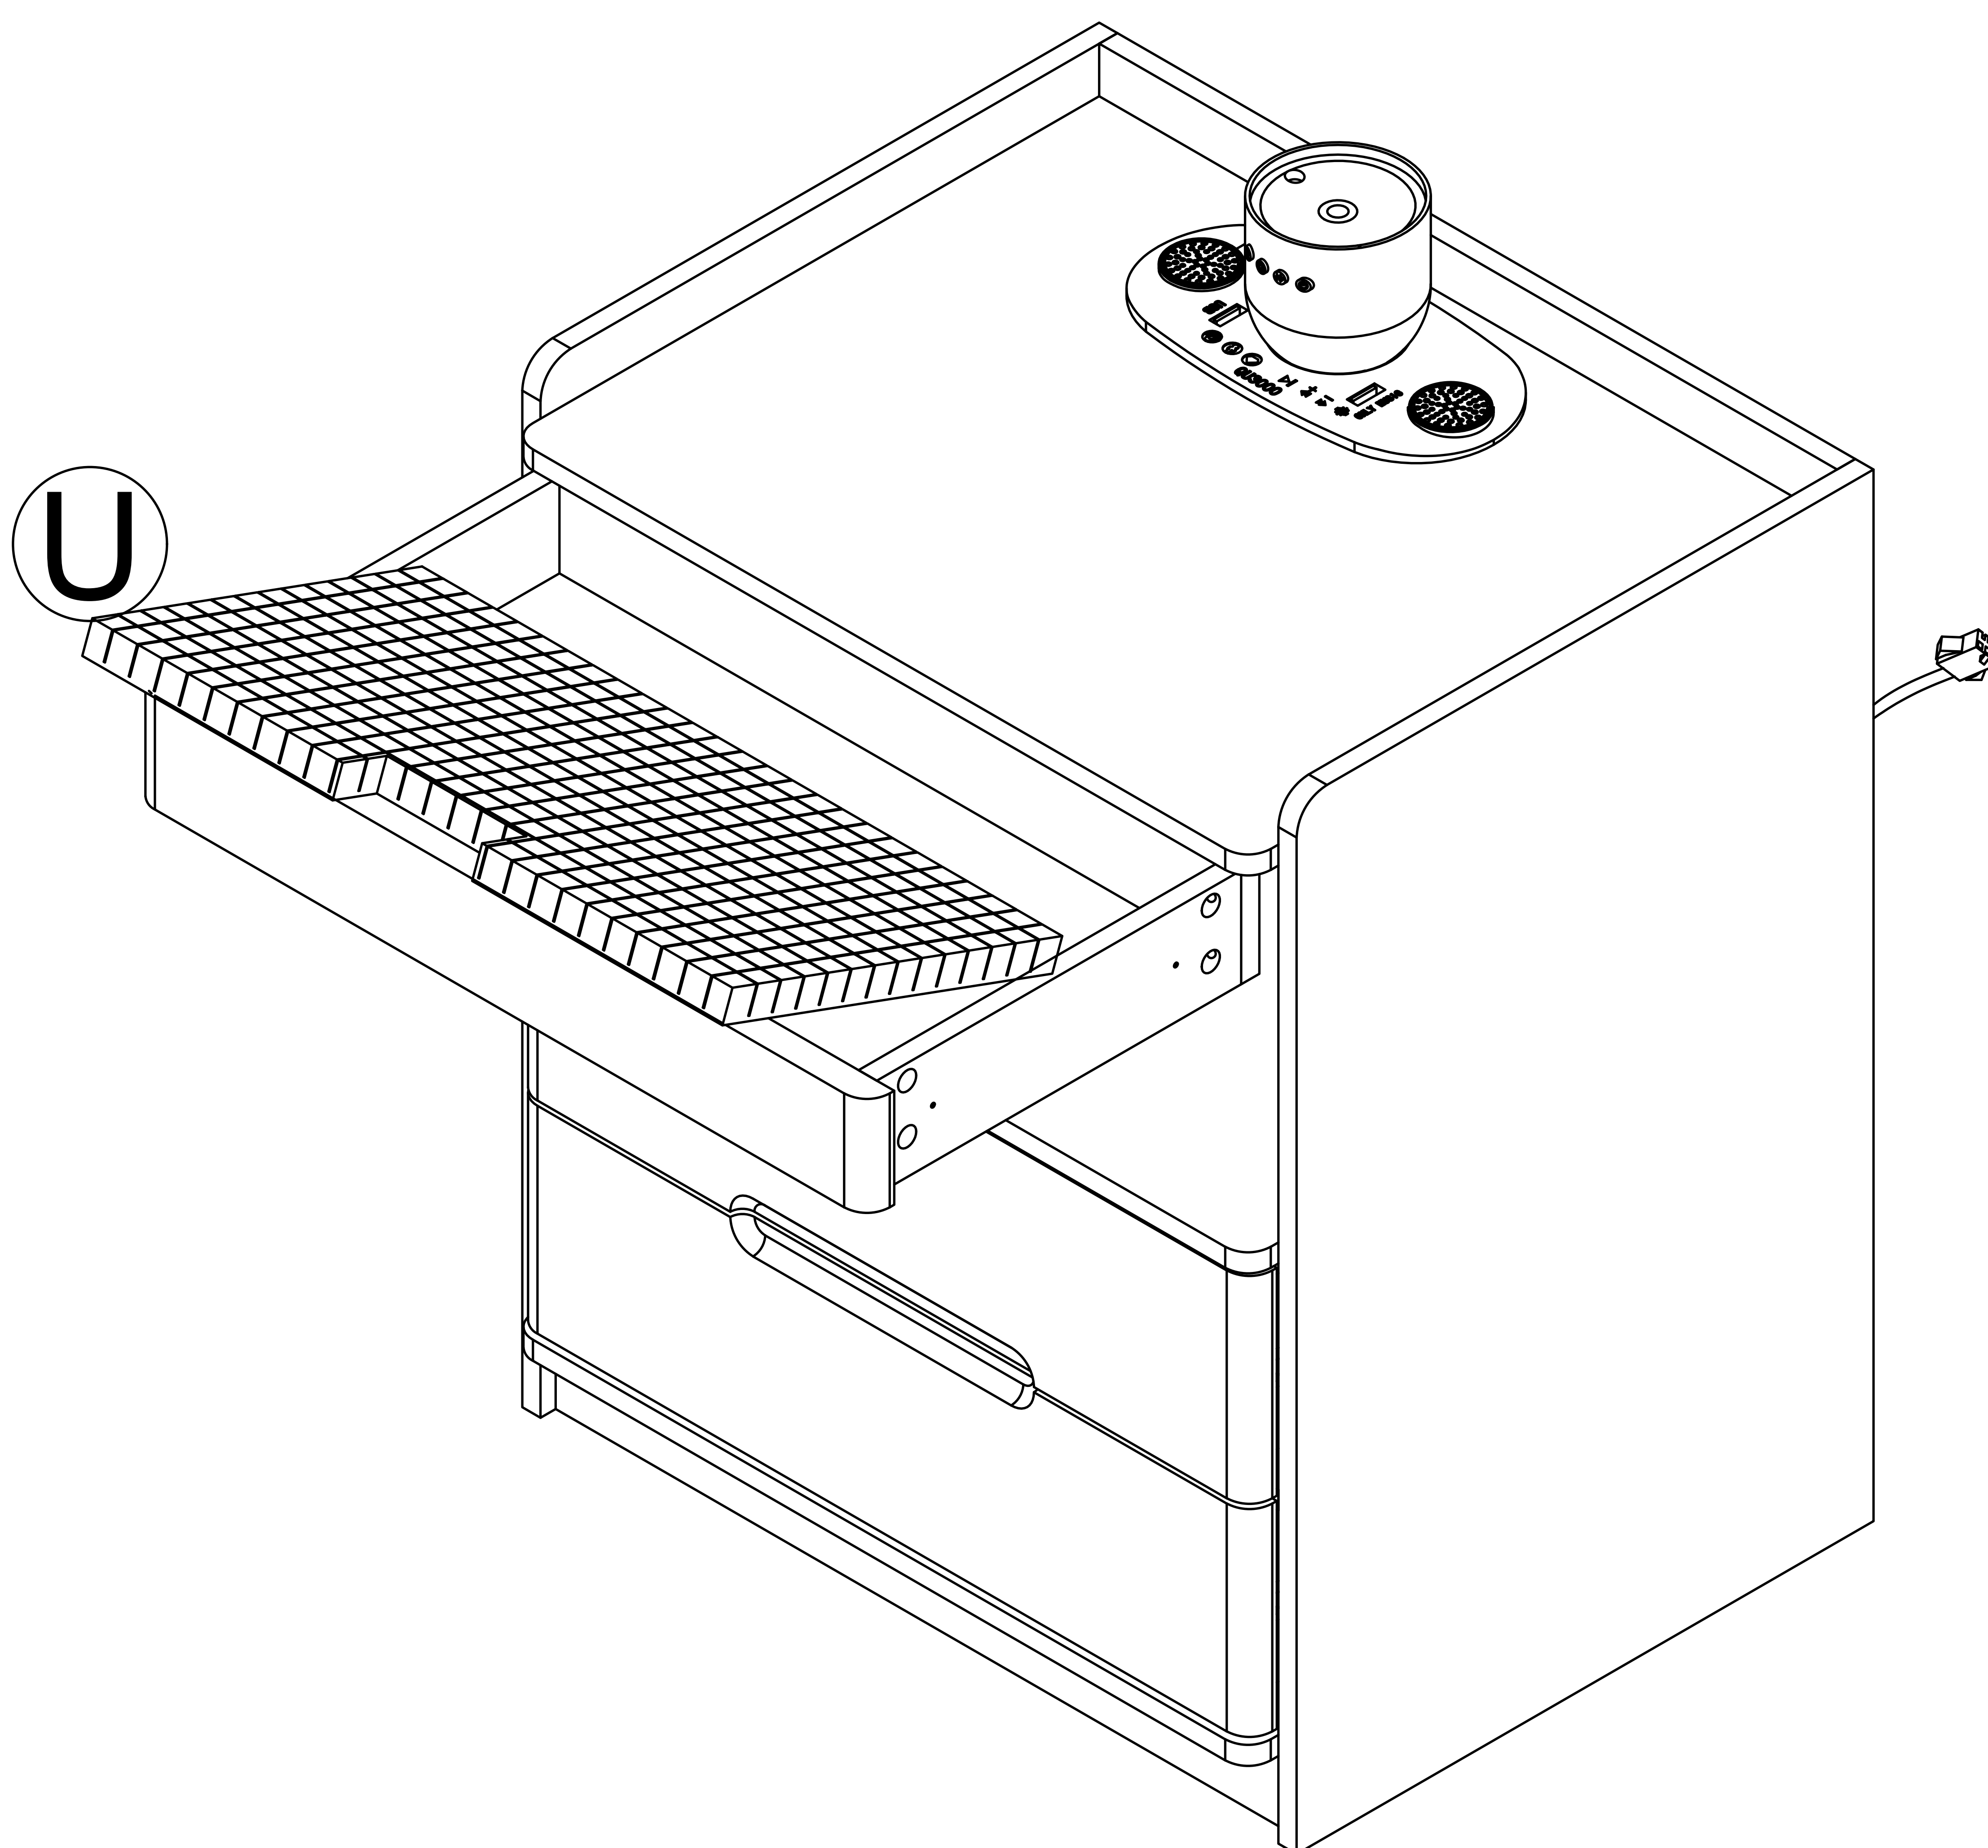


Step 39


 
8

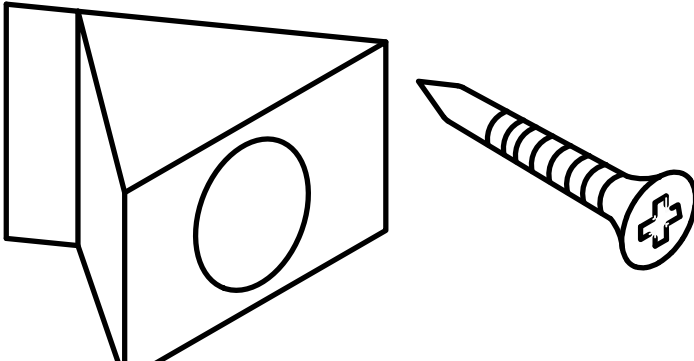



x4

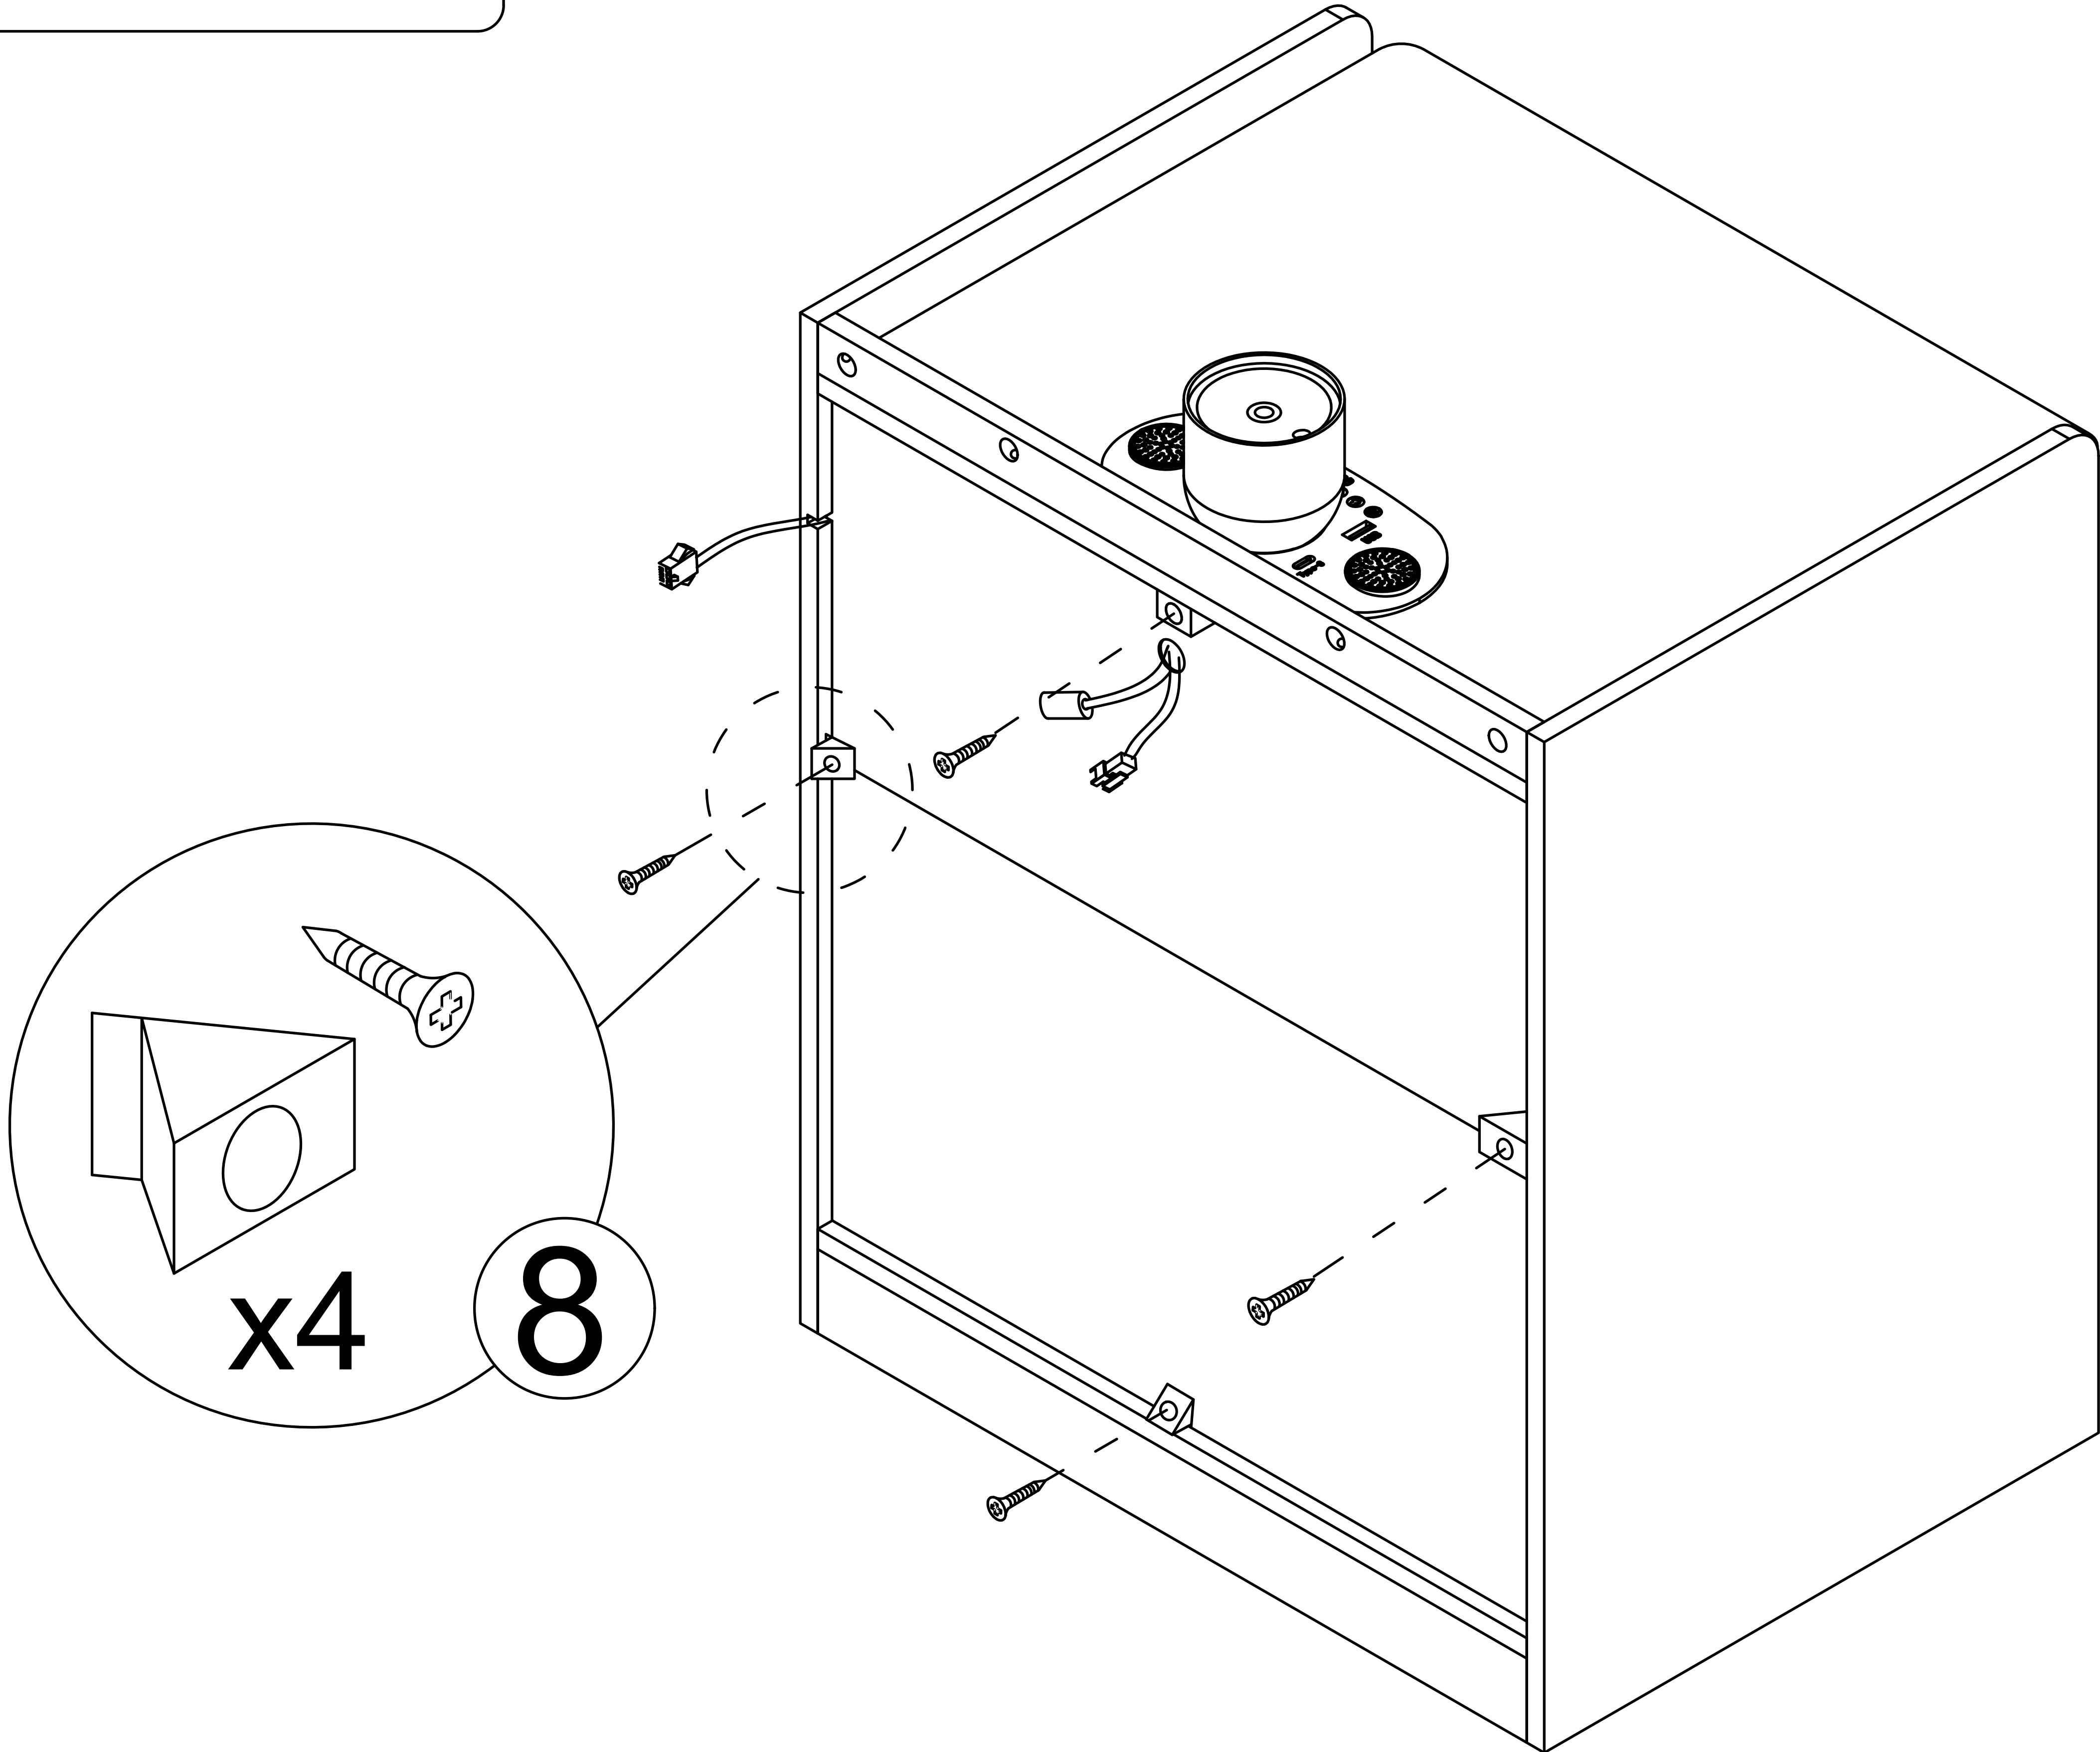 

  Step 40

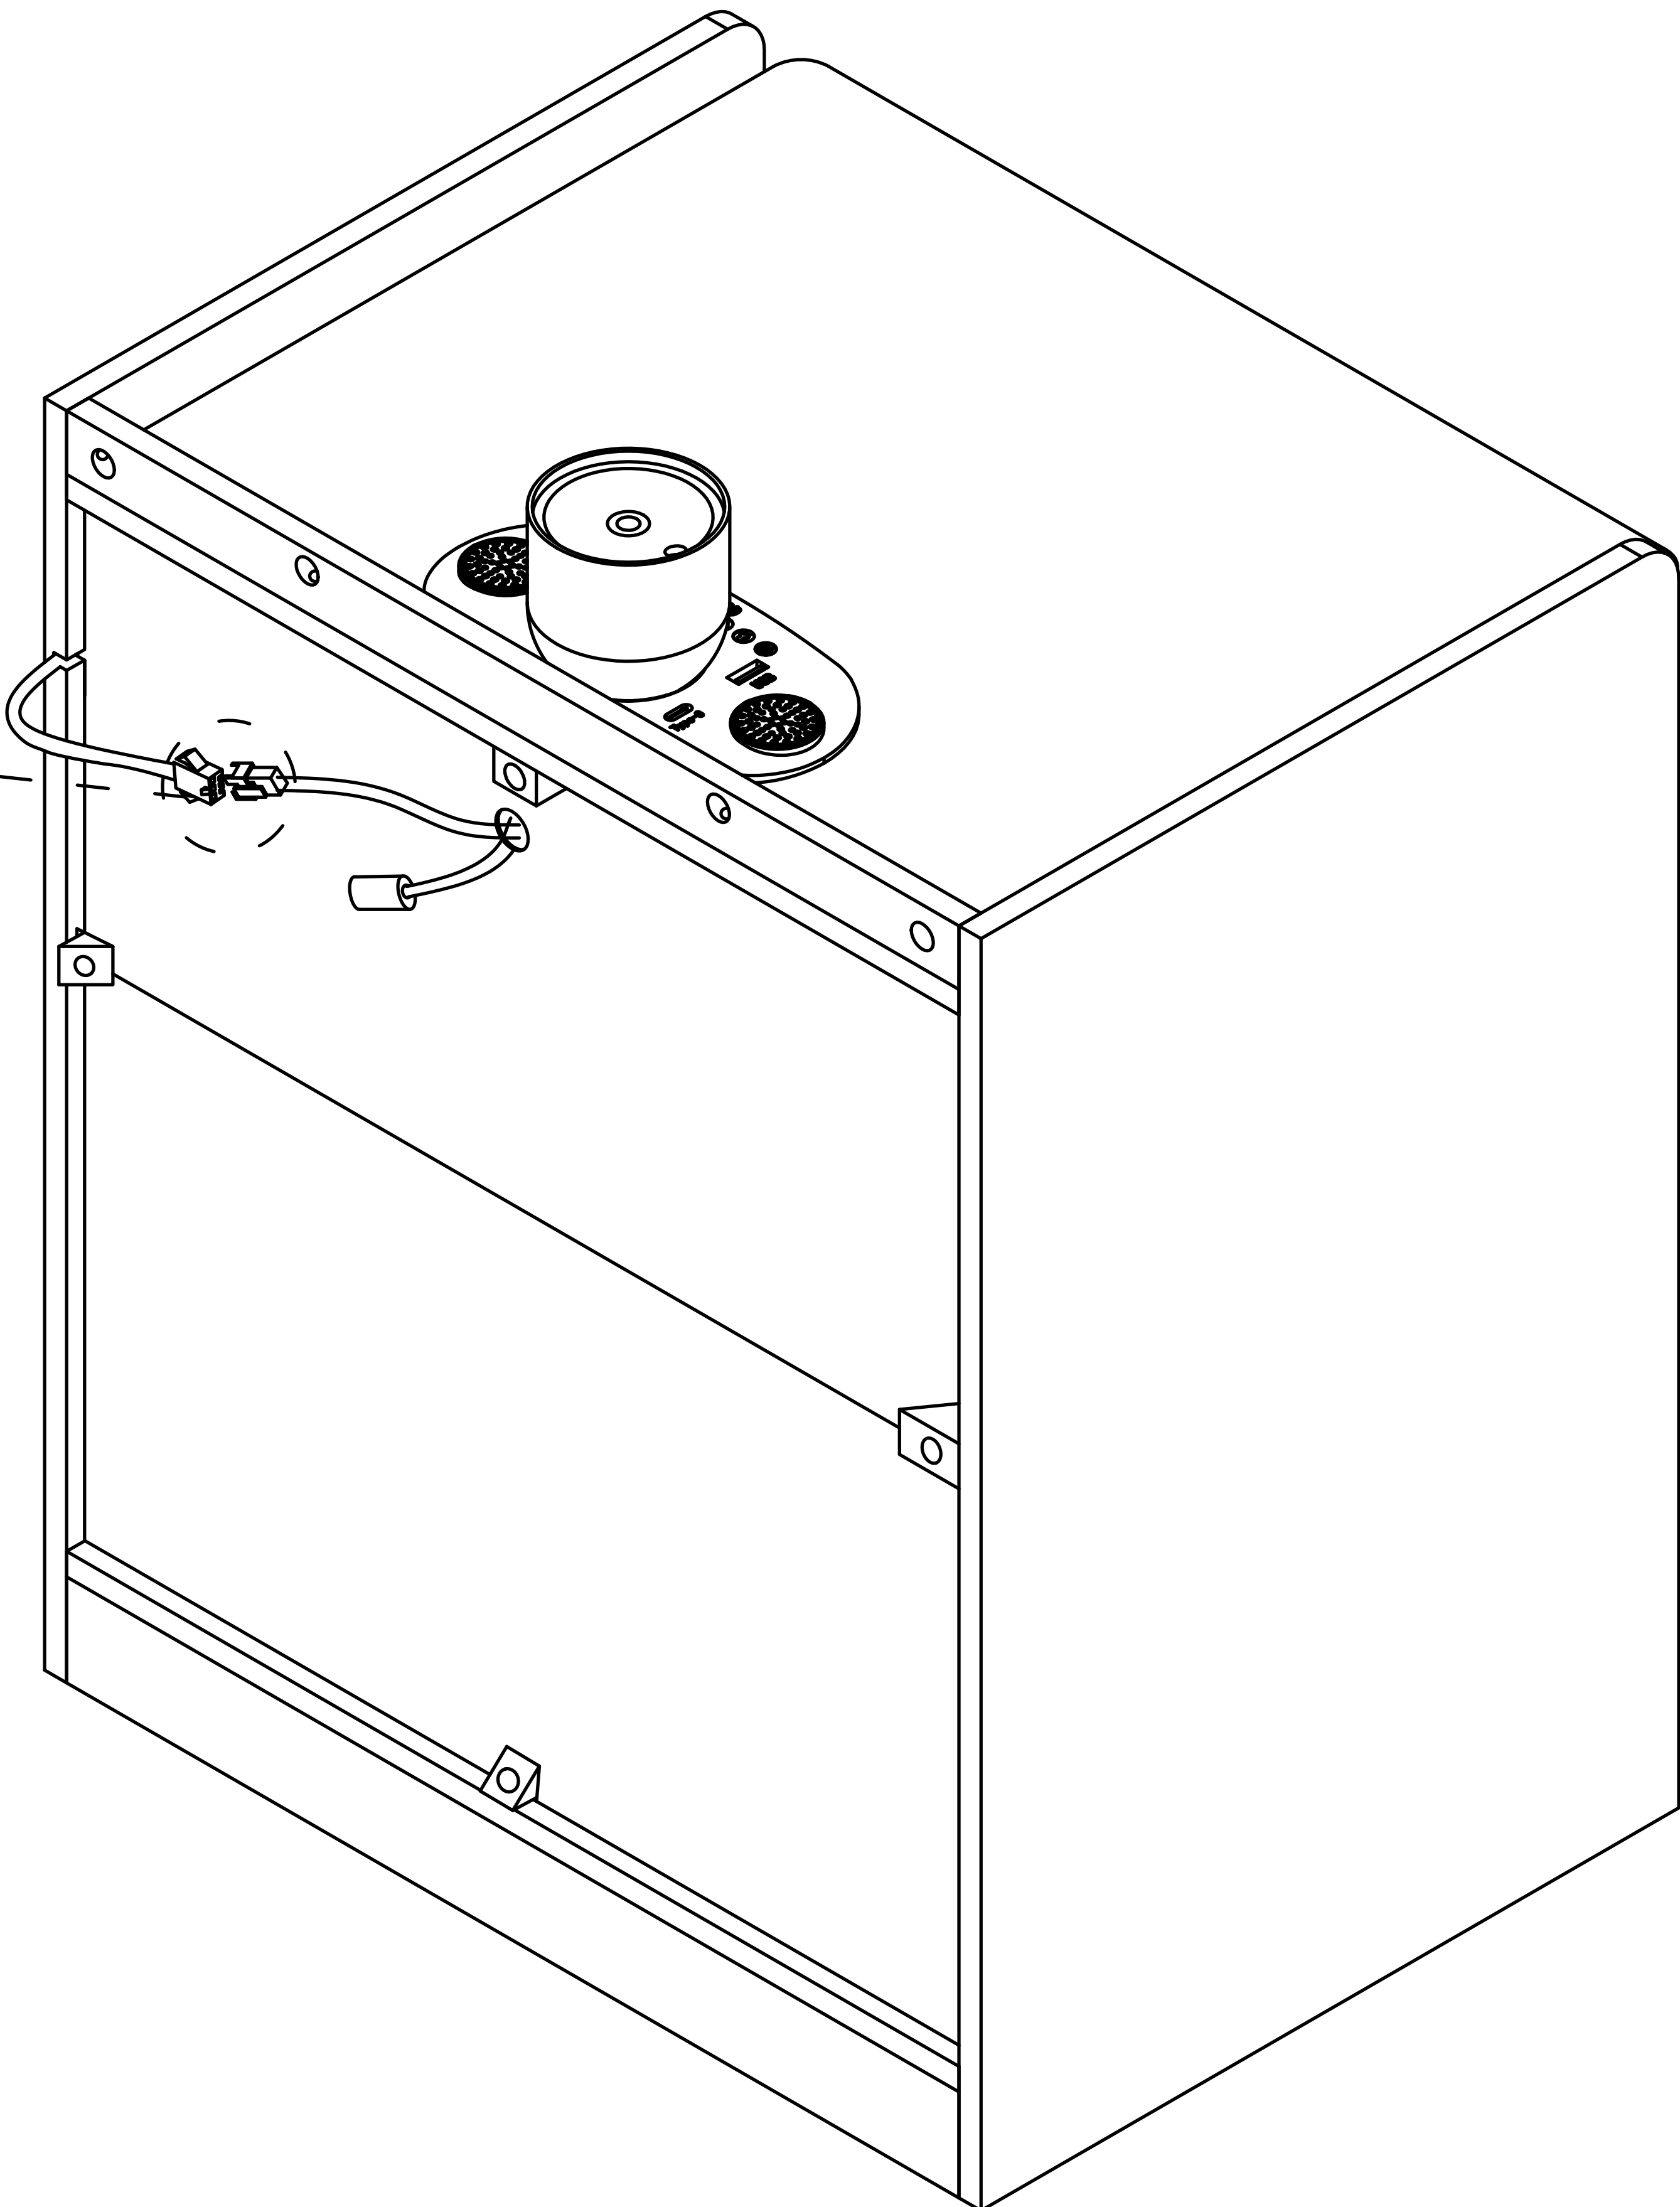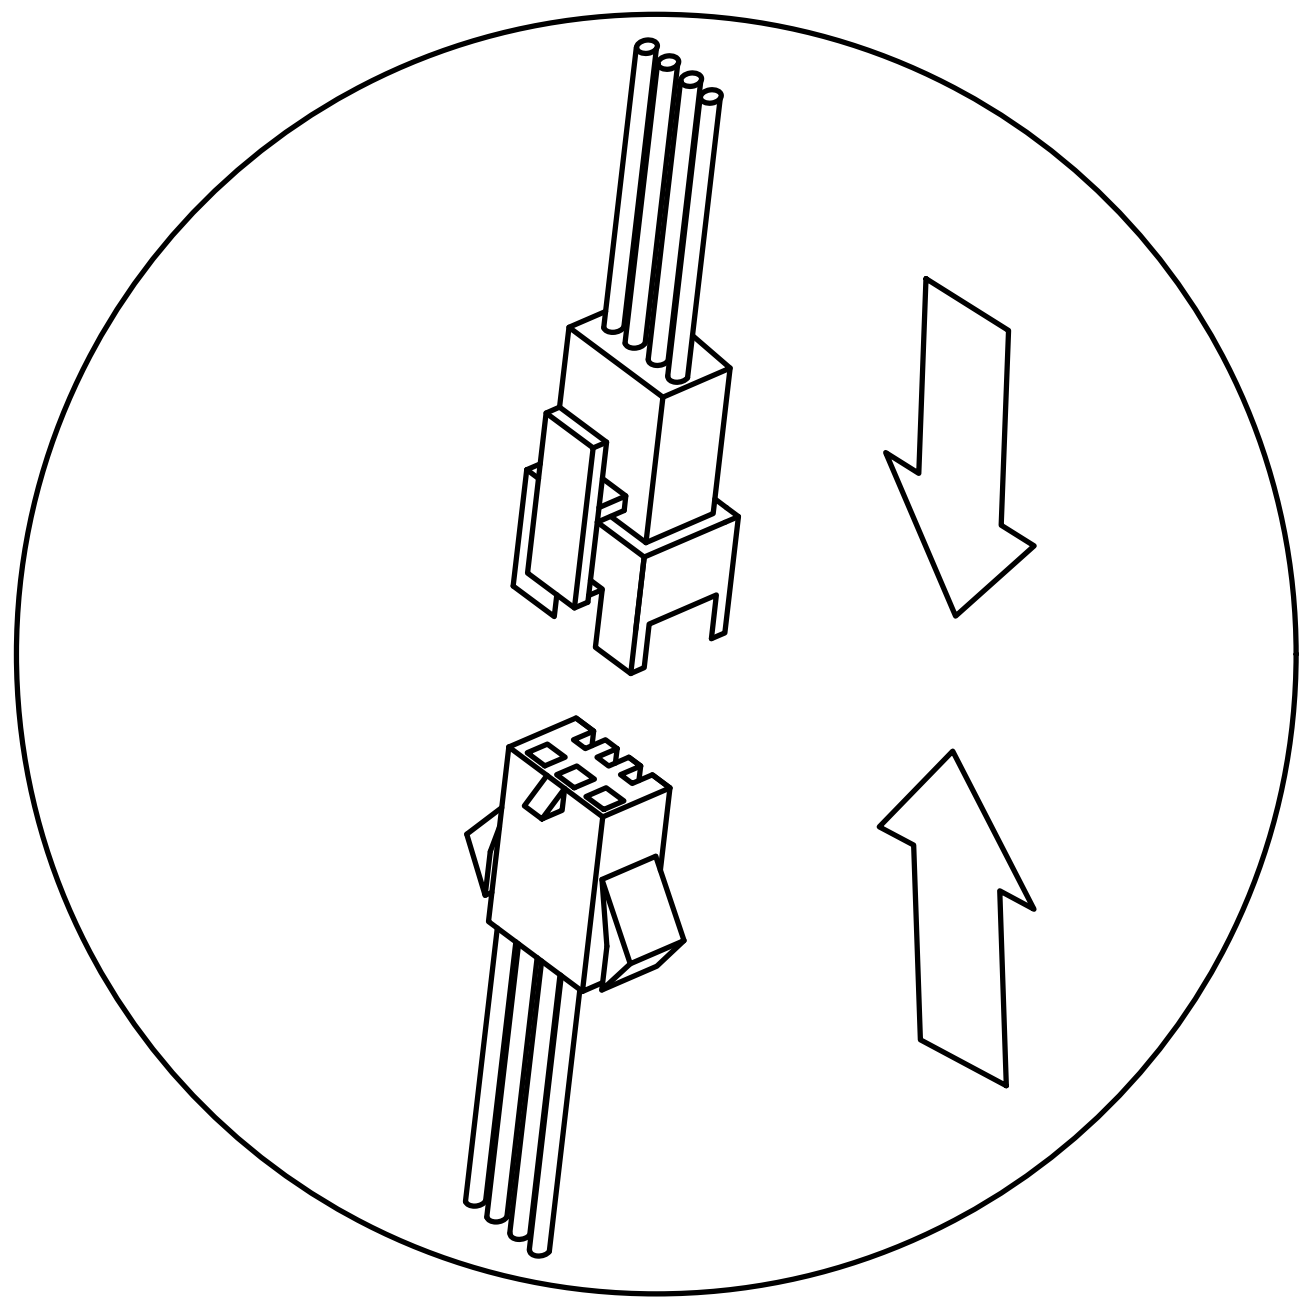

  Step 41

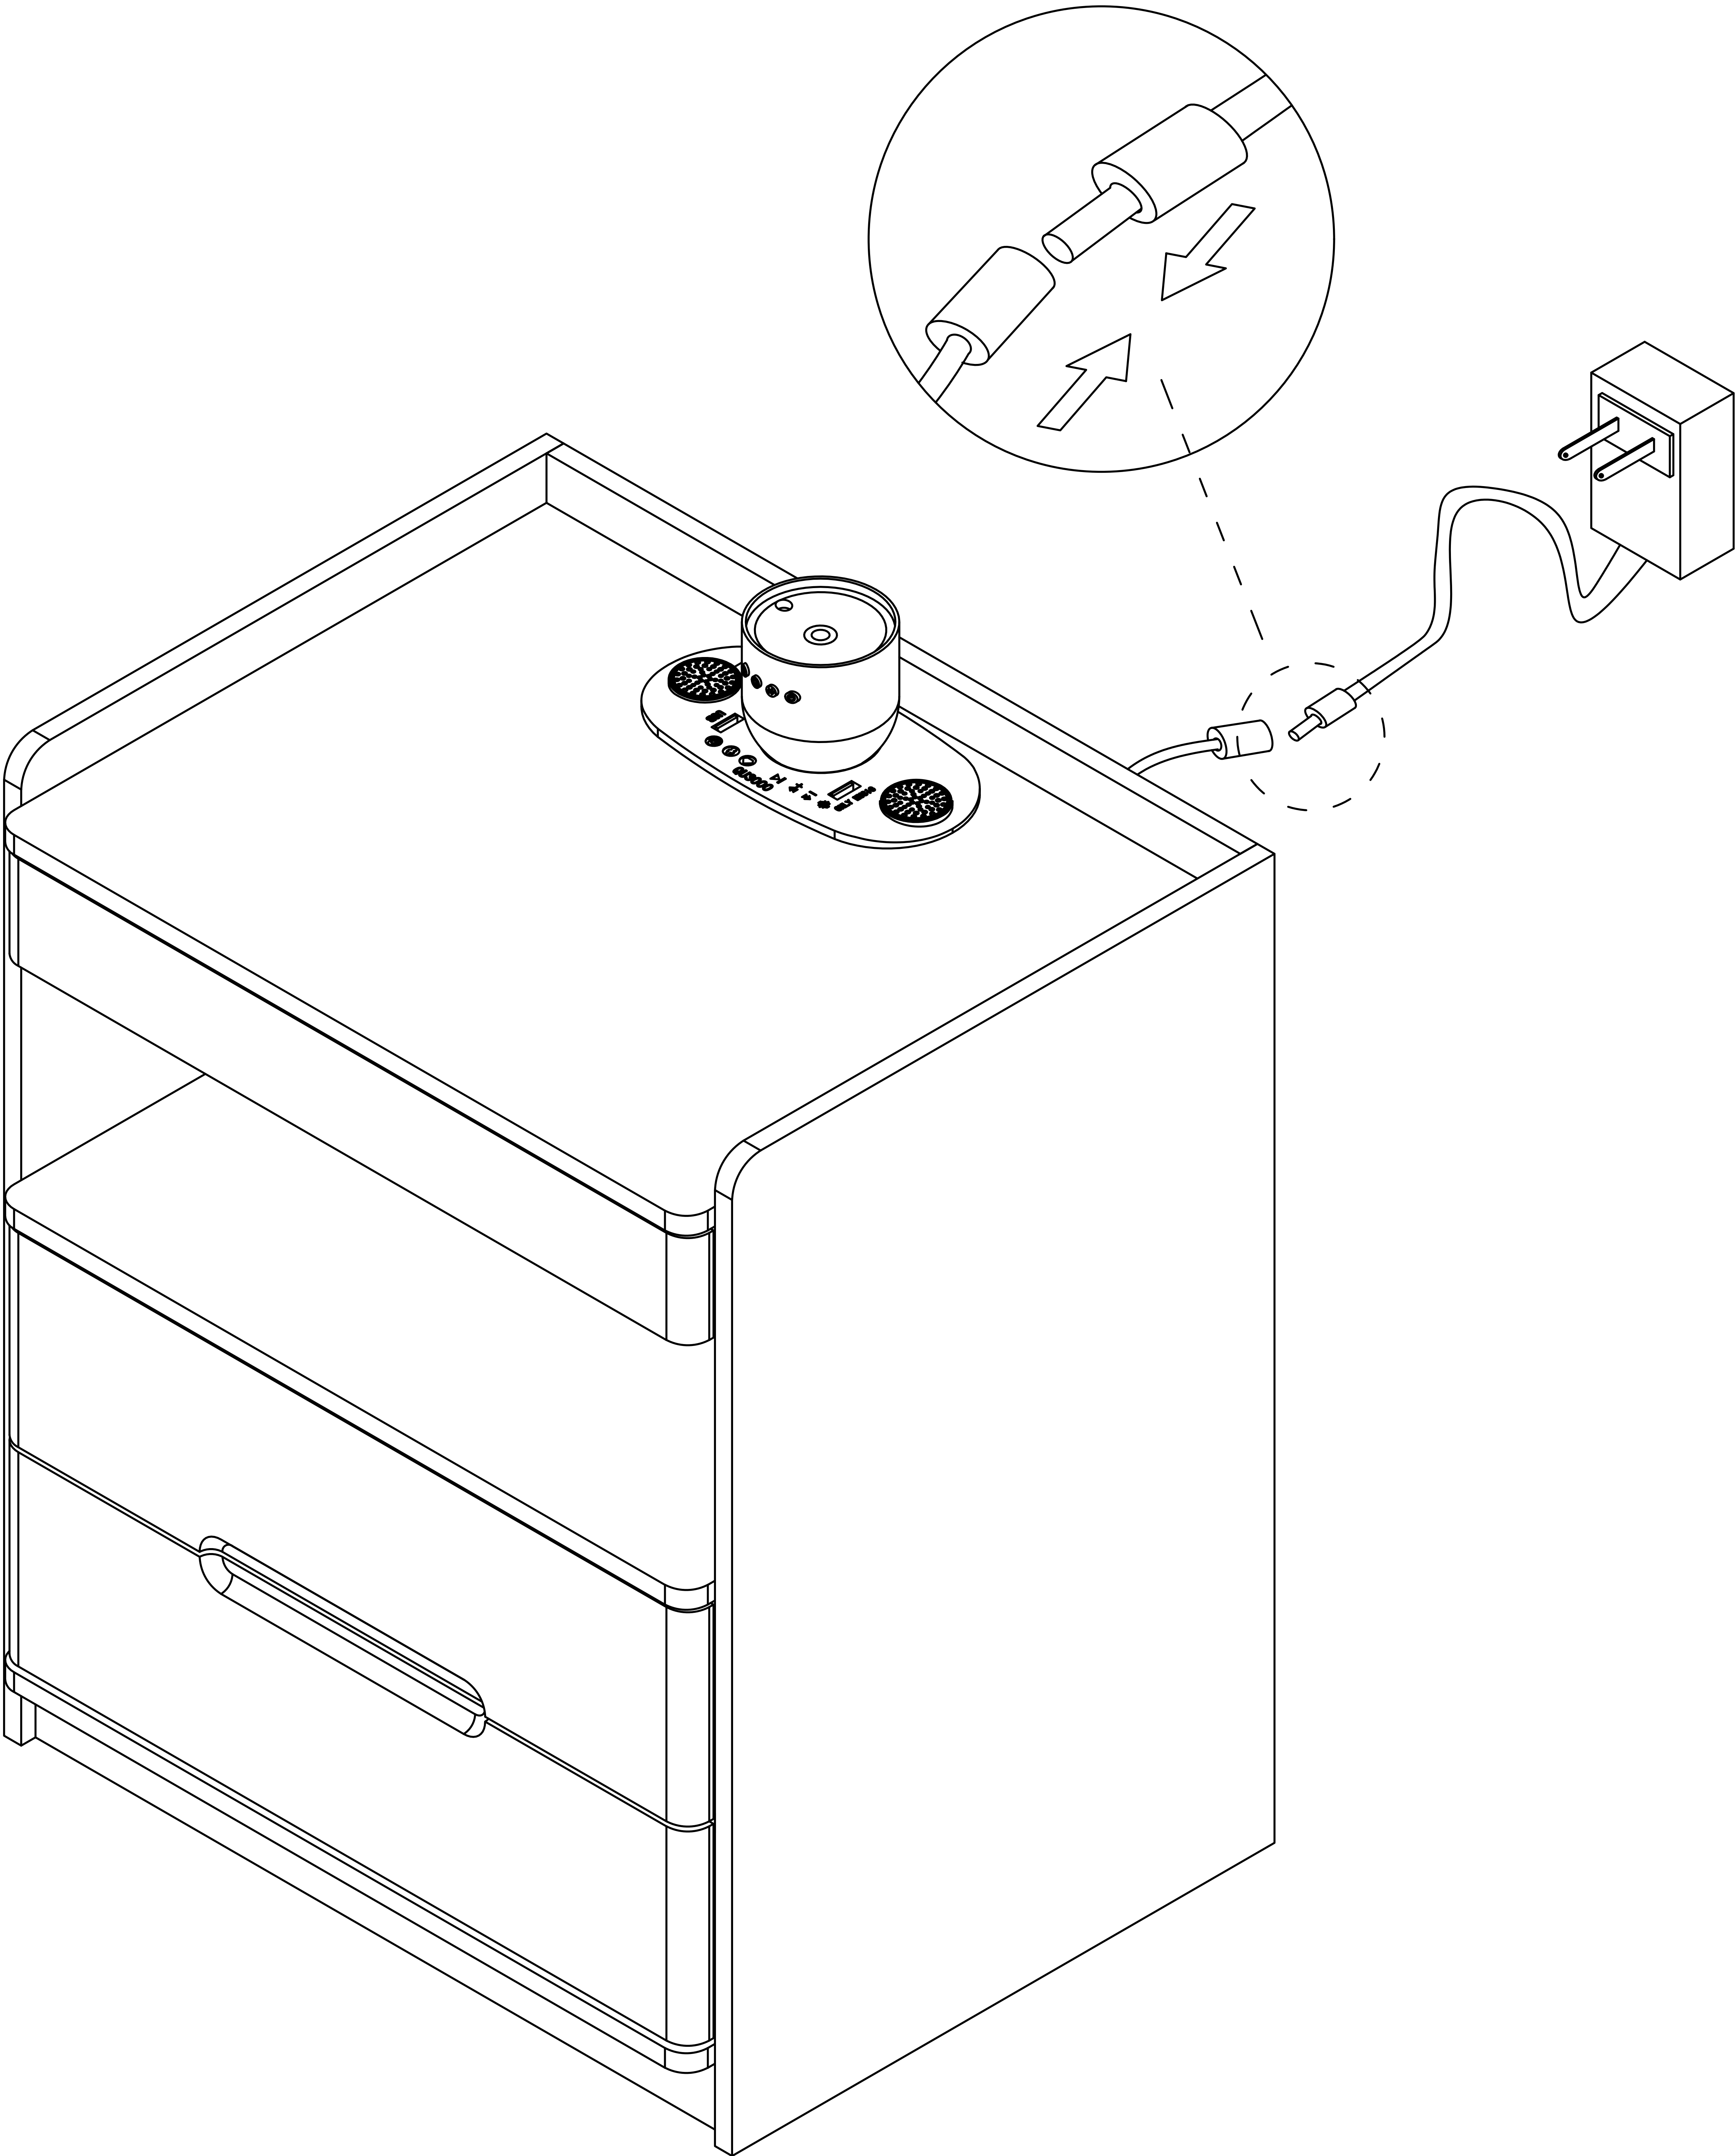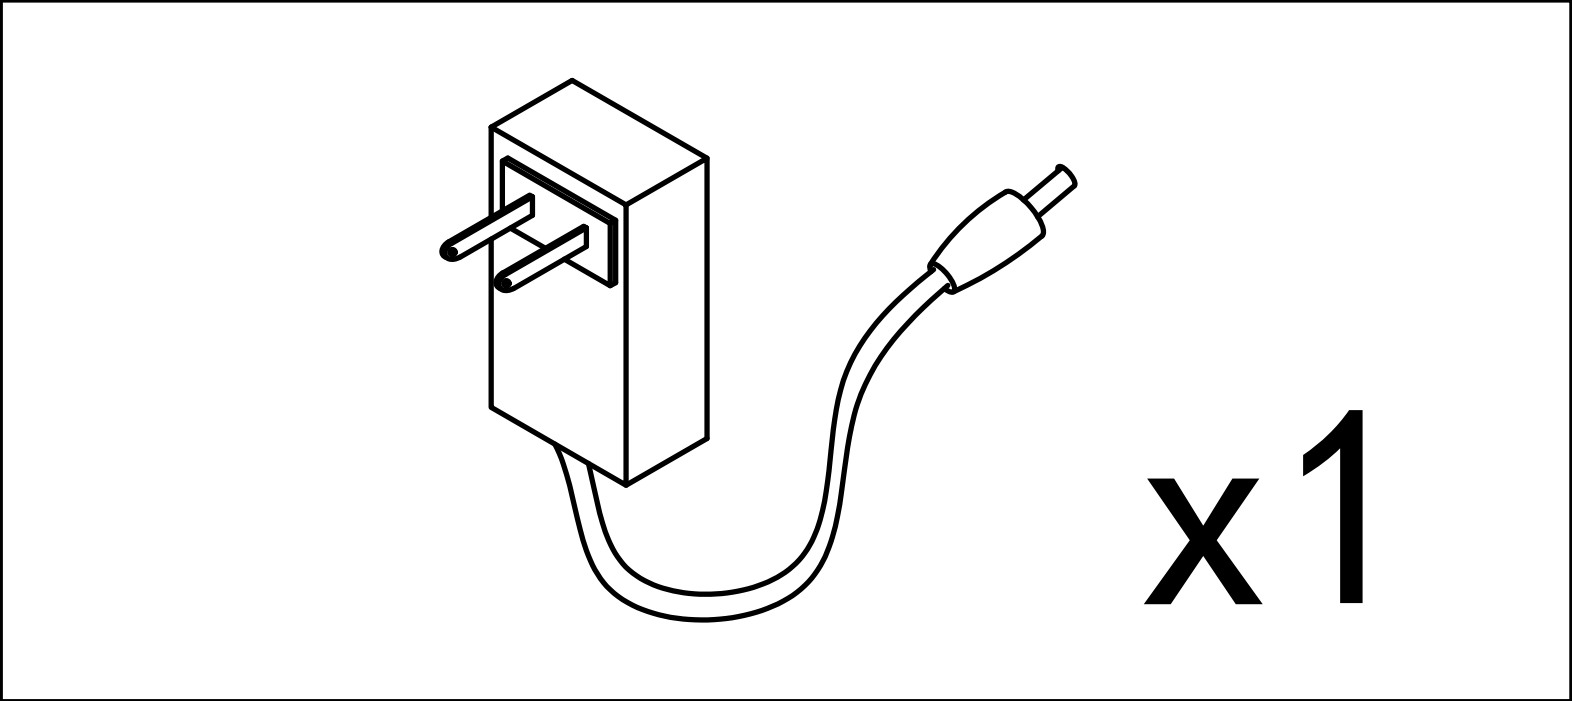

User's Guide

Thank you for purchasing this product.

To use this product, please connect it to a power source.

Please use if the product works normally after connecting to power.

If bubbles appear on the panel, remove the protective film.

Introduction

The box is an intelligent controller. It has 1 USB port and 1 type-C port and 1 only music, It has 11 buttons for turning the lights on/off and adjusting the brightness, turning the motion sensor on/off, controlling the music.

Operation



This button is for the aurora projection on/off.
Single Click: Turn the aurora projection on/off.



This button turns the star point projection on/off.
Single Click: Star Points on/off.



This button is used for switching between different nebula lighting effects.
Single Click: Switch to different nebula colors.
Long press: Close Nebula.



This button is used to control the nebula speed.
Single Click: Adjusting the Nebula Speed(Slow - Fast -Stop).



This touch button is the on/off switch for the product's light.
Single Click: Turn the light on/off.
Double-click: Change color.
Long press: Adjust brightness.



This touch button is used to turn on/off the induction function.
It can auto-turn on the light when people are close to the controller in 1 meters.
It can auto power off the light when the body is far away from the controller after 30 seconds.
Single Click: Human induction turns on (indicator light on).
Click again: Human induction turns off (indicator light off).



This touch button is the Dynamic Phantom Color Mode.
Single Click: Switch dynamic lighting mode.

This touch button is the switch for audio device.

After long-pressing to power on, (a prompt tone indicates successful power-on) .



your phone will detect a Bluetooth device named “QU3000” ,Simply tap to connect to this device.
Once connected, you can play music from your phone through the device.

Long-press the button to turn off the audio device when not in use.

(a prompt tone will indicate successful shutdown).

Please note: Do not set the volume too high when using the speaker, as excessive volume may cause distortion.
It is recommended to set the volume to around 50% for optimal performance.

Long press: Volume up



Long press: Volume down

Single Click: Previous song



Single Click: Next song



This touch button is used to switch between Bluetooth mode and USB mode.

Single Click: Switch to USB mode.

Click again: Switch to Bluetooth mode.



Only music

This port is only for playing songs from a USB drive and cannot be used for charging.



Close



Open

Give away a USB flash drive



Do not shake to prevent wire breakage.

Switch the lighting effect

Speed adjustment

Star Point Mode

Type-c output port

Aurora Projection on/off

Please note: Do not set the volume too high when using the speaker, as excessive volume may cause distortion. It is recommended to set the volume to around 50% for optimal performance.

Only music

USB/Bluetooth Mode Switch

Song switch

Dynamic Phantom Color

Audio device switch

Induction function

Product light switch

 
USB output port

⚠ ATTENTION PLEASE


1. If there is no touch response suddenly, Re-plug the power to reset the touch static electricity.
2. If you have any questions when installing, please feel free to contact us. Thank you.



ATTENTION PLEASE


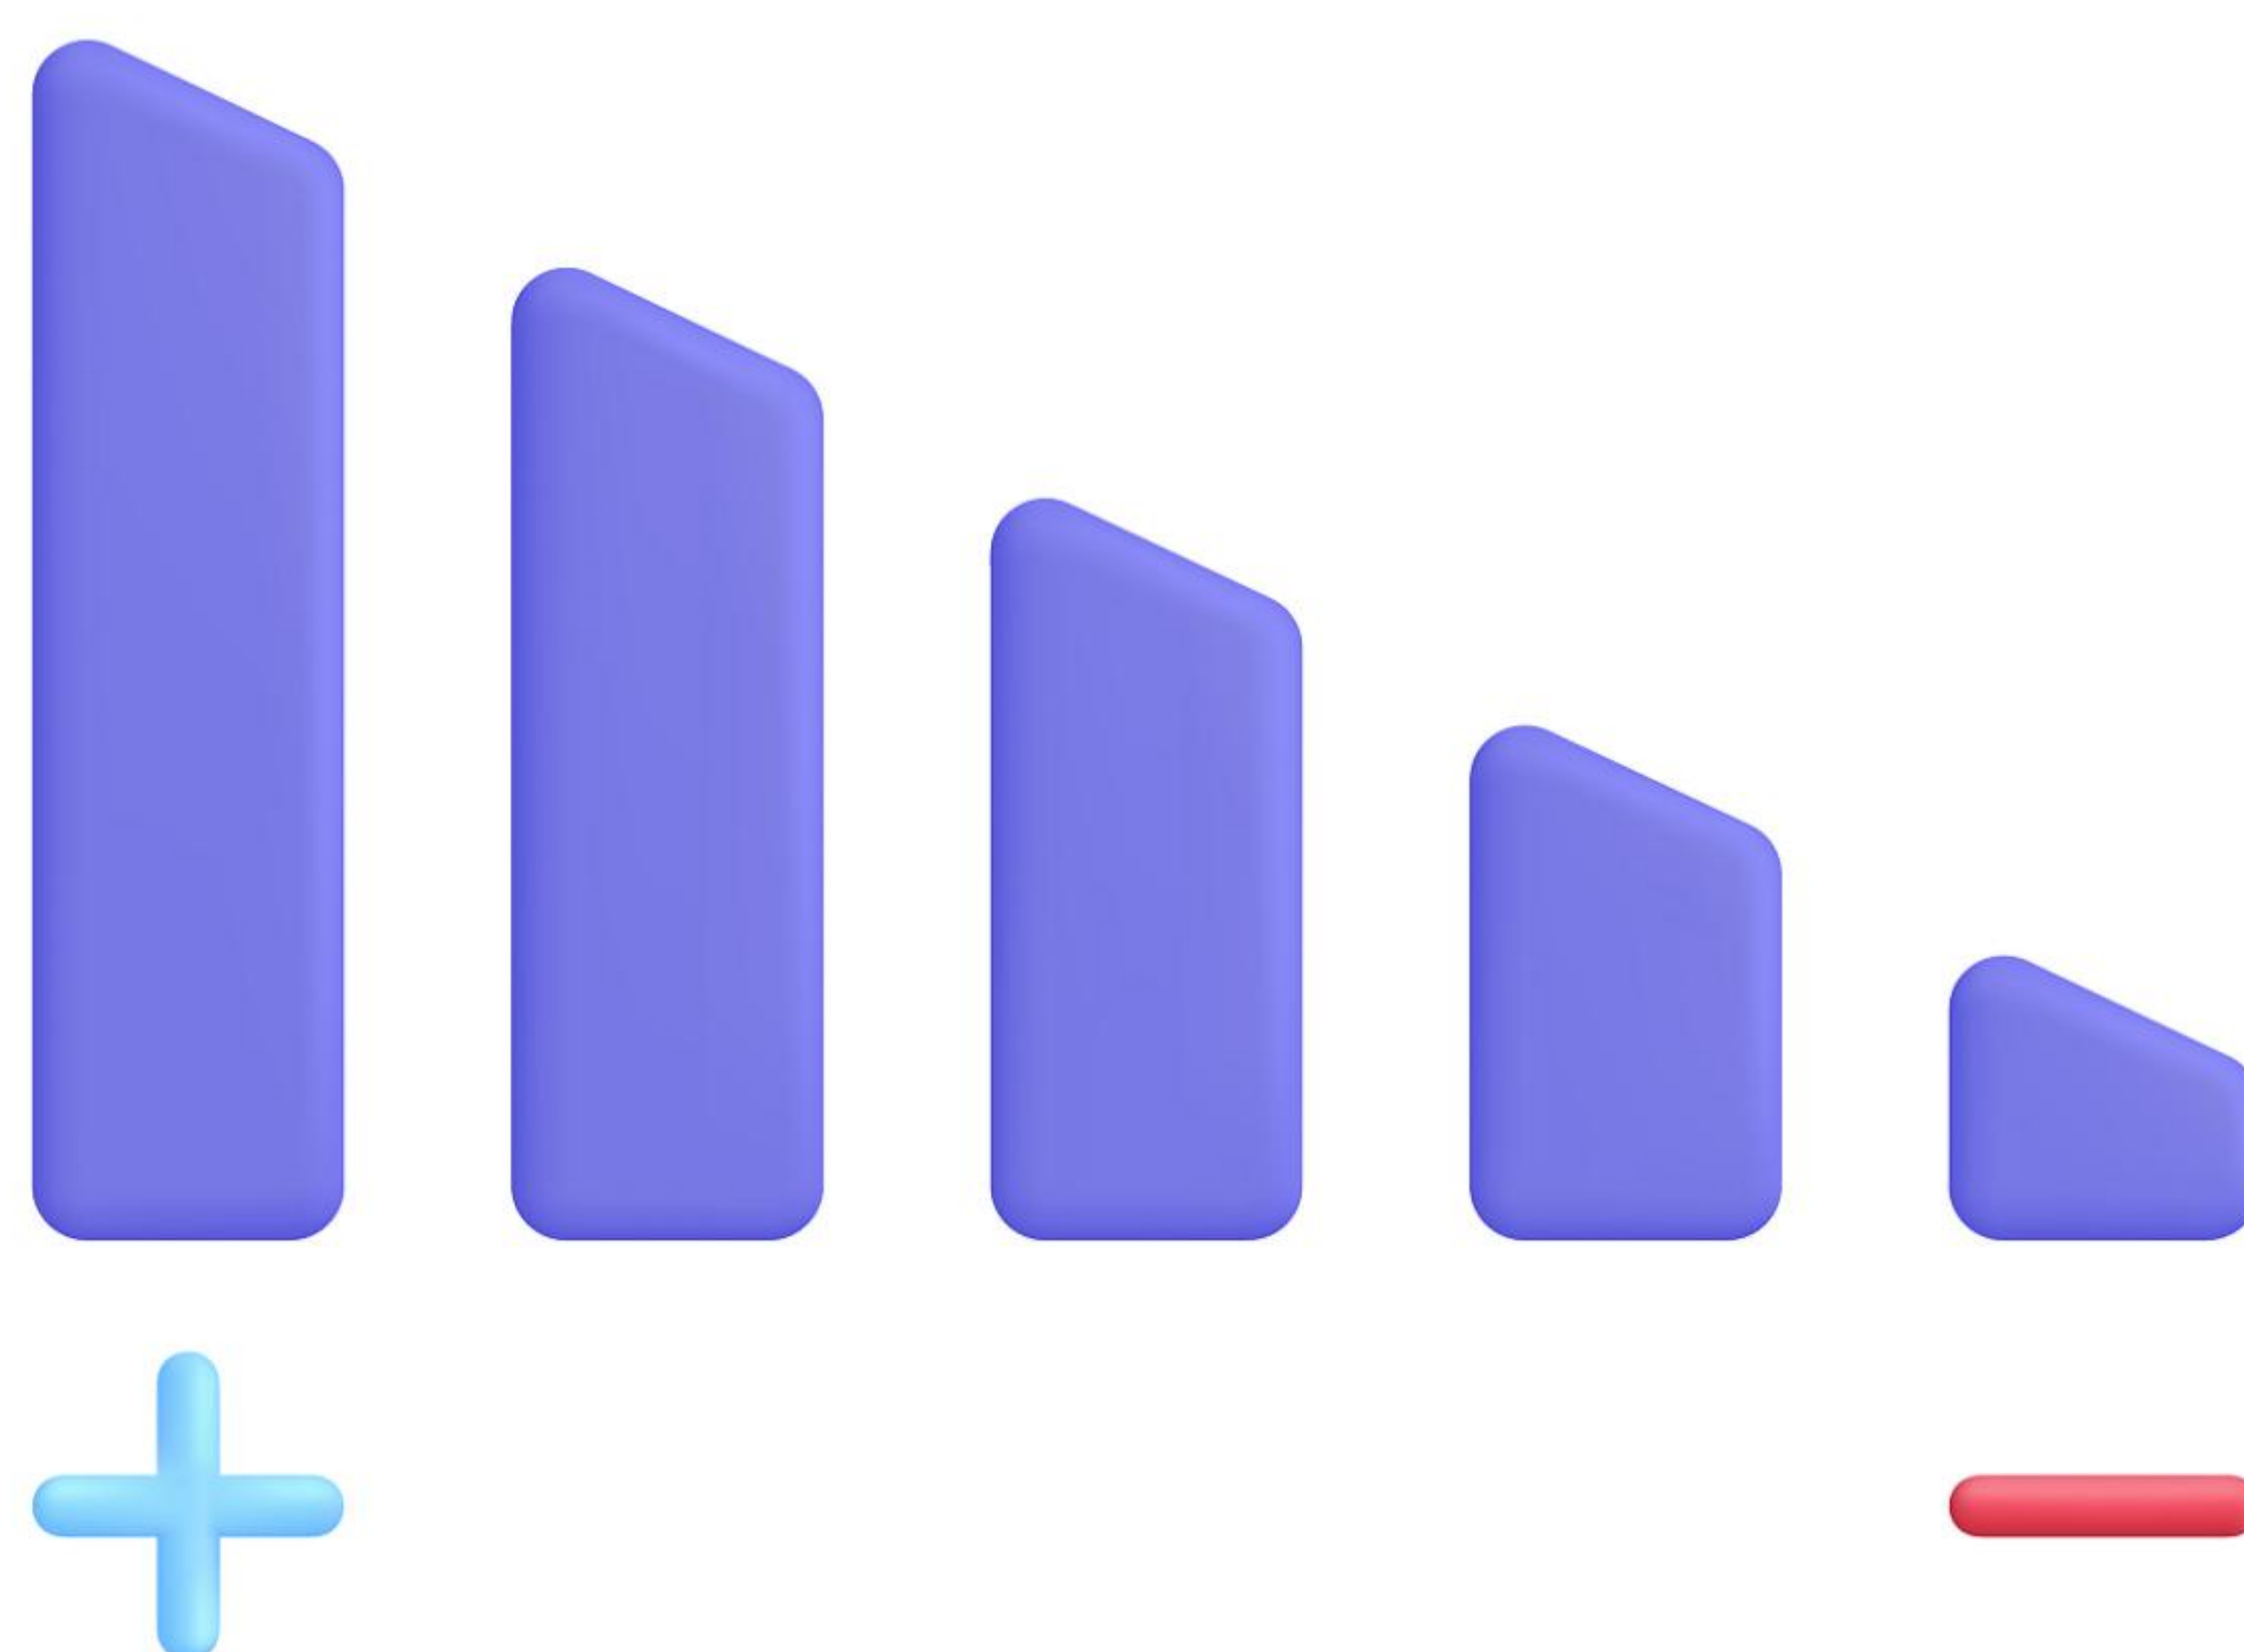


Long press: Volume up

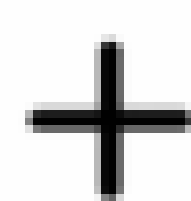 

Long press: Volume down

  Single Click: Previous song

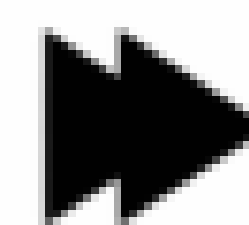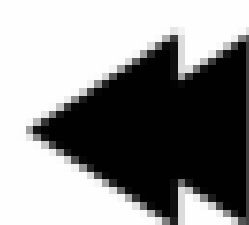

Single Click: Next song

Please note: Do not set the volume too high when using the speaker, as excessive volume may cause distortion. It is recommended to set the volume to around 50% for optimal performance.