



ASSEMBLY INSTRUCTION

Ax1

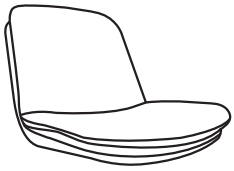


Bx1

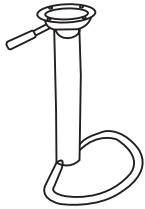


Cx1



Dx1

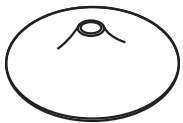


Fx4

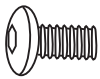


M6x16mm

Ex1

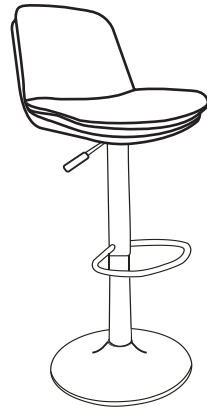

For stability, the chair base could be difficult to get apart after being assembled. Please consider carefully before assembly.


①

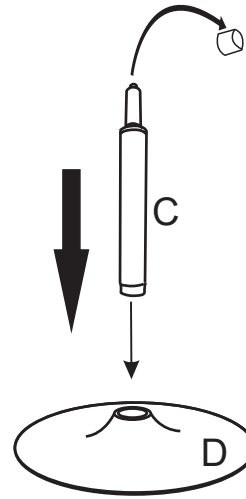


Remove it
Before Use.

Insert (C) into the hole on (D).

②

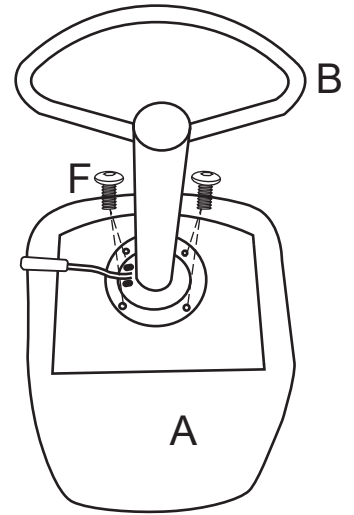


Fx4

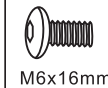

M6x16mm


Twist Screw (F) to
connect (A) and (B).

③

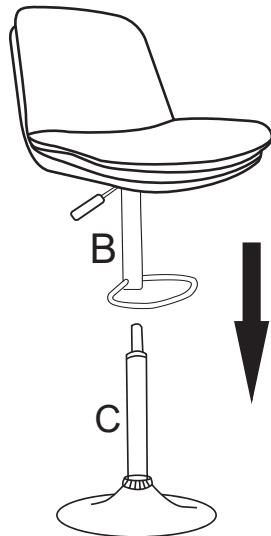


Insert (C) into the hole in (B).

④

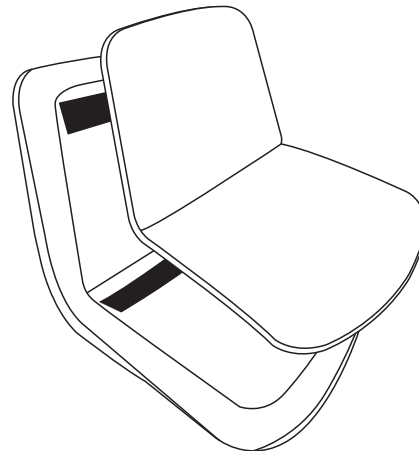

The cushion is detachable
and adjustable.

⑤

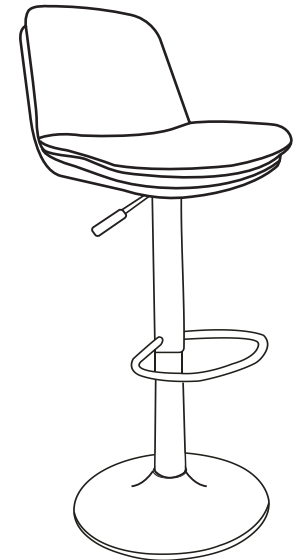

Done!