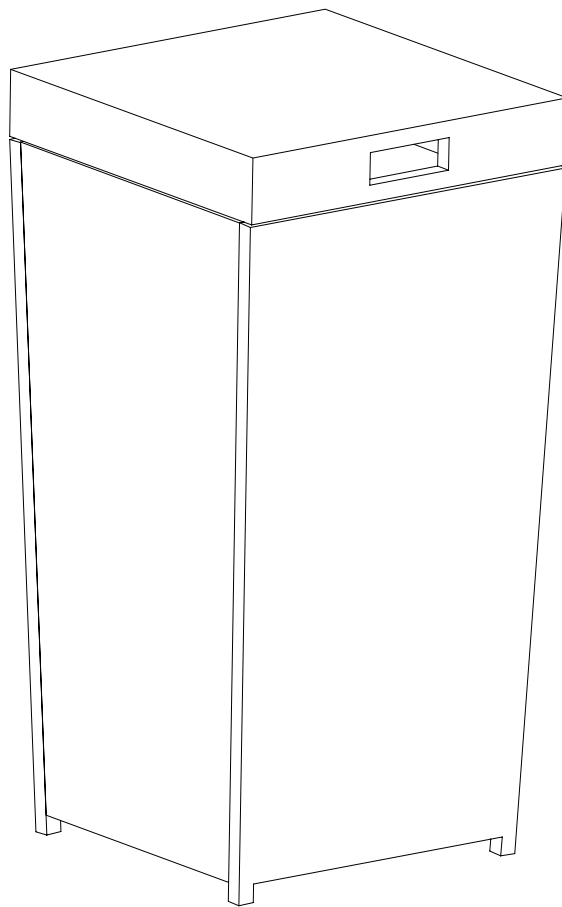 








WICKER TRASH BIN



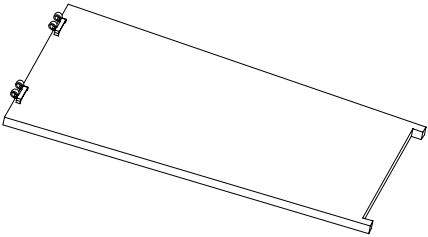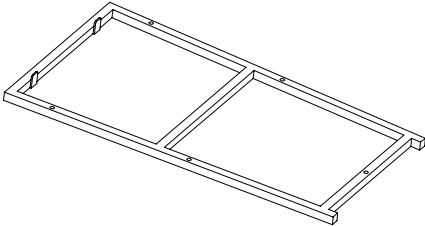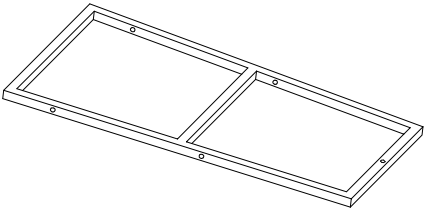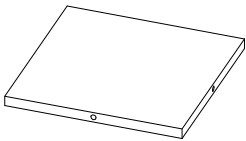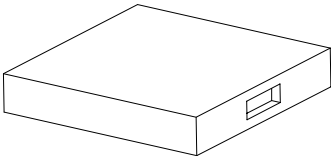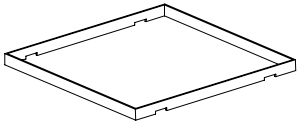       
 

 

We strived to provide fine furniture products, built with quality materials and hand finished details. Please carefully follow the assembly instructions to ensure your furniture is assembled correctly to provide long lasting enjoyment.

Care: Use a soft, clean cloth that will not scratch the surface when cleaning. The use of solvents is not necessary. Should you choose to use solvents, test in an inconspicuous area first to avoid damaging the finish. TO clean, simply use a soft, clean cloth lightly dampened with water.


PART LIST

					
Back Panel		Front Panel		Side Panel	
A	1pc	B	1pc	C	2pcs
					
Bottom Panel		Top Panel		Garbage Bag Holder	
D	1pc	E	1pc	F	1pc


HARDWARE LIST

					
Short Bolt(M6*10mm)		Long Bolt(M6*40mm)		Inner Thread Bolt(M6 *40mm)	
G	2pcs	H	12pcs	I	2pcs
					
Washer(M6mm)		Allen Key(M6mm)			
J	12pcs	K	2pcs		

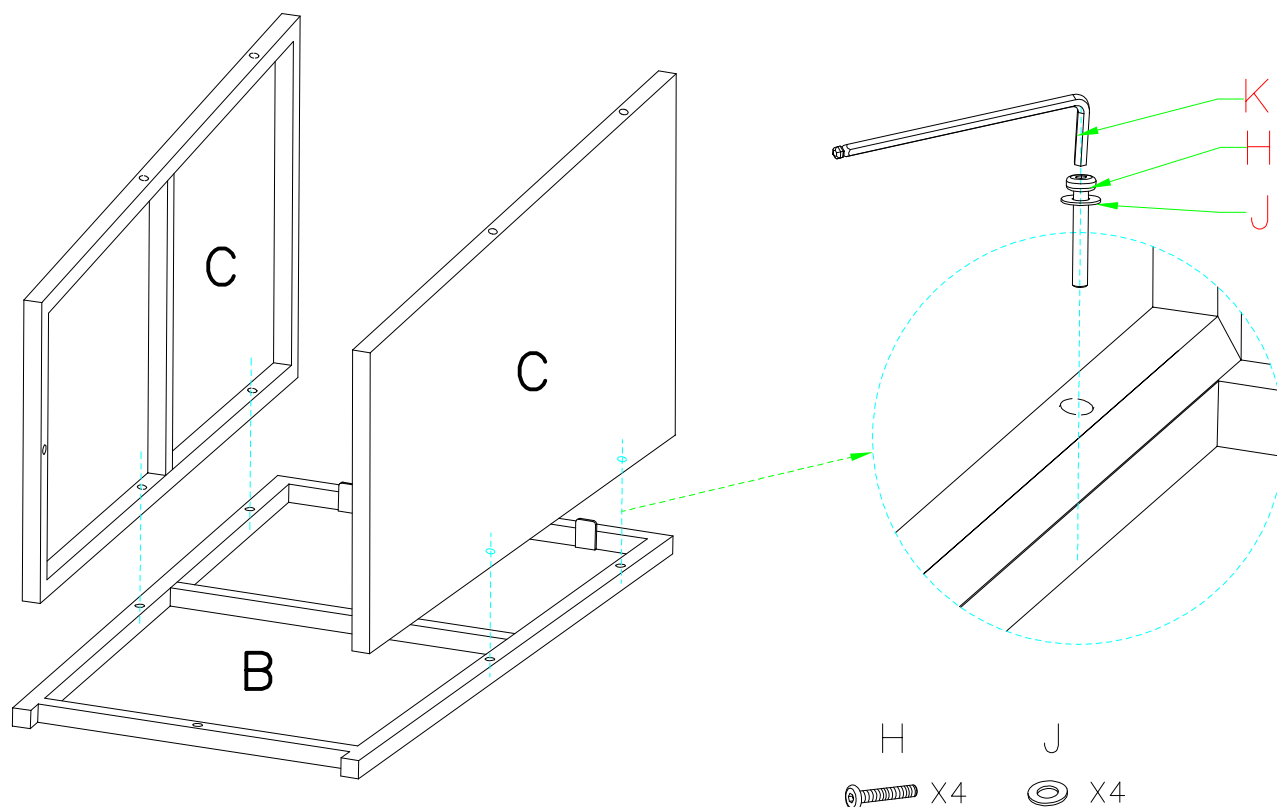 
Step 1. Lay Front Panel (B) down on a flat surface, attach Side Panel (C) to Front Panel(B) using the Long Bolt (H) and Flat Washer (J).



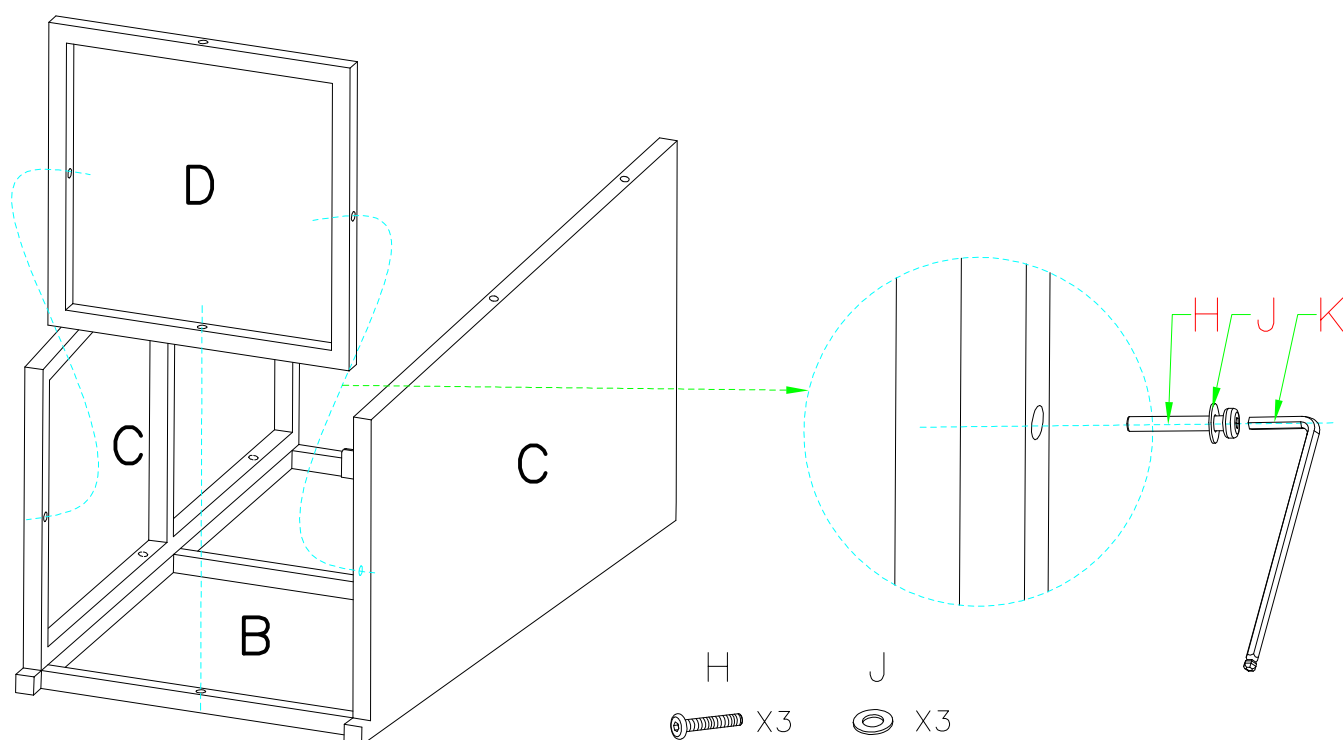 
Step 2. Attach Bottom Panel (D) to Side Panel (C) and Front Panel (B) using a Long Bolt (H) and Flat Washer (J).



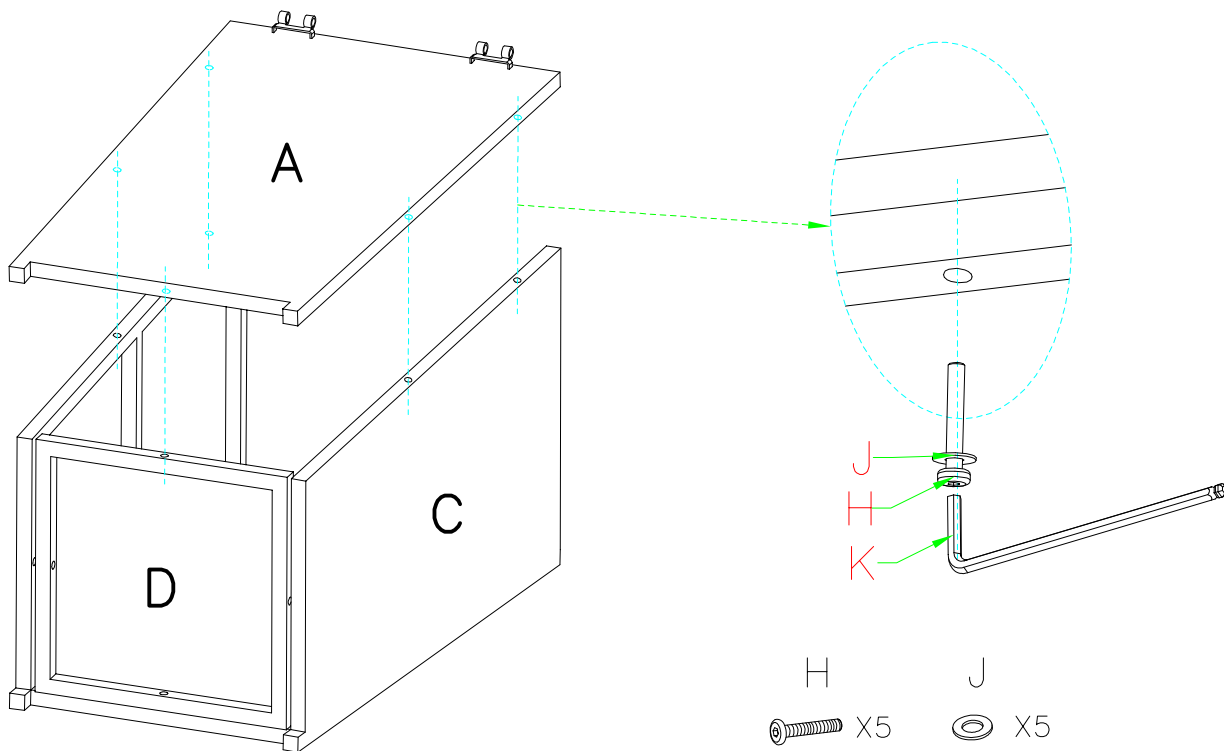 
Step 3. Attach Back Panel (A) to Side Panels (C) and Bottom Panel (D) using a Long Bolt (H) and Flat Washer (J).



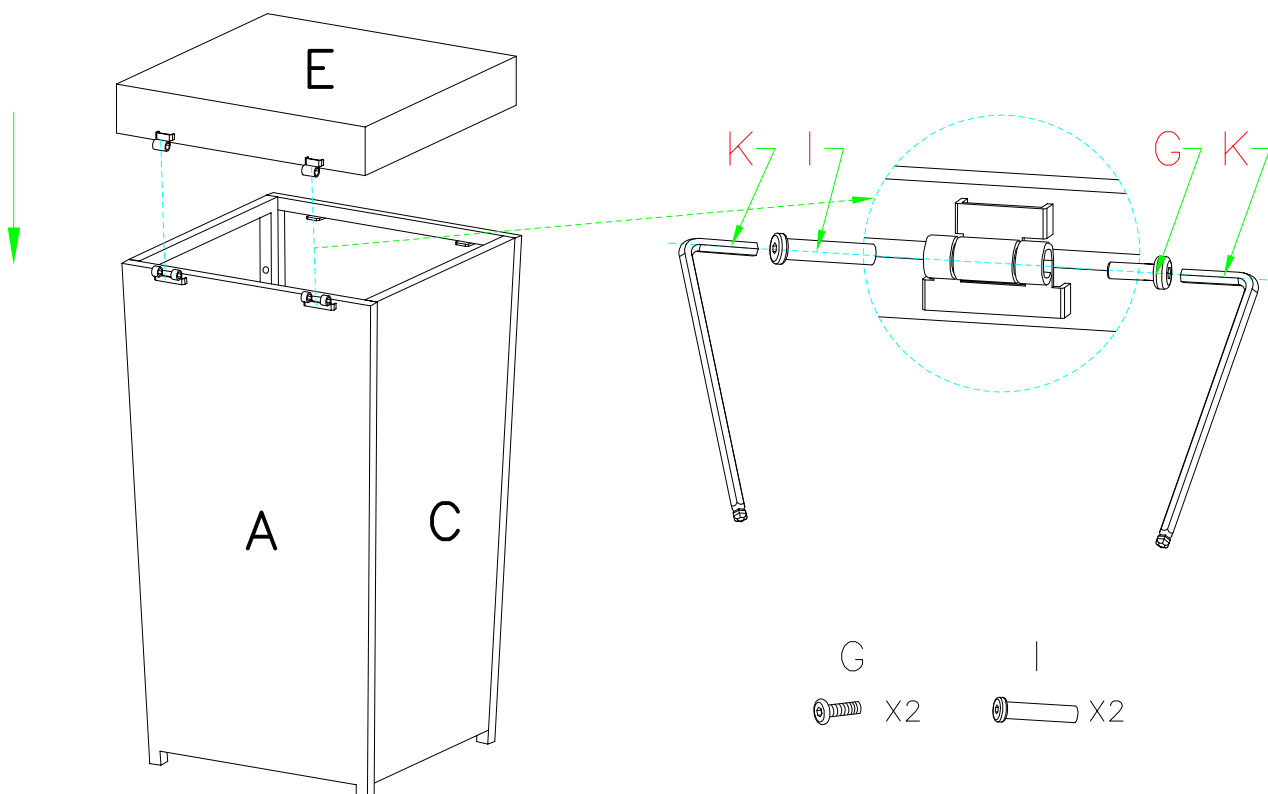 Step 4. Carefully place trash bin with the legs on the floor. Attach Top Panel (E) to Back Panel (A) using an Inner Thread Bolt (I), Short Bolt (G) and Allen Keys (K).



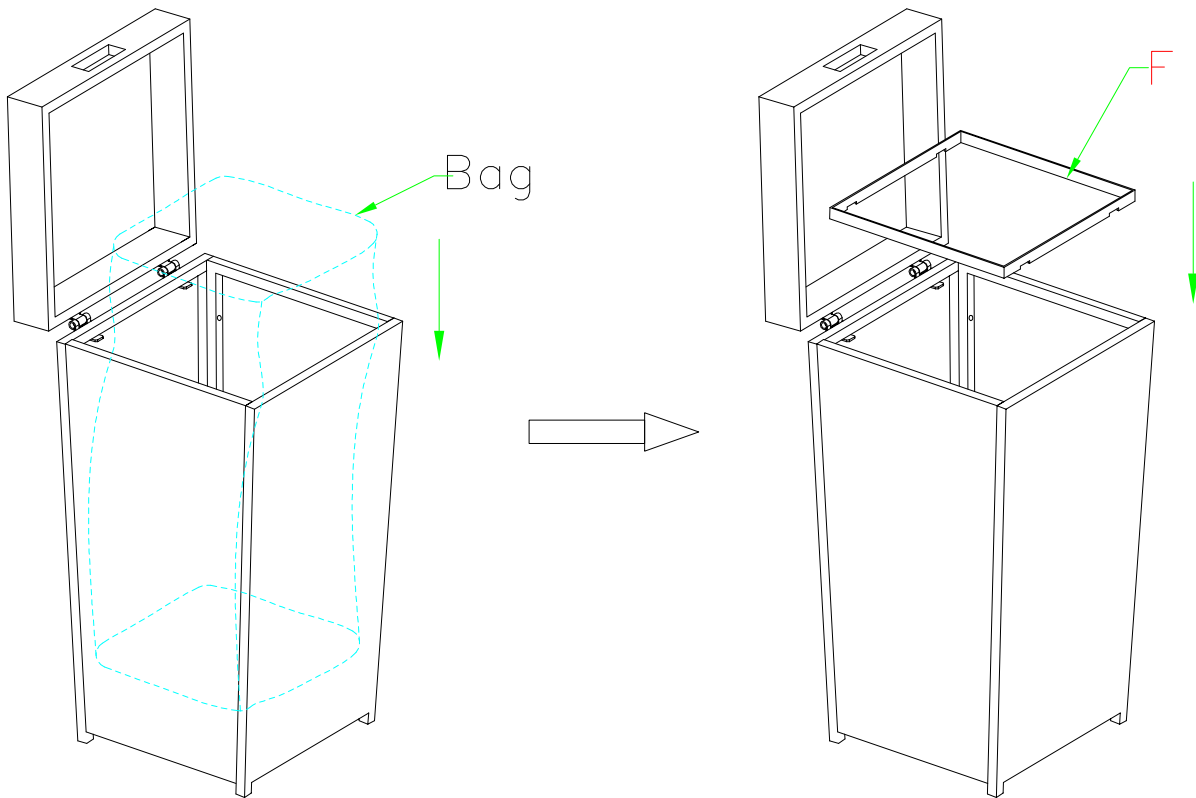 Step 5. Place garbage bag (not provide) inside the bin. Place Garbage Bag Holder (F) in bin, as shown.



Step 6. Top Panel (E) can be opened and closed.

