



CLF-JCD-122A2EQ-1.0-US

BEVERAGE COOLER WITH ICE BALL

OWNER'S MANUAL AND INSTALLATION INSTRUCTIONS

Who we are ?

Welcome to Ca'Lefort, where we proudly present an exceptional collection of high-end wine and beverage coolers. At Ca'Lefort, we are more than just a brand; we create a lifestyle. Our journey began with a passionate pursuit of excellence, believing that every moment deserves to be enjoyed to the fullest. Every detail of our coolers is carefully designed to provide a superior storage and cooling experience.

Our slogan, "Stay Fresh, Stay Cool," embodies the essence of our brand. It reflects our commitment to offering optimal storage solutions that ensure your drinks remain fresh and perfectly chilled.

Whether you're celebrating special occasions or savoring everyday moments, Ca'Lefort is your ideal companion, elevating your lifestyle with a touch of sophistication.

Experience Ca'Lefort, where timeless design, unparalleled quality, and a relentless pursuit of perfection come together to define a truly exceptional brand.



facebook.com/calefort.official



twitter.com/calefortmarket



pinterest.com/calefort_official/



youtube.com/@calefortmarketing



instagram.com/calefort_official/

☆ WARNING

1. Please use drinking water sources with TDS: within 50ppm for the ice machine.
2. First use of the ice machine, please discard the first three batches of ice cubes

PRECAUTIONS FOR USE

1. The ice machine must be connected to a potable water supply. The inlet water pressure shall be within the range of 28 psi ~ 85 psi or 2kg/ cm² 6kg/cm²
2. The ice machine is set to on mode by default at the factory. It will automatically start ice-making once connected to a potable water supply and powered on.
3. Do not remove the ice basket for an extended period while the ice machine is in operation.
4. The ice machine will automatically stop making ice when the ice basket is full. It will resume operation automatically after ice balls are removed.
5. In case of a power outage during ice-making, the machine will drain the remaining water or ice inside when the power is restored. Do not remove the ice basket at this time. After approximately 1 minute, you may take out the ice basket and pour out any accumulated water or residual ice.
6. If the power outage lasts for an extended period, the ice in the basket may melt completely into water. After restoring power for about 1 minute, please remove the ice basket and drain the accumulated water.
7. You can manually turn off the ice machine when ice-making is not required. Operation steps: Pull the baffle outward firmly to expose the ice machine switch. Press the switch to the "O" position to turn off the machine, and press it to the "I" position to resume ice-making.
8. The ice machine produces 3 ice balls per cycle. Each ice ball has a diameter of approximately 50mm, and a single ice-making cycle takes about 10 hours.
9. The natural ice storage capacity of the ice basket is approximately 30 ice balls, with a maximum capacity of around 46 ice balls.
10. If the ice machine becomes jammed by ice balls, unplug the power cord first, open the door, and allow the jammed ice balls to melt completely. Wipe up any accumulated water inside the compartment before reconnecting the power to resume ice-making.
11. The ice balls are not perfectly spherical. A missing segment of approximately 20% at the top is a normal phenomenon.
12. A conical air bubble band in the center of the ice balls is a normal phenomenon.
13. A small circular protrusion is usually present around the edge of the ice balls; this is normal.
14. Cracks on the surface of the ice balls are a normal phenomenon.
15. If the ice balls are stored for more than 48 hours, they will shrink or deform slightly due to the sublimation of ice.

NOTE: This User Instruction Manual contains important information, including safety & installation points, which will enable you to get the most out of your appliance. Please keep it in a safe place so that it is easily available for future reference, for you or any person not familiar with the operation of the appliance.

Note: Before discarding an old appliance, switch off and disconnect it from the power supply. Cut off and render any plug useless. Cut the cable off directly behind the appliance to prevent misuse. This should be undertaken by a competent person. Disable the door lock to make sure that children cannot get stuck inside the appliance.

Important Safety Information

Your safety is of the utmost importance to us. Please make sure that you read this instruction booklet before attempting to install or use the appliance. If you are unsure of any of the information contained in this booklet, please contact the Ca'Lefort.



IMPORTANT: Any installation work must be carried out by a qualified electrician or competent person.

Use of the appliance

- Your appliance is only designed to be used in the home. Right refrigerating compartment is suitable for storing and chilling alcoholic wines, juices, nutritional drinks, soft drinks, water, beer, etc., cold and fresh. NO food stuffs must be stored in the appliance. If it is used for any other purpose or it is not used correctly, then we will accept no liability for any damage that is caused.
- Bottled or canned beverages should not be placed in the left freezer compartment.
- Altering the specification of the appliance must not be attempted for reasons of safety.

Before using your appliance

- Check the appliance for any signs of transport damage. If you notice any damage, then you should not connect your appliance to your mains supply and should contact your retailer.

Child safety

- Packaging material should be kept away from children.
- Children should not be allowed to touch the controls or play with the appliance.

☆ IMPORTANT SAFETY INSTRUCTIONS

 WARNING	To reduce the risk of fire, electrical shock, or injury when using your appliance, follow these basic precautions:
Before you use your appliance for the first time, please read this user manual carefully. Store it carefully so that you can refer to it in the future, if necessary. To reduce the risk of fire, electrical shock, or injury when using your appliance, follow these basic precautions. Generally speaking, your appliance must be maintained by a qualified professional. For your safety and correct usage, before installing and first using the appliance, read this manual carefully, including its hints and warnings. To avoid unnecessary mistakes and accidents or to avoid damage to the appliance, it is important to make sure that all people using the appliance are thoroughly familiar with its operation and safety features. Save these instructions and be sure that they remain with the appliance if it is moved or sold, so that anyone using it throughout its life will be properly informed on its usage and safety notices. This will ensure optimum operation of the appliance. For the safety of life and property and to avoid any risk of injury keep the precautions of these user's instructions as the manufacturer is not responsible for damages caused by omission. This appliance is intended exclusively for domestic use and is intended for the storage of special drink products at a storage temperature higher than that of a storage compartment for fresh products. Under no circumstances is it intended to keep food products fresh. Make sure that your electrical installation's voltage corresponds to that on the appliance's nameplate; the appliance must be connected to an approved, earthed system. Incorrect repairs or connections can cause safety hazards. Have your electrical installation checked by a professional, if you are in any doubts. This unit must be correctly connected to an earthed socket for your protection. Do not cut off or remove the earth wire on the mains cable supplied. For safety reasons, do not use an electrical extension cable. If your appliance is damaged (e.g. a major impact) or suffers harm (power surge due to lightning, flood, fire), it may be dangerous to use. Disconnect the mains plug and have the appliance checked by an approved professional repairer. To prevent any danger, do not replace a damaged mains cable yourself. Contact your retailer, an approved service center or professional repair. This appliance must be positioned such that the mains socket is accessible. Do not move the appliance once it is full: you might distort its body beyond repair. The electrical parts must not be directly accessible. √ Keep children away from the appliance. √ Do not use this appliance outdoors. In the event that liquid is accidentally spilled (broken bottle, etc.) on electrical components (motor, etc.) disconnect the mains plug immediately. To prevent any risk of fire, electrocution or injury, do not immerse the mains cable, plug or the appliance itself in water or any other liquid. Do not handle the appliance with wet hands. Keep the appliance away from any source of heat and out of direct sunlight. Do not allow the mains cable to hang from a table or be in contact with sharp edges or hot surfaces. Do not pull on the mains cable - take hold of the plug to disconnect the appliances.	

Ensure that the area where your appliance is positioned can support its weight. Your cellar must be placed on a flat surface. If you have to position it on a rug or carpet, place a support underneath.

To prevent damaging the door gasket, make sure the door is fully open when pulling shelves out of the rail compartment.

Opening the door for long periods can cause a significant increase of the temperature in the compartments of the appliance.

Clean regularly surfaces that can come in contact with food and accessible drainage systems.

Safety of children and other vulnerable persons

- This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
- User cleaning and servicing operations should not be carried out by children, unless they are more than 8 years old and supervised.
- Keep all packaging away from children as there is risk of suffocation.
- Risk of child entrapment. Child entrapment and suffocation are not problems of the past. Junked or abandoned appliances are still dangerous, even if they will "just sit in the garage a few days".
- If you are discarding the appliance, pull the plug out of the socket, cut the connection cable (as close to the appliance as you can) and remove the door to prevent children playing from suffering an electric shock or from closing themselves inside it.
- If this appliance, featuring a magnetic door seals, is to replace an older appliance having a spring lock (latch) on the door or lid, be sure to make the spring lock unusable before you discard the old appliance. This will prevent it from becoming a death trap for a child.
- Keep the appliance and its power cable out of reach of children less than 8 years old.
- **WARNING:** Risk of child entrapment. Before you throw away your old refrigerator or freezer:
 - Take off the door.
 - Leave the shelves in place so that children may not easily climb inside.
- Children aged from 3 to 8 years are not allowed to load and unload this appliance.
- Children should be supervised to ensure they do not play with the appliance.

General safety

WARNING - This appliance is intended to be used in household and similar applications such as:

- √ Staff kitchen areas in shops, offices and other working environments,
- √ Farm houses and by clients in hotels, motels and other residential type environments,
- √ Bed and breakfast type environments,
- √ Catering and similar non-retail applications.
- √ When positioning the appliance, ensure the supply cord is not trapped or damaged.

- This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.

Children should be supervised to ensure that they do not play with the appliance

WARNING — To avoid a hazard due to instability of the appliance, it must be fixed in accordance with the instructions.

WARNING — Do not store explosive substances such as aerosol cans with a flammable propellant in this appliance, as they could leak or release fluids.

When disposing of the appliance, do so only at an authorized waste disposal centre. Do not expose to flame.

WARNING — If the supply cord is damaged, it must be replaced by the manufacturer, its service agent or similarly qualified persons in order to avoid a hazard.

WARNING — Keep ventilation openings. in the appliance enclosure or in the built-in structure, clear of obstruction and ensure that air can circulate, especially if the appliance is recessed into a wall.

WARNING—Do not use mechanical devices or other means to accelerate the defrosting process, other than those recommended by the manufacturer.

WARNING—Do not damage the refrigerant circuit.

WARNING—Do not use electrical appliances inside the storage compartments of the appliance, unless they are of the type recommended by the manufacturer.

WARNING —The refrigerant and insulation blowing gas are flammable. When disposing of the appliance, do so only at an authorized waste disposal center. Do not expose to flame.

WARNING—The refrigerant of these appliances is R600a, flammable and explosive articles should not be put in or near the cabinet, to avoid the fire or explode caused.

WARNING—Do not locate multiple portable socket-outlets or portable power supplies at the rear of the appliance.

Refrigerant


The refrigerant isobutene (R600a) is contained within the refrigerant circuit of the appliance, a natural gas with a high level of environmental compatibility, which is nevertheless flammable. During transportation and installation of the appliance, ensure that none of the components of the refrigerant circuit becomes damaged. The refrigerant (R600a) is flammable.



-Save these instructions-

DESCRIPTION OF THE APPLIANCE

Product features

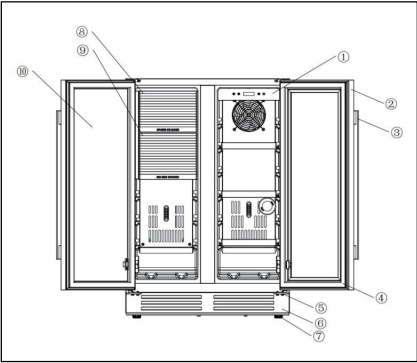

- ①: Display Panel
- ②: Glass Door
- ③: Door Handle
- ④: Door Gasket
- ⑤: Door Hinge
- ⑥: Base Grille
- ⑦: Leveling Legs
- ⑧: Spherical Ice Mold Baffle
- ⑨: Spherical Ice Basket
- ⑩: Foamed Insulation Door

Voltage:	115V/60Hz
Rated Current:	2A
Capacity:	60cans
Left Zone	0°F(-18°C)
Right Zone	34°F-65°F(1-18°C)
Net Weight:	125.7 LB
Gross Weight:	174.5 LB
UnitDimension:	23.4"W × 23.6"D × 34.3"H
Packaging Dimension:	28.5"W × 27.4"D × 43.3"H
Refrigerant:	R600a

Control panel



Operation



"ON/OFF" :

To turn on or off the unit, press and hold the ON/OFF button for 3 seconds.



INSIDE LIGHTING:

Short press the control box to cycle the lights in the white, blue and orange colors.

Press and hold for 3 seconds to cycle between the two interior light modes [Light Always On & Door-Triggered Mode]. Default mode on power-up is Door-Triggered Mode..

In Door-Triggered Mode: Light turns off when door is closed; Light turns on when door is open.

In Light Always On Mode: Light is always on no matter whether the door is opened or closed.



"TEMP+" BUTTON:

To increase the temperature by 1°C or 1°F



"TEMP-" BUTTON:

Short press: To decrease the temperature by 1°C or 1°F

Long press (3 seconds): Switch the °C/°F temperature display.

Temperature Control Specification

1.The "TEMP" keys exclusively control the temperature adjustment of the refrigerator compartment, with an adjustable range of 34°F(1°C) to 65°F(18°C).

2.The temperature of the freezer compartment is non-adjustable, and shall be maintained at approximately 0°F(-18°C).

Cleaning and maintenance

WARNING: PLEASE ENSURE THAT YOUR APPLIANCE IS DISCONNECTED FROM YOUR MAINS SUPPLY BEFORE ATTEMPTING TO CLEAN IT.

- Do not clean the appliance by pouring water onto it or spraying water over it.
- The interior of the beverage cooler should be cleaned periodically, using a solution of bicarbonate of soda and lukewarm water.
- Clean the accessories separately with soap and water. Do not clean them in a dishwasher.
- Do not use abrasive products, detergents or soaps.
- After washing the appliance, wipe over the area that you have cleaned with a damp cloth and then dry it thoroughly.
- When cleaning is complete, dry your hands and then reconnect the plug to your mains supply.

Defrosting

- Defrosting occurs automatically inside of the beverage cooler during operation. The defrost water is collected by the evaporating tray and evaporates automatically.
- The evaporating tray and defrost water drain hole should be cleaned periodically. This will prevent water from collecting in the bottom of the beverage cooler, instead of flowing down the defrost drainage channel and drain hole.
- You can also pour a small amount of water down the drain hole to clean inside of it.
- You should be careful to make sure that wine bottles do not touch the rear wall of the appliance, as this can interrupt the automatic defrosting process and deflect water into the base of your beverage cooler.

Removing the shelves for cleaning

- Before cleaning your appliance, please make sure to remove all the shelves from the compartment.

Moving your beverage cooler

If you need to move your beverage cooler to another location you should follow the steps outlined below.

- Remove all items from the beverage cooler.
- Securely tape down all loose items such as the shelves inside of the appliance.
- Turn the adjustable foot up to the base to avoid damage.
- Tape the door closed.
- Ensure the appliance stays secure in the upright position during transportation. Also protect the outside of the appliance with a blanket or similar item.

Power failure

- Most power failures are corrected within a few hours and should not affect the temperature of your appliance if you minimize the number of times the door is opened.
- If the power is going to be off for a longer period of time, you need to take the proper steps to protect the contents.

IMPORTANT: If the appliance is unplugged, the power is lost or turned off you must wait 3 to 5 minutes before restarting the beverage cooler. If you attempt to restart before this time delay, the beverage cooler will not turn on.

Vacation time

Short holidays: Leave the beverage cooler in operation for holidays of less than 3 weeks.

Long absences: If the appliance will not be used for several months, remove all items, turn off the appliance and unplug the electricity cable. Clean and dry the interior thoroughly. To prevent odour and mould growth, leave the door open slightly by blocking it open if necessary.

INSTALLATION


IMPORTANT: Before installation and usage read all the instructions and make sure that the voltage (V) and the frequency (Hz) indicated on the rating plate are exactly the same as the voltage and frequency in your home.

The rating plate can be found on the front left edge of the inside of the beverage cooler.

The manufacturer declines all responsibility in the event of the installer failing to observe all the accident prevention regulations in force, which are necessary for normal use and the regular operation of the electric system.

- Be sure to leave enough space for the opening of the door, to avoid damage to the appliance or personal injury.
- **IMPORTANT:** The vent at the base of the appliance is for ventilation. Nothing should be placed in front of this vent; otherwise your beverage cooler may not operate properly.

Built-in installation

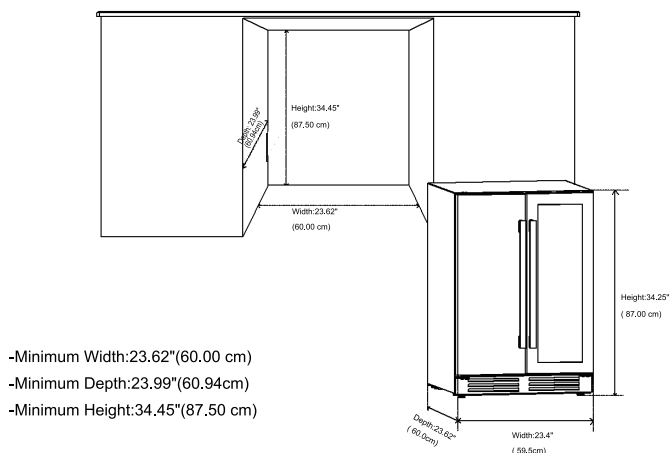

- Your beverage cooler can be used as a freestanding or a built in unit. The clearances shown in the above drawing should be followed for both types of installation.
- In particular the depth dimension must be observed.
- **IMPORTANT:** The vent at the base of the appliance is for ventilation. Nothing should be placed in front of this grille; otherwise your beverage cooler may not operate properly.
- A decorative plinth can be fitted to the front of the base vent as long as the cut out shown in the diagram below is made in the plinth. This cut out is required whether the vent is removed or not.

Installing the Handle

This appliance includes door handles. To install the handle please follow the below instructions (taking the right-opening door as an example):

Step 1:

Remove the door gasket from the left side of the door (where the handle will be installed, as shown below). No tools are required—the gasket can be detached by hand. If needed, start peeling from a corner.

Step 2:

Insert the two handle screws, lock washer, and flat washer (included in the instruction manual bag) from the inside to the outside of the door.

Step 3:


Align the handle holes with the screws. Tighten the screws using a screwdriver until the handle base is flush with the door surface. Ensure the handle is secure but not overtightened to avoid assembly damage.

Step 4:


Reinstall the door gasket.

Note:

The Handle Screws ④ are packed with other accessories in the instruction manual bag. please insert them into the door before installing the handle.


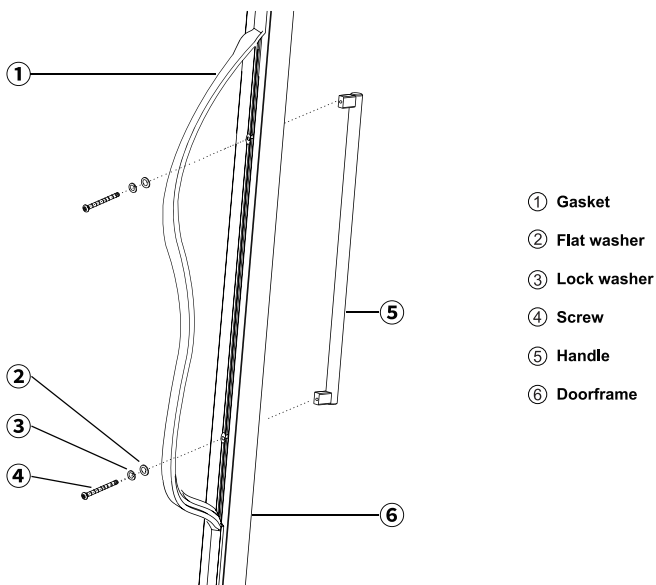




The equipment's water import is compatible with a 1/4 inch pipe ($\approx 6.35\text{mm}$ inner diameter) for connection to a water purifier.

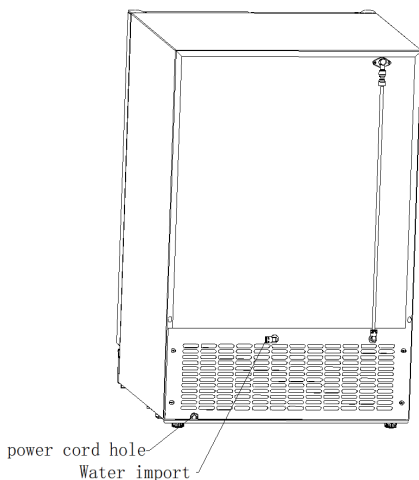

How to turn off the spherical ice module

1. Pull the ice basket out slightly by approximately 100mm;
2. Manually pull the baffle of the spherical ice module outward;
3. Press down the rocker switch of the spherical ice module (the ice-making module switch is in the "on" state by default at the factory).

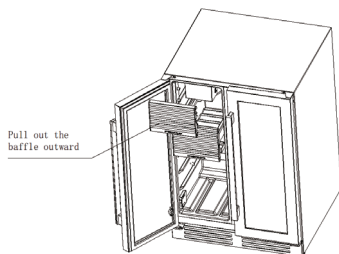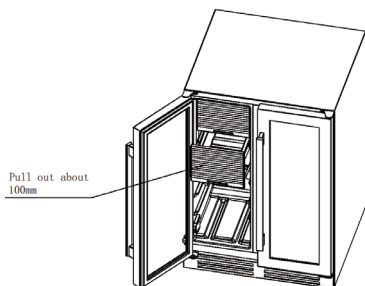

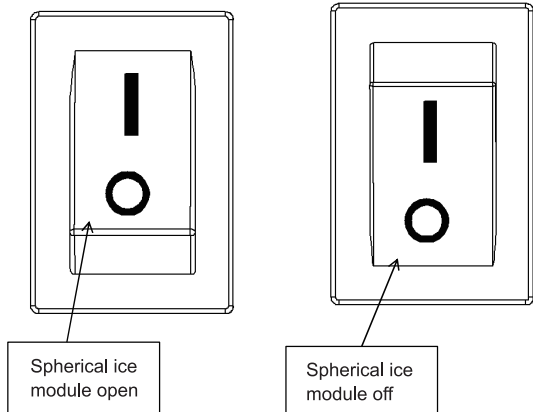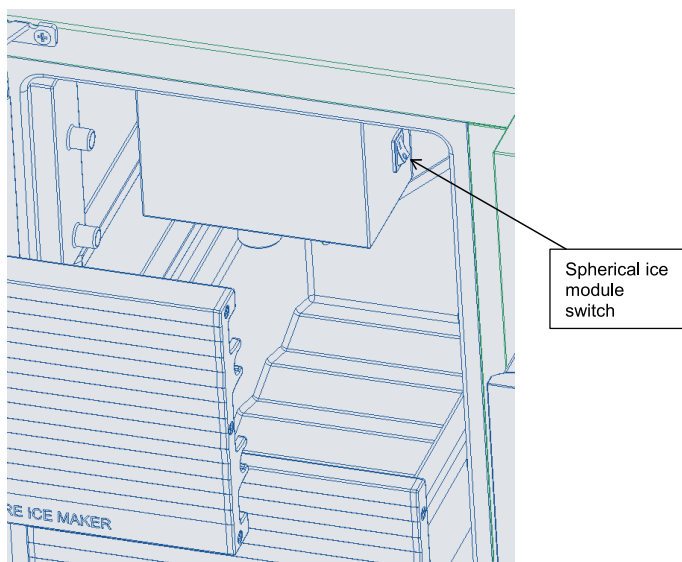

TROUBLESHOOTING

IMPORTANT: If your beverage cooler appears not to be operating properly, before contacting the Customer Care Department, please refer to the checklist below.

PROBLEM	POSSIBLE CAUSE
Appliance does not operate	Not plugged in. The circuit breaker has tripped or the fuse has blown.
Temperature inside the appliance is too warm.	The temperature controls are set too warm. Set the temperature controls to a cooler setting and allow several hours for the temperature to stabilise. The door is being kept open too long or is being opened too frequently, which is allowing warm air to enter the appliance. The door is not closed completely. The door gasket is not sealing correctly. The appliance has recently been disconnected from the mains supply; it will take at least four hours for it to get down to temperature again.
Temperature inside the appliance is too cold	The temperature controls are set too cold. Set the temperature controls to a warmer setting and allow several hours for the temperature to stabilize.
Vibration	Check to ensure that the appliance is on a level surface. The appliance is touching the back wall behind it. Re-position the appliance and move it from the wall. If vibration continues to occur, then turn off the appliance and unplug it from your mains supply. Then contact the Customer Care Department for assistance.
Moisture is forming on the inside of the appliance.	The door is slightly open. The door is being kept open too long or is being opened too frequently. Open the door less often. The door is not sealed properly.
Moisture is forming on the outside of the appliance.	The door is slightly open, causing cold air from inside the appliance to meet warm, moist air from the outside.

Activate Warranty & Join Us

VISIT: <https://calefort.vip/>
or scan the QR code



Email: service@calefort.com

*Activate Product Warranty

*VIP Exclusive Service

*Personalized product care & records

Just let us know if you have any questions about our products!