IMPORTANT SAFETY INSTRUCTIONS

BEFORE USING THIS APPLIANCE READ ALL INSTRUCTIONS AND CAUTIONARY MARKINGS IN THIS MANUAL AND ON THE

When using an electrical appliance, basic precautions should always be followed including the following:

№ WARNING

- TO REDUCE THE RISK OF FIRE, ELECTRIC SHOCK OR INJURY:
- . This heater is hot when in use and for a short period after use. To avoid burns, do not let bare skin touch hot surfaces. When moving the heater hold it by the base, not the air loop amplifier 2. Keep combustible materials, such as furniture, pillows, bedding, papers, clothes and curtains , at least 0.9m (3 feet) from the front of the heater
- and keep them away from the sides and rear when the heater is plugged in
 3. Extreme caution is necessary when any heater is used by or near children or infirm persons and whenever the heater is left operating and
- 4. Do not allow to be used as a toy. Close attention is necessary when used by or near young children, Children should be supervised to ensure that they do not play with the heater or remote control.
- 5. This heater and remote control are not intended for use by young children or infirm persons with reduced physical, sensory or reasoning capabilities, or lack of experience and knowledge, unless they hove been given supervision or instruction by a responsible person concerning
- use of the heater to ensure that they can use it safe1y.

 6. The base must be fitted securely before operating. Do not dismantle or use without the base fitted.

 7. Suitable for dry locations ONLY. Do not use outdoors or on wet surfaces. Do not use in bathrooms, laundry areas and similar indoor locations. Never locate the heater where it may fall into a bath or other water container. Do not use or store where it may get wet or in the immediate surroundings of a bath, a shower, or a swimming pool.
- 8. A heater has hot parts inside. Do not use it in areas where petrol, paint, or flammable liquids are used or stared or where their vapours are present. Do not use in conjunction with or directly next to an air freshener or similar products. 9. Do not locate directly below a mains electricity supply socket.
- 10. Always plug directly into a wall socket. Never use with an extension cable as overloading may result in the cable overheating and catching fire. 11. Do not handle any part of the plug or heater with wet hands.
- 12. Do not unplug by pulling on the cable. To unplug, grasp the plug, not the cable.

 13. Do not stretch the cable or place the cable under strain. Do not run the cable under carpeting. Do not cover the cable with throw rugs, runners, or similar coverings. Do not route the cable under furniture or appliances. To avoid o tripping hazard arrange the cable away from traffic areas so that it will not be tripped over.
- 14. Do not use with a damaged cable or plug. If the supply cable is damaged it must be replaced by this company or its service agent or similarly
- qualified persons in order to avoid a hazard.

 15. To disconnect the heater, turn the controls off, then remove the plug from the socket. Always unplug the heater when not in use. 16. Do not use if the heater malfunctions or has been dropped or damaged in any manner. Contact the this company Helpline or return to an
- authorised service facility for examination and/or repair.

 17. To prevent a possible fire, do not use with any opening or exhaust blocked, and keep free of dust, lint, hair, and anything that may reduce airflow. Do not put any object into the inlet grill or the exhaust opening as this may cause an electric shock or fire, or damage the heater.
- 19. Use only as described in this Operating Manual. Any other use not recommended by the manufacturer may cause fire, electric shock, or
- injury to persons. 20. In order to avoid overheating and fire hazard, do not cover the heater. 21. Choking hazard: the remote control unit contains a small battery. Keep the remote control away from children and do not swallow the battery. If the battery is swallowed seek medical advice at once

 22. The heater should be positioned so the airflow is directed away from any walls or room corners.

IMPORTANT SAFETY FEATURES

For your safety this heater is fitted with automatic cut-out switches that operate if the heater tips over or overheats. If the switches operate, unplug the heater and allow it to cool. Before restarting the heater check and clear any blockages and ensure the heater is on a solid level surface

READ AND SAVE THESE INSTRUCTIONS

THIS APPLIANCE IS INTENDED FOR HOUSEHOLD USE ONLY



















Bladeless fan

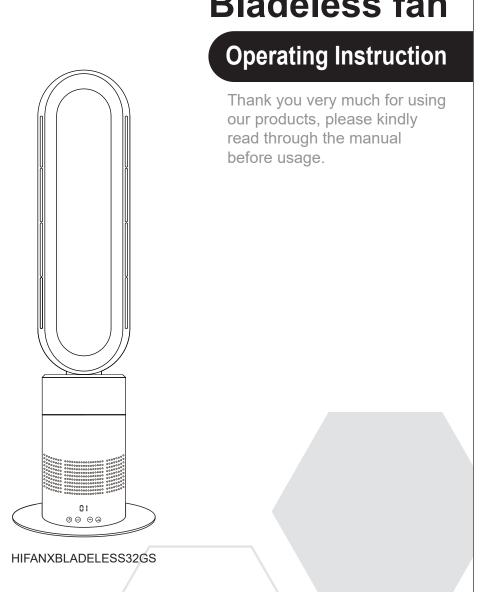


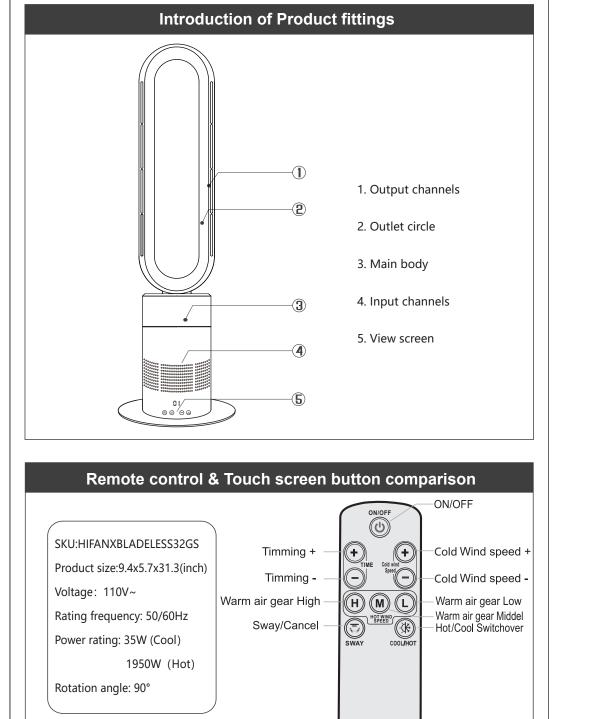


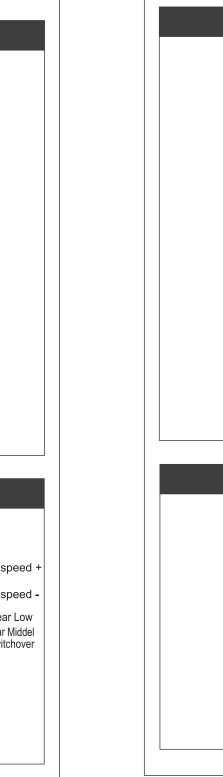

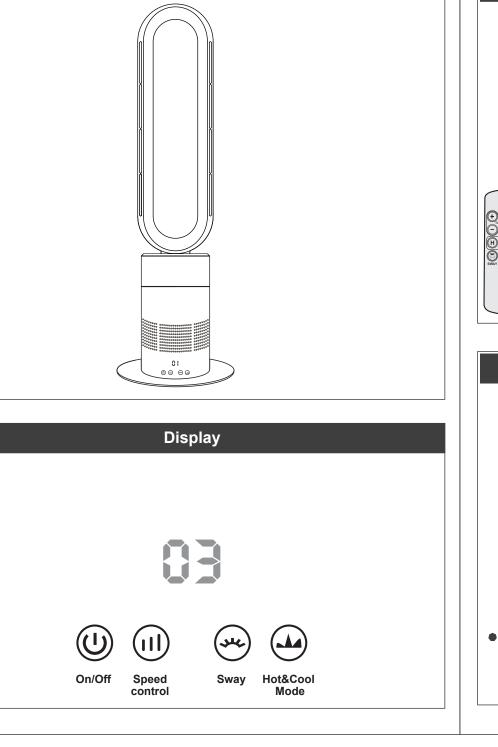


Non detachable

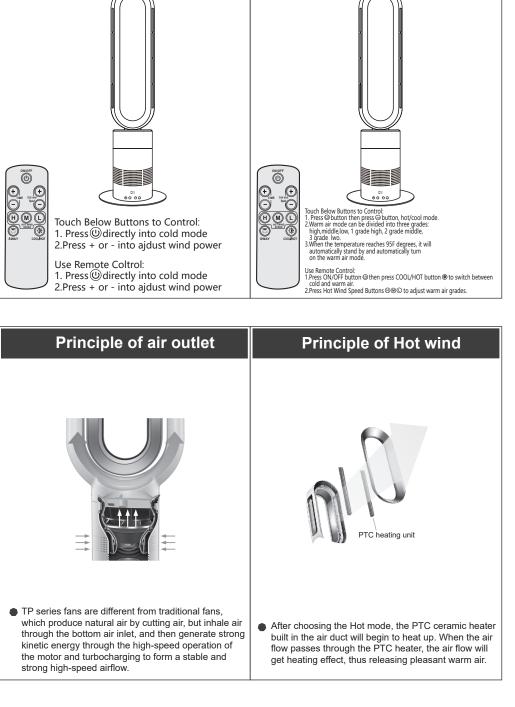

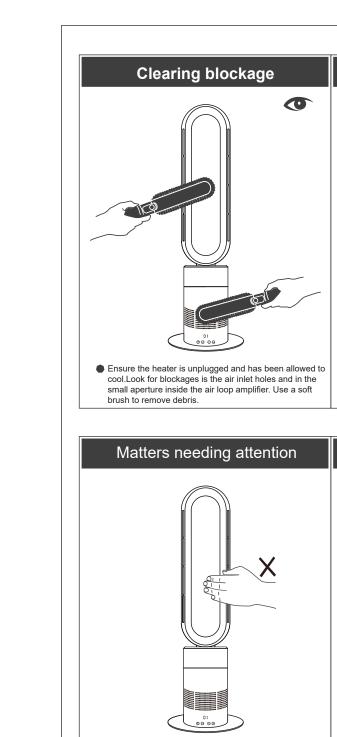

after use.Do not let bare skin touch hot surfaces.

If children are present, consider positioning the

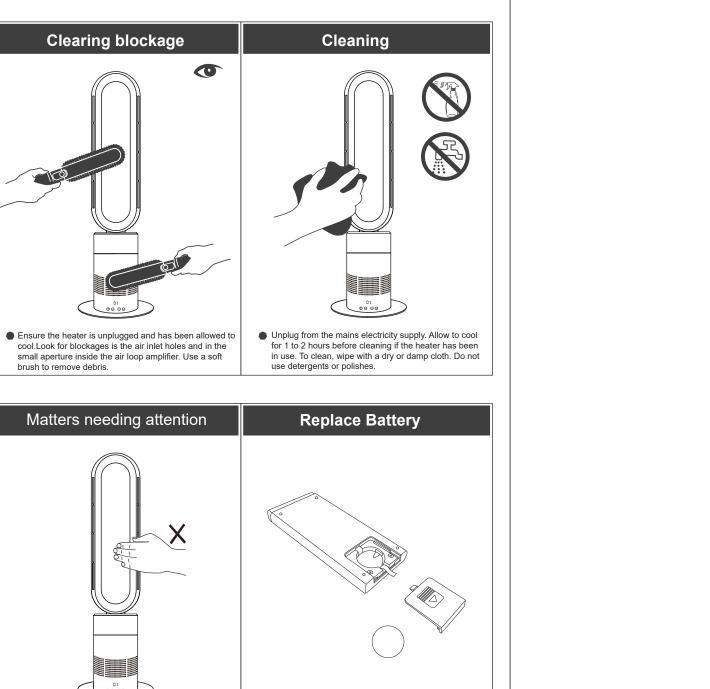

battery , then put the new battery instead of ,make

battery bin is loaded in the positive & negative

direction and close battery cover .

● This heater is hot when in use and for a short period ● Tear down the battery hatchcover, take out of used