


ASSEMBLY INSTRUCTION

LARGE DINING TABLE


Before you begin, Please follow Assembly Instruction carefully. Then follow them step by step.

| PART LIST | | |
|---------------|------------------|-------|
| A | TABLE TOP | 1 PC |
| B | TABLE LEGS | 4PCS |
| HARDWARE LIST | | |
| C | JCBB BOLT (LONG) | 8 PCS |
| D | FLAT WASHER | 8 PCS |
| E | ALLEN KEY | 1 PC |
| F | SPRING WASHER | 8 PCS |

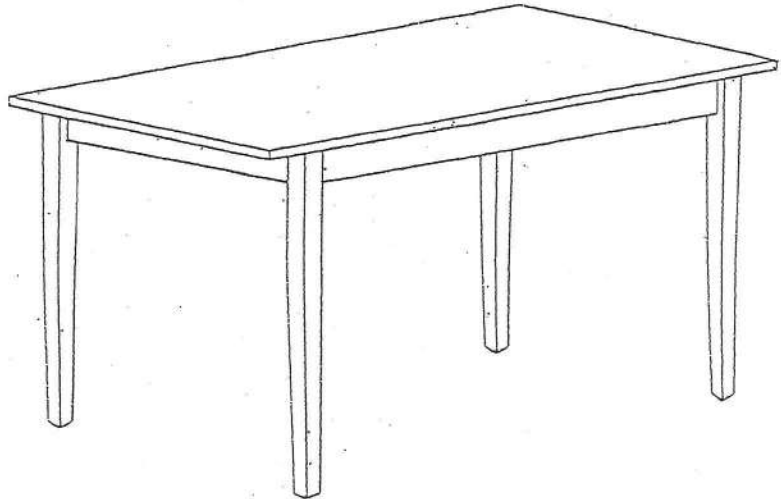

IMPORTANT NOTE : PLACE ALL WOODEN PARTS ON A CLEAN AND SMOOTH SURFACE SUCH AS A RUG OR CARPET TO AVOID THE PARTS FROM BEING SCRATCHED.

FIX THE TABLE LEGS(B) TO THE CORNER BLOCK WITH "JCBB BOLT" (C) SPRING WASHER (F) AND FLAT WASHER (D). THEN TIGHTEN THE JCBB BOLT (C) BY USING THE ALLEN KEY (E).

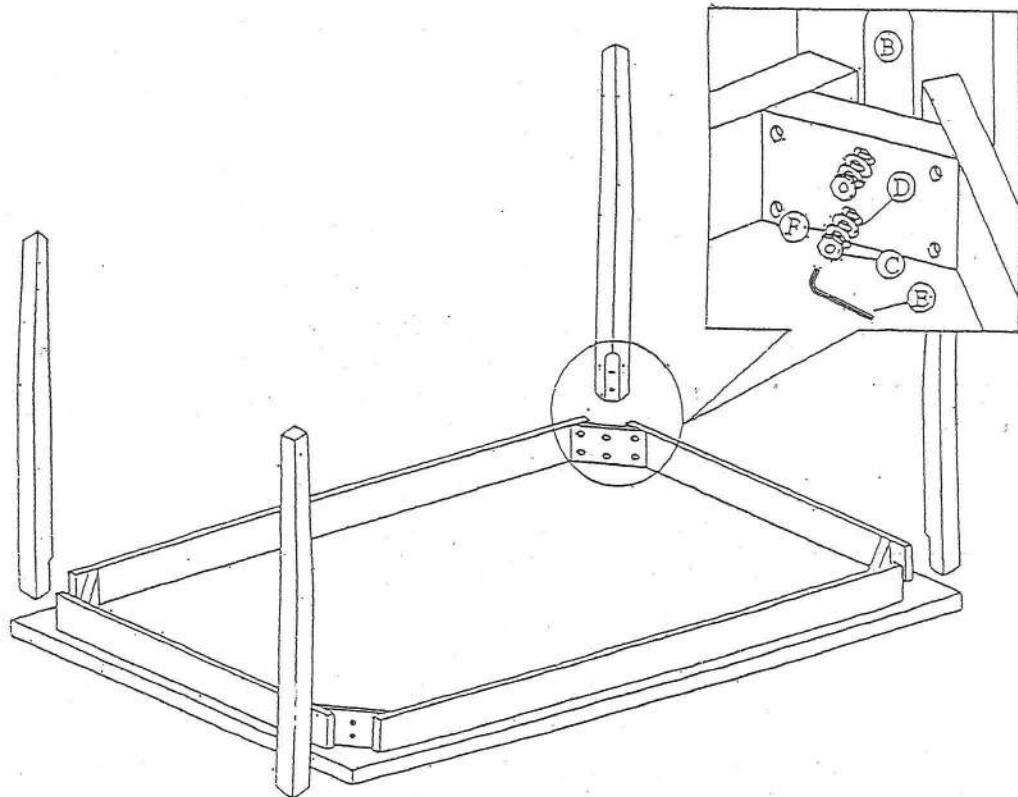

MODEL: CROSS BACK CHAIR

ASSEMBLY INSTRUCTION

Dear Customer,

 






Thank you for purchasing our furniture products.

Read instruction carefully. See hardware and furniture part list for guidance. Be sure all part is complete before assembly. Place all wooden furniture parts on a clean and flat surface to prevent from being scratched. Follow the figure to start assembling.

CAUTIONS!!!

1. DO NOT FULLY TIGHTEN THE NUT OR BOLTS UNTIL ALL THE NUTS OR BOLTS IS READY ASSEMBLED.

2. DO NOT OVER TIGHTEN THE NUT OR BOLTS TO AVOID CAUSING DAMAGES TO THE THREAD.

| NO | PARTS LIST | | QTY |
|----|----------------------|---|-------|
| 1 | CHAIR BACK |  | 1 pc |
| 2 | FRONT LEG |  | 1 pc |
| 3 | WOODEN SEAT |  | 1 pc |
| 4 | SIDE RAIL (FL) |  | 1 pcs |
| 5 | SIDE RAIL (FR) |  | 1 pcs |
| 6 | SIDE LOWER RAIL (FL) |  | 1 pc |
| 7 | SIDE LOWER RAIL (FR) |  | 1 pc |

| NO | HARDWARE LIST | QTY |
|----|---|-------|
| A |  JCBC BOLT M6 x 50mm | 8 pcs |
| B |  SPRING WASHER | 8 pcs |
| C |  FLAT WASHER | 8 pcs |
| D |  CSK SCREW M4 x 38mm | 4 pcs |
| E |  CSK SCREW M4 x 32mm | 3 pcs |
| F |  ALLEN KEY | 1 pc |

NOTE: THE LIST QUANTITY SHOW ABOVE IS FOR 1 UNIT ASSEMBLY

