 


 

 
 







A*1	B*1	C*2	D*2	E*2	F*4	G*4	H*1	I*2
								
Seat	Backrest	Front legs	Back legs	Washers	M6*18mm Screws	M8*25mm Screws	Allen key	Metal Grooves


1 Take out all the Spare parts from the bottom of the chair.




2 Assemble the legs and tighten the screws.

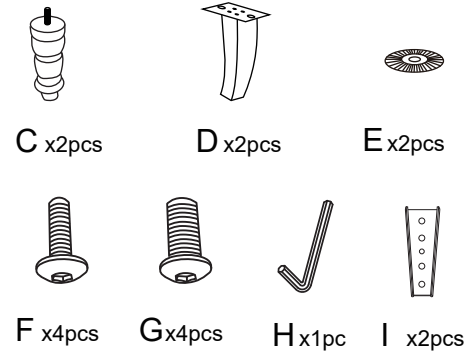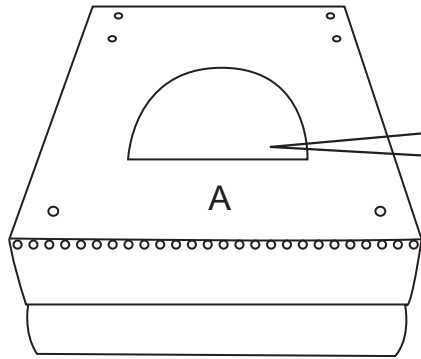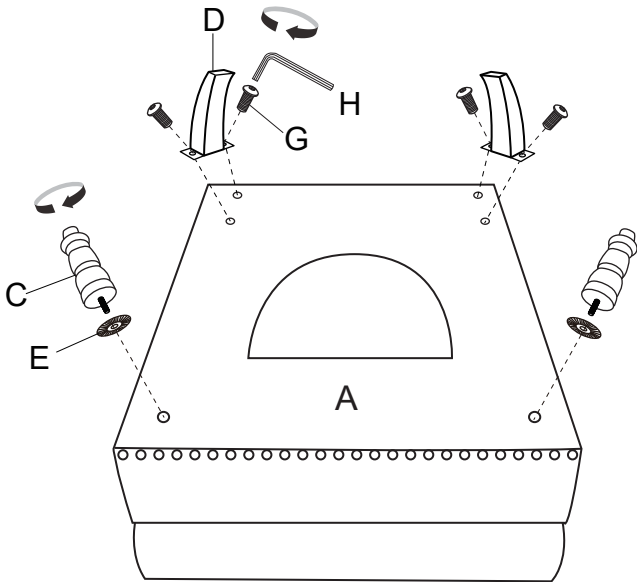

3 Assemble the metal grooves(L) to the armrests.

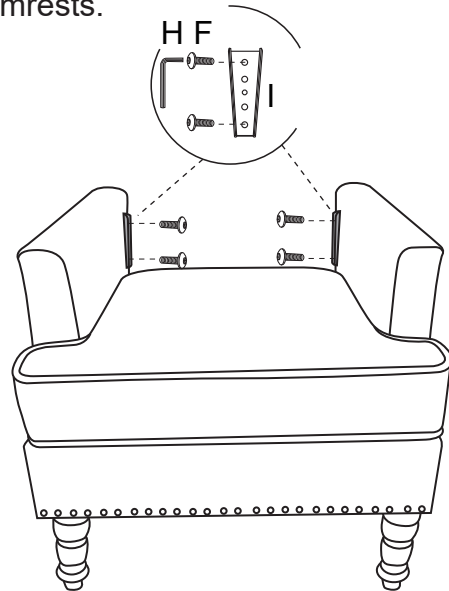

4 Connect the backrest(B) to the Seat(A) by aligning the metal grooves and sliding down to the bottom. Make sure the backrest is installed in the middle of the metal grooves for interlocking.

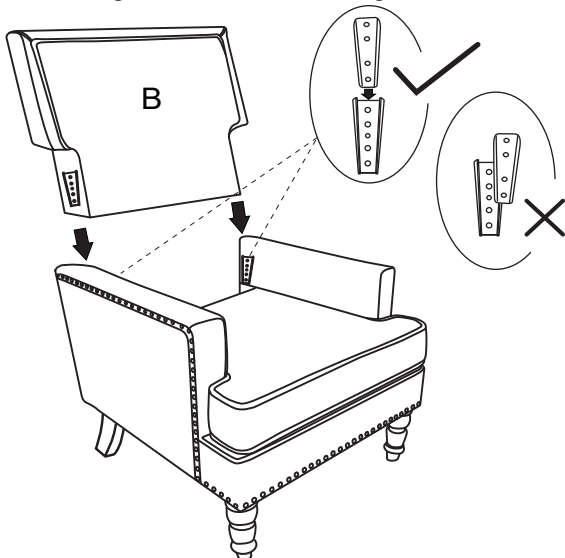

5 Put the pillow on the seat so that you can enjoy the chair comfortably.

