


MODEL#

CM3559PC-2PK

Questions?

GIVE US A CALL: 1-888-980-5122 MON – FRI 8:30AM – 5:30PM (PST)

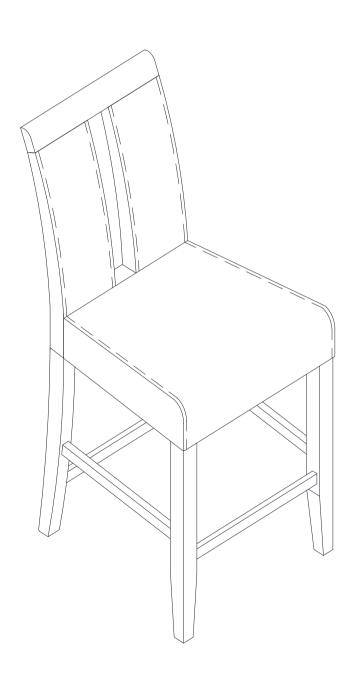

TOOLS REQUIRED



Allen Wrench

(Included)



Phillips Screwdriver (Not Included)



2 - Persons Recommended

ASSEMBLY RATING



EASY ── DIFFICULT

The Assembly Rating is a 5-point system showing the level of effort needed to assemble a specific product.

VERSION # 19-10-15





Thank you for your purchase!

We hope you enjoy this new addition to your home for many years to come.

Our commitment to providing quality products does not simply end when you purchase our product. We fully stand behind our products from start to finish. Our customer service department is available Monday – Friday 8:30 AM – 5:30 PM Pacific and can help with assembly questions as well as, if necessary, replacing damaged or missing parts. To help expedite our service, please have these assembly instructions readily available, along with your order receipt.



Consumer Hotline Toll-Free 1-888-980-5122



WEBSITE www.foagroup.com











Monday to Friday 8:30AM- 5:30PM (PST)



E-MAIL cs.ec@foagroup.com



FurnitureOfAmerica



| Are you missing anything? Double-check all parts, hardware and accessories listed on Page 6 are accounted for. |
|---|
| Should we send any replacements? Are there any irregularities or flaws in the parts? We can send replacements! |

Check out our Quick Tips!

We recommend reviewing the pre-assembly handouts. Even experts need a refresher now and then!

Prep Time!

Please review the assembly instructions and all diagrams prior to assembling. Set up your workspace by laying the parts and hardware out separately, then begin!

PRE ASSEMBLY INTRODUCTION


We understand building ready-to-assemble furniture can be a challenging experience for some. To help avoid confusion, we have provided some helpful tips that may speed up the process.





Teamwork

ALWAYS have at least two people to help with transporting and assembling the product to avoid potential injury and/or damage.

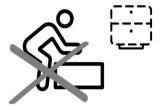



Suitable Location

Assembling near the area of the intended location is highly recommended.





Sufficient Space

Make sure you have enough space to move around during the assembly.





Avoid Scratches

Use cardboard, blankets or a carpeted area while assembling furniture to prevent scratches.





Flat Surface

Make sure the furniture rests on a flat and level surface with each leg evenly touching the floor.

ASSEMBLY AND CARE ADVICE




FAILURE TO FOLLOW THE GUIDELINES BELOW MAY RESULT IN INJURY AND/OR PROPERTY DAMAGE.



Position each part correctly and insert screws or bolts into their respective holes.



Use the appropriate hand tools or power tools for assembly. Select steps, such as tightening screws and/or bolts, may require hand tools to avoid causing damage during assembly.

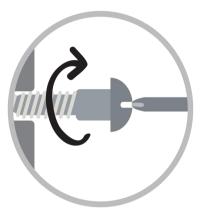

Turn clockwise to tighten and only tighten when step is completed or when instructed to do so



Save the instructions and store any supplied tools for later maintenance.



After two weeks, check and tighten any loose hardware and repeat again every six months thereafter.


IT IS THE USER'S RESPONSIBILITY TO MAINTAIN THE FURNITURE. THE HARDWARE MAY LOOSEN OVER TIME AND MAY CAUSE THE FURNITURE TO BE WOBBLY AND UNABLE TO SUPPORT ITS INTENDED WEIGHT CAPACITY. THIS MAY LEAD TO COLLAPSE AND MAY CAUSE SERIOUS INJURY.


COUNTER HEIGHT CHAIR

CM3559PC-2PK



- Please keep instructions for future reference.
- Check the quantity and irregularity of parts and hardware before you start.

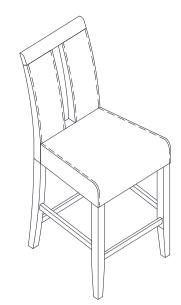

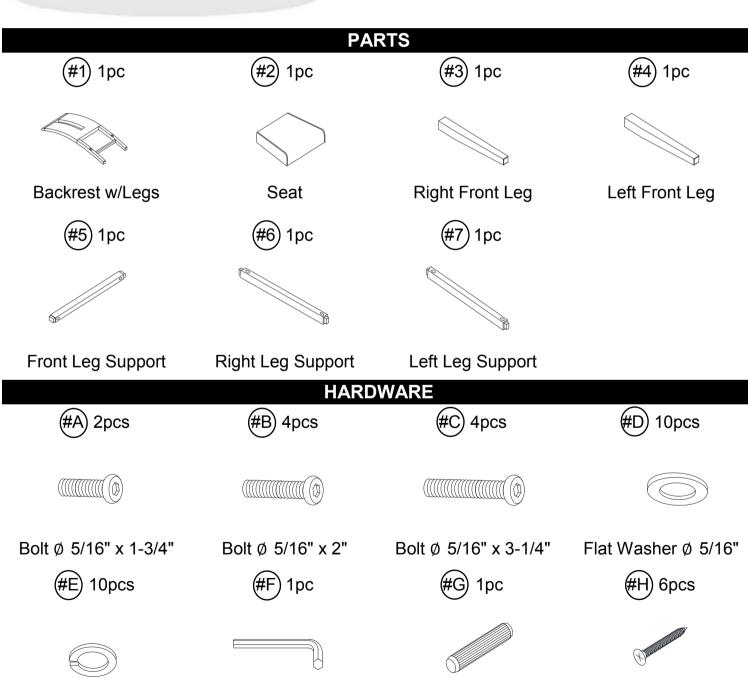

Wood Dowel

Wood Screw

Allen Wrench

Lock Washer Ø 5/16"


1

Insert the front leg support (#5) into the right front leg (#3) and the left front leg (#4).

Part #3 x1pc

Part #4 x1pc

Part #5 x1pc

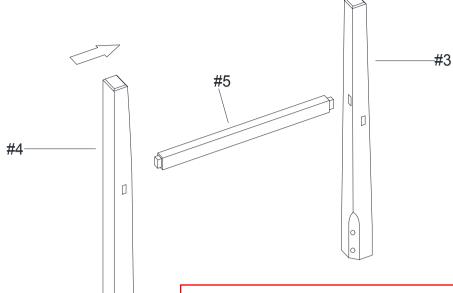

Note: Right and left are determined by facing the front of the chair in the upright position.

2

Part #2 x1pc

Part #3x1pc

Part #4 x1pc

Part #5 x1pc


Hardware (#B) x4pcs

Hardware (#D) x4pcs

Hardware (#E) x4pcs

Hardware #G x1pc

- Place the seat (#2) facing down on a protected surface. Insert a wood dowel (#G) into the center hole of the seat (#2).
- II. Align the assembled front legs with the pre-drilled holes of the seat (#2).
- III. Prepare 4 bolt assemblies by inserting FIRST the lock washer (#E) onto the bolt (#B) and then the flat washer (#D) onto the SAME bolt (#B), in that order.
- IV. Insert the bolt assembly through the corner holes of the seat (#2) and secure those bolts using the Allen wrench (#F) to lock them with the right front leg (#3) and the left front leg (#4).

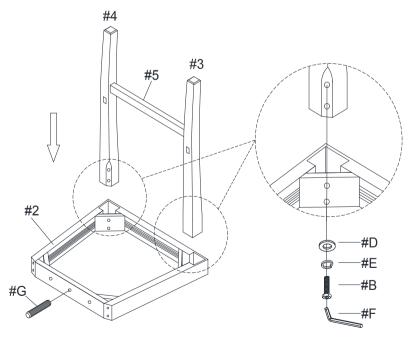

Turn right (clockwise) to tighten

Part #1) x1pc

Part #6 x1pc


Part #7 x1pc


Hardware (#A) x2pcs

Hardware (#D) x2pcs

Hardware (#E) x2pcs

- I. Insert the right leg support (#6) into the right front leg (#3) and insert the left leg support (#7) into the left front leg (#4).
- II. Align the backrest with legs (#1) with the wood dowel (#G) and the other ends of the leg supports.
- III. Prepare 2 bolt assemblies by inserting FIRST the lock washer (#E) onto the bolt (#A) and then the flat washer (#D) onto the SAME bolt (#A), in that order.

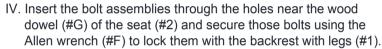

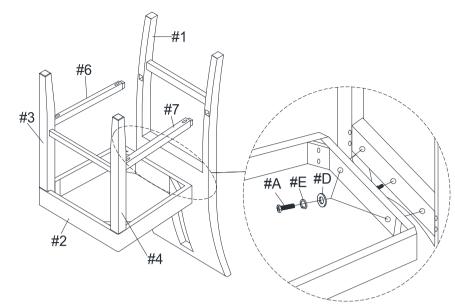

Turn right (clockwise) to tighten




Hardware #C x4pcs

Hardware (#D) x4pcs

Hardware (#E) x4pcs


- I. Prepare 4 bolt assemblies by inserting FIRST the lock washer (#E) onto the bolt (#C) and then the flat washer (#D) onto the SAME bolt (#C), in that order.
- II. Insert the bolt assemblies through the corner holes of the seat (#2) and secure those bolts using the Allen wrench (#F) to lock them

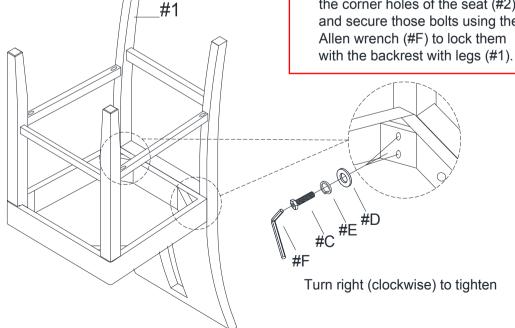

5


Hardware (#H) x6pcs

Secure all the leg supports with 6 wood screws (#H) using a Phillips screwdriver to lock them with the backrest with legs (#1), the right front leg (#3) and the left front leg (#4).

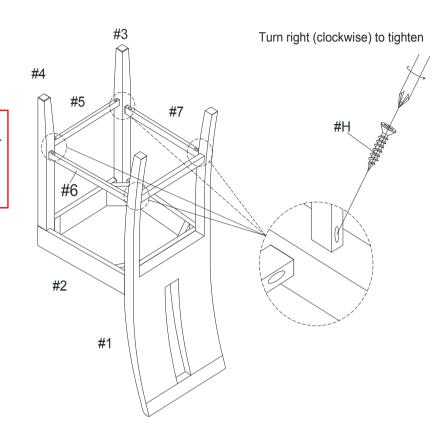

6

Carefully place the completed chair in the upright position. Make sure the chair is rested on a flat surface and does not feel loose or wobbly. If it does, double check that the bolts/screws are secured and properly tightened.

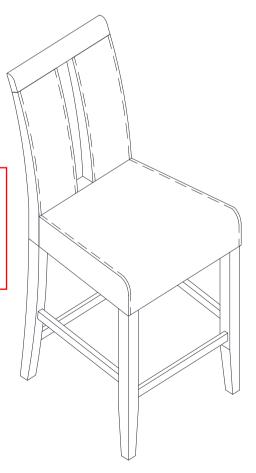

ASSEMBLY COMPLETED



furniture rests on an ever and flat surface. If the product wobbles or feels loose, double-check all bolts and/or screws are properly tightened and secured.

Keep this handy!

Please retain this instruction manual and any order-related information for future reference.