 
 


Assembly Instruction

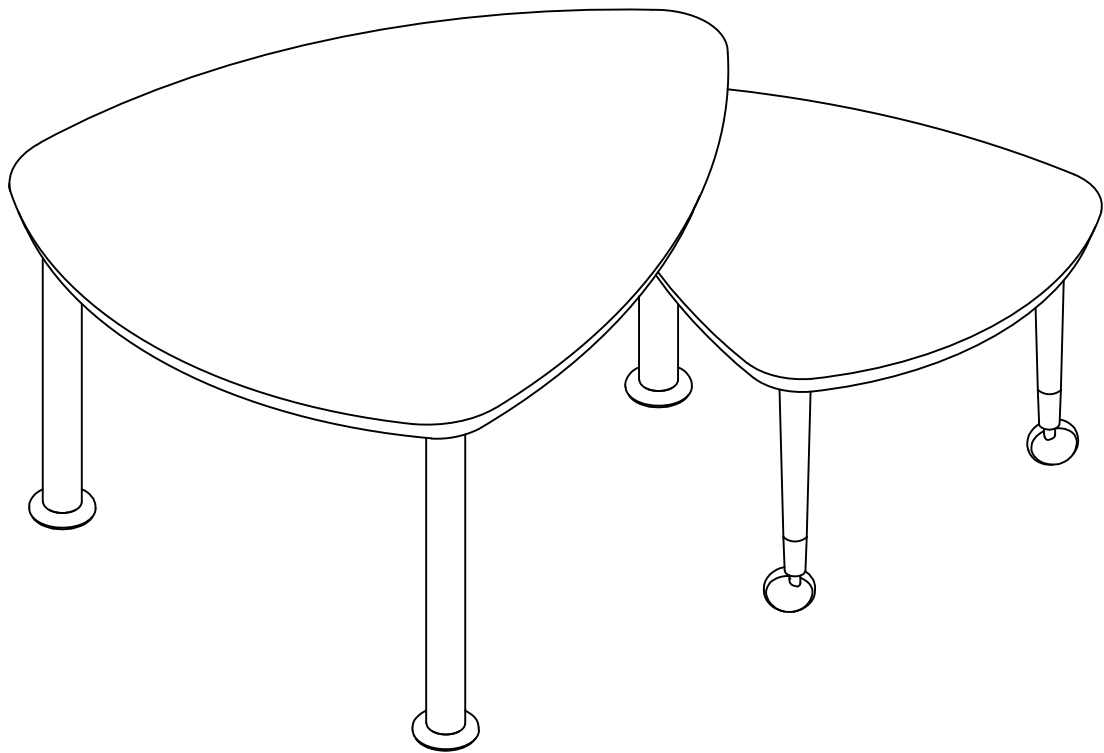

ASSEMBLY INSTRUCTION

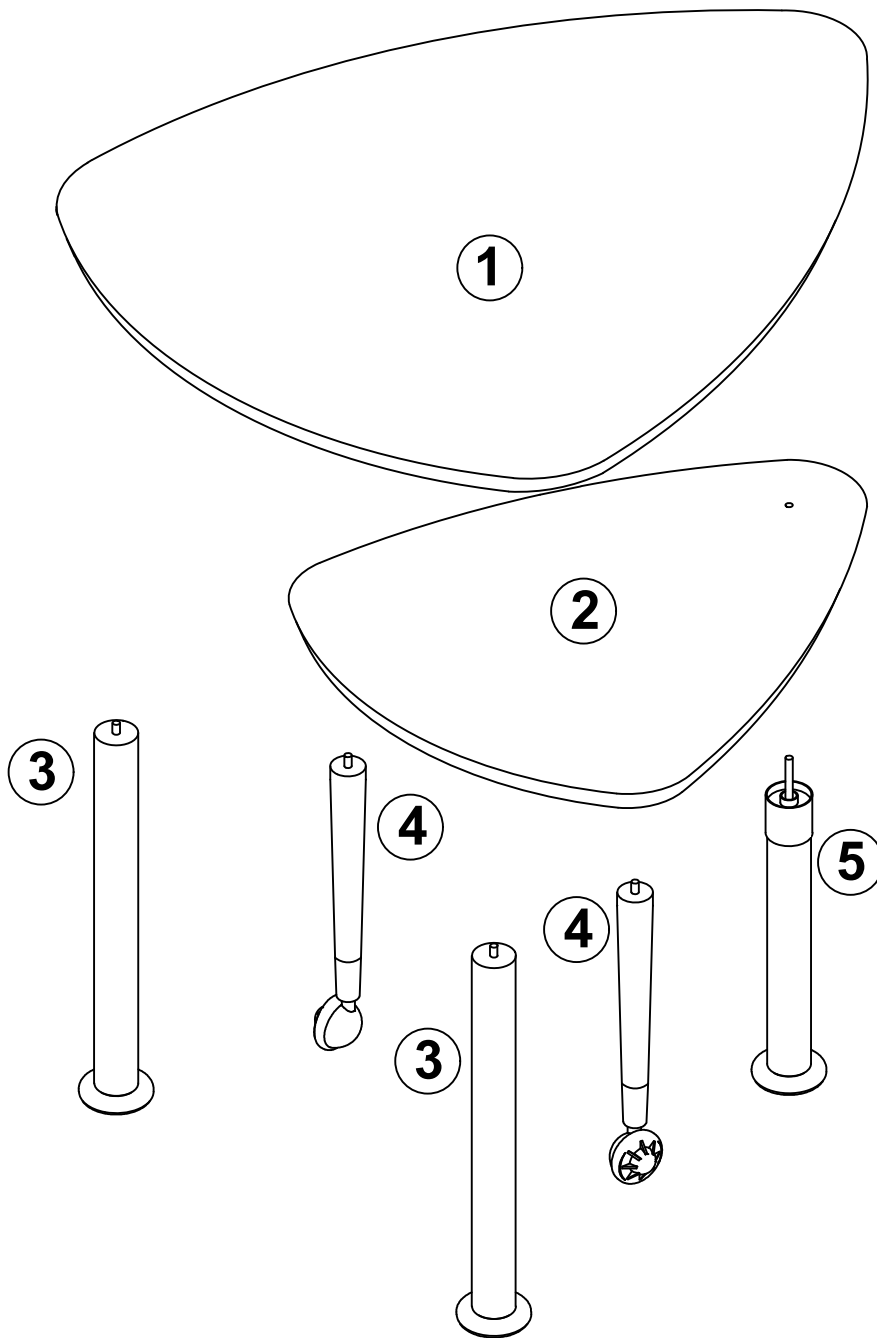

 
HARDWARE

A x 3




M8 * 30mm

B x 4




M6 * 15 mm

 C x 2

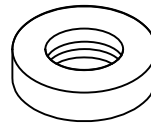

Ø37*11mm

 D x 2




Ø30*2mm

E x 3




Ø16*1.2mm

 F x 3

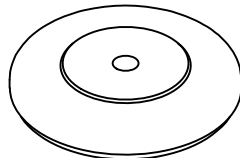


Ø80*15mm

 G x 1

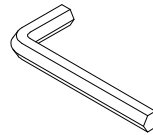


M5

 H x 1



M4

 I x 1

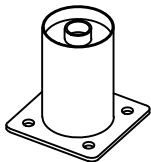

75*75*80mm




J x 5

 


Ø20*1mm

ASSEMBLY INSTRUCTION



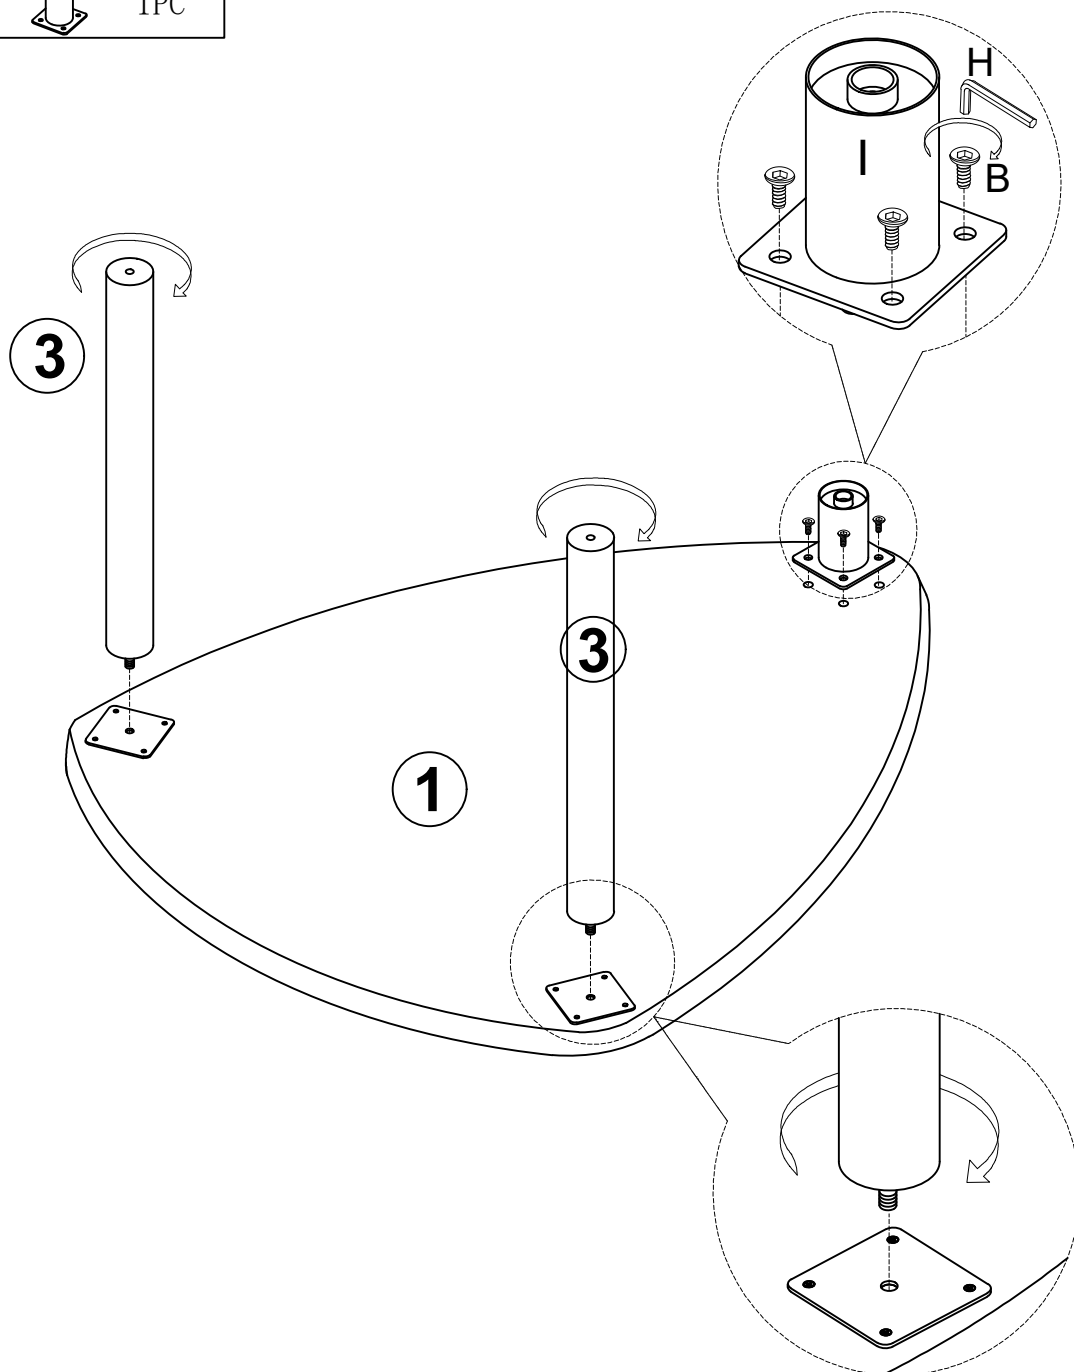

STEP 1


B:		4PCS
H:		1PC
I:		1PC



ASSEMBLY INSTRUCTION


STEP 2

A:		2PCS
G:		1PC
E:		2PCS
F:		2PCS

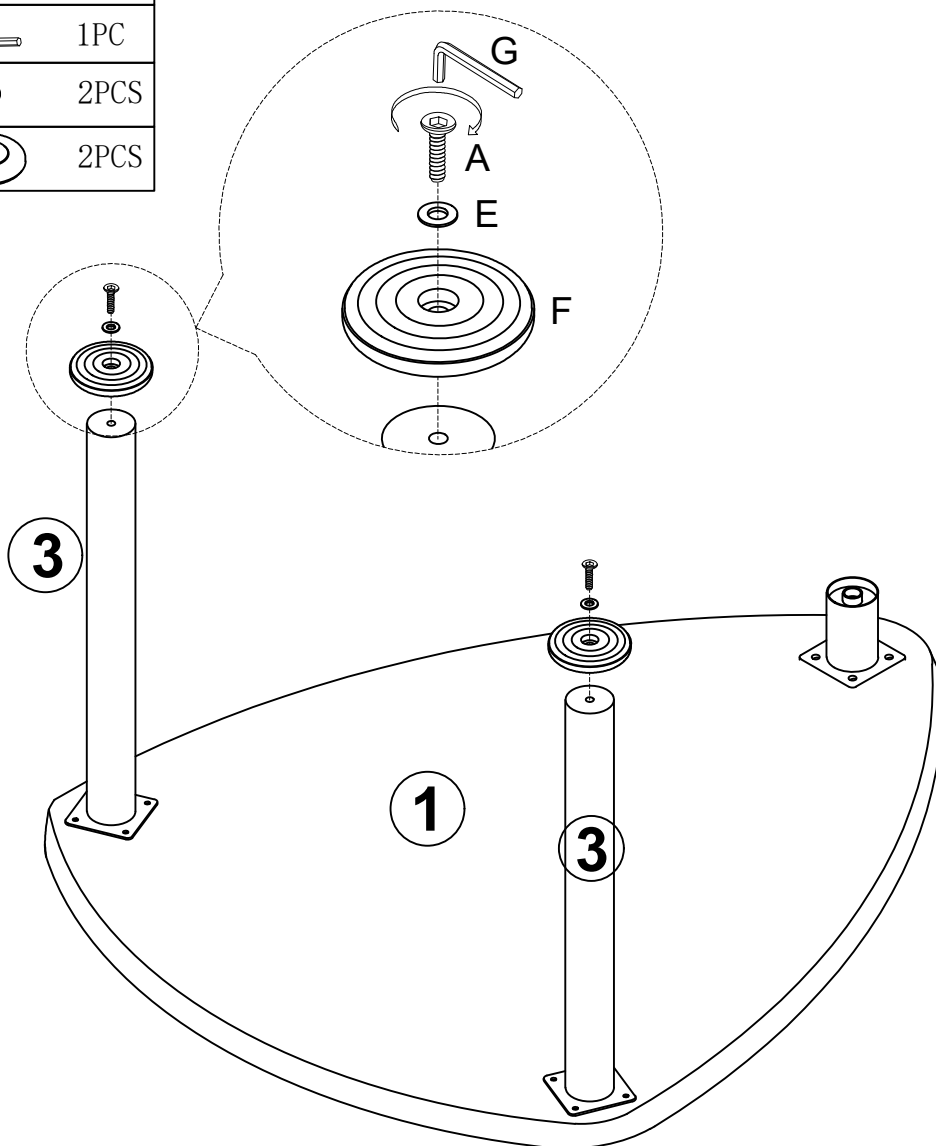 




ASSEMBLY INSTRUCTION

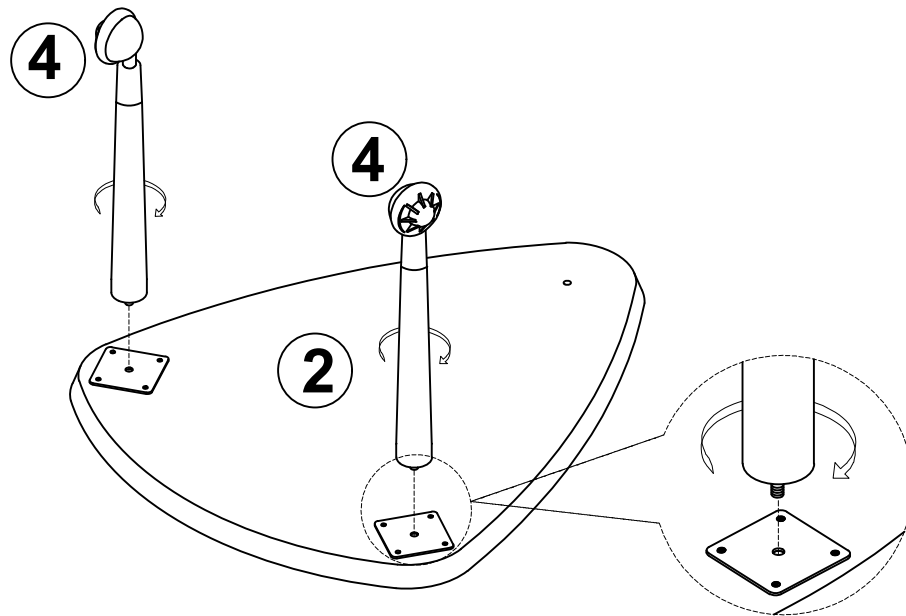 STEP 3



STEP 4

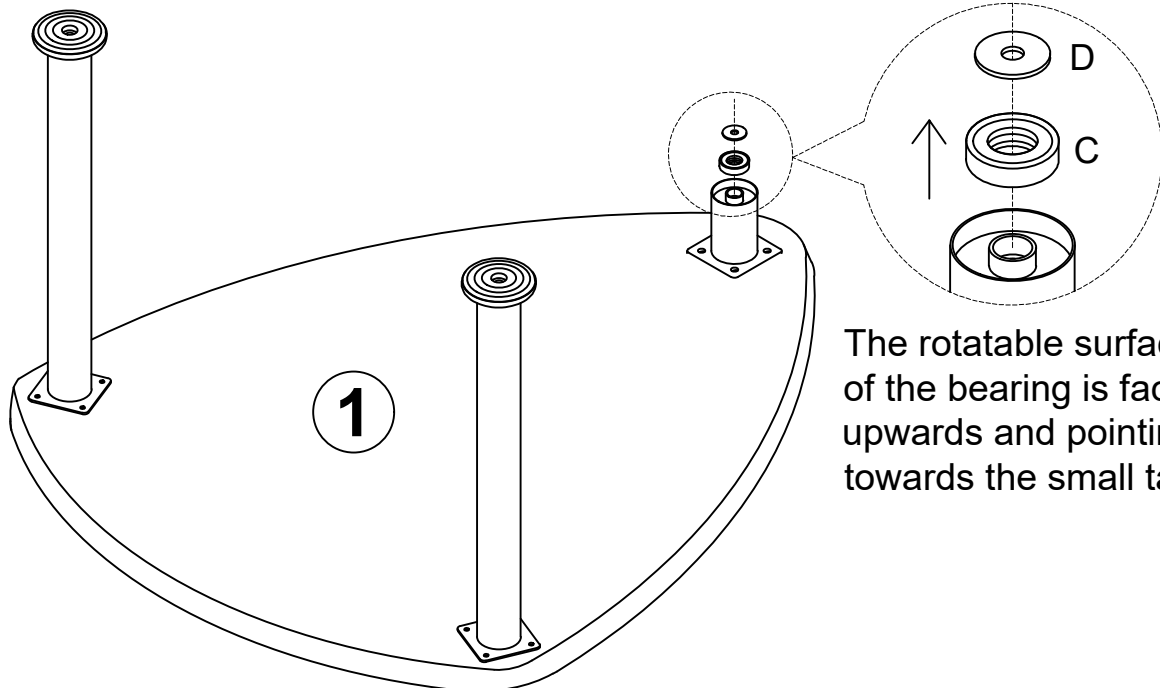

C:		1PC
D:		1PC




The rotatable surface of the bearing is facing upwards and pointing towards the small table.

ASSEMBLY INSTRUCTION

STEP 5

C:		1PC
D:		1PC

The rotatable surface of the bearing is facing downwards and pointing towards the small table.

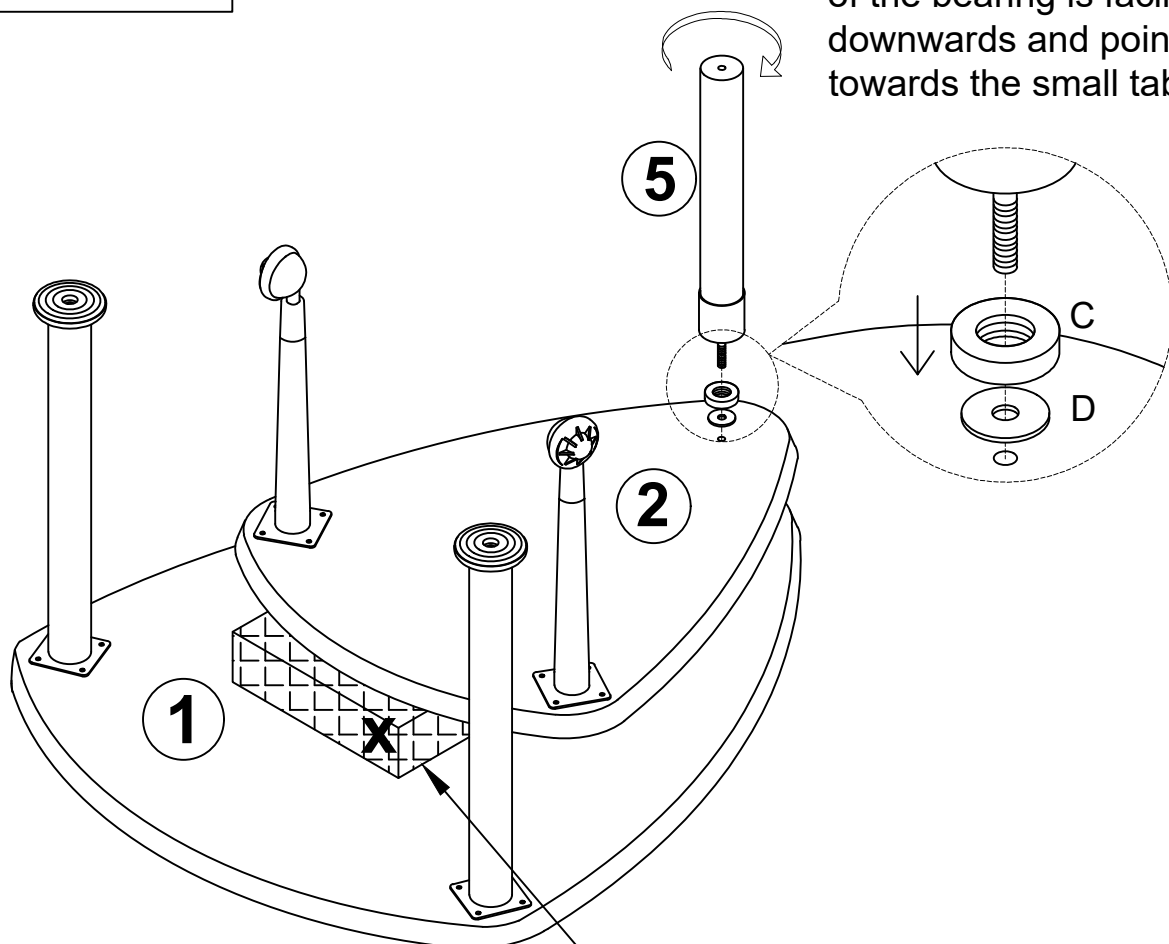




Please note:


Do not tilt the small tabletop!!!

Before installing the leg ⑤, please place a support item **X** on the edge of the small tabletop to ensure that the small tabletop is parallel to the large tabletop, and the hole of the small tabletop is perpendicular to the center axis of rotation, so that the screws of the leg can be installed smoothly.

ASSEMBLY INSTRUCTION



STEP 6

A:		1PC
E:		1PC
F:		1PC

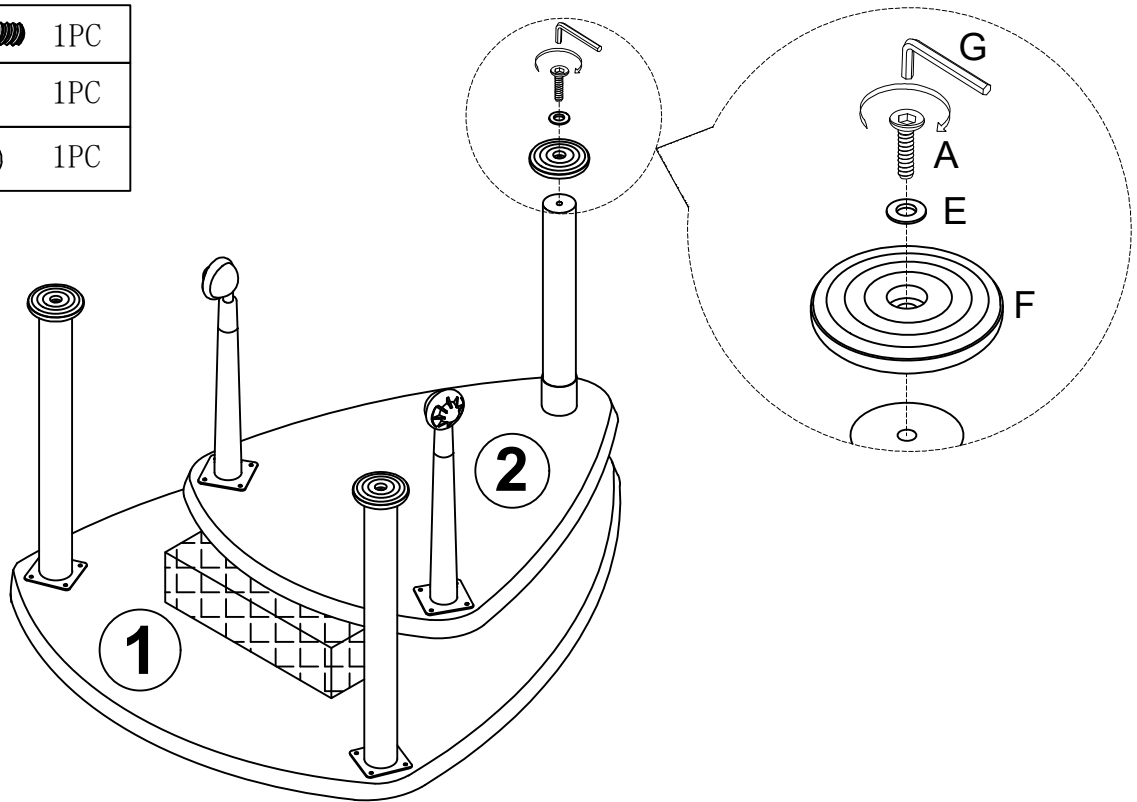

STEP 7

J:		5PCS
----	---	------

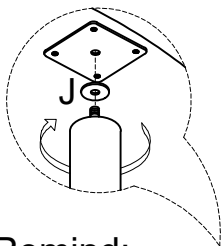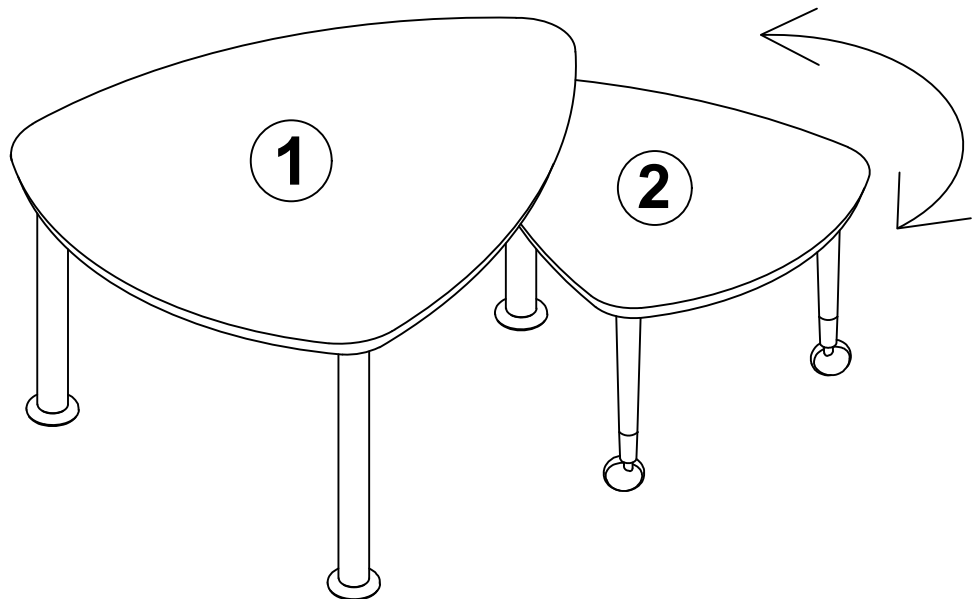  

Remind:

After installation, if you find that any leg is uneven or not fully touching the floor, remove the leg, add one or two spare silicone gaskets (J) tighten the leg and slowly adjust it until it is completely flat.