

Pendant Light

[Instruction Manual]



Warning:

Risk of fire. Min 167°F/75°C supply conductors. Consult a qualified electrician to ensure correct installation. Before installation, please turn off the main power of the circuit breaker to prevent possible electric shock.

Installation Instructions

FIG.1. Turn the wall switch to the "OFF" position.

Depending on which type of fuse box in your home:

FIG.2. Either turn the main (Master) switch to the "OFF" position to cut off the power supply of the entire home, or turn off the individual switch that supplies power to where the fixture will be installed.

OR

FIG.3. Either turn the main (Master) switch to the "OFF" position to cut off the power supply of the entire home, or unscrew the fuse that supplies power to where the fuse will be installed.

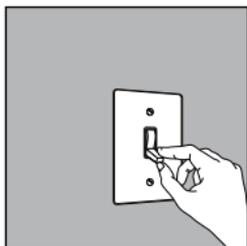


FIG.1 WALL SWITCH

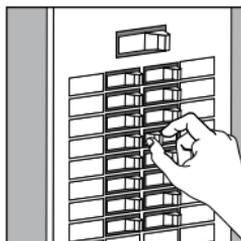


FIG.2 BREAKER PANEL


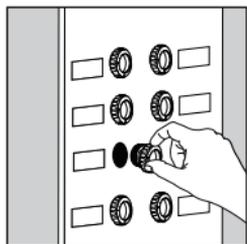



FIG.3 FUSE BOX

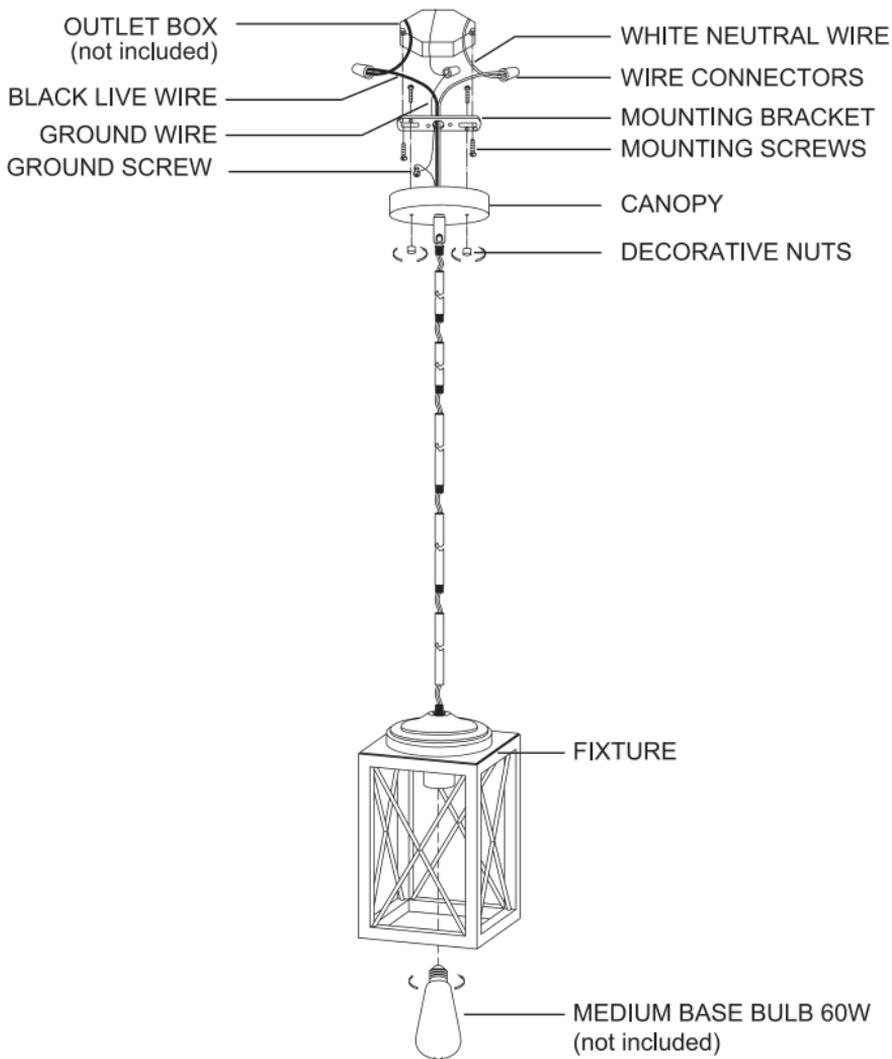

1. Choose the pipe or pipes you needed, pass the wire through the pipes and canopy, then connect the canopy, pipe, glass shade and bulb(not included).
2. Install mounting bracket onto outlet box by provided outlet box screws.

3. Connect COPPER WIRE (ground wire) from the light to the ground wire from outlet box by using Green Grounding Screw onto the bracket.
Connect BLACK WIRE (live wire) from light to the bare end of live wire from outlet box by twisting wire connector.
Connect the WHITE WIRE (neutral wire) from the light to the bare end of neutral wire from outlet box by the other wire connector.
4. Make sure wire connections are secure. Carefully place wires into outlet box.
5. Install the light fixture over mounting bracket and secure the fixture with decorative nut.

 Parts List



Mounting Bracket
X 2



Mounting Screw
X 4



12" Pipe
X 6



Wire Connector
X 6



6" Pipe
X 4



Decorative Nut
X 4

Specifications

- Input Voltage: 120VAC 60Hz
- Max.load Power: Incandescent Bulb 60W
- Socket Type: Standard Medium E26

One Year Limited Warranty

We warrant this product to be free from defects in material and workmanship for a period of one year from the date of purchase. Warranty is void if damage is caused by misuse or improper installation. Our dedicated customer service team will get back to you within 24 hours.

