

## – Installation steps



### Reminder



There is an ultrasonic wave in the spraying area of the atomizer head, and it will feel prickly when you touch it. It is not an electric current, but an ultrasonic wave. Please feel free to use it!

### Use of atomizer

- 1、When the atomizer is running, the atomizer head cannot leave the water surface
- 2、Do not touch the atomizing chip when the atomizer is running
- 3、Please use clean water instead of turbid water
- 4、It is best not to use it more than 10 hours a day
- 5、The atomizing film is easy to wear, and the service life is about 3000 hours
- 6、If the fog is reduced, please use a cotton swab or soft cloth to clean the fogging film

### Use of water pump

- 1、Cannot run the water pump without water
- 2、If the water output is reduced, check whether the pump valve is increased
- 3、When the water pump comes out of the water, please add water to the water level in time
- 4、After using the pump for a long time, please clean the internal scale of the pump
- 5、In order to extend the service life of the water pump, do not turn on the water pump for 24 hours

**Warm Tips:** If the ball does not rotate, it may be that the product is not lying flat. It is recommended to pad the unevenness at the bottom of the product with a gasket until the ball rotates. If the stone does not rotate, you can plug the hose with a sponge until the stone can turn.

### Install the atomizer

Only the fog version has this function



Schematic diagram of water flow regulation

