

DO NOT RETURN YOUR CANOPY TO THE PLACE OF PURCHASE

Please contact ShelterLogic® for questions, comments, parts & accessories, or assistance with any warranty related issues. www.ShelterLogic.com/support
Toll free : (888) 288-2345

Limited 1 Year Warranty

Subject to the following limitations, in addition to any imposed by virtue of applicable law, ShelterLogic® warrants this QUIK SHADE® Canopy to be free of defects in material or workmanship for a period of one year from the date of original purchase. This warranty is limited to the replacement of defective parts only.

1. This Limited Warranty will apply only if the QUIK SHADE® and/or its parts are properly returned to the ShelterLogic® customer service department listed below and are determined by ShelterLogic® in its sole discretion, to be defective. In some cases, pictures of the unit may be requested in place of the unit itself.
2. This Limited Warranty applies only to QUIK SHADE® Multi-Purpose Canopies purchased from authorized dealers. This Limited Warranty is extended only to the original purchaser and is not transferable.
3. Be sure to retain your original purchase sales receipt for any warranty claim. All warranty claims must be accompanied by a copy of the original purchase receipt from the authorized dealer.
4. Before returning any QUIK SHADE® Canopy and/or parts to ShelterLogic® for warranty inspection, the consumer purchaser must obtain prior authorization from ShelterLogic®. Such authorization can be obtained by calling our customer service representatives at the toll-free numbers listed below, or writing to the ShelterLogic® customer service department at the address listed below. Customer is responsible for shipping costs.
5. Certain regions of the country have environmental conditions that are extremely hard on canopy covers of any kind. If you live in Arizona, Florida, Nevada, New Mexico, Texas, OR in high altitudes [above 3000 feet], the warranty period for your canopy top will be limited to 6 months from the date of original purchase. [After expiration of that 6 month period and up to a period of one year following date of original purchase, you may purchase a replacement canopy top at a reduced price from our customer service department.]
6. This Limited Warranty does not cover damage or loss from: wind, rain, fire, snow, ice, or other forces of nature; accident; normal wear; improper assembly disassembly, or adjustment during set-up or take-down; or any abuse, neglect or misuse of this QUIK SHADE® Canopy and/or its parts.
7. To the extent allowed by applicable law, any implied warranty of merchantability or fitness applicable to this QUIK SHADE® Canopy is limited to the duration of this Limited Warranty. ShelterLogic® does not warrant against, and in no event shall ShelterLogic® or its authorized agents be liable for any personal loss, injury, or direct or indirect incidental or consequential damage resulting from the use of this product. Please note that some states do not allow the exclusion or limitation of incidental or consequential damages, so the above limitation or exclusion may not apply to you. This Limited Warranty gives you specific legal rights and you may have other rights which vary from state to state.

8. Upon receipt of authorization from our customer service department, you must submit your warranty claim to the address below, shipped prepaid and accompanied by a copy of the original dated purchase receipt. Do not return this product to the place of purchase. For warranty service, or for missing parts, replacement parts or any other problems, call or write to our customer service department below. We will send any replacement parts via Ground.
9. Any alterations made to the canopy by the customer will void the warranty.

WARNING: KEEP ALL FLAME AND HEAT SOURCES AWAY FROM THIS TENT FABRIC. This tent meets the flammability requirements of CPAI-84. The fabric will burn if left in continuous contact with any flame source. The application of any foreign substance to the tent fabric may render the flame resistant properties ineffective.

WARNING: Before storing your QUIK SHADE®, be sure the canopy top is not wet or damp. Storing your QUIK SHADE® while it is even slightly damp may cause mildew. Allow your canopy top to completely dry before taking it down. If you must take down your QUIK SHADE® while the canopy is damp, remove the canopy top from the frame by unfastening the hook and loop straps. Fold up the frame and lay the canopy top down, fully open, as soon as possible and allow it to completely dry.

Please read completely before setting up your QUIK SHADE® Instant Canopy

1. It is your responsibility to read below and save these instructions before attempting to set up or take down your instant canopy.
2. The canopy is designed to provide shade protection only and caution must be used in any adverse weather conditions, including wind and rain.
3. Do not use or continue to use in any rain, wind, or storm conditions -- especially lightning storms. Damage to the canopy can occur and put you and others in potential danger.
4. Always take your time when opening or closing the frame to avoid pinching your fingers or hands or damaging the frame.
5. Do not set up the canopy on steep inclines or uneven surfaces.
6. Do not use your canopy for permanent shelter or leave unattended, it is intended for temporary use only.
7. Keep canopy away from heat and flame at all times. Do not BBQ or build fires under or near the canopy.
8. The fabric top may be hand washed using mild soap and water. Do not use harsh detergents, abrasives or bleach and do not machine wash.
9. Never fold or store the canopy when it is wet or damp, allow to dry completely to avoid mildew.

QUIKSHADE®
INSTANT CANOPY

©2018 ShelterLogic Corp., Watertown, CT 06795
ALL RIGHTS RESERVED • MADE IN CHINA
ShelterLogic® is a registered trademark of ShelterLogic Corp.


Owner's Manual

Please review the following instructions and make yourself familiar with the parts and function of your Quik Shade® canopy.



Parts included:

- [1] assembled canopy frame
- [1] fabric canopy top
- [1] storage bag
- [4] stakes


Set-Up --Step 1: Place the canopy frame only in the center of the setup area. Hold the two outer legs and lift slightly for ground clearance. Take a few steps back and extend the frame to full arm's length, approximately four feet (Fig. A).

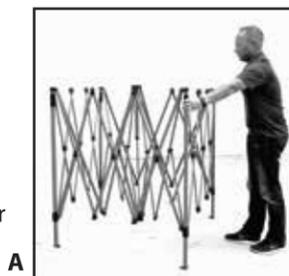

Step 2: Lift the side of the frame up and bend slightly down underneath the center of the canopy frame (Fig. B). Then push up on the center One Push mechanism until it snaps into place (Fig. C) and the entire frame is fully extended (Fig. D).

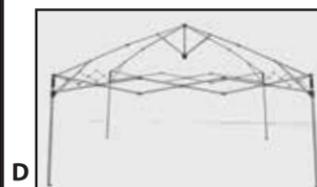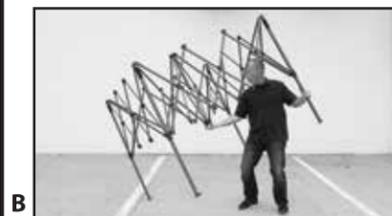

Step 3: Place the canopy over the top of the frame. Use the hook and loop straps to secure each corner of the cover to the upper portion of each leg (Fig. E). Additionally, attach the hook and loop straps on the underside of the canopy to the frame to ensure the canopy is securely attached to the frame (Fig. F).

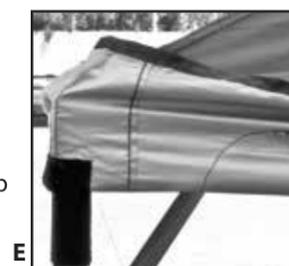

Step 4: The adjustable legs offer multiple height positions. Tilt one side of the canopy upward and extend a lower leg section until it clicks into place (Fig. G). Repeat on the adjacent leg until all legs are extended. When extending the legs avoid having only two diagonal legs extended.



Step 5:

Product information can be found on the sticker located on the eave of the frame (Fig. H).

Example



Go to shelterlogic.com/support/forms/product-registration/ and register your new canopy. If you have any issues setting up your canopy, have questions, need parts or accessories call our toll free service line (888) 288-2345.

Take Down --Step 1: Walk underneath the canopy to the center. Reach up to the One Push mechanism and simply turn counter clockwise until the canopy frame begins to close (Fig. I).



Step 2: Press the push button on the leg and lower each leg completely (Fig. J).



Step 3: Hold one side of the canopy and lift slightly, walk toward the other side of the canopy and the frame will begin to fold. Keep walking until the frame is about half-way closed (Fig. K). Be sure to avoid pinching your hands or fingers. Hold outside the legs and continue closing the canopy as you walk towards the other side. The completely folded canopy should stand up on its own.



Step 4: With the canopy standing, slide the bag over the top with the zippered end at the bottom (Fig. L). Turn the canopy over gently and zipper shut.

Note: The canopy top may remain in place for easier subsequent set-up. However, to prolong the life of the fabric, we recommend that you remove the top when storing your canopy.