


Fire Pit Table

INSTRUCTION MANUAL

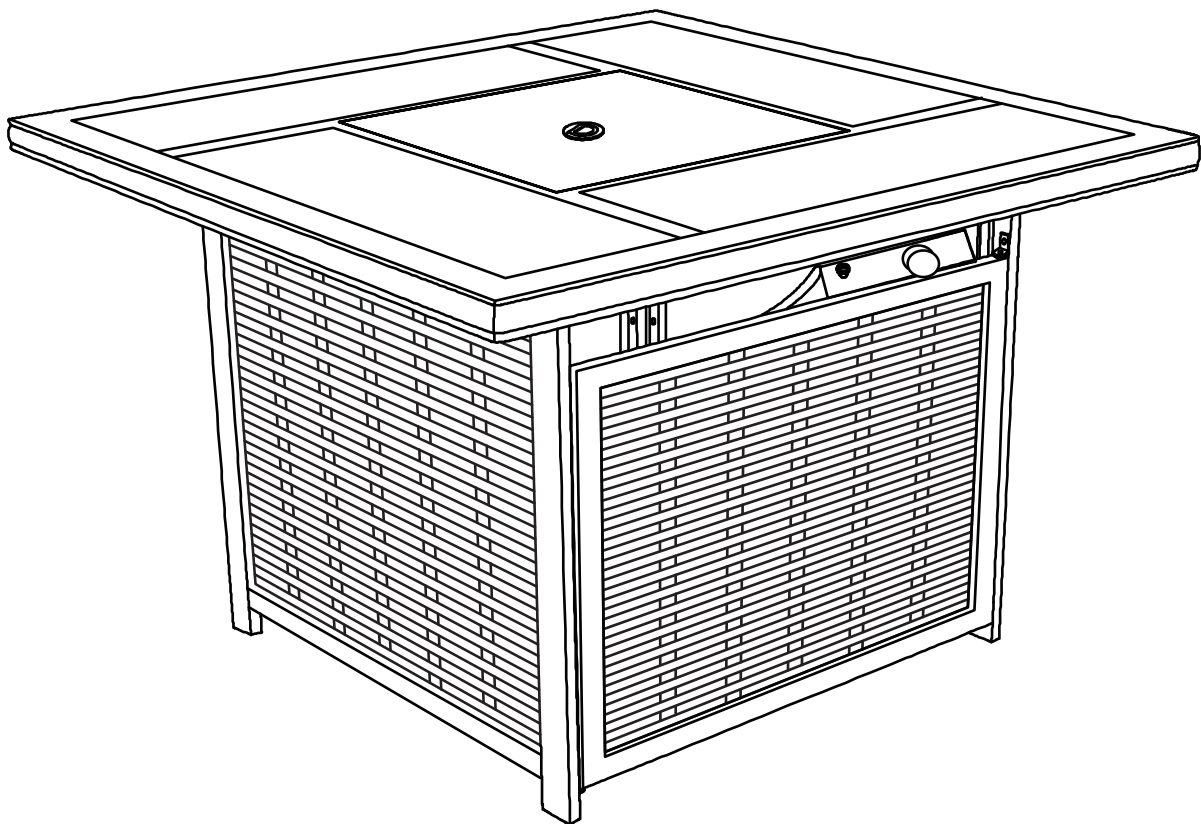

IMPORTANT: READ THIS INSTRUCTION CAREFULLY BEFORE PROCEEDING.

This manual will provide you with clear and detailed instructions on how to safely and correctly assemble and maintain your Fire Pit Table, to ensure it brings you enjoyment.

FOLLOW US ON

 @abbapatio

 @abbapatio

 @Abba_Patio

 
 

 



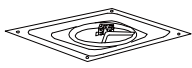 
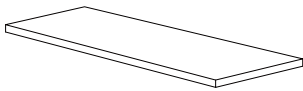 
 @abbapatio_official

 

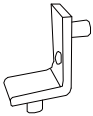 
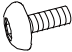 
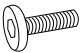 
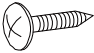 
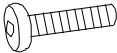 

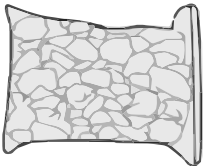

PARTS LIST

Make sure all parts listed below have been included in your package.

Tool required,
not included



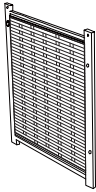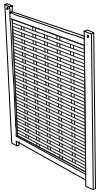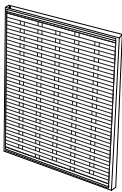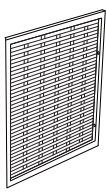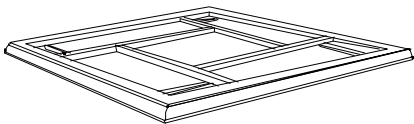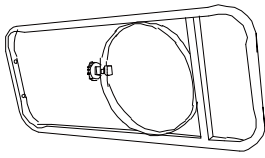

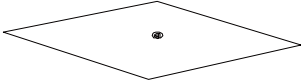




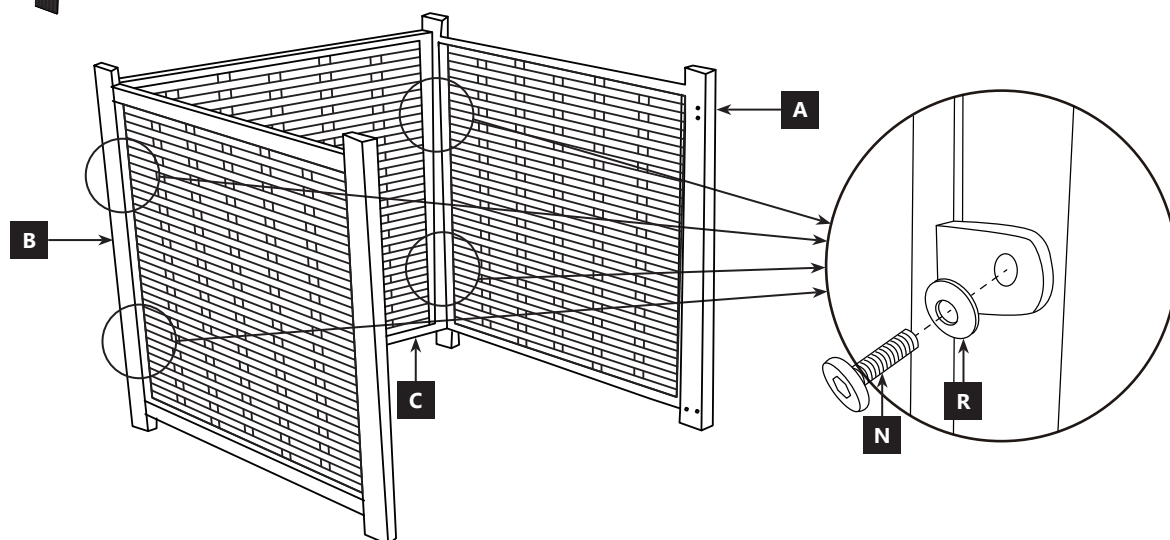
	REF	PART NAME	QTY
A		Left Panel	1
B		Right Panel	1
C		Back Panel	1
D		Front Door	1
E		Table Frame	1
F		Support Base	1
G		Support Frame	1
H		Burner	1
I		Table Top	4

	REF	PART NAME	QTY
J		Lid	1
K		Bracket Stator 1	1
L		Bracket Stator 2	1
M		Screw M6*10mm	4+1
N		Screw M6*15mm	10+2
O		Screw ST4*12mm	2+1
P		Screw M6*25mm	4+4
Q		Washer	18+2
R		Glass Beads	1
S		Hex Key	1

ASSEMBLY









1. Panel assembly


- T** x1  or 
A x1  **N** x4 
B x1  **R** x4 
C x1 



1A) Secure the left panel **A**, the right panel **B** and the back panel **C** with screw **N** and washer **R**.

2. Support frame assembly



- T** x1   or 
F x1  **Q** x4 
G x1  **R** x4 
O x2 

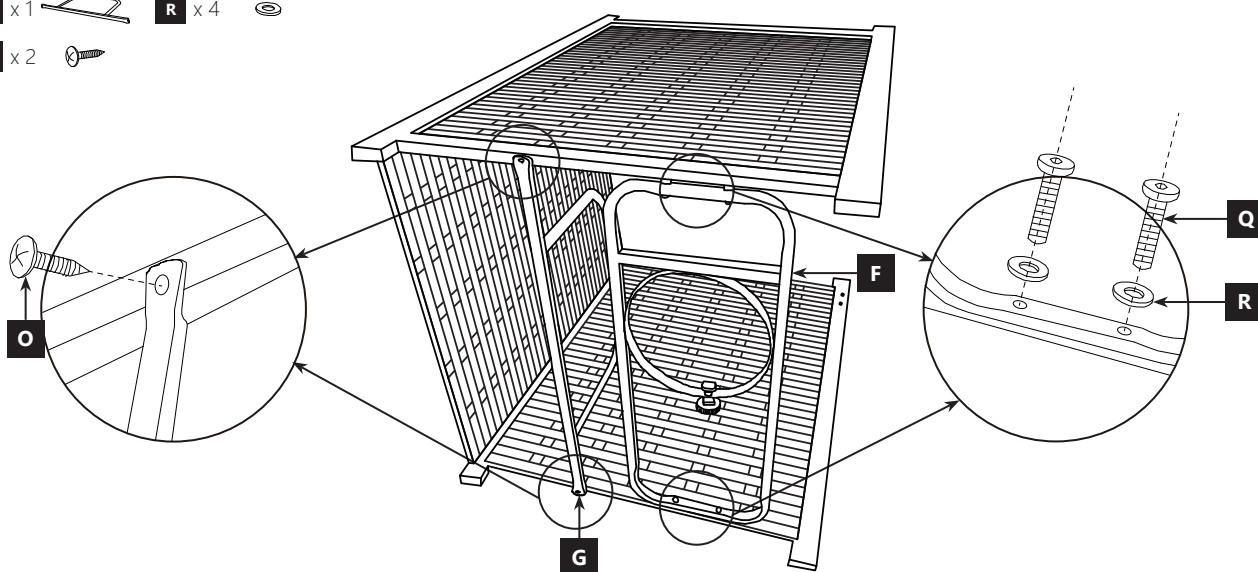



2A) Secure the support frame **G** with screw **O**.

2B) Secure the support base **F** with screw **Q** and washer **R**.

3. Front door assembly

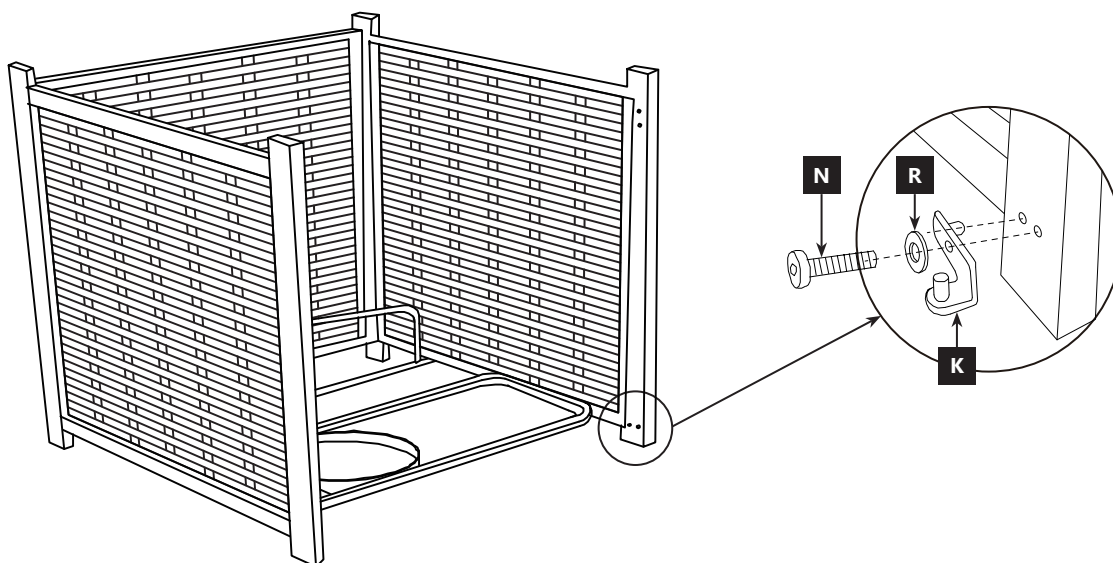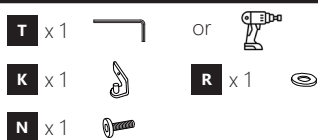



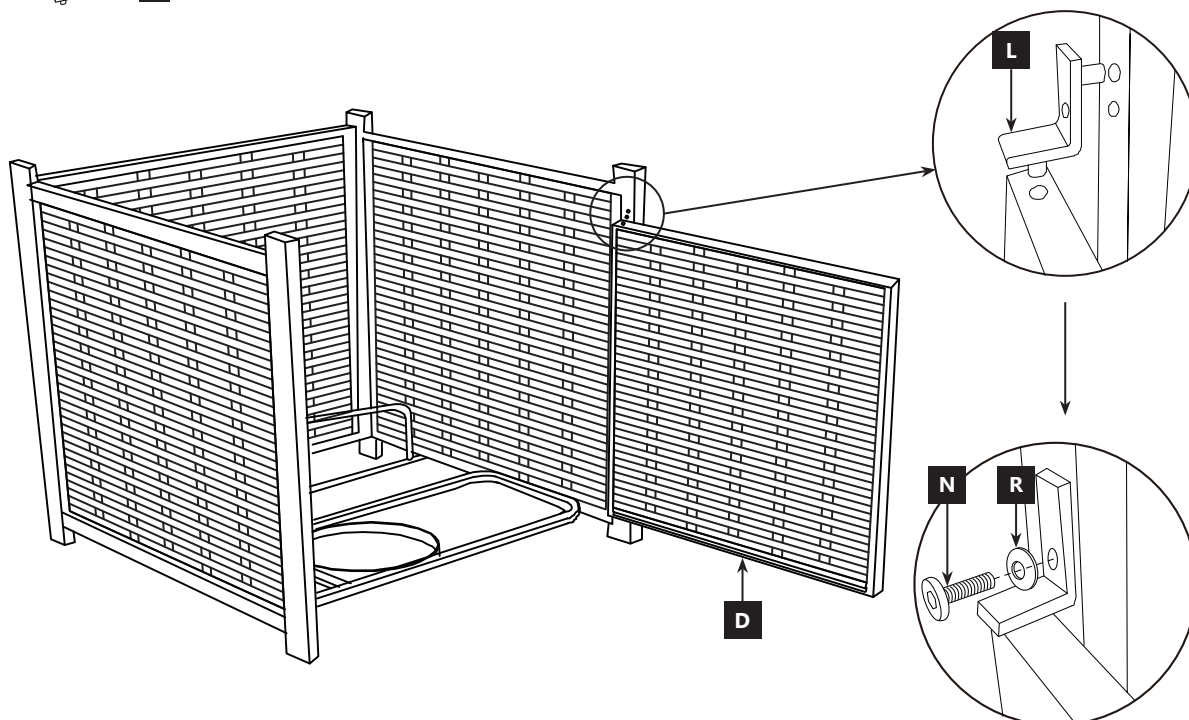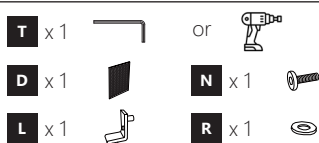


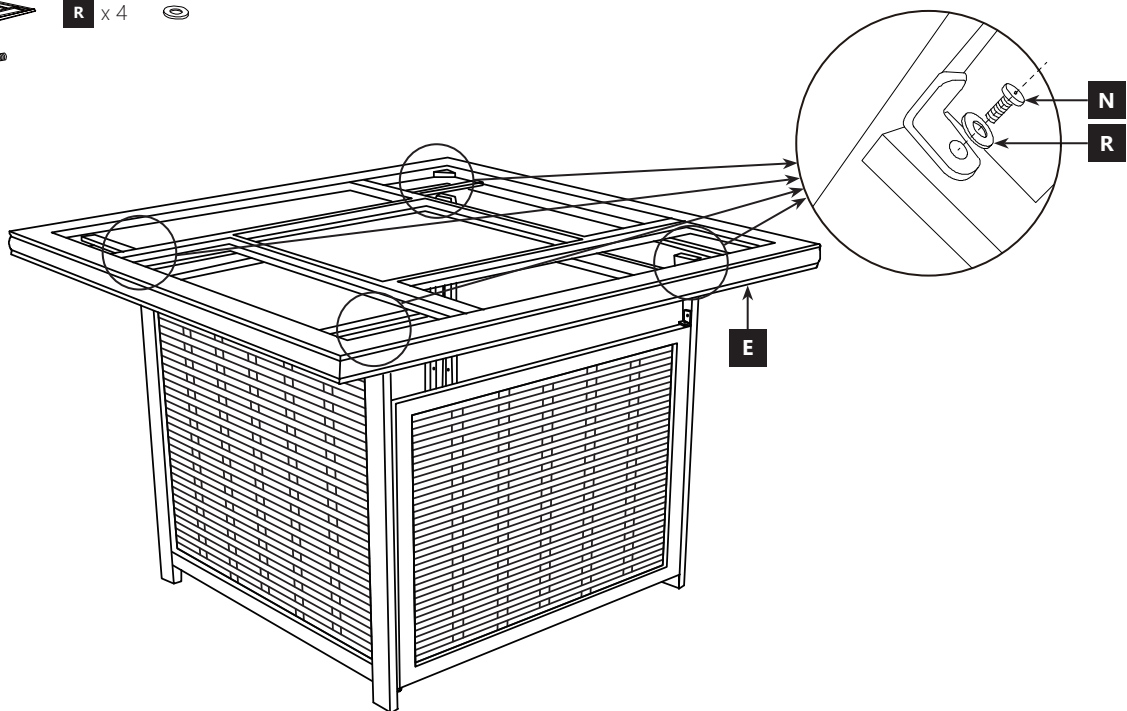
3A) Secure the bracket stator 1 **K** with screw **N** and washer **R**.



3B) Insert the front door **D** onto the bracket stator 1 **K**. And then insert the bracket stator 2 **L** into the hole at the top of the front door **D** and secure it with screw **N** and washer **R**.






4. Table frame assembly


T x1  or 
E x1  **R** x4 
N x4 



4A) Secure the table frame **E** and board assembly together by using screw **N** and washer **R**.

5. Burner assembly


T x1  or 
H x1  **R** x4 
M x4 

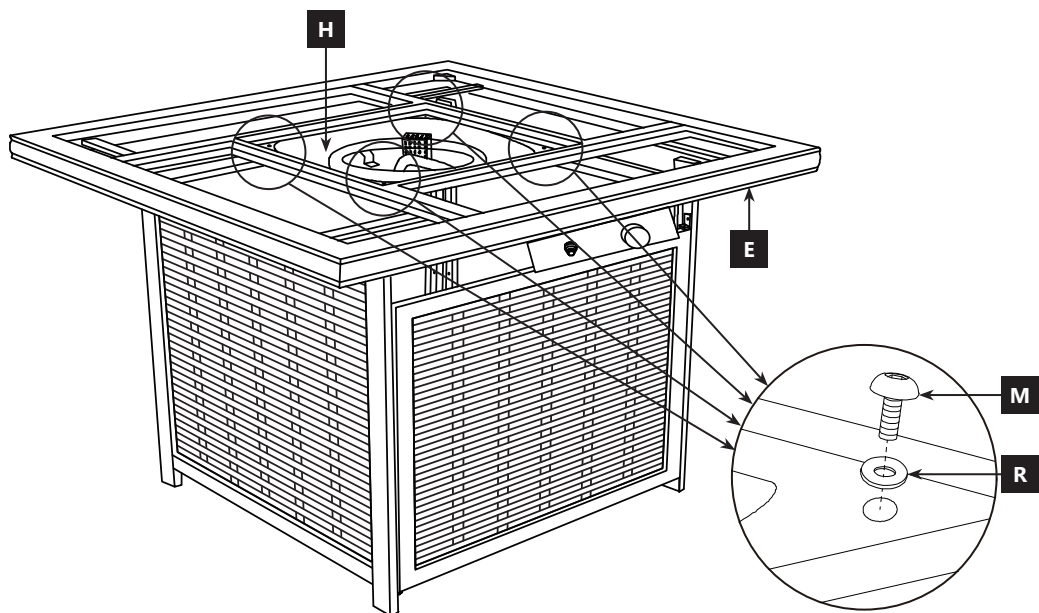

5A) Secure the burner **H** and the table frame **E** together by using screw **M** and washer **R**.

6. Table top assembly


I x 4

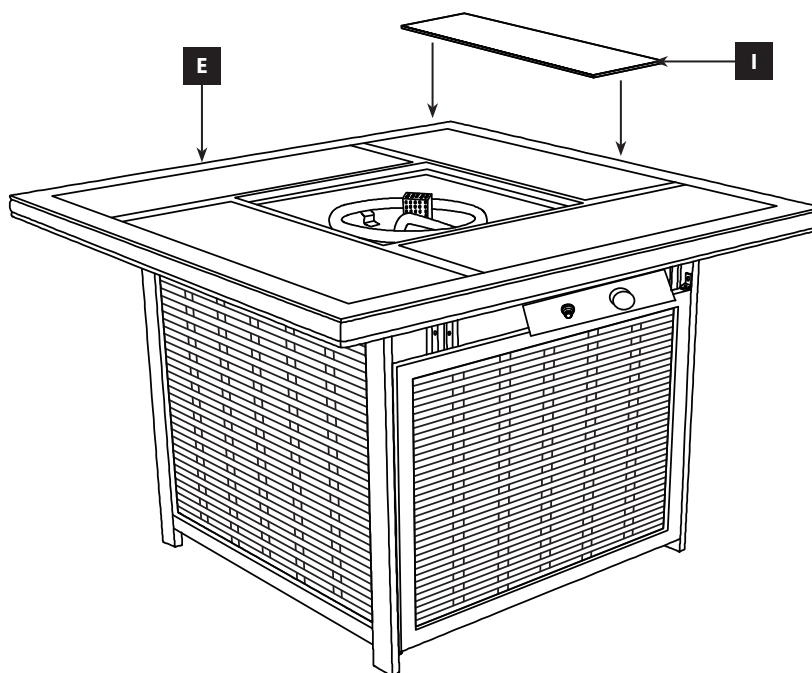

7A) Cover the table frame **E** with the table top **I**.

8. Put glass beads

S x 1

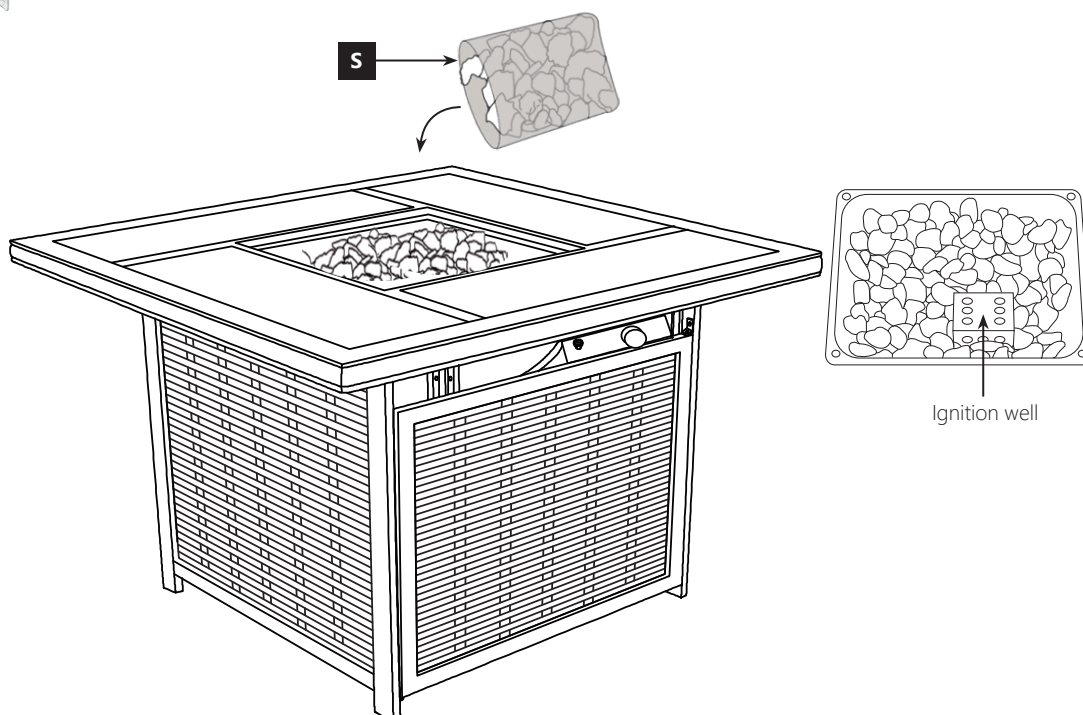


8A) Take the glass beads **S** out of the package and pour into the burner. The burner must be completely covered to ensure the appliance functions properly and safely.

Warning: The ignition well MUST be clear and free of obstructions at all times to insure proper operation. DO NOT cover the ignition well with any glass beads or other media..

9. Close the lid


J x 1

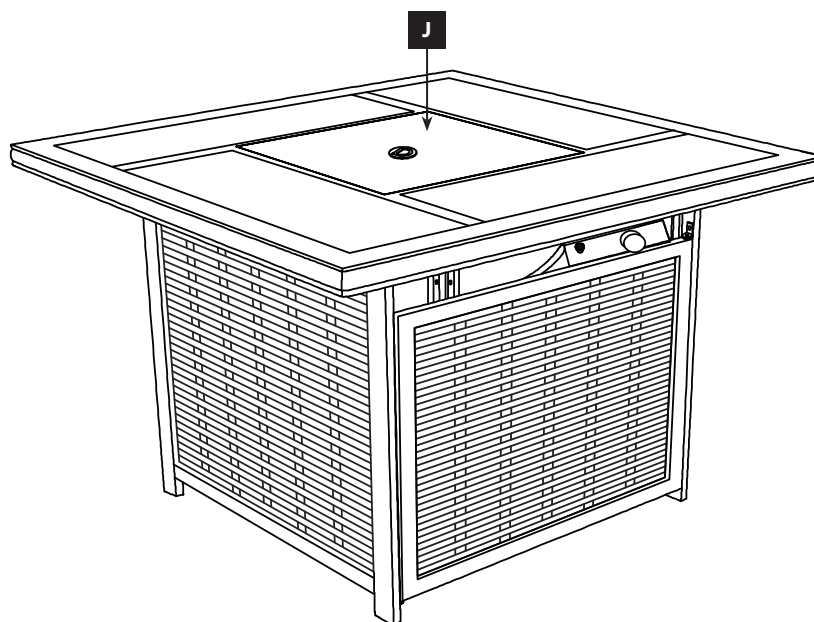

9A) Put the lid **J** over the burning stove.


OPERATING

Cylinder/connector requirements

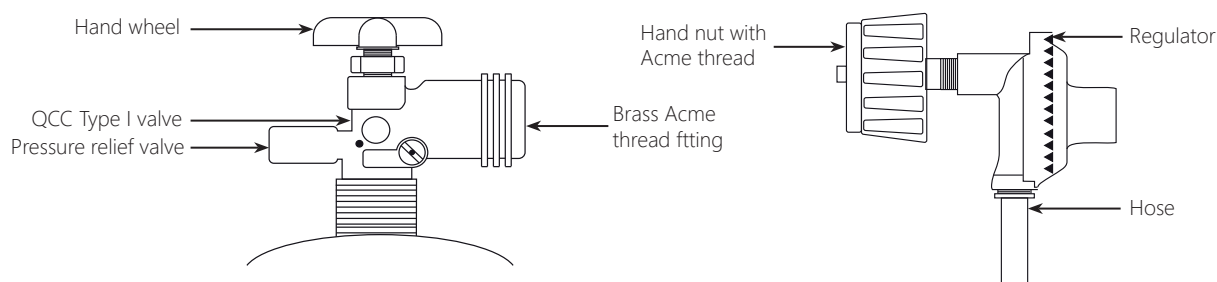

1. Propane-gas cylinders, valves, and hoses **MUST** be maintained in good condition and **MUST** be replaced if there is visible damage to either the cylinder or valve. If the hose is cut or shows excessive abrasion or wear, it **MUST** be replaced before using the gas appliance.
2. This unit, when used with a cylinder, should be connected to a standard 5-gallon (20 lb.) propane-gas cylinder equipped with an OPD (Overfill Prevention Device). The OPD has been required on all cylinders sold since October 1, 1998, to prevent overfilling.
3. Cylinder dimensions should be approximately 12" (30.5 cm) in diameter and 18" (45.7 cm) high. Cylinders **MUST** be constructed and marked in accordance with the Specifications for Propane Gas Cylinders of the U.S. Department of Transportation (D.O.T.) or the National Standard of Canada, CAN/CSA-B339, Cylinders, Spheres, and Tubes for Transportation of Dangerous Goods.
4. The cylinder used **MUST** include a collar to protect the cylinder valve, and the cylinder supply system **MUST** be arranged for vapor withdrawal.
5. The pressure regulator and hose assembly supplied with this outdoor gas appliance **MUST** be used. Original and replacement pressure regulator and hose assemblies **MUST** be those specified by the manufacturer for connection with a cylinder connecting device identified as Type I.
6. The propane-gas cylinder valve **MUST** be equipped with a cylinder connection coupling device, described as Type I in the standard defined in paragraph above. This device is commonly described as an Acme thread quick coupler.
7. If the propane-gas cylinder comes with a dust plug, place the dust cap on the cylinder valve outlet when the cylinder is not in use.

1. Gas cylinder connection

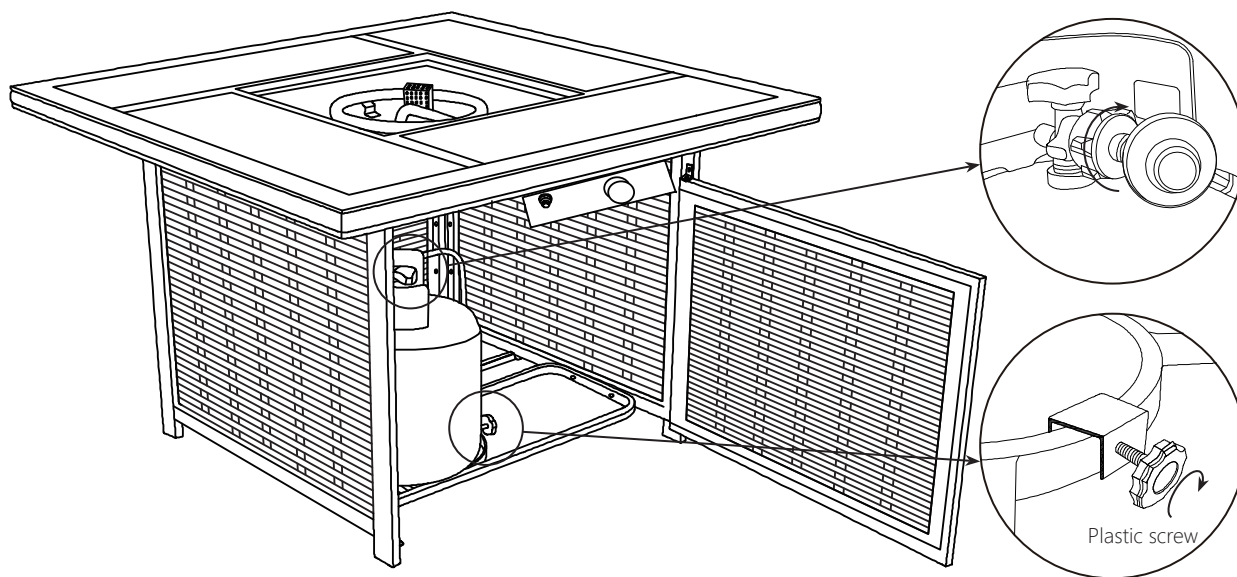


1A) Tighten the plastic screw found on the support frame so that the gas cylinder cannot move from side to side.

1B) Turn the hand nut clockwise to connect with the valve. The hose must point down.

Warning: DO NOT remove the plastic cap from the end of threaded section. Use LP propane gas tanks only with these required measurements: 12 in. (diameter) x 18 in. (tall) with 20 lb. capacity maximum.

2. Lighting instructions

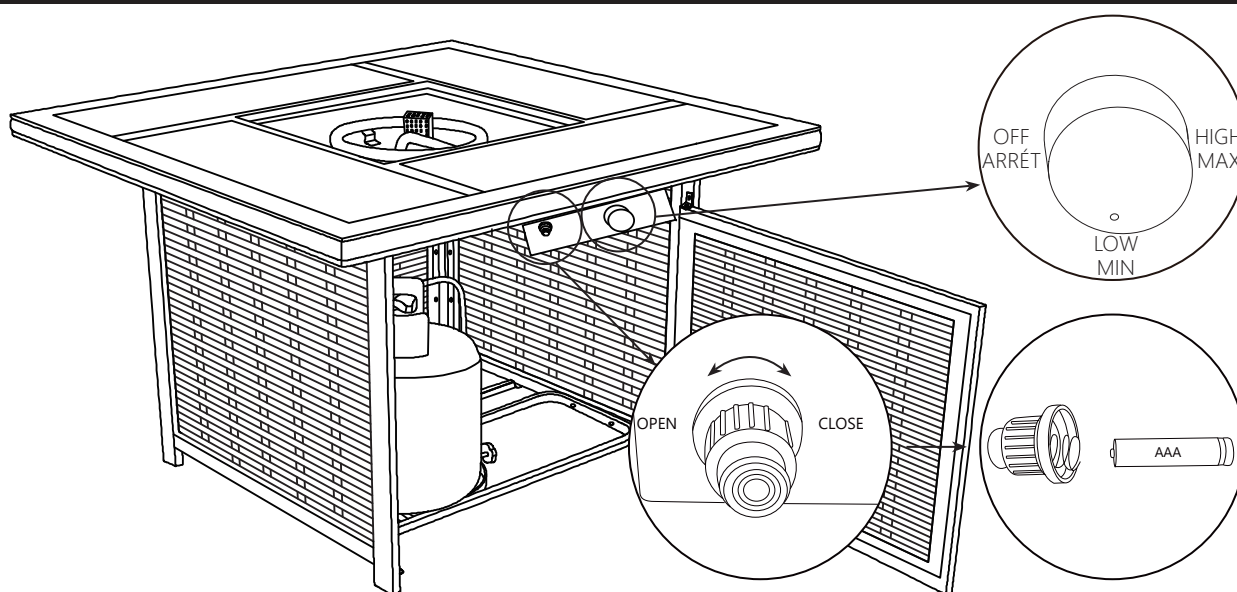

2A) Turn on the gas supply, ignite the burner, and test at all connections for leaks using a soapy water solution. If bubbles appear, a leak is present. Turn off the gas and tighten at all connections. Repeat until no leaks are present. If a leak persists, turn off the gas supply and contact the local gas company or dealer.

2B) The electronic ignition button requires an AAA battery (not included) to drive. Unscrew the button counterclockwise to insert battery.

2C) Push and slowly turn the control knob to the LOW position.

2D) Hold ignitor to light the burner release control knob after 15 seconds.

2E) Observe the flame height when lit. Flame should be 3 to 13 inches high.

2F) If the burner does not light before the match goes out, immediately turn the control knob to the OFF position.

2G) Wait approximately five minutes to clear out any gas, and repeat steps 2C-2F above.

2H) If your burner fails to light again, turn the control knob to the OFF position and contact your dealer or gas supplier.

2I) To extinguish your gas burner turn the control knob to the OFF position. Be sure the control knob is turned fully off to avoid any gas leakage.

Warning: NEVER use a flame to check for gas leaks.

IMPORTANT INFORMATION

IMPORTANT! Read this information before proceeding.

WARNING:

Please retain this manual for future reference.

If the information in these instructions is not followed exactly, a fire or explosion may result causing property damage, personal injury or death.
For outdoor use only.

- DO NOT use this fire pit table for cooking.
- DO NOT burn any other materials than are supplied with and intended for use in this fire pit table.
- DO NOT pour water into fire pit table.
- DO NOT store a spare or disconnected liquid propane cylinder under or near this fire pit table.
- After a period of storage, and/or non use, the propane fire pit table should be checked for gas leaks and burner obstructions before use.
- An LP-cylinder not connected for use shall not be stored in the vicinity of this or any other appliance.
- DO NOT operate the propane fire pit table if there is a gas leak present.
- Combustible materials should NEVER be within 10 feet of the top, back or sides of your propane fire pit table. DO NOT put any other fire pit table cover or anything flammable on, or beneath the fire pit table.
- Should fire go out while burning, turn the gas valve off. Follow the instruction and wait five minutes before attempting to relight.
- NEVER lean over the open fire pit table or place hands or fingers on the upper portion of an operational unit.
- Keep ventilation openings in cylinder enclosure fire and clear of debris.
- DO NOT rest feet on the fire pit table.
- Please take out the battery when not using the fire pit table for an extended length of time.
- DO NOT enlarge valve orifices or burner ports when cleaning the valve or burner.
- Cylinder supply system MUST be arranged for vapor withdrawal.
- LP Tank used MUST include a collar to protect the cylinder valve.
- DO NOT use this fire pit table on vehicles or boats. Always operate the appliance on flat ground outdoors.
- Keep any electrical supply cord and the fuel supply hose away from any heated surfaces.
- DO NOT use this fire pit table unless all parts are in place.
- Inspect the hose before each use of the appliance.
- The hose assembly MUST be replaced prior to the appliance being put into operation if there is evidence of excessive abrasion or wear or if the hose is damaged.
- Locating the hose out of pathways where people may trip over it or in areas where the hose may be subject to accidental damage.
- The burner MUST be replaced prior to the appliance being put into operation if it is evident that the burner is damaged.
- The conversion or attempted use of natural gas in a liquid propane unit or liquid propane gas in a natural gas unit is dangerous.
- Any guard or other protective device removed for servicing the appliance MUST be replaced prior to operating the appliance.
- Inspect the fuel supply connection before each use of the appliance.
- Temporary storage of this appliance indoors is permissible only if it has been disconnected from its fuel supply.
- DO NOT store a spare propane-gas cylinder under or near this appliance.
- NEVER fill the cylinder beyond 80-percent full.
- Use LP propane gas tanks only with these required measurements: 12 in. (diameter) x 18 in. (tall) with 20 lb. capacity maximum.
- The propane fire pit table should NEVER be used by children. Children MUST be supervised when they are anywhere near the appliance.
- DO NOT sit or place any part of the body, clothing or other flammable materials on or near the fire pit table surround.
- HOT while in operation and following operation. Serious injury can occur!
- DO NOT throw matches, trash paper, garbage, or any other flammable materials onto the unit or into the flame. DO NOT leave in operation when unattended.
- DO NOT transit it while in operation
- DO NOT operate this unit in the rain.
- Charcoal or any other solid fuel MUST not be burned in the fire pit table.
- DO NOT continue using if you smell unusual odors or have headaches nausea or dizziness.
- DO NOT store or use gasoline, combustible materials, or any other flammable vapors and liquids in the vicinity of this unit. Provide adequate clearance for servicing and operation.
- DO NOT use the unit if any part of it has been under water. Immediately call a qualified professional service technician to inspect the set and to replace any part of the control system that has been underwater.
- When shutting the unit down. Be sure to turn the control valve fully off.
- The ignition well MUST be clear and free of obstructions at all times to insure proper operation. DO NOT cover the ignition well with any lava rocks or other media.
- Children MUST be supervised to prevent them from swallowing the lava rock and choking.
- Always wear appropriate work shoes, gloves, and eye protection when working.
- Work well from power lines, particularly when handling metal parts.
- For outdoor use only.
- Keep children, body parts and clothing away from the swivel parts to prevent them from getting caught in it.
- When the product is evenly loaded, the fire pit table holds up to 165.3 lbs (75 kg).
- Please recycle packing where possible.
- After prolonged use, we recommend you check all the fittings are tightened securely.
- Installation and service MUST be performed by a qualified installer, service agency, or the gas supplier.

- If damage is visible, stop using it immediately and contact authorized personnel for repair.
- Only use replacement parts that are approved by the manufacturer.
- DO NOT attempt to use the fire pit table set in windy or wet conditions.
- DO NOT stand on the fire pit table, nor adopt unsafe sitting positions on it.
- DO NOT place the fire pit table in environments with flammable or caustic chemicals.
- DO NOT burn solid fuels in this gas fireplace.
- DO NOT drag the product while cleaning or moving to avoid scratches.
- Dispose of all plastic bags safely. Keep them out of the reach of children.
- Changes to the design or configuration of equipment may not be made without consulting the manufacturer or authorized representative.

CARE & MAINTENANCE

- The fire pit table is guaranteed to be free from any manufacturing defects for a period of 1 year from the date of purchase under normal use and in compliance with the operating instructions.
- The warranty is valid only in the original country of purchase. Abba Patio® reserves the right to exchange an item for a replacement part. Some parts may be replaced with newer purchase model parts as the product is improved over time.

FRAME:

- Keep fire pit table covered at all times when not in use.
- Keep any debris out of fire pit table-clean as needed.
- Ring Cleaning: If flames exhibit any abnormal shapes or behavior, or if burner fails to ignite properly, then the burner holes may require cleaning. The appliance can be cleaned by carefully removing the logs and media to allow access to burner. Use a brush to carefully remove dust, spiderwebs, and loose particles from base, logs, and fire ring itself. If evidence of damage, fire ring MUST be replaced with fire ring specified by manufacturer.
- To clean the burner, use a soft brush after the burner has cooled completely. NEVER use a vacuum cleaner on the burner. It is recommended to store the fire pit table indoors during winter if it will be subjected to freezing temperatures. The LP cylinder MUST be disconnected and removed from the appliance before the appliance can be stored indoors.
- Ignition Battery: For changing, simply unscrew cap, replace battery, and tighten cap.
- Keep fire pit table covered at all times when not in use.
- Keep any debris out of fire pit table-clean as needed.

CONTACT US FOR HELP

Customer Service: customer@abbapatio.com

Need Assistance? Call +1 (888) 899-5617

Hours of Operation:

Phone Support: Monday - Friday: 6:30 am - 4:30 pm, Saturday - Sunday: 8:30 am - 4:30 pm, PST.

Email Support: We are available 24 hours a day. Please allow up to 24 hours for a response.

Note: Our team is available to assist you during these hours. If you have any inquiries or require support outside of these hours, please leave a voicemail, send an email. We will get back to you promptly during the next available support hours. We thank you for your purchase!