



# **DO NOT RETURN**

FOR REPLACEMENT PARTS OR OTHER INQUIRIES
PLEASE CONTACT US
PLEASE ENSURE TO HAVE THE MODEL #
FROM THE PACKAGING OR
INSTRUCTION BOOKLET

**IMPORTANT**: Please read this manual carefully before beginning assembly of this product. Keep this manual for future reference.

### **SAFETY INFORMATION**

Identify all the parts and hardware. Do not discard of the packaging until you have checked that you have all of the parts and hardware required. Hardware package may have spare parts.

**WARNING**: This item contains small parts which can be swallowed by children and pets. Keep children and pets away during assembly. To avoid danger of suffocation, always keep plastic bags away from children and pets. We recommend that you assemble this unit on a carpeted floor to avoid scratches. We do not recommend the use of power tools for assembly as this could damage the unit. Only use manual tools.


May require 2 people for ease of assembly.


### **CARE and MAINTENANCE**


To clean, use a soft or slightly damp cloth, then wipe with a clean, dry cloth. Dust with soft dry cloth.

Do not use ammonia-based cleaning products, as they will damage the finish. Do not leave liquids or damp cloths on this furniture.


To avoid dulling of the finish, do not place furniture in direct sunlight. Please inspect and tighten all screws or bolts on a regular basis to ensure proper performance and safety of your item.

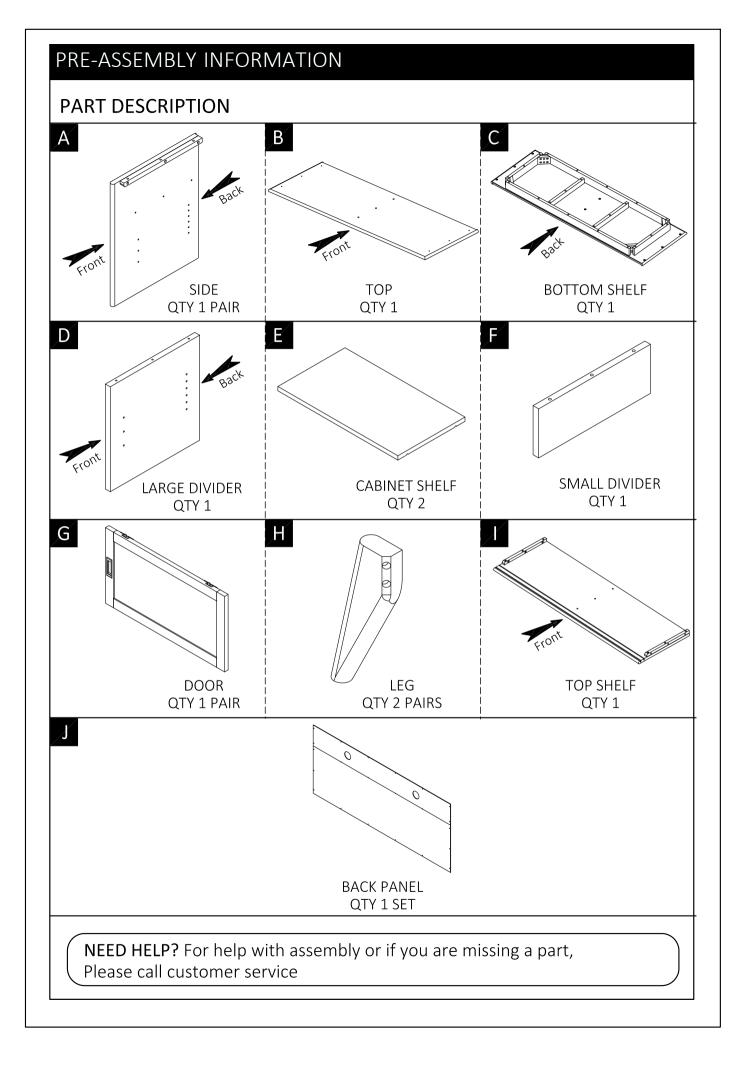

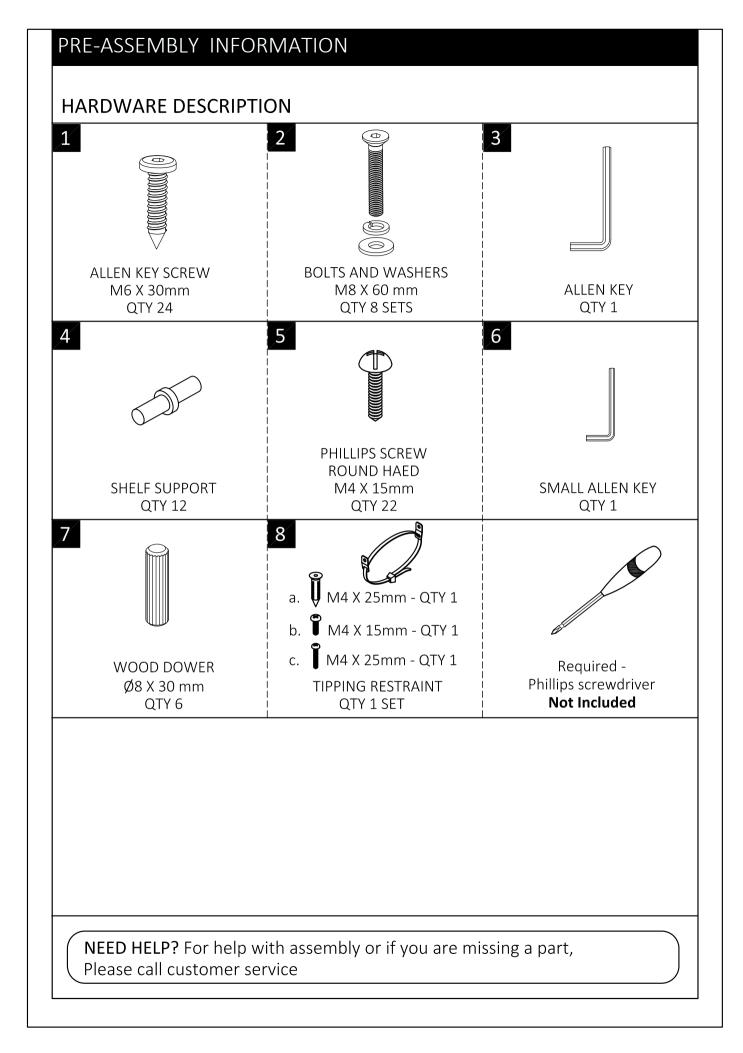


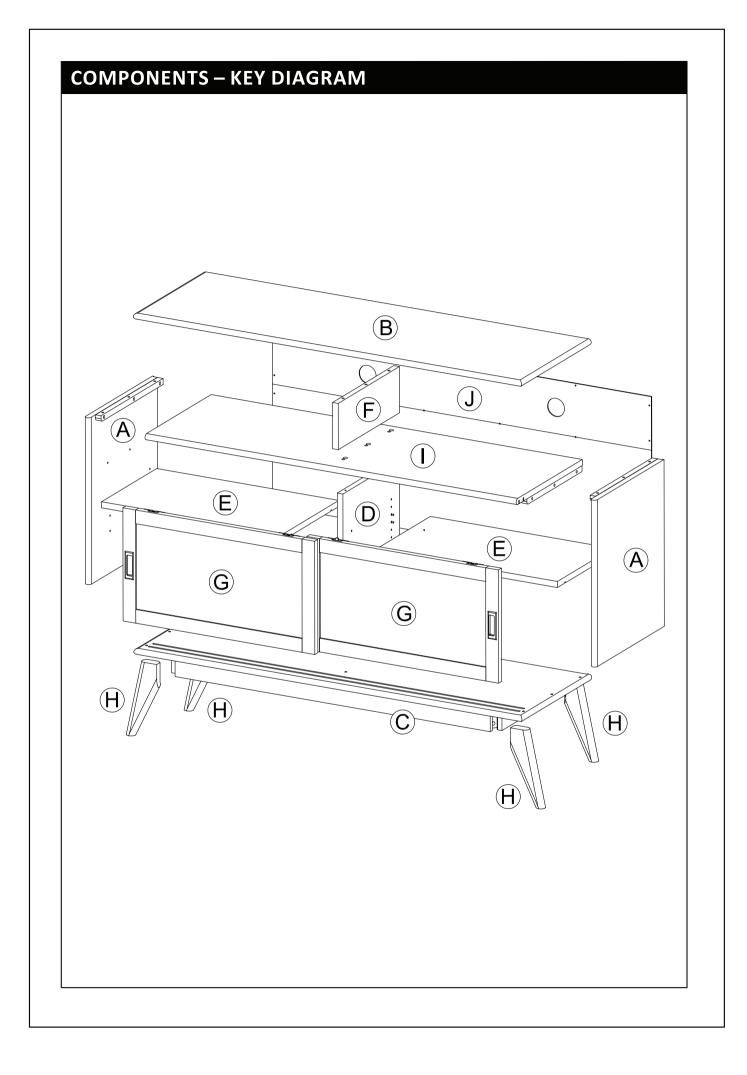


## STEP-1

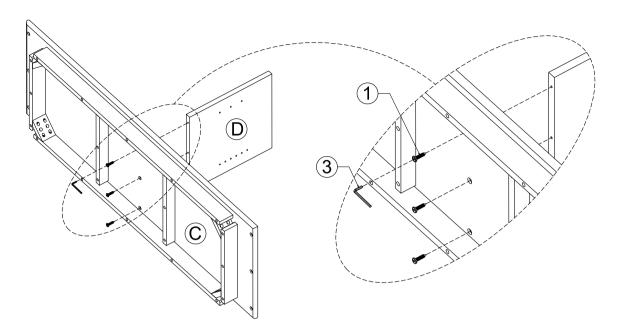


- Attach Large Divider (D) to Bottom Shelf (C) using 3 Allen Key Screws (1).
   Use Allen Key (3) to tighten Screws. Do not over-tighten.

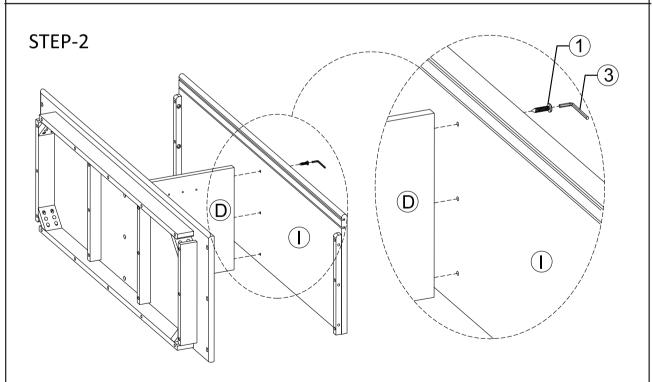


- Attach Top Shelf () to Large Divider () using 3 Allen Key Screws ().
   Use Allen Key (3) to tighten Screws. Do not over-tighten.

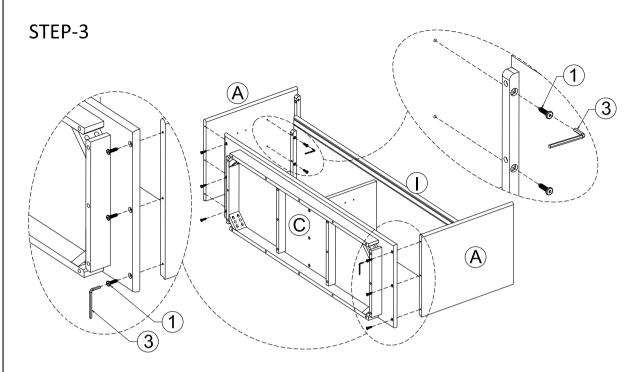


- 1. Attach 2 Sides (A) to Top Shelf (1) and Bottom Shelf (2) using 12 Allen Key Screws (1) (6 Screws on each Side).
- 2. Use Allen Key (3) to tighten Screws. Do not over-tighten.

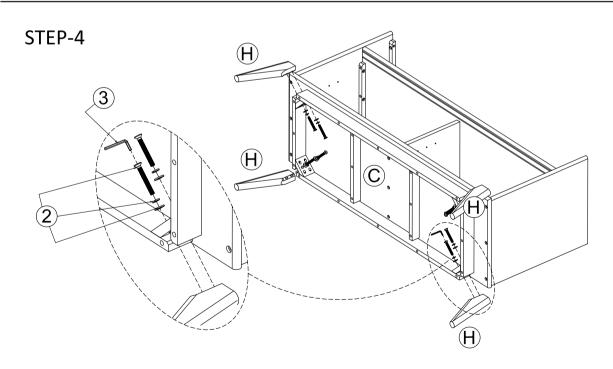

- 1. Attach Legs (H) to Bottom Shelf (C) using 8 sets Bolts and Washers (2) (2 sets on each Leg).
- 2. Use Allen Key (3) to tighten Bolts. Do not over-tighten.

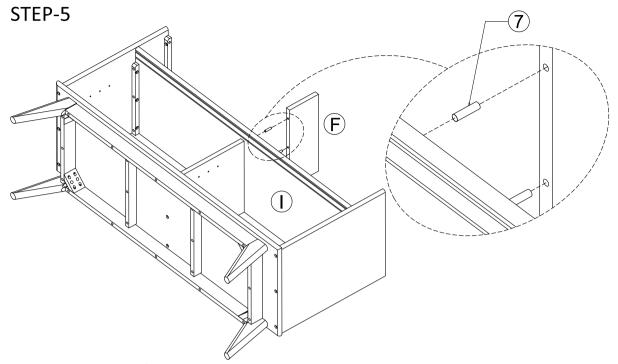


- 1. Insert 3 Dowels 7 into pre-drilled holes on bottom of Small Divider F.
- 2. Align Dowels 7 on Small Dividers F) with pre-drilled holes on Top Shelf (1).

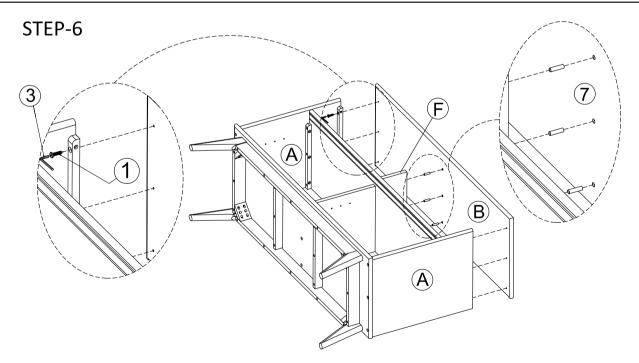


- 1. Insert 3 Dowels (7) into pre-drilled holes on top of Small Divider (F).
- 2. Align Dowels 7 on Small Divider F) with pre-drilled holes on Top B.
- 3. Attach Top (B) to 2 Sides (A) using 6 Allen Key Screws (1) (3 Screws on each Side).
- 4. Use Allen Key (3) to tighten Screws. Do not over-tighten.

### STEP-7

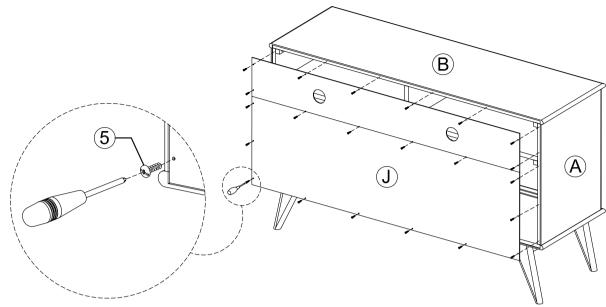


- 1. Attach Back Panel (1) to back frame of TV Stand using 22 Phillips Screws Round Head (5) through pre-drilled holes.
- 2. Use Phillips screwdriver to tighten screws.



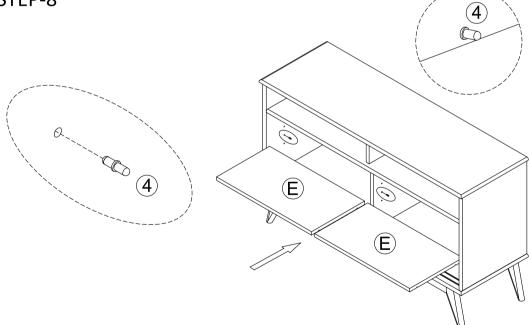


- Use 4 Shelf Supports 4 for each Shelf E in desired location.
   2 Shelf Supports 4 may be used on back top of each Shelf E as a tipping restraint.

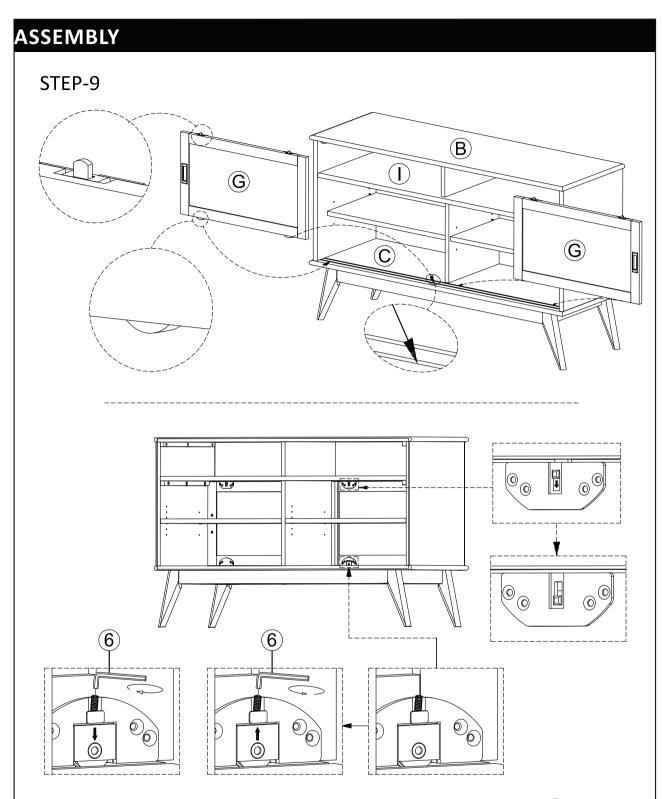

- 1. Slide the wheels on bottom of each door to the slots on Bottom Shelf (C).
- 2. Pull down the pins on top of each door then place the door to be parallel with the TV side post. Afterward release the pins. The pins will be inserted into the slots underneath of Top Shelf().
- 3. To adjust the height of wheels up or down, use the Small Allen Key 6 to rotate the bolts on the wheels (Rotating clockwise will adjust the wheels higher, rotating counter clockwise will adjust the wheels lower).

NOTE: Injuries and damage can occur from furniture tip-over. It is important to use the safety bracket included. If the tipping restraint kit is not in the box, please contact our customer service department in order to obtain another kit before using the furniture.

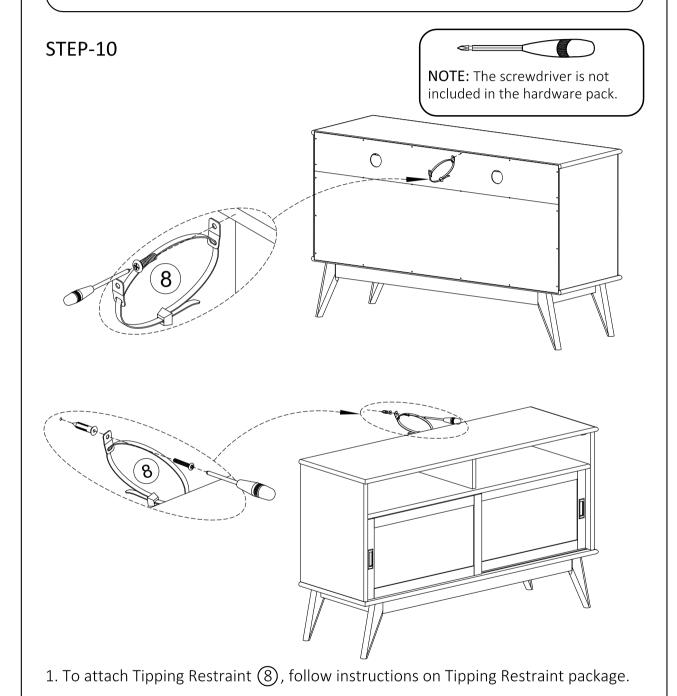

When you determined the location for your unit, install the Furniture Tipping restraint. Carefully follow the instructions contained on the package.

#### **WARRANTY**

Thank you for purchasing a product. These products have been made to demanding, high-quality standards and are guaranteed for domestic use against manufacturing faults for a period of 12 months from the date of purchase. This warranty does not affect your statutory rights.

In case of any malfunction of your product (failure, missing parts, etc.) please contact us at our toll free service line or by email

We reserve the right to repair or replace the defective product, at its discretion.

This product is guaranteed for 12 months if used for normal purposes. Any warranty is invalid if the product has been overloaded or subject to neglect, improper use or an attempted repair by other than an authorized agent. Heavy-duty or daily professional/commercial usage are not guaranteed.

Due to continuous product improvement, we reserve the right to change the product specifications without prior notice.

**PLEASE NOTE:** This item is hand-crafted and hand-finished with utmost care. As such, variations and imperfections should be expected and should be welcomed as the natural beauty of the wood.