

ASSEMBLY INSTRUCTIONS
COASTER FINE FURNITURE



Fine Furniture for every stage of life

ASSEMBLY INSTRUCTIONS


ASSEMBLY TIPS:

1. Remove hardware from box and sort by size.
2. Please check to see that all hardware and parts are present prior to start of assembly.
3. Please follow attached instructions in the same sequence as numbered to assure fast & easy assembly.



WARNING!



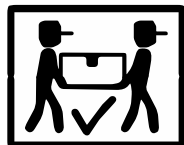

1. Don't attempt to repair or modify parts that are broken or defective. Please contact the store immediately.
2. This product is for home use only and not intended for commercial establishments.








ASSEMBLY TIME

20 MINUTES


PARTS IDENTIFICATION

A	TOP		1PC
B	BOTTOM PANEL		1PC
C	UPPER LEG		4PCS
D	LOWER LEG		4PCS


HARDWARE IDENTIFICATION

1	PALSTIC (8mm)		1PC
2	L METAL (24 x 13 x 1.5mm)		2PCS
3	PLASTIC LINE (270mm)		1PC
4	LARGE SCREW (8 x 25mm)		1PC
5	SMALL SCREW (8 x 15mm)		1PC


STEP 1

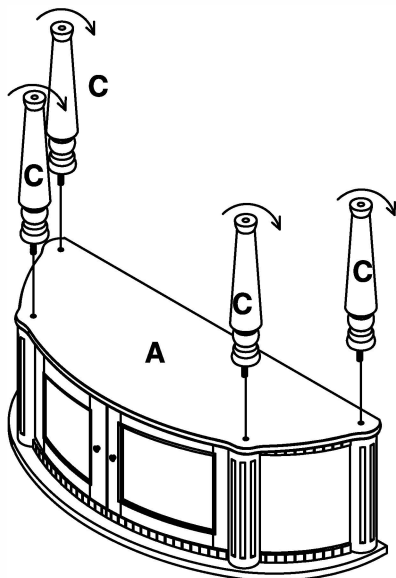

STEP 2

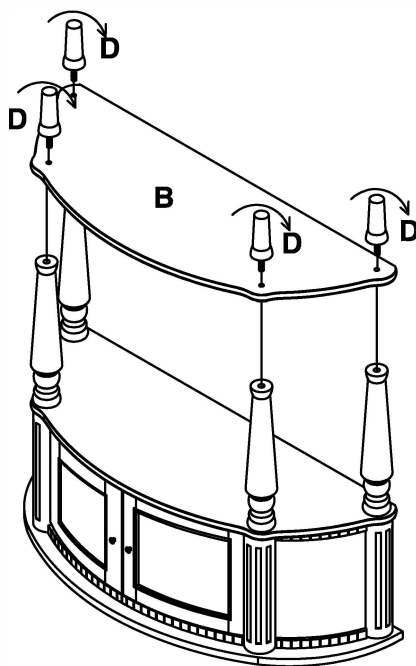

STEP 3

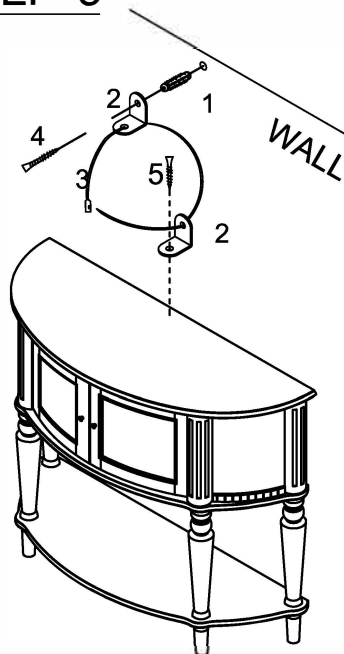

FURNITURE TIPPING RESTRAINT

WARNING

Injury may result from tipping furniture.
This restraint not a substitute for proper adult supervision.
This restraint may provide protection against tipping furniture.
Do not allow children to climb on furniture.
Failure to detach this restraint before moving furniture may result injury and damage.

ASSEMBLY INSTRUCTIONS

