

H08-HK-002

ASSEMBLY INSTRUCTION

Ax1 	Bx1
Cx1 	Dx2
Ex1 	Fx1
Gx1 	Hx1
Ix1 	Jx1
Kx1 	Lx3
Mx1 	Nx2
Ox11 	Px5
Qx16 	Rx16
Sx1 	

