

ASSEMBLY INSTRUCTION

Caution : You must read this before you proceed

 
Care & Maintenance

- ⊘  • Not for commercial use. For residential use only.
- ✓  • Furniture may scratch floors. We recommend using furniture pads to protect your floors.
- ⊘  • Do not put hot items directly on furniture surface.
- ⊘  • Do not clean furniture with harsh cleansers or polish.
- ⊘  • Do not place furniture under direct sunlight.
- ⊘  • Do not place furniture near heating or cooling vents.
- ⊘  • Do not write on furniture without a padded barrier to protect the surface.
- ⊘  • Do not place furniture outside. For indoor use only.
- ⊘  • Stains may be removed with mild soap solution and damp cloth.
- ⊘  • Children should not climb or jump on the furniture.





- ✓  • Dust and pick-up spills using a clean, non-colored, lint-free cloth.

Please look in carton for hardware packs and legs.
Sets often ship in multiple boxes and may arrive a day or two apart.

DINING CHAIR
N768P489281

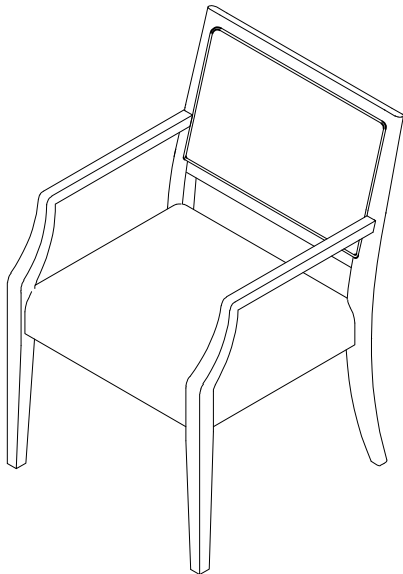

Parts List

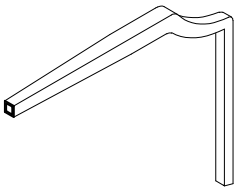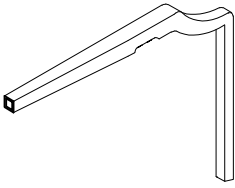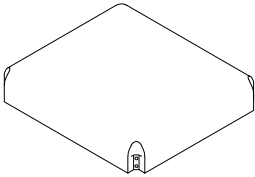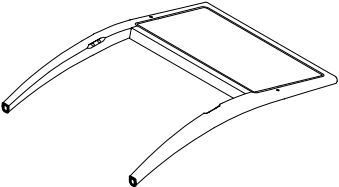    
Label	Picture	Description	QTY
A		Right leg	1
B		Left leg	1
C		Seat cushion	1
D		Backrest frame	1

HARDWARE LIST


Label	Picture	Description	QTY
①		Bolt (1/4" x45mm)	2+1
②		Bolt (1/4" x60mm)	8+1
③		Spring Washer (10mm)	10+1
④		Flat Washer (14 mm)	2+1
⑤		Flat Washer (19 mm)	8+1
⑥		Allen Wrench (M4)	1+1
⑦		Cover sticker (Ø21mm)	4
⑧		Felt pad	2

Assembly Preparation

 
Before Beginning Assembly:

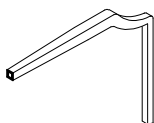


A

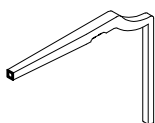 

B

 

C

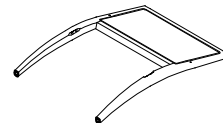 

D



①x3



②x9



③x11



④x3



⑤x9



⑥x2



⑦x4



⑧x2



- Read instructions, cover to cover-



- Have 2 adults on hand fo assembly-



- Do not assemble on flooring of carpet-



 
- Assemble on a clean non-marring surface (packing foam)-



- Save all packaging until finished-

Assembly Steps


Overview

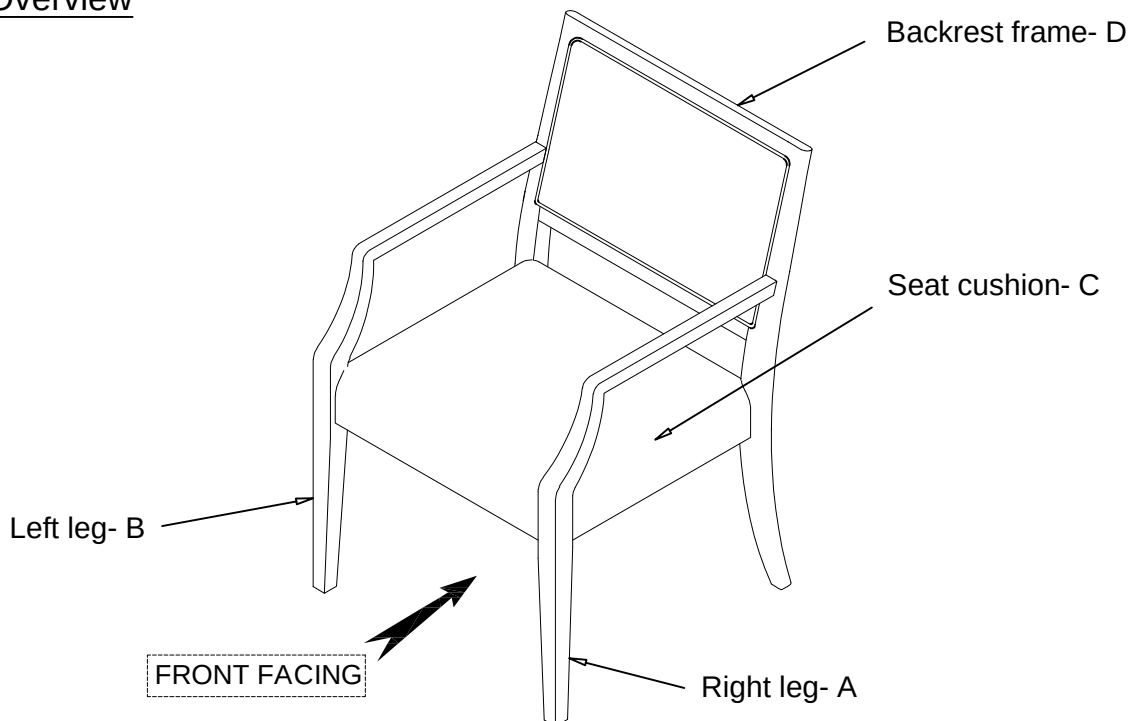

This chair has multiple parts and may require up to 30 minutes to assemble. To give you an overview of the chair parts, the above picture is provided to help you put the various parts into perspective. Please read through the instructions below to familiarize yourself with the parts and steps before assembly.


CAUTION : When tightening these bolt, tighten sequentially.
DO NOT tighten any bolt fully and then towards the next one.
This would cause the frame to warp.
If there is still wobbles, loosen the bolt and execute this same process.
WARNING!! IF IT IS NOT STABLE , IT COULD LEAD TO DAMAGING THE PRODUCT.

 Step 1

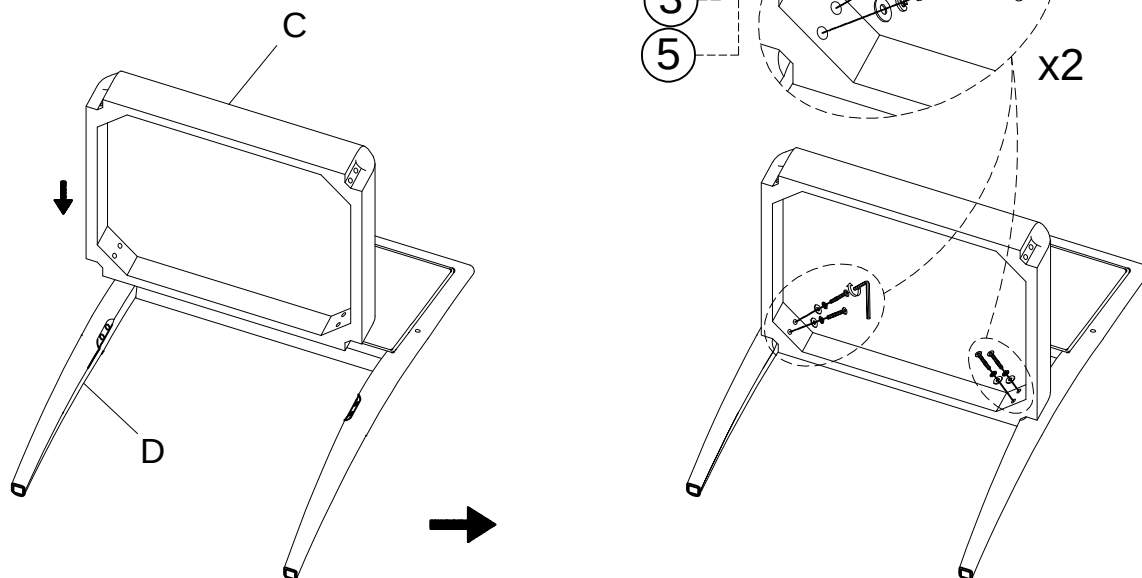


Attach the seat cushion C to the backrest frame D. Using bolt ②, spring washer ③, flat Washer ⑤ and allen key ⑥. Do not full tighten

 Step 2

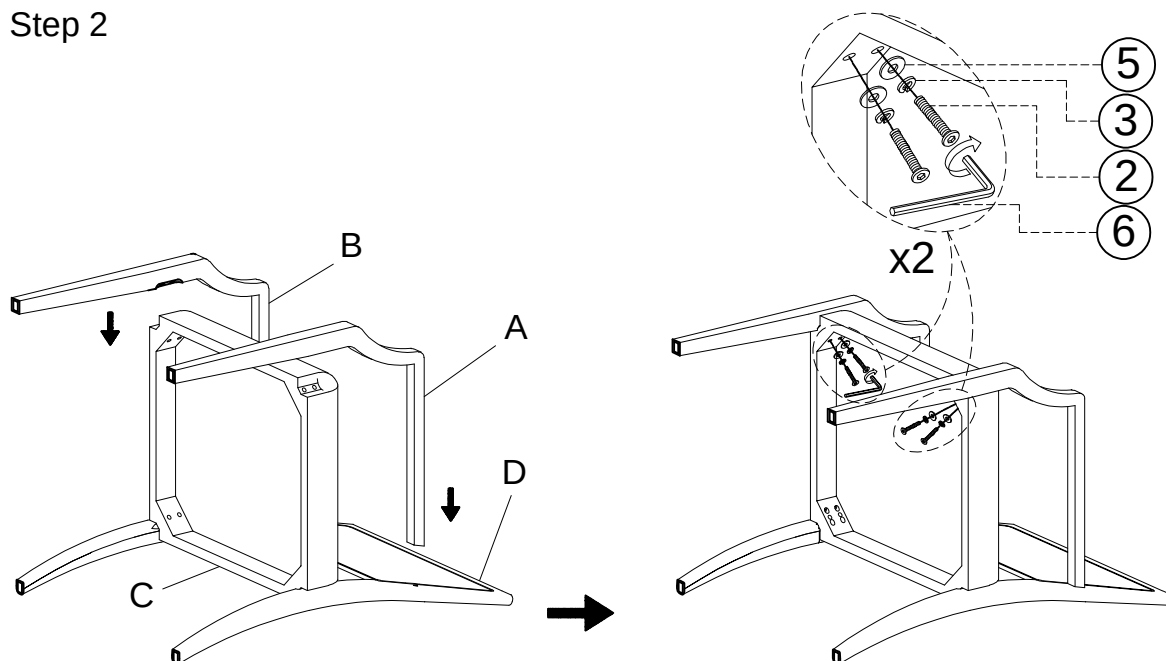


Attach the right leg A and left leg B to the seat cushion C. Using bolt ②, spring washer ③, flat Washer ⑤ and allen key ⑥. Do not full tighten

 Step 3

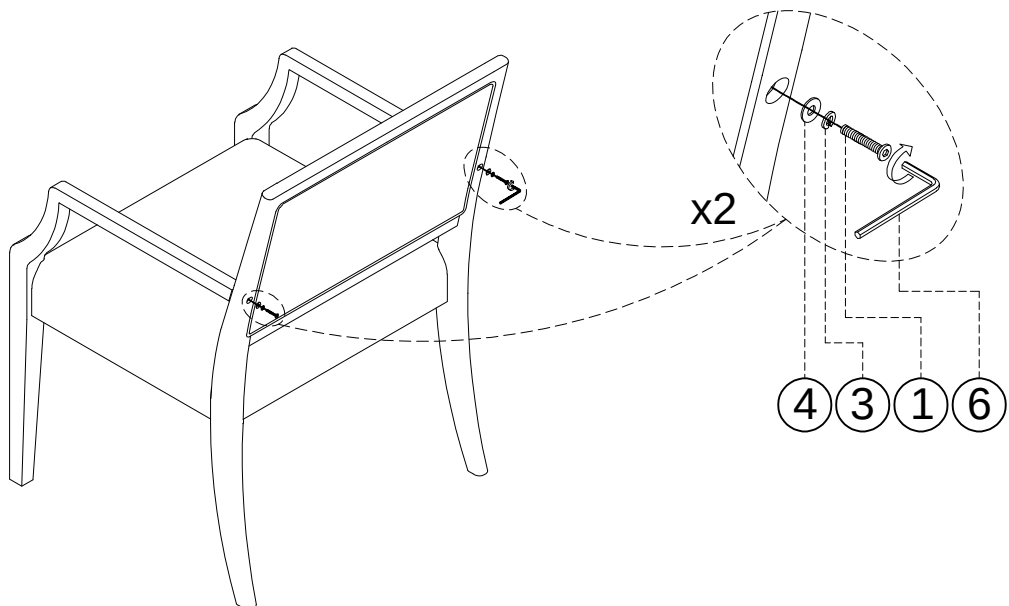

Stand the chair up. Attach bolt ①, spring washer ③, flat washer ④ into legs, backrest frame and allen wrench ⑥. Do not full tighten.

 Step 4

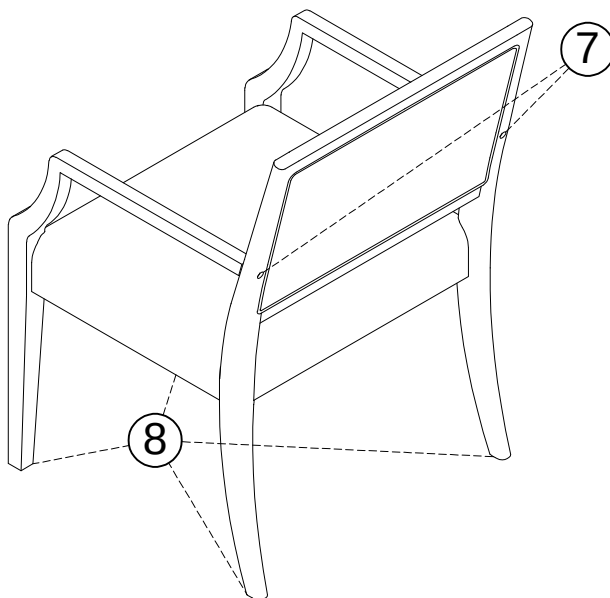

After checking the chair, if no problem, tighten all the bolts.

Stand the chair up .

Place the chair on a LEVEL SURFACE to check for wobbles .

After inspection, attach the cover stickers ⑦ hidden the bolt holes.

Note: If missing or fall out the felt pad, attach new one ⑧.

Your chair is ready for use .

This chair can only be used on a flat, level surface.