 

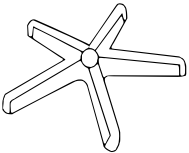
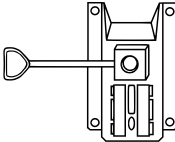

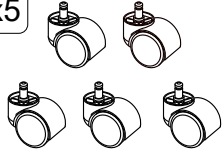
 






# ASSEMBLY INSTRUCTIONS



Thank you for purchasing our product!

MAIN PARTS LIST		
<b>A</b> Backrest 	<b>B</b> Seat 	<b>C</b> Nylon star base 
<b>D</b> Mechanism 	<b>E</b> Lift cylinder 	<b>F</b> Casters x5 
<b>G</b> Covers for lift cylinder x1 Set 		

Hardware		
No.	Item	Qty.
H	 M6x25	4
I	 M6x20	4
J	 Washer	4

Included tool	
Allen Wrench	

For support with assembly questions & replacement parts please email us




Free shipping within **the 48 Contiguous United States.**




For international customers & **AK-HI-PR** orders, **the customer is responsible for shipping costs plus any International local taxes or duties.**

## ASSEMBLY STEPS


### STEP 1 FIRST: Attach F to C.

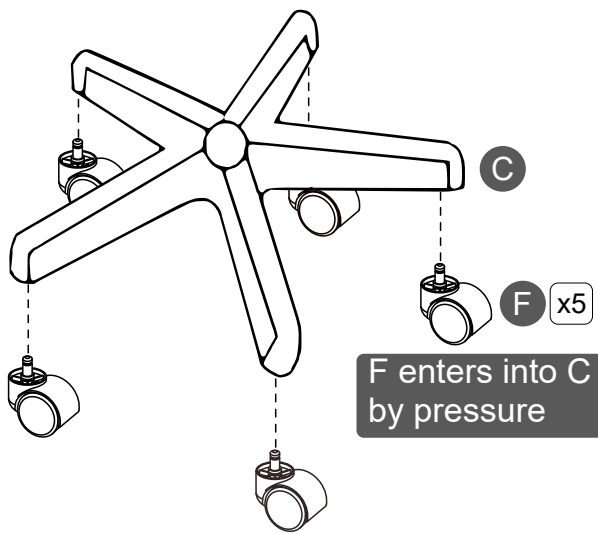

THEN: Place E into C and cover it with G.

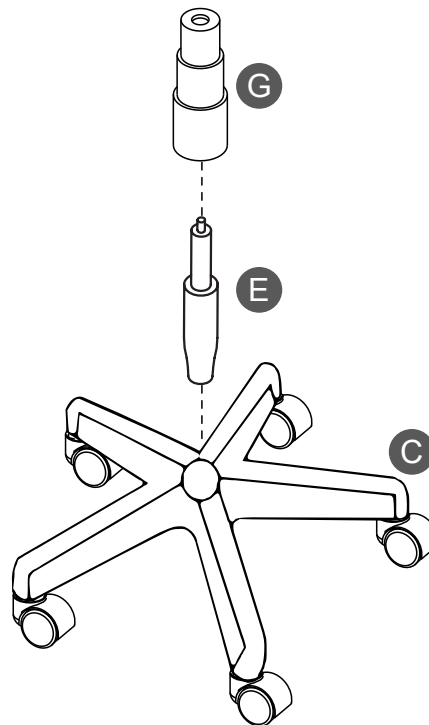


### STEP 2 Attach A to B with H.

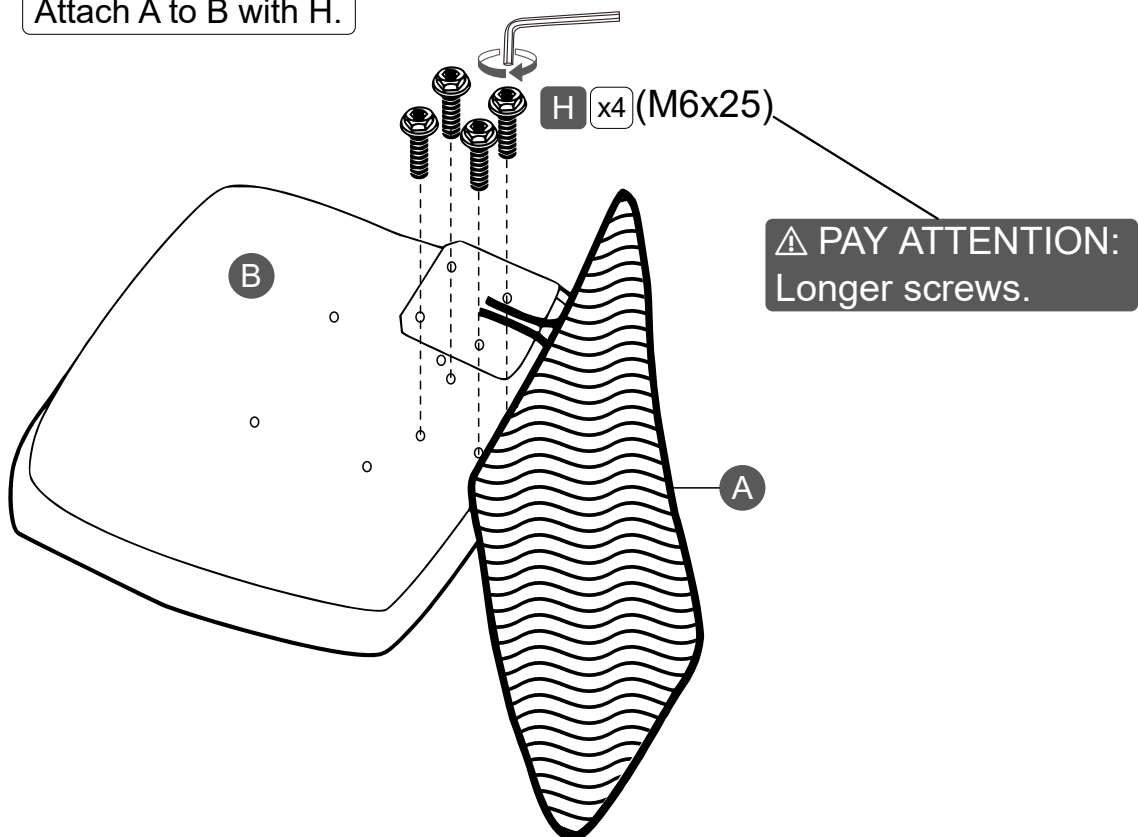

**ASSEMBLY STEPS**


**STEP 3**

Attach D to B with I and J.

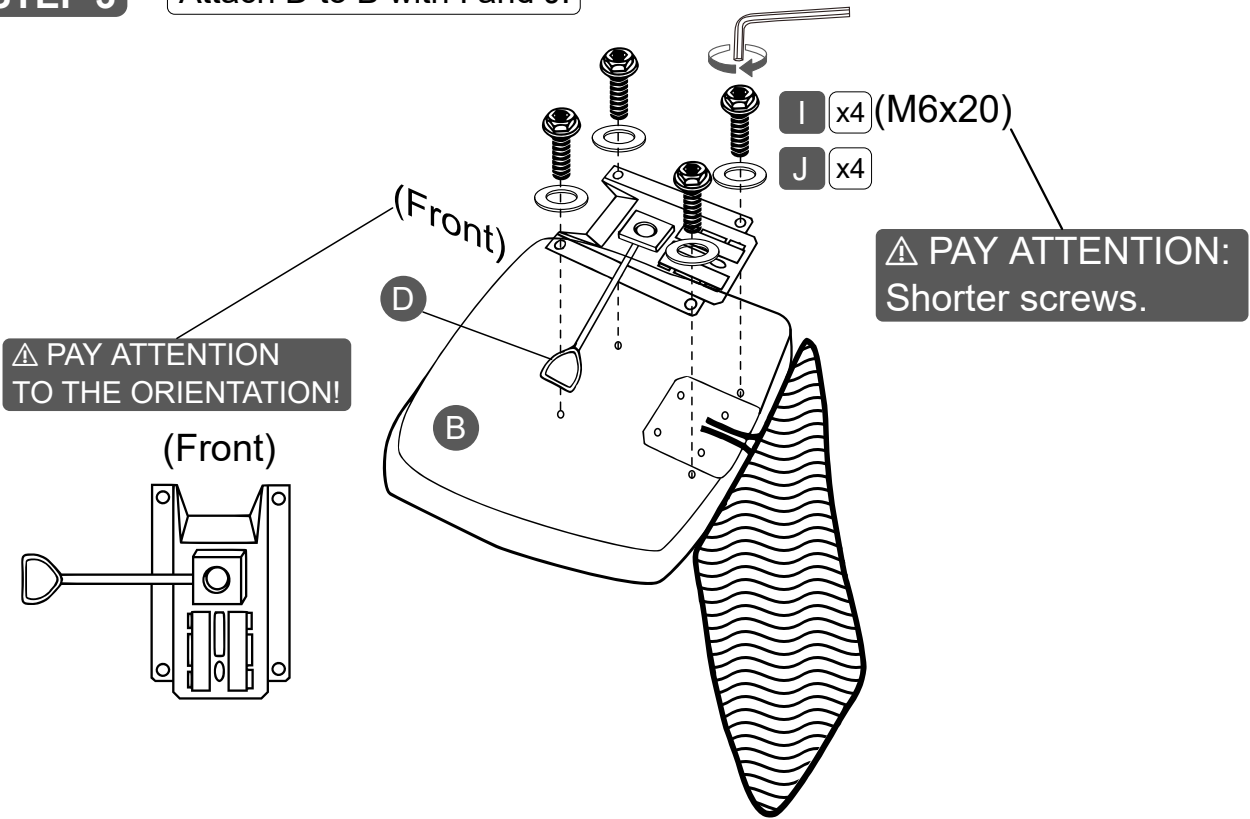

**STEP 4**

Join the seat with the base.


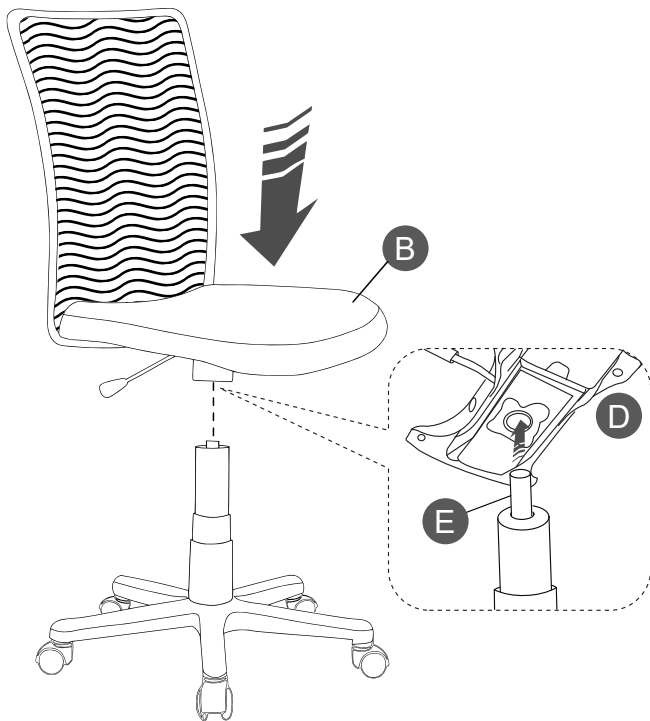


### CHAIR'S FUNCTIONS


Pull Handle UP.




### WARNINGS - Not paying attention to the following warnings could result in injuries.

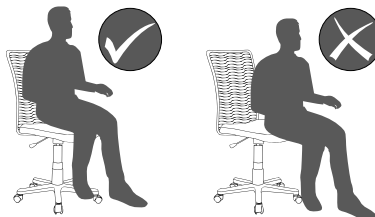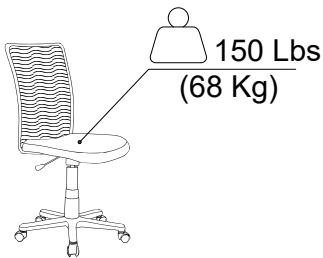

Only one person at a time and refrain from sitting on the edge of the seat to prevent the chair from tipping over.

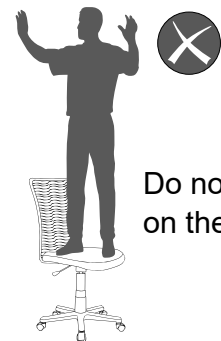

Do not stand on the chair.

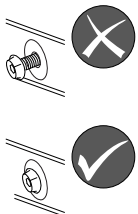


Do not use the chair if the frame parts are damaged, or if any of the screws are loose or missing.



Do not leave babies or toddlers unattended while seated on the chair, always ensure adult supervision. Keep children from playing with the chair for their safety.

### CARE AND MAINTENANCE


Clean with a soft cloth lightly dampened in a solution of smooth soap and water.

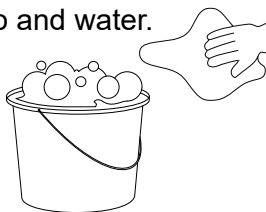

Do not use solvents or abrasive materials.



Do not expose to direct sunlight or to extreme environmental conditions.

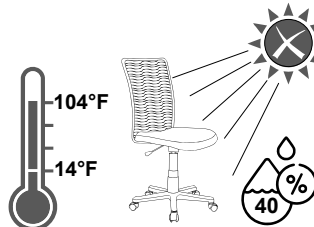

Inspect the chair thoroughly every 4 months and re-tighten the screws.

