 


Warning!



1. Please do not exceed the maximum load. Overweight may cause damage or drop of equipment.
2. Fits wooden wall, brick wall or concrete wall. Do not mount on drywall.
3. Walls must be able to carry 5 times the weight (total weight of the TV plus wall mount).
4. Please read the installation instructions carefully, we are not responsible for any damage or injury caused by improper, assembly or use! Any question, please contact our customer service.

 
Parts List

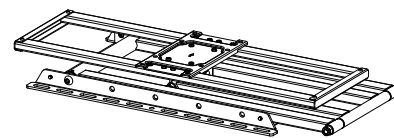


a-Main part (1)



b-Bracket (2)

c-Self-tapping screw
M8X60 (6)

 d-Plastic anchor (6)



e-Tie (3)



f-Bubble level (1)



g-Allen key S10 (1)

 
Screw Package




A-M4x12 (4)




B-M4x30 (4)




C-M6x15 (4)

 

D-M6x30 (4)

 

E-M8x20 (4)

 

F-M8x50 (4)



G-D8 Spacer5 (8)



 
H-D8Spacer10 (8)



I-Washer D4 (4)



I-Washer D6 (4)



I-Washer D8 (4)

Tool needed
(not included)

 


13MM




Step 1A Concrete wall install

Draw point and punch.

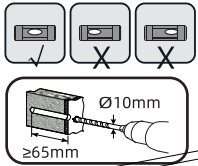


Install bolt.

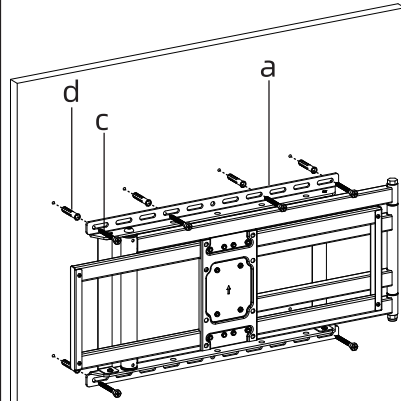 


Step 1B Wooden wall install

 Draw point and punch.

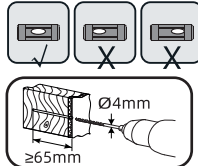


Punch holes in the stud.

 
Install bolt.

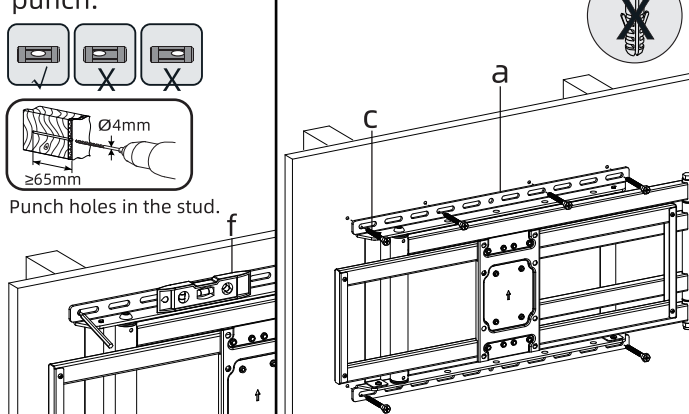

 Step 2 Connect TV and bracket

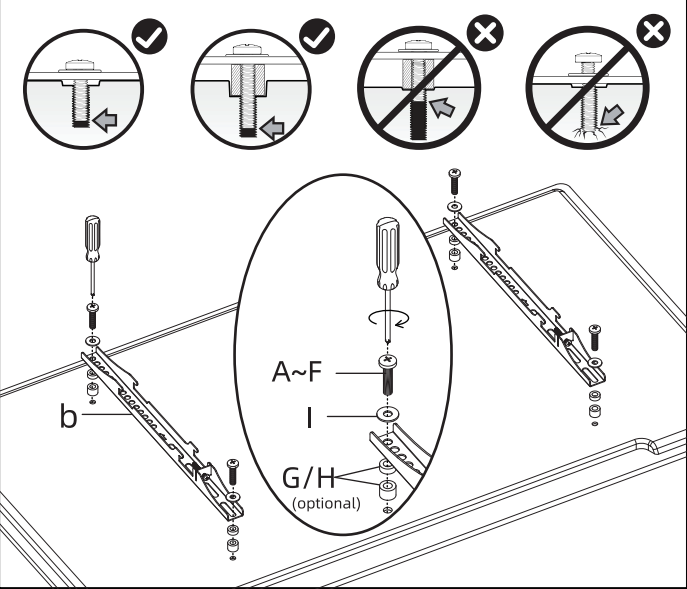


 Step 3 Hang TV on

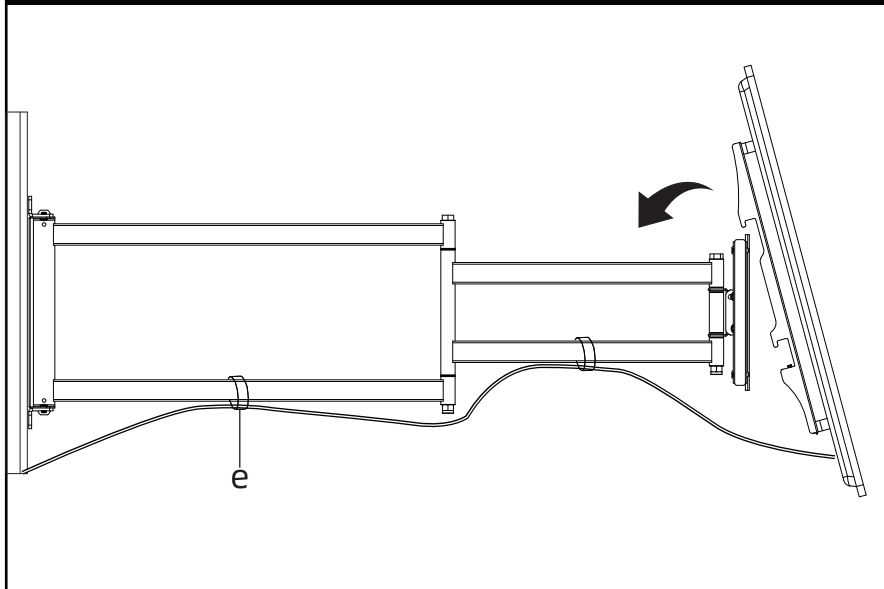

Step 4 Secure TV and angle adjustment

 Tighten pre-positioned bolts.

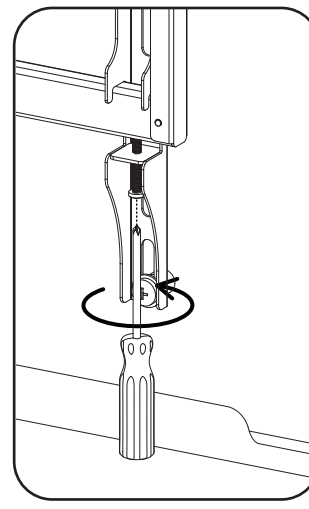

Angle adjustment of TV

