

# INSTRUCTIONS MANUAL



## PATIO WICKER LOVESEAT

---

**Loosely assemble before tightening.**

IF YOU PURCHASED THE PRODUCT ONLINE AND HAVE ANY  
QUESTIONS OR CONCERNS  
PLEASE CONTACT US VIA EMAIL, TEXT, OR PHONE

---

EMAIL: [service2outdoor@gmail.com](mailto:service2outdoor@gmail.com)  
TEXT: +1 628-263-4608 (TEXT ONLY)  
PHONE: +1 877-561-6450

Date of Manufacture: 25W39

# Warning:

## 1. Very important!


After receiving the product, please check if all parts are intact.

Do not open the vacuum-sealed packaging of the mat immediately.

Only proceed with opening the packaging if you are satisfied with the product.

2. When unpacking the box, please use tools carefully to avoid scratching the mat.

**Note: Since the mat is vacuum-packed, if you are not satisfied with the product after opening, it may affect the after-sales process.**

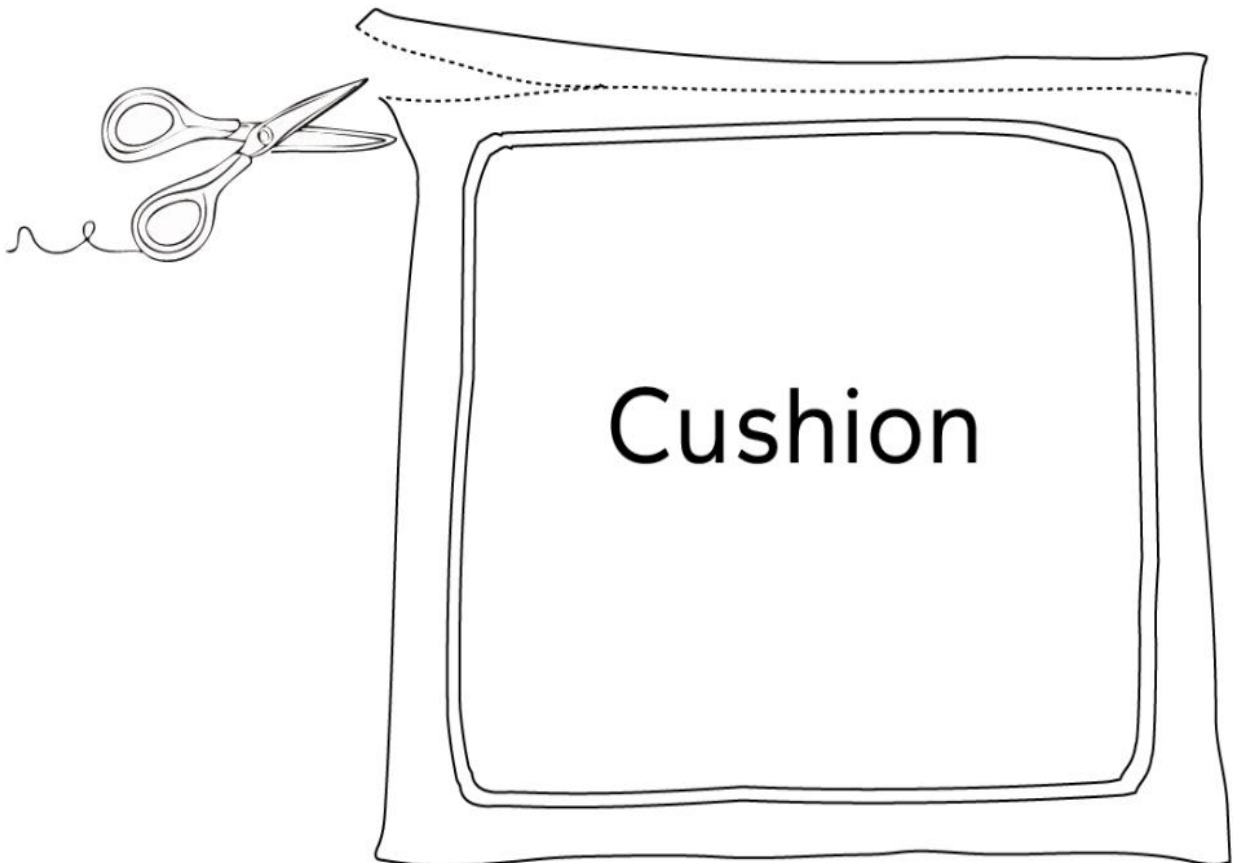

## Warning and Cautions:

Thank you for choosing our furniture. Please read and understand this entire manual before attempting to assemble or install the product.

### GENERAL BEST PRACTICES FOR ASSEMBLY

1. Familiarize yourself with the product and check all parts against the packing list. If any Parts are missing or damaged, do not install. Contact us immediately.
2. Some parts may contain sharp edges. Wear protective gloves, if necessary, during assembly.
3. Check all nuts and bolts periodically for tightness and, when required, tighten them again.
4. Pay attention to the parts orientation.
5. Save all packing materials until assembly is complete to avoid accidentally discarding smaller parts or hardware.

### IMPORTANT

- Make sure to place the washer on the bolt before inserting it into the bolt hole.
- To ensure the best fit, assemble loosely before tightening.
- Tighten all bolts after all parts are assembled.

### WARNINGS

 **Keep children and pets away from the working area during assembly and adjustments.**

1. Keep the assembly area at least 6 feet from any obstruction, such as a fence, garage, house, overhanging branches, laundry lines, or electrical wires.
2. When assembling and using this product, always follow basic safety precautions to reduce the risk of personal injury and product damage. Please read all instructions before assembly and use.
3. Check all bolts for tightness before use. **IMPORTANT** - check and tighten bolts often to keep them secure!
4. The chair is not to be used for standing purposes and will not function as a stool or step-ladder. Use on even surfaces only.
5. The chair supports a weight of 600lb (273kg). Improper use of this product or failure to use it as directed may result in injury. Not intended for commercial use.

## WARRANTY





### •WHAT IS COVERED?





- The limited warranty is extended to the original purchaser and covers material and manufacturing defect, provided the item is properly maintained and used for personal residential purposes only.
- Warranty: 180 DAYS.
- Lost Accessories or Parts Policy: Costs for lost accessories or parts will be charged after 90 days from the date of purchase.


## MAINTENANCE


- STAIN RESISTANT CUSHIONS CARE:** Keep cushions in storage on rainy days.
- SPILLS:** Immediately wipe up spills using a white damp cloth. Repeat if necessary until the stain is gone. Allow cushions to air dry.
- **FABRIC CARE:** Hand wash with cold water, non-chlorine bleach when needed, and lay flat to dry. Cool iron if necessary. Do not dry clean.
- **RESIN WICKER PRODUCT CARE:**
  1. General Cleaning: Before use, clean the product with a soft, dry towel. When not in use, wipe off any dirt or loose debris. For regular cleaning, use a mild soap and water solution, rinse thoroughly, and dry completely.
  2. Weather Protection: To prolong the life of your resin wicker, avoid prolonged exposure to intense sunlight or heavy rain. Whenever possible, use a protective cover when the furniture is not in use, especially during extreme weather conditions.
  3. Avoid Harsh Cleaners: Do not use strong detergents or abrasive cleaners, as these may damage the finish.
- Regular Maintenance:** Over time, nuts and bolts may loosen. Occasionally check and re-tighten them on all products as needed.

## Assembly Instructions


<b>AL</b>	<b>AR</b>	<b>B</b>	<b>C</b>
			
AL 1PC Left Arm	AR 1PC Right Arm	B 1PC Sofa Back	C 2PC Front Panel


<b>D</b>	<b>SC10</b>	<b>SC20</b>	<b>SC21</b>
	 <b>M6*45mm</b>		
D 2PC Seat Panel	E 2PC Bolt	F 2PC M6 Nut	G 1PC Open End Allen Wrench

<b>SC8</b>	<b>SC17</b>	<b>SC1</b>	<b>H</b>
 <b>M6*35mm</b>	 <b>Ø16*Ø6.5*1mm</b>		
I 16PC Bolt	K 18PC Washer	L 1PC Allen Wrench	H 2PC Seat Cushion

<b>J</b>			
			
J 2PC Back Cushion			


**Tools:**

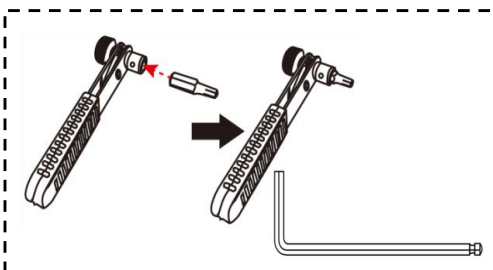

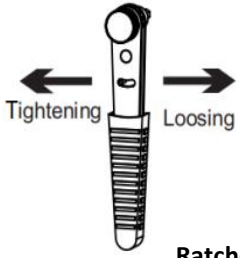




**Ratchet Wrench**

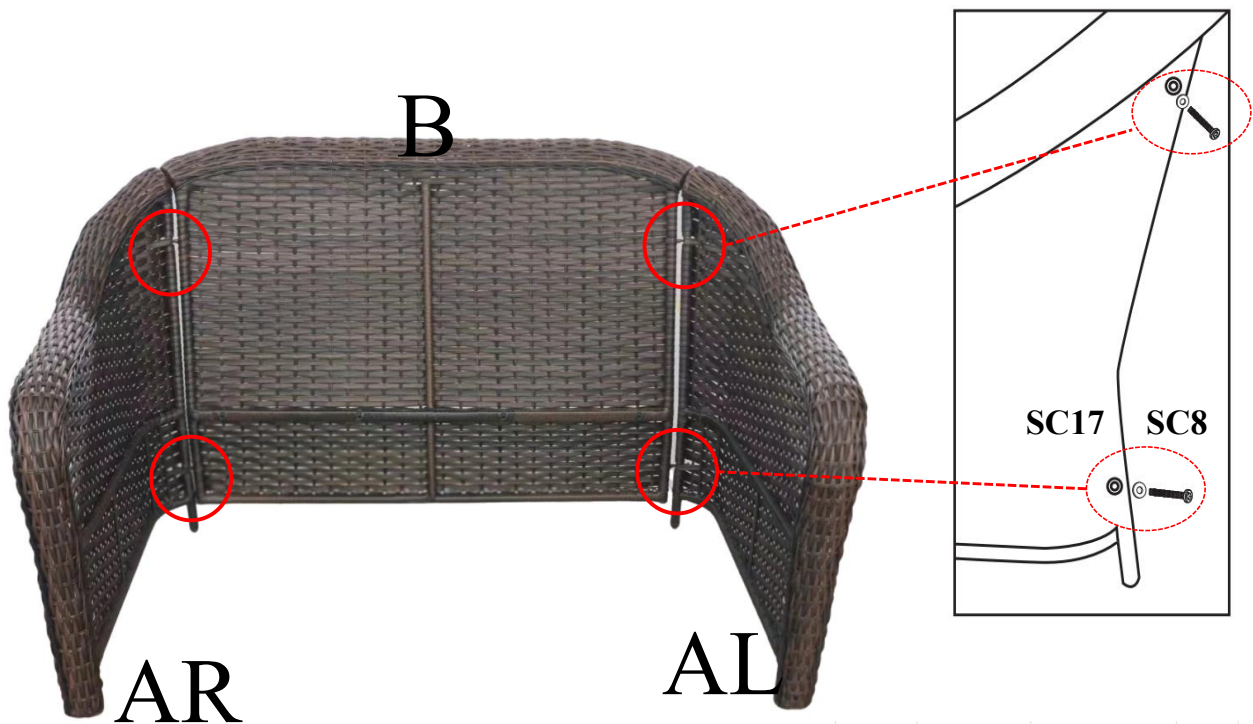1. Secure sofa arms (AL&AR) to sofa back (B) with 4 bolts (SC8) and 4 washers (SC17) by using allen wrench (SC1). **Keep the bolts loose.**





SC8		M6*35mm	4
SC17		Ø16*Ø6.5*1mm	4

2. Attach two front panels (C) to each other with 2 bolts (SC10), 2 washers (SC17) and 2 nuts (SC20) by using allen wrench (SC1) and open end allen wrench (G). **Keep the bolts fully tightened.**

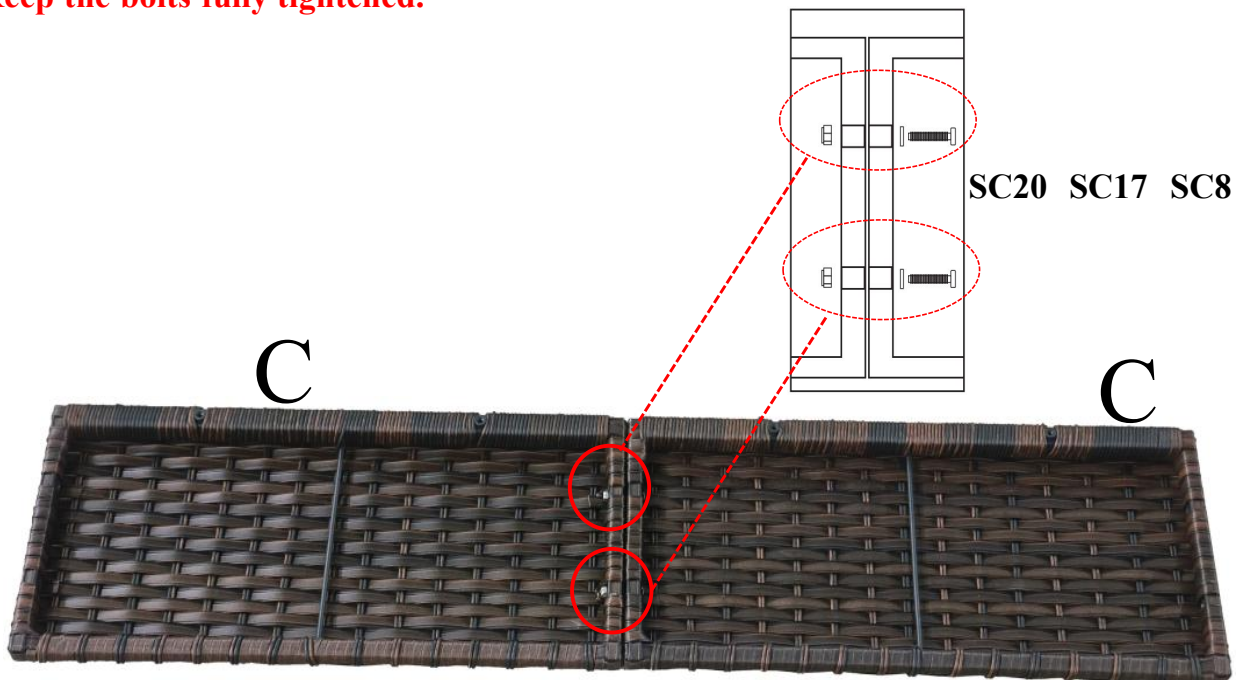



SC10		M6*45mm	2
SC17		Ø16*Ø6.5*1mm	2
SC20		M6 Nut	2

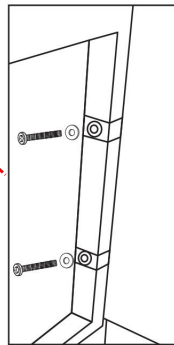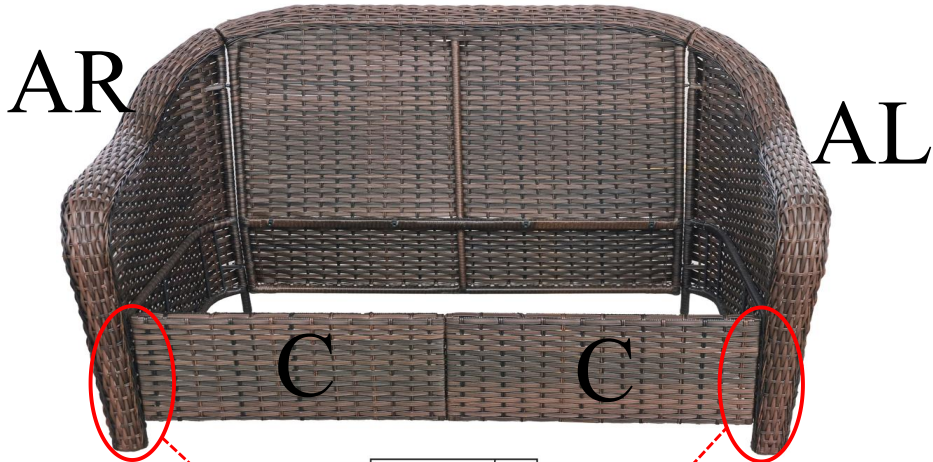
3. Secure assembled sofa arms (AL&AR) to assembled front panels (C) with 4 bolts (SC8) and 4 washers (SC17) by using allen wrench (SC1). **Keep the bolts loose.**




SC8 SC17

SC8		M6*35mm	4
SC17		Ø16*Ø6.5*1mm	4

4. Secure two seat panels (D) to sofa back (B) and assembled front panels (C) with 8 bolts (SC8) and 8 washers (SC17) by using allen wrench (SC1). **Keep the bolts loose.**  
**Note: Seat panels with arc shape should face sofa back.**

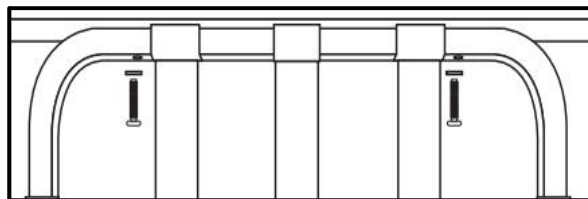

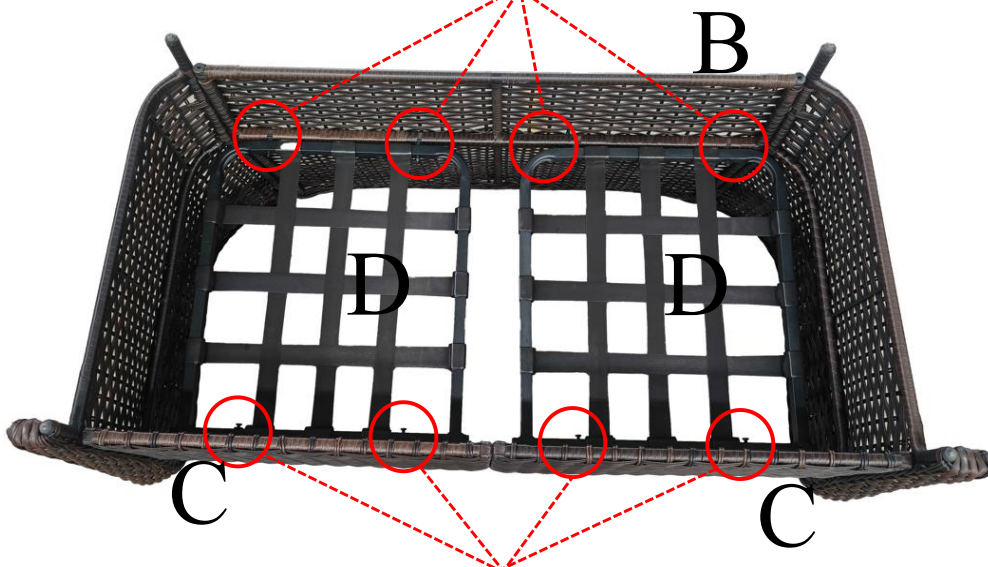

SC17  
SC8



SC17  
SC8



SC8		M6*35mm	8
SC17		Ø16*Ø6.5*1mm	8

5. Tighten all bolts, put cushions ( H&J) onto the sofa, it is ready to use now.

