Assembly Instructions









(Install Anti-Tip Strap provided) Use of Anti-Tip Strap may only reduce but not eliminate, the risk of tip-over.







Make sure all parts are included. Most board parts are labeled or stamped on the raw edge. Contact us for a free replacement if you encounter any damaged or missing parts.



Hardware List

A	x74+1	В	x74+1	С	x8+1	D	x4	E	x4
						(]		(Januanana	
Ø6x27		Ø 15 x 10		Ø 6 x 30		M4X15mm		M4X22mm	
F	x16+1	G	x86+1	Н	x16+1	Ι	x4	J	x20+1
Ve		N Ø				A LOW			
3.5X14mm		3.5X10mm		17X16X10.5				Ø 5x 38	
K	x2	L	x4	М	x4	N	x16+1	0	x1
and the second s				Q					
M6X25mm		M6X35mm		M6		Ø 5 * 13		M3x65x30	
Р	x1	Q	x1	R	x4	S	x4	Т	x1
				0 0 0					
M4x65x30		Standby		41*36		114*11*18		Steel wire anti overturning package	
U	x12+1	V	x2	W	x2	X	x1]	
Ŀ									
Ø11x4		235X35		520mm		182*55*44			

Installation of Cams and Pins

Screw the pin into the hole. To set the cams correctly, ensure that the arrow on the cam is opening to the hole of the pin it is locking. Lock the cam by turning the cam head with a screwdriver until it is tightened. Please do not use an electric screwdriver to assemble the unit.



Read each step carefully before starting. It is very important that each step of instruction is performed in the correct order. If these steps are not followed in sequence, assembly difficulties will occur.







B 8 pcs









8



F 8 pcs

P-9























A 20 pcs



































































34



29

(31)

0.0

0.0









To pull out the drawer, find the hook-shaped latch press down (on both sides of the drawer) and pull the drawer out.













Ρ







Р 1 рс









B 6 pcs



