 


INSTALLATION

 
 
Product Manual

Version: 520066UK-01-25A-TS

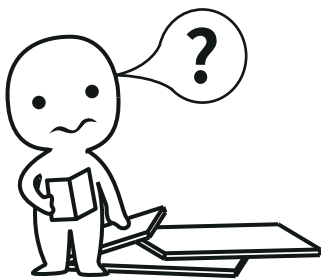


IMPORTANT INFORMATION!

please read the entire manual before starting to assemble and/or using this product. follow the manual thoroughly and keep it for further reference.

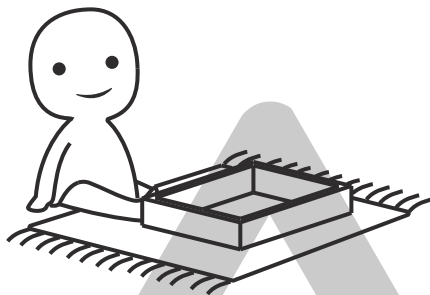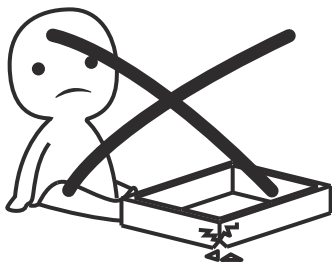



AVOID SCRATCHES!

 In order to avoid scratching this furniture should be assembled on a soft layer-could be a rug.

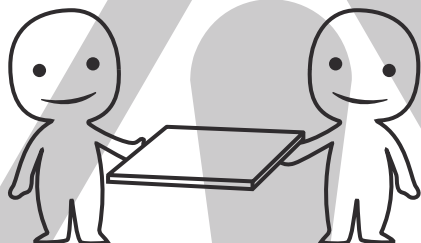

IMPROVE EFFICIENCY !

  Try to find a partner to install with you, which can speed up the installation efficiency and shorten the time.

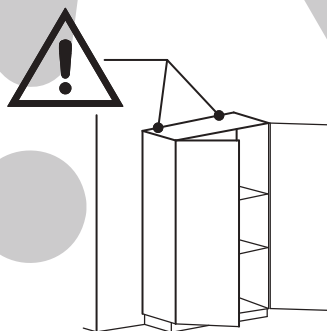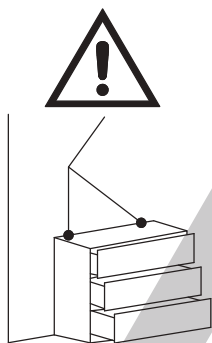

ANTI-TOPPLE WARNING !

 
Overturned furniture can cause serious or fatal crush injuries. To prevent tipping over, be sure to use the wall attachment, if not included with this product. Please purchase the wall attachment that fit your wall. If unsure, seek professional advice. Please read and follow each step of the instructions carefully.

IMPORTANT !



It is important that any product which is assembled using any kind of screw is re-tightened 2 weeks after assembly, and once every 3 months - in order to assure stability through-out the lifespan of the product.

For regular maintenance and cleaning of the product, for the frame, please use a rag dipped in neutral detergent to fully wipe it, and then dry it with a clean rag. For glass materials, wipe with a rag dampened with water glass cleaner, and then dry with a dry rag.

Do not use an electric screwdriver, and do not use too much force when installing, because the board is easy to break.

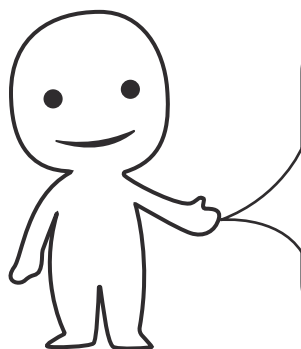

Please prepare the following tools

  

When installing, please carefully confirm whether each screw corresponds to the manual, accessories with similar shapes can be distinguished by size

A x 16+2



 
Ø 6 x 35 m

B x 16+2



Ø 12x12mm

C x 10+1




D x 28+2




Ø 3.5x12mm

 E x 7

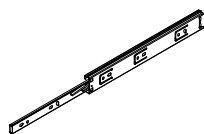


27X300mm

 Fx28+2

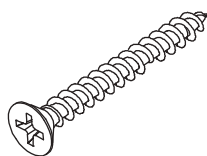


Ø 3x35mm

 Gx1

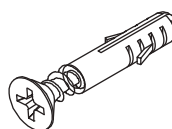

Ø 6x40mm

 H x 1



65x19mm

JX2



Ø 4X20mm

Kx42+2



Ø 3.5x14mm

Lx14+1




Ø 8mm

Mx3



Ø 6mm

 NX42+2



Ø 5X50mm

Px16



Ø 5x16mm

Qx1




M4x20mm

Rx7




M4x10mm

 Sx2

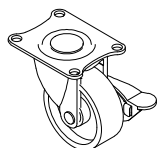


60mm

 Tx2

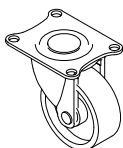

60mm

 Ux28




Ø 12mm

Vx58+2



Ø 15mm

 Wx2




Ø 35mm

Yx8




Ø 25x20mm

 Zx1



34x19mm

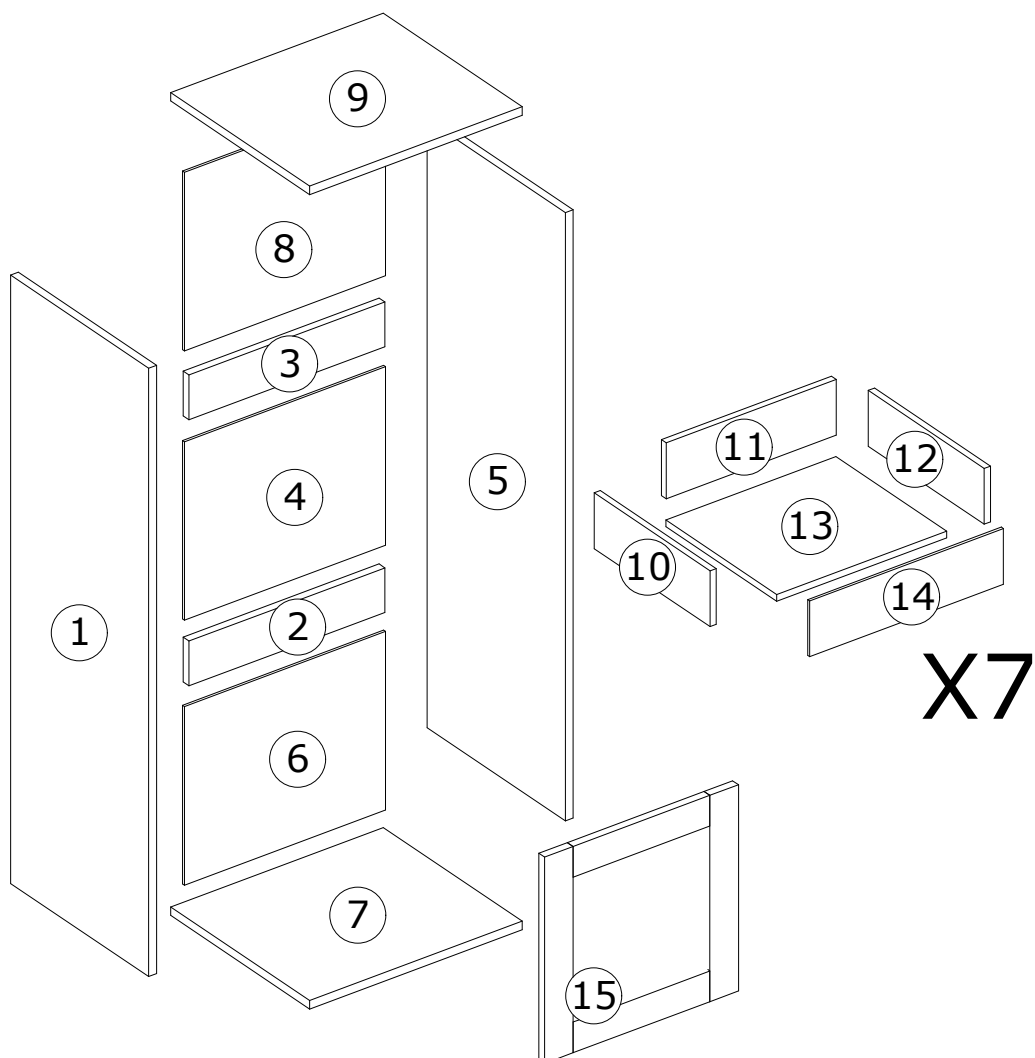 


⚠ WARNING



Children have died from furniture tipover. To reduce the risk of furniture tipover:

- ALWAYS install Anti-tip device provided.
- NEVER put a TV on this product.
- NEVER allow children to stand, climb or hang on drawers, doors, or shelves.
- NEVER open more than one drawer at a time.
- Place heaviest items in the lowest drawers.

 
*This is a permanent label.
Do not remove!*

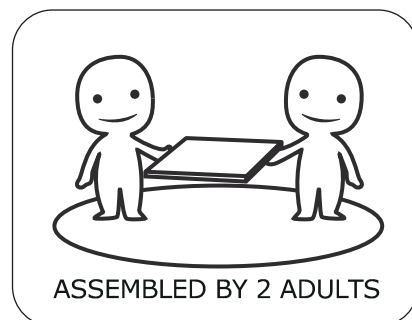


Slides Must Be Separated Before Assembly.
After Separated, Set Aside Until Needed for Assembly.

Las diapositivas deben separarse antes del montaje.
Después de la separación, déjelo a un lado hasta que sea necesario.

 
Les glissières doivent être séparées avant l'assemblage.
Après la séparation, mettez de côté jusqu'au moment de l'assemblage.

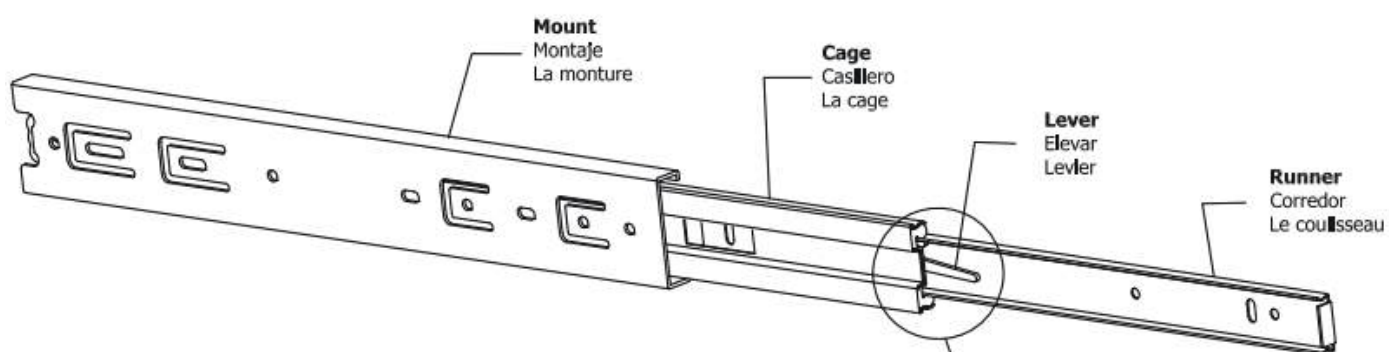

 
STEP 1: Extend Slide
Extender la diapositiva
Extendre la diapositive

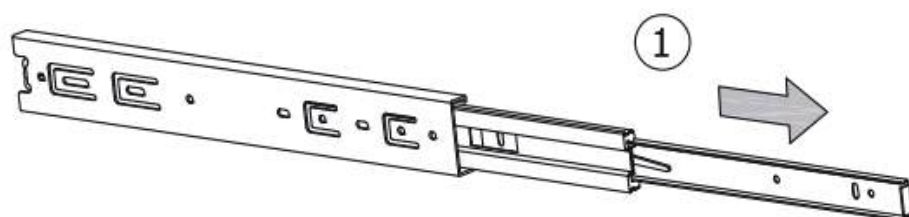

 
STEP 2: Push Lever UP
Empujar hacia arriba
Lever le levier


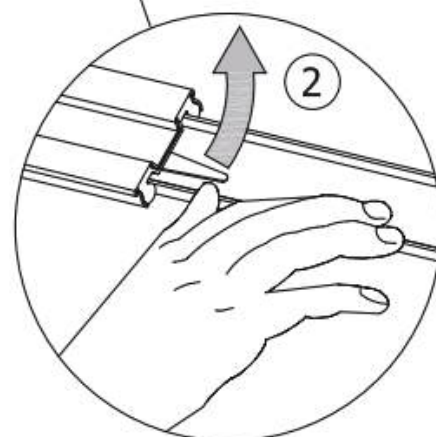


 STEP 3: Remove Runner
Quitar el corredor
Enlever le coureur




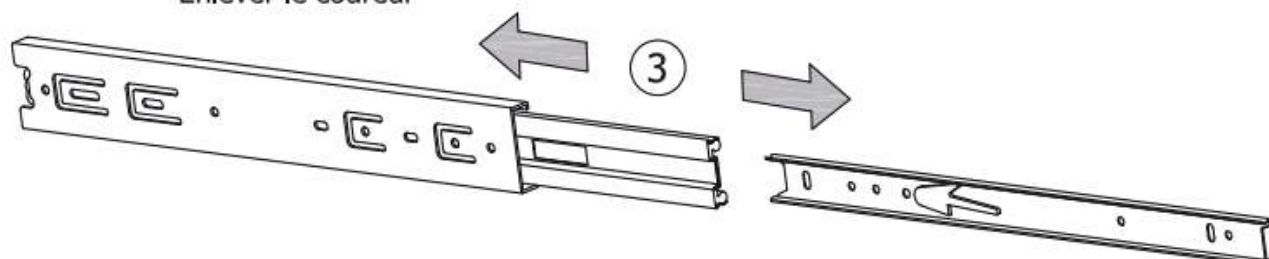


1

 A x 4  Ø 6 x 3 5 mm	E x 7  E-1	K x 14  3.5x14mm	
--	---	---	---


 
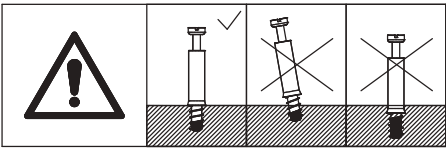 


E-1

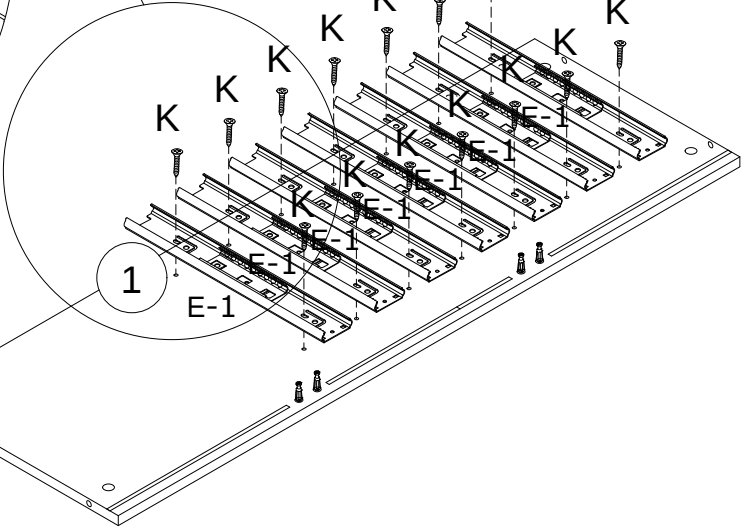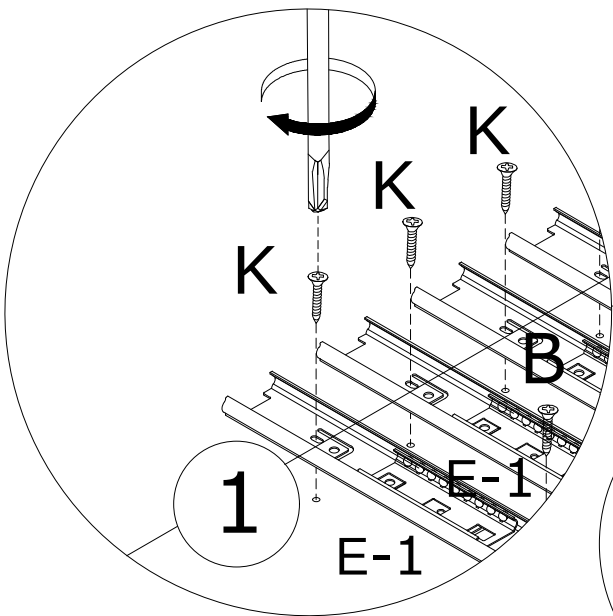  
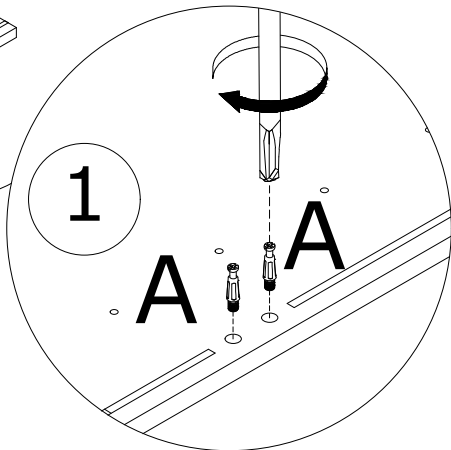 
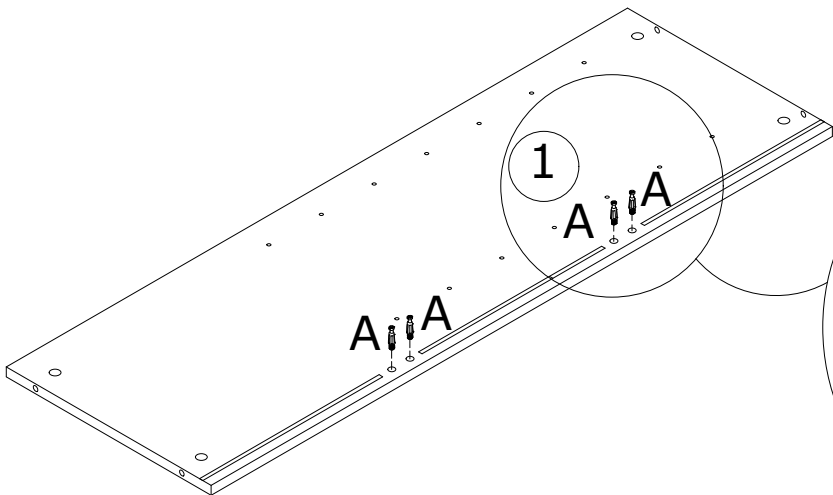 


2

   B x 4
Ø 12x12mm

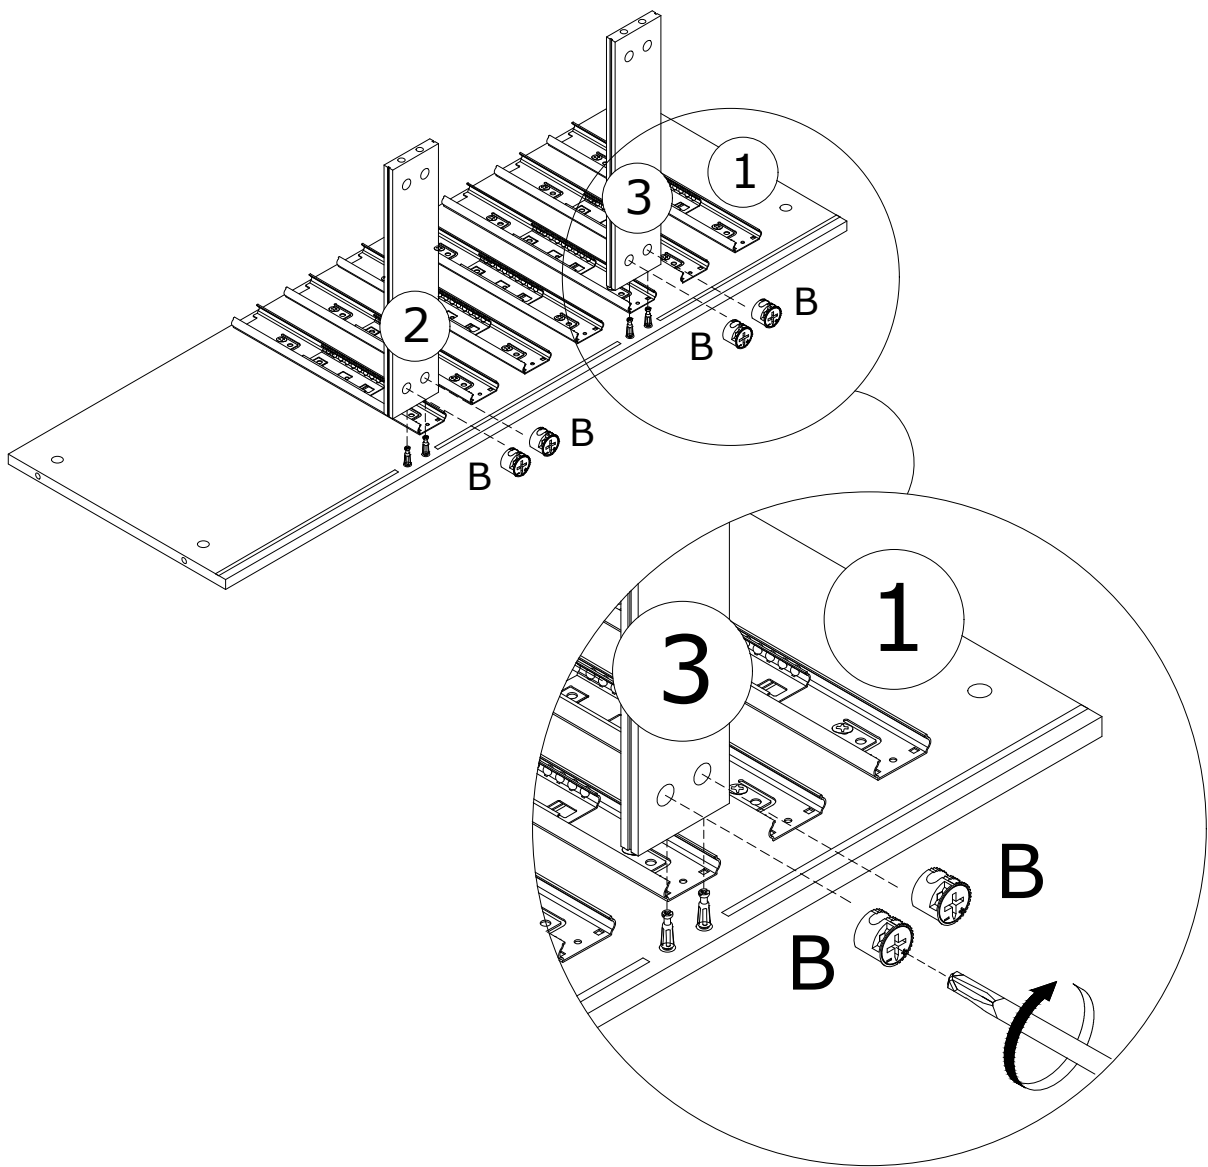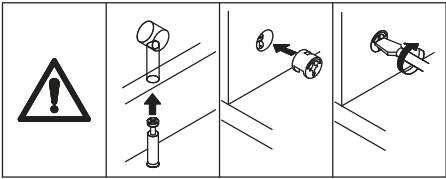

3

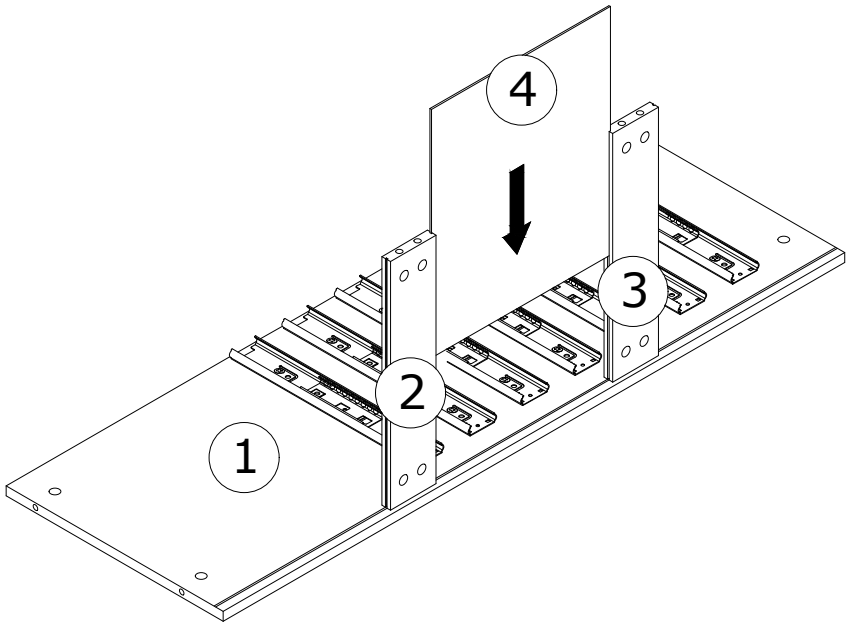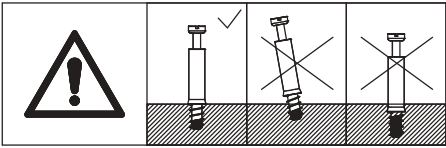   

4

A x 4



Ø 6 x 3 5 mm

E x 7

 
 


E-1





K x 14



3.5x14mm

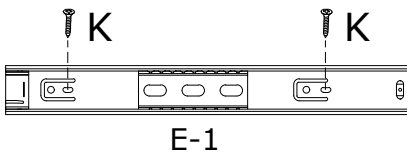

E-1

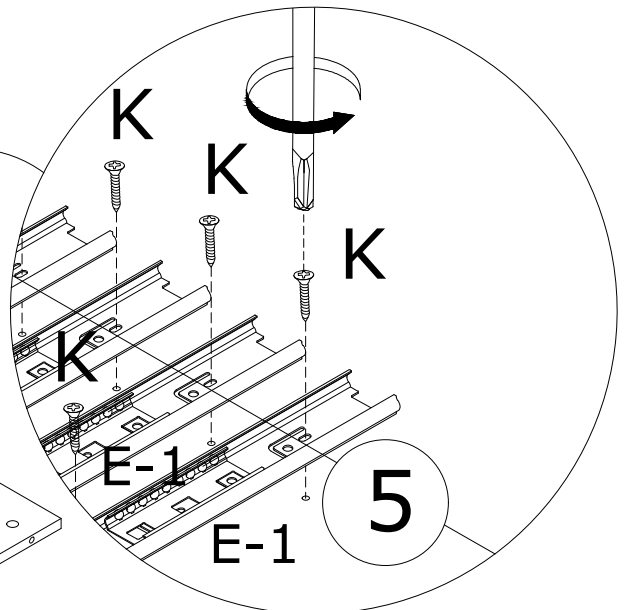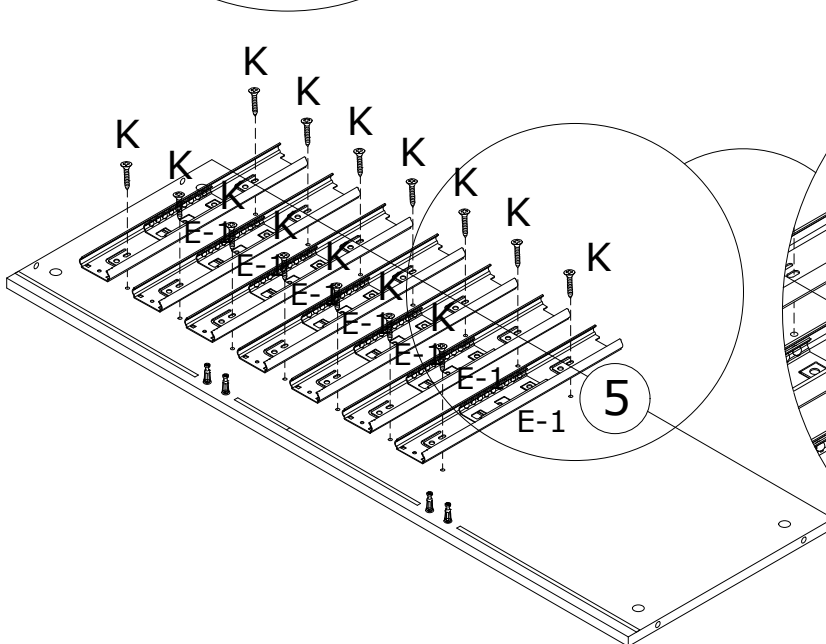  
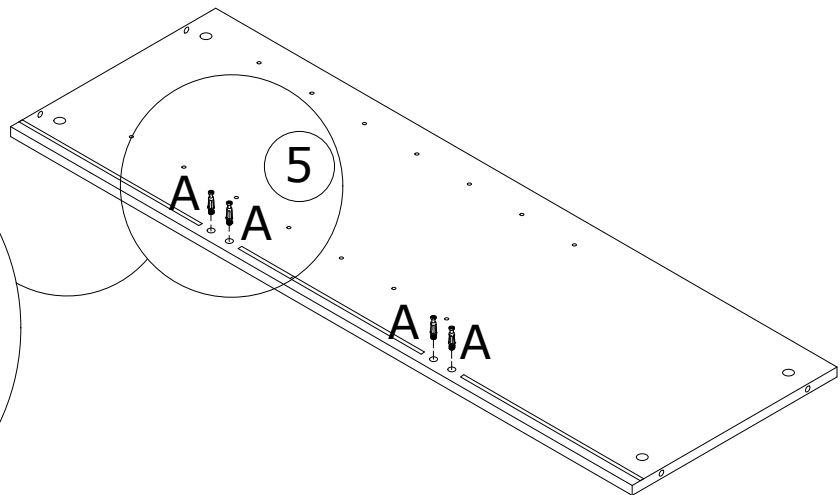 
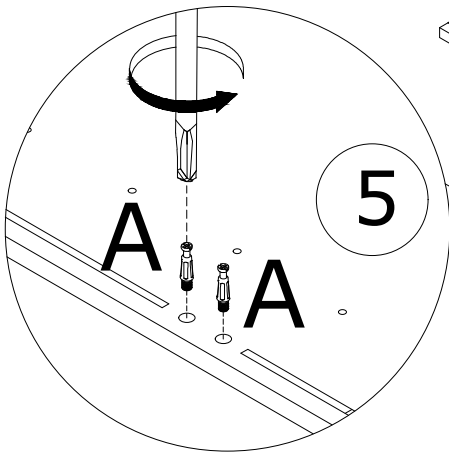 


5


Bx 4







   Ø12 x 12 mm

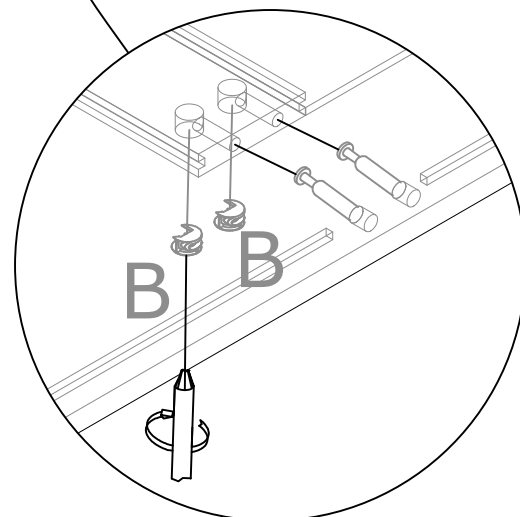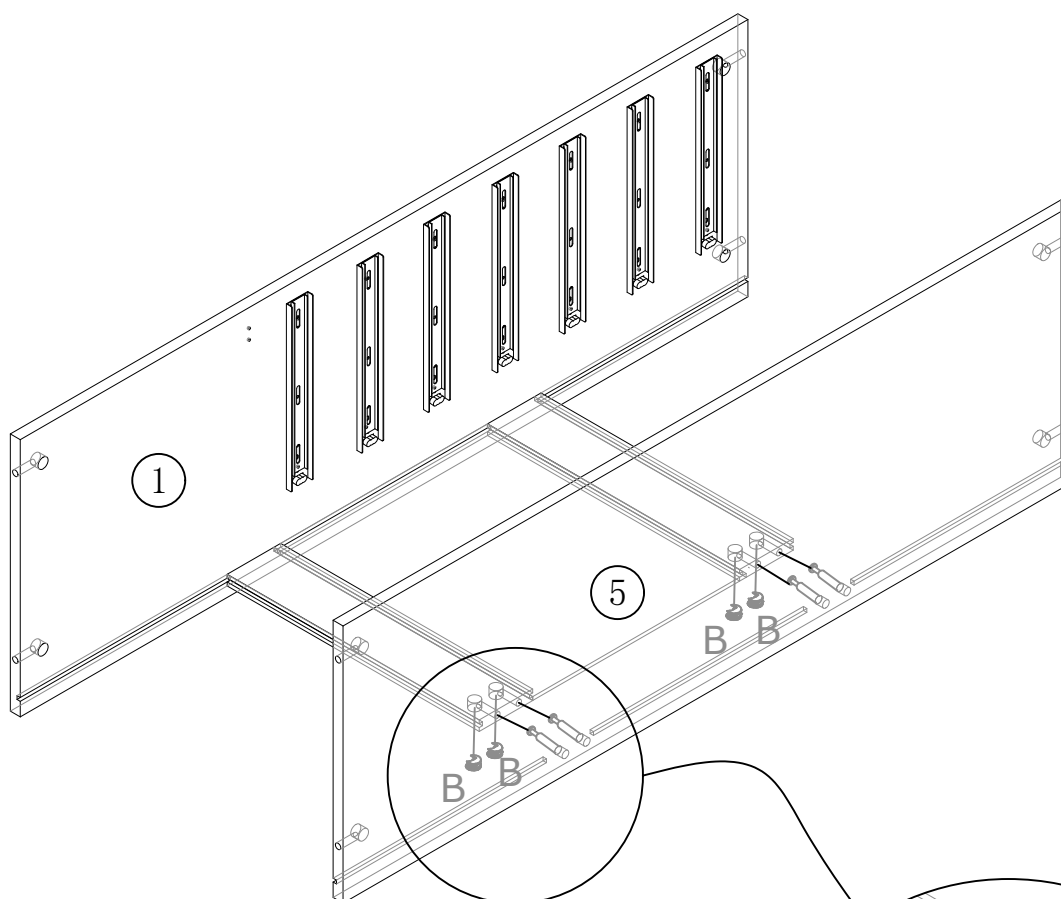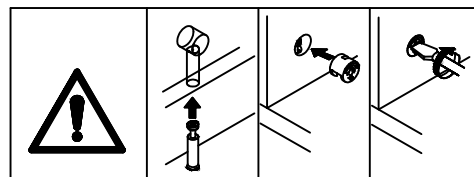


6

 A x 8  Ø6x 35 mm	Kx2  Ø3.5x 14 mm	H x 1 	M x 2 	
---	---	--	--	---

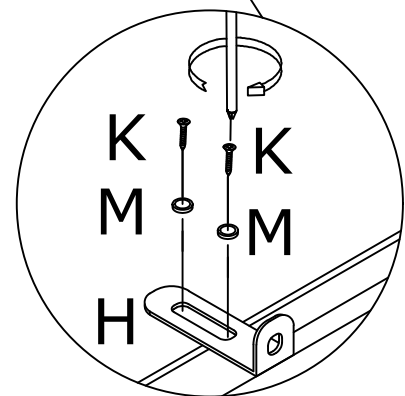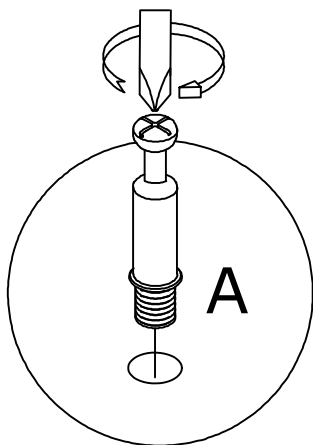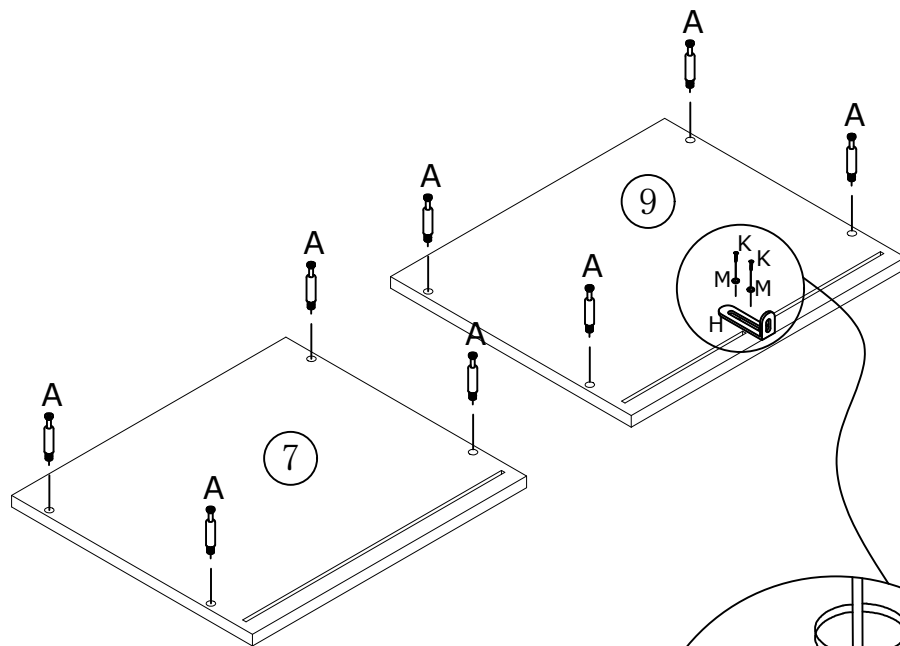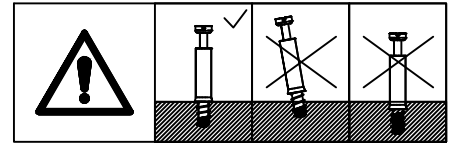    

7



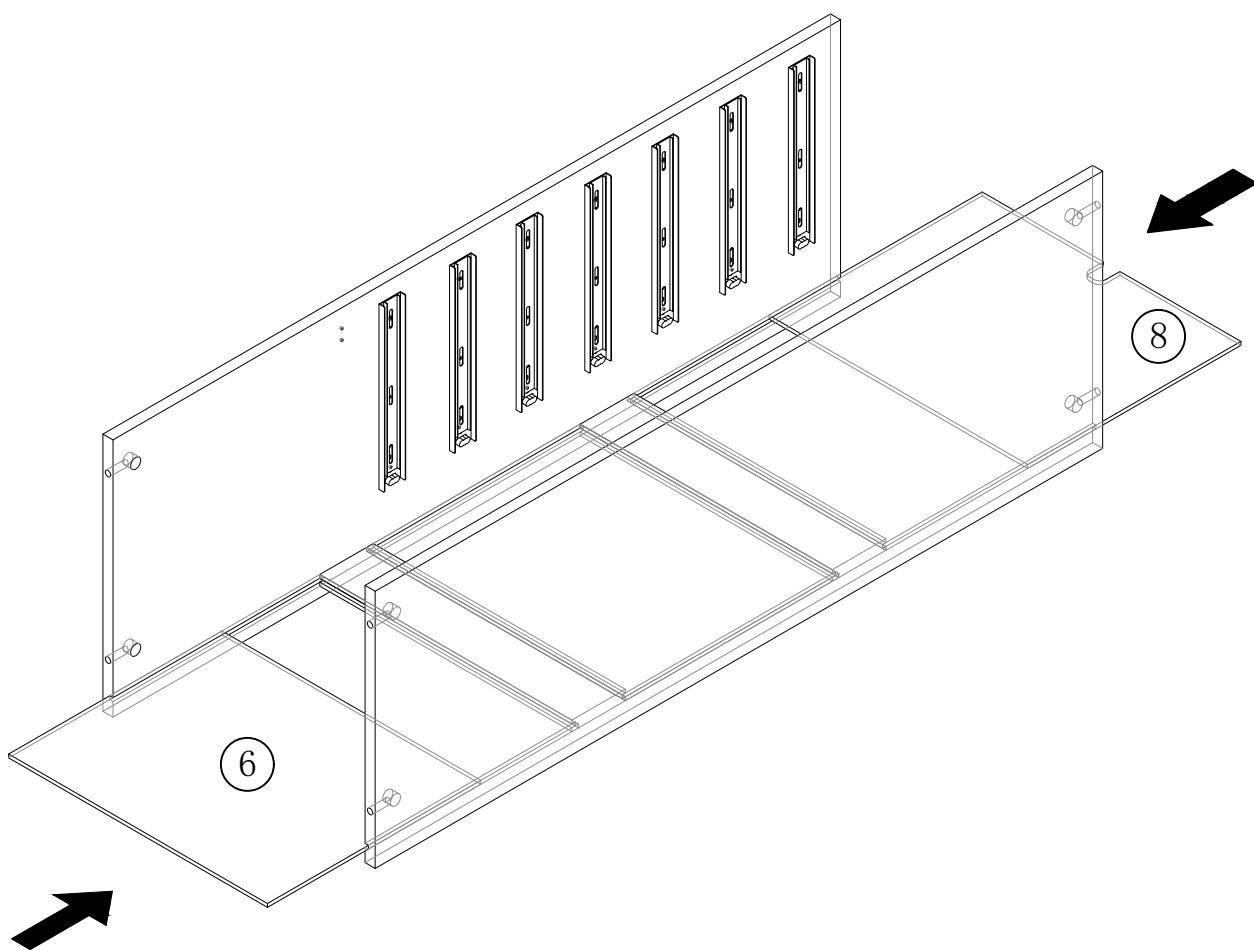 


8

Bx 4



   Ø12 x 12 mm

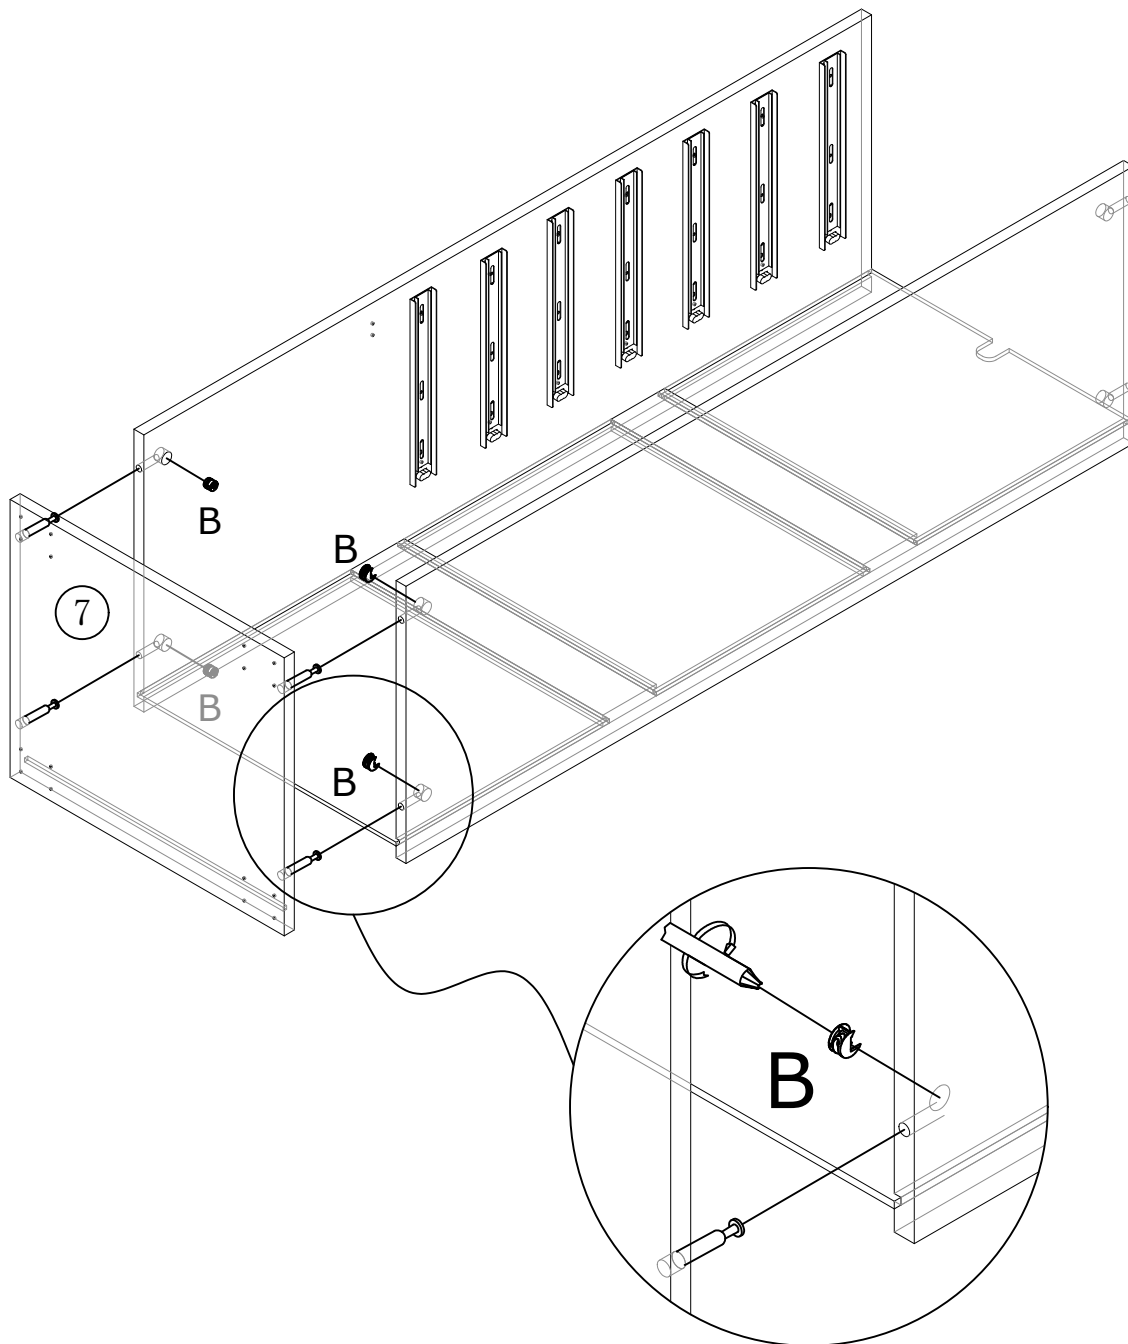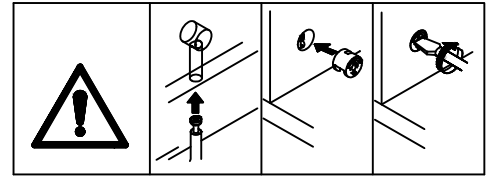



9


Bx 4





  Ø12 x 12 mm



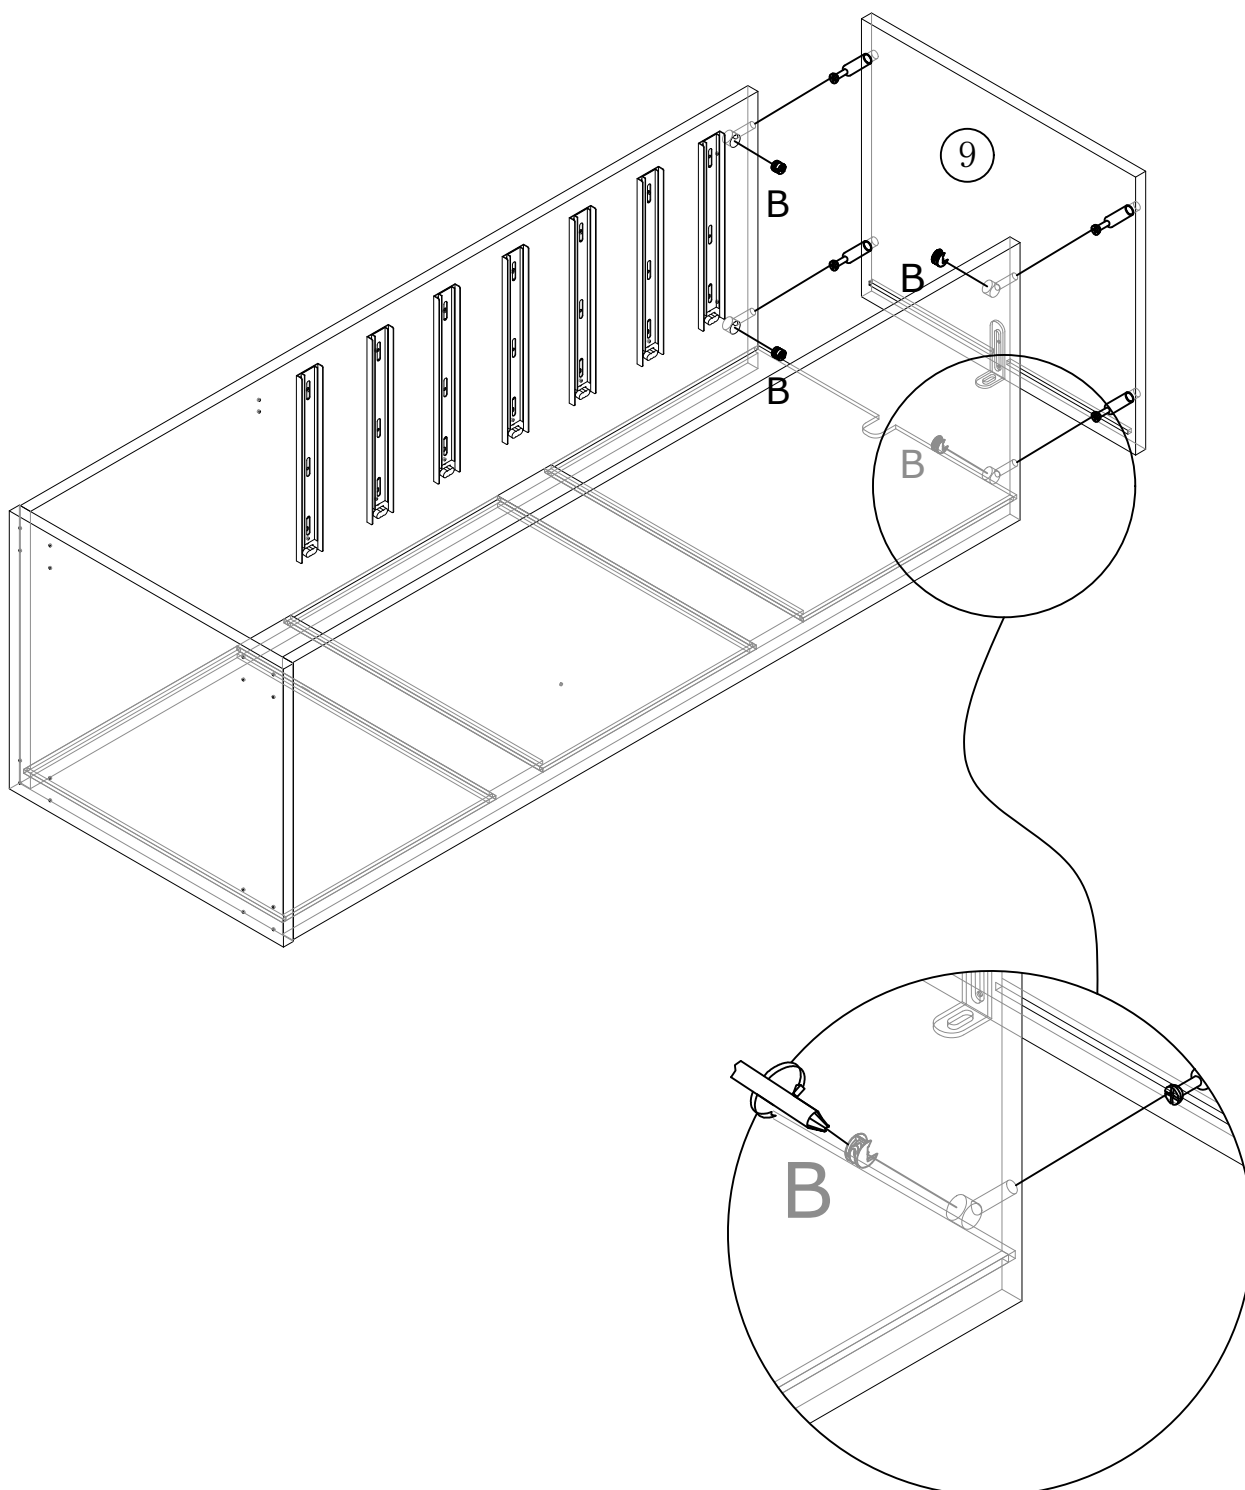



10


 
P x 16  Ø5x 16 mm	T x 2 	S x 2 	V x 16 	
--	--	--	---	---

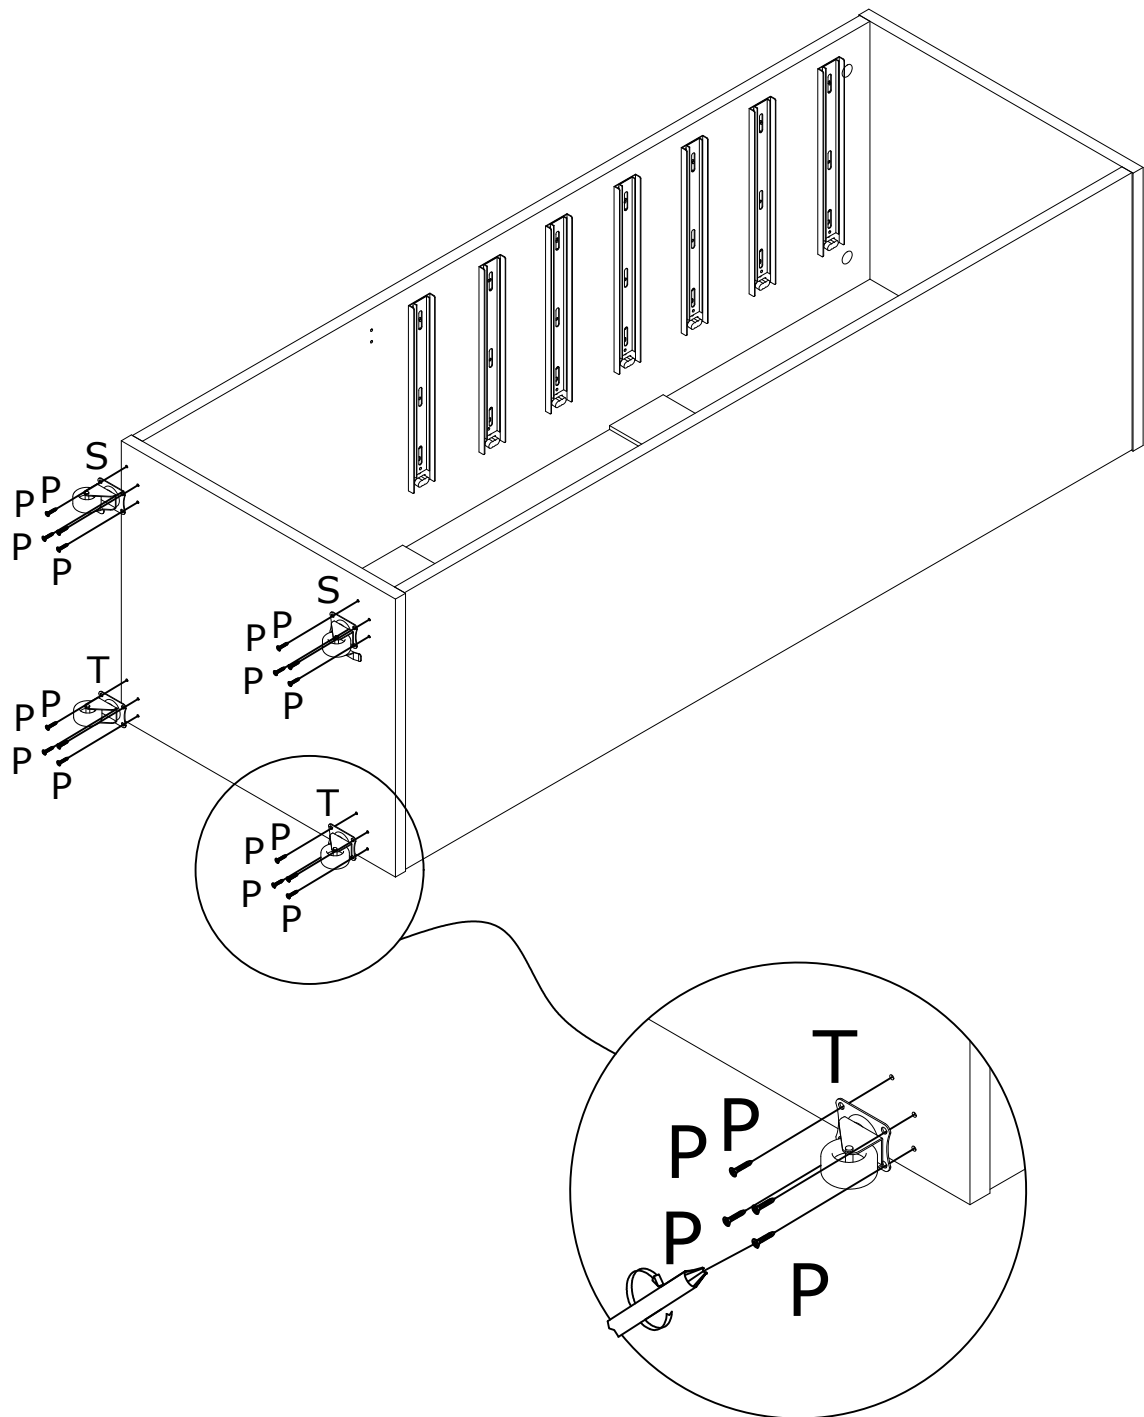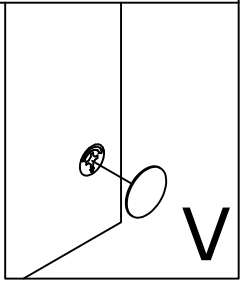  

11

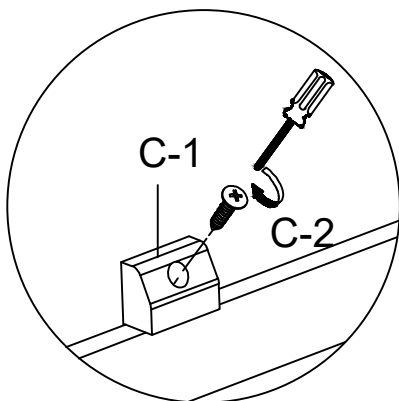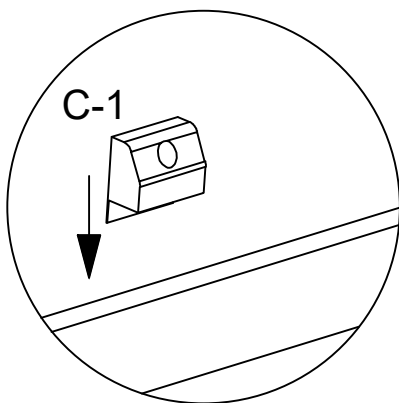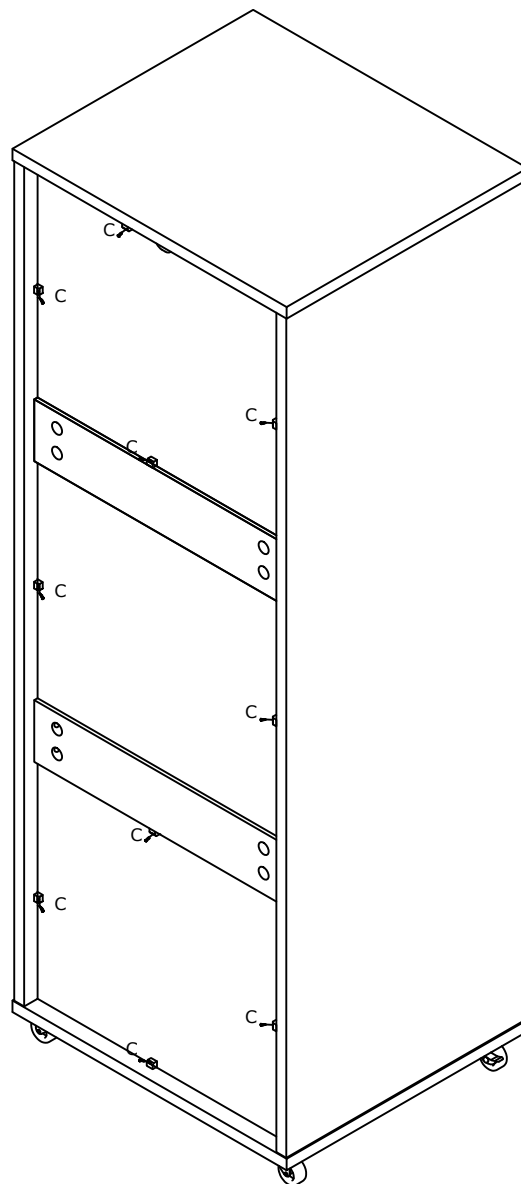   
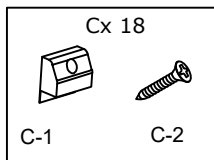 


12

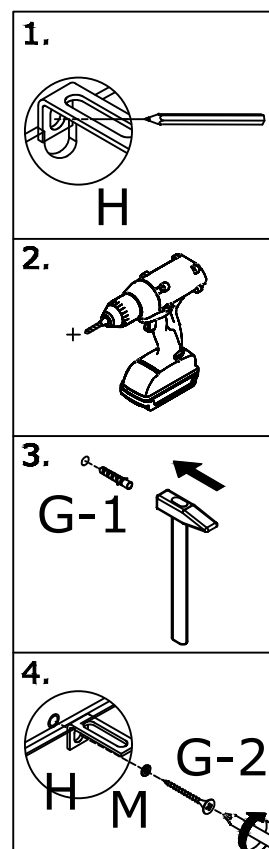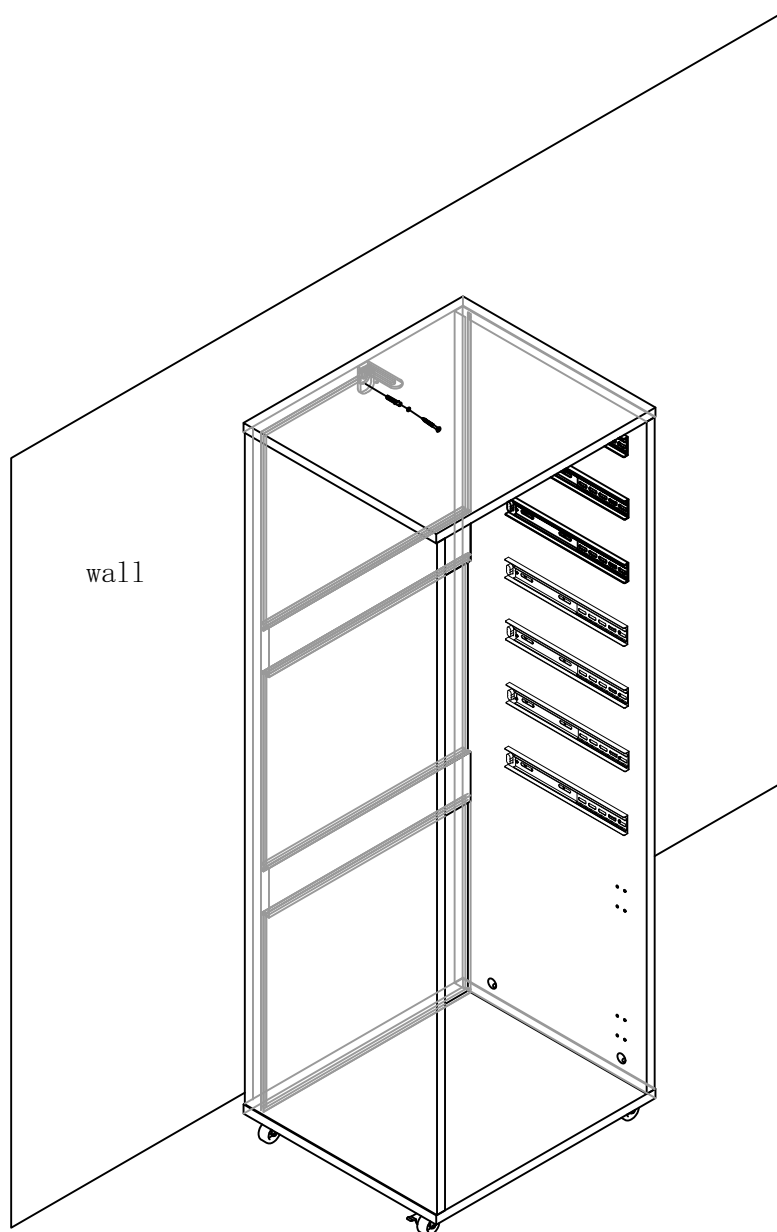  


13


Nx 14	
	
N-1	N-2



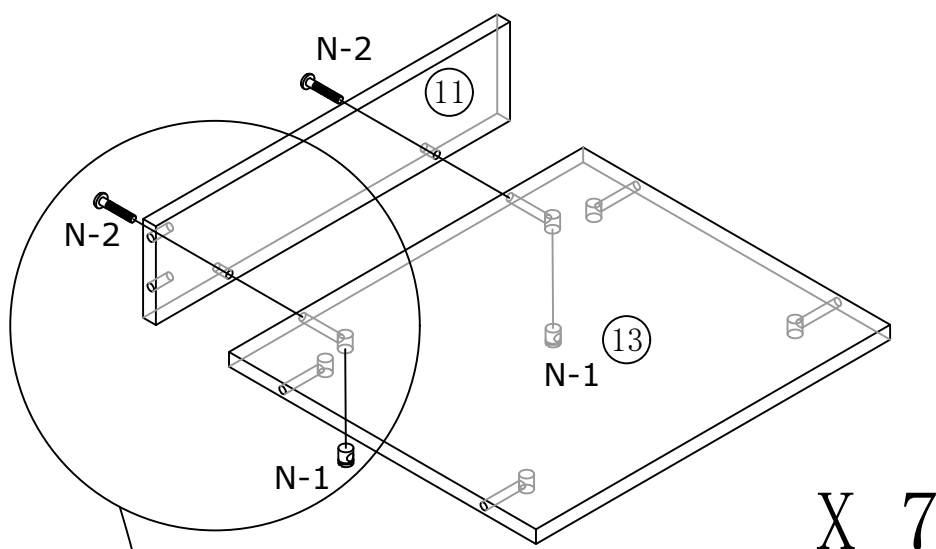 
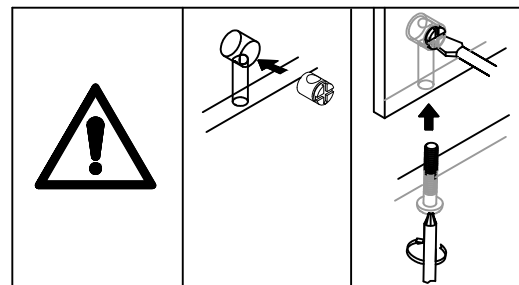 


X 7

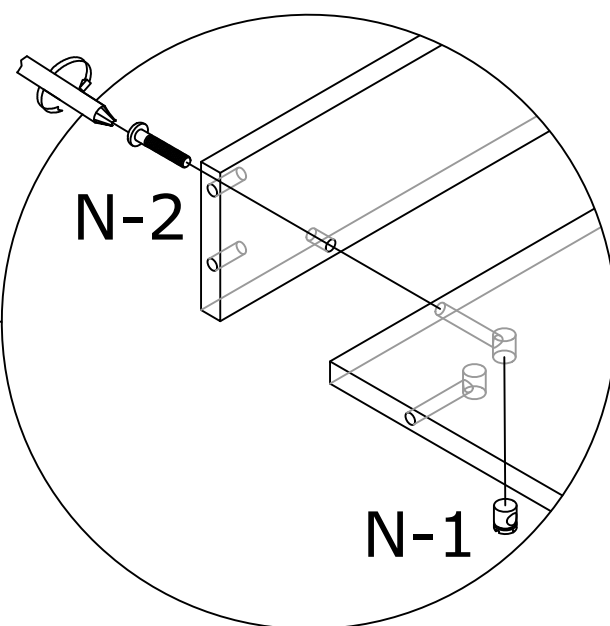 



14

 N x 28   N-1 N-2	F x 28  Ø3x 35 mm	
---	--	---

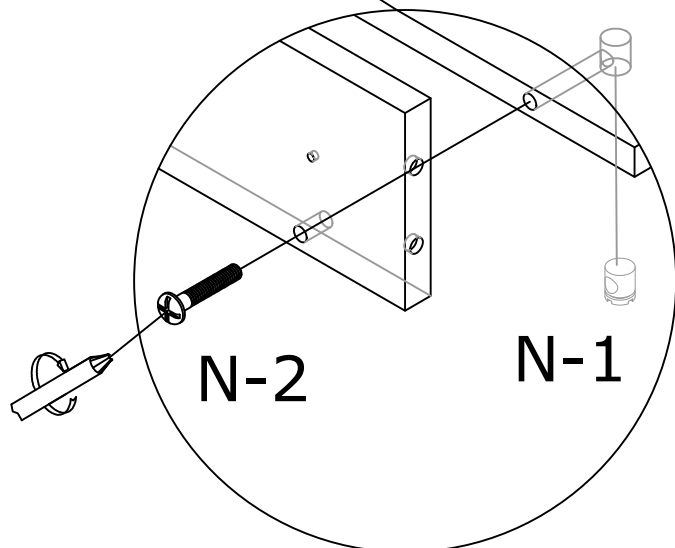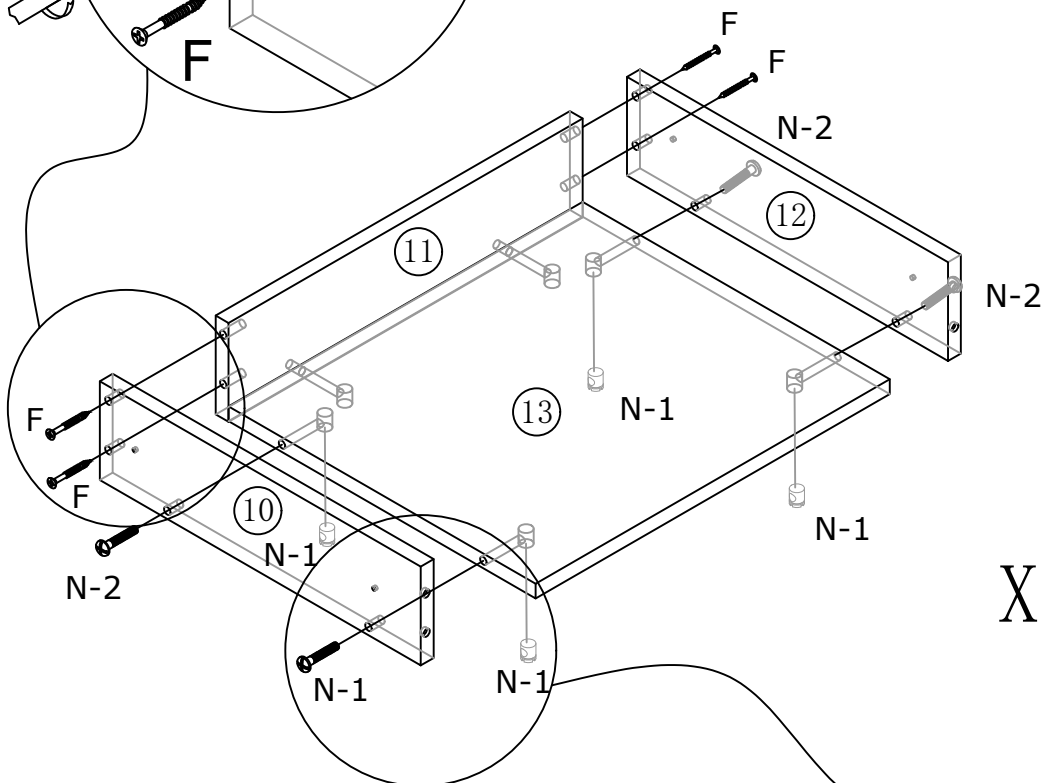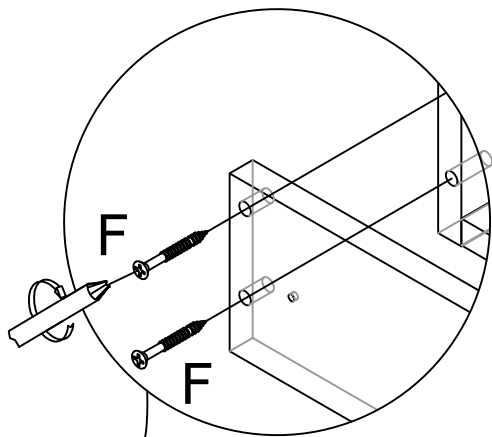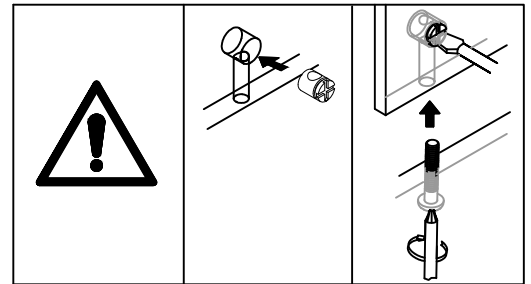    





15

 U x 28    U-1 U-2 U-3	R x 7  M4x 10 mm	Y x 7 	L x 14 	
--	---	--	--	---

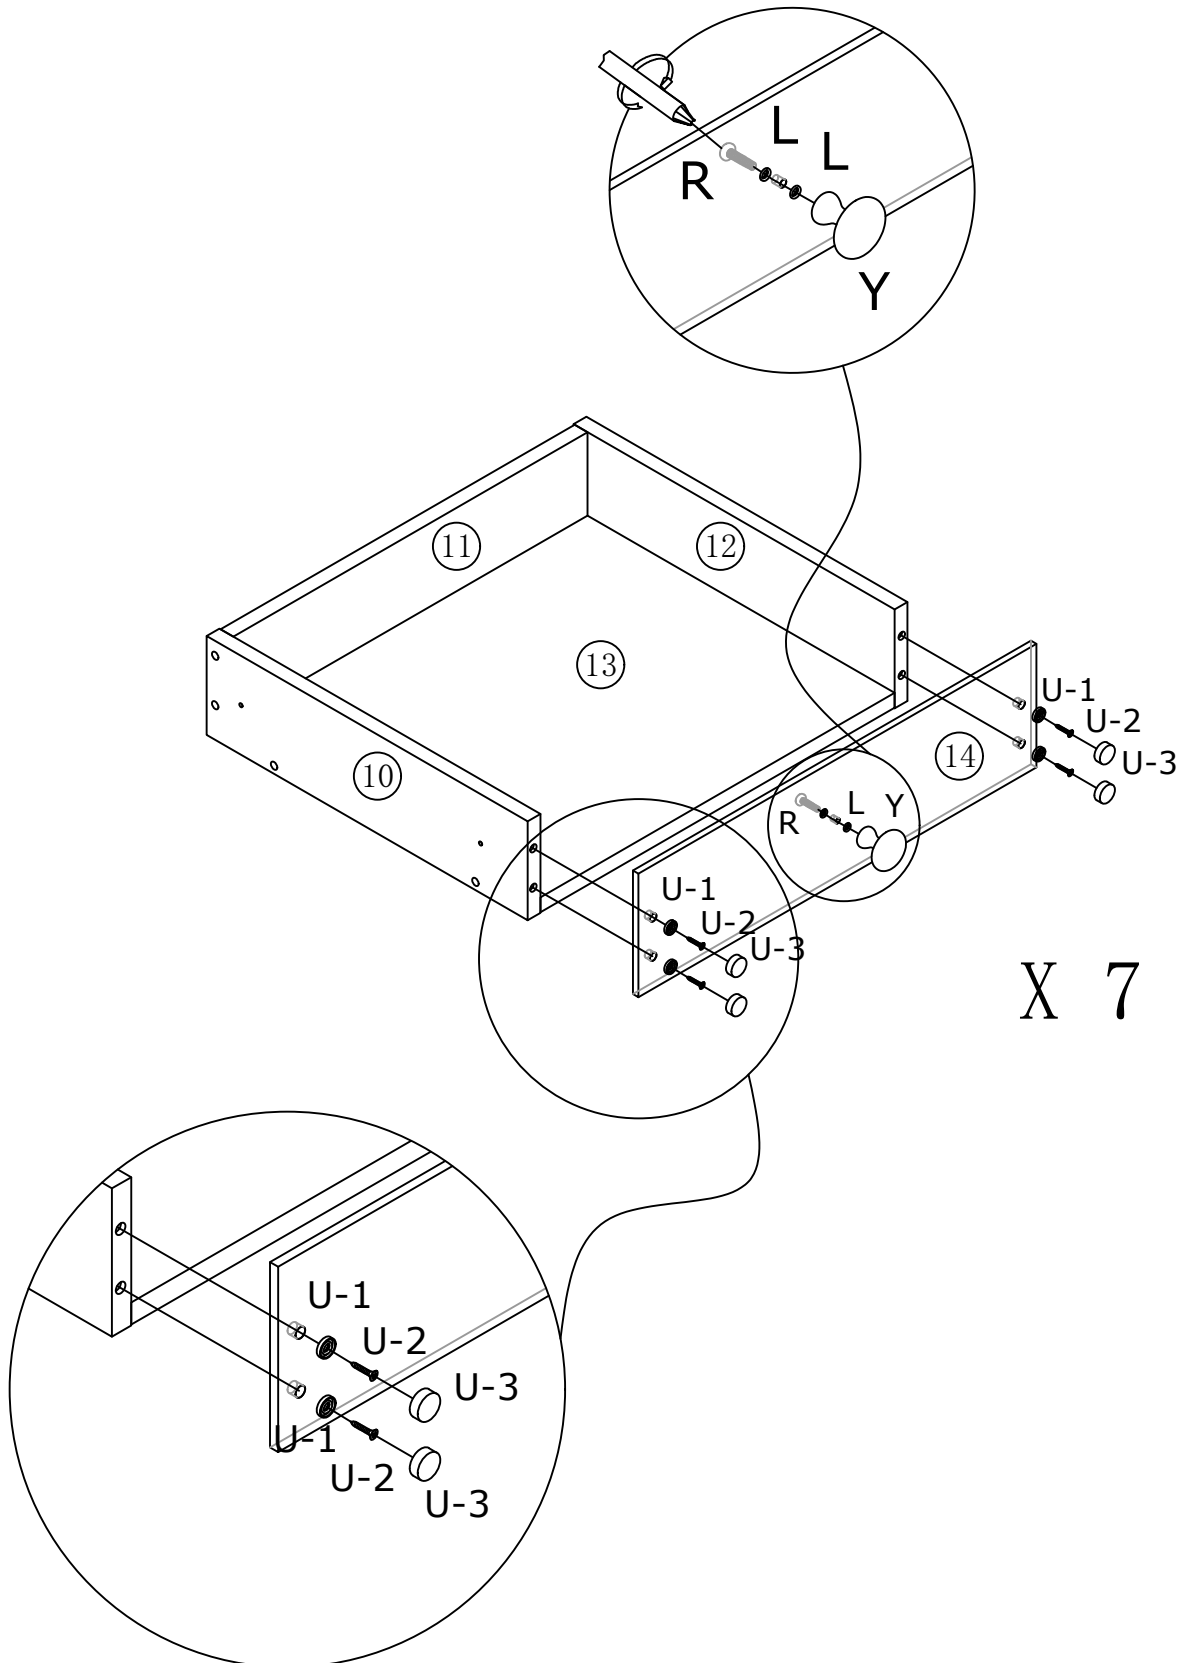 


16

 
E x 7  E-2	D x 28  Ø3.5x 12 mm	V x 42 	
---	--	---	--

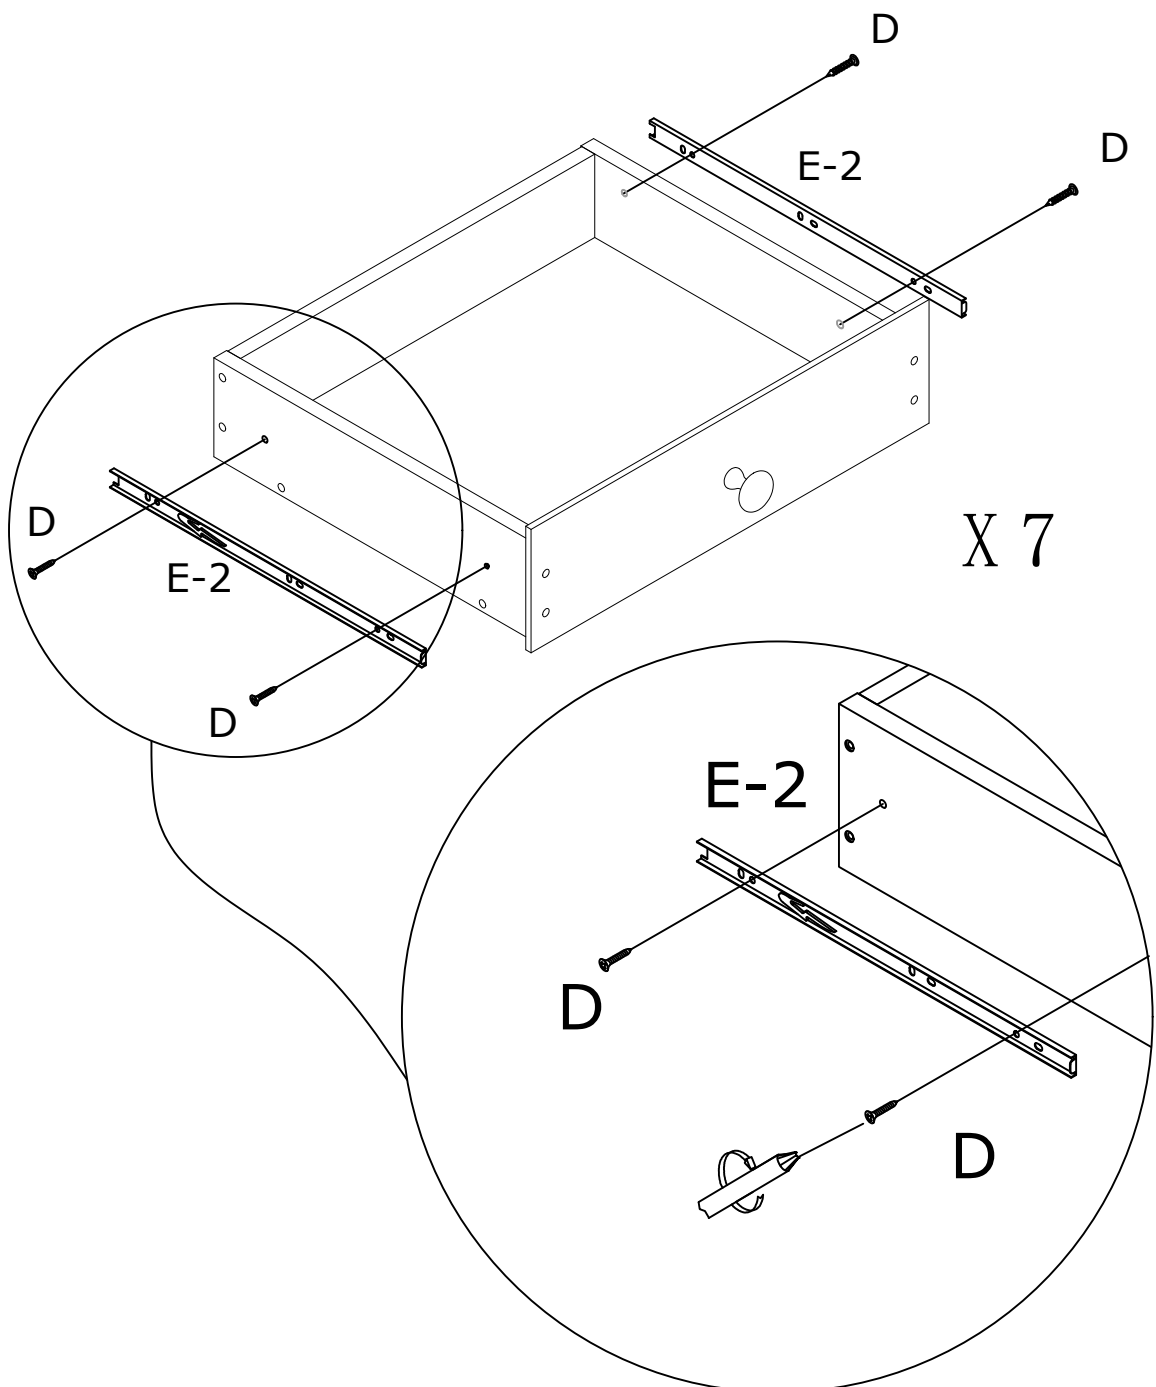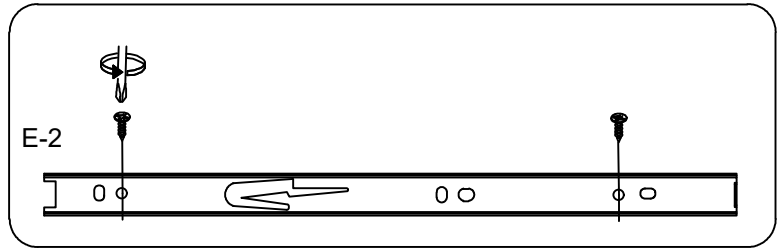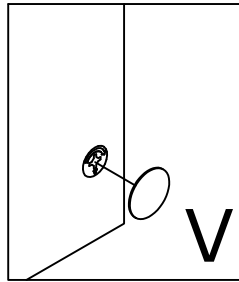   


17

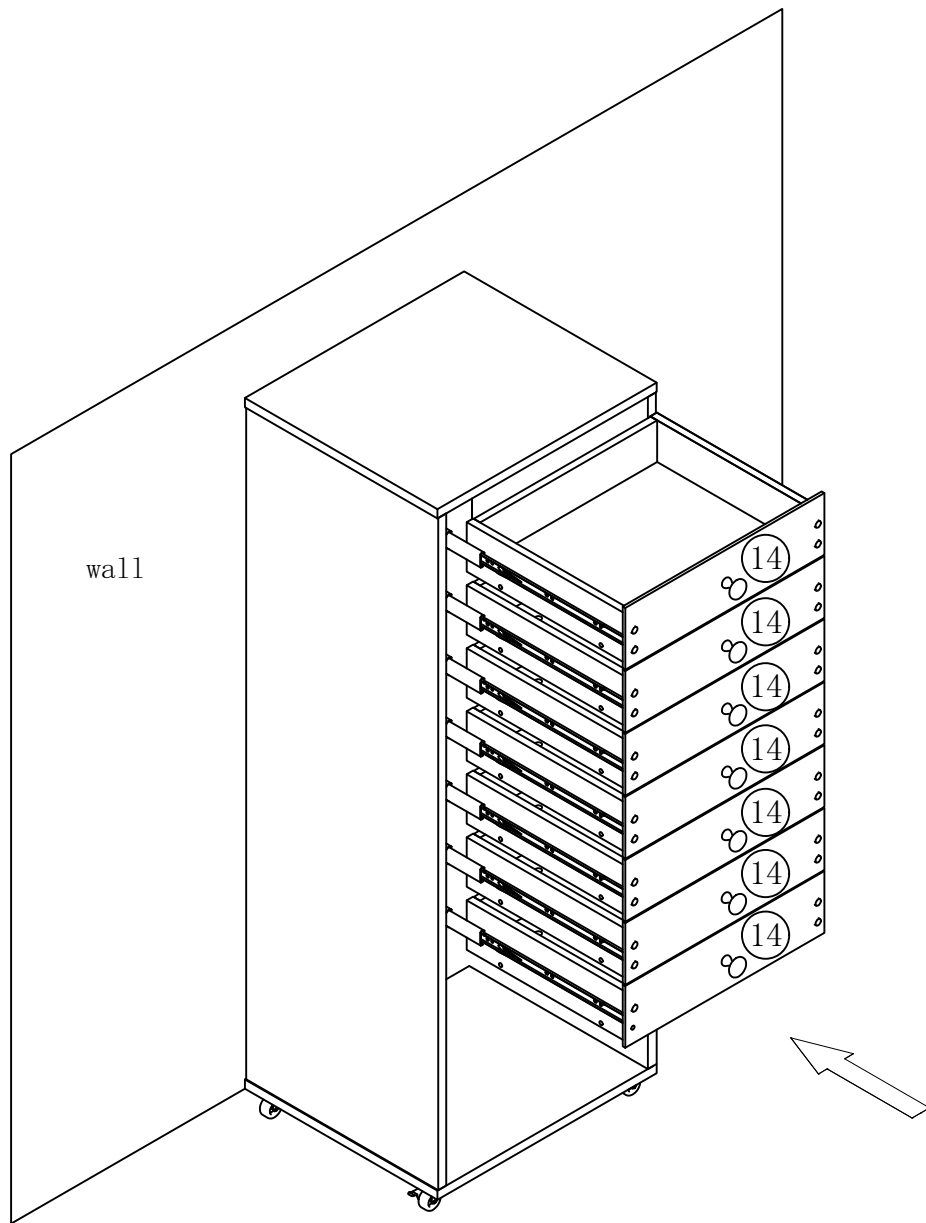 




18

 $K \times 4$  $\varnothing 3.5 \times 14 \text{ mm}$	$W \times 2$ 	$Y \times 1$ 	$Q \times 1$  $\varnothing M4 \times 20 \text{ mm}$	
---	---	---	--	---

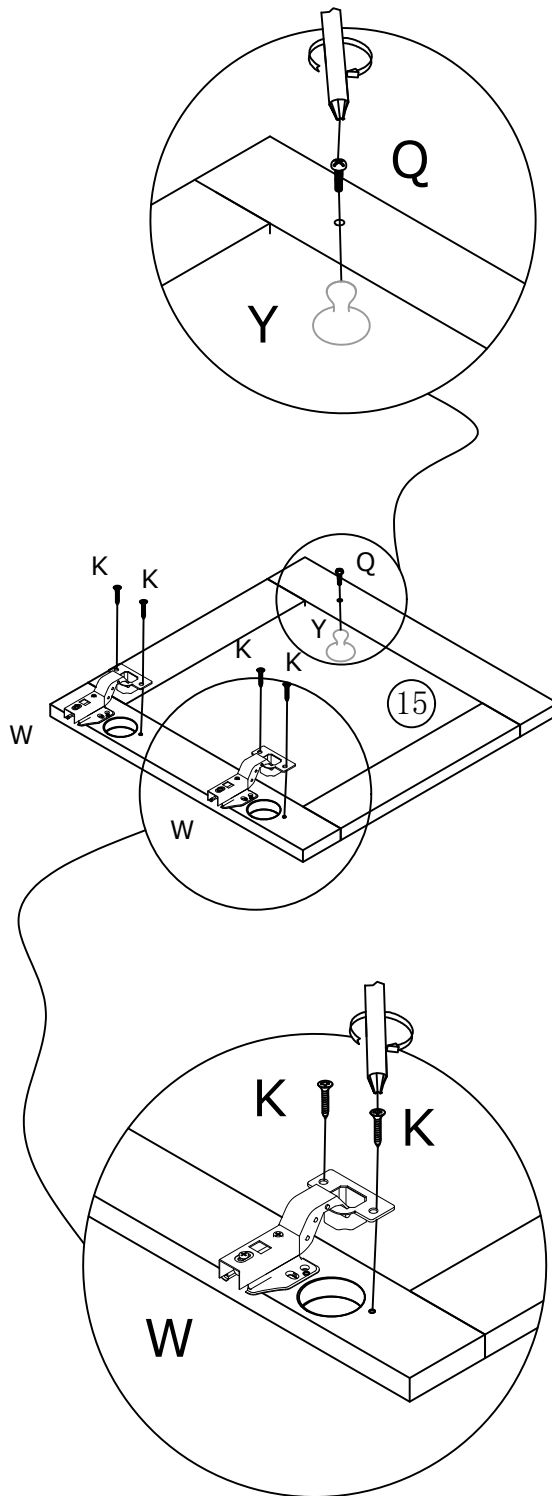 

19

 J x 2  Ø4x 20 mm	Z x 1 	
---	--	---

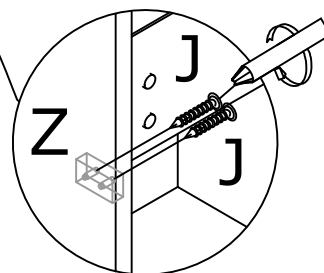 
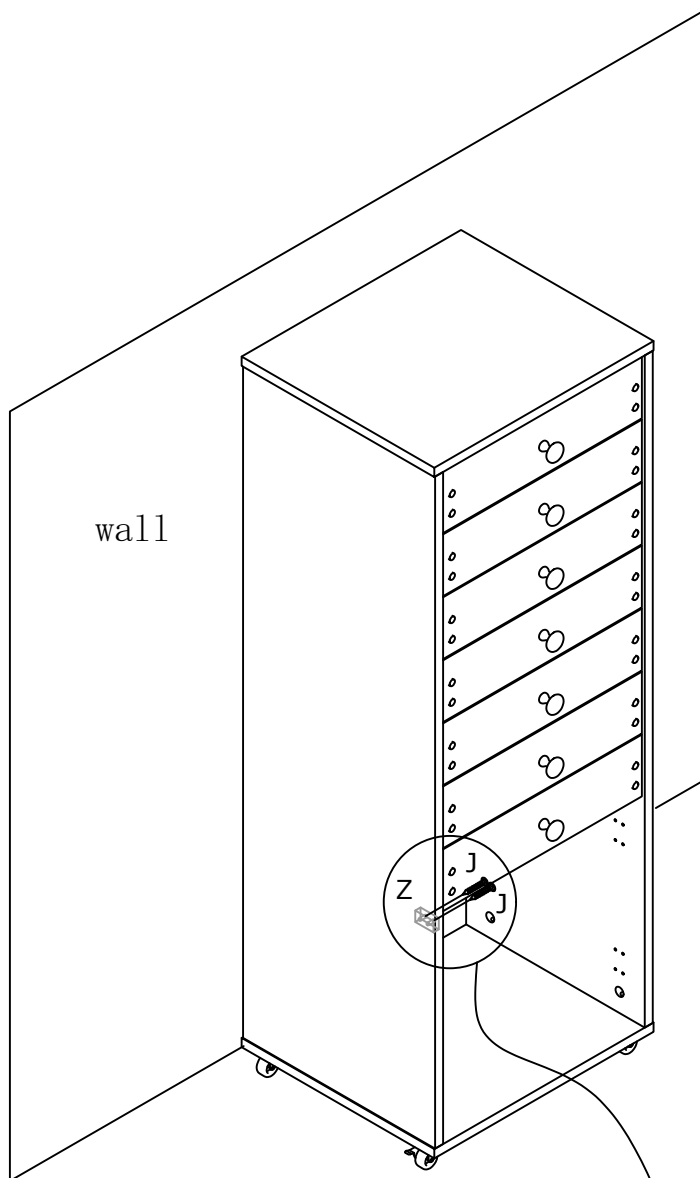 





20

K x 8





     Ø3.5x 14 mm

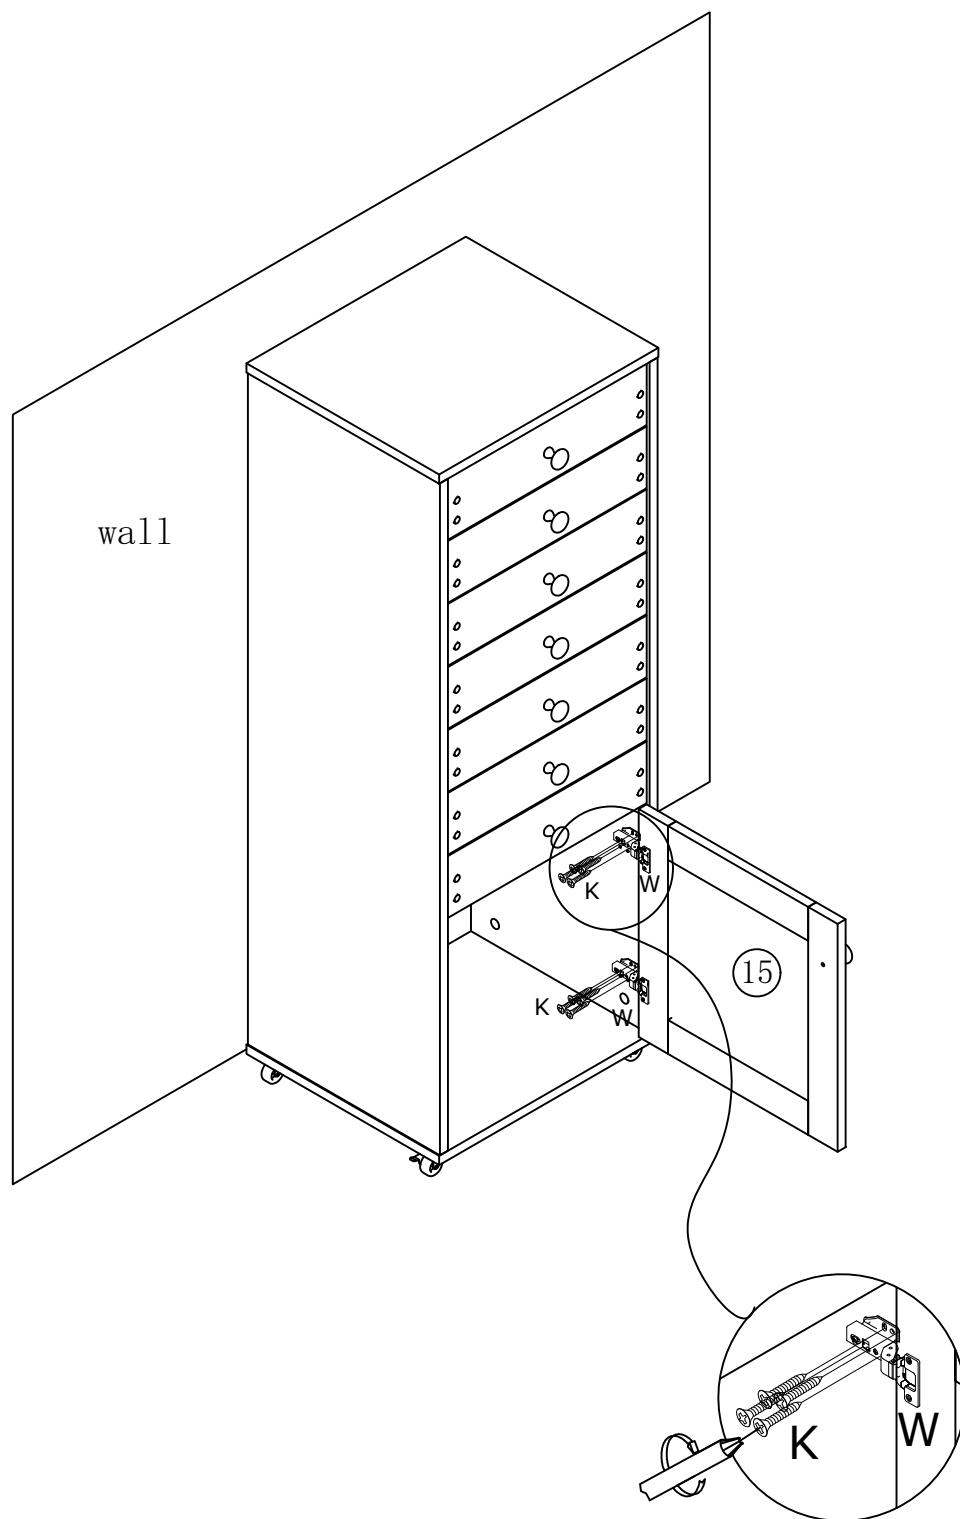



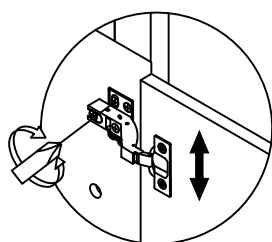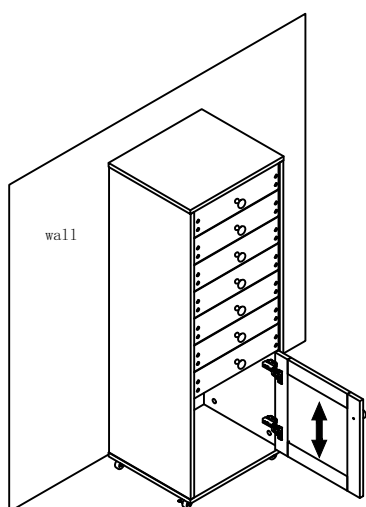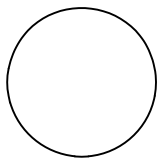


 
 
Up and down
adjustment by
loosening the screws
on the mounting plate.

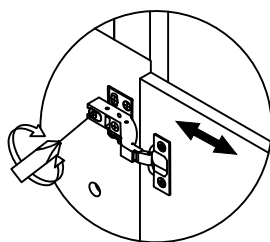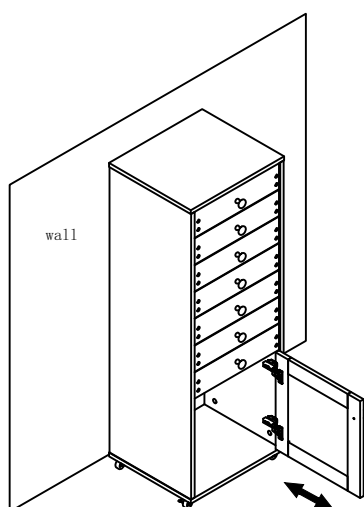

 
 
In and out
adjustment by
loosening the screws
on the hinge arm.

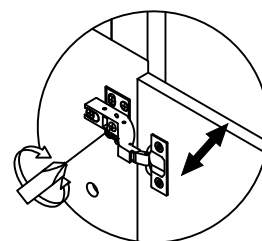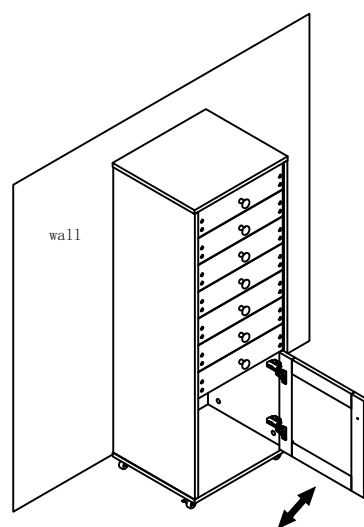

  
 
Side to side
adjustment using the
front adjustment screw
on the hinge.

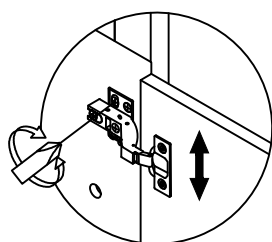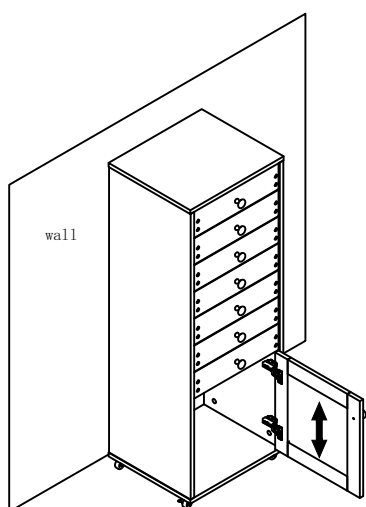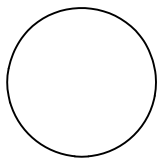


 
 
Réglage haut et bas en
desserrant les vis sur la
plaque de montage

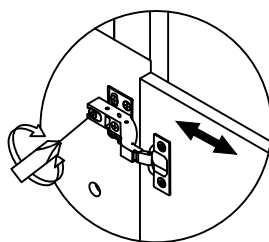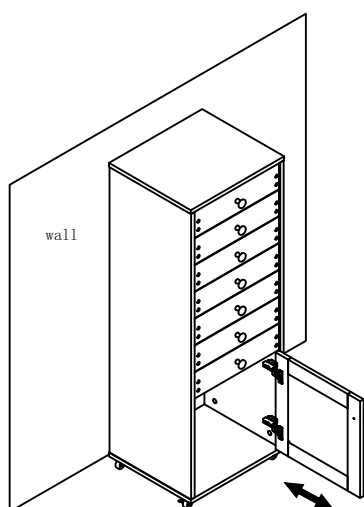

 
 
Réglage intérieur et
extérieur par
desserrage des vis sur
les bras de charnière

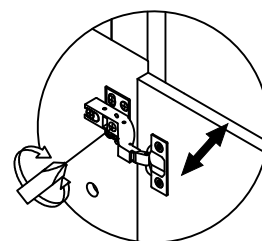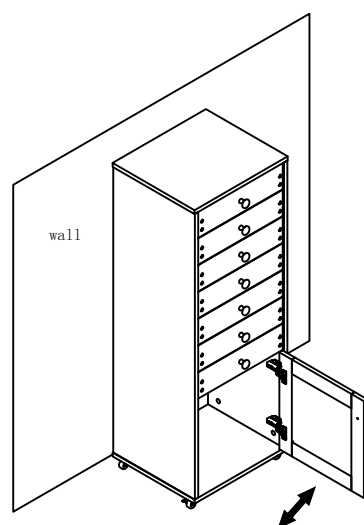

  
 
Réglage à gauche et à
droite à l'aide de vis de
réglage avant sur
charnières

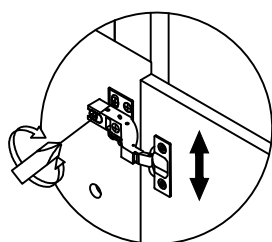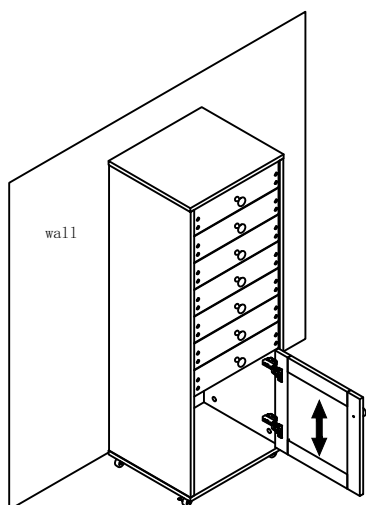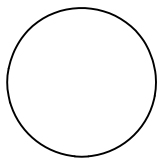

  Verstellung nach oben
und unten durch Lösen
der Schraube auf der
Montageplatte

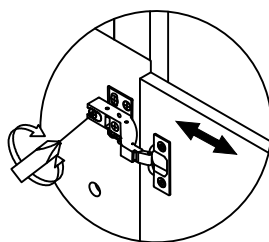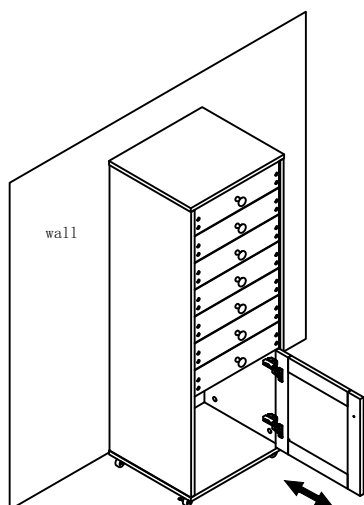


  Innen- und
Außenverstellung durch
Lösen der Schraube am
Scharnierarm

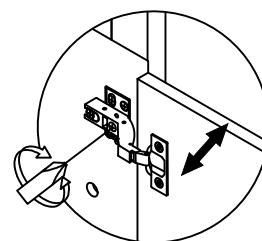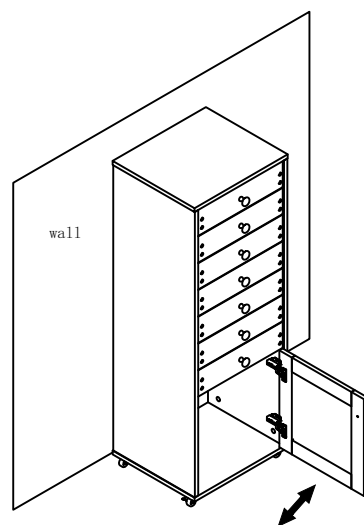

Verwenden Sie die
vordere
Verstellschraube am
Scharnier zur
Anpassung der linken
und rechten Richtung

 21

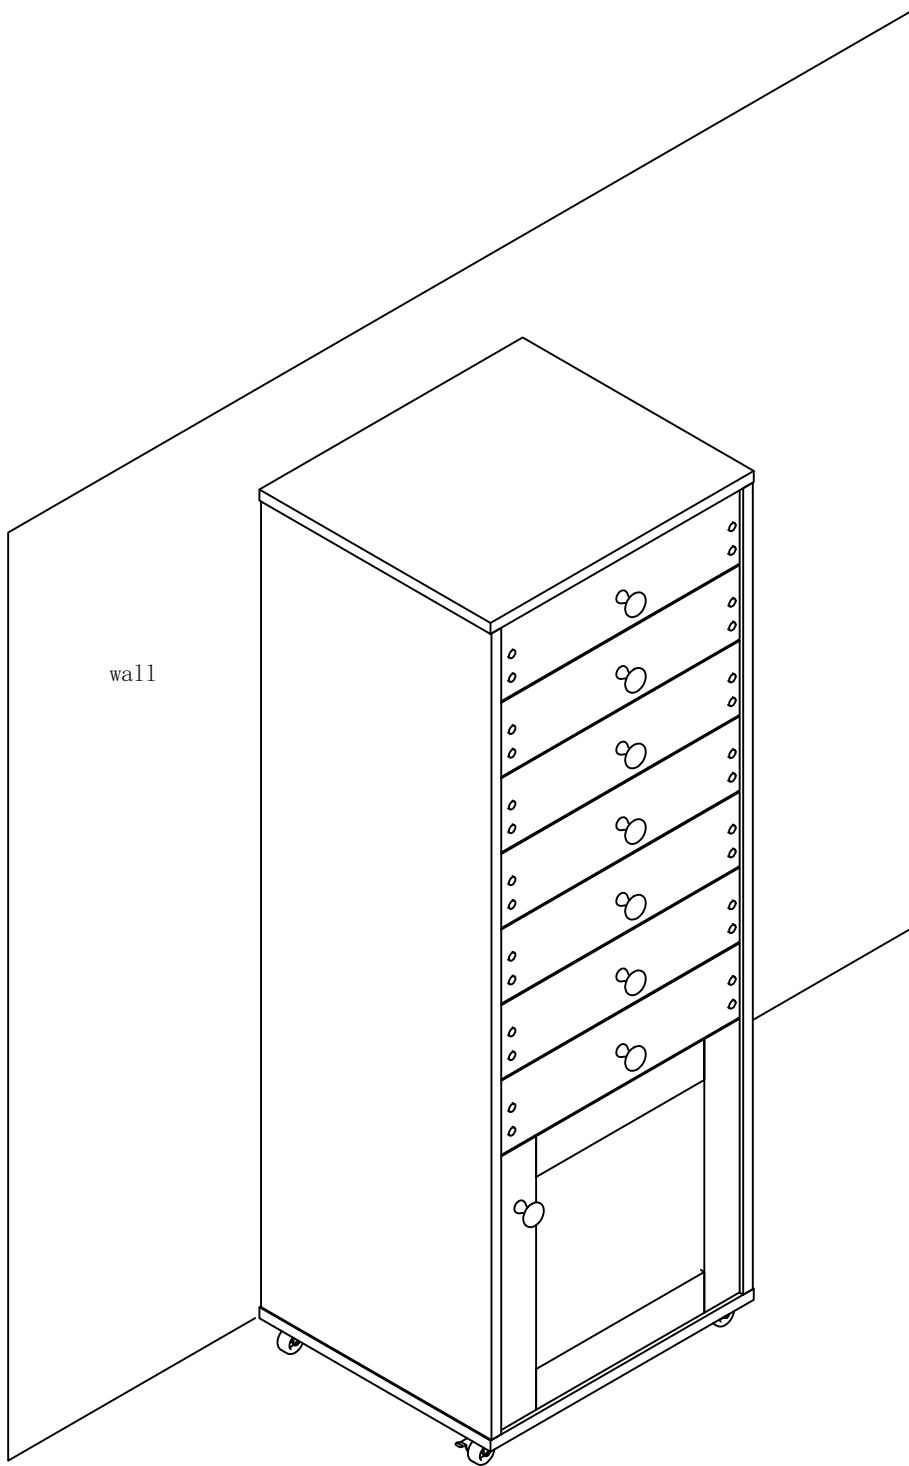

WARRANTY

WARRANTY CLAIMS

- There is a 30-day warranty for broken furniture or any other problems that do not work properly. The warranty will start from the date of purchase which must be verified by proof of purchase.
- Before making a claim, we may be able to answer your query, simply call us. Please leave your purchase order number, along with some details of the problem, if you want a replacement part. We will arrange within 48 hours. If there is out of stock, we will reply with a shipping date.
- The product must be used in accordance with the instructions provided. For health reasons.
- For other reasons, if the furniture needs to be returned, it must be cleaned and dried and operated within 30 days of receipt.

Type of Warranty Claim

- Failure to follow the furniture instructions will invalidate the warranty. Attention please.
- Does not include damage during installation, but includes damage during transportation.

Scope of responsibility

- Shall not bear any responsibility for misuse or user damage and / or loss of parts during the installation of furniture.
- After using, the damage and scratches of the furniture are not covered by the warranty.

The Warranty Relates to All Bought in The Us and Covers The Following Areas

- Sheet parts: 1 month from the date of purchase.
- Electrical parts: 1 month from the date of purchase.

RETURNS

CHANGED YOUR MIND AND NEED TO RETURN YOUR ITEM?

PLEASE FOLLOW THE BELOW INSTRUCTIONS:

- If you have purchased and have simply changed your mind, follow the retailer's instructions for returns.

DEFECTIVE ITEMS

- If your item is defective in any way, i.e. it doesn't work but you can't identify why, in the first instance, please call us.

DAMAGED ITEMS

- If you receive an order with obvious shipping damage from the retailer, then we suggest the delivery is refused. If the delivery has been accepted and then shipping damage is found, please follow the specific instructions advised by the retailer.
In all circumstances please save all packaging material and paperwork for the order. Please be aware that if you dispose of packaging material or attempt to return the merchandise without contacting the fulfiller, you jeopardise your chances of making a claim, and you may not receive a credit for the return.

AFTER-SALES CONTACT



adelahu@fufugaga.com



208-820-0068