

CHILDREN'S WHIRLWIND SMALL AIRPLANE STROLLER



WARNING:

Must be assembled by an adult.

- Suitable for 3–8 years old
- Maximum user weight: 30kg

OWNERS MANUAL

with Assembly Instructions

Read and understand this entire manual before using!

Please keep this manual for future reference as it contains important information. Before the first use, it is necessary to ensure that the battery is fully charged for 10 hours, otherwise it will permanently damage the battery and cannot be repaired.

On the purchase of your new Ride-On.

This ride-on car will provide your child with many miles of riding of enjoyment. To help assure you and your rider a safe ride we ask you to please read this manual carefully, and keep it for future reference.

Follow the recommendations in this manual, they are designed to improve the safety and operation of your ride-on car and its rider.

SPECIFICATION PARAMETERS

DRIVE FORM	CONFIGURATION 1	CONFIGURATION 2
ELECTRICAL MACHINERY	12V/550*1	12V/550*1
ROTATIONAL SPEED	8000rpm	8000rpm
STORAGE BATTERY	12V 4.5AH	12V 7AH
CHARGER	12V-500mA	12V-800mA

Applicable age: 3-8 years old

Load limit: 30kg

Dimensions: 80x37x27cm

Charging time: 8-12 hours, use for 1-2 hours

Speed: 0-5km/h



BATTERY SAFETY WARNING

- Non rechargeable batteries cannot be charged;
- Rechargeable batteries can only be charged under adult supervision;
- Rechargeable batteries should be removed from toys before charging;
- Different types of batteries or old and new batteries cannot be mixed;
- The battery should be placed with the correct polarity;
- The exhausted battery should be removed from the toy;
- The power terminal must not be short circuited
- The power supply used for the electric stroller and its control system or parts cannot be connected to non recommended power sources.

1 Car body
x1

A white plastic car body with a rounded front and a small wheel visible on the right side.

2 Front drive steering
component
x1

A white plastic component with a central vertical shaft and two small wheels on either side.

3 Steering wheel
x1

A white plastic steering wheel with a central hub and a small protrusion on the right side.

4 steering wheel cover
x1

A white plastic circular cover with a slightly raised edge and two small tabs on the bottom.


5 Rear wheel assembly
x1

A white plastic rear wheel assembly consisting of a central axle with two circular wheels on either side.


6 Rear axle fixing plate
x2

A white plastic square plate with four small holes at the corners.


7 4X12 screw
x8

A small white plastic screw with a Phillips head.


8 V-shaped spring plate
x2


A white plastic V-shaped spring plate with a small tab on one end.

9 Charger
x1

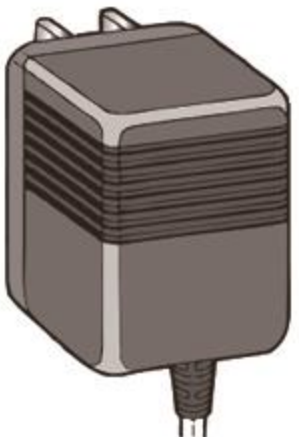A white plastic rectangular charger with a small protrusion on the bottom.

10 Charger
x1

 A white plastic screwdriver with a silver tip and a grey handle.

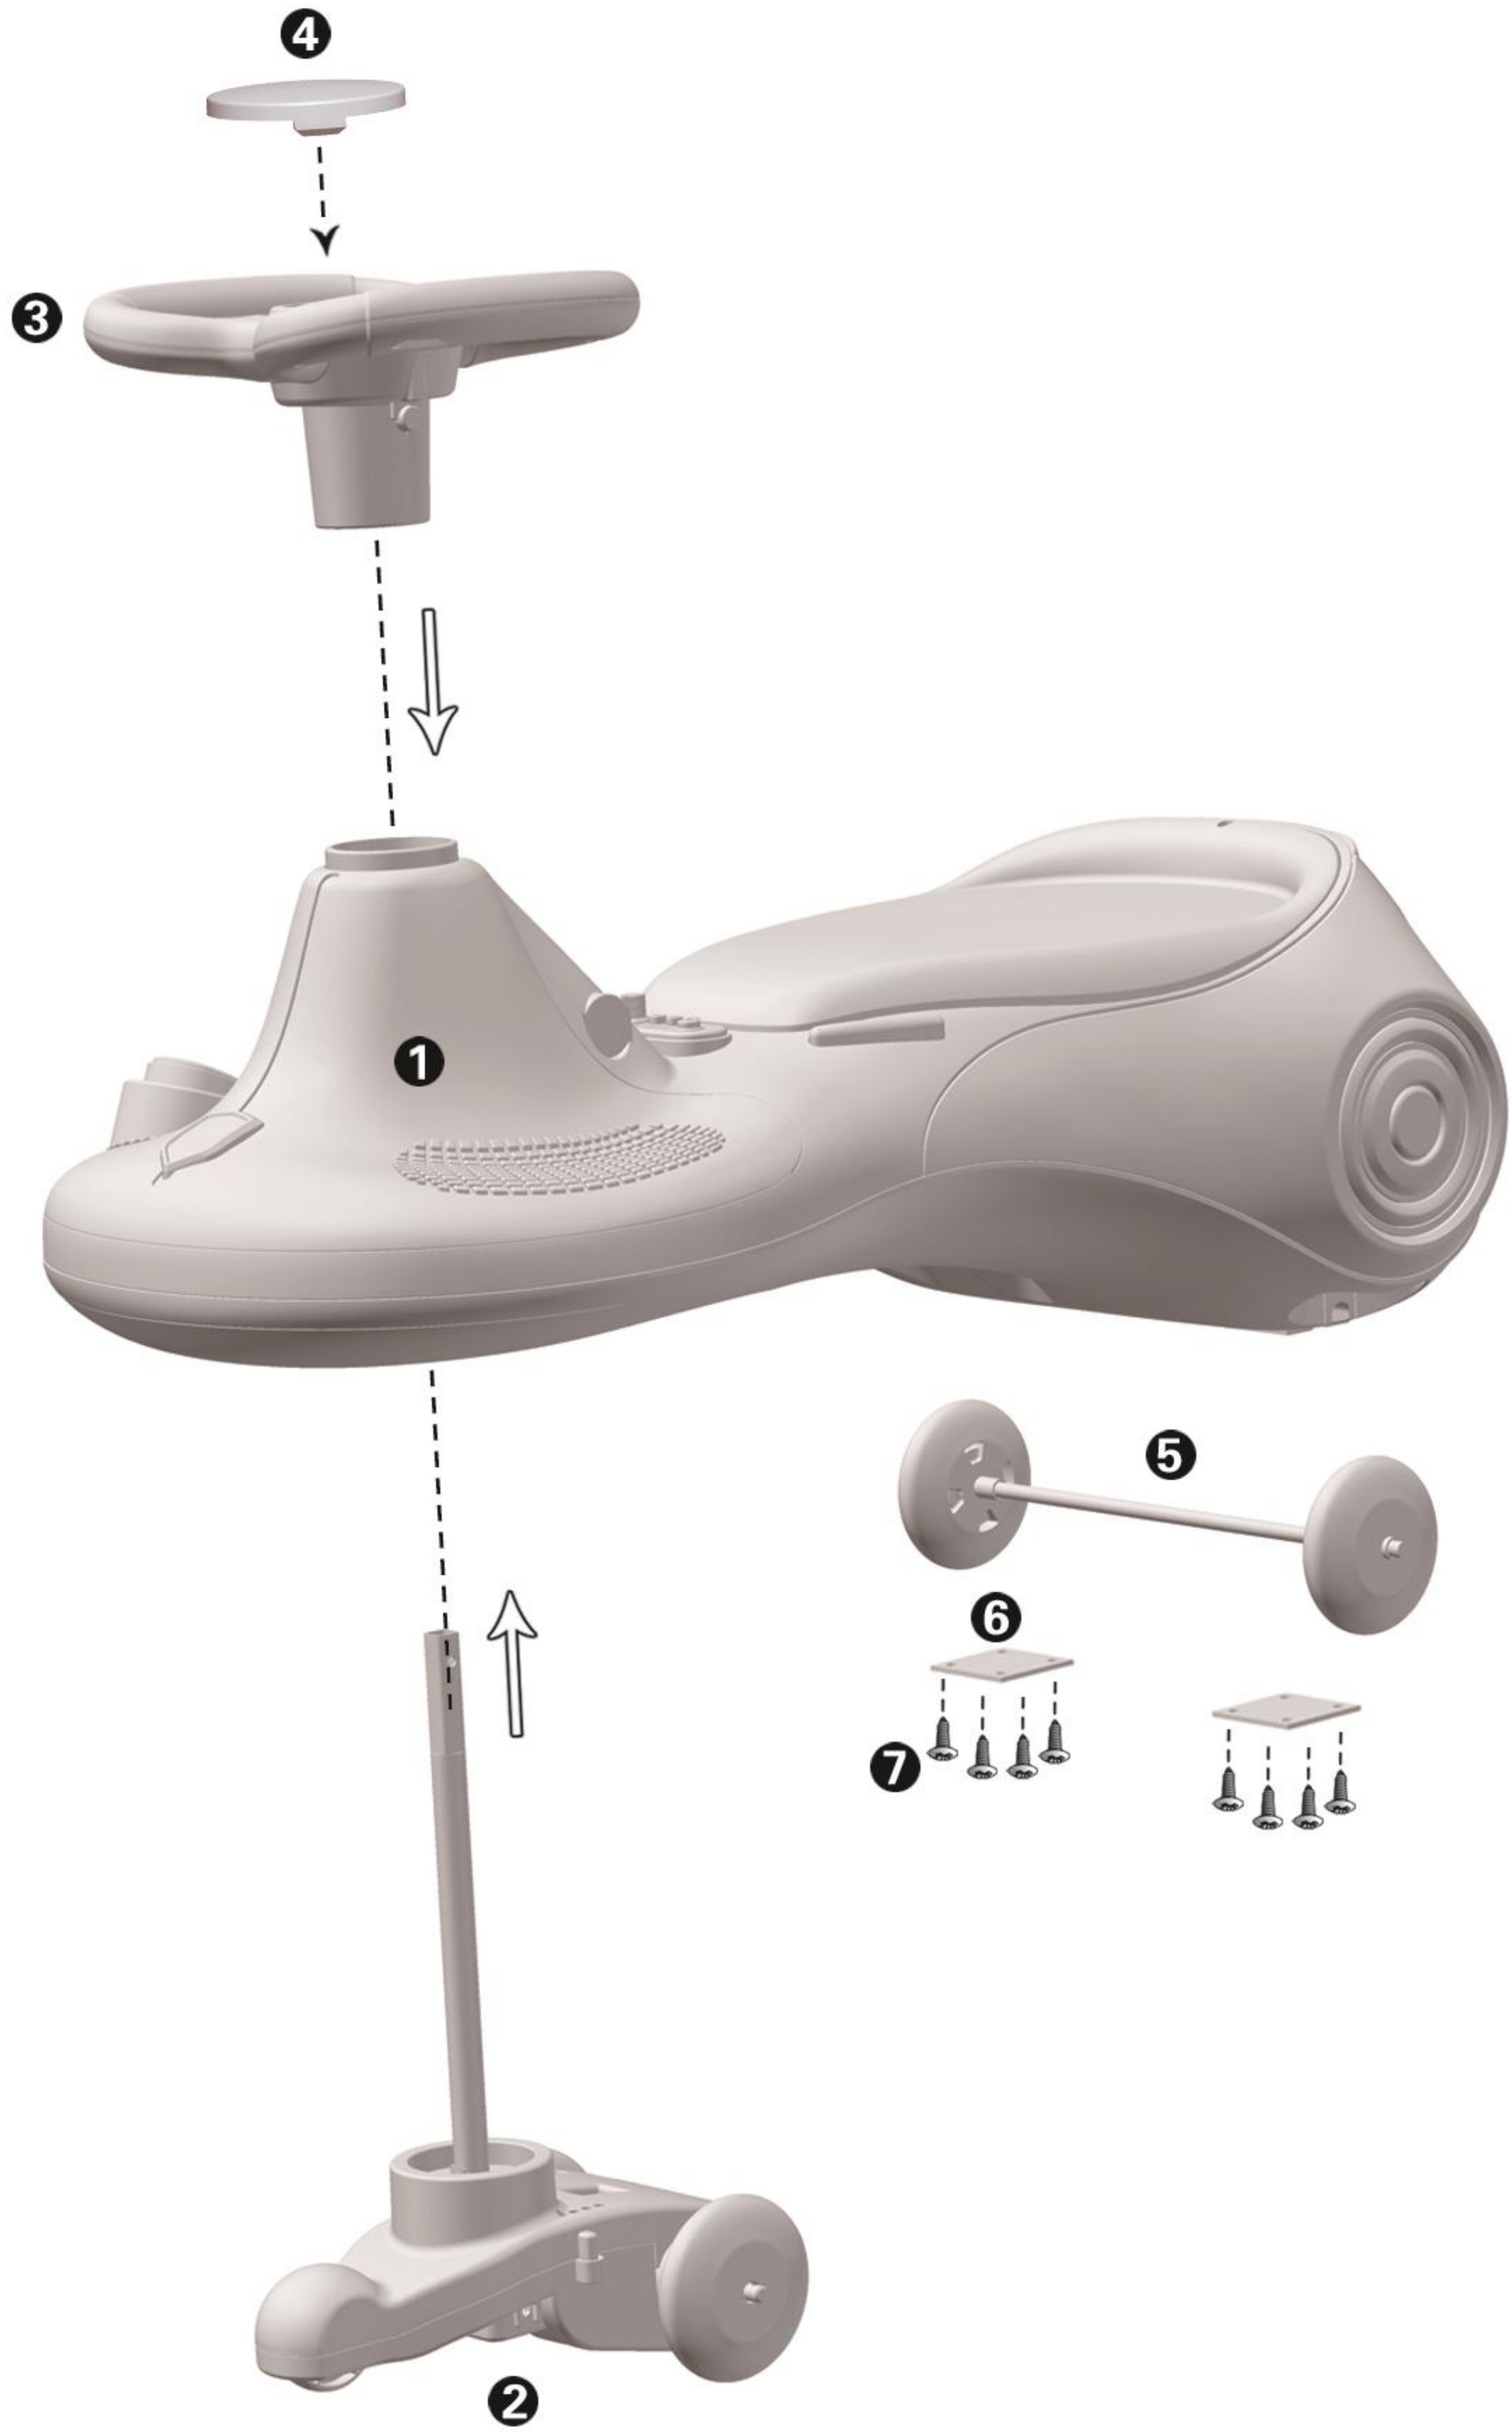


1. Flip the car body.
2. Align the circular tube of the front wheel drive component with the bottom hole of the vehicle body, pass it through the vehicle body, and press it firmly.




1. Insert the V-shaped spring into the square tube and align it with the circular hole to pop it out.
2. Turn the arrow on the steering wheel towards the front, align the bottom square hole with the square tube of the front wheel drive component, and insert it firmly.
3. Simply install the steering wheel decorative cover.
4. Press the quick release button on the steering wheel to easily remove it.

 Steering wheel quick release button

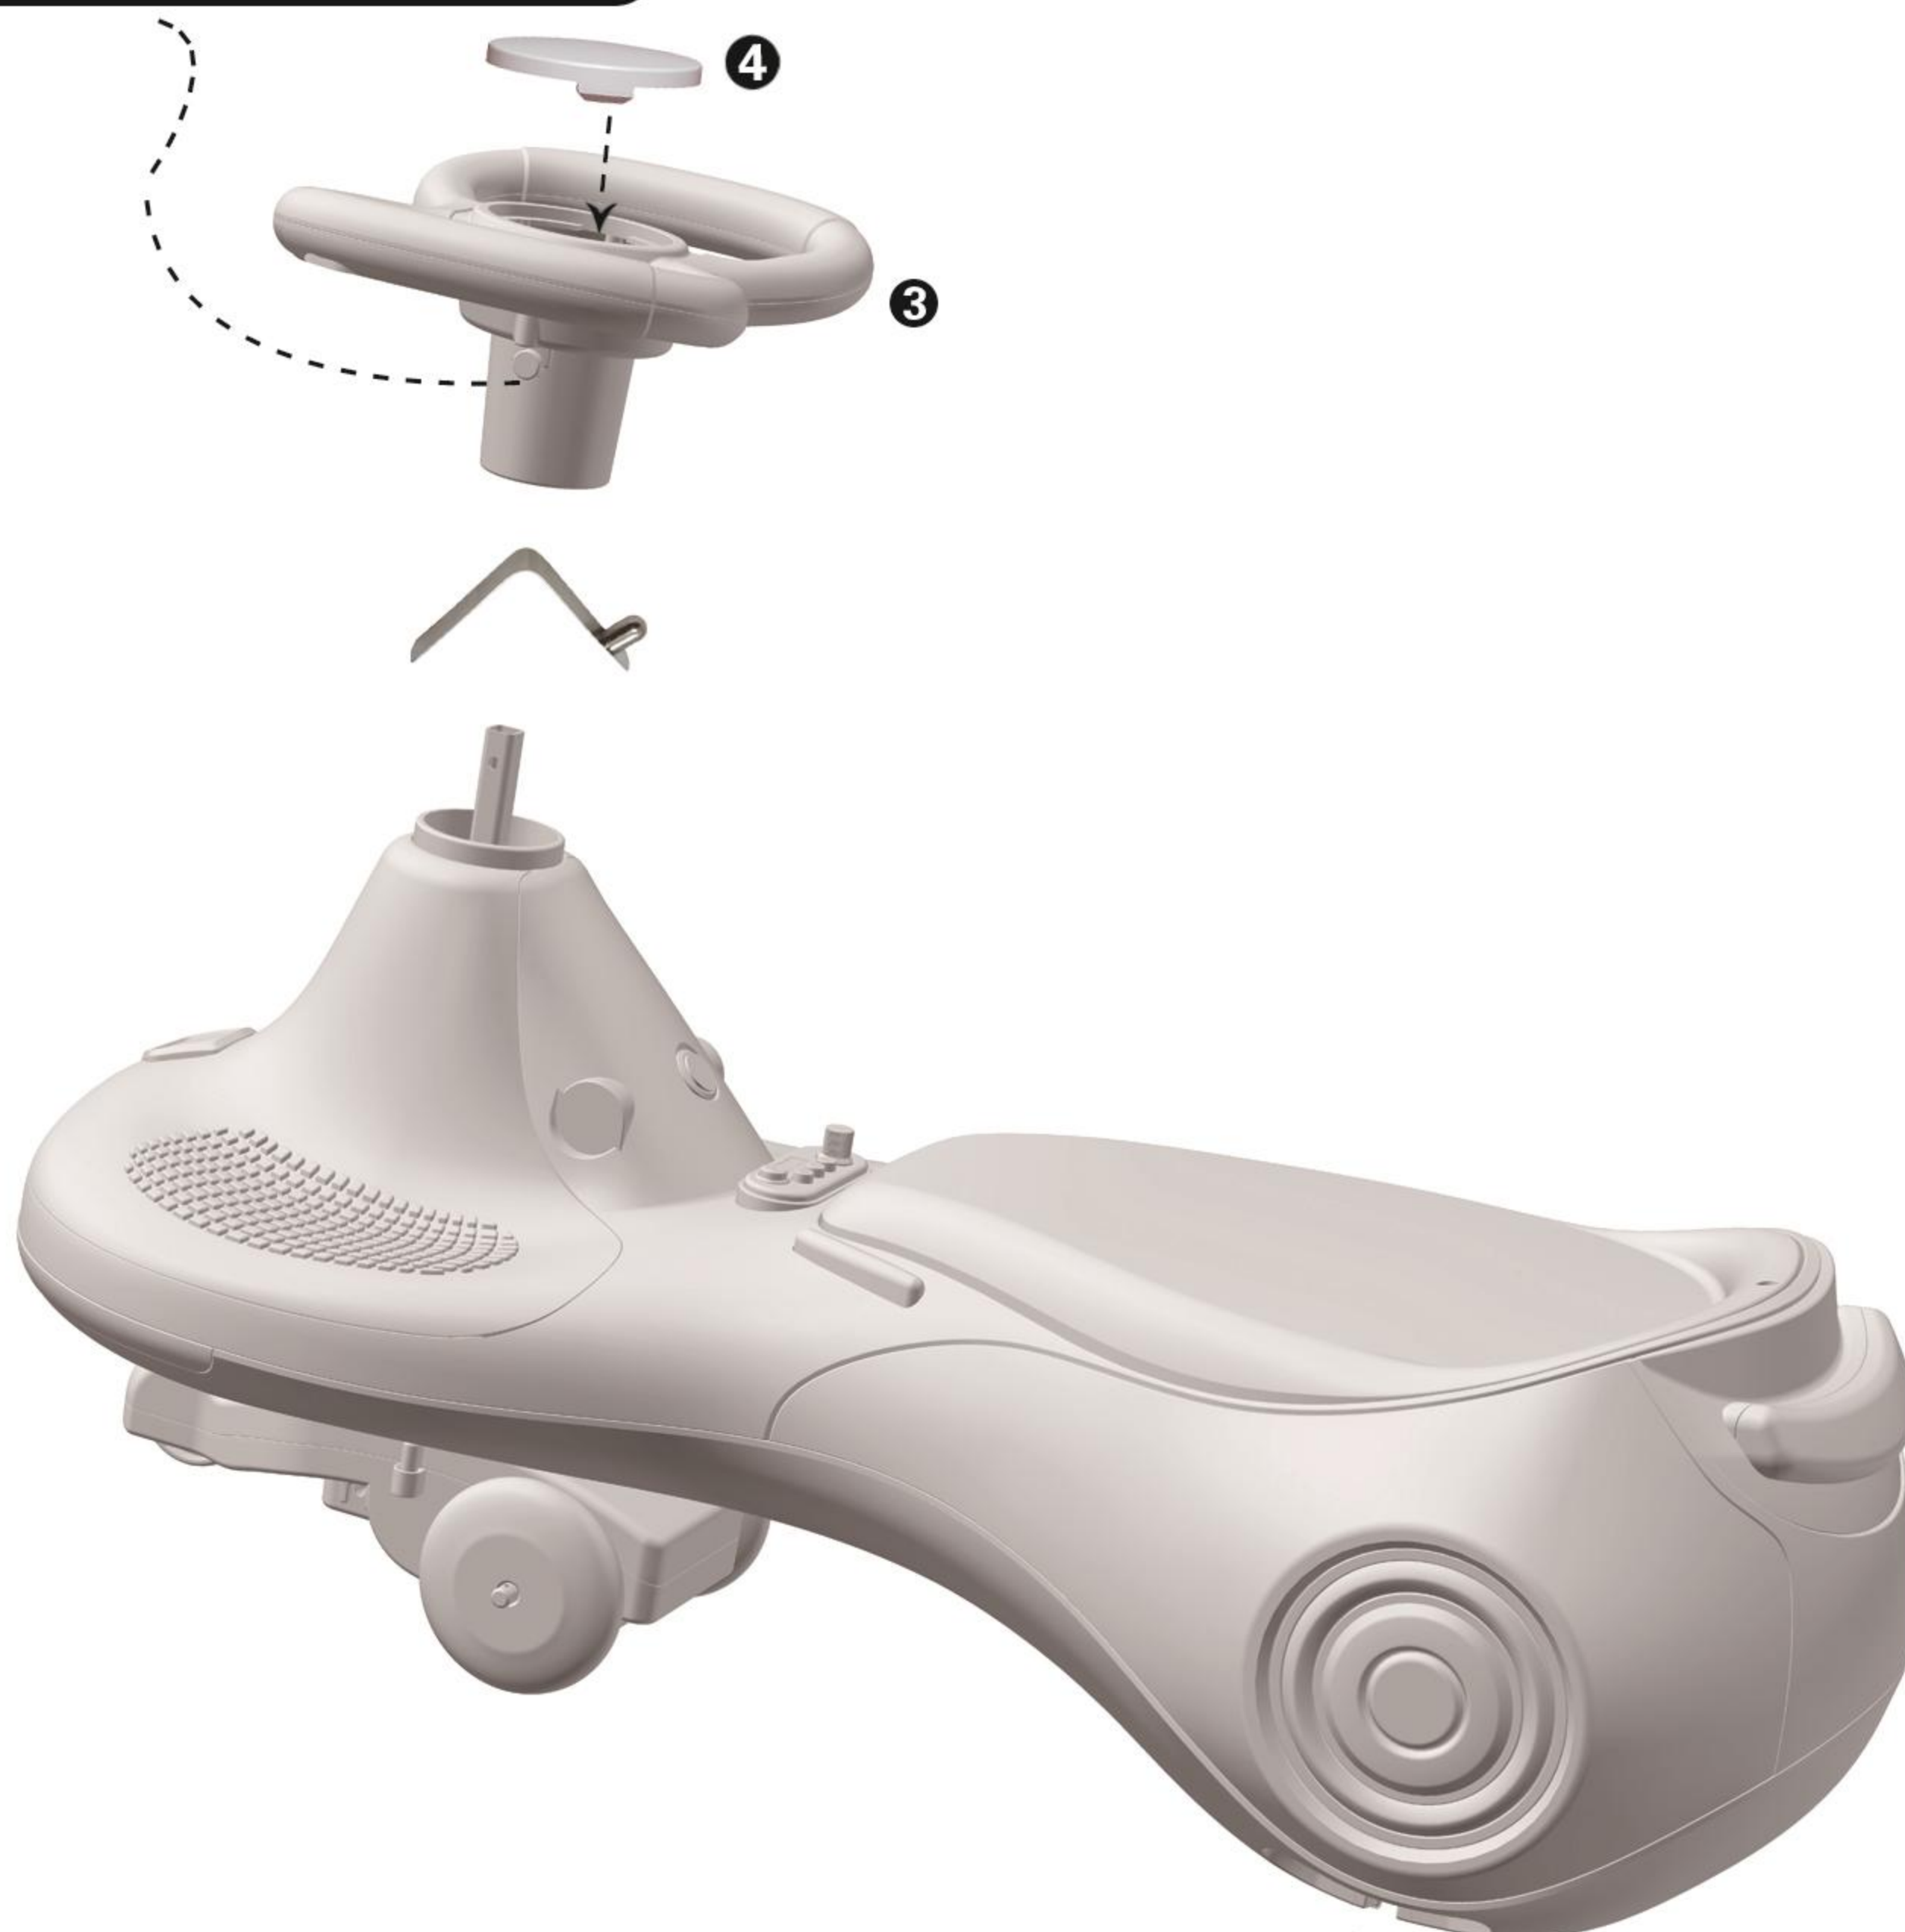

 1. Flip the car over.
2. Align the rear wheel limit sleeve with the left and right limit grooves of the vehicle and clip them in separately.
3. Align the rear axle fixing plate with the body fixing hole and screw in eight $\Phi 4 * 12$ self tapping screws.

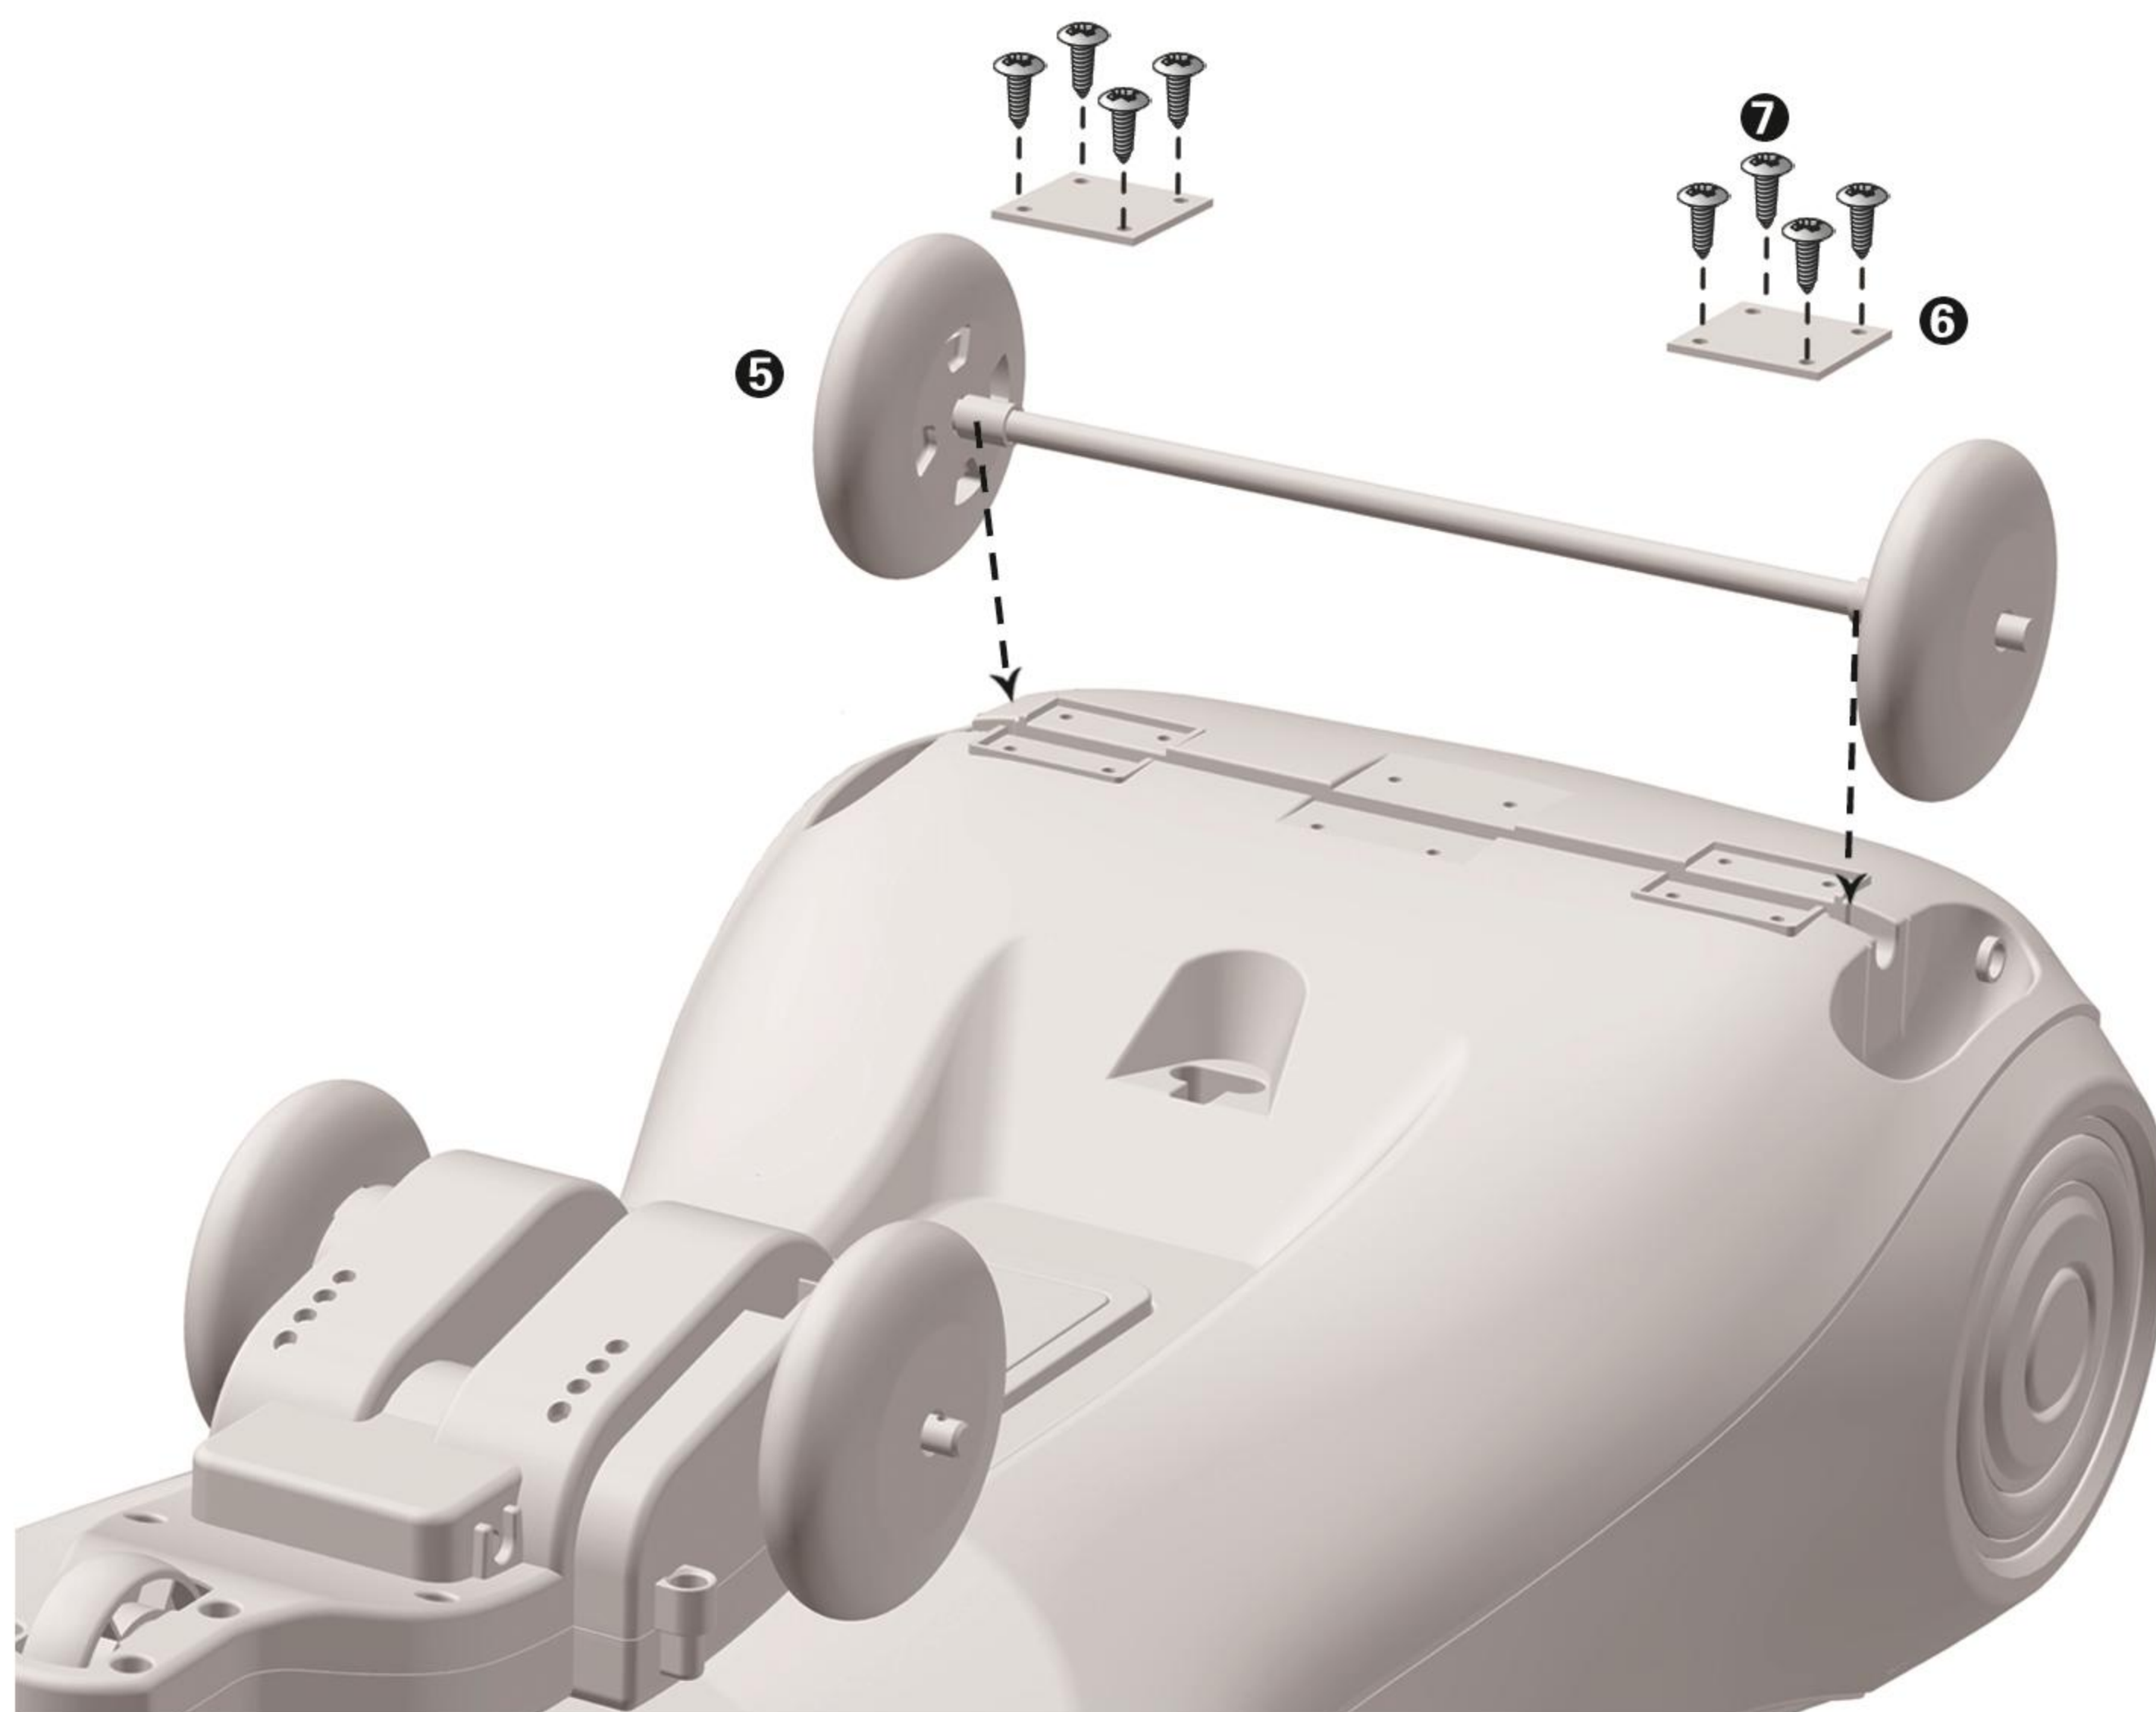

1. Remove the seat fixing screws.
2. Open the seat cover.
3. Remove the positive protective cover of the battery and plug in the red power cord.
4. Cover the seat cover and secure the screws.

 






1. Power switch: 1 is on, 0 is off.
2. Foot pedal: press down to accelerate, release to stop.
3. Steering wheel: The steering wheel rotates 360 ° , and the direction of the arrow indicates the direction of travel

⚠ WARNING!

Before using the high-speed function, ensure that the driver is proficient in operating this product. Avoid accidents caused by excessive speed on highways.

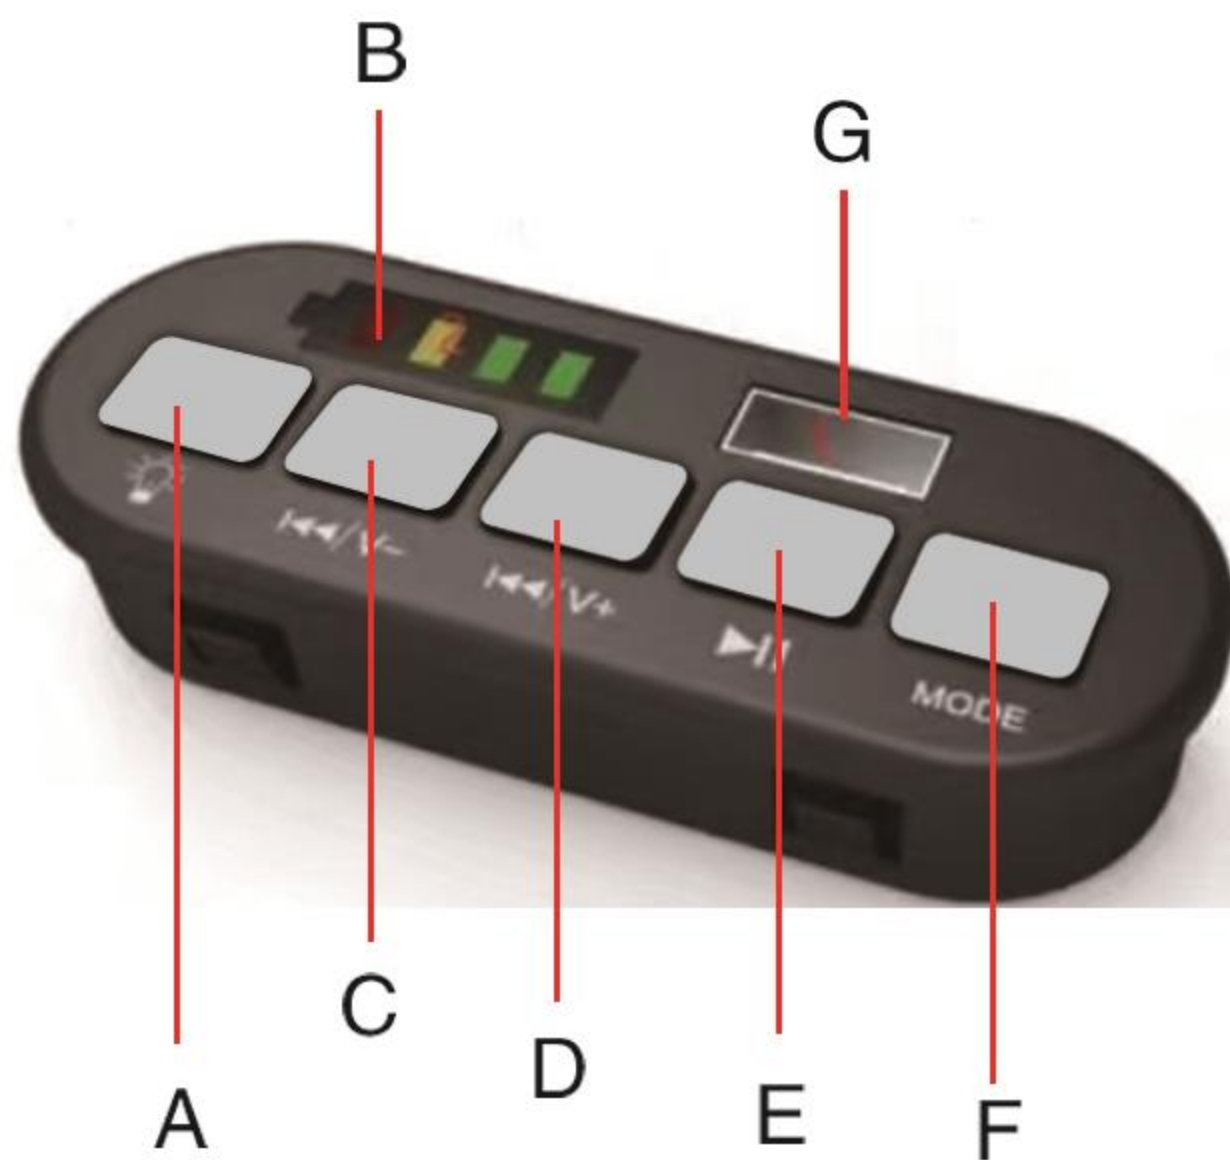

  - A. Light control button
- B. Battery Level Display
- C. Long press to decrease the volume of the previous song
- D. Next song, long press to increase volume
- E. play/pause
- F. Mode selection button
- G. USB port 2.0 plug and play

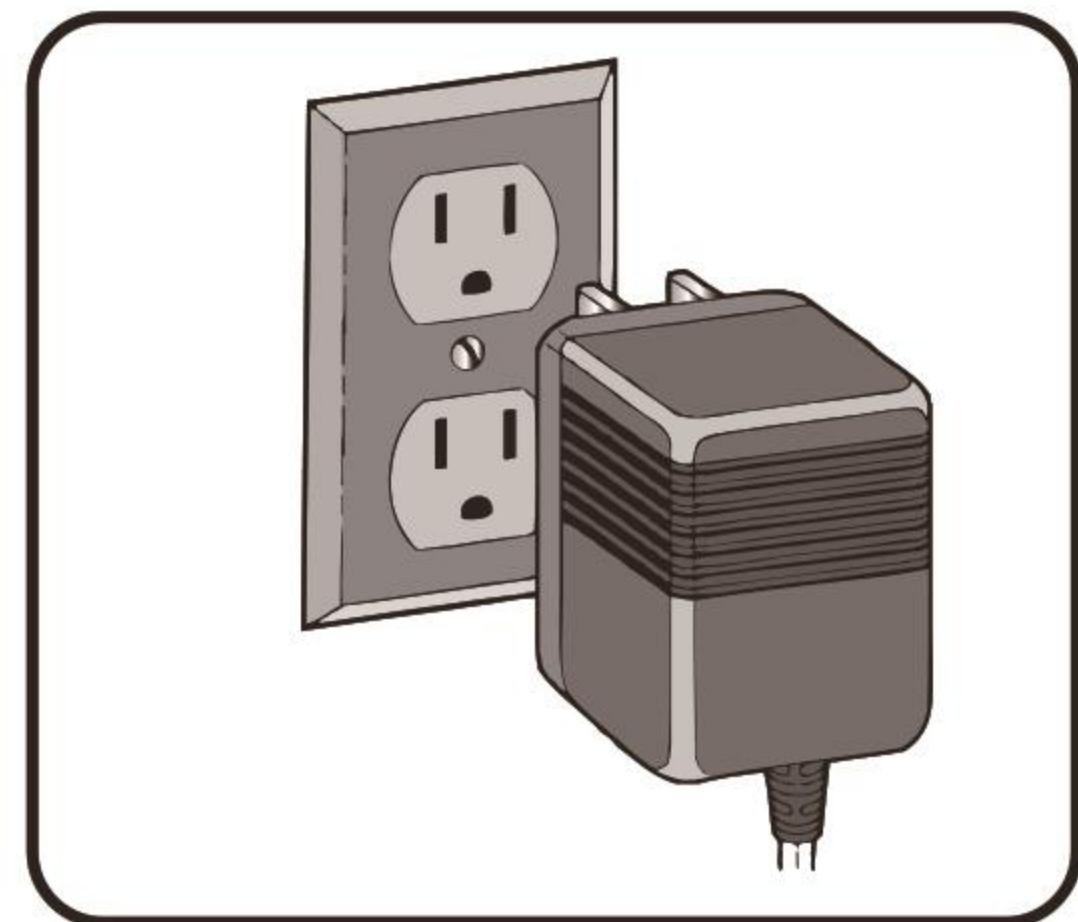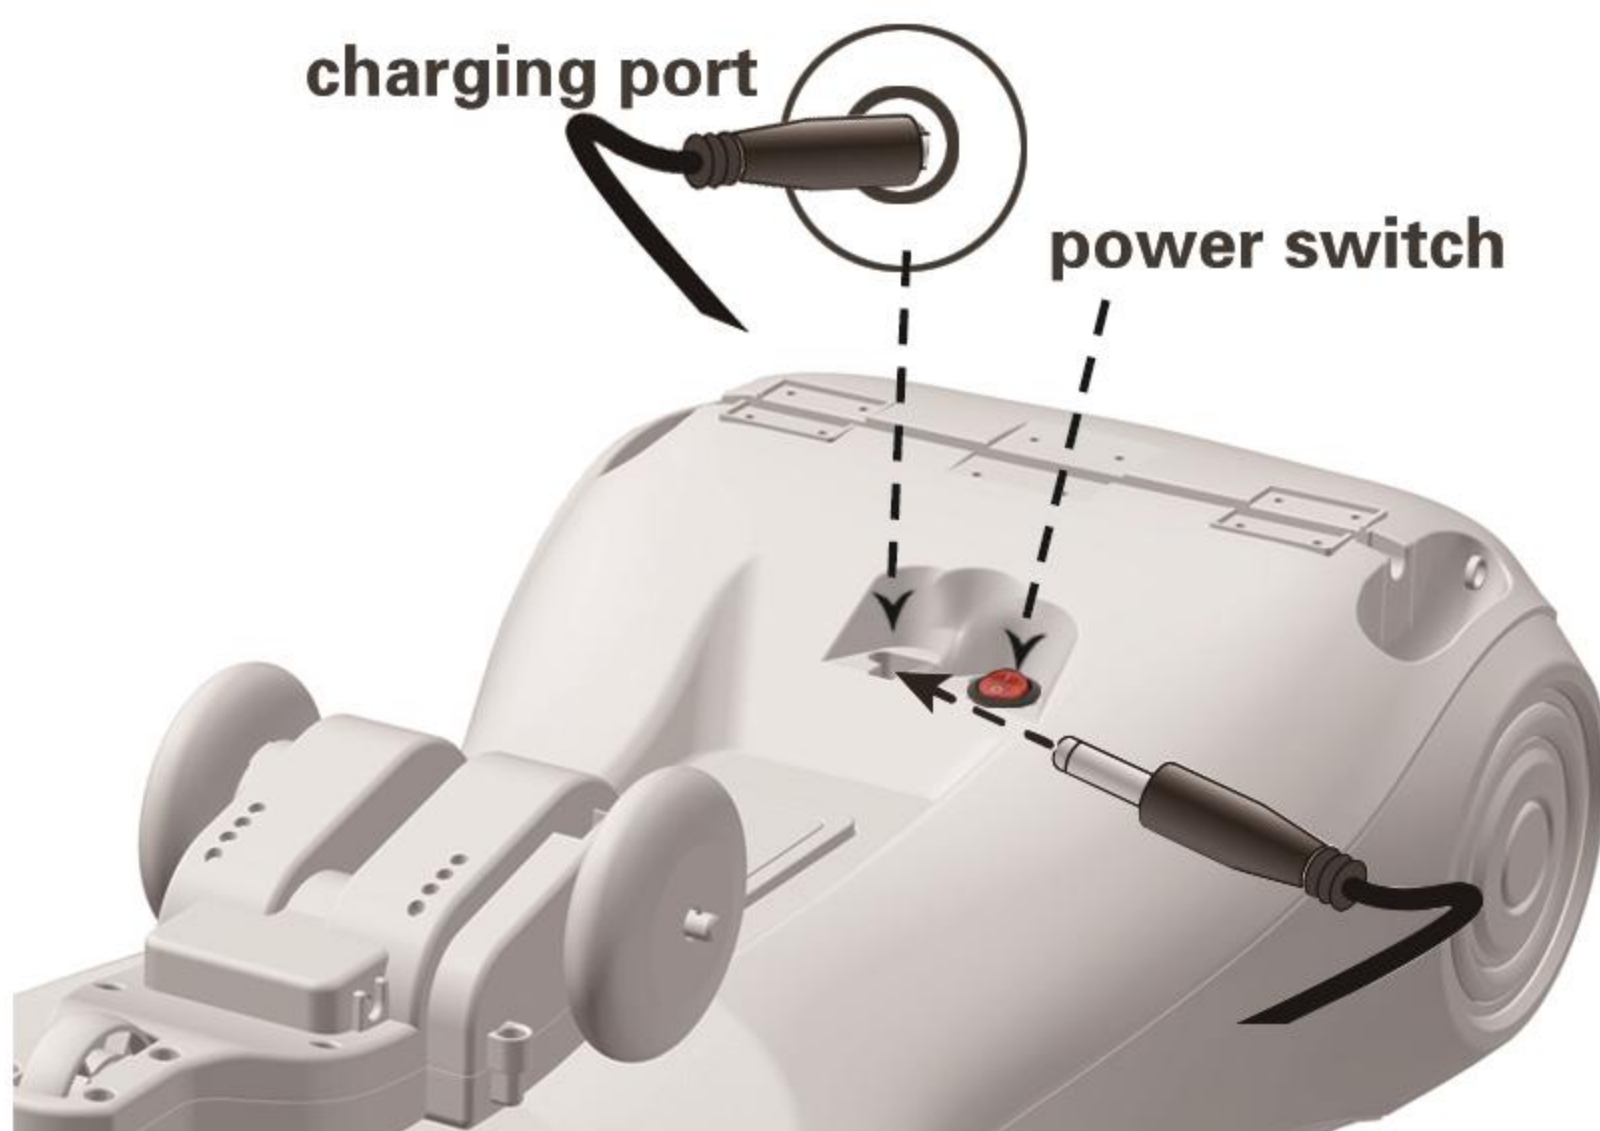

⚠ WARNING!

This product comes with charging protection function: all vehicle functions are unavailable during charging!
Charging must be completed by adults! The charger and battery must not be touched by children!

1. When charging, the power switch must be turned off.
2. Please charge for 8-12 hours after each use, but do not exceed 20 hours.
3. When the normal driving speed of the vehicle significantly slows down, it indicates that the battery is low and should be charged in a timely manner.

Problem	Possible Cause	Solution
Vehicle does not run	Battery low on power	Recharge battery.
	Thermal fuse has tripped	Reset fuse, see <Fuse>
	Battery connector or wires are loose	Check that the battery connectors are firmly plugged into each other. If wires are loose around the motor contact your distributor please.
	Battery is dead	Replace battery, contact your distributor please.
	Electrical system is damaged	Contact your distributor please.
	Motor is damaged	Contact your distributor please.
Vehicle does not run very long	Battery is under charged	Check that the battery connectors are firmly plugged into each other when recharging
	Battery is old	Replace battery, contact your distributor please.
Vehicle runs sluggishly	Battery low on power	Recharge battery, contact your distributor please.
	Battery is old	Replace battery, contact your distributor please.
	Vehicle is overload	Reduce weight on vehicle.
	Vehicle is being used in harsh conditions	Avoid using vehicle in harsh conditions ,see <Safety>.
Vehicle needs a push to go forward	Poor contact of wires or Connectors	Check that the battery connectors are firmly plugged into each other. If wires are loose around the motor, contact your distributor please.
	“Dead Spot” on motor	A dead spot means the electric power is not being delivered to the terminal connection and the vehicle needs repair. Contact your distributor please.
Loud grinding or clicking noises coming from motor or gear box	Motor or gears are damaged	Contact your distributor please.
Battery will not recharge	Battery connector or adapter connector is loose	Check that the battery connectors are firmly plugged into each other.
	Charger not plugged in	Check that the battery charger is plugged into a working wall outlet.
	Charger is not working	Contact your distributor please.
Charger feels warm when recharging	This is normal and not a cause for concern	

Completely read through this manual and the troubleshooting guide table before calling. If you still need help resolving the problem **Contact your distributor please.**

- It is parents' responsibility to check main parts of the toy before using, must regularly examine for potential hazard, such as the battery, charge, cable or cord, plug, screws are fastening enclosure of other parts and that in the event of such damage, the toy must not be used until that damage had been properly removed.
- Make sure the plastic parts of the vehicle are not cracked or broken.
- Occasionally use a lightweight oil to lubricate moving parts such as wheels.
- Park the vehicle indoors or cover it with a tarp to protect it from wet weather.
- Keep the vehicle away from sources of heat, such as stoves and heaters. Plastic parts may melt.
- Recharge the battery after each use. Only an adult can handle the battery. Recharge the battery at least once a month when the vehicle Raider is not being used.
- Do not wash the vehicle with a hose. Do not wash the vehicle with soap and water. Do not drive the vehicle in rainy or snowy weather. Water will damage the motor, electric system and battery.
- Clean the vehicle with a soft, dry cloth. To restore shine to plastic parts, use a non-wax furniture polish. Do not use car wax. Do not use abrasive cleaners.
- Do not drive the vehicle in loose dirt, sand or fine gravel which could damage the moving parts, motors or the electric system.
- When not in use for a long time, turn off the power switch and disconnect the battery connection.

The battery features a thermal fuse with a rest fuse that will automatically trip and cut a power to the vehicle if the motor, electric system or battery is overloaded. The fuse will reset and power will be restored after the unit is turned OFF for 20 seconds and then turned ON again. If the thermal fuse trips repeatedly during normal use, the vehicle may need repair. Contact your distributor please.

To avoid losing power, follow these guidelines:

- Do not overload the vehicle.
- Do not tow anything behind the vehicle.
- Do not drive up steep slopes.
- Do not drive into fixed objects, which may cause the wheels to spin, causing the motor to overheat.
- Do not drive in very hot weather, components may overheat.
- Do not allow water or other liquids to come in contact with the battery or other electric components.
- Do not tamper with the electric system. Doing so may create a short, causing the fuse to trip.



We provide safe and reliable warranty services. Please keep this document in a secure place.

Product Name:

Manufacturing Date:

Manufacturer:

Terms & Conditions:

Free warranty service will be provided for products experiencing no quality issues within three months of purchase.

This warranty does not cover damages caused by:

User disassembly

Physical misuse or improper handling

Accidental damage

Operation beyond the specified warranty period

Unforeseen circumstances (e.g., natural disasters)

Quality issue reporting procedure:

Contact us via email with clear photographs of

Full product overview

Serial number label

Damaged area(s) from multiple angles

We will respond to your inquiry within 48 business hours.