


Entertainment Center

IMPORTANT

Carefully remove all the parts from the carton and place them individually on a soft cloth to prevent scratches or other damage.

Carefully and strictly follow these assembly instructions to ensure a completed product as designed.

Do not use power tools above 8 volts to assemble.

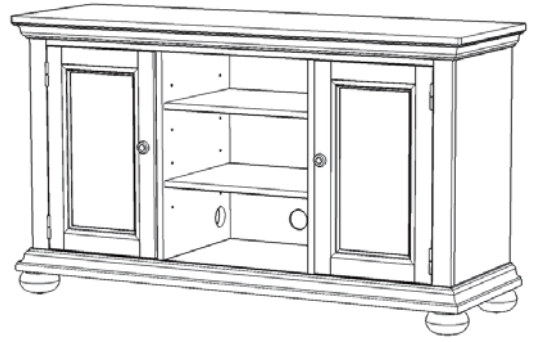


Part List



A.
Top
1 pc.



 B.
Base
1 pc.




C.
Front Rail
1 pc.



D.
Back Rail
1 pc.



I.
Back Panel
2 pcs.

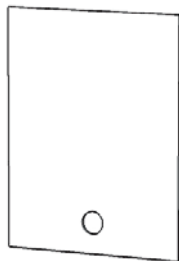

J.
Back Panel
1 pc.



K.
Shelf
4 pcs.



L.
Shelf
2 pcs.