 
 


Assembly Instructions

 
 
 
 
 
 
 
 
 
 
 
 
 
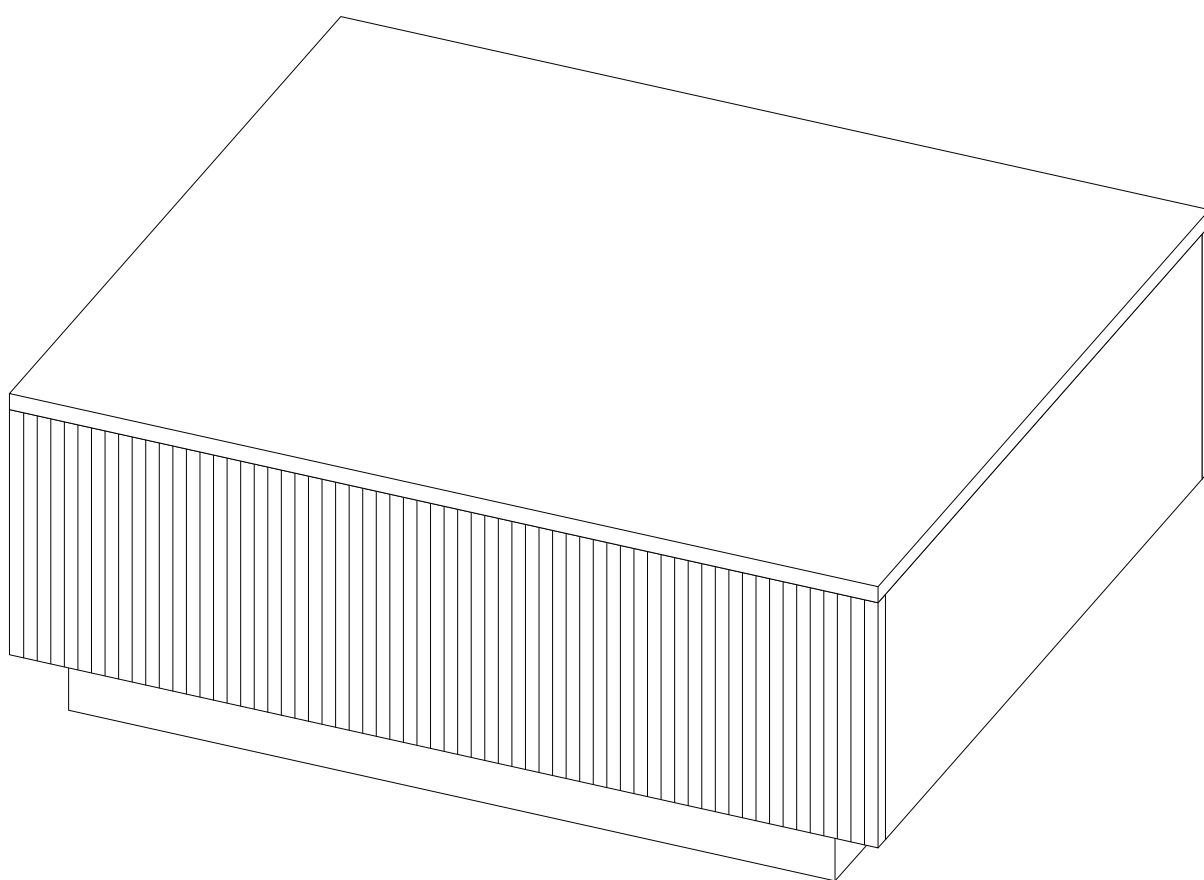 


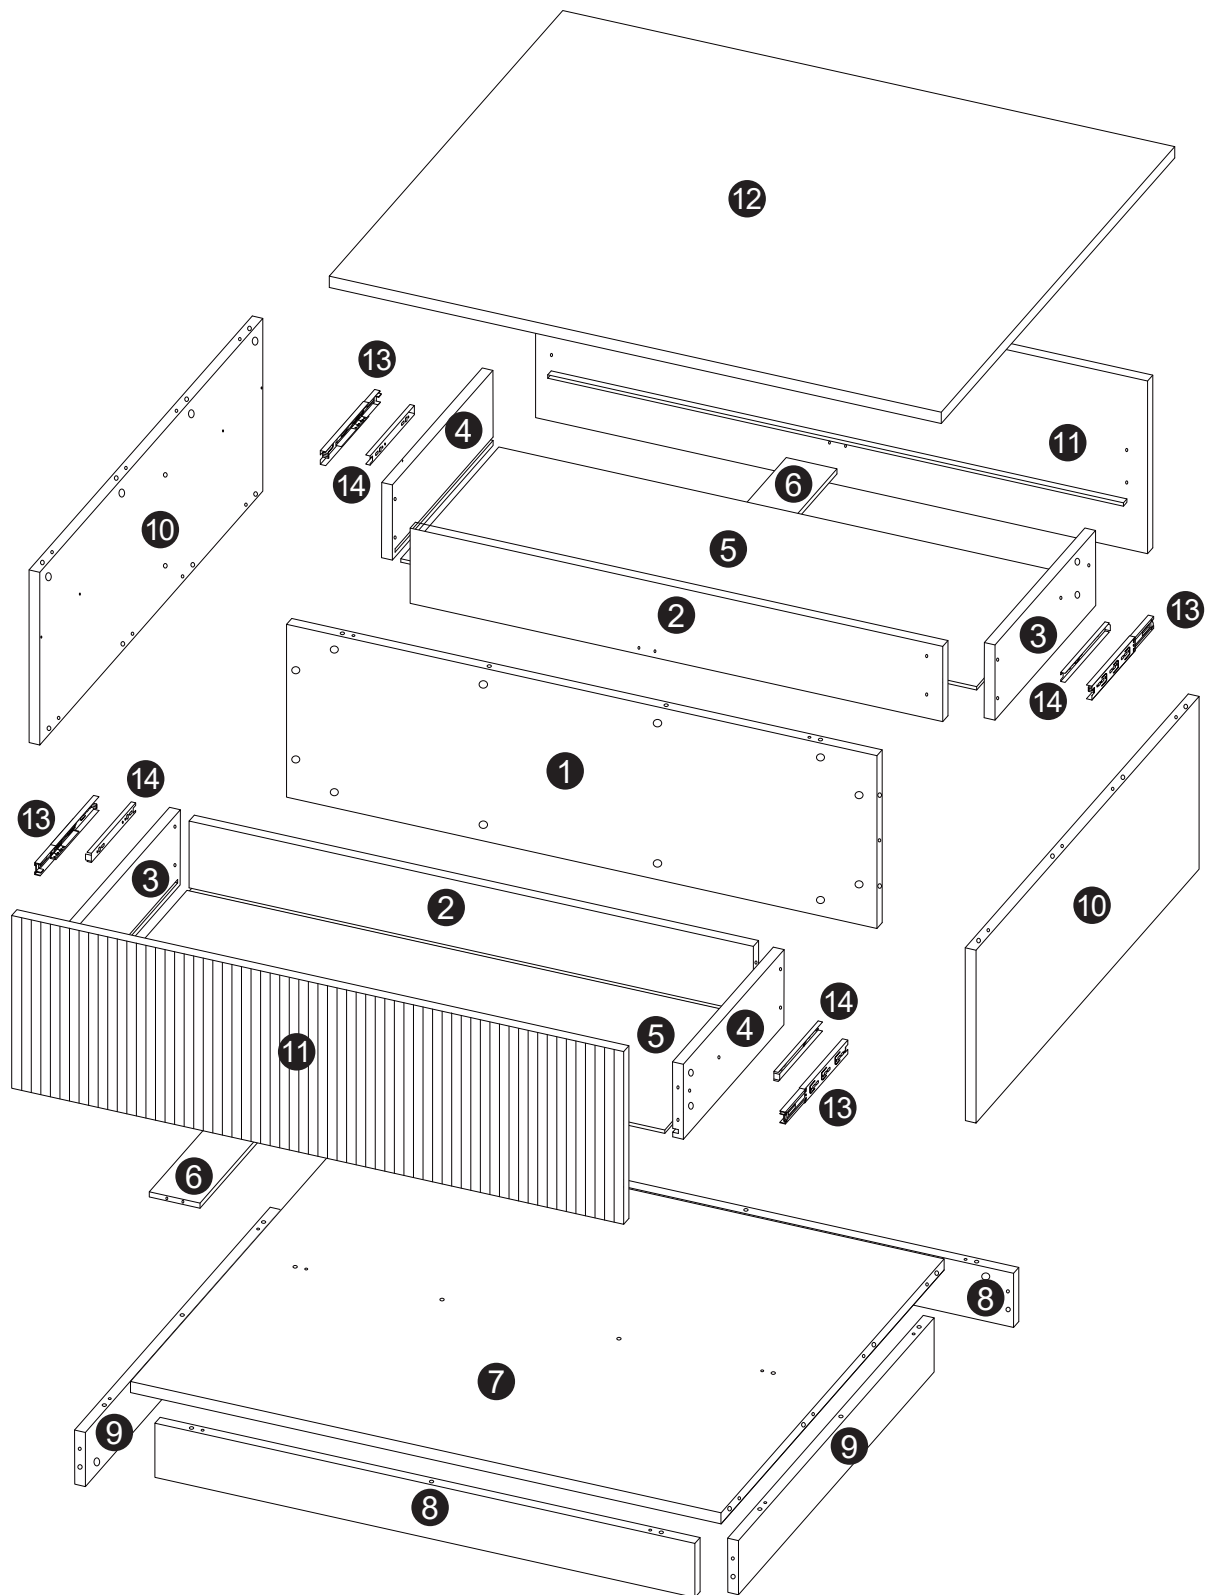





⚠ Caution

Make sure all parts are included. Most board parts are labeled or stamped on the raw edge. Contact us for a free replacement if you encounter any damaged or missing parts.

Parts List

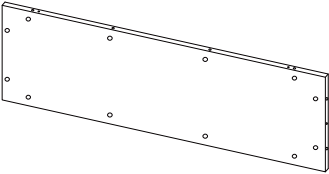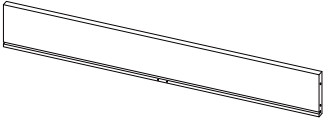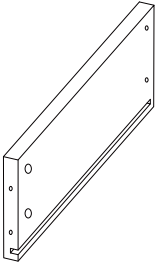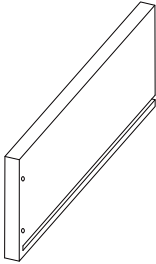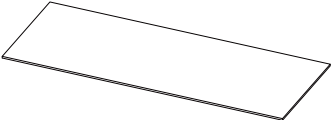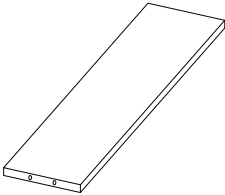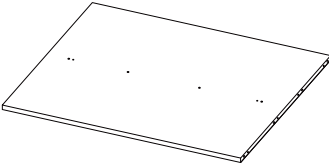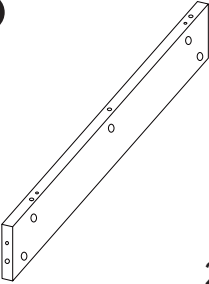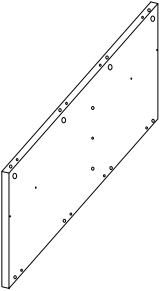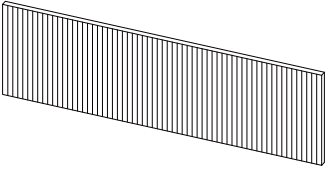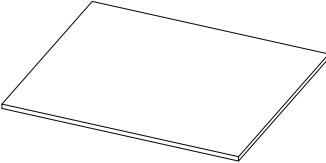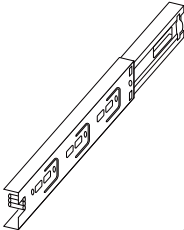
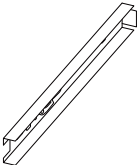
1  1 pc	2  2 pcs	3  2 pcs	4  2 pcs
5  2 pcs	6  2 pcs	7  1 pc	8  2 pcs
9  2 pcs	10  2 pcs	11  2 pcs	12  1 pc
13  4 pcs	14  4 pcs		

    Hardware List


A	B	C	D	E	F
			 Ø 3x12mm	 Ø 3x40mm	
56 pcs	34 pcs	56 pcs	12 pcs	12 pcs	1 pc

Installation of Cams and Pins

 
 
Read each step carefully before starting. Each step of instruction should be performed in the correct order. If these steps are not followed in sequence, assembly difficulties may occur.

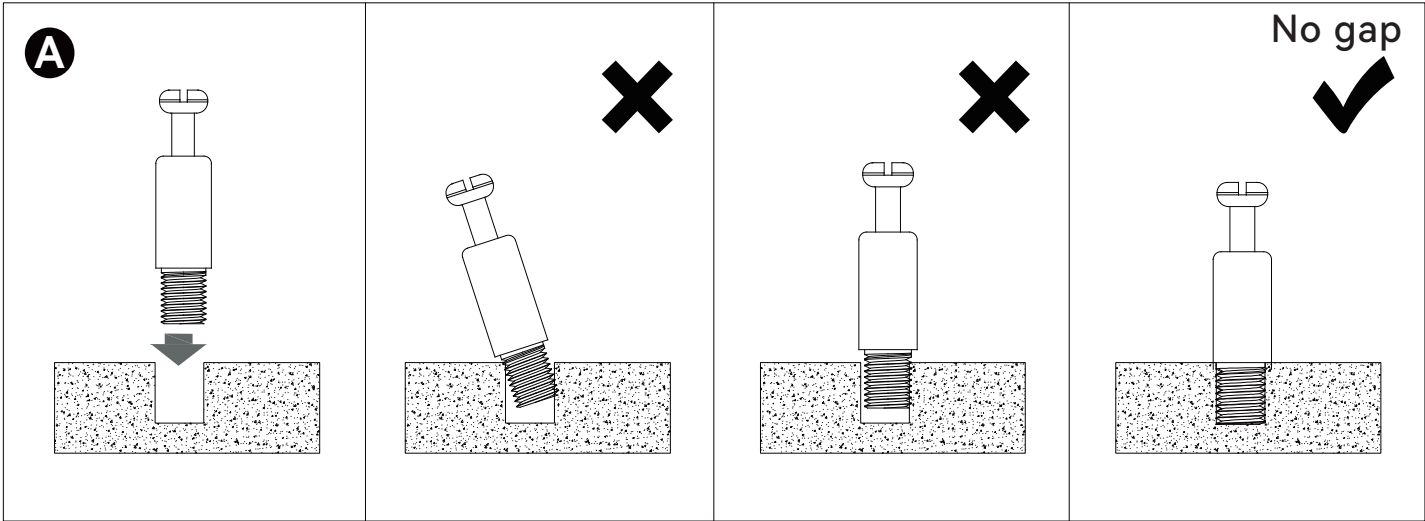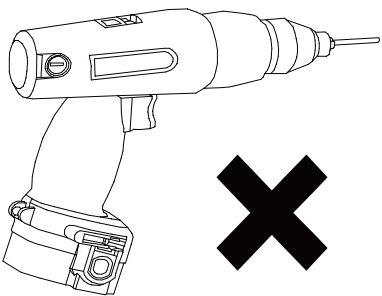

 Screw the pin into the hole. Set the cams correctly by aligning the head of the cams with the lock pins. Lock the cam by turning the cam head with a screwdriver until it is tightened. Please do not use an electric screwdriver to assemble the unit.

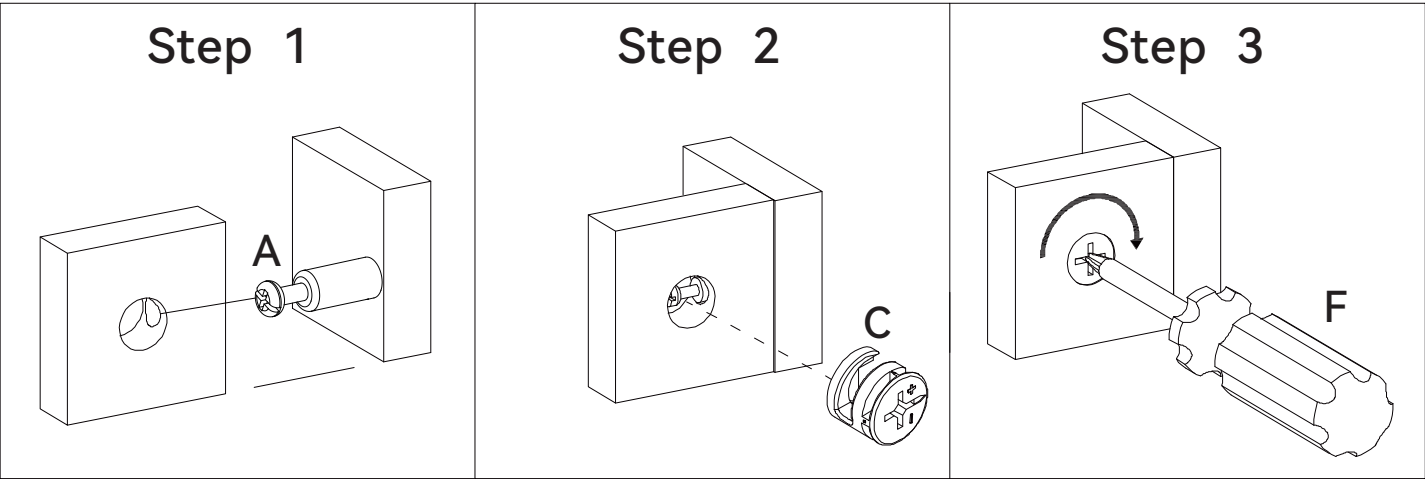


1

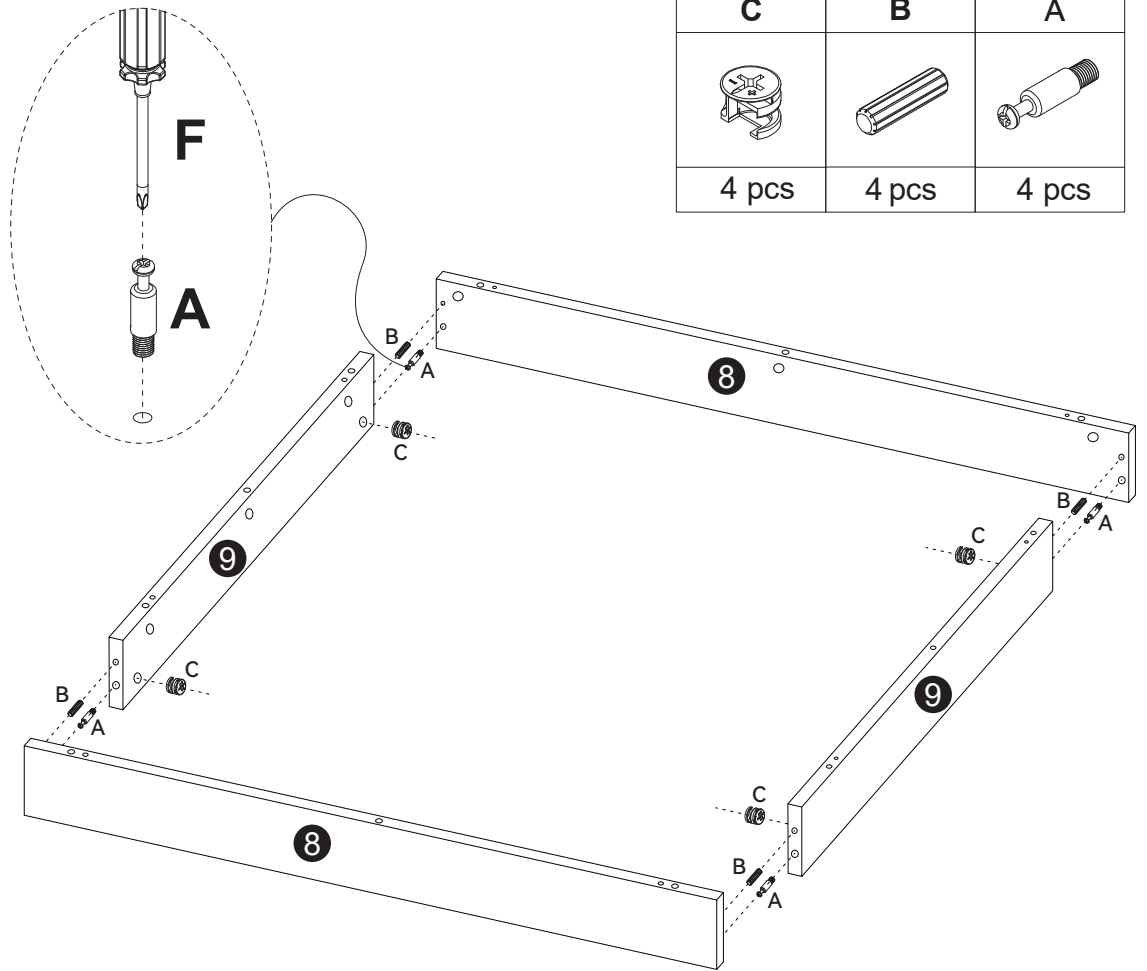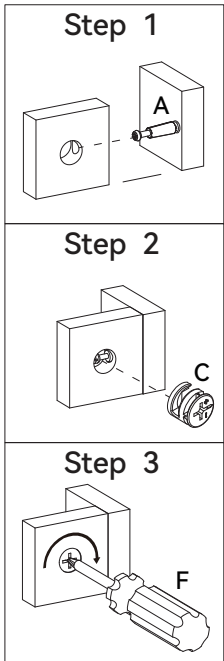  


C	B	A
4 pcs	4 pcs	4 pcs

 2

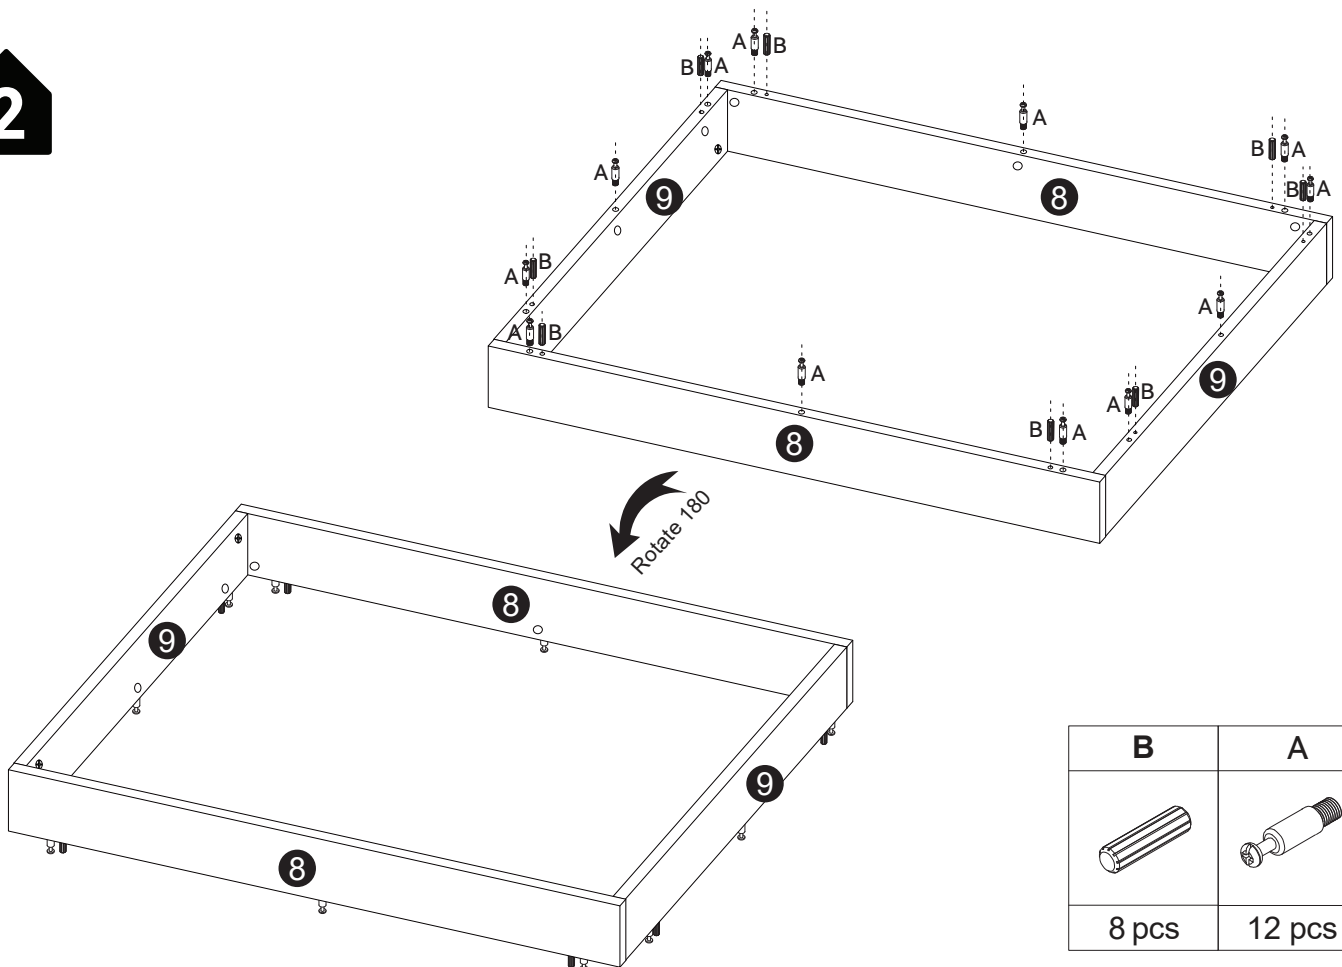

B	A
8 pcs	12 pcs

 
3

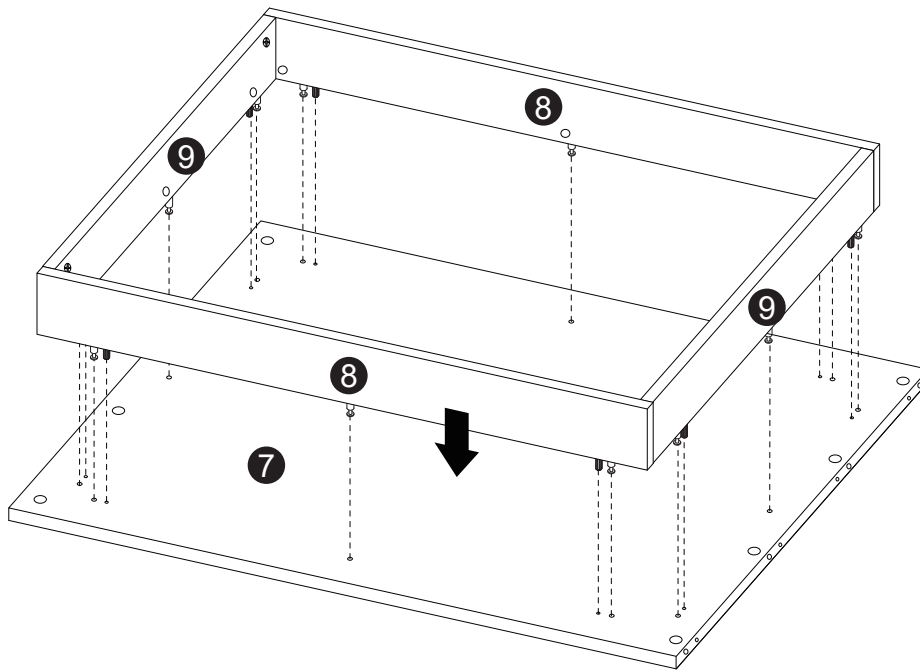


4

C

 
12 pcs

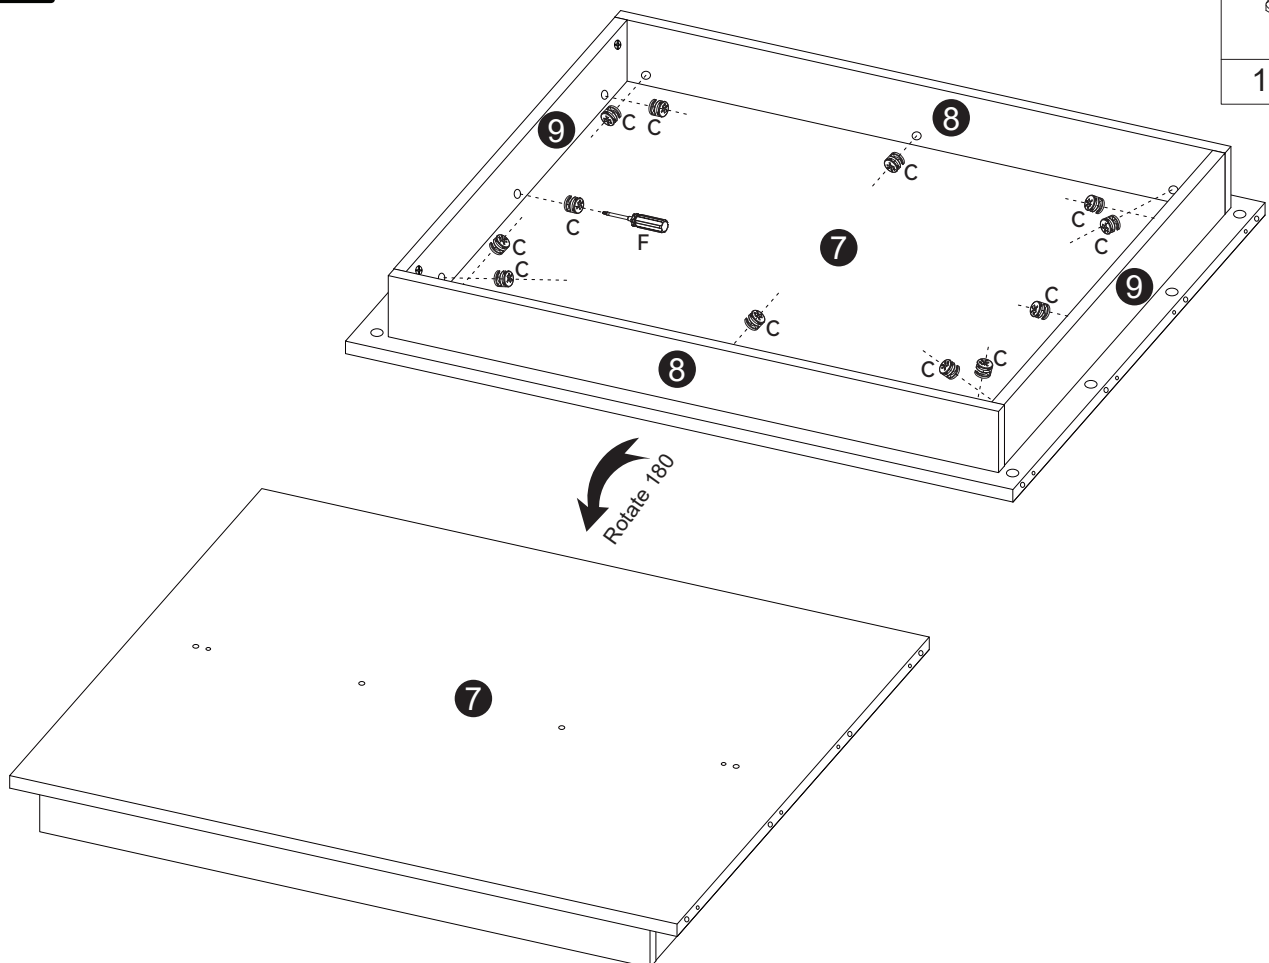


5

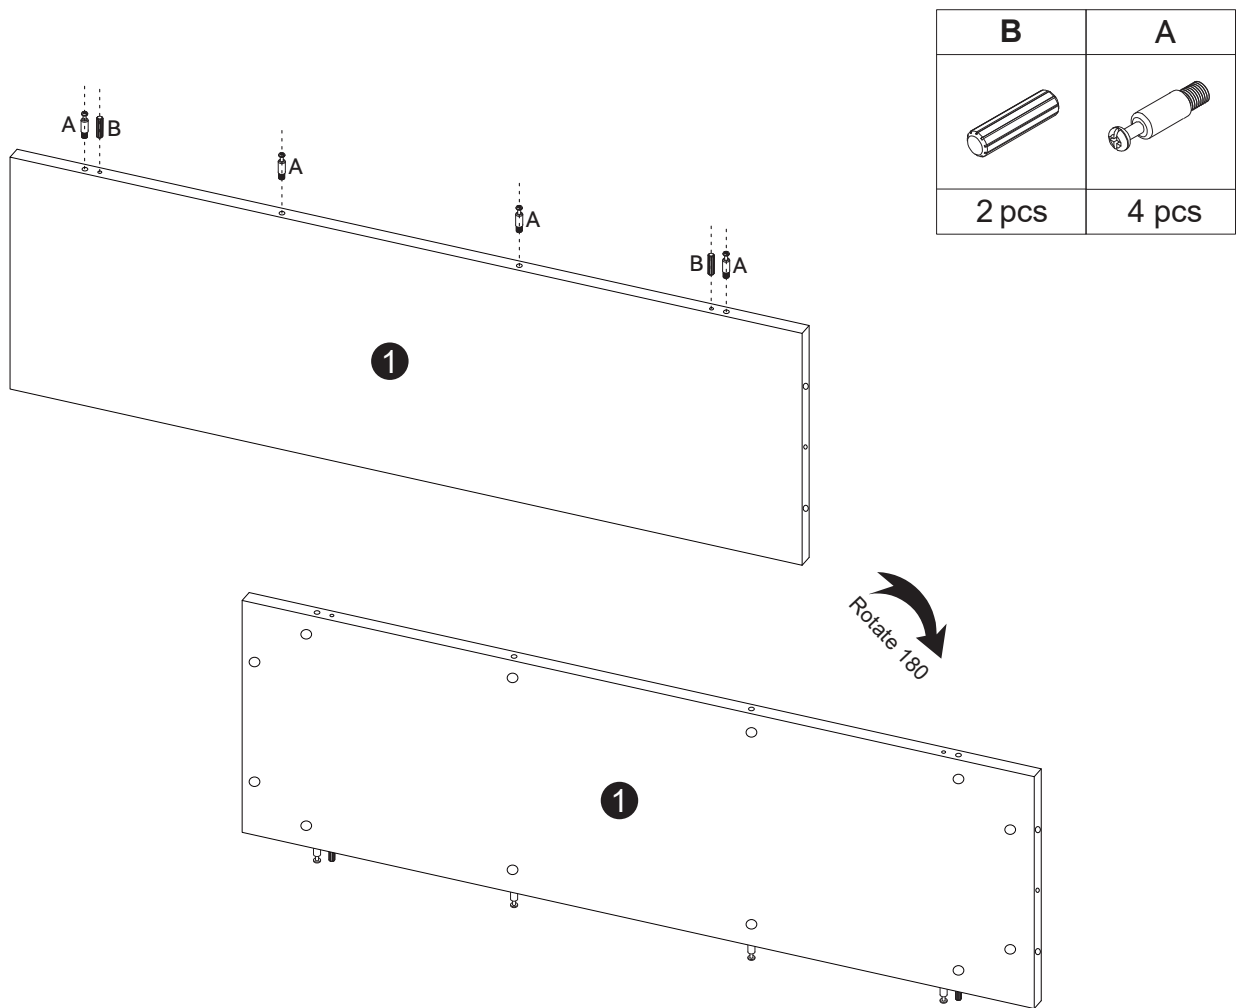 


6

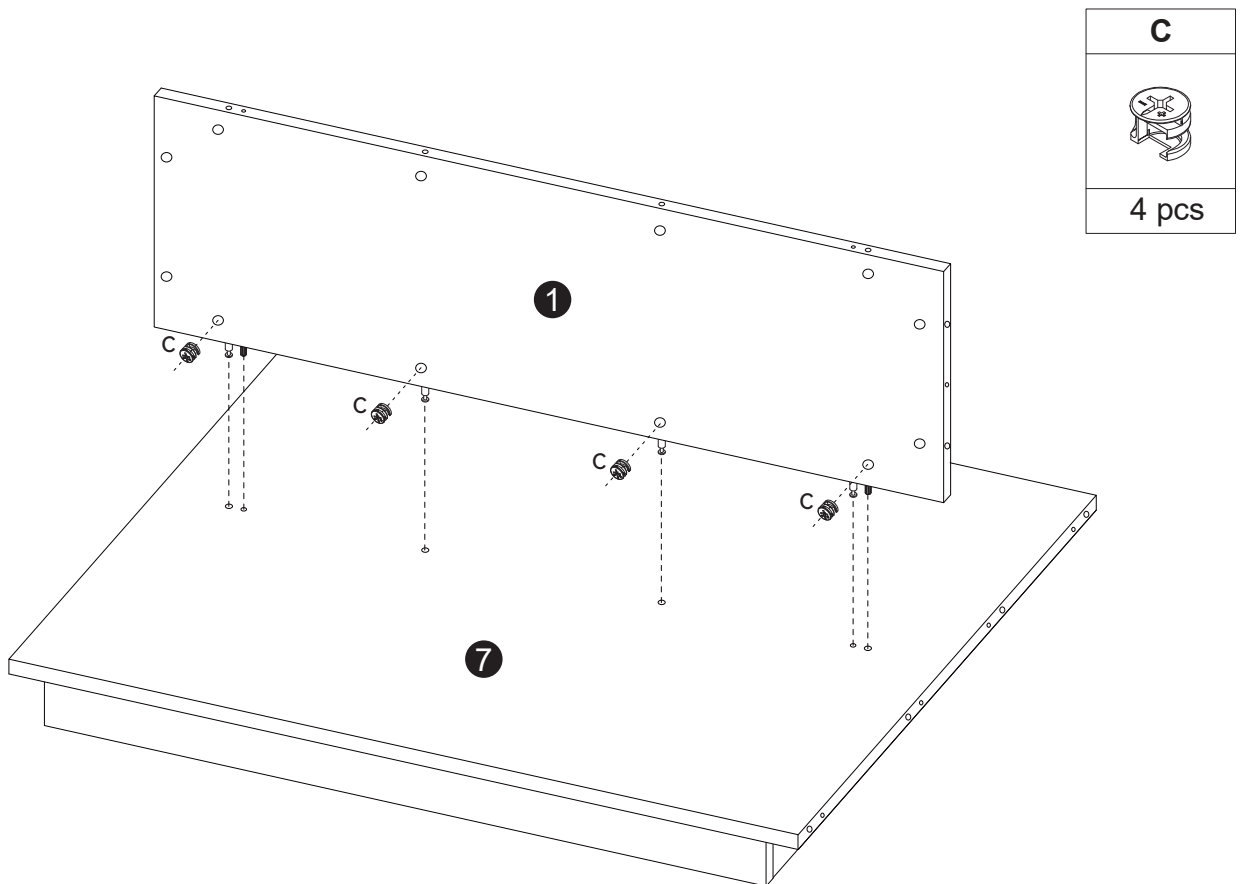 

7

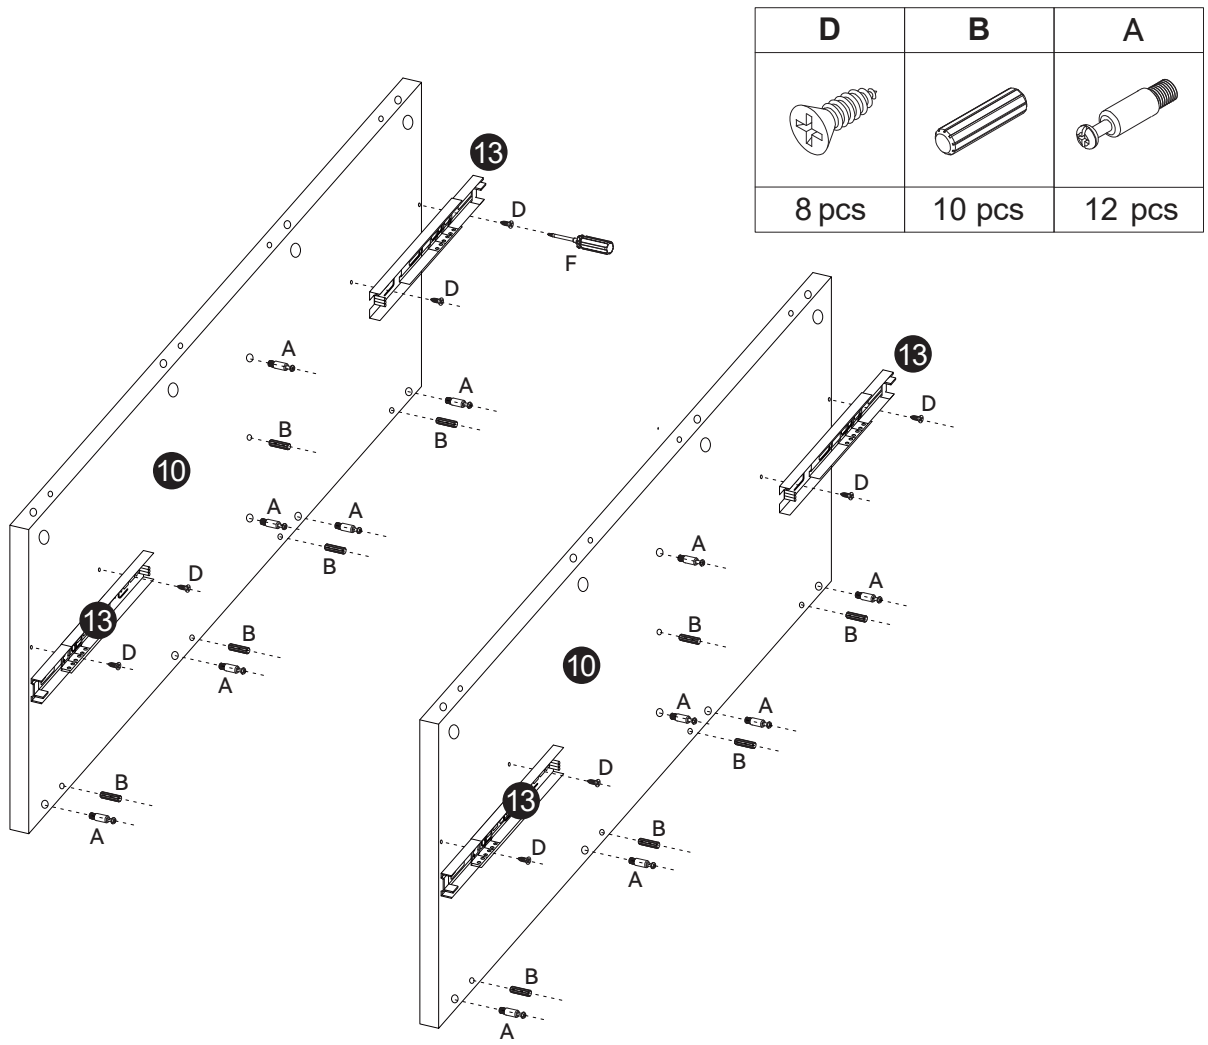 


8

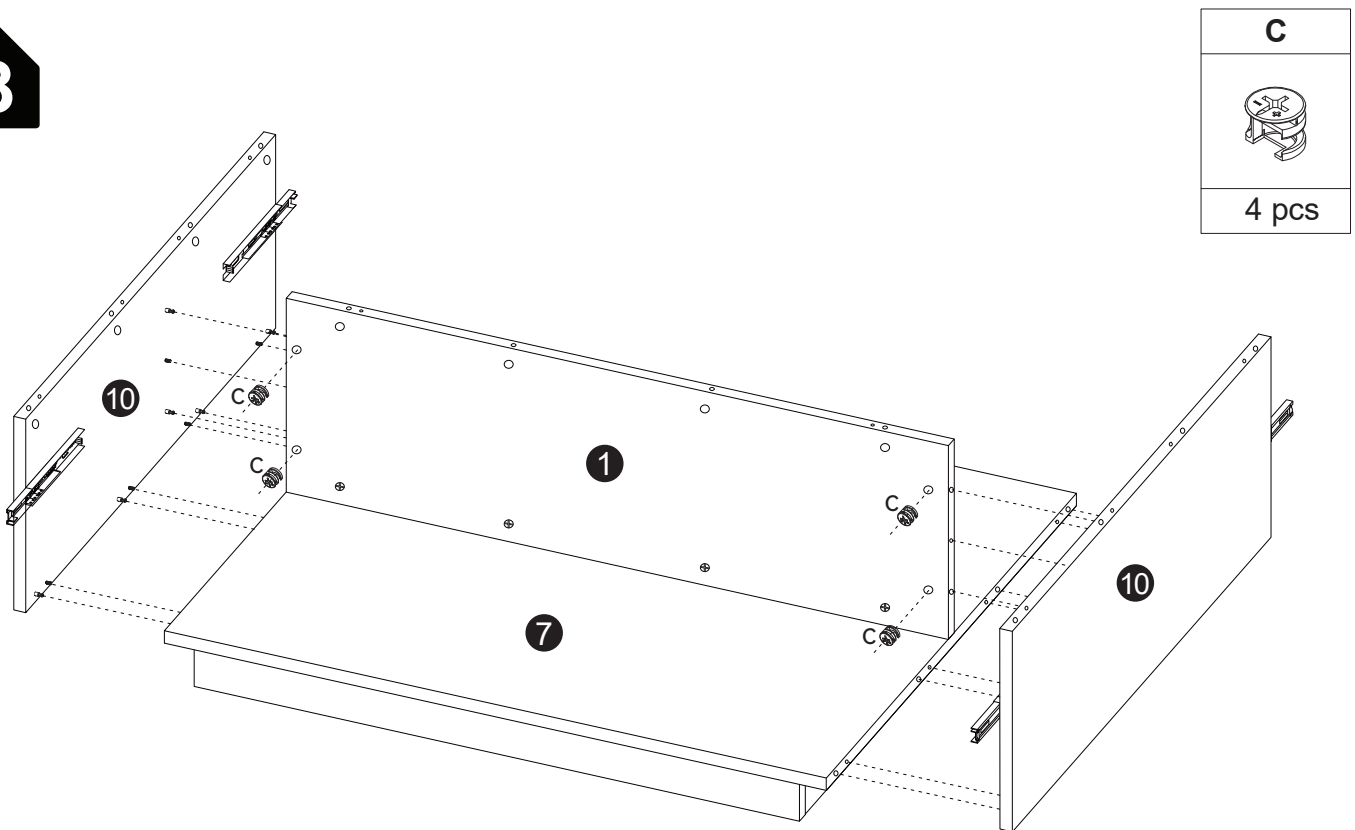 


9

C

 
8 pcs

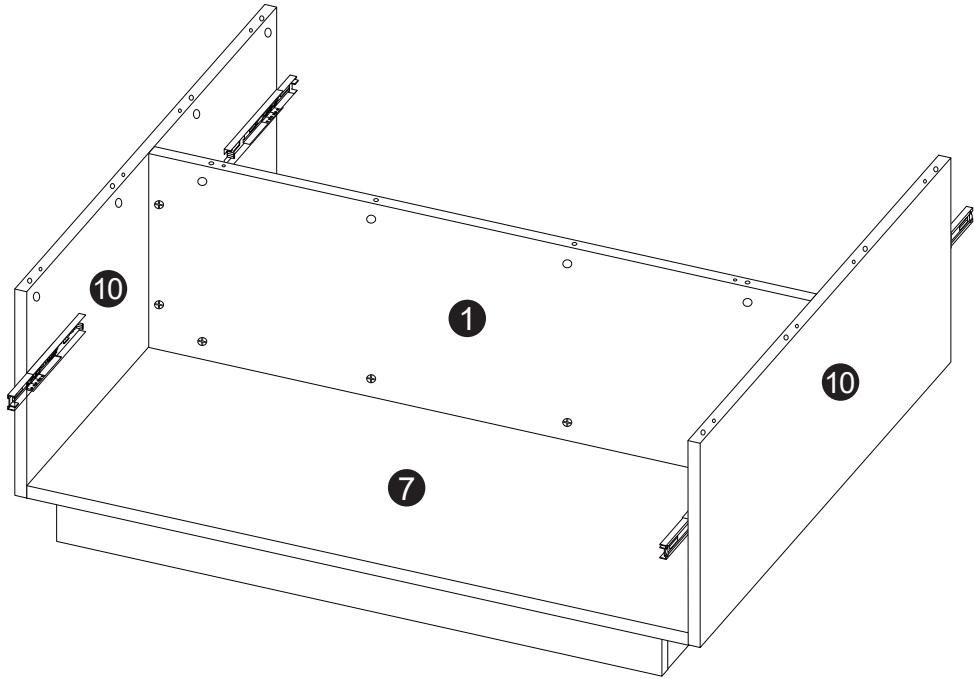


Rotate 180

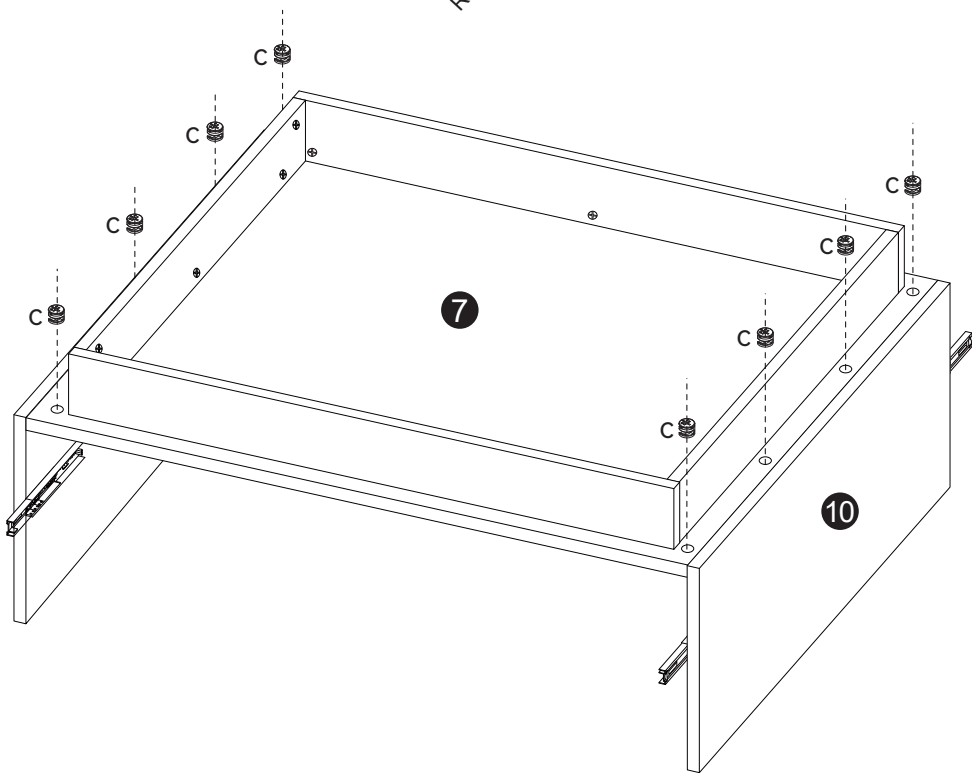 

10

 B	A
	
10 pcs	12 pcs

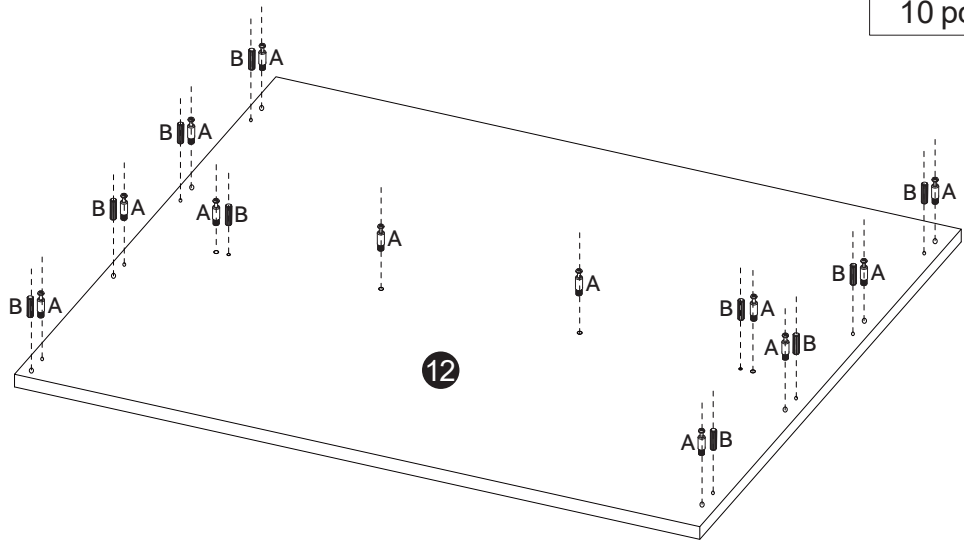 


Rotate 180


11


C

 12 pcs

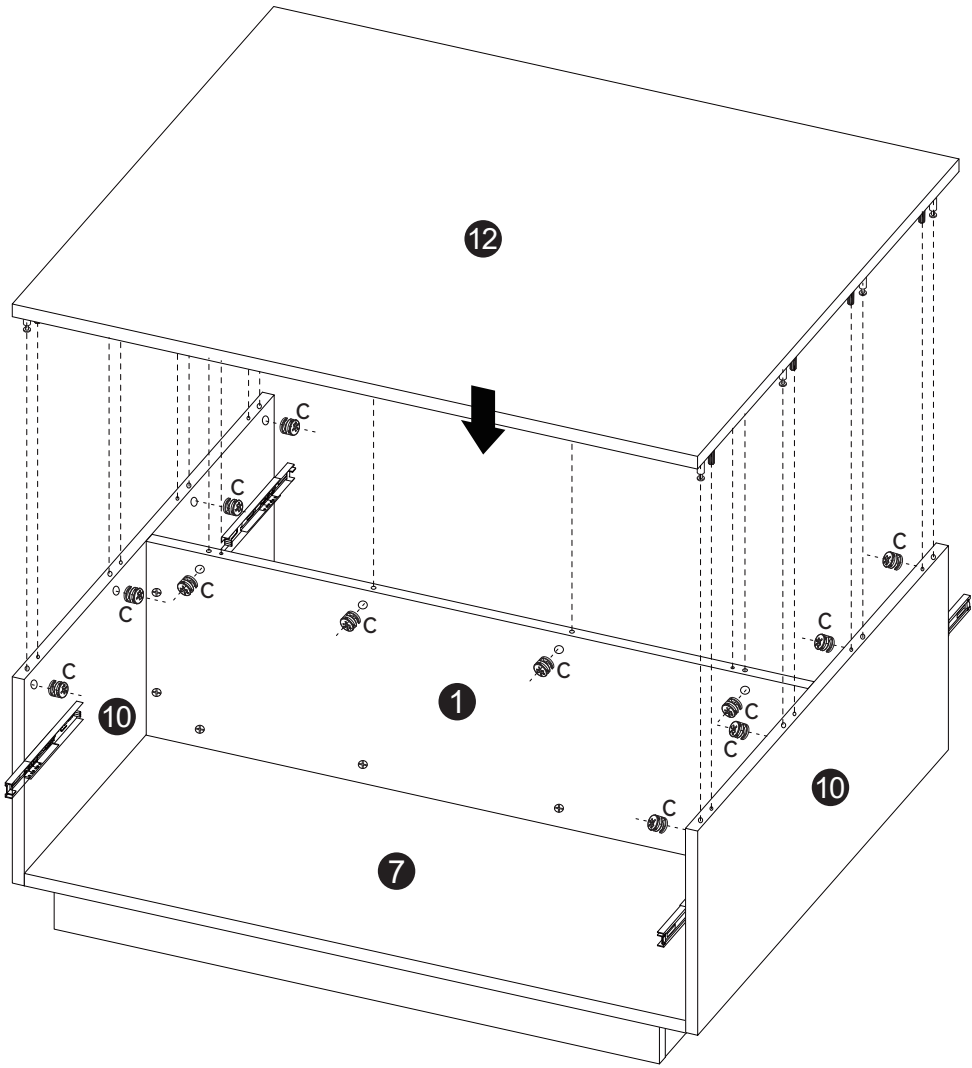


12

 
D	E
	
8 pcs	12 pcs

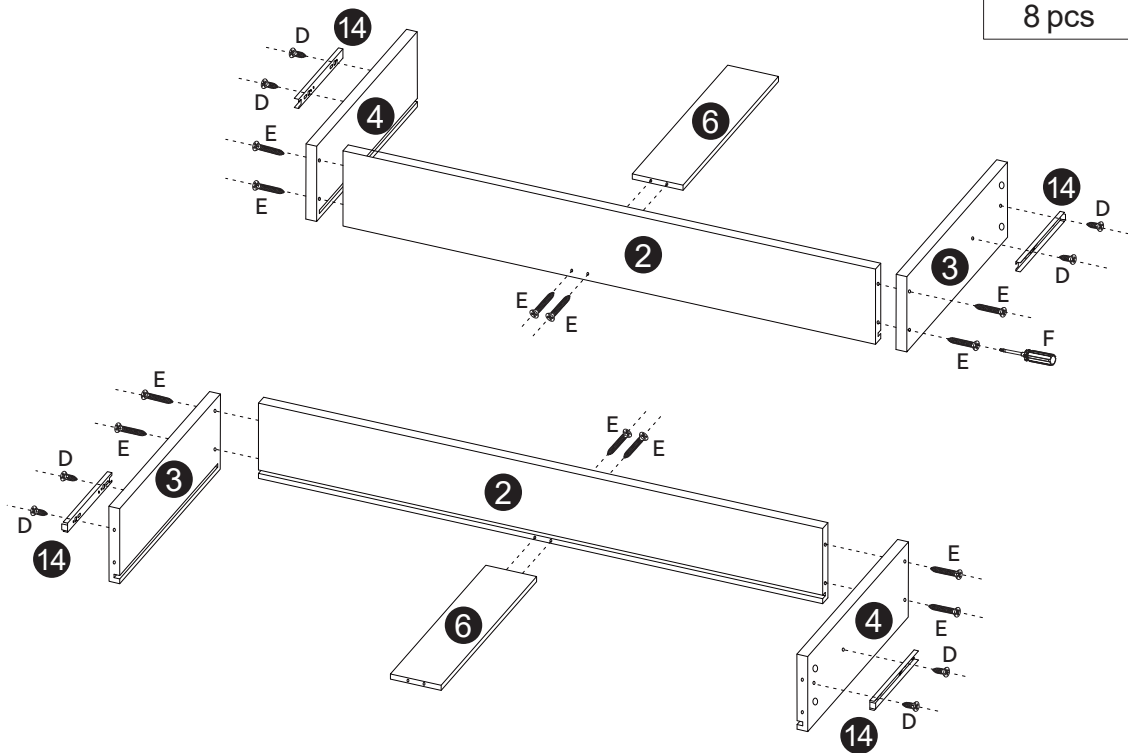 


13

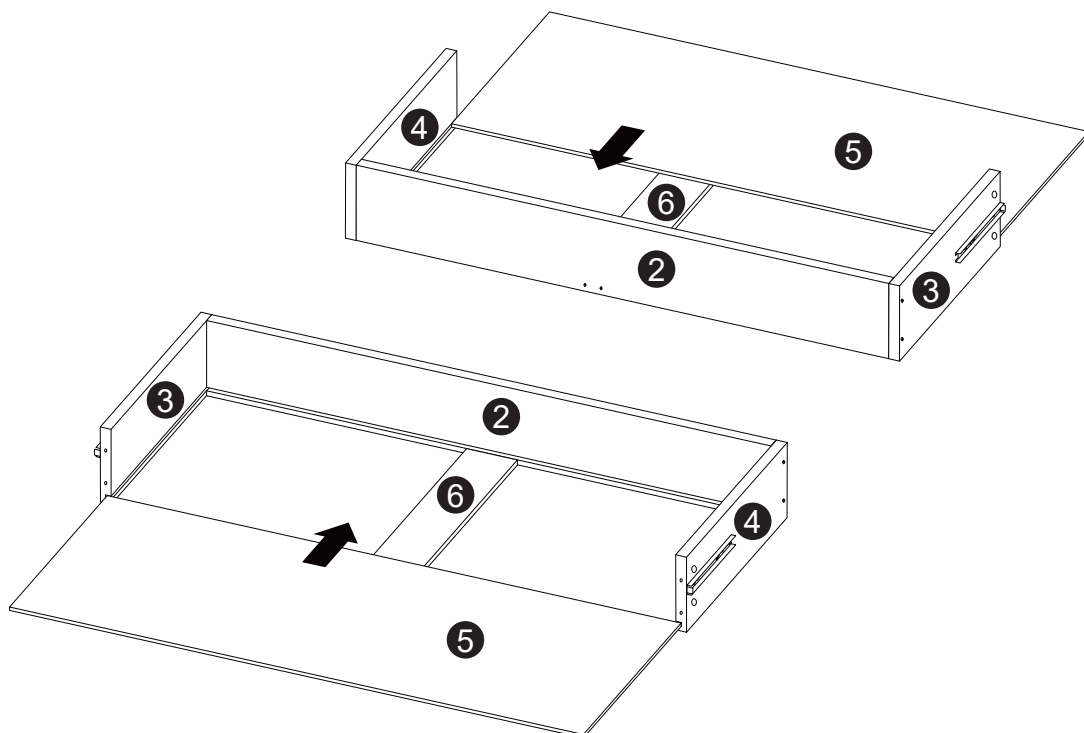 


14

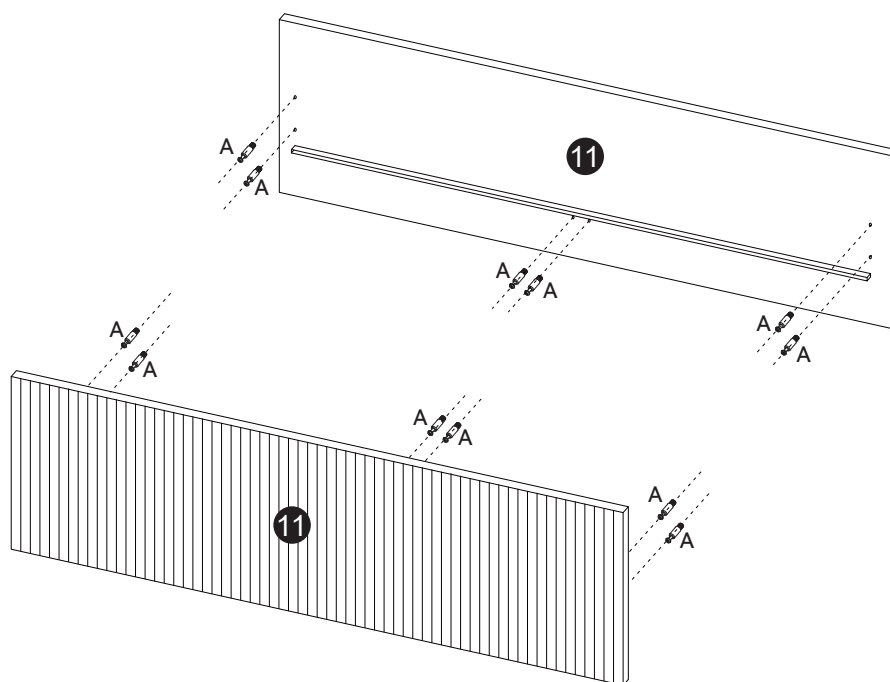 

 A

 12 pcs

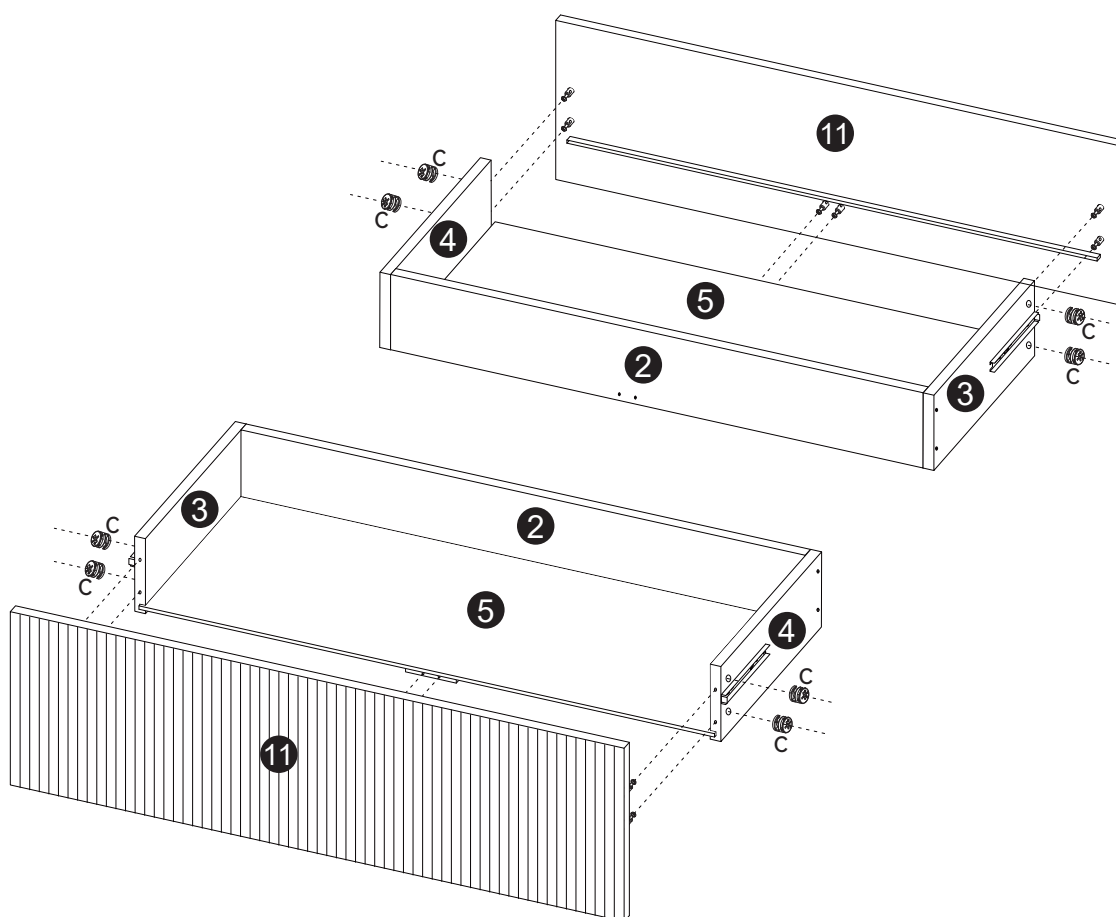15



 
C

8 pcs

16


C

4 pcs

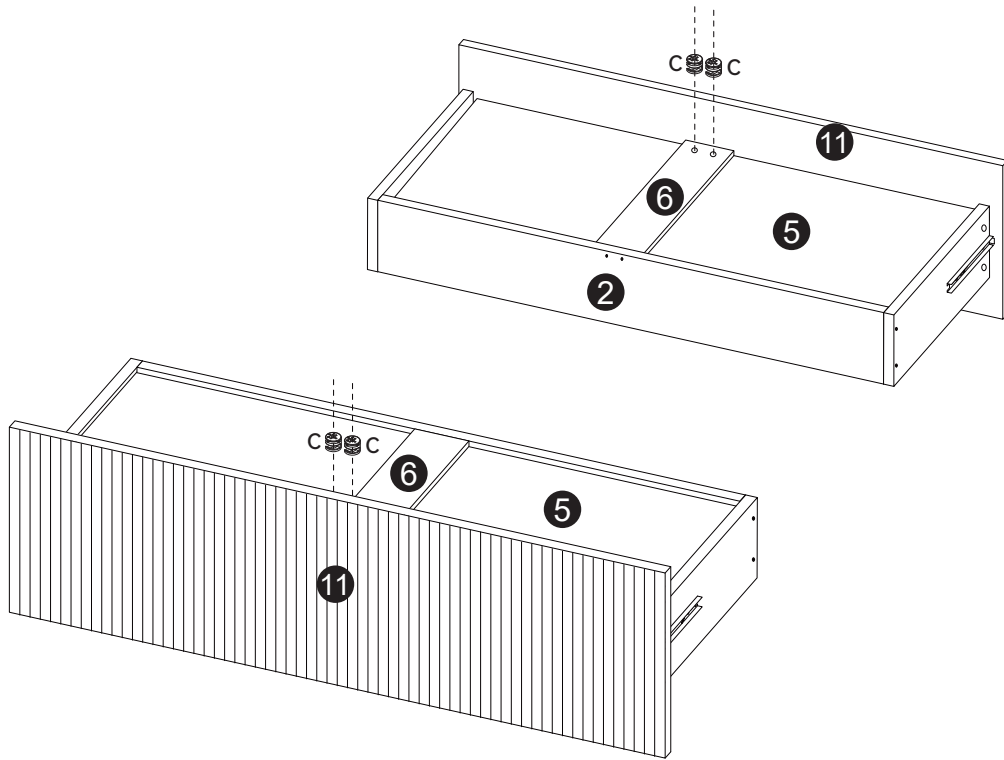

17

 Rotate 180

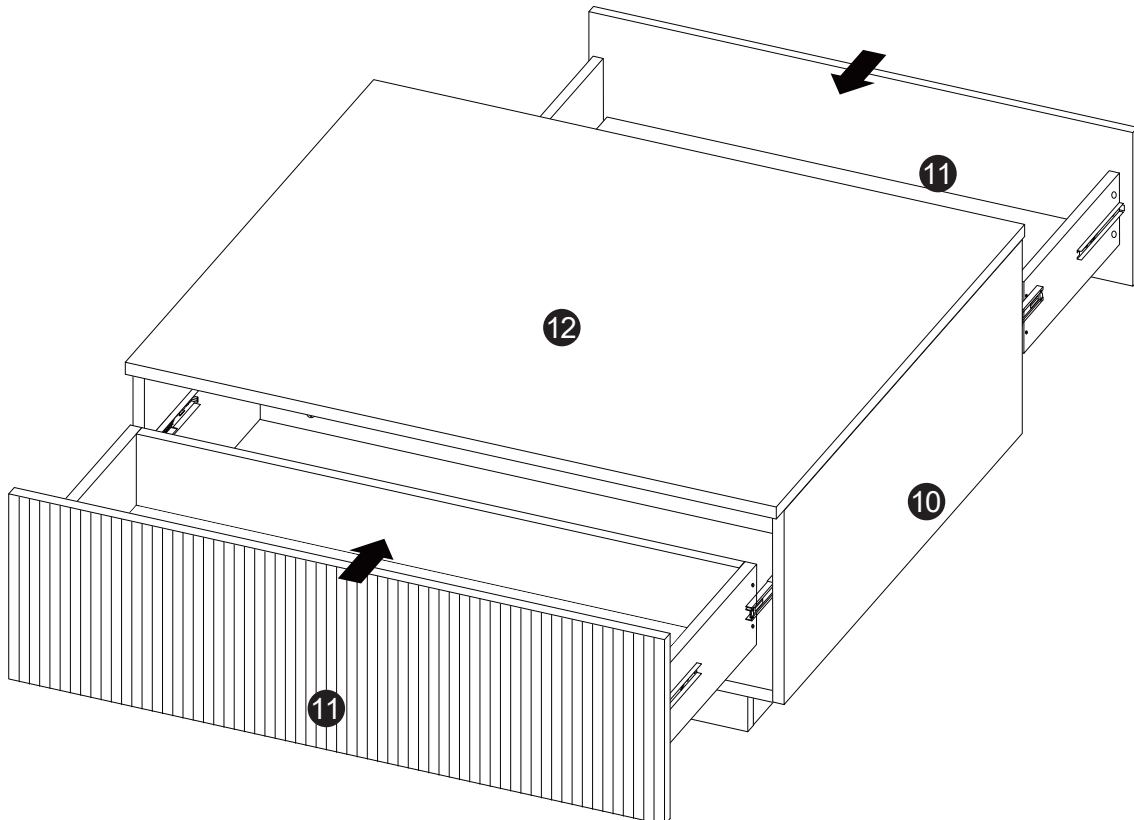

Thank you for your support!

