



1. Turn main seat upside down carefully avoiding any damage to the fabric.
2. Screw legs E into the front of the chairs and F into the back of the chairs, including the washer, using allen key provided
3. Turn seat back upright onto its feet and slide in the back B.
4. Slide in the 2 wings C and D