



INSTRUCTION MANUAL

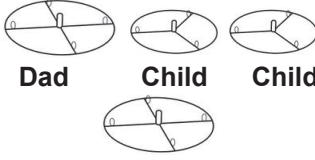
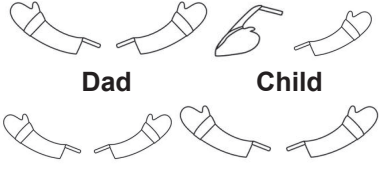
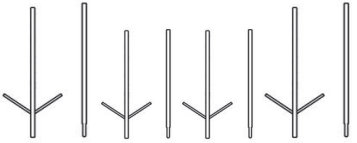
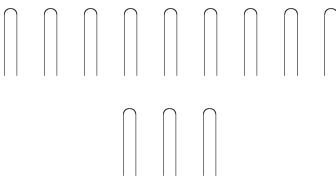
Pre-Lit Set of 4 Snowman Family Yard Decoration

PRE-ASSEMBLY:

PARTS LIST

TIPS :

- ✧ Ensure there are no missing pieces by firstly separating and identifying all parts before starting assembling.
- ✧ Ensure to check packing material for small parts when shipment is received to avoid any parts missing during shipment.

Part	Description	Illustration	QTY
A	Snowman	 Dad Child Child Mum	4
B	Base	 Dad Child Child Mum	4
C	Hand	 Dad Child Child Mum	8
D	Pole	 Dad Child Child Mum	8
E	Ground stake		12



WARNING:

Please Assemble **OUTSIDE** IN AREA
to Avoid Unexpected Cleanup due to
Nature of Glitter!

- ✧ Product may contain glitter, **DO NOT** assemble indoors to avoid unintended property cleanup.
- ✧ **DO NOT** plug into a wall outlet until the item is fully assembled and lights are properly connected.
- ✧ **DO NOT** use in extreme weather conditions.
- ✧ This item is **NOT** intended for permanent installation or use.
- ✧ **UNPLUG** item when not in use.
- ✧ If any parts are missing, broken, damaged, or worn, **STOP** using this product until repairs are made.
- ✧ **DO NOT** allow glitter to contact your eyes or face as this may result in skin irritation or injury.
- ✧ Keep this product away from all heat sources.
- ✧ **DO NOT** secure wiring with staples, nails, or sharp hooks.
- ✧ **DO NOT** hang ornaments or other objects from the cord.
- ✧ **UNPLUG** item before removing or changing bulbs.
- ✧ Replace burned-out bulbs **IMMEDIATELY**.

OTHER RECOMMENDATIONS :

- ✧ To ensure the final unit is secure and sturdy, it is **HIGHLY RECOMMENDED** to secure each component with the zip ties provided after connecting each component together.
- ✧ Parts may be connected by a string of lights and **SHOULD NOT** be separated. Any separation or disconnection of the light set may cause the unit to malfunction or not to light completely.

Manufacturer and seller expressly disclaim any and all liability for personal injury, property damage or loss, whether direct, indirect, or incidental, resulting from the incorrect attachment, improper use, inadequate maintenance, or neglect of this product.

ASSEMBLY:

**MAKE SURE TO FOLLOW THE STEPS STRICTLY
FOR A SUCCESSFUL & EASY ASSEMBLY**

1. Remove all components from the box & packaging and lay flat them all on the floor to make it easier for you to assemble later.

NOTE: Parts are connected by a string of lights and **SHOULD NOT** be separated. Any separation or disconnection of the light set may cause the unit to malfunction or not to light completely.

2. Connect the two poles (D) to the base (B). Hold the stand with one hand and align it with the center of the collapsible snowman frame (A). Ensure the attachment points are properly positioned before securing it in place. Gently expand the collapsible snowman and carefully hook the 'J' hooks onto the loops on the base stand, ensuring a secure attachment. Insert the metal post of the hands (C) into the corresponding metal cylinder of the pole (D). (see Fig.1)

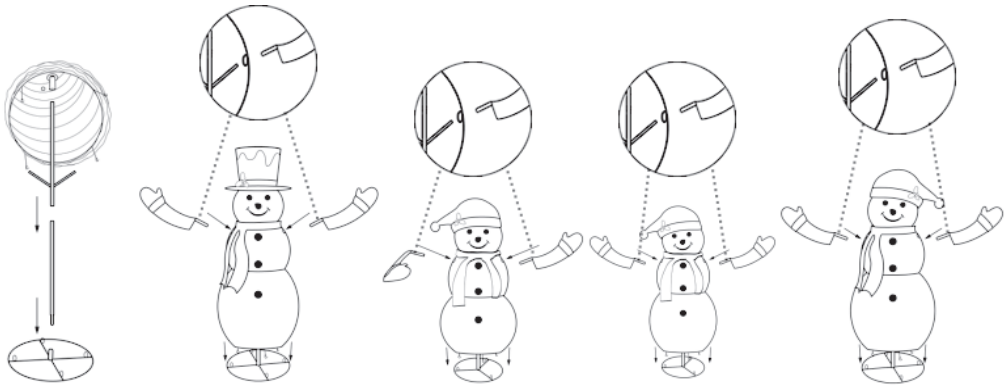


Fig.1

3. Secure the base to the soft ground by fully inserting the ground stakes (E) into the ground. (see Fig.2)

WARNING: This step is a **MUST-HAVE** or it will be less of wind rating and stability for outdoor use! It is NOT supposed to be a quality issue.

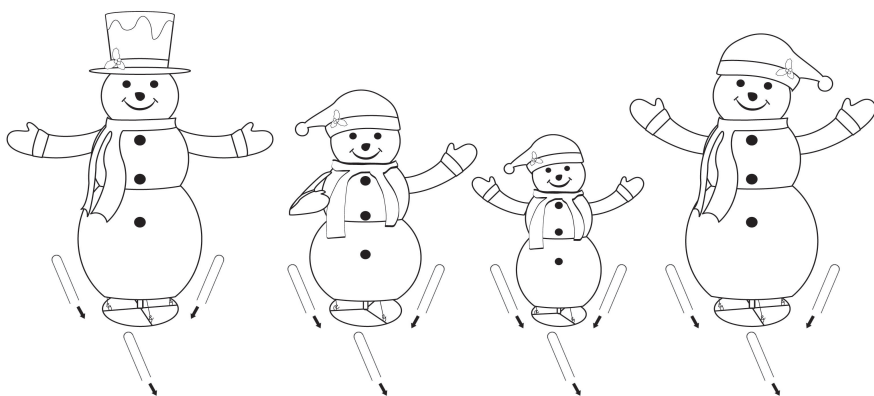


Fig.2

4. Connect the plug to the extension cord with A to A, B to B... and plug the light set into a standard 120-volt AC electrical outlet. (see Fig.3)

WARNING: **DO NOT** plug into a wall outlet until item is fully assemble and lights are properly connected.

WARNING: A must be connected with A, B must be connected with B, otherwise it will lead to part of the light is not bright, it's not a quality issue.

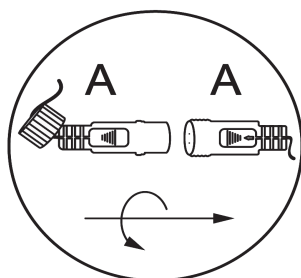


Fig.3

Troubleshooting Guide



Problem	Solution
Unstable or Difficult to Assemble	✧ Ensure the product is placed on a flat & level surface
Works Improperly	✧ Verify the product is securely plugged into a wall outlet or a UL-listed power cord. ✧ Do not plug into other electrical items.
Product Fails to Light Up	✧ Inspect for loose/broken bulbs, faulty connections, or unplugged cords.
Partial Lighting (Multiple Light Strings)	✧ If the product has multiple light strings, make sure all power cords are correctly connected to the power supply (e.g., A is connected to A, B is connected to B).

Care and Help Center



- ✧ Wipe the unit with a damp cloth and allow the unit to dry before storing.
- ✧ Carefully disassemble the unit and take caution not to cut any electrical wires.

Any Questions about Your Products?

We will reply to you within 24-48 business hours! 😊

WARNING

Manufacturer and seller expressly disclaim any and all liability for personal injury, property damage or loss, whether direct, indirect, or incidental, resulting from the incorrect attachment, improper use, inadequate maintenance, or neglect of this product.