 


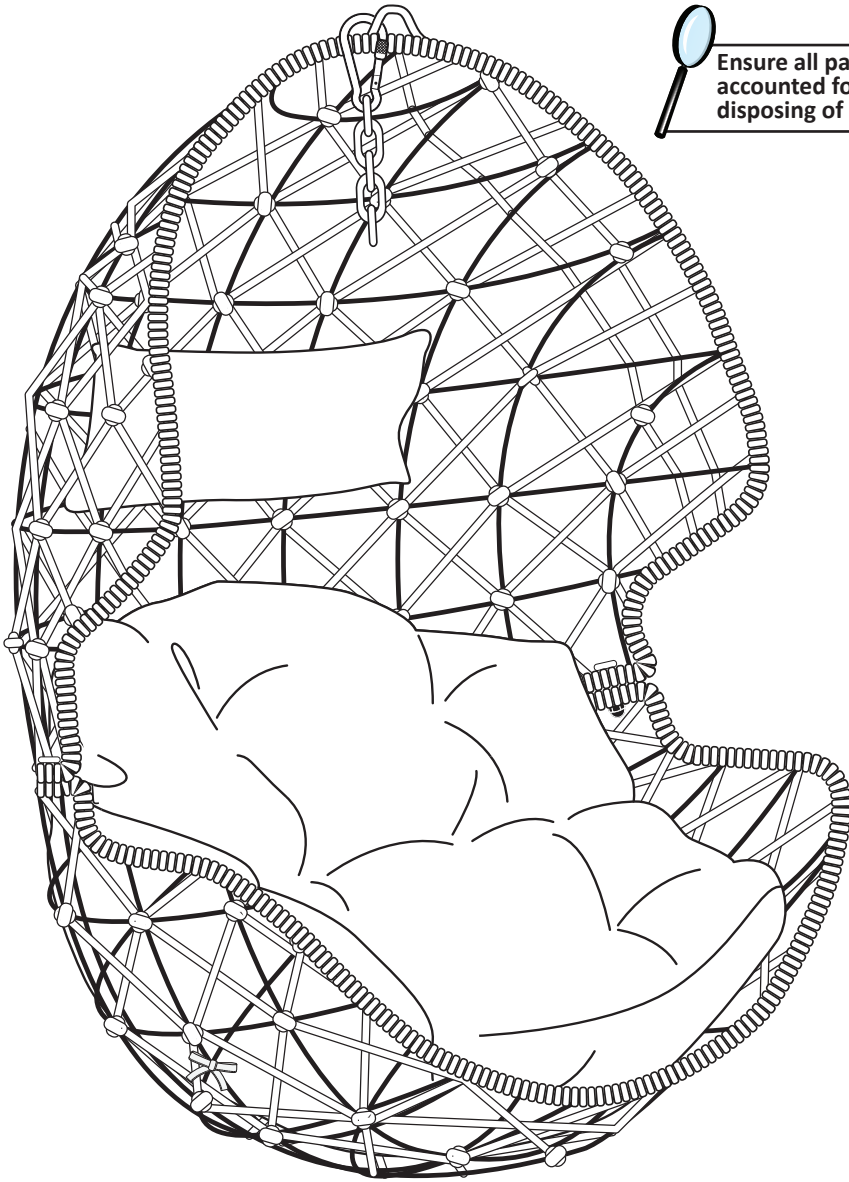




 



 


HANGING EGG CHAIR

Read all assembly and care instructions carefully before using this product. Save these instructions for future reference.



Ensure all parts are accounted for before disposing of packaging.

No.	PARTS	QTY.
1	 Chair Top with Carabiner and Chain	1
2	 Chair Bottom	1
3	 Cushion Set	1
I	 Bolt	4
M	 Washer	8
N	 Lock Nut	4
O	 Nut Cap	4
R	 Pin	1
S	 Extension Spring	1
T	 Safety Strap	1
X	 Hex Key	1
Z	 Spanner	1

WARNING!

CHOKING HAZARD — This item contains small parts that can be swallowed. Keep children away during assembly.

WARNING!

Manufacturer and seller expressly disclaim any and all liability from personal injury, property damage or loss, whether direct or indirect, or incidental, resulting from the incorrect attachment, improper use, inadequate maintenance, or neglect of this product.

CAUTION

 
This egg chair is not designed for use as a swing. Bouncing, swinging, or any other significant movements while in the chair may cause serious injury.

Make sure all hardware is securely tightened before each use.

The safety strap must be used with or without the Egg Chair Stand (egg chair stand sold separately).

Weight Limit: 265 lbs.

ASSEMBLY

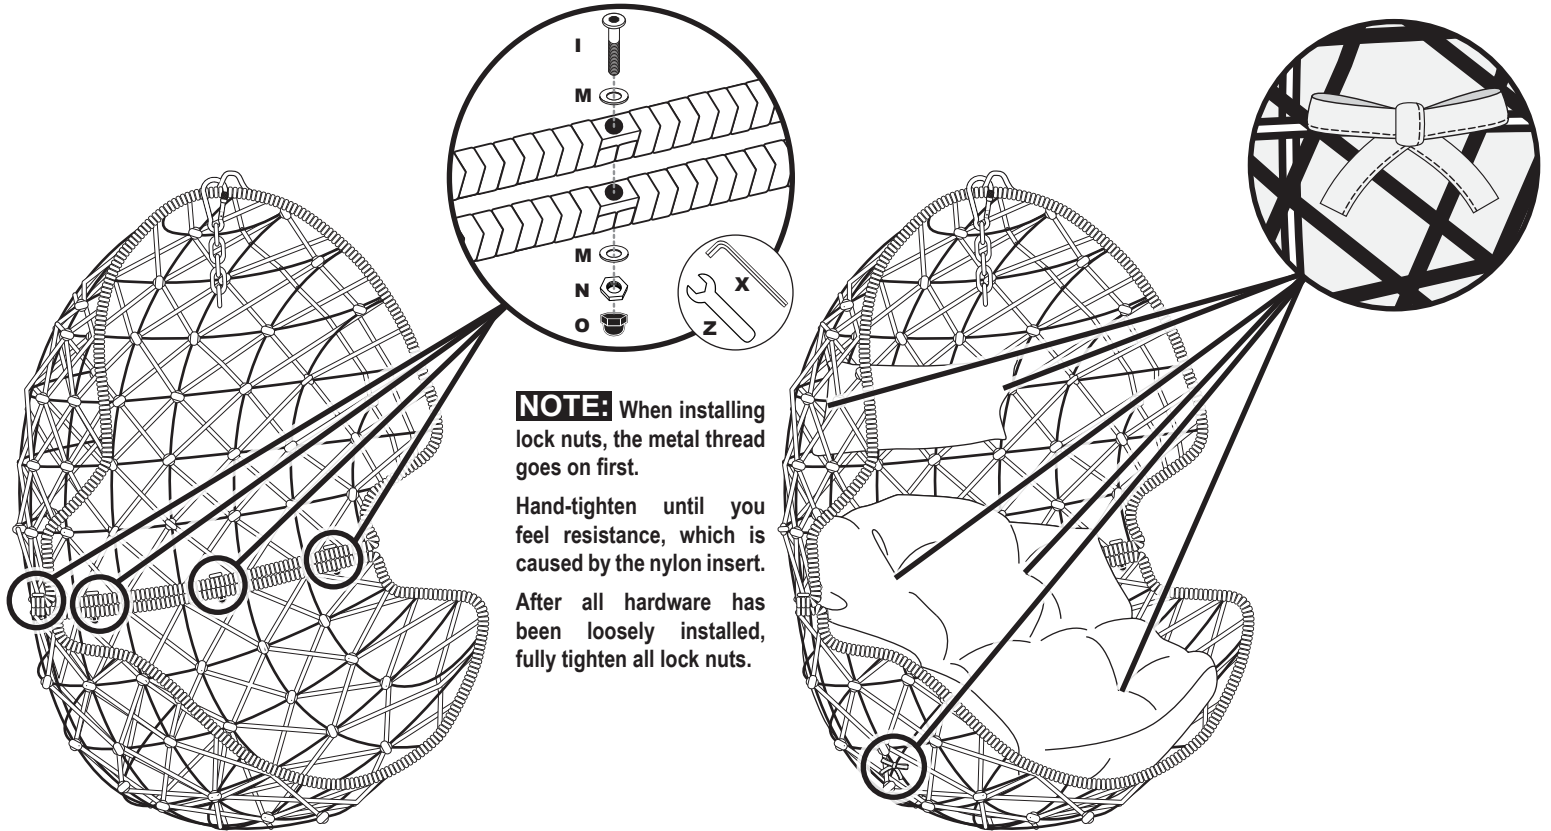

NOTE: When installing lock nuts, the metal thread goes on first.

Hand-tighten until you feel resistance, which is caused by the nylon insert.

After all hardware has been loosely installed, fully tighten all lock nuts.

Step 1

Align Chair Top (1) and Chair Bottom (2) and secure them using Bolt (I), Washers (M), and Lock Nut (N). Place Nut Cap (Q) over the lock nut.

Step 2

Tie Cushions (3) onto the frame of the egg chair.

Do not tie cushions to the rattan material.

USE & CARE

- **HANGING:** Hardware to hang this chair on a Egg Chair Stand is included. If this chair is used without the Egg Chair Stand, consult a professional for installation and anchoring hardware requirements.
- **SAFE USE:** Do not swing, bounce, jump, twist, or other make other excessive movements while using this chair; doing so may cause serious injury. Do not use this chair without the safety strap; this strap helps keep the chair safely in place while getting in and out of the chair.
- **CHILDREN:** Supervise children at all times. Do not allow children to play on or sleep in hanging chairs.
- **INSPECTION:** Check the seat, ropes, and frame for damage before each use.
- **CLEANING:** Wipe with a damp cloth. For tougher stains, use mild detergent and a soft cloth to gently scrub. Rinse and dry thoroughly to prevent mold and mildew growth.
- **STORAGE:** Store indoors during winter and inclement weather. Cool, dry locations are best to help prevent damage. Exposure to moisture may cause mold and mildew growth. Prolonged exposure to sunlight will cause the chair and cushions to fade.

! SAFETY STATEMENTS & WARNINGS !

- Do not exceed the weight limit: 265 pounds
- Egg Chair is not a swing. Do not swing, bounce, jump, twist, or spin in the chair.
- This product is intended to be used by one person at a time.
- For safety, the chair must be used with the safety strap provided.
- Do not loop the safety strap around the ropes or rattan material of the chair.
- Inspect the chair for damage and ensure all materials are intact before each use.
- Do not allow children to use this product without adult supervision.

Any modification to the product or failure to follow recommended care will void the product warranty.