


3 Assemble the Table Legs (L) to the Table Sides (M) to the Table Top (K), using Bolts (N) and Washers (O). Tighten using provided Allen Key (P).

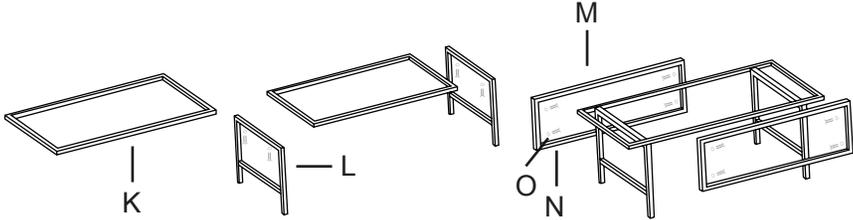


Model: _____


Lot No: _____

Date of Purchase: _____

4 Place seat cushions and enjoy your new outdoor seating set.

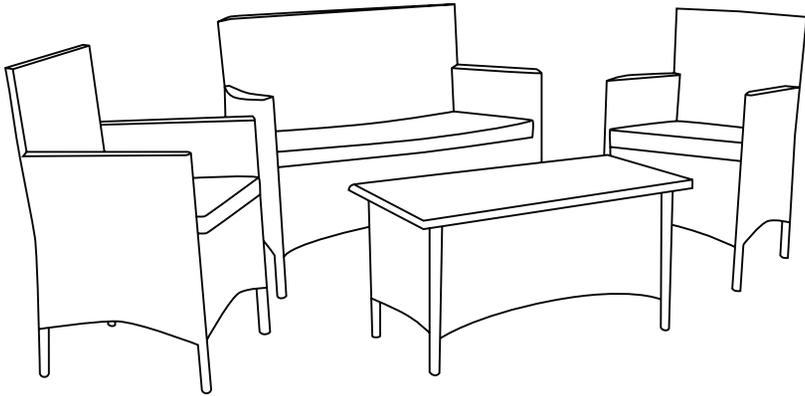

4 PC SET

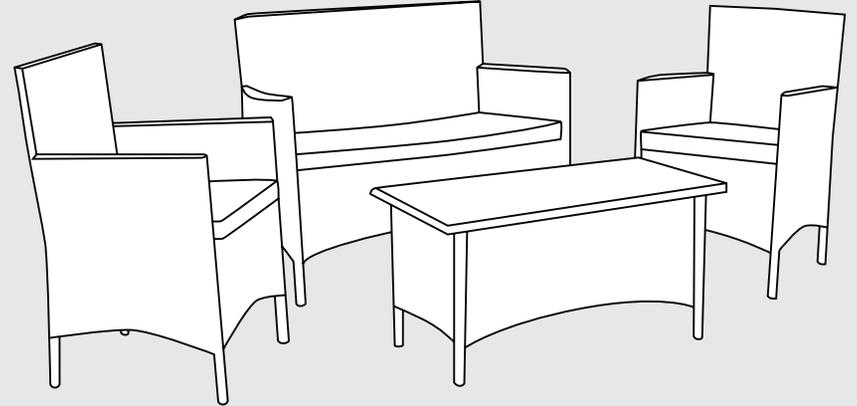

ADULT ASSEMBLY REQUIRED

If you are missing any parts or have any questions regarding assembly, do not return this item to the retailers store. Please call our toll-free, customer service number and have this assembly manual open to the parts list ready to provide the model name, number and part name or number.



 
WARNING: This product may contain small components, please ensure they are kept away from small children.

PARTS AND HARDWARE


Avoid using sharp objects such as a knife to cut open packing as you may accidentally damage the upholstery.




A. Right Chair Arms
2x



 
B. Left Chair Arms
2x




C. Chair Cushions
2x

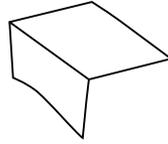

 
D. Chair Seat
2x



 
E. Chair Back
1x




F. Right Loveseat Arms
1x

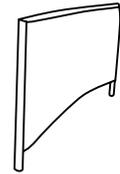

 
G. Left Loveseat Arms
1x




H. Loveseat Cushion
1x

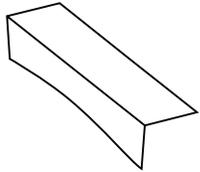


I. Loveseat Seat
1x

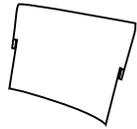

 J. Loveseat Backrest
1x



 K. Table Top
1x



L. Table Legs
2x



M. Table Side
2x



N. Bolt
37x



O. Washer
37x




P. Allen Key
1x

ASSEMBLY INSTRUCTIONS

Do not fully tighten bolts until assembly is complete.

- 1 Assemble the Chair Arms (A) and (B) to the Chair Seat (D) and the Chair Back (E), using Bolts (N) and Washer (O). Tighten using provided Allen Key (P).

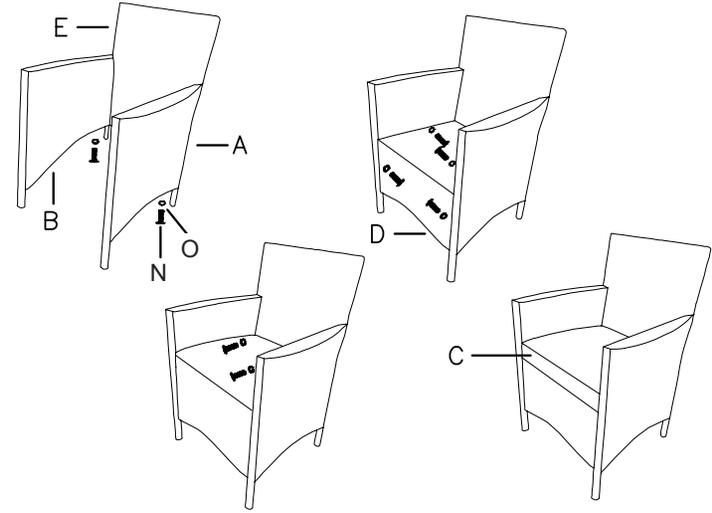

- 2 Assemble the Loveseat Arms (F) and (G) to the Loveseat Seat (I) and the Loveseat Backrest (J), using Bolts (N) and Washer (O). Tighten using provided Allen Key (P).

