

Ceramic Fan Heater

ITEM NO.: 3618-WHITE

MODEL NO.: ZFH006



INSTRUCTIONS FOR USE
PLEASE READ AND SAVE THESE
IMPORTANT INSTRUCTIONS

INTENDED USE

This product is intended ONLY for indoor household or office use.

It is NOT intended for industrial or commercial use. Do not use the product outdoors.

IMPORTANT INSTRUCTIONS

When using electrical appliances, basic precautions should always be followed to reduce the risk of fire, electric shock, injury to persons, and hyperthermia, including the following:

1. Read all instructions before using this heater.
2. This heater is hot when in use. To avoid burns, do not let bare skin touch hot surfaces. If provided, use handles when moving this heater. Keep combustible materials, such as furniture, pillows, bedding, papers, clothes, and curtains at least 3 feet (0.9 m) from the front of the heater and keep them away from the sides and rear.
3. Extreme caution is necessary when any heater is used by or near children or invalids and whenever the heater is left operating and unattended.
4. Always unplug heater when not in use.
5. Do not operate any heater with a damaged cord or plug or after the heater malfunctions, has been dropped or damaged in any manner. Discard heater, or return to authorized service facility for examination and/or repair.
6. Do not use outdoors.
7. This heater is not intended for use in bathrooms, laundry areas and similar indoor locations. Never locate heater where it may fall into a bathtub or other water container.
8. Do not run cord under carpeting. Do not cover cord with throw rugs, runners, or similar coverings. Do not route cord under furniture or appliances. Arrange

cord away from traffic area and where it will not be tripped over.

9. To disconnect heater, turn controls off, then remove plug from outlet.

10. Do not insert or allow foreign objects to enter any ventilation or exhaust opening as this may cause an electric shock or fire, or damage the heater.

11. To prevent a possible fire, do not block air intake or exhaust in any manner. Do not use it on soft surfaces, like a bed, where openings may become blocked.

12. A heater has hot and arcing or sparking parts inside. Do not use it in areas where gasoline, paint, or flammable liquids are used or stored.

13. Use this heater only as described in this manual. Any other use not recommended by the manufacturer may cause fire, electric shock, or injury to persons.

14. Always plug heaters directly into a wall outlet/receptacle. Never use it with an extension cord or relocatable power tap (outlet/power strip).

15. Hyperthermia can result in death. Symptoms of hyperthermia include high body temperature, headache, nausea, vomiting, tiredness, dizziness, fainting, and rapid pulse. If you begin to experience symptoms related to hyperthermia, turn off the heater and seek medical attention.

16. To avoid excessive room temperatures which can cause hyperthermia: DO NOT leave product running unattended in a confined space around infants, or individuals with reduced physical, sensory, or mental capabilities.


SAVE THESE INSTRUCTIONS

Description of Device

A - Adjustable thermostat

B - Power switch

C - Handle

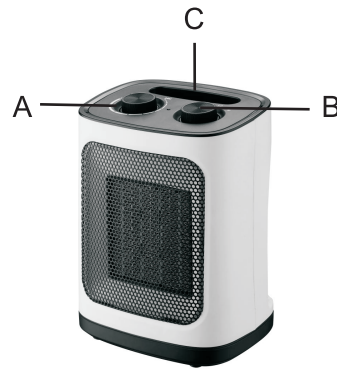

Technical Specification

Power: 1500W

Voltage & Frequency: 120VAC 60Hz

Operating Instructions

1. Before using the heater, make sure that it is on a flat and stable surface. Damages may occur if it is placed on slopes.
2. Turn off all the heater controls and then plug directly into a standard grounded AC outlet. Be sure the plug fits tightly into the outlet.
3. To activate the heater, turn the knob to the Fan position () for cool wind, turn the knob to "LO" for the warm wind-low power, and "HI" for hot wind-Maximum power.
4. Turn the thermostat switch clockwise or anti-clockwise to set the desired temperature that you require. The adjustable temperature switch automatically keeps the desired set temperature.
5. To completely shut the heater off, turn all the switches off, and remove the plug from the socket-outlet when it's not in use.

Note: Do not force the knob beyond its normal stop position.

Tip-over Protection

The heater is provided with an anti-tilt switch that switches off the heater if it is overturned. It switches itself on again automatically when it is restored to its upright position.

Overheating Protection

This heater is protected with overheating protection that switches off the appliance automatically in case of severe overheating. In this case, unplug the appliance, wait about 30 minutes for it to cool down, and remove any possible cause of overheating to ensure that nothing covers the heater. Check for damage to the appliance, the cord, and the plug. If there is no damage, plug the unit back in and switch it on as described above. If the heater still does not turn on, please contact Customer Service for assistance.

Maintenance and Cleaning

The appliance should be regularly cleaned when in use in accordance with the following instructions:

1. Unplug and let the appliance cool down before cleaning.
2. Gently clean the outside surface and the appliance's control panel with a damp, lint-free soft cloth.
3. If dust is present within the slits of the device, it is recommended to blow it through the use of a vacuum cleaner or a blower.
4. Do not use chemical cleaners or solvents or harsh detergents as they may damage the appliance's feet.

Storage

1. Keep the original packaging to disassemble the appliance and store it.
2. Keep the appliance in a dry and clean place.
3. Store the unit out of reach of children.

Packing List

No.	Description	Quantity
1	Ceramic fan heater	1pc
2	User manual	1pc

Thank you for purchasing this product! If you have questions about the product such as missing parts, damaged products, product assembling and operation etc., please contact us via **Amazon Message** or customer service phone: **213-4467172 or 661-4358826.**

IMPORTANT

Please call our customer service department for any consulting:

213-4467172

661-4358826

(8:30am - 5:30pm P.S.T.)

DATED PROOF OF PURCHASE IS REQUIRED FOR WARRANTY SERVICE.

AVIS

Veuillez appeler le service à la clientèle pour toutes questions au:

213-4467172

661-4358826

(8:30am - 5:30pm P.S.T.)

PREUVE D'ACHAT ORIGINALE REQUISE POUR SERVICE DE GARANTIE.

IMPORTANTE

Sólo hay que llamar nuestro departamento de servicio al cliente en caso de tener preguntas o inquietudes:

213-4467172

661-4358826

(8:30am - 5:30pm P.S.T.)

SE REQUIERE PRUEBA DE COMPRA CON FECHA PARA SERVICIO BAJO GARANTÍA.

Address: ROWAN ELECTRIC APPLIANCE LLC
28407 Ascent Way, Santa Clarita, CA 91350
Phone: 213-4467172 or 661-4358826