 
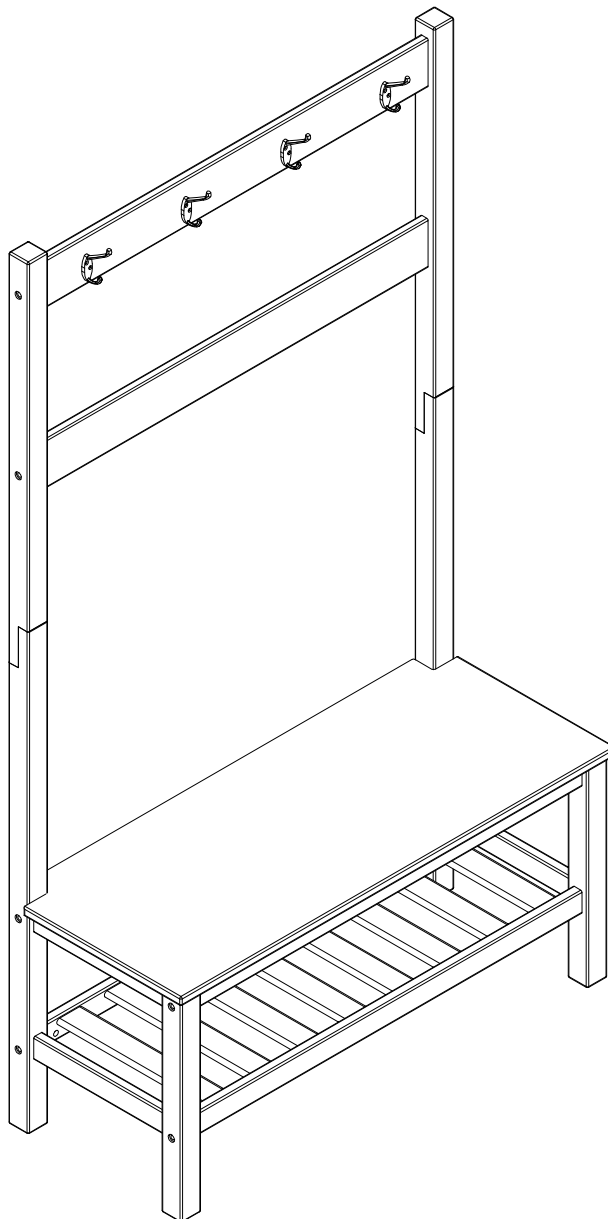 


INSTRUCTION

 
 
 
 
 
 
Coat Locker

 
 
 
Caution: Read owner's manual completely before assembly and use.

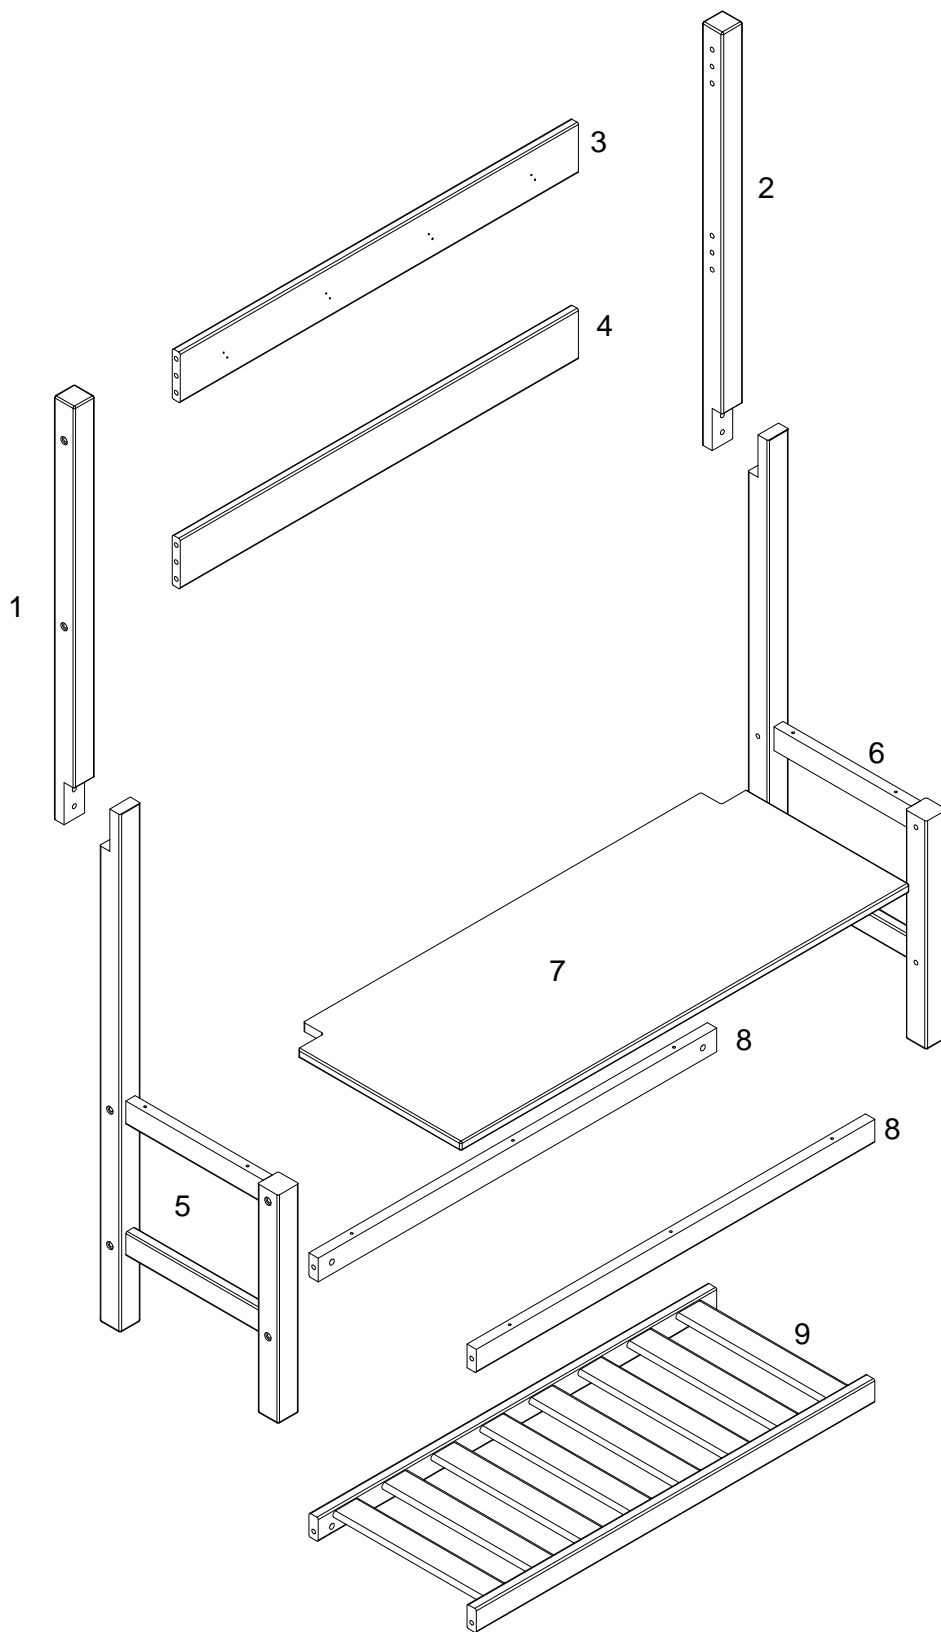


 
 


 

 
 


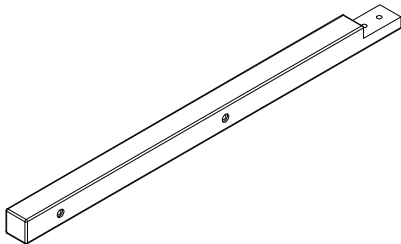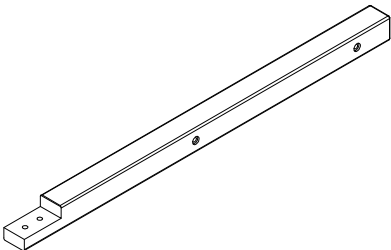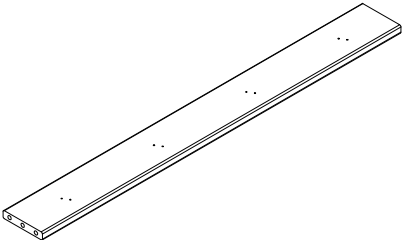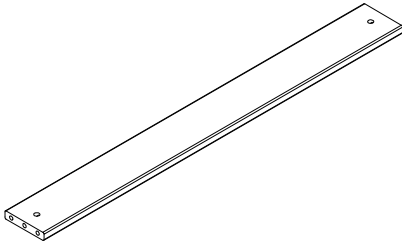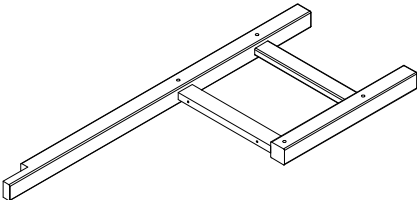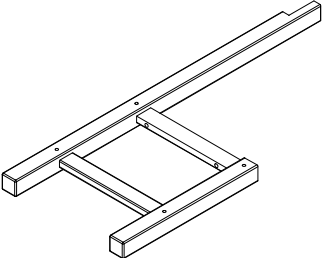 


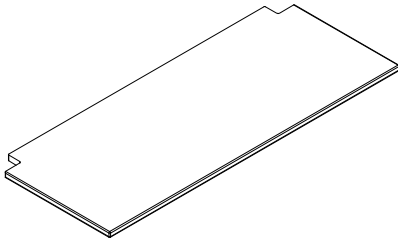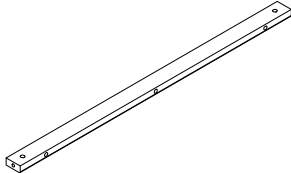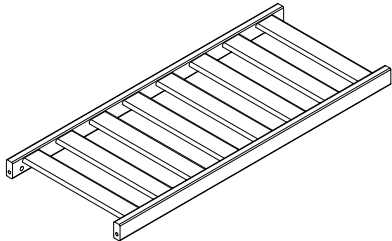
 
 


 
Parts :

	PARTS	Q'TY
1		01
2		01
3		01
4		01
5		01
6		01

	PARTS	Q'TY
7		01
8		02
9		01

 
 
 
Hardware:

	HARDWARE	Q'TY
A	 M6×35	04
B	 M6×80	12
C	 ø8×30	08
D	 M6×13	12
E	 M3.5×50	10
F	 M3×15	08
G		04
H	 M3.5×30	02
I		02
J		02
K		04
L	 M3.5×15	02
M		01

 
	SPARE HARDWARE	Q'TY
B	 M6×80	02
C	 ø8×30	01
D	 M6×13	02
E	 M3.5×50	02
F	 M3×15	01

Step By Step Assembly Instructions

Step 1 :

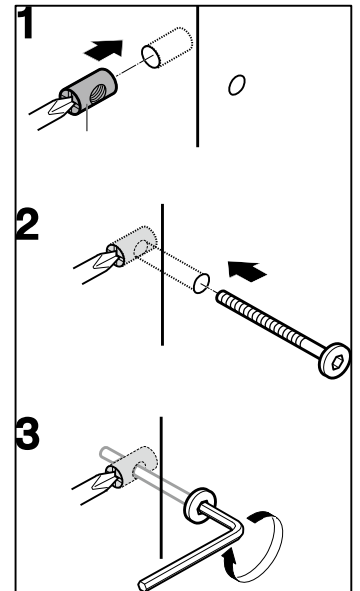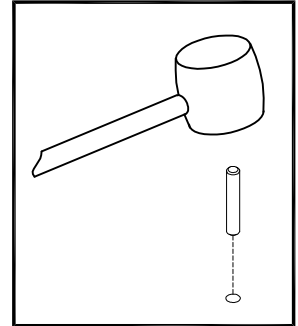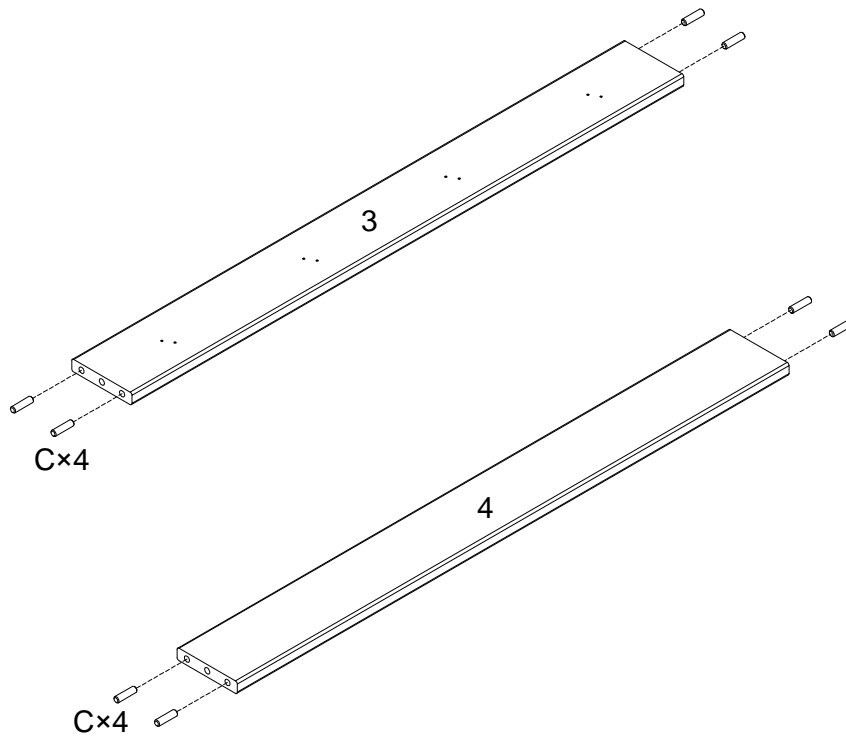 


Step 2 :

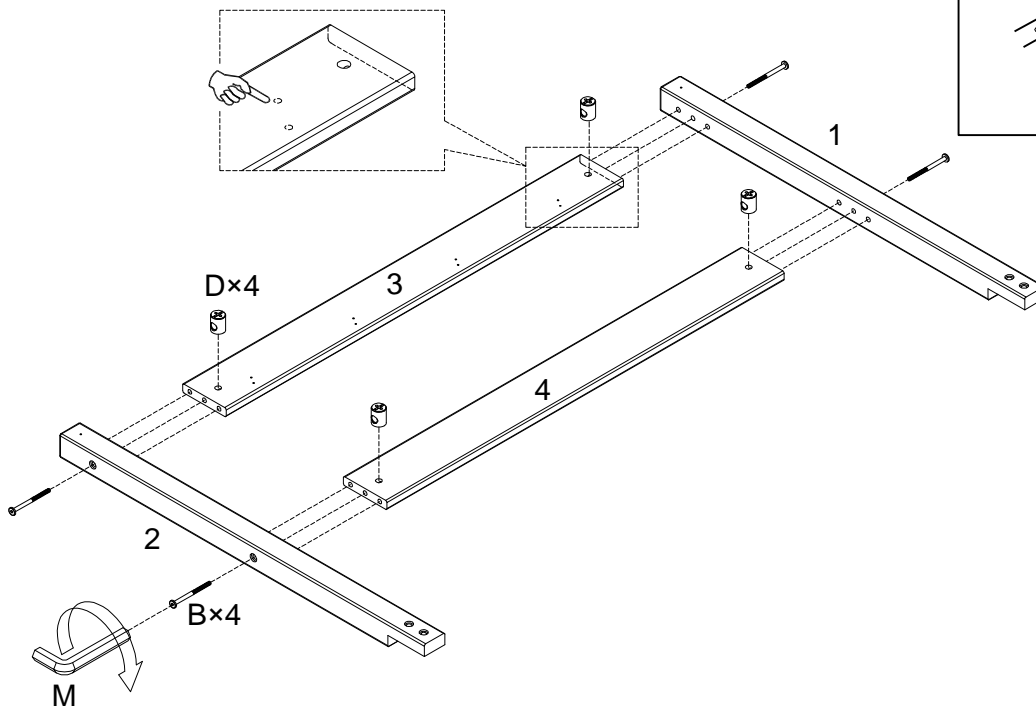 


Step By Step Assembly Instructions

Step 3 :

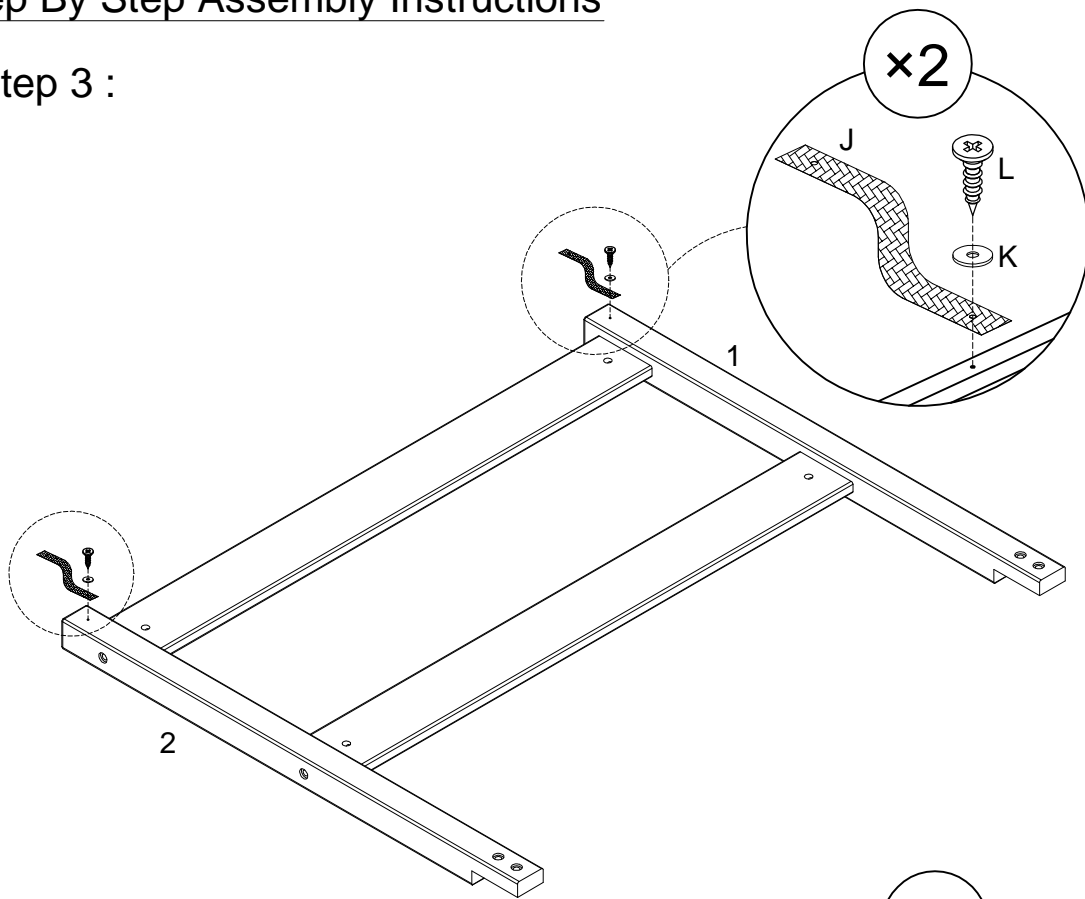 


Step 4 :

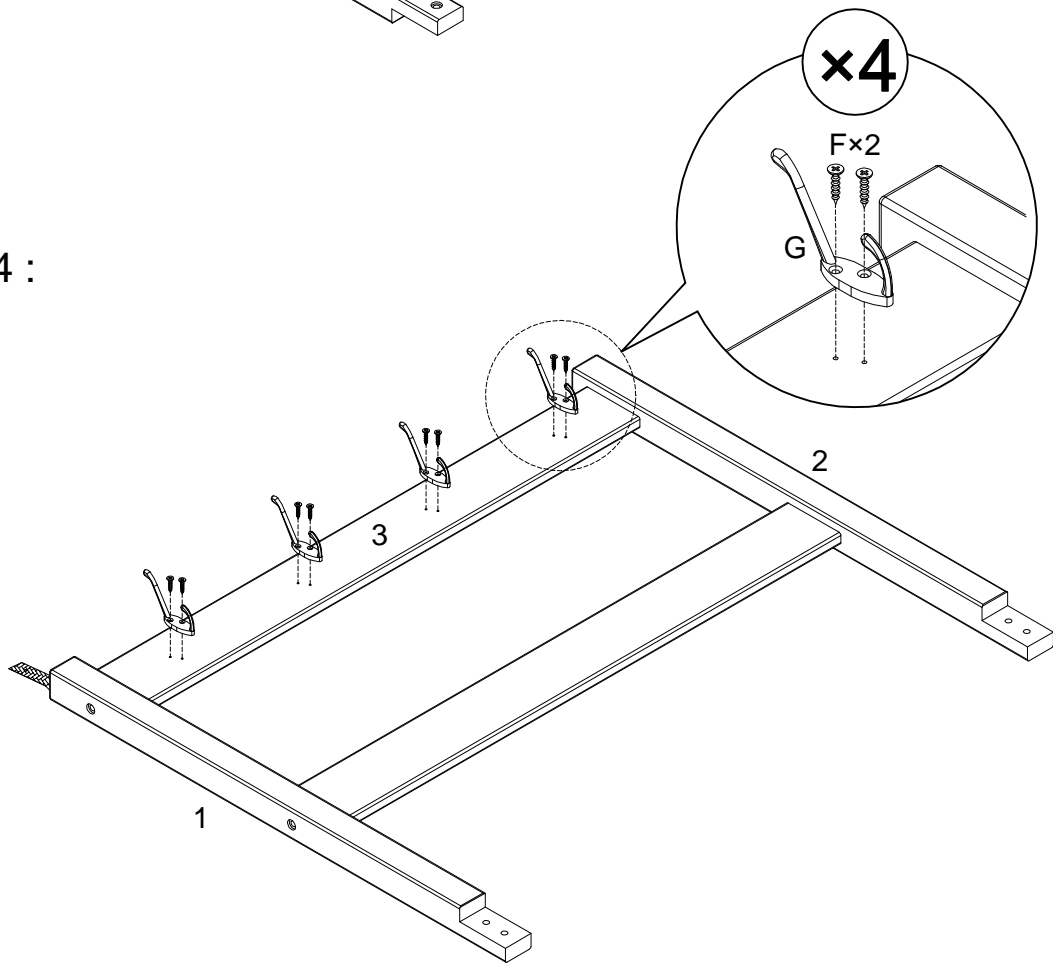 


Step By Step Assembly Instructions

Step 5 :

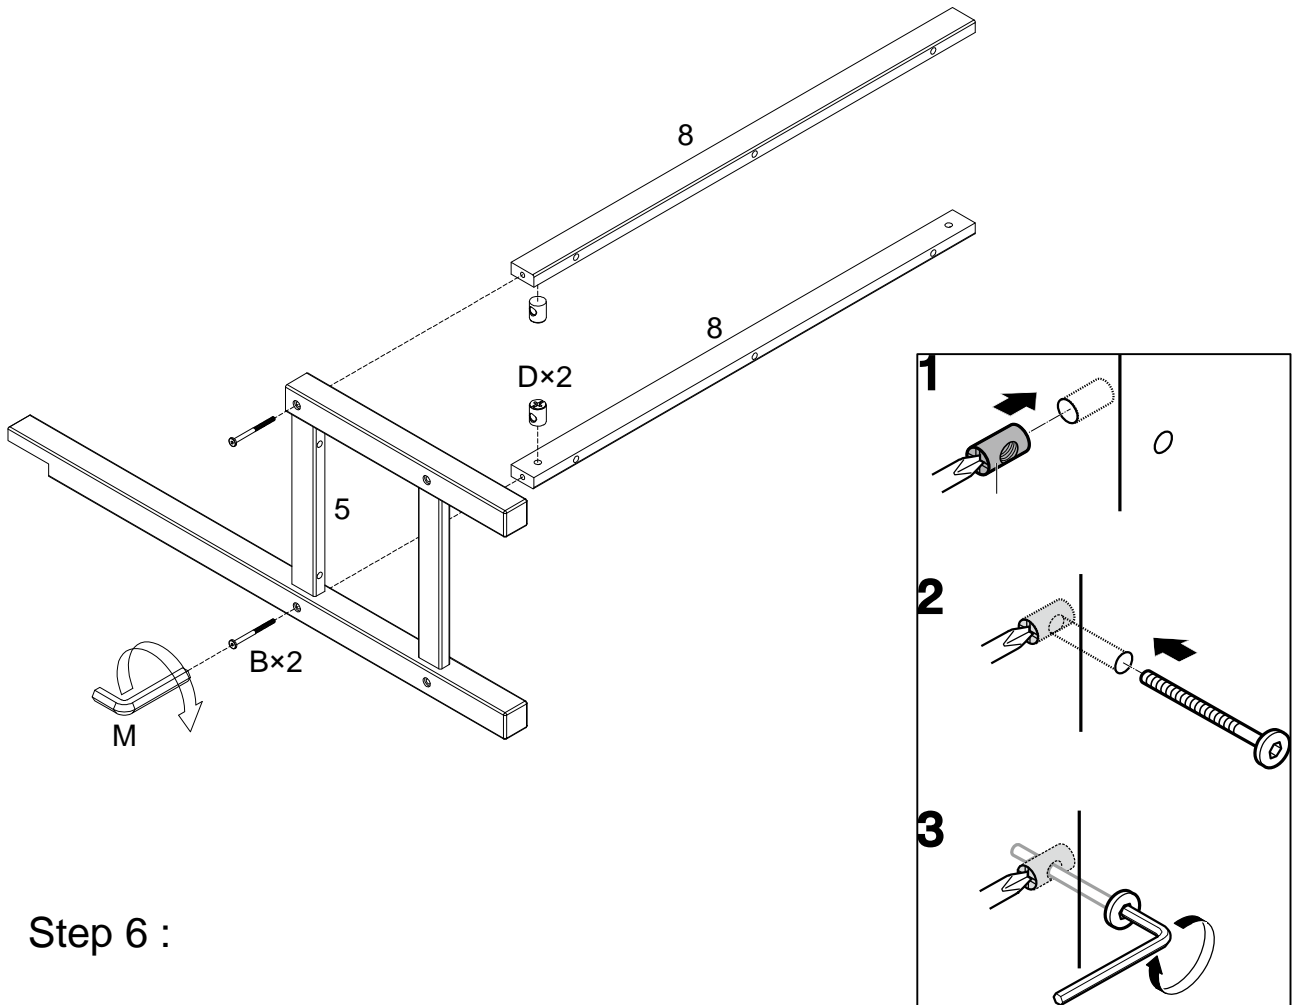 


Step 6 :

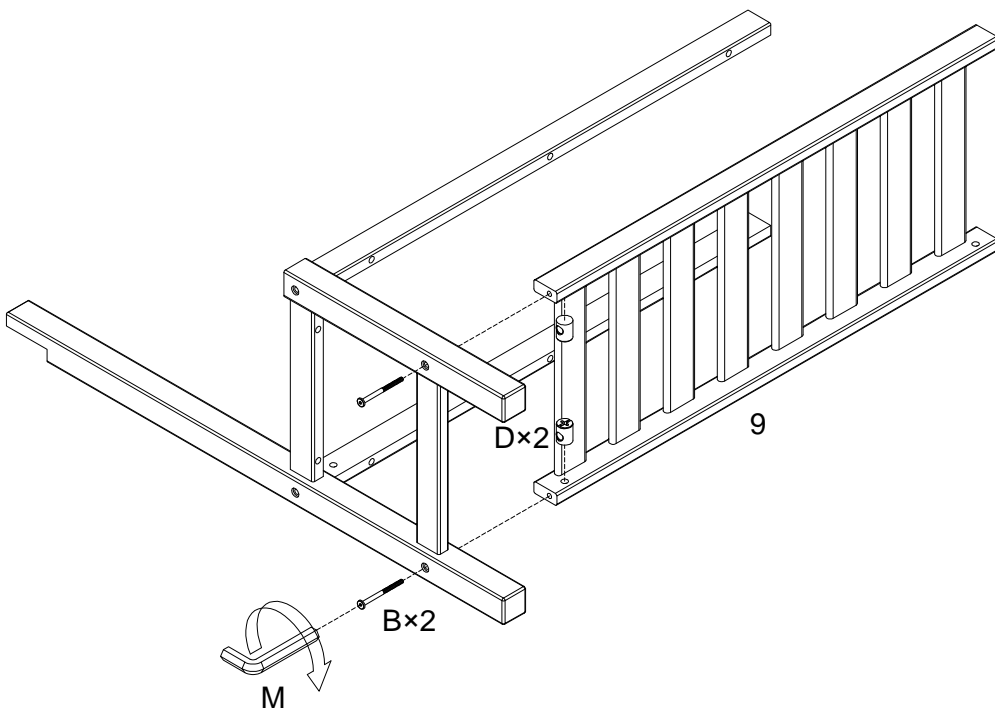

 
Step By Step Assembly Instructions

Step 7 :

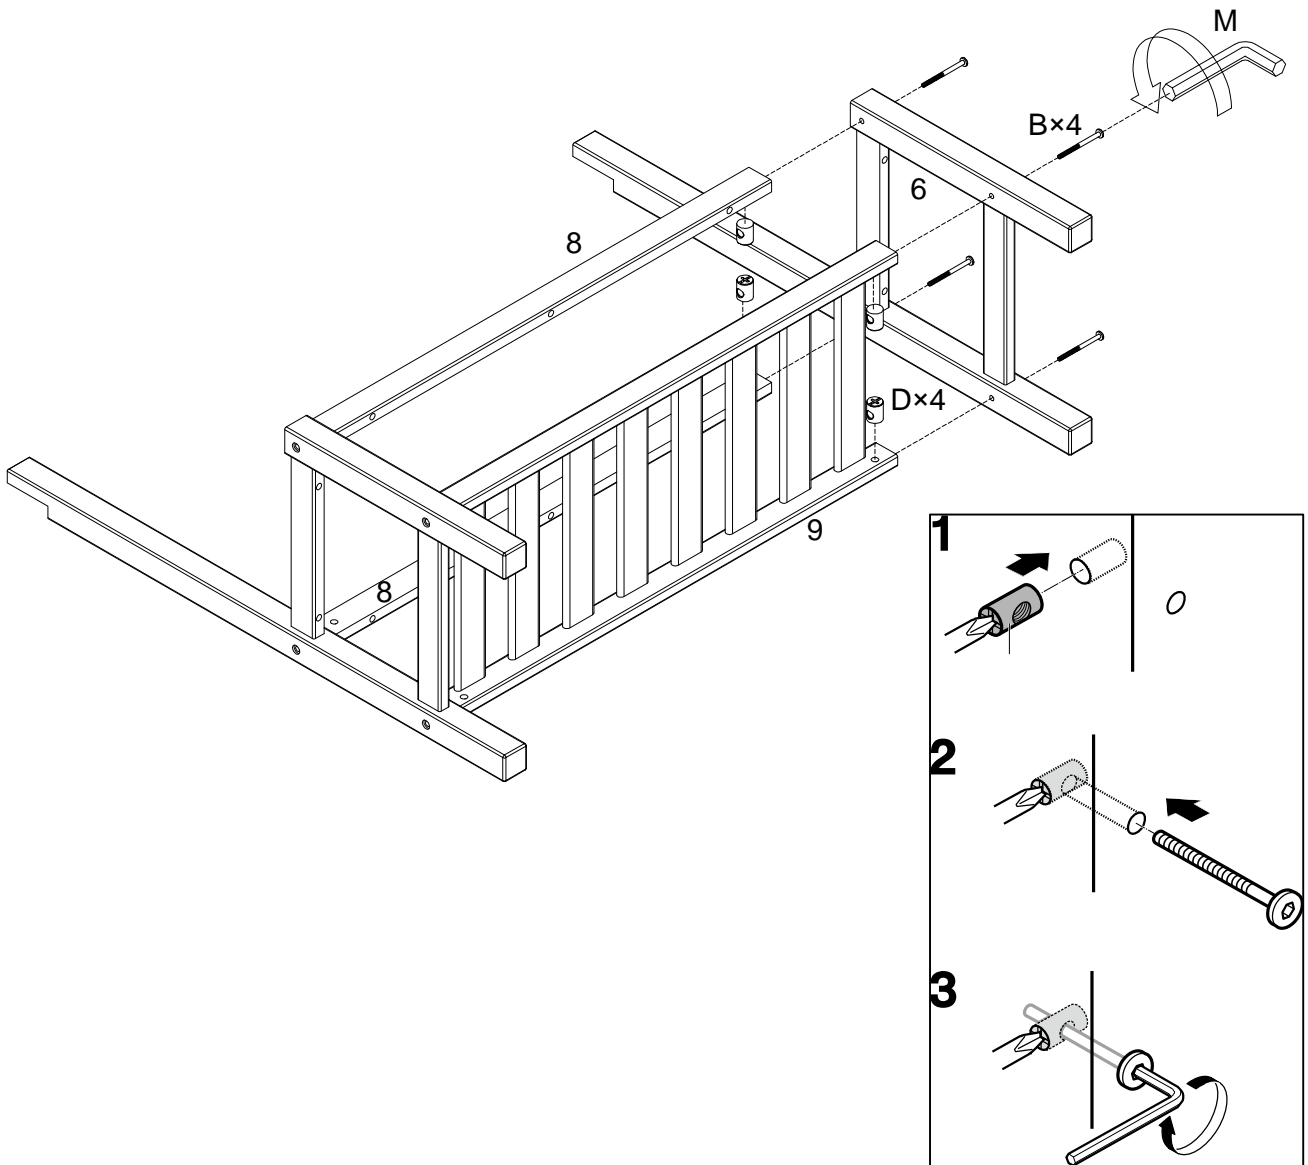

 
Step By Step Assembly Instructions

Step 8 :

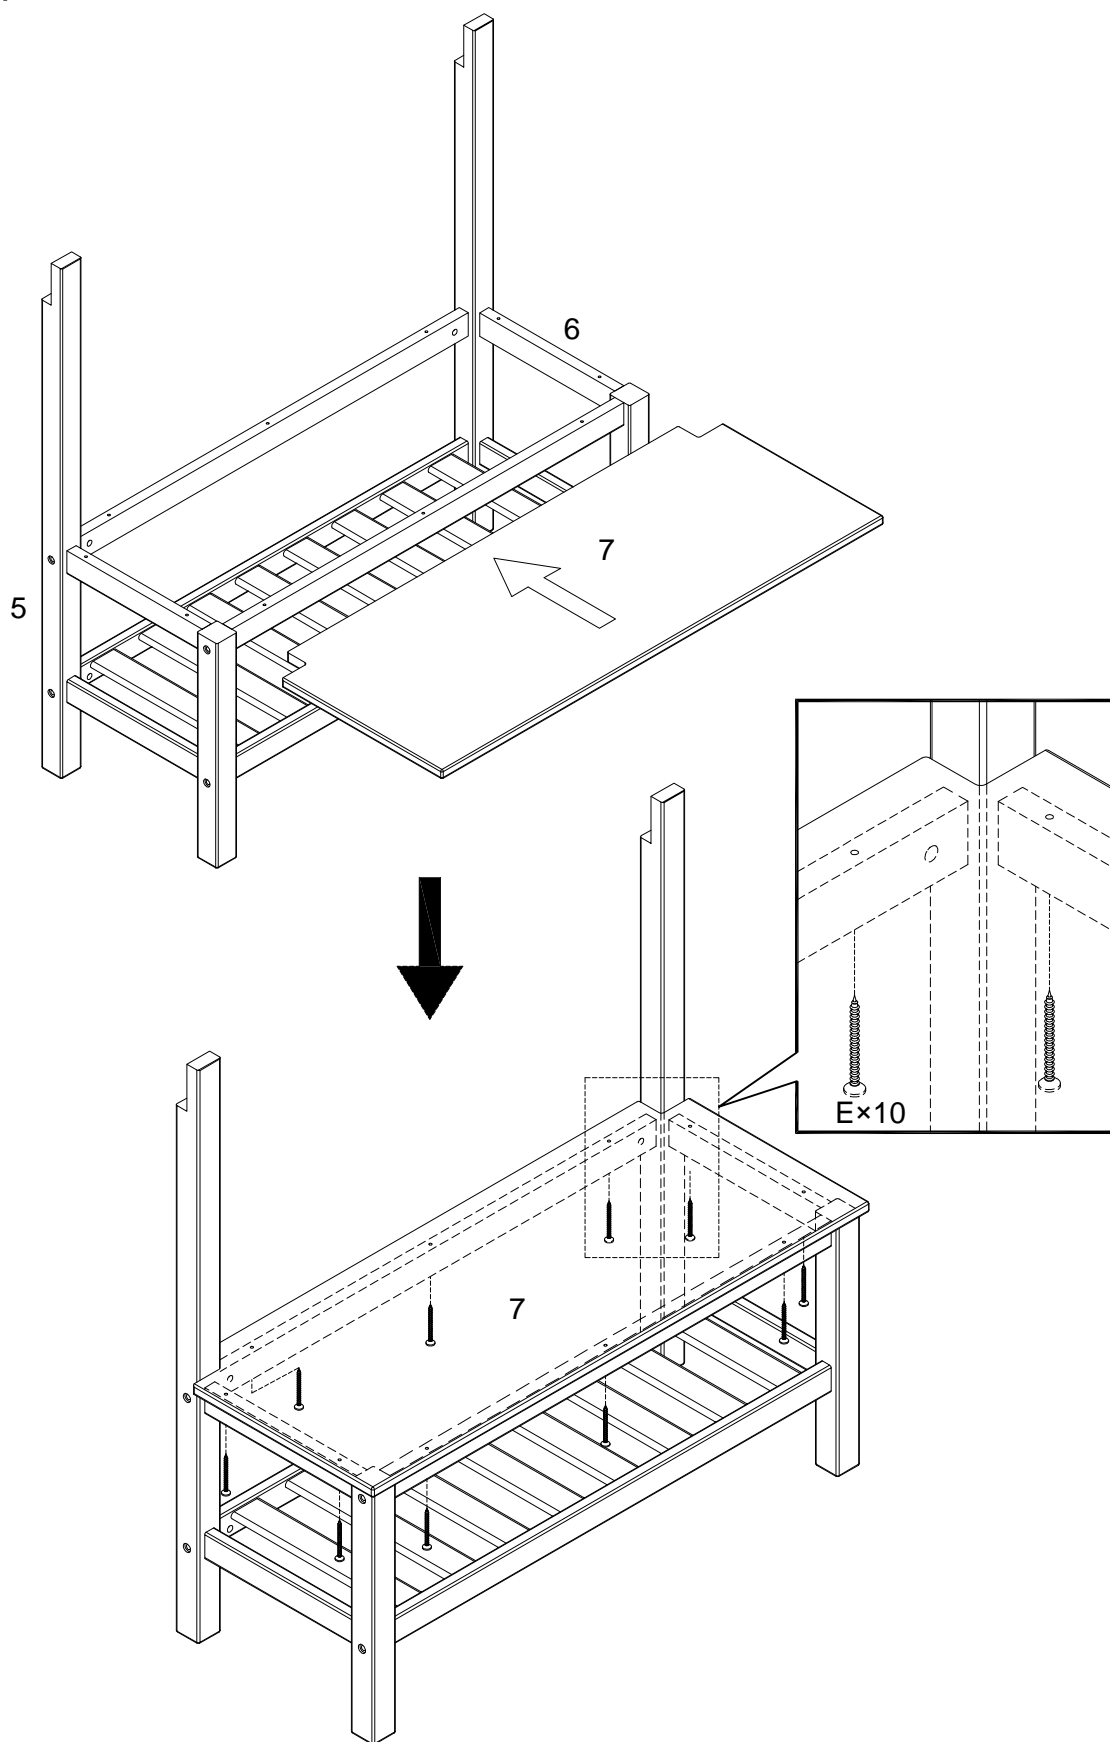

Step By Step Assembly Instructions

Step 9 :

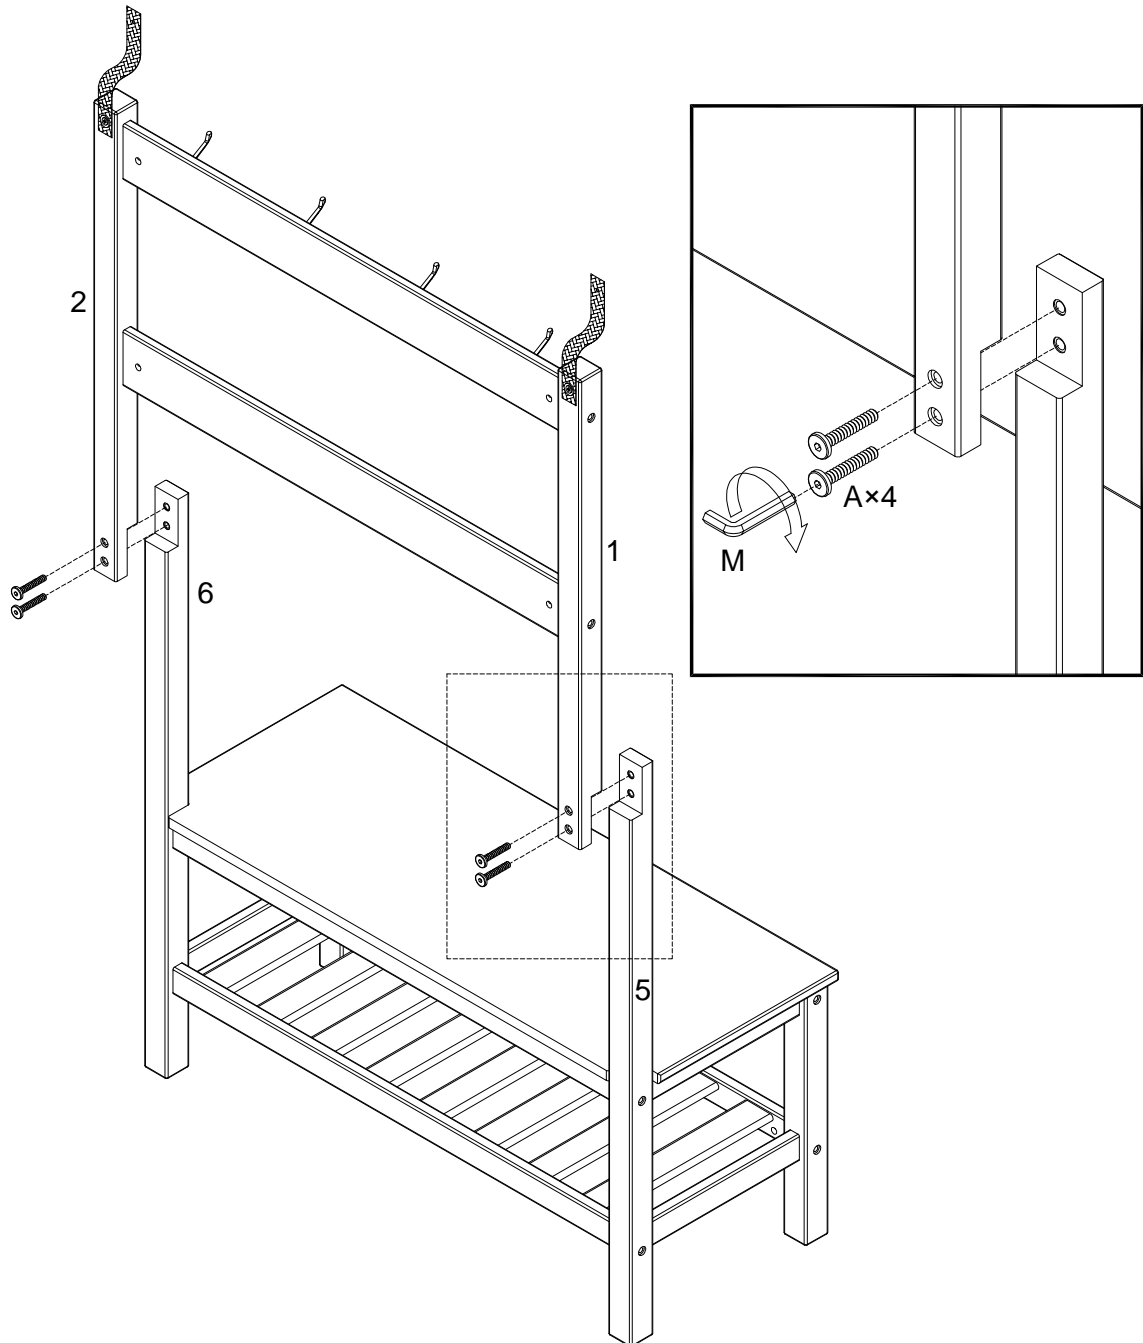

Step By Step Assembly Instructions

Step 10 :

