 












INSTALLATION

Product Manual


Version: 510058US-00-26A-HB

          Installation Instructions

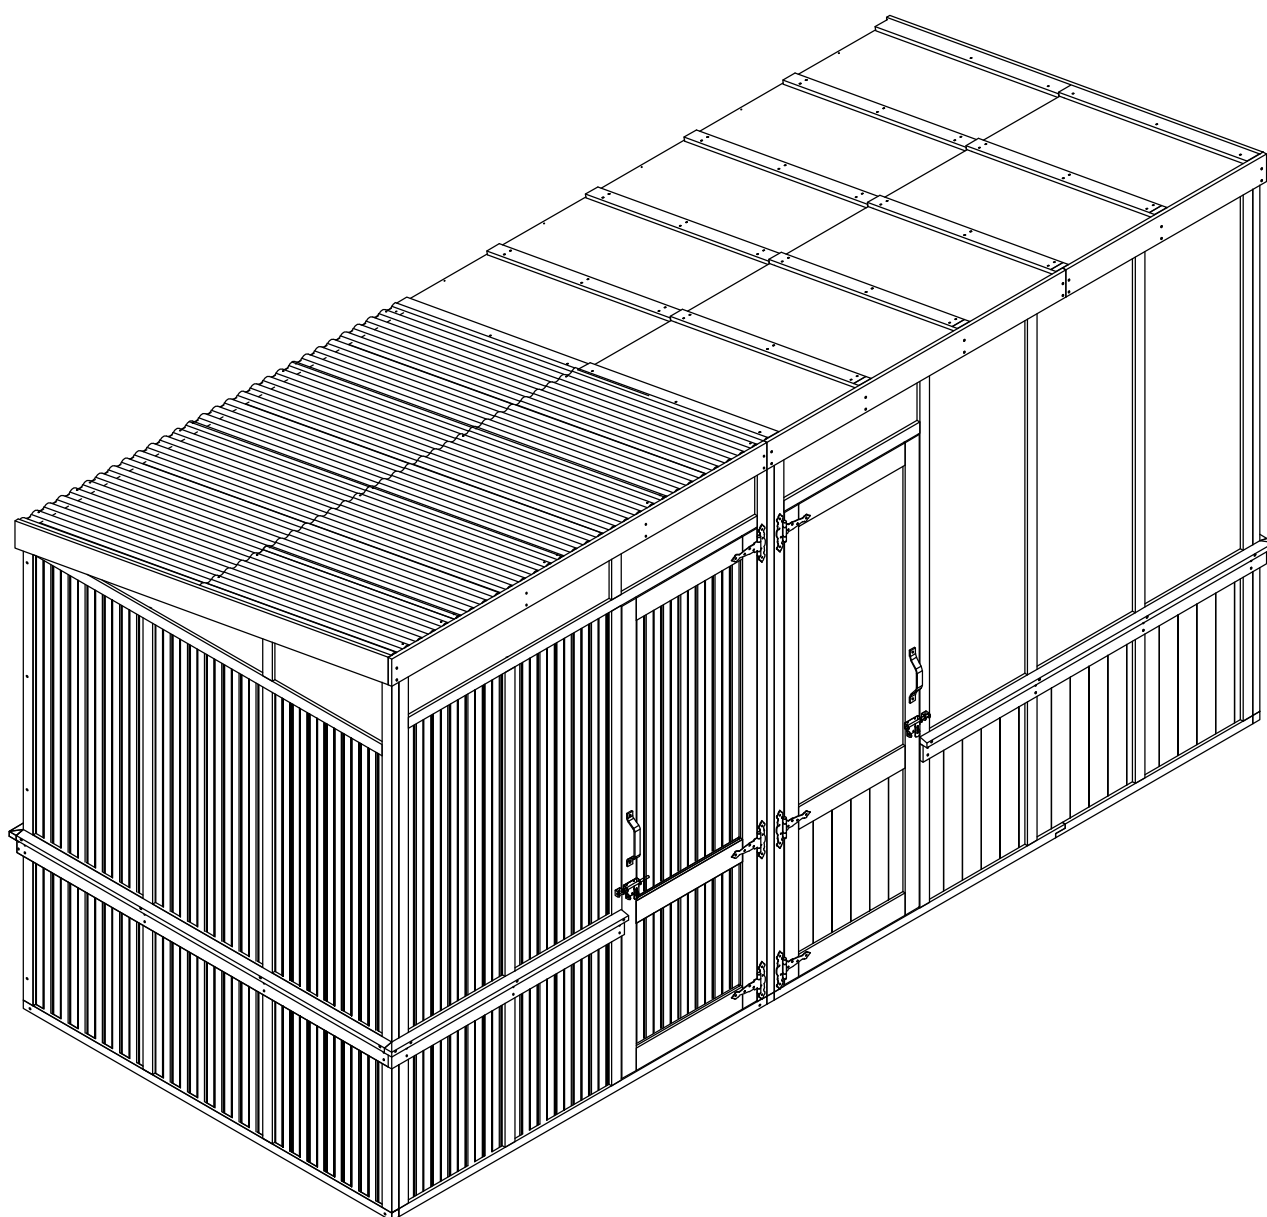


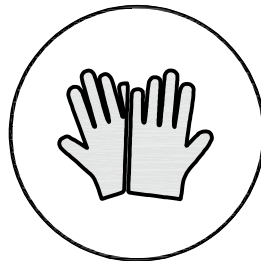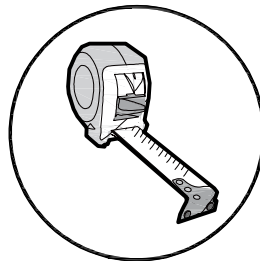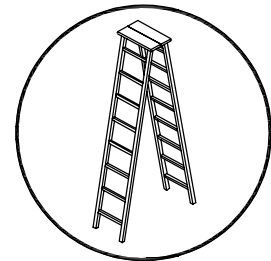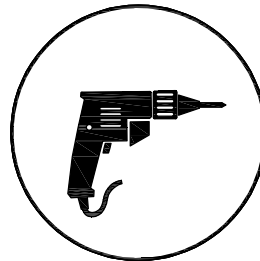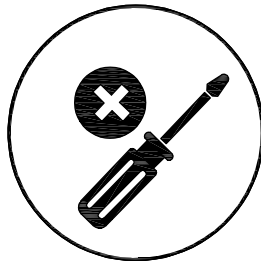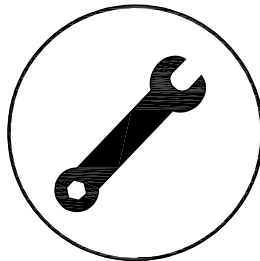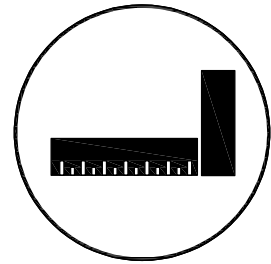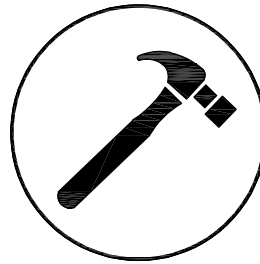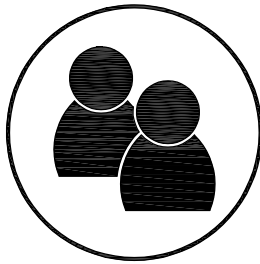

 Icons and their uses you will see throughout this manual

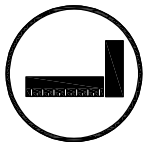

 You will need to make sure that your assembly is square before tightening your bolts.

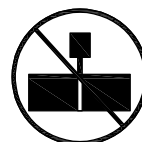


This icon warns you to not over tighten your bolts. This is to prevent structural damage and also splintering your wood.



For proper assembly you will need to ensure that your structure is level before proceeding to the next step.




This icon will show you what drill attachments are needed. For this example you will need a Phillips head attachment .

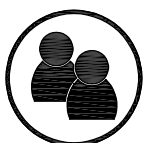 

Some steps in the assembly process will require an extra set of hands. Make sure you have a helper available.



 
This size of the open-end wrench on these icons should correspond to the size of the nut.

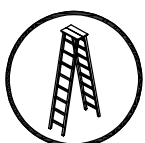

It is required for high-altitude installation




 We need to measure the size and use it




Wood Components (Not to Scale)

 
BOX 1/2

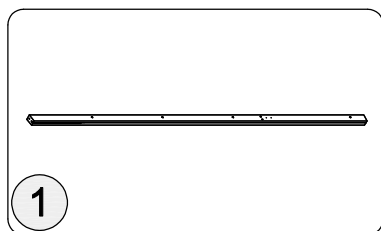


Left front pillar
Qty: 1

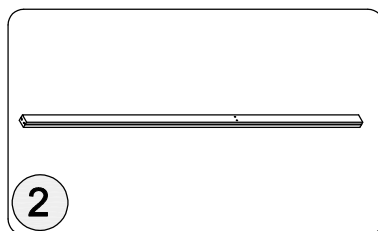 


Left center pillar
Qty: 2

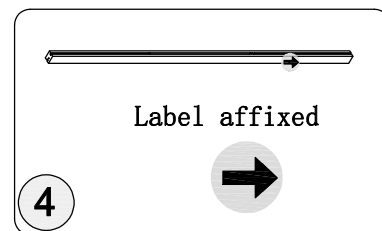 


Left crossbeam
Qty: 1

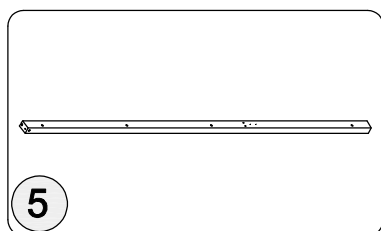 


Left rear pillar
Qty: 1

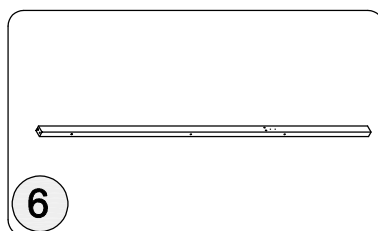 


Front left pillar
Qty: 1

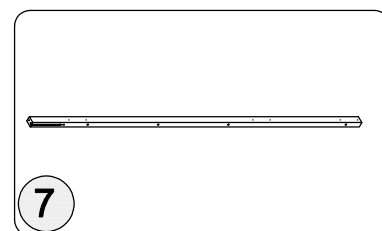 


Front right pillar
Qty: 1

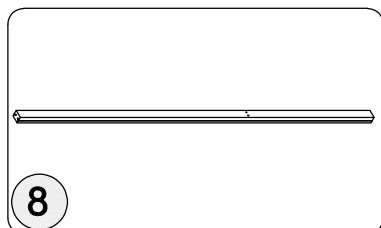 


Front center pillar
Qty: 1

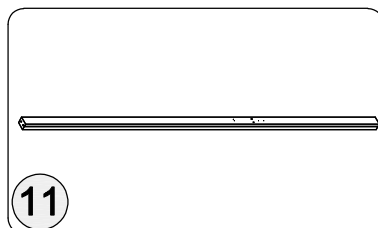 


Front center pillar
Qty: 1

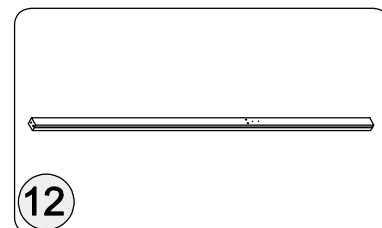 


Rear left pillar
Qty: 1

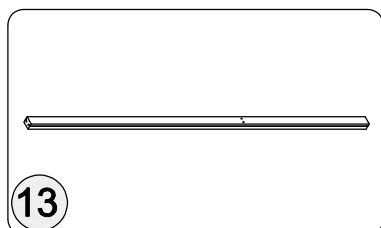 


Rear center pillar
Qty: 2

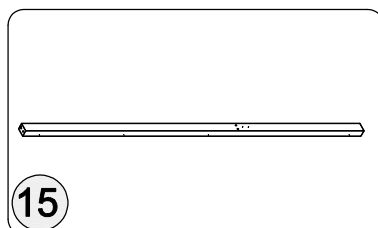 


Rear right pillar
Qty: 1

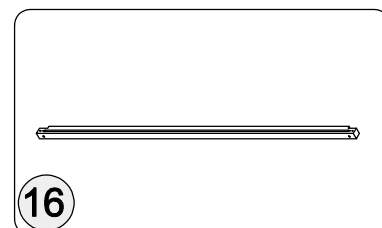 

Left foot strip
Qty: 1

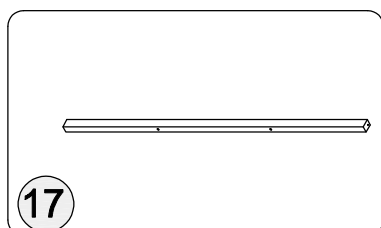 


Right foot strip
Qty: 1

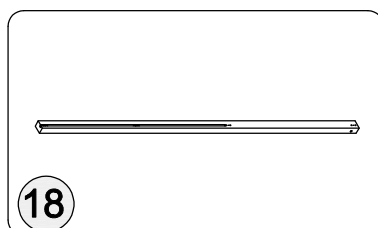 

Front foot strip
Qty: 1




 Rear foot strip
Qty: 1




Wood Components (Not to Scale)

 
BOX 1/2

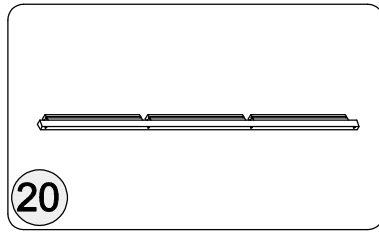


20
Left middle bar
Qty: 1

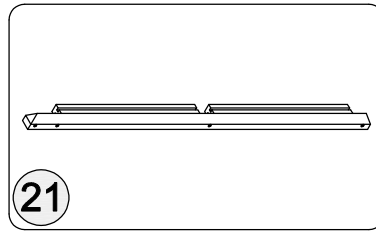 


21
Front middle clause
Qty: 1

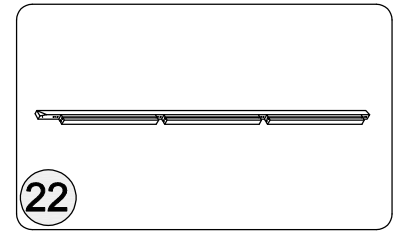 


22
Rear middle strip
Qty: 1

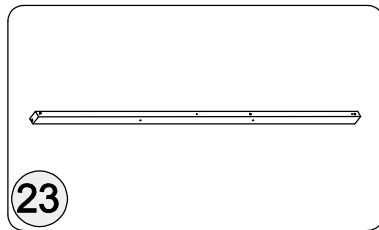 


23
Left beam
Qty: 1

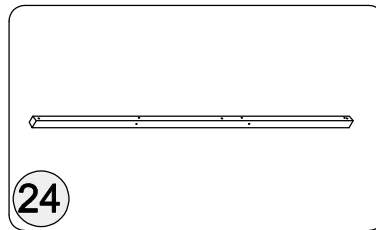 


24
Front beam
Qty: 1

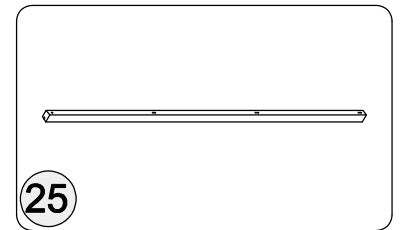 


25
Later Liang
Qty: 1

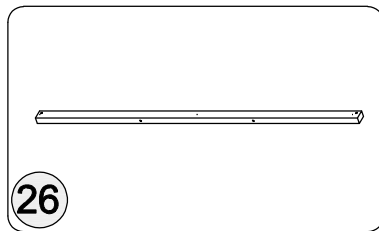 


26
Right beam
Qty: 1

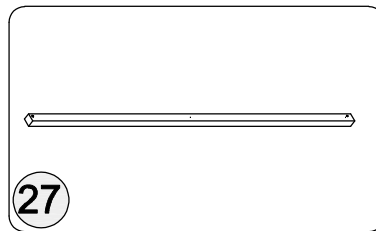 


27
Middle crossbeam
Qty: 2

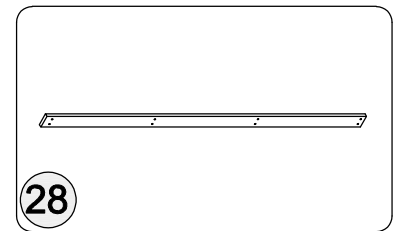 


28
side baffle
Qty: 1

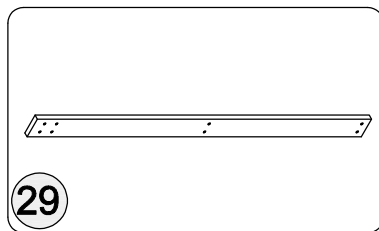 


29
front fender
Qty: 1

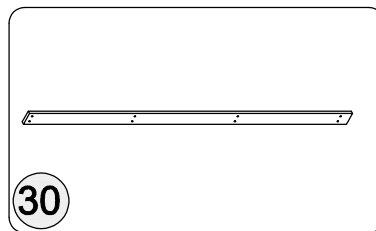 


30
Rear panel
Qty: 1

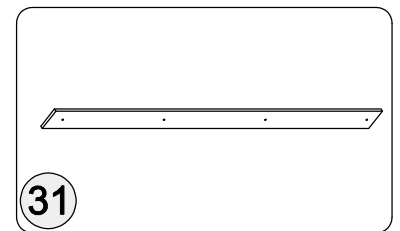 


31
Side roof panel
Qty: 1

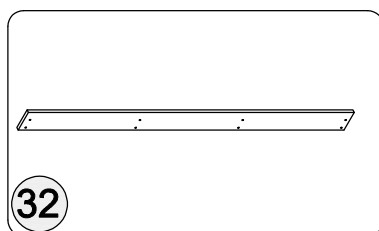 


32
Front roof panel
Qty: 1

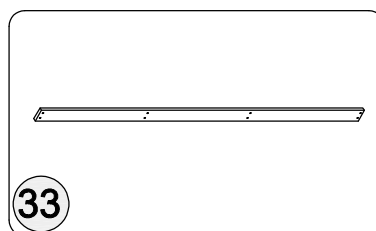 

33
Rear roof panel
Qty: 1

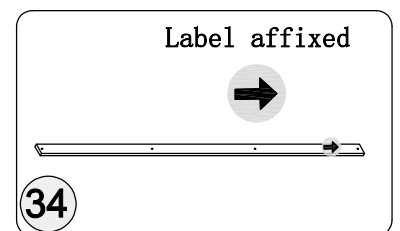 


34
Top support strip
Qty: 3

 

Wood Components (Not to Scale)

 
BOX 1/2

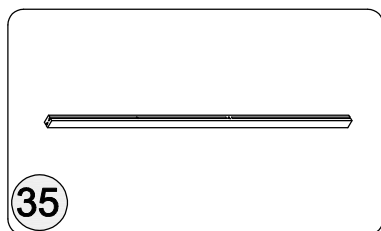

35

Front horizontal bar

 
Qty: 1

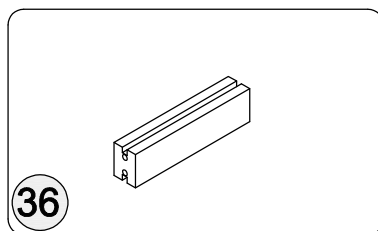

36

Septum strip

 
Qty: 1

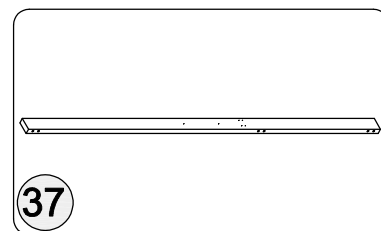

37

Left door strip

 
Qty: 1

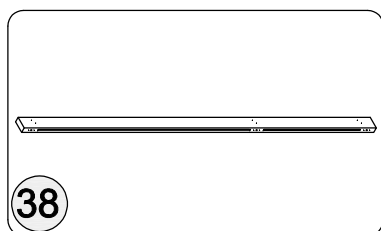

38

Right door strip

 Qty: 1

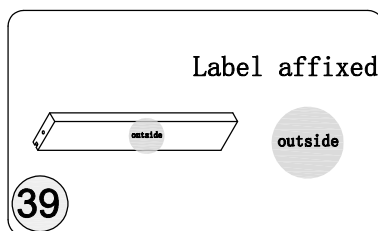


Label affixed

39

Door up strip

 
Qty: 1

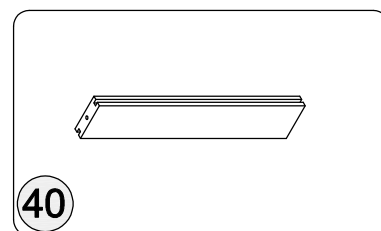

40

Door middle strip

 
Qty: 1

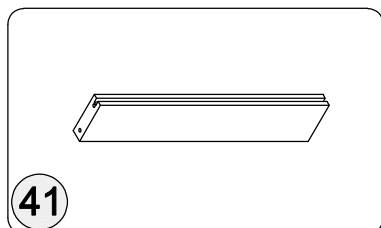

41

Door down strip

 
Qty: 1

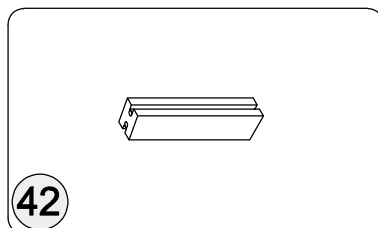

42

Side partition strip

 
Qty: 1

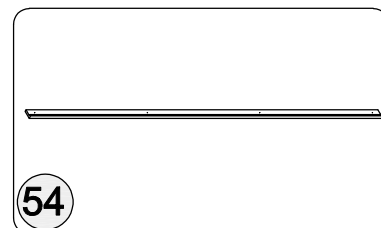

54

retaining strip

 Qty: 1

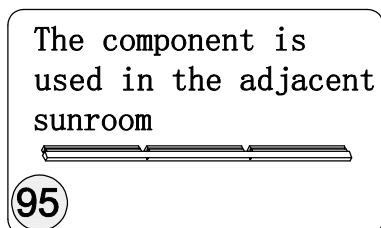


95

The component is
used in the adjacent
sunroom















Middle Strip


















Qty: 1

 
Manual




Wood Components (Not to Scale)

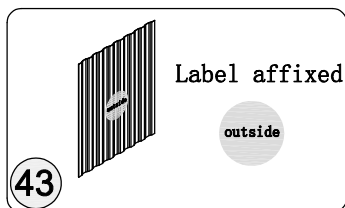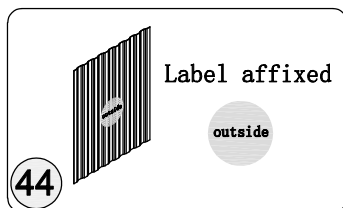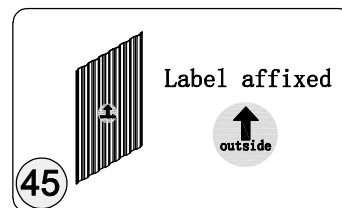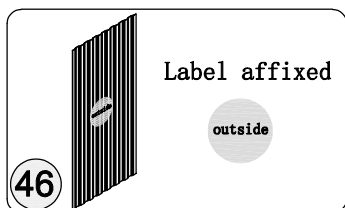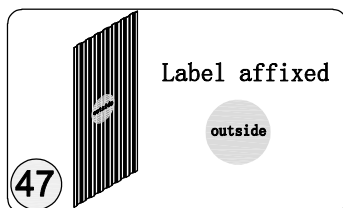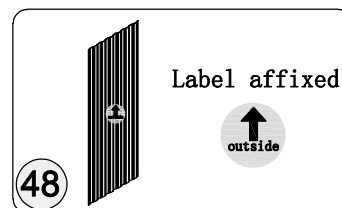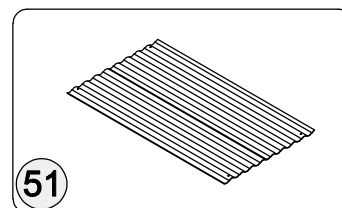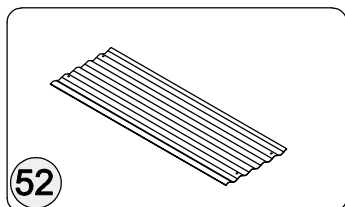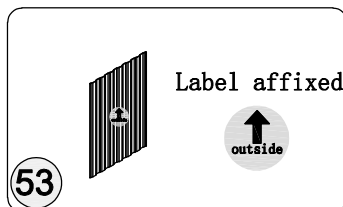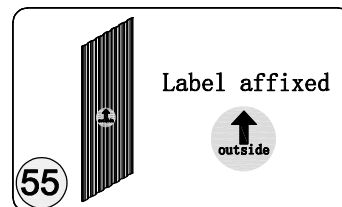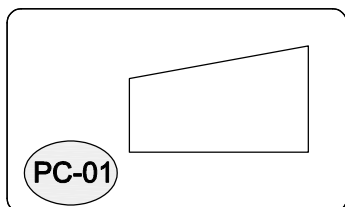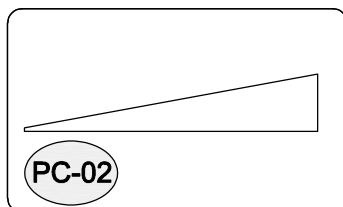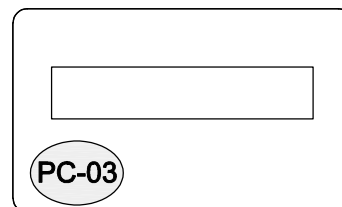             
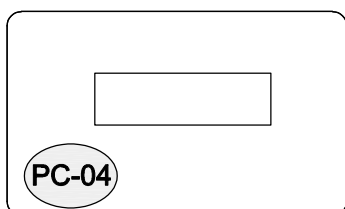 
BOX 2/2**Side lower core board**
Qty: 3**Rear core board**
Qty: 3**Front lower core board**
Qty: 1**Side core board**
Qty: 3**Rear core board**
Qty: 3**Front upper core board**
Qty: 1**Door core board**
Qty: 1**Underdoor core board**
Qty: 1**top cover plate**
Qty: 6**top cover plate**
Qty: 2**Front lower core board**
Qty: 1**Front upper core board**
Qty: 1**Side sunlight panel**
Qty: 1**Side sunlight panel**
Qty: 1**Front Sunlight Panel**
Qty: 1**Front Sunlight Panel**
Qty: 1**Hardwares**

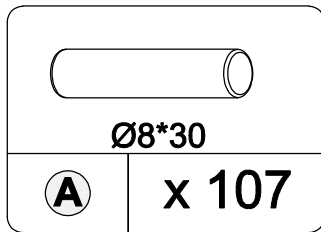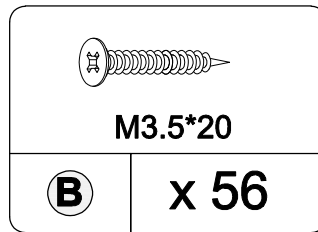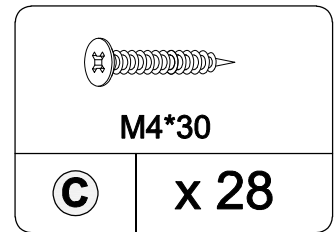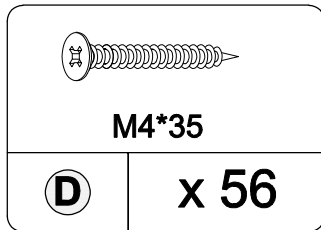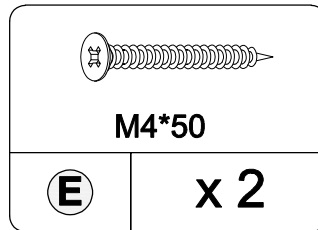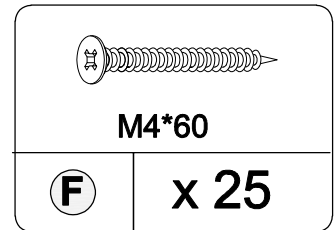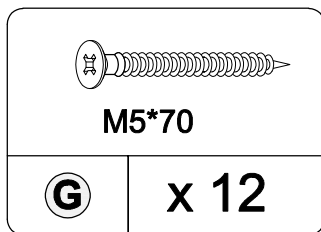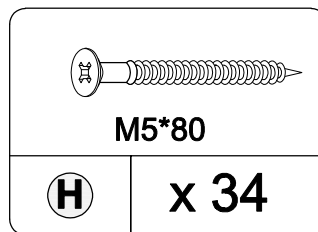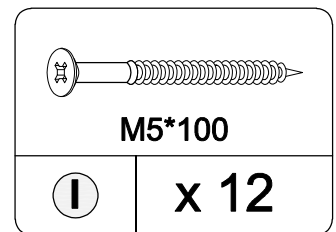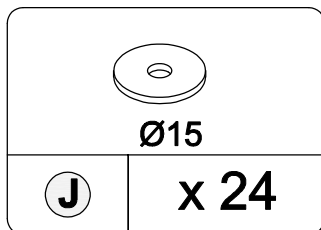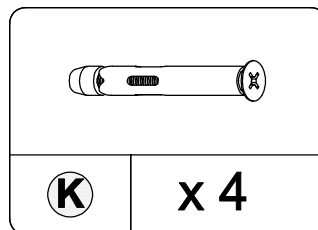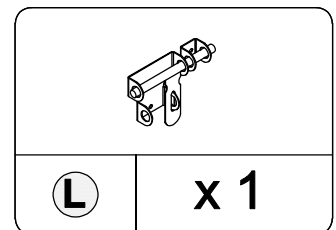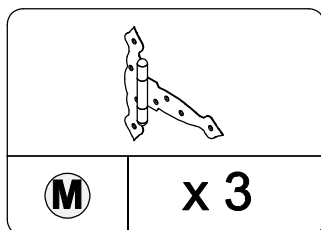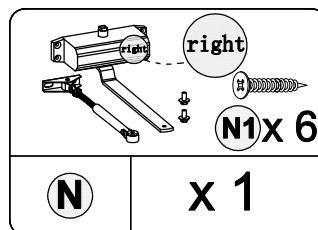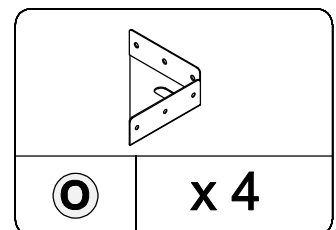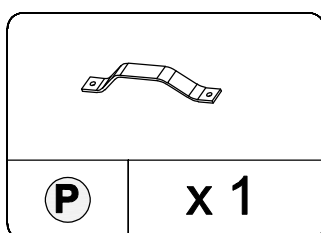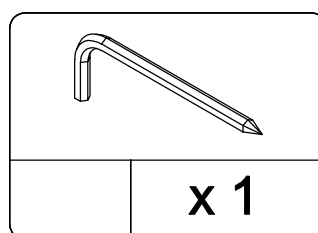                 Hardware Components

 Wooden tenons

 black screw

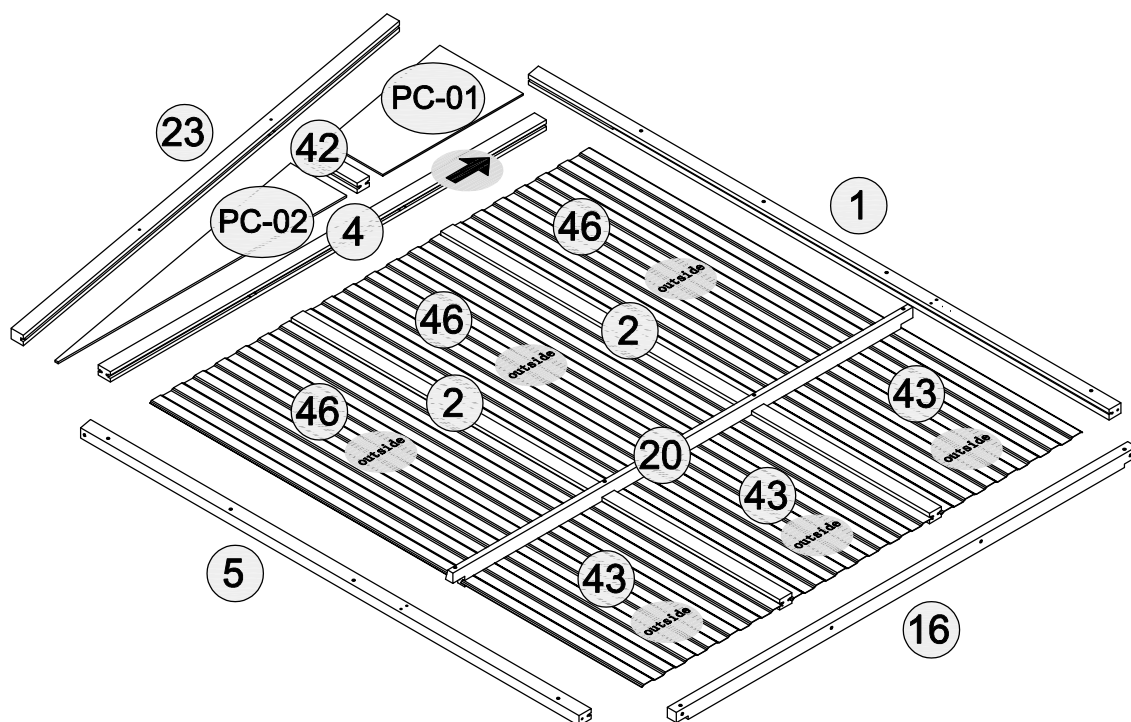screw

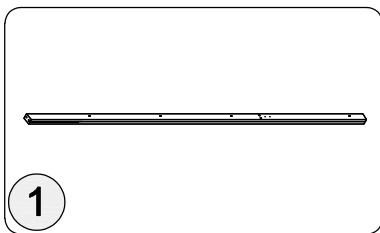  Screw

Screw

Screw

Screw

Screw

Screw

Gum Pad

Earth screw

plug

Hinge

gas spring

corner mark

Lam door

Hex key

 


1. It is recommended to first locate and gather all the parts according to this diagram, which will facilitate quick installation later.







Left front pillar
Qty: 1

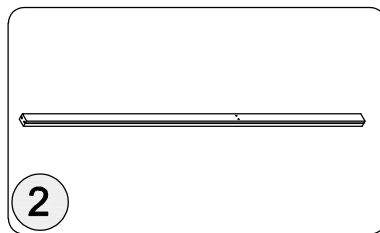



Left center pillar
Qty: 2

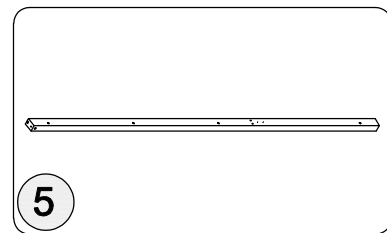 

Left rear pillar
Qty: 1

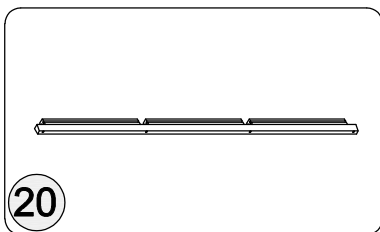 



Left middle bar
Qty: 1

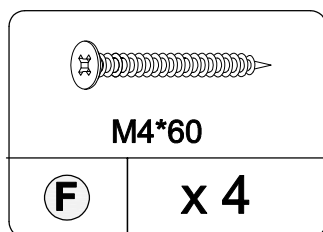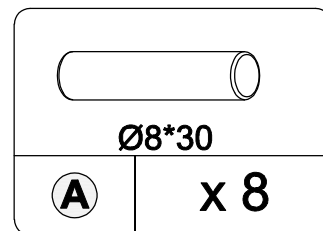  

1. Connect with hardware A first, then install with hardware F

  
2. Component 20 should be divided into upper and lower parts

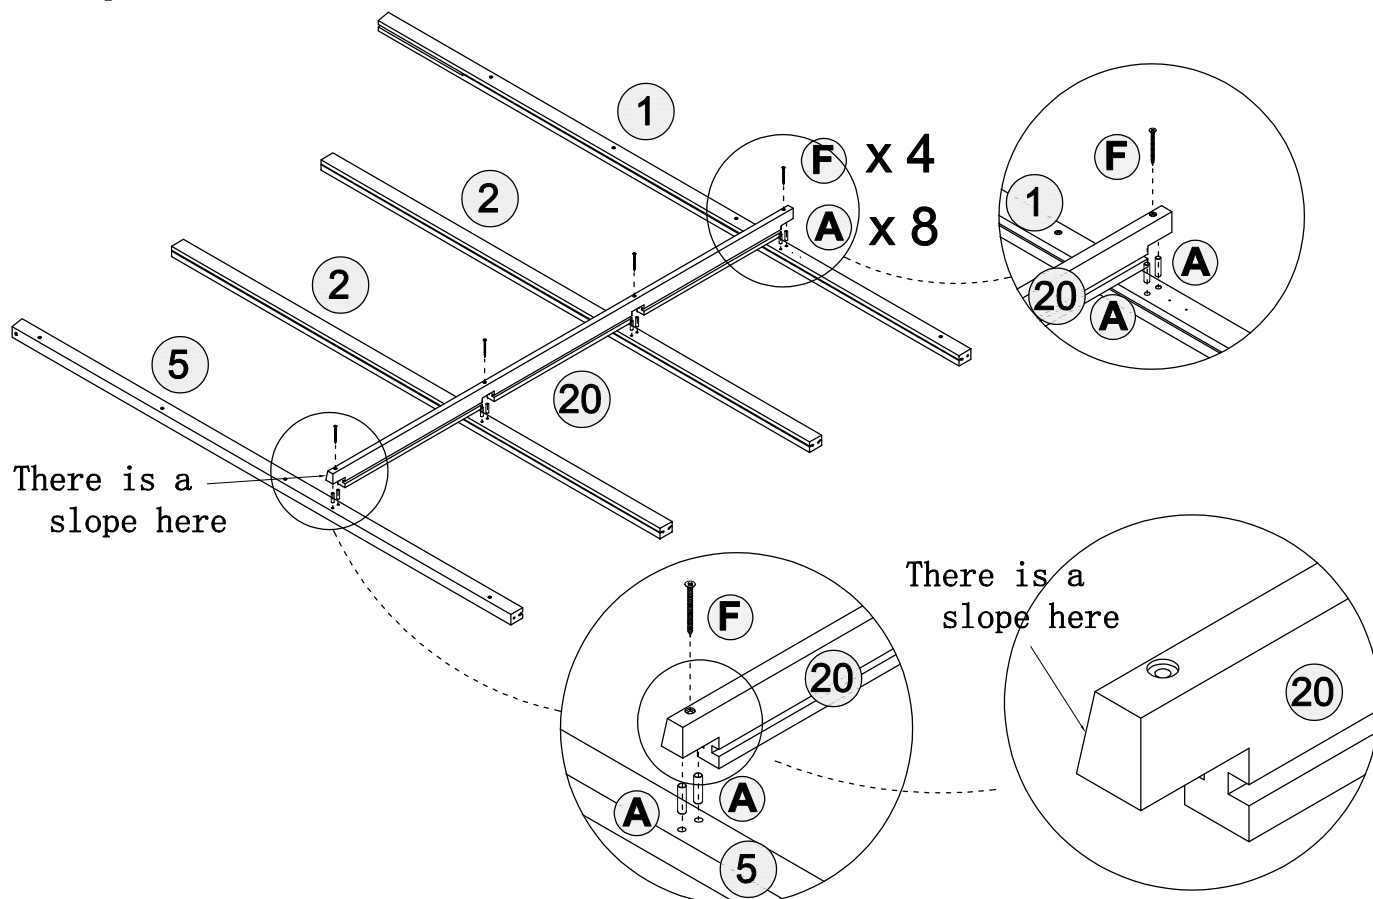


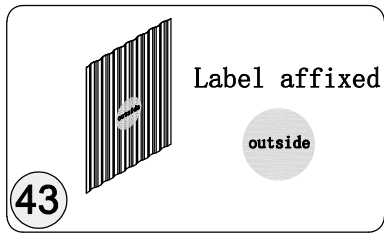

Side lower core board
Qty: 3

  1. Insert component 43 into the slot

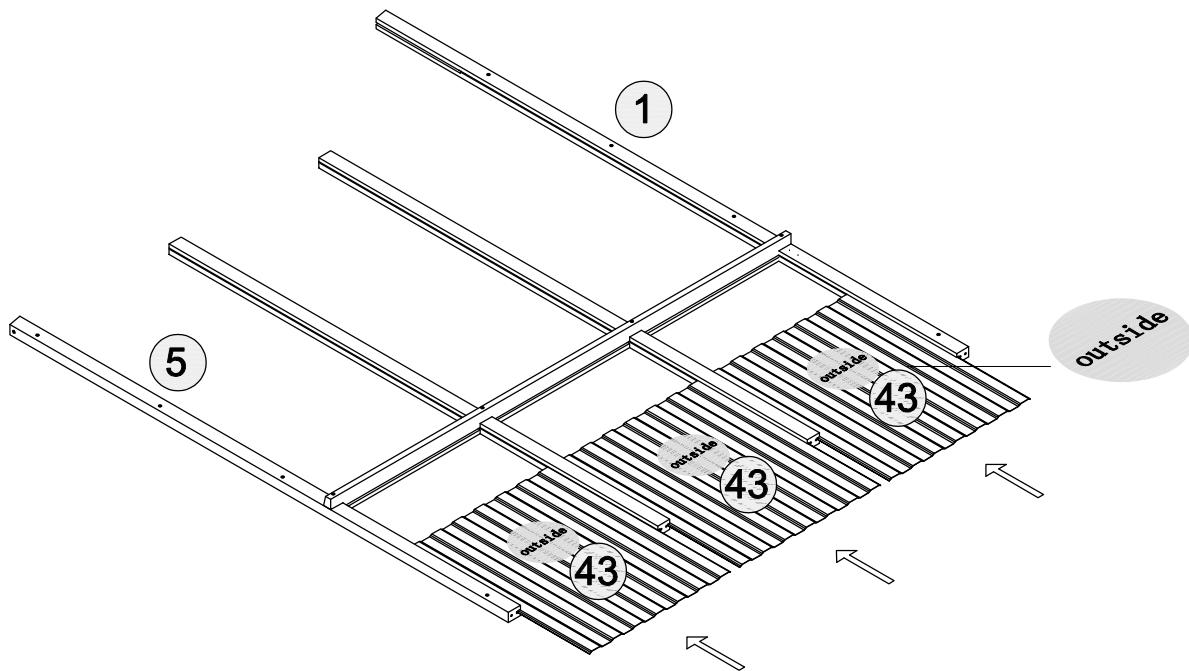

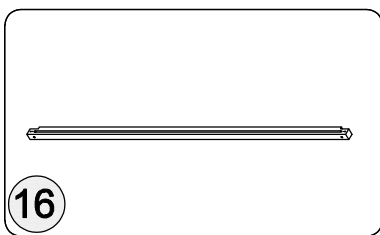

Left foot strip
Qty: 1



Ø8*30

A

x 8

 


 
M5*80

H

x 4


1. Connect with hardware A first, then install with hardware H

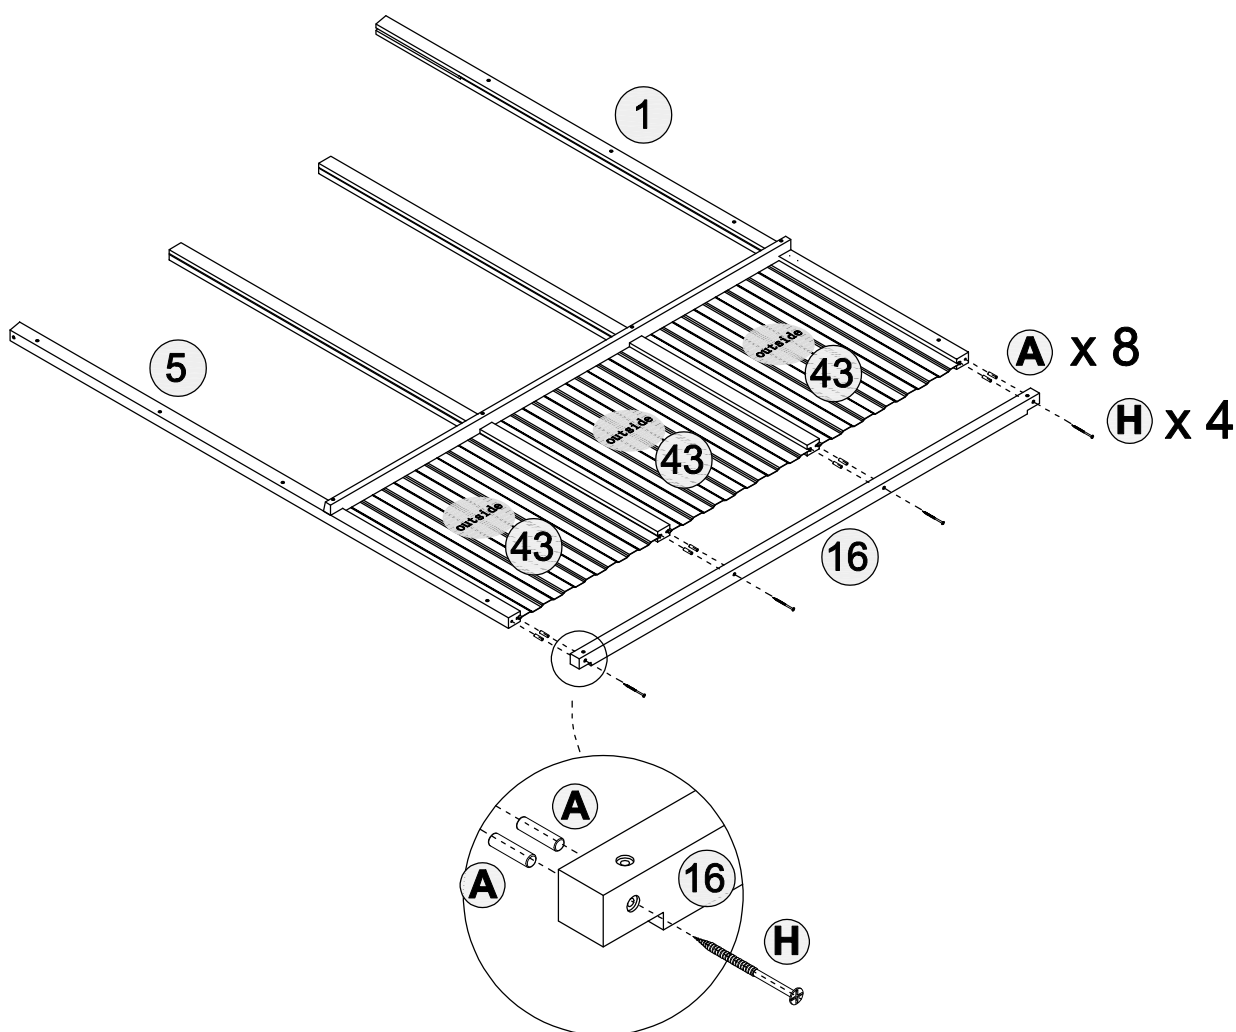


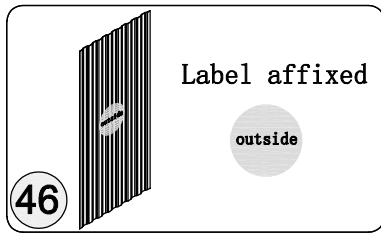



Side core board
Qty: 3

  1. Install component 46 into the slot

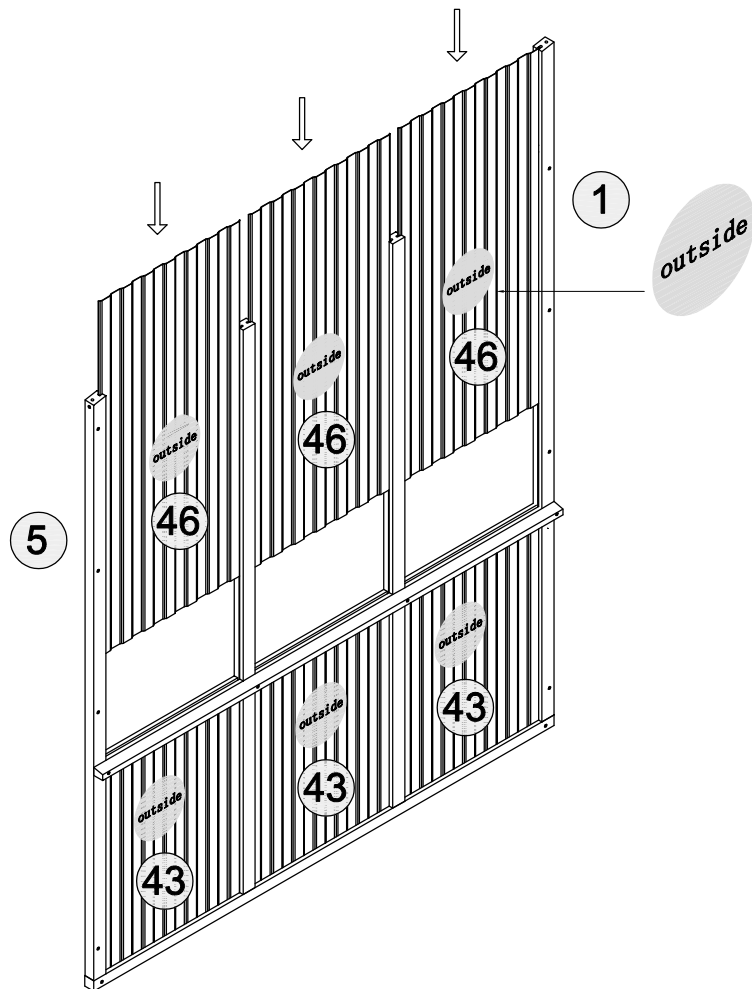

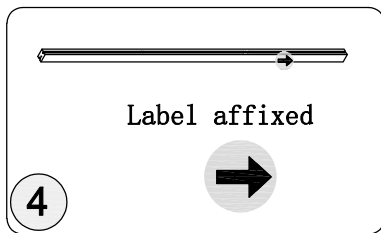




Left crossbeam
Qty: 1

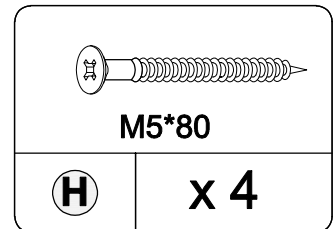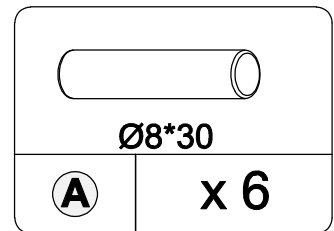  

1. First, install hardware A on both ends of component 4
2. Pull apart component 1 and component 5 slightly,
3. Connect with hardware A first, then install with hardware H

   Pay attention to the orientation of the components

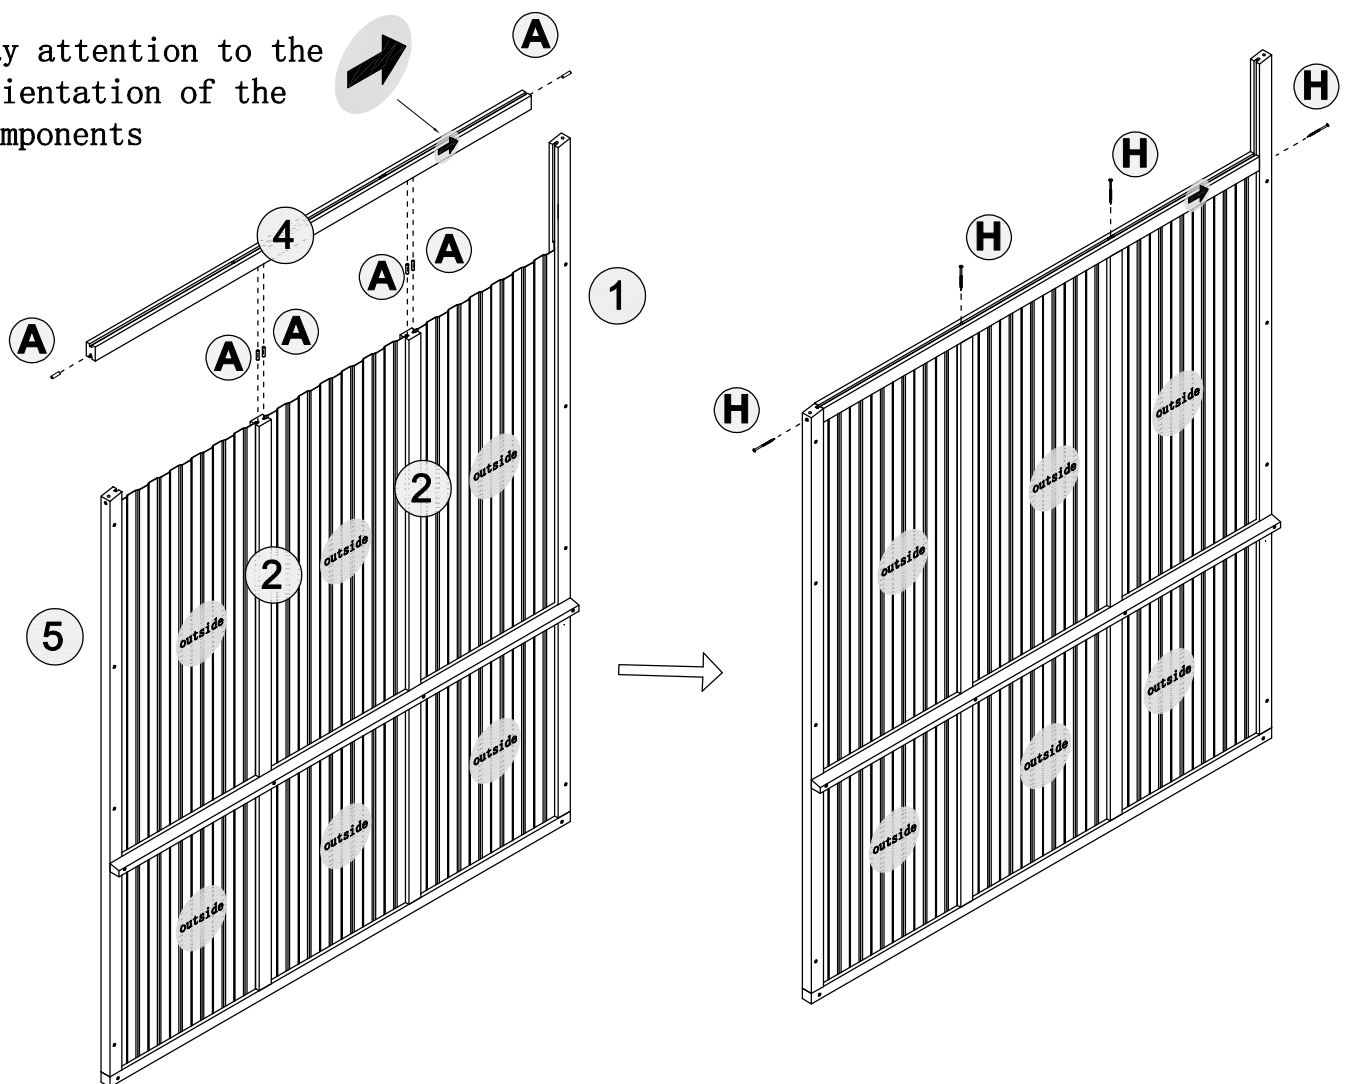


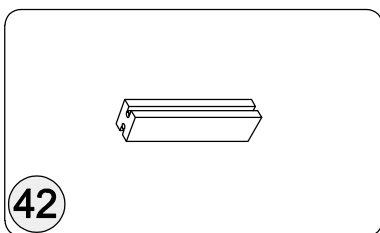

42

Side partition strip

 
Qty: 1

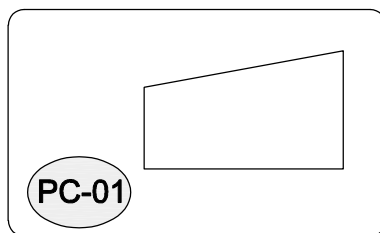

PC-01

Side sunlight panel

 
Qty: 1

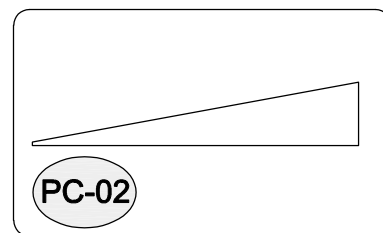

PC-02

Side sunlight panel

 Qty: 1

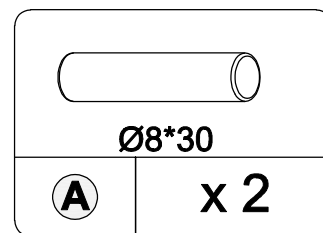



Ø8*30

A

x 2

  1. After connecting component 42 with hardware A, components PC-01 and PC-02 are placed in the slots along the way

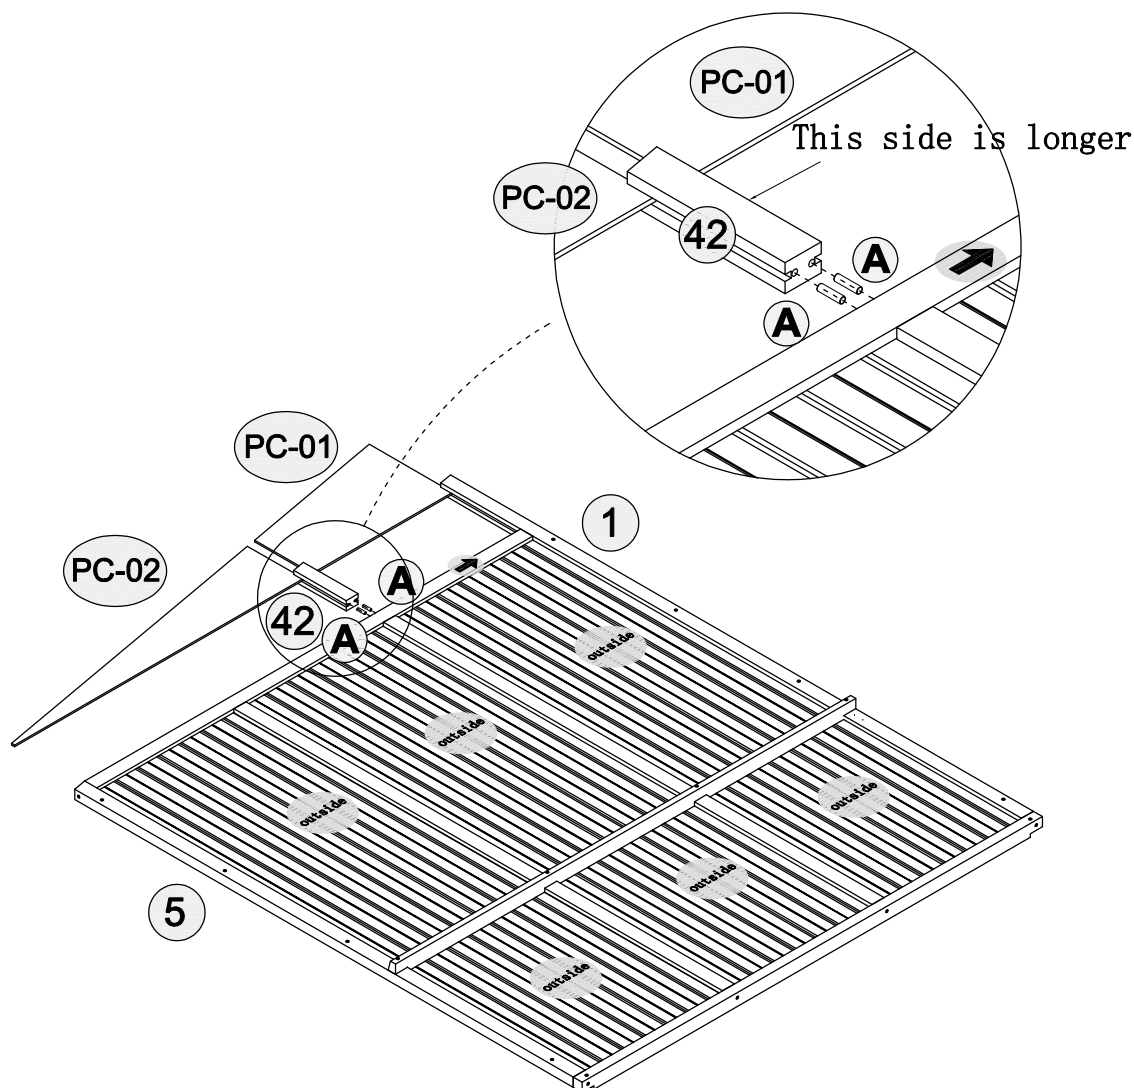

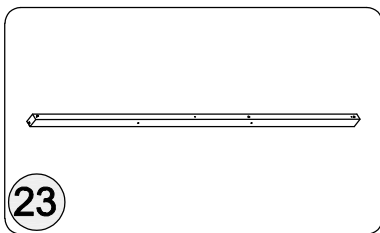

Left beam

Qty: 1



Ø8*30

A

x 5

 


 
M5*80

H


x 3



1. Connect with hardware A first, then install with hardware H

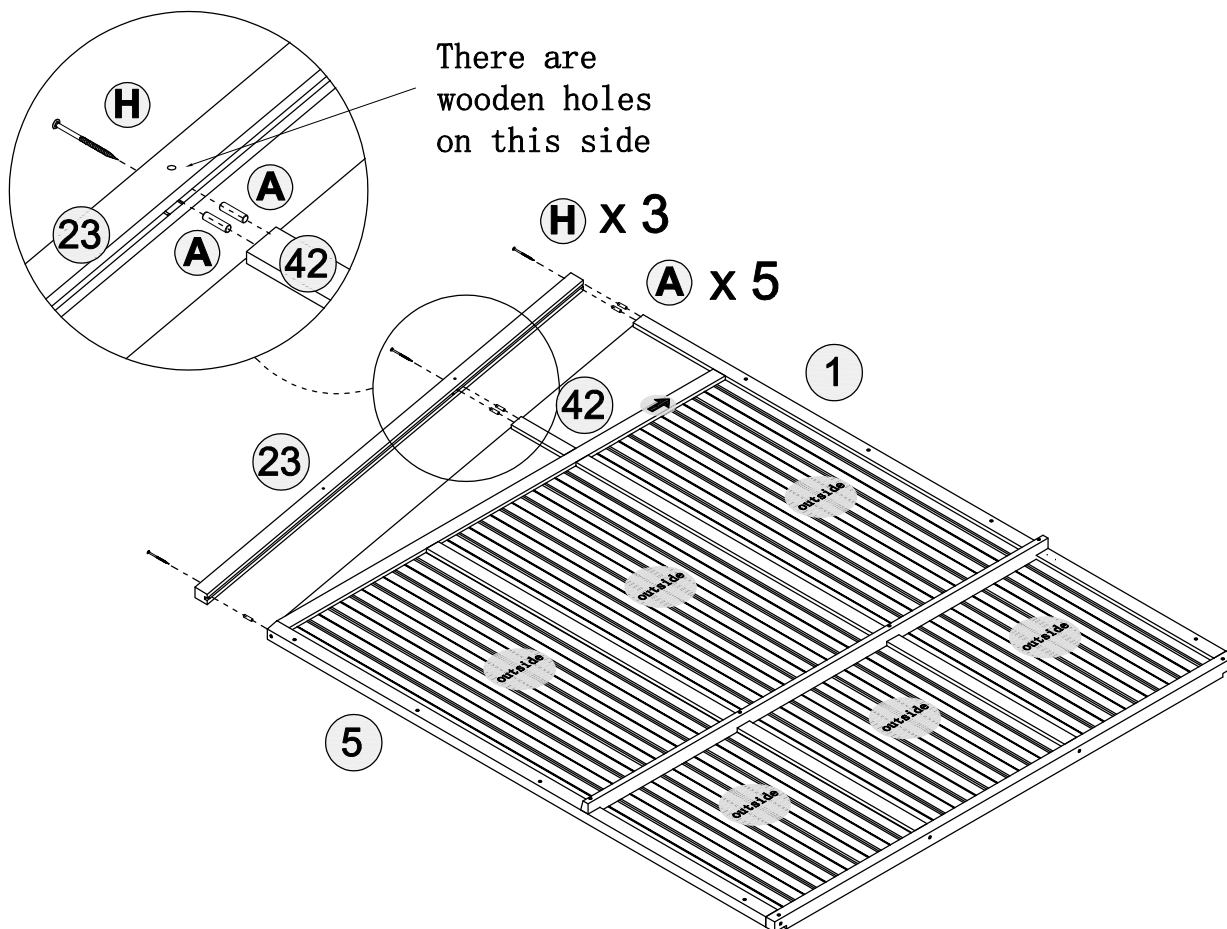




   1. It is recommended to first locate and gather all the parts according to this diagram, which will facilitate quick installation later.

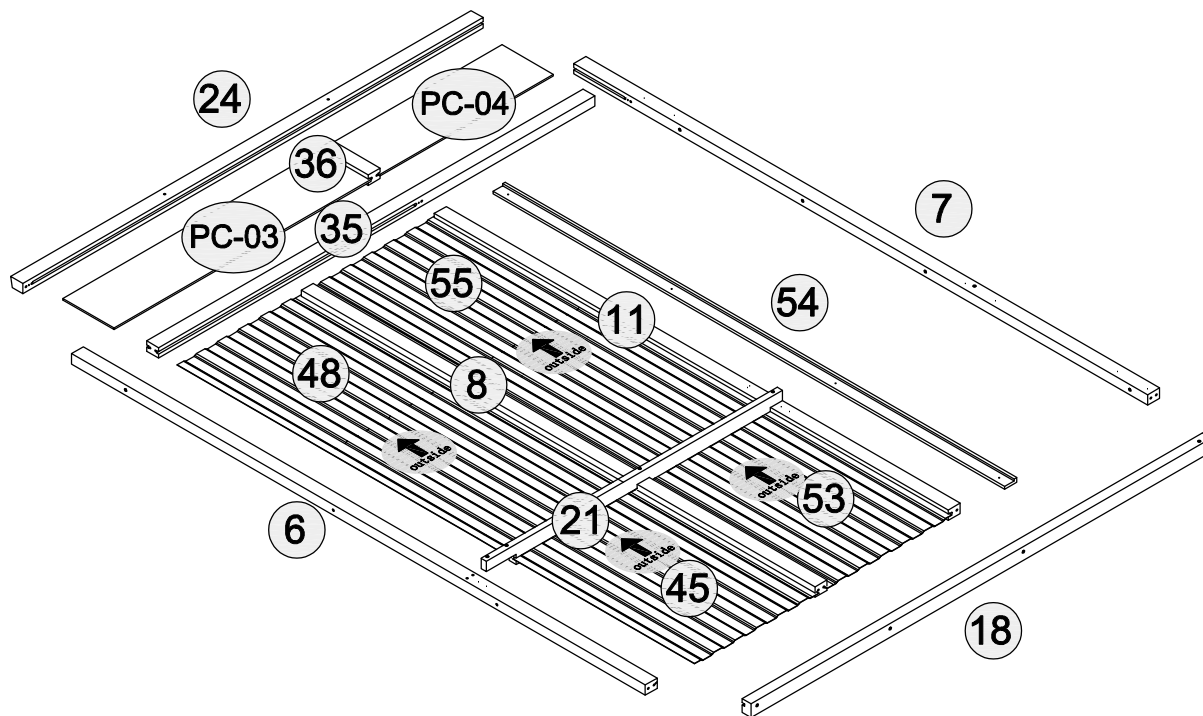


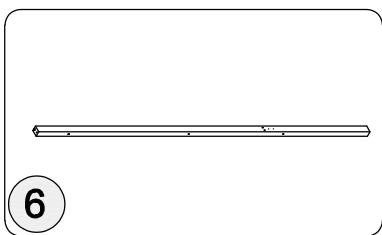


Front left pillar
Qty: 1

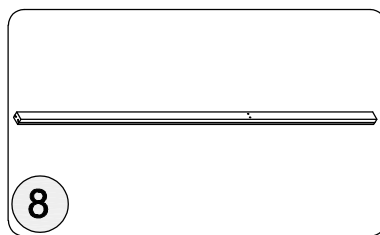 



Front center pillar
Qty: 1

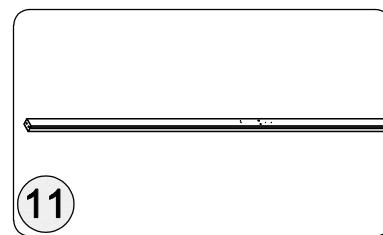 


Front center pillar
Qty: 1

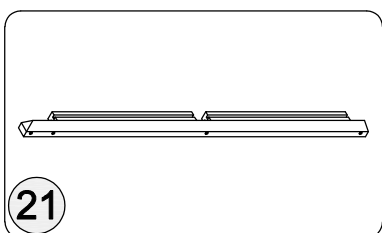 


Front middle clause
Qty: 1

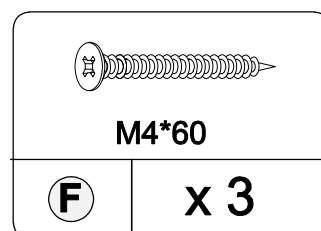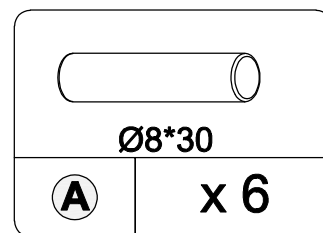  


  1. Connect with hardware A first, then install with hardware F
2. Component 21 should be divided into upper and lower parts

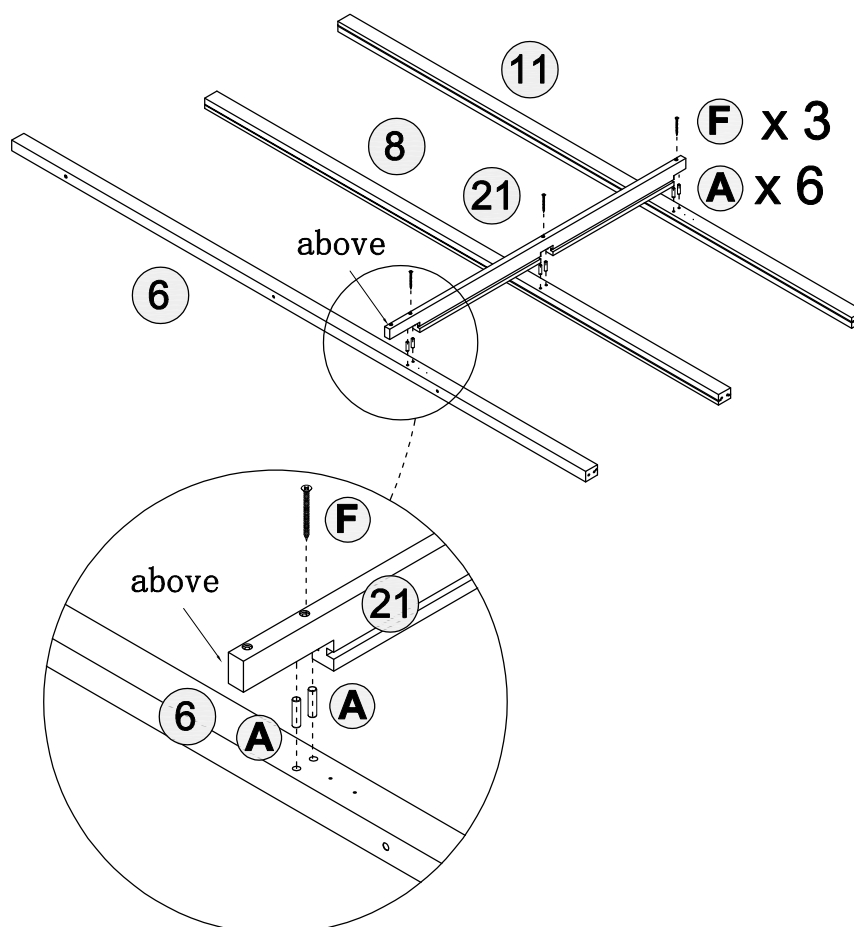

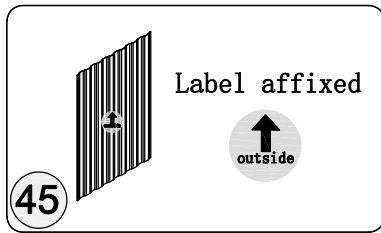



Front lower core board
Qty: 1

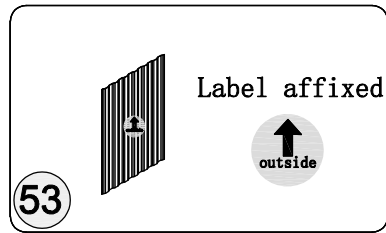 



Front lower core board
Qty: 1

  1. Insert component 45, 53 into the slot

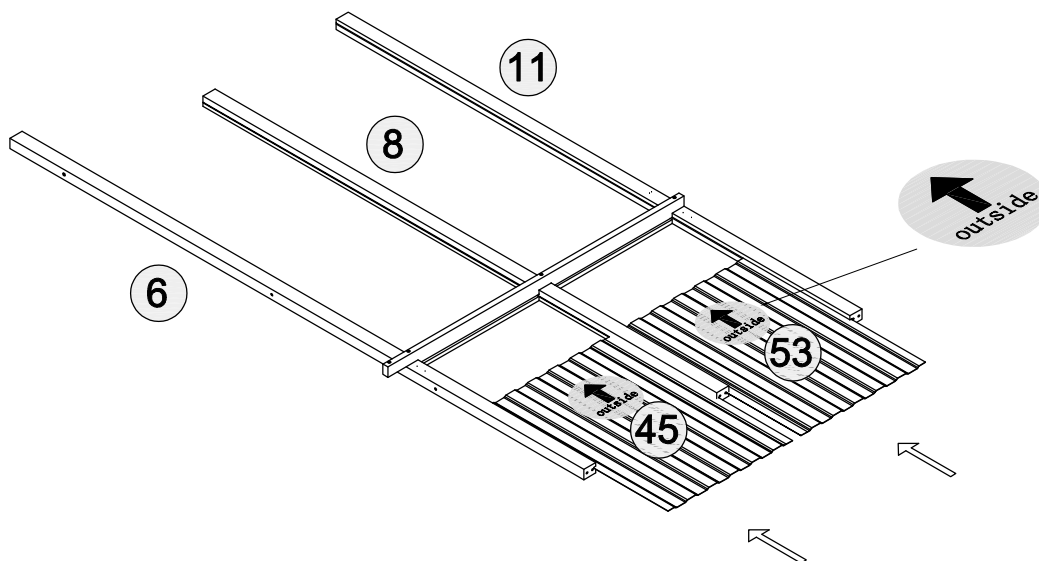



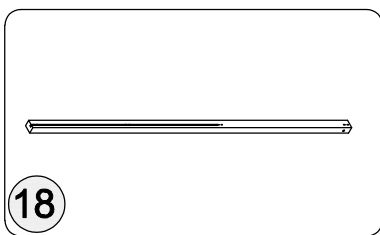


Front foot strip
Qty: 1

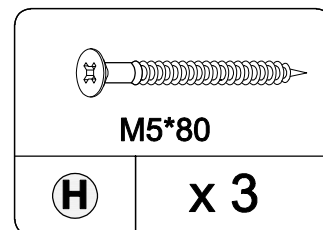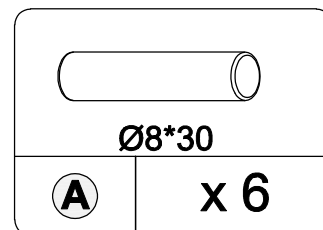  


   1. Connect with hardware A first, then install with hardware H

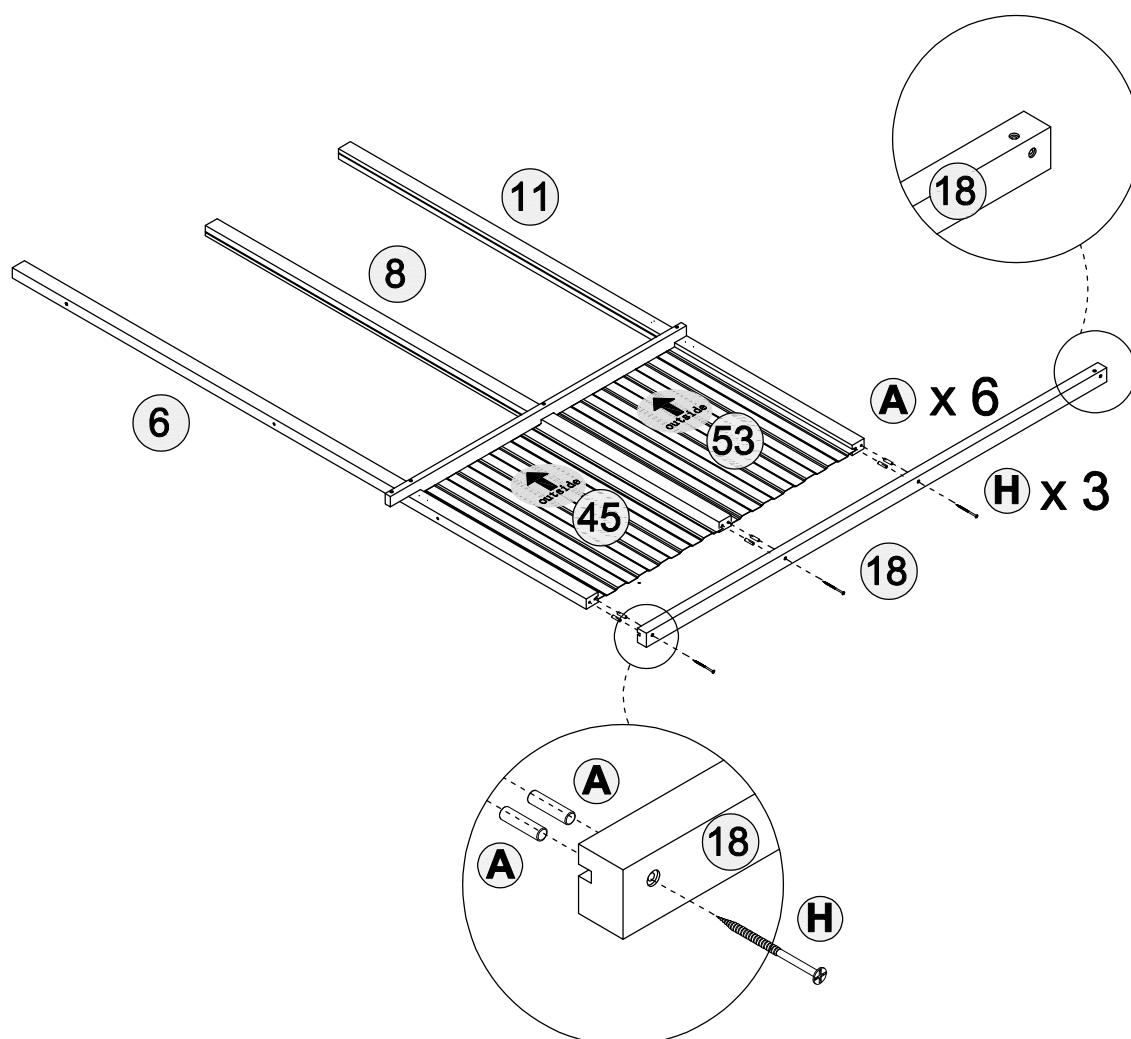

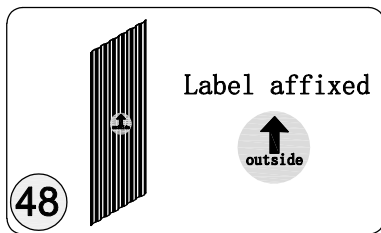



Front upper core board
Qty: 1

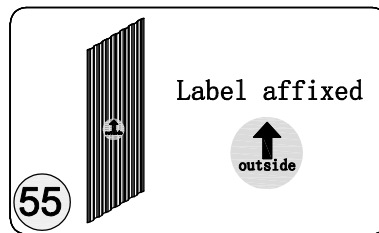 

Front upper core board
Qty: 1

  1. Install component 48, 55 into the slot

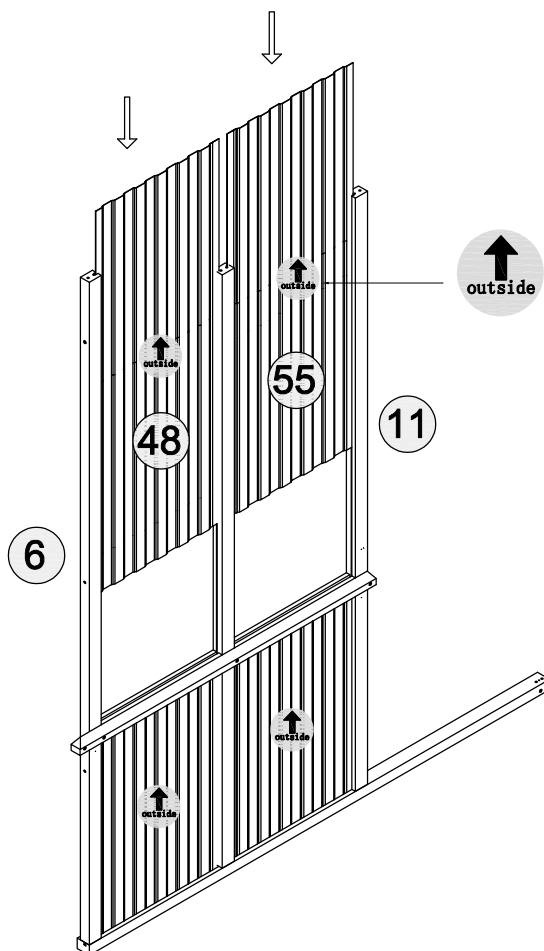

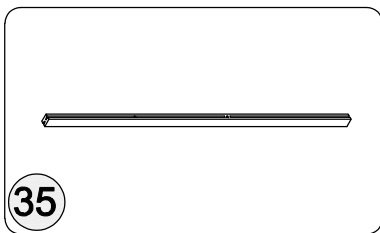

Front horizontal bar
Qty: 1



Ø8*30

A

x 6

 


 
 
M5*80

H

x 3



1. Connect with hardware A first, then install with hardware H
2. When installing hardware A on component 6, it can be moved away a bit

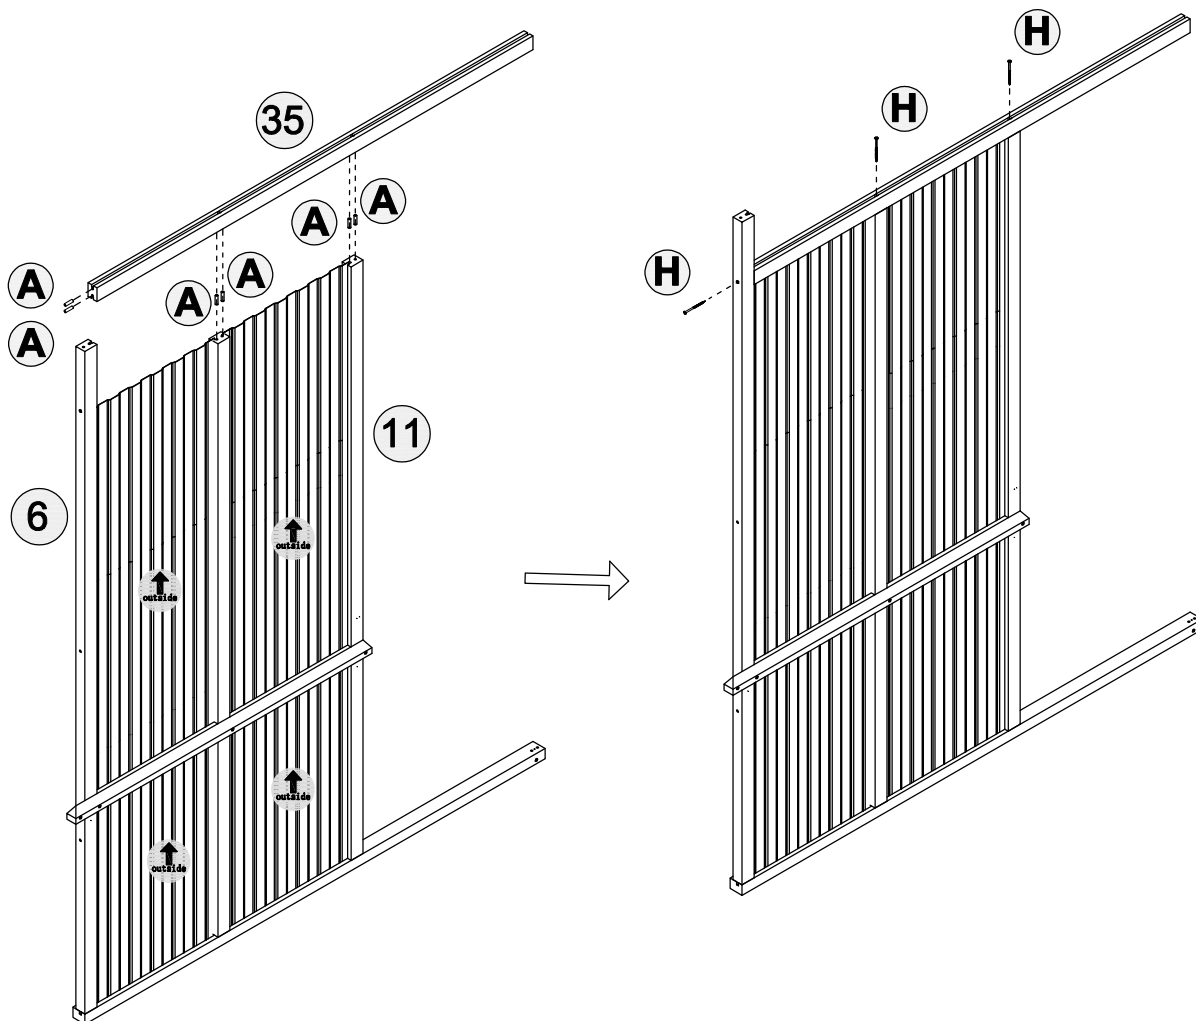

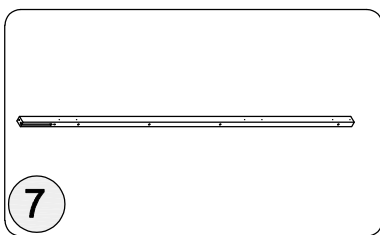




Front right pillar

  Qty: 1

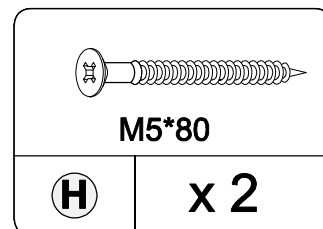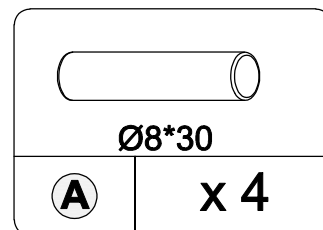

   
1. Connect with hardware A first, then install with hardware H

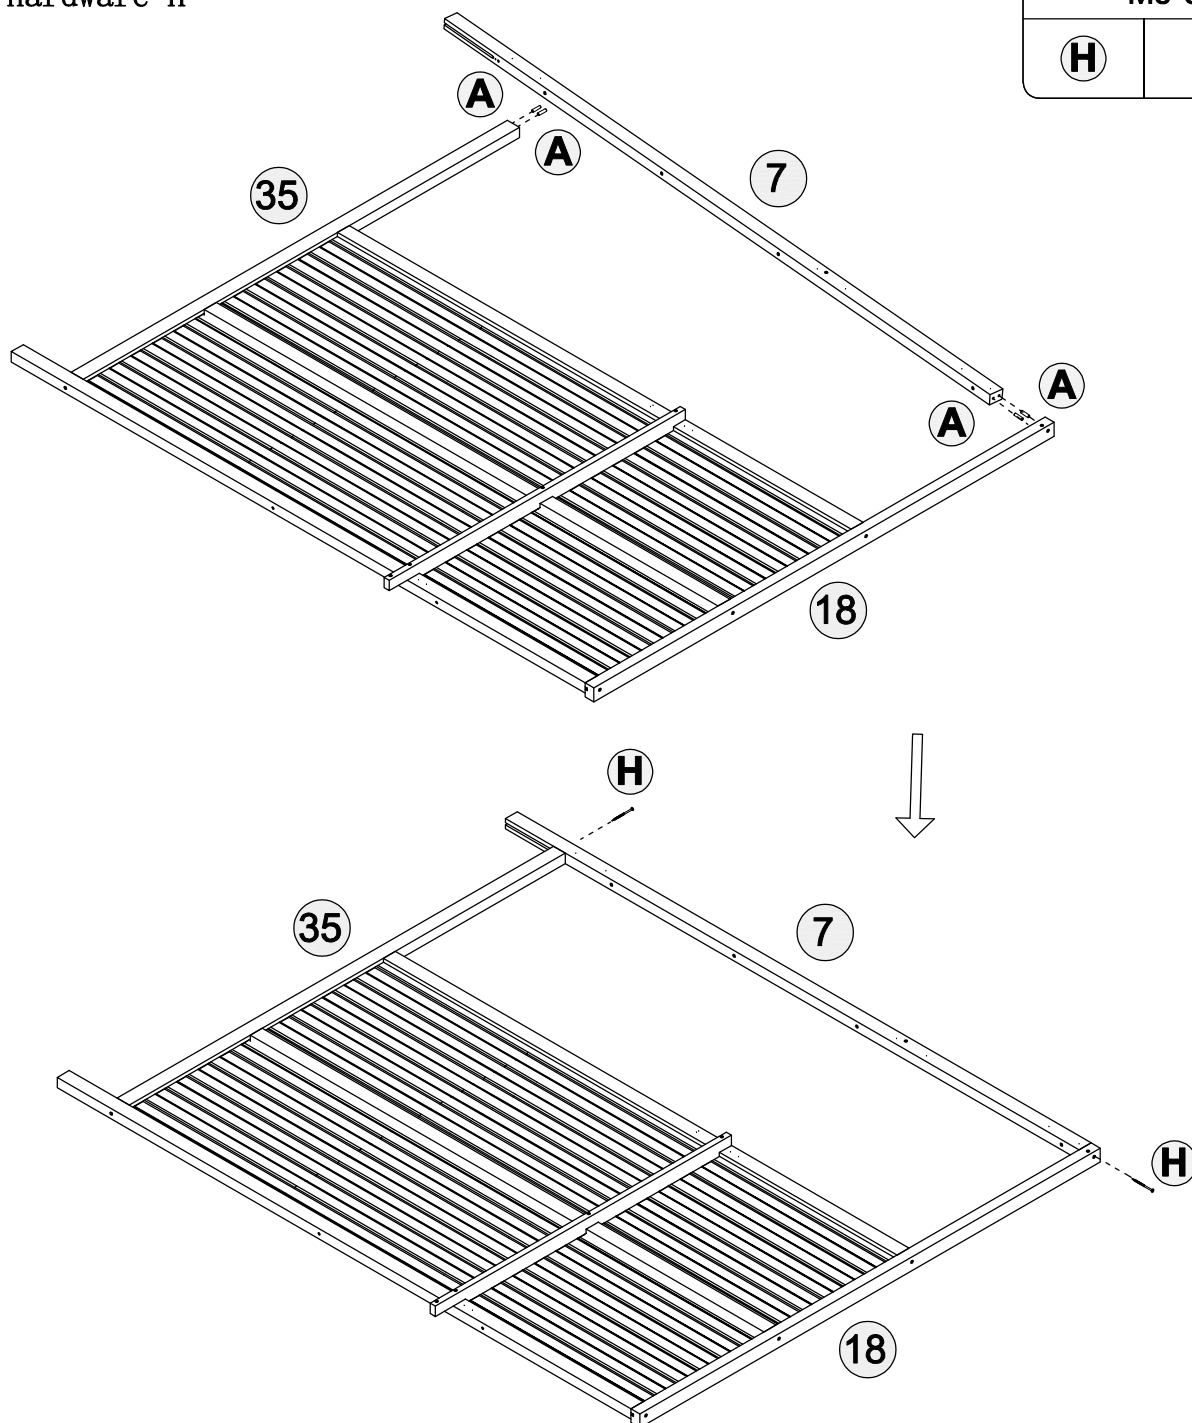

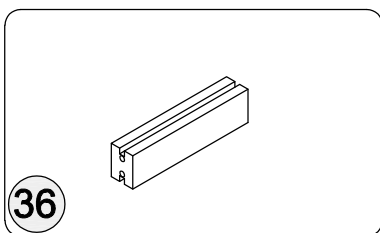


36

 Septum strip
Qty: 1

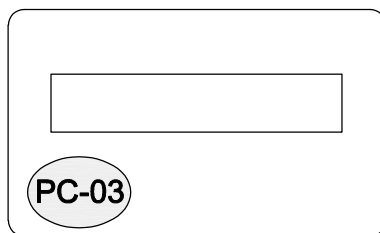


PC-03

 Front Sunlight Panel
Qty: 1

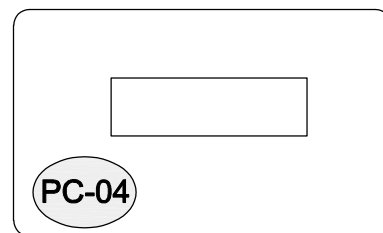

PC-04

 Front Sunlight Panel
Qty: 1

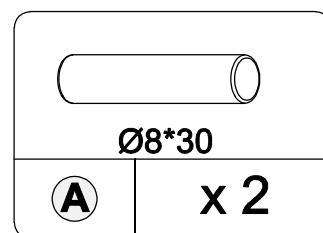



Ø8*30

A

x 2

  
1. After connecting component 36 with hardware A, components PC-03 and PC-04 are placed in the slots along the way

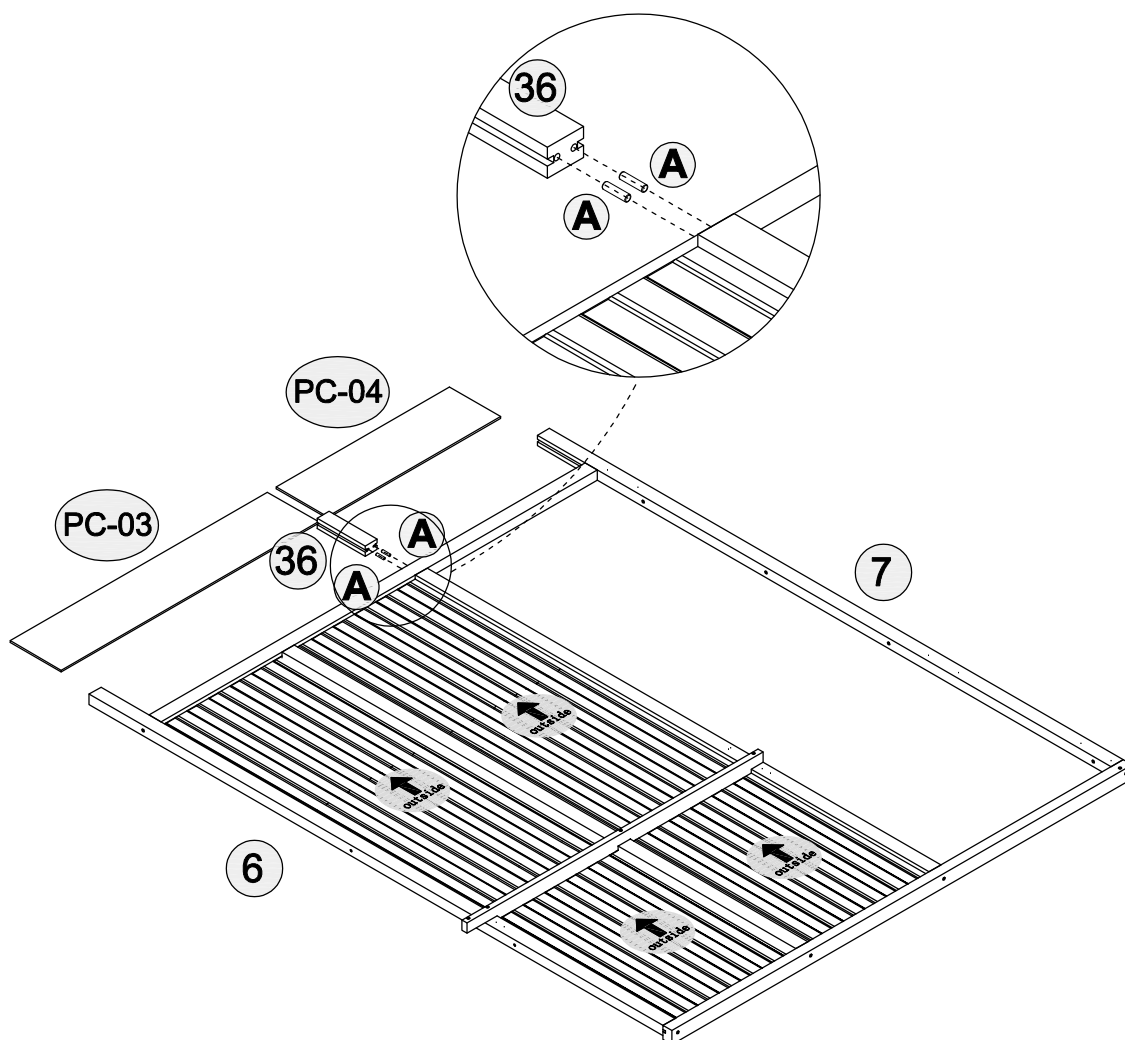

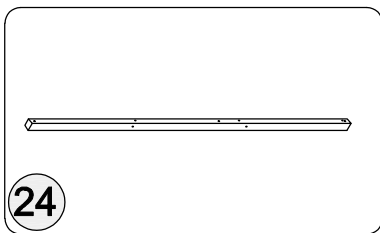

Front beam

 Qty: 1



Ø8*30

A

x 6

 


 
 
M5*80

H

x 3

1. Connect with hardware A first, then install with hardware H

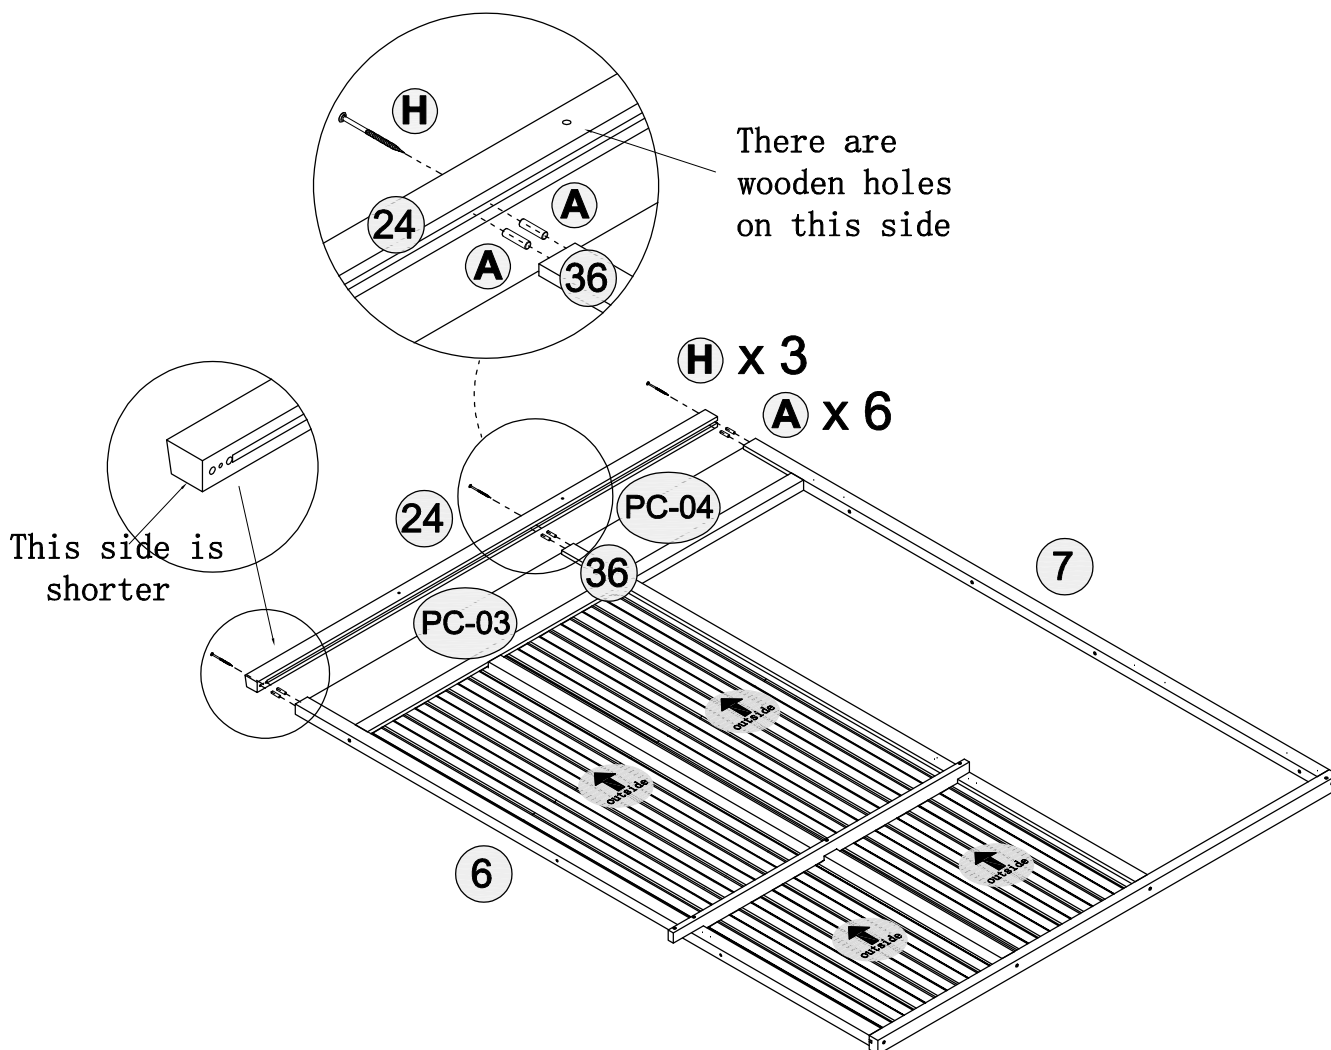

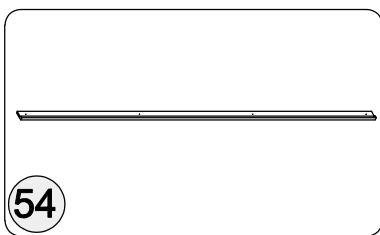

54

retaining strip

Qty: 1

 


 
M4*30

C


x 4



1. Use hardware C to pass through component 54 and install it towards the lead hole

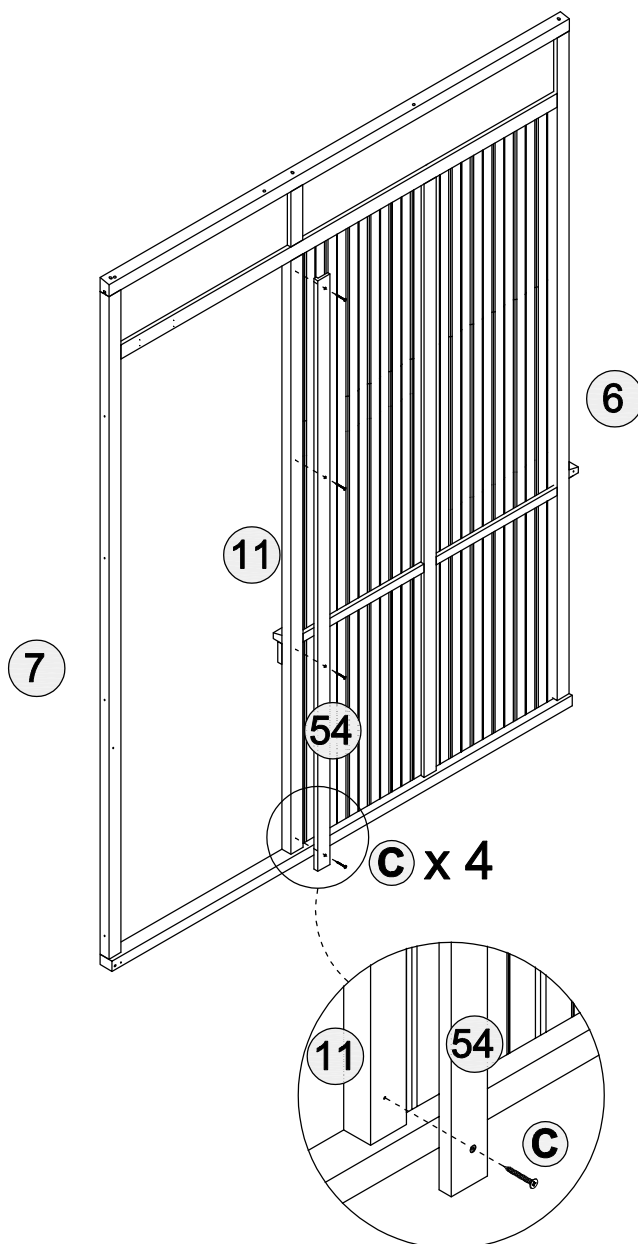



   
1. It is recommended to first locate and gather all the parts according to this diagram, which will facilitate quick installation later.

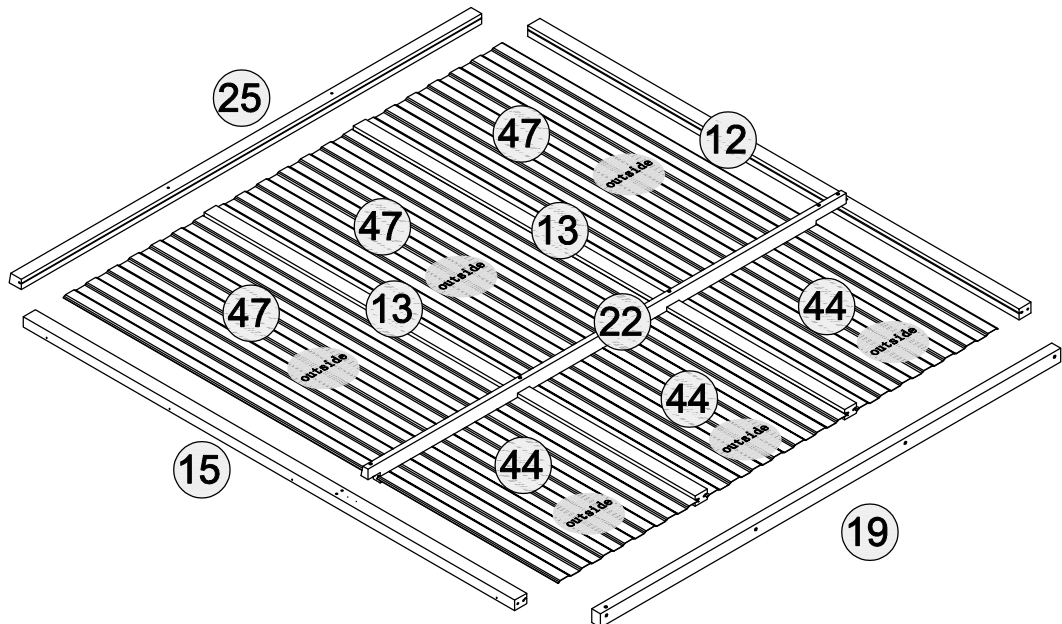

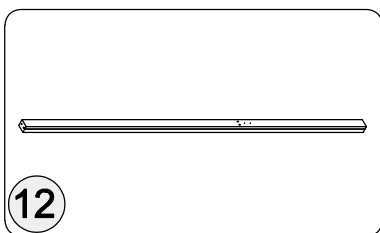


12

 Rear left pillar
Qty: 1

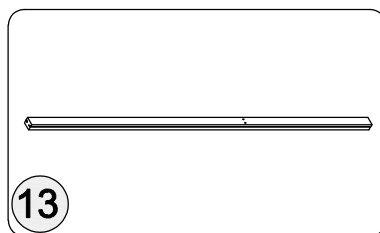


13

 Rear center pillar
Qty: 2

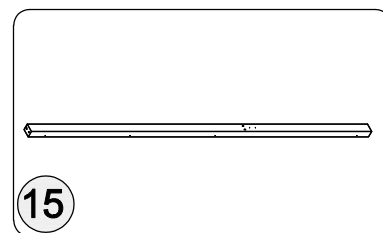


15

 Rear right pillar
Qty: 1

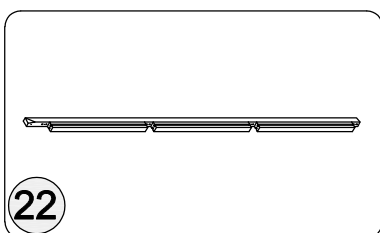

22

 
Rear middle strip
Qty: 1

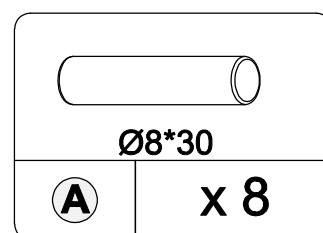

Ø8*30

A

 x 8

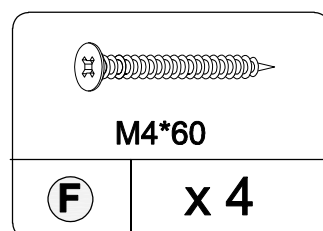


M4*60


F


x 4

 1. Connect with hardware A first, then install with hardware F
2. Component 22 should be divided into upper and lower parts

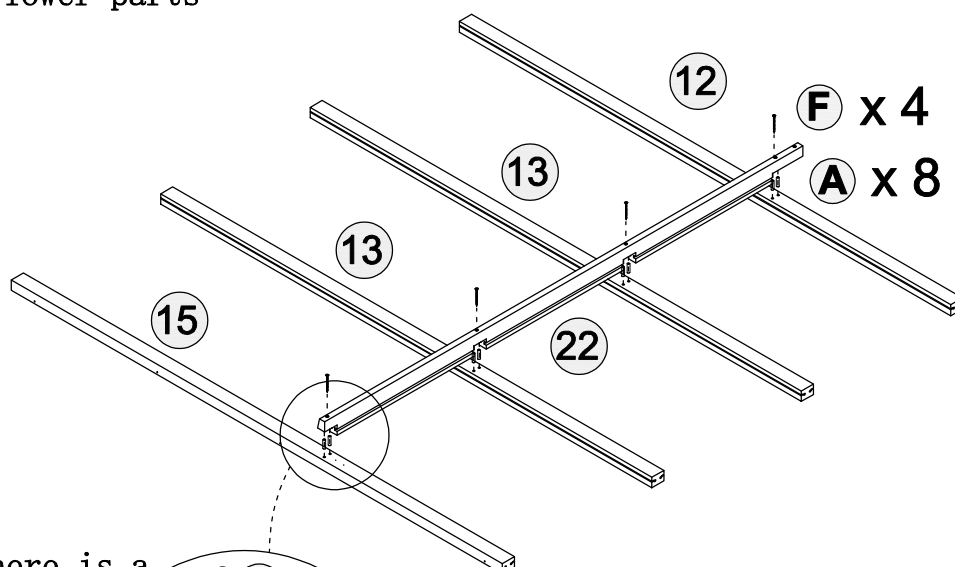


There is a slope here

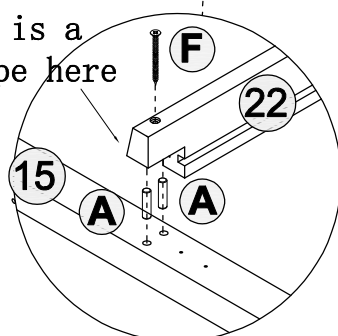 


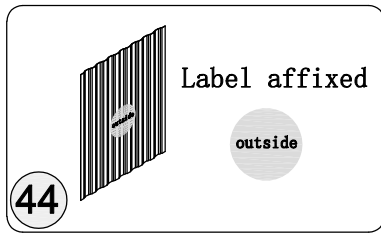 

Rear core board
Qty: 3

  1. Install component 44 into the slot

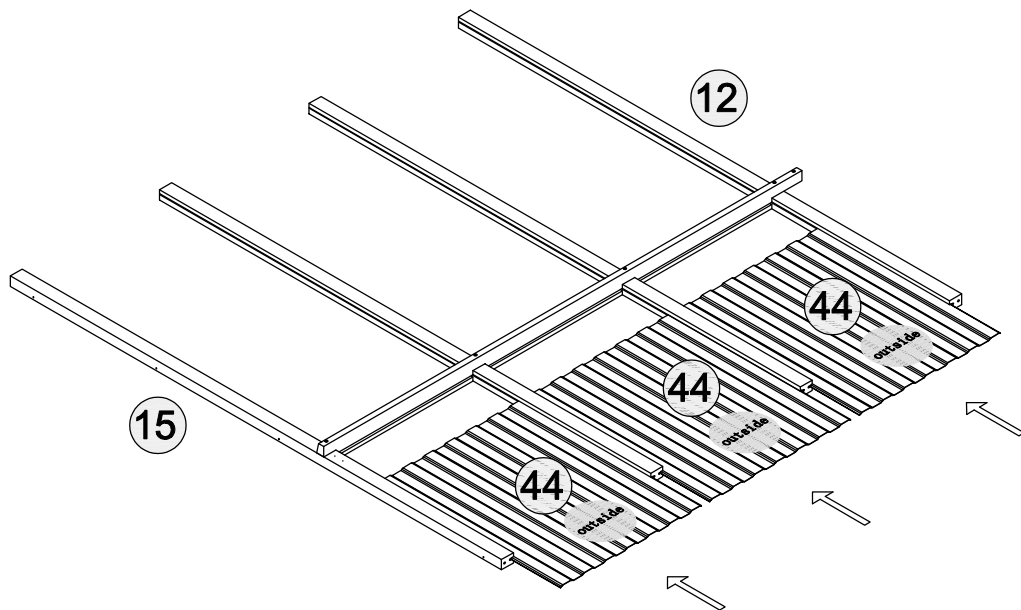

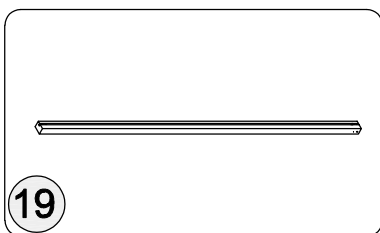

Rear foot strip
Qty: 1



Ø8*30

A

x 8

 


M5*80

H

x 4


1. Connect with hardware A first, then install with hardware H

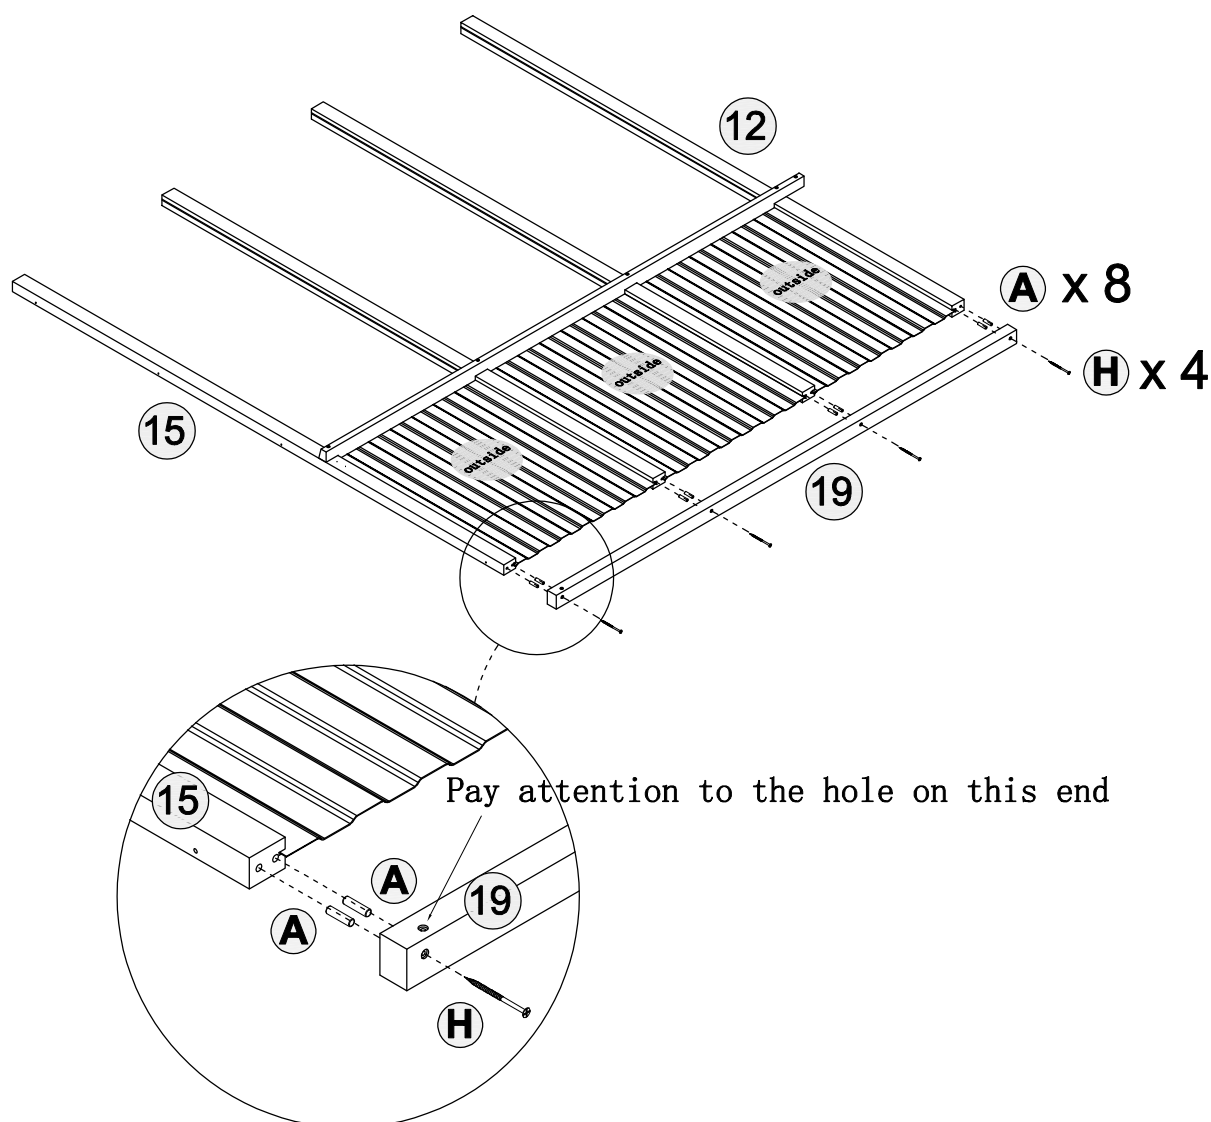



Rear core board
Qty: 3

 1. Place component 47 in the slot

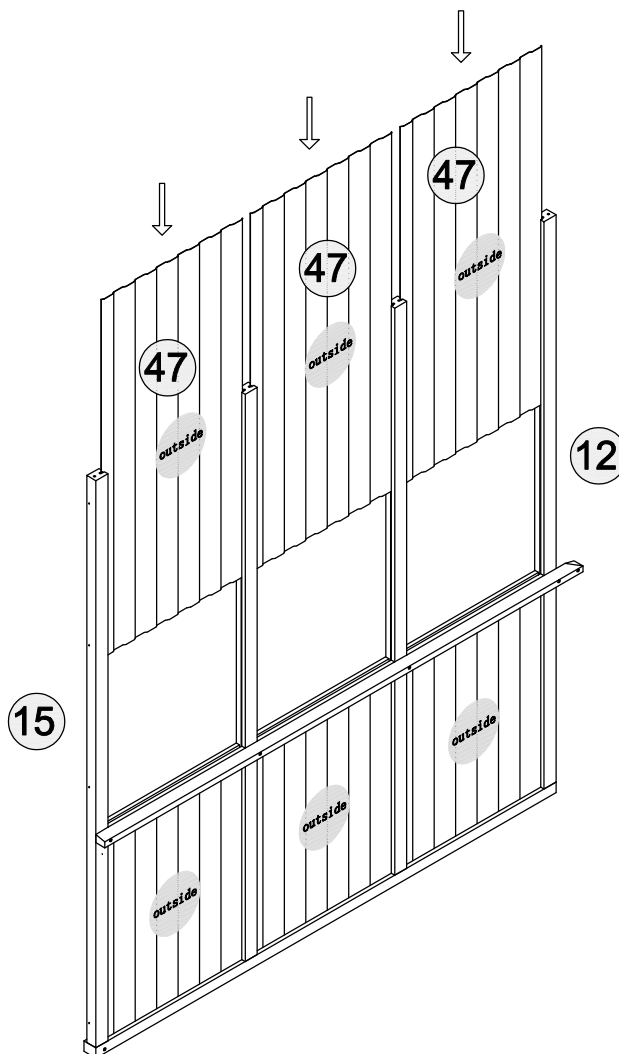



Later Liang

Qty: 1



 
A

 
x 8



x 4

1. Connect with hardware A first, then install with hardware H

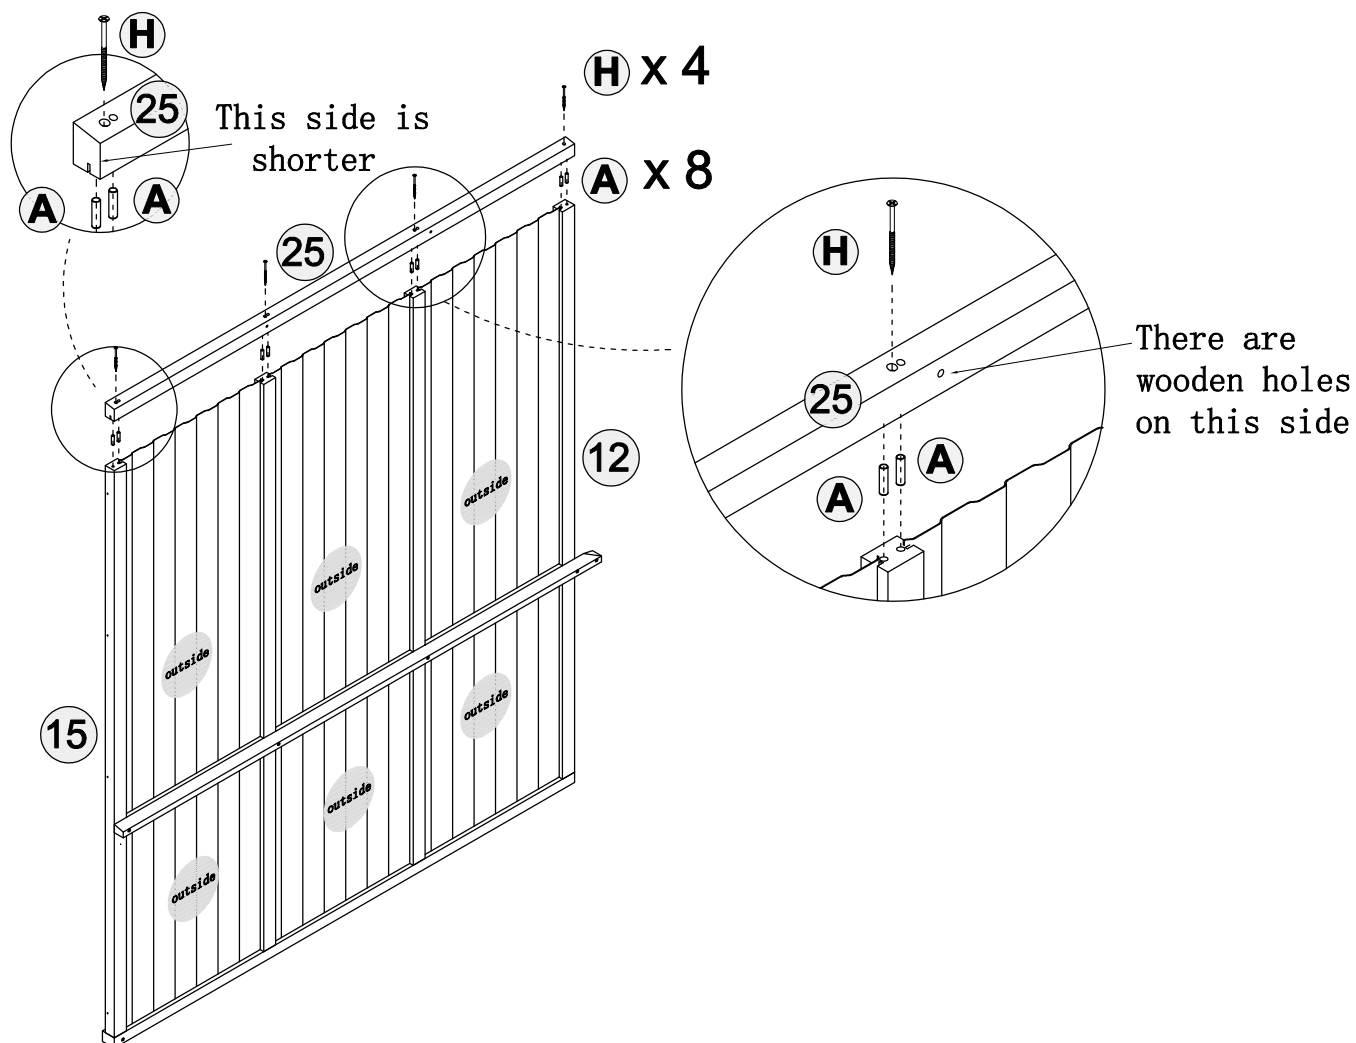

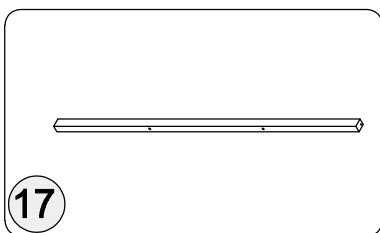

17

Right foot strip

Qty: 1

1. The diagram shows that the walls should be at a 90 degree angle to each other
2. Connect with hardware A first, then install with hardware H
3. Three people are needed to do it



Ø8*30

A

 
x 2



M5*80

H

x 2

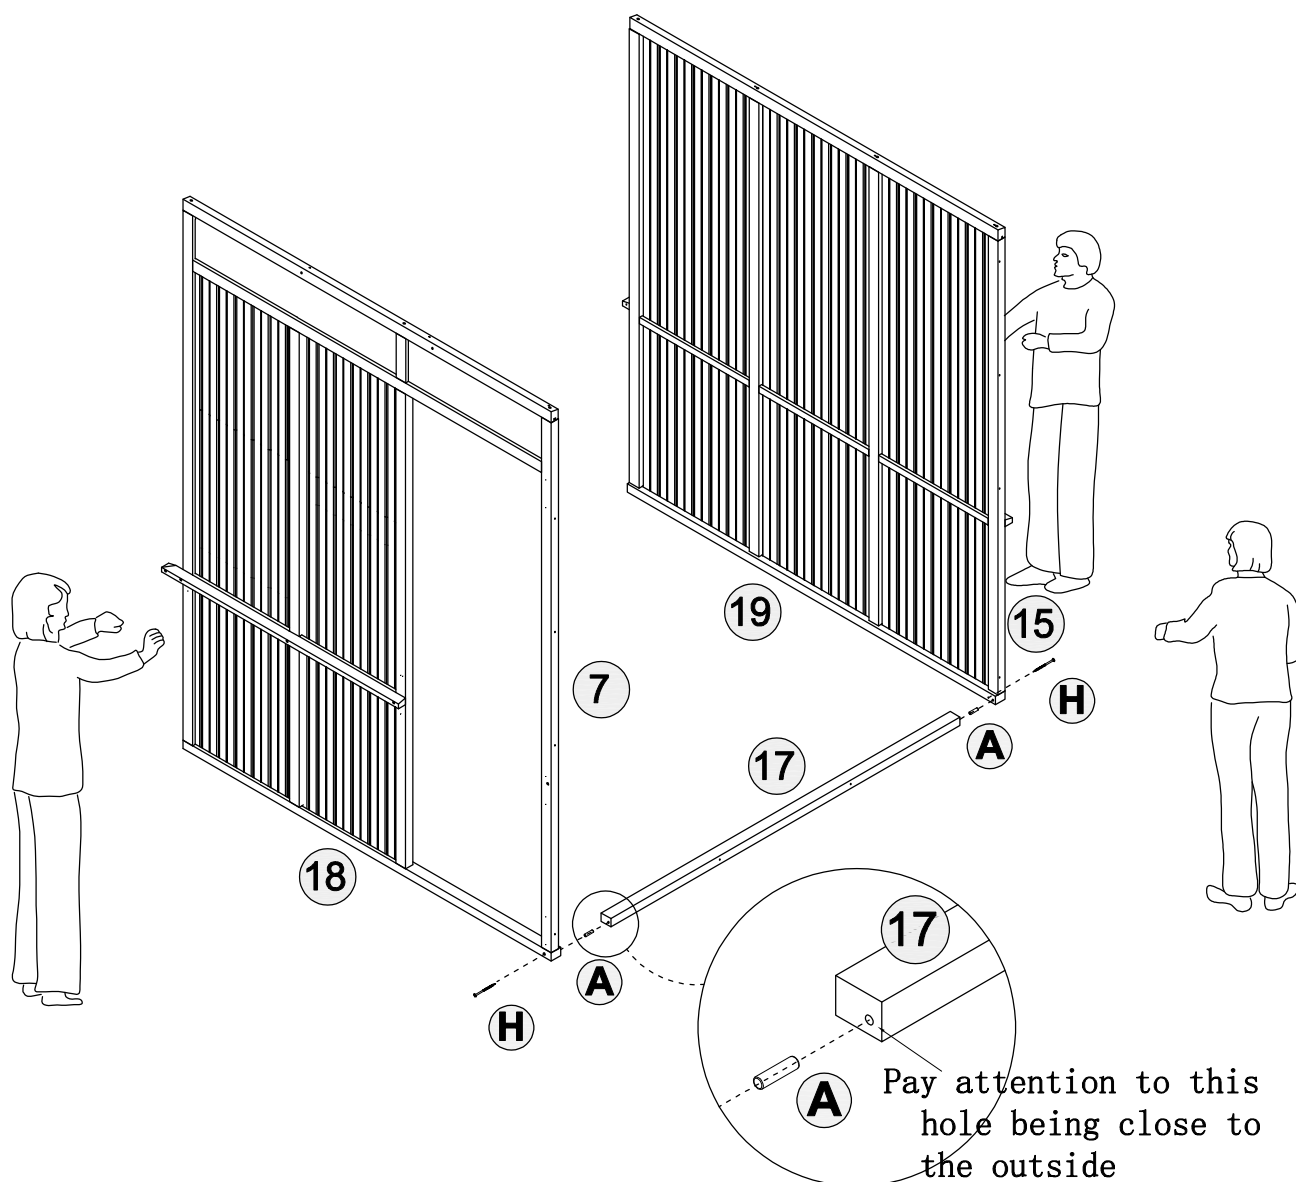

1. Connect with hardware A first, then install with hardware F



Ø8*30

A

 
x 4

 


M4*60


F

x 8

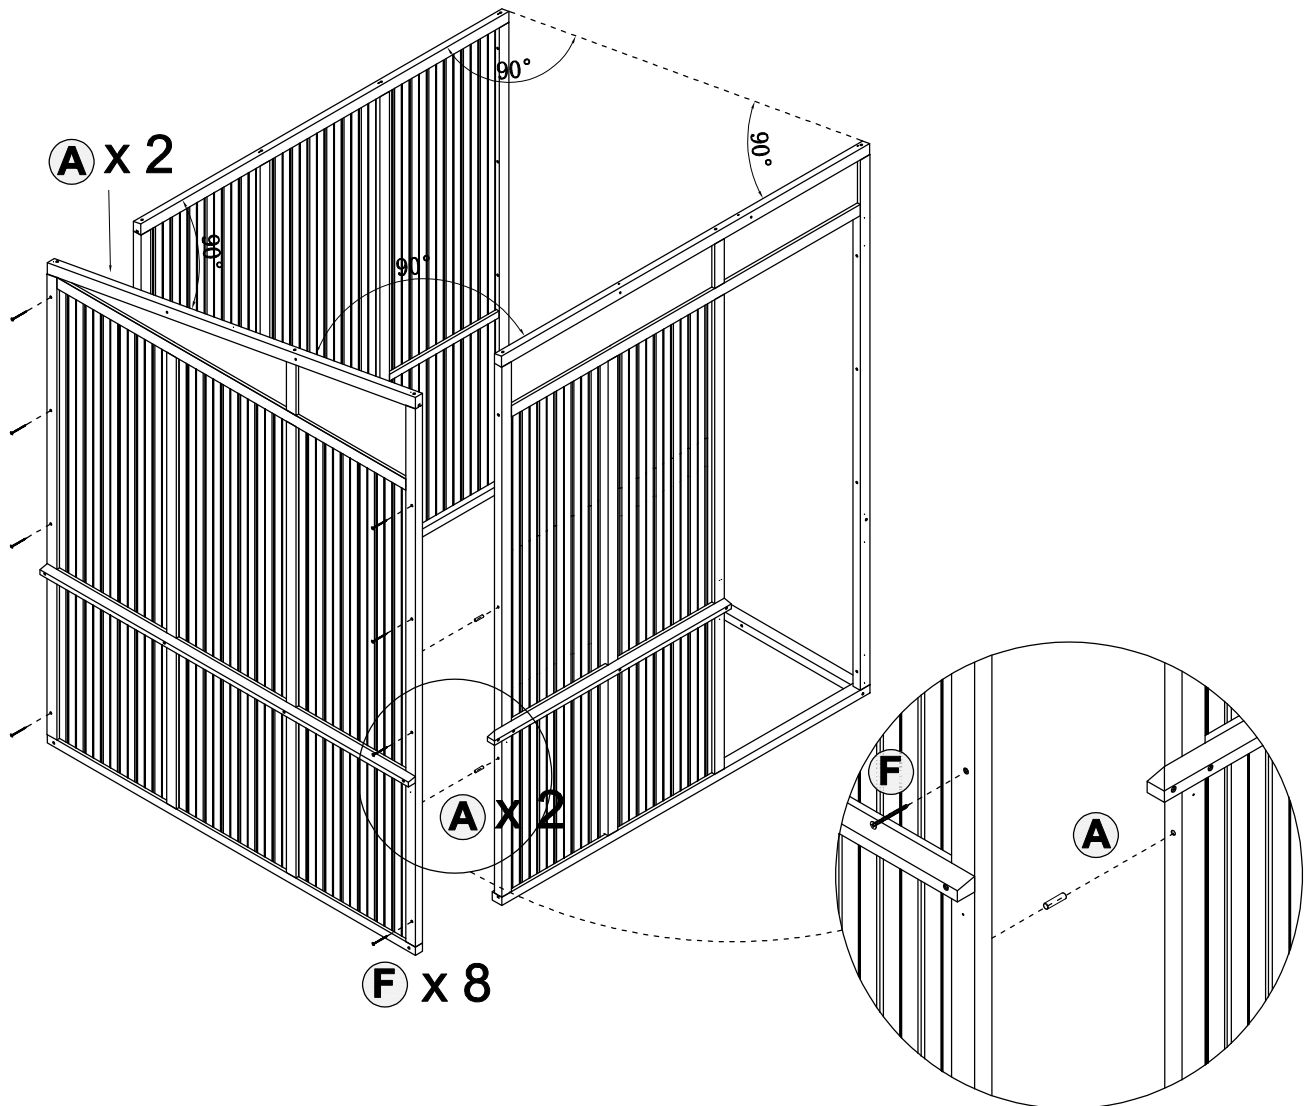



 1. The diagonal of the bottom inner space is the same, with a length of 2437mm
2. After adjustment, install hardware E and H

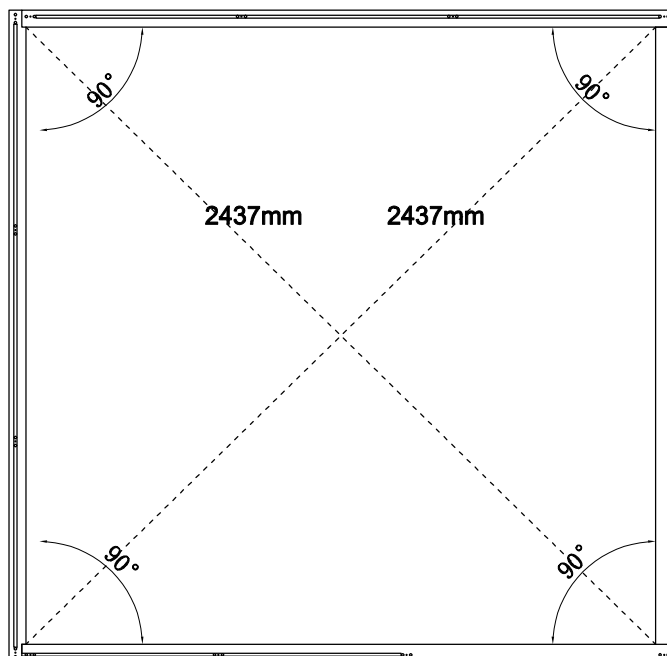

M4*50

E

 
x 2

 
 
 


M5*80


H

x 2

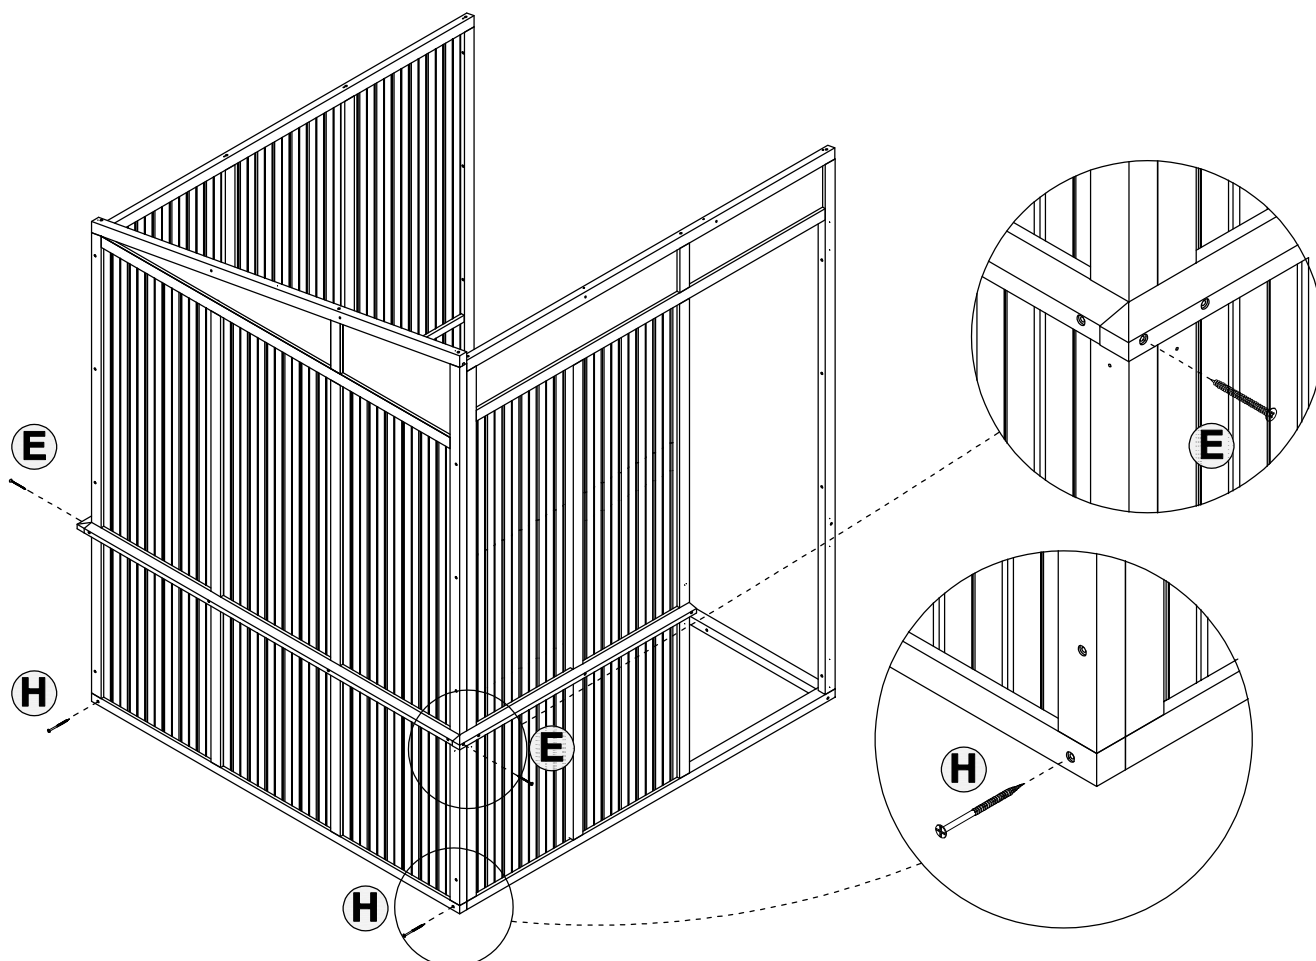


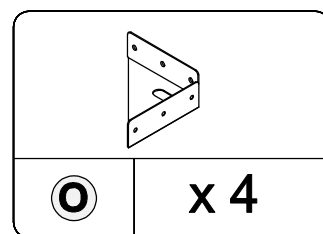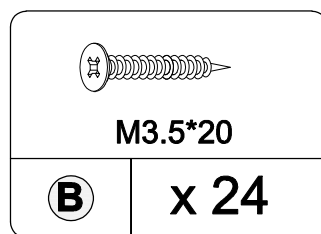
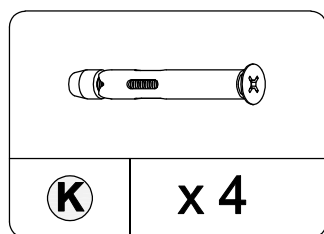


 1. The four corners of the room have the same corner code, and the hardware U is installed underground through the hardware T

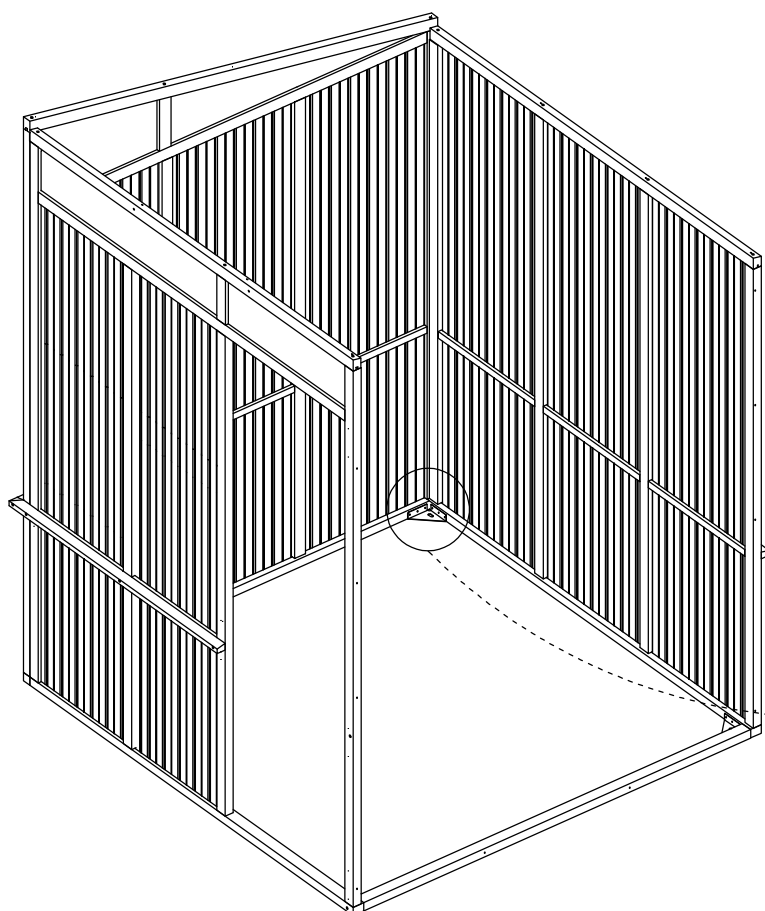

   The four corners are fitted with such corner codes

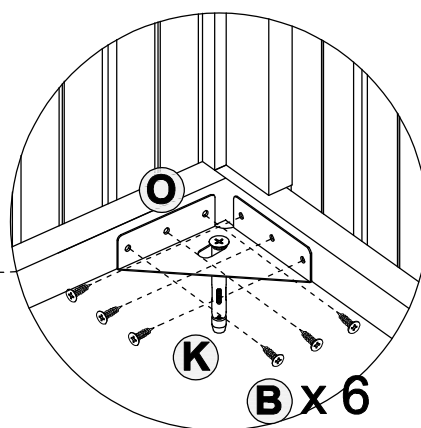

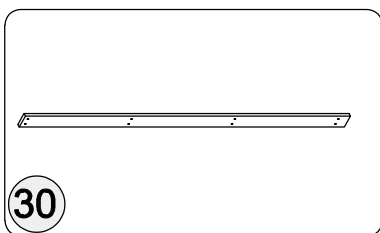

Rear panel

Qty: 1

 


 
 
M4*35

D

x 8

1. Use hardware D to pass through component and install it towards the lead hole

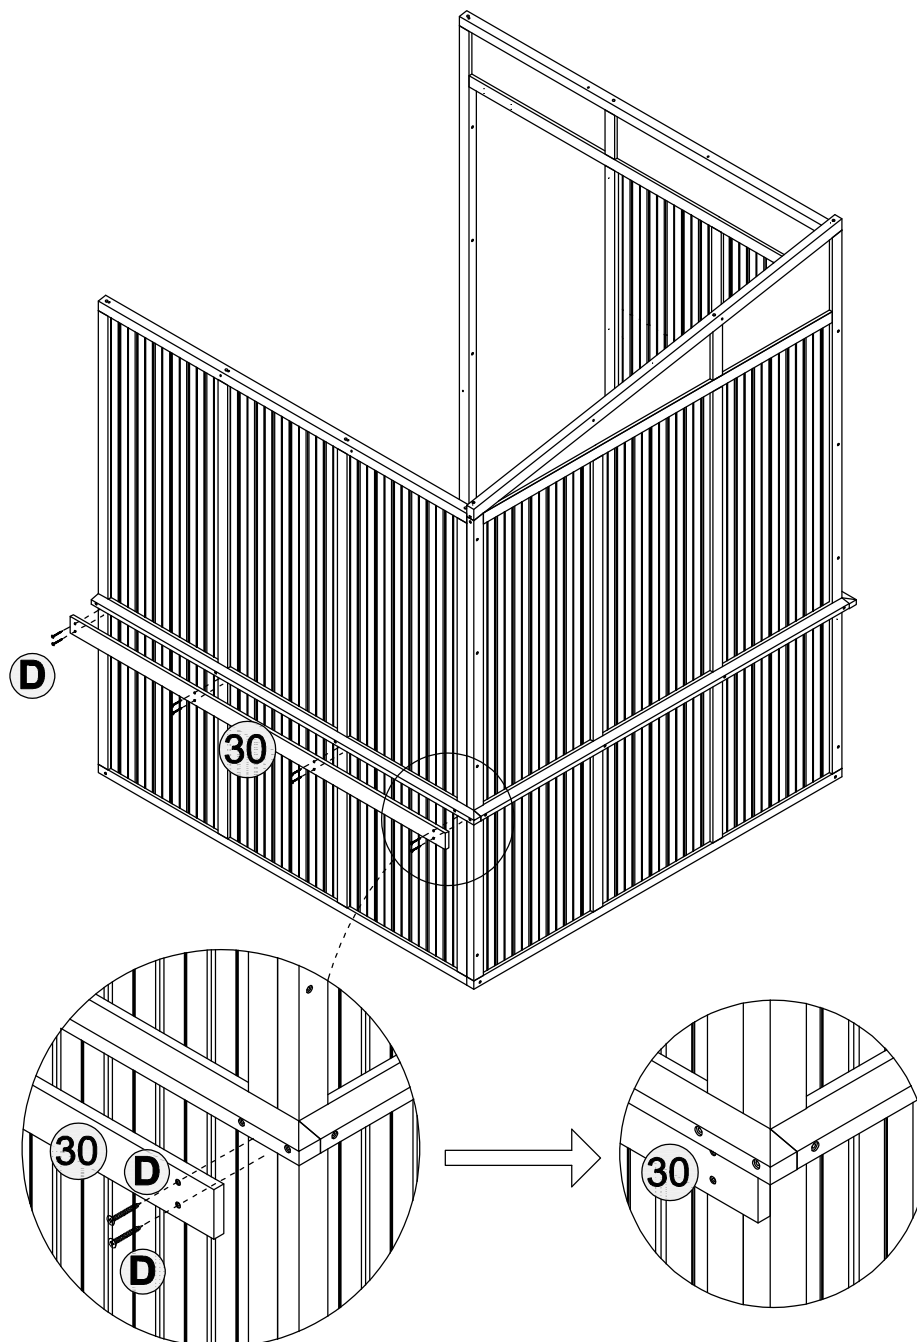

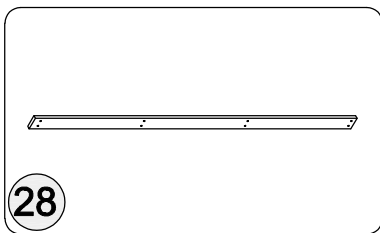

28

side baffle

Qty: 1

 


 
 
M4*35

D

x 8

1. Use hardware D to pass through component and install it towards the lead hole

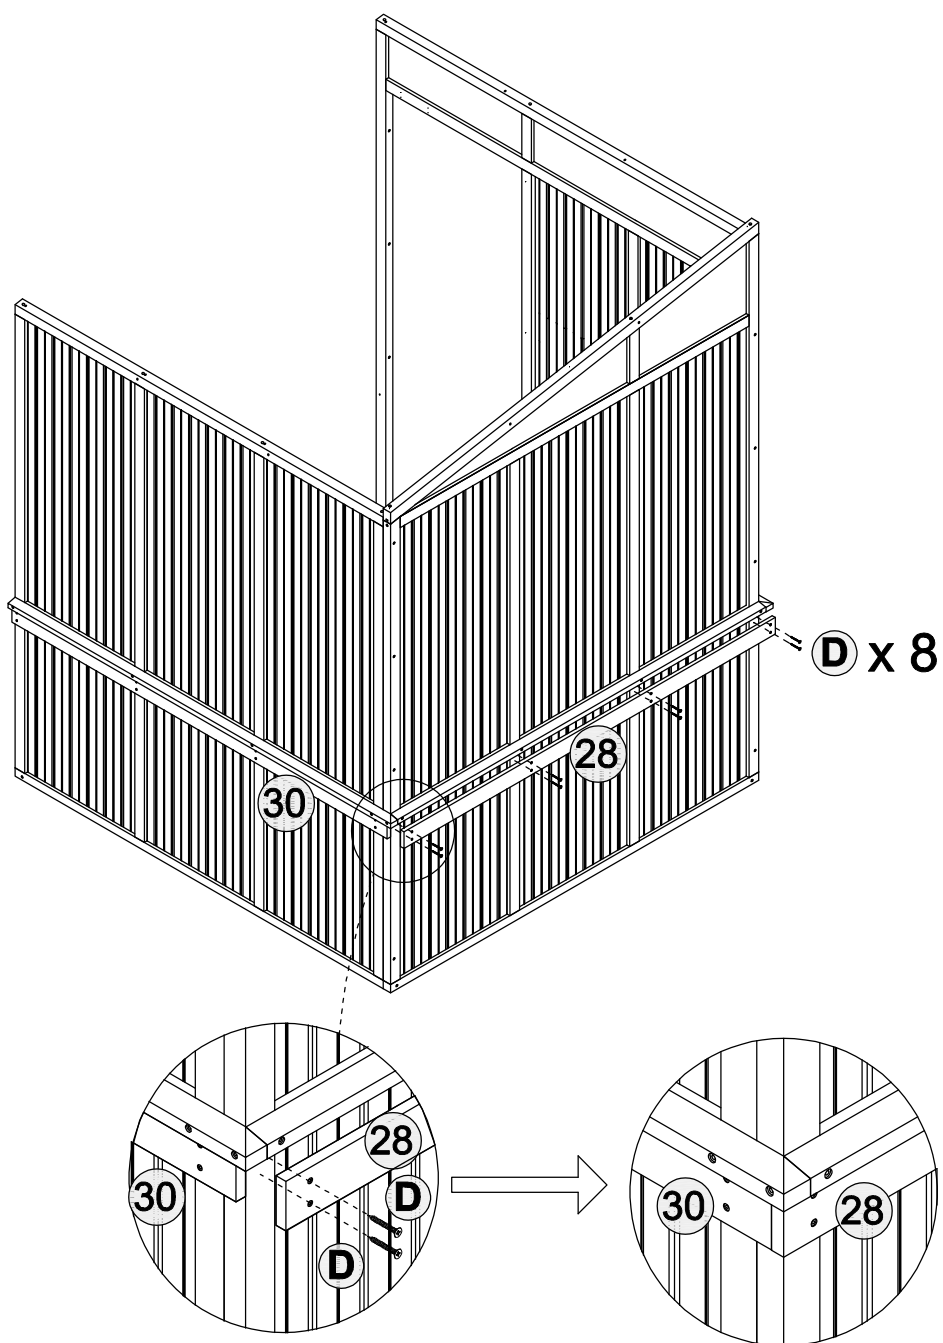

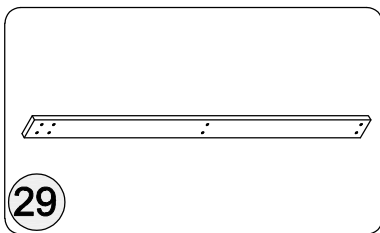

front fender

Qty: 1

 
 
 
 


 
 
M4*35

D

x 8


1. Use hardware D to pass through component and install it towards the lead hole

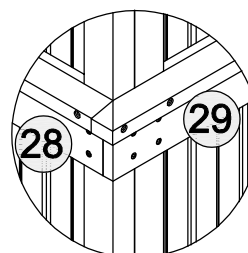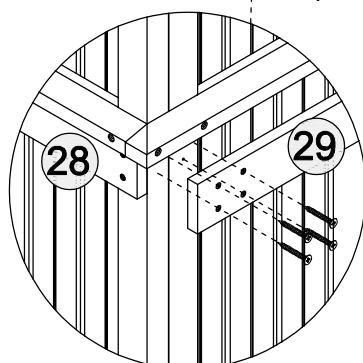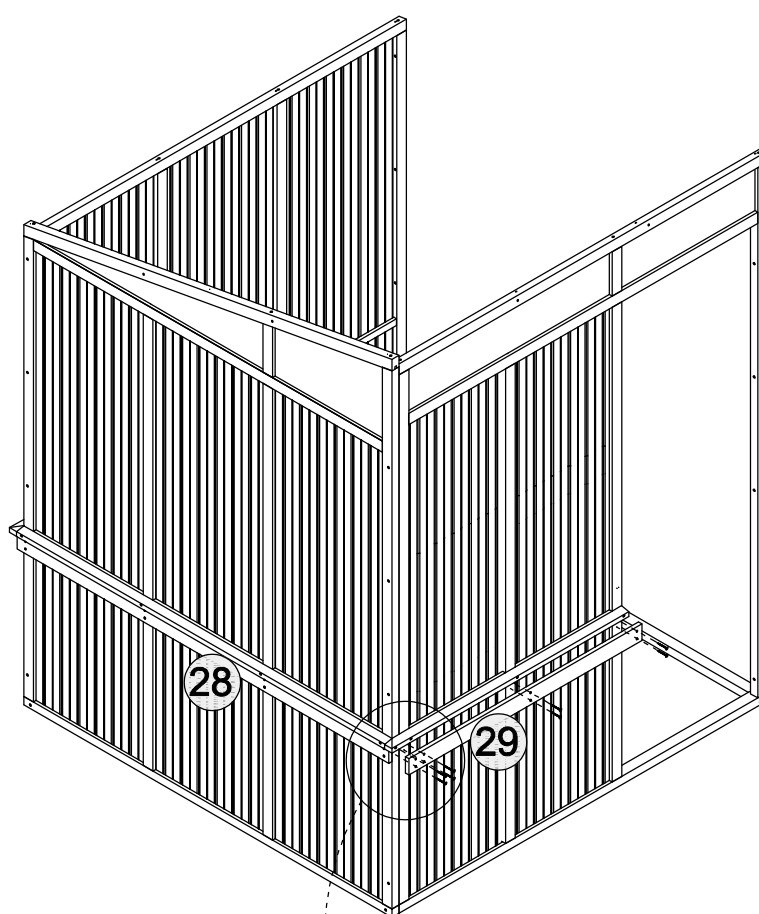

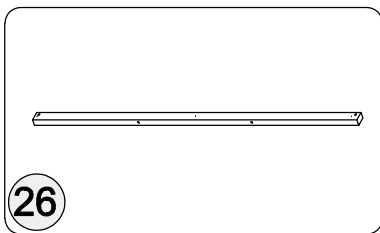

Right beam

 Qty: 1

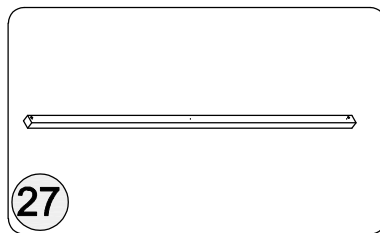

Middle crossbeam

Qty: 2



Ø8*30

A

x 6






M4*60

F

x 6

   
1. Attention should be paid to the front and back ends of the components
2. Connect with hardware A first, then install with hardware F

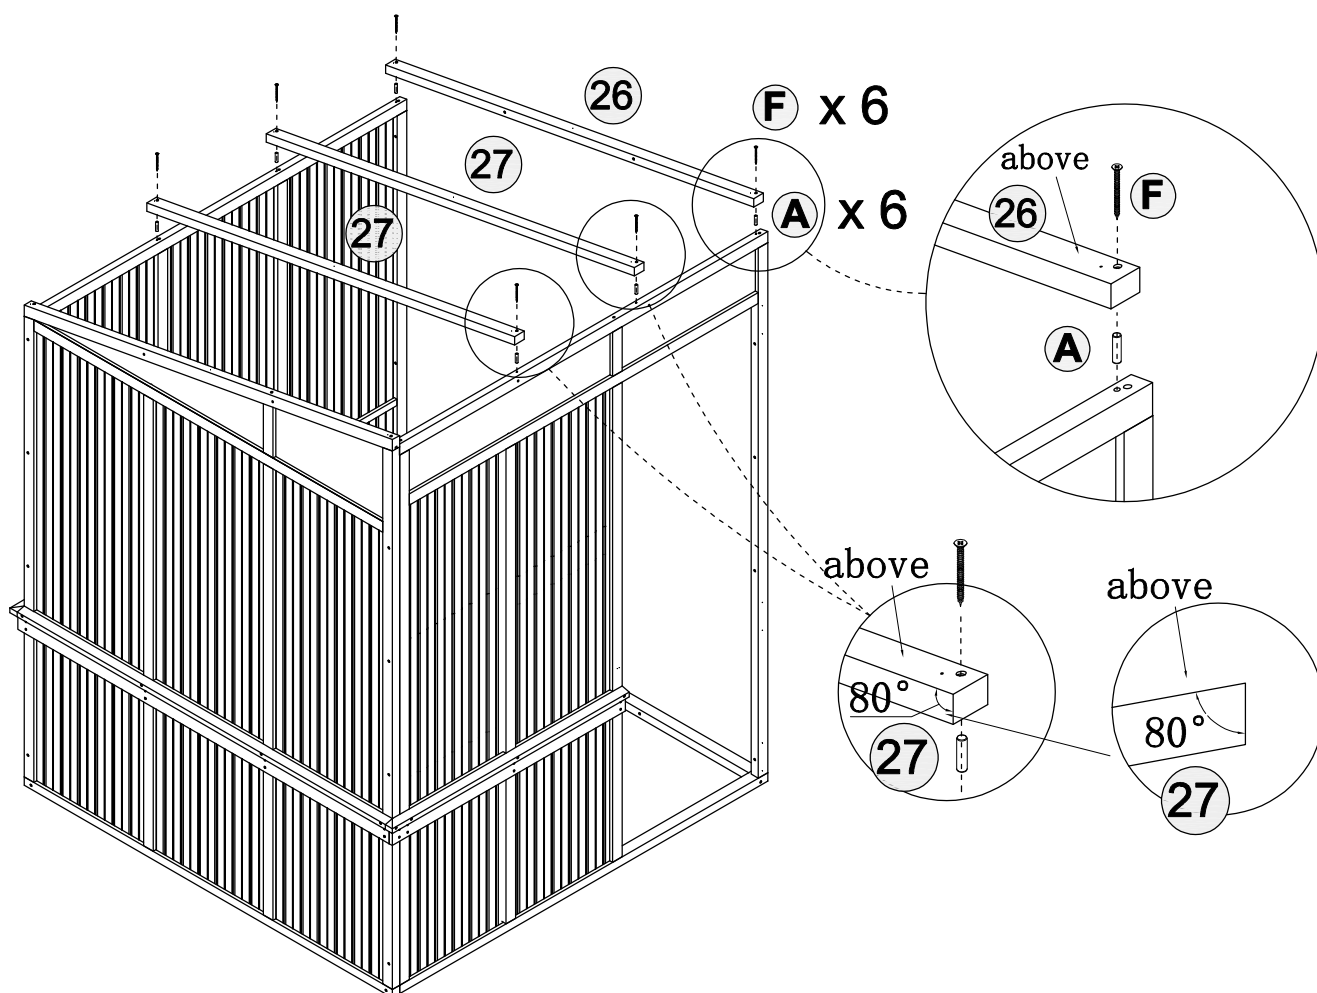

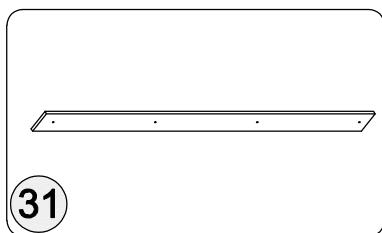

Side roof panel

 Qty: 1



Ø8*30

A

x 2





M4*35

D


x 4

  1. Attention should be paid to the front and back ends of the components
2. Connect with hardware A first, then install with hardware D


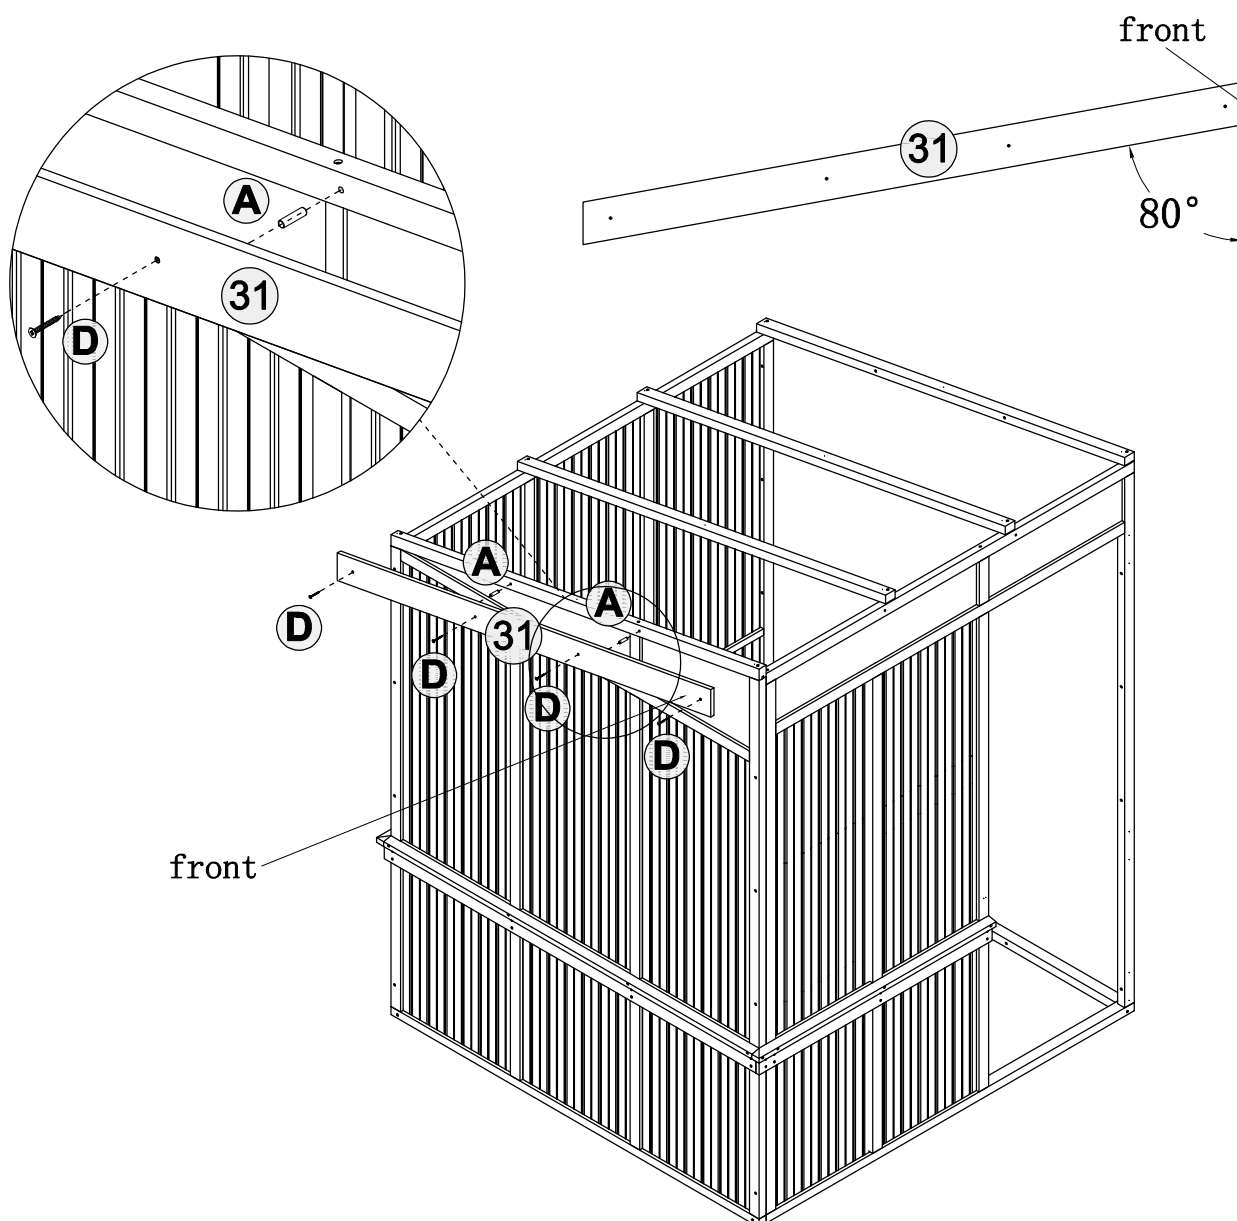


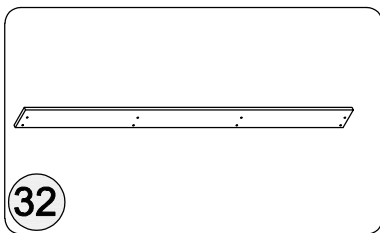





32
Front roof panel
Qty: 1


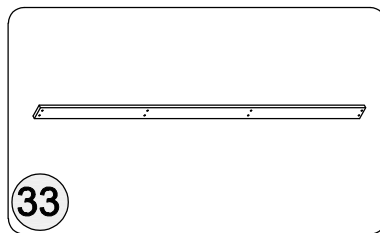 


33
Rear roof panel
Qty: 1

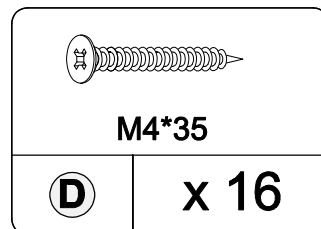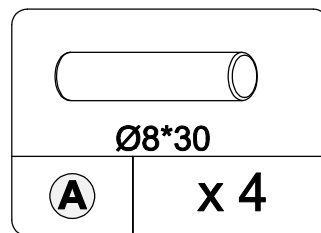  

      1. Pay attention to the top and bottom of the components.
2. Connect with hardware A first, then install with hardware D.

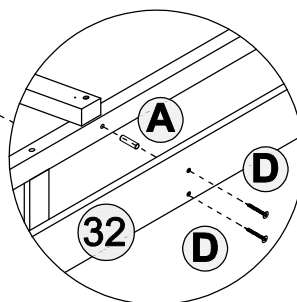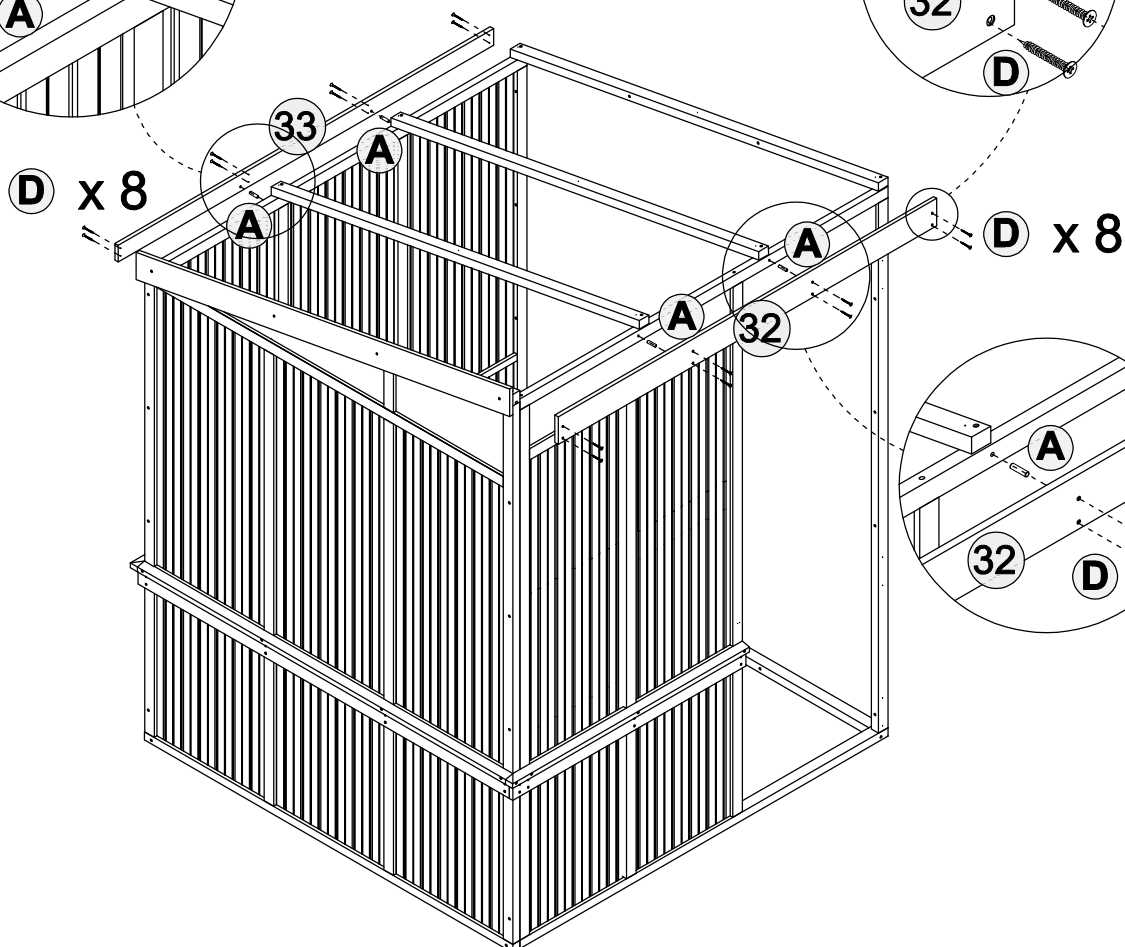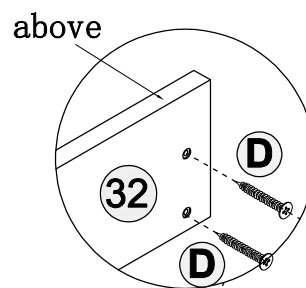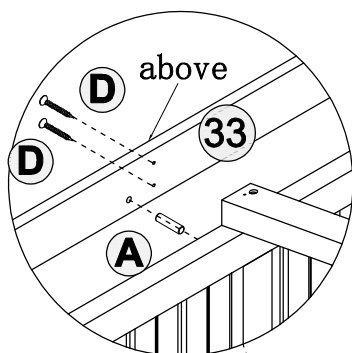

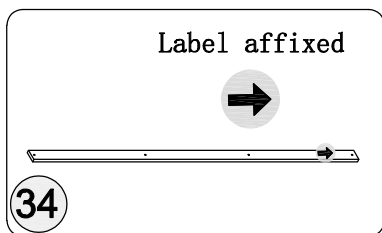

Top support strip
Qty: 3

 


 
M4*35

D

x 12

1. Use hardware D to pass through component 34 and install it towards the lead hole

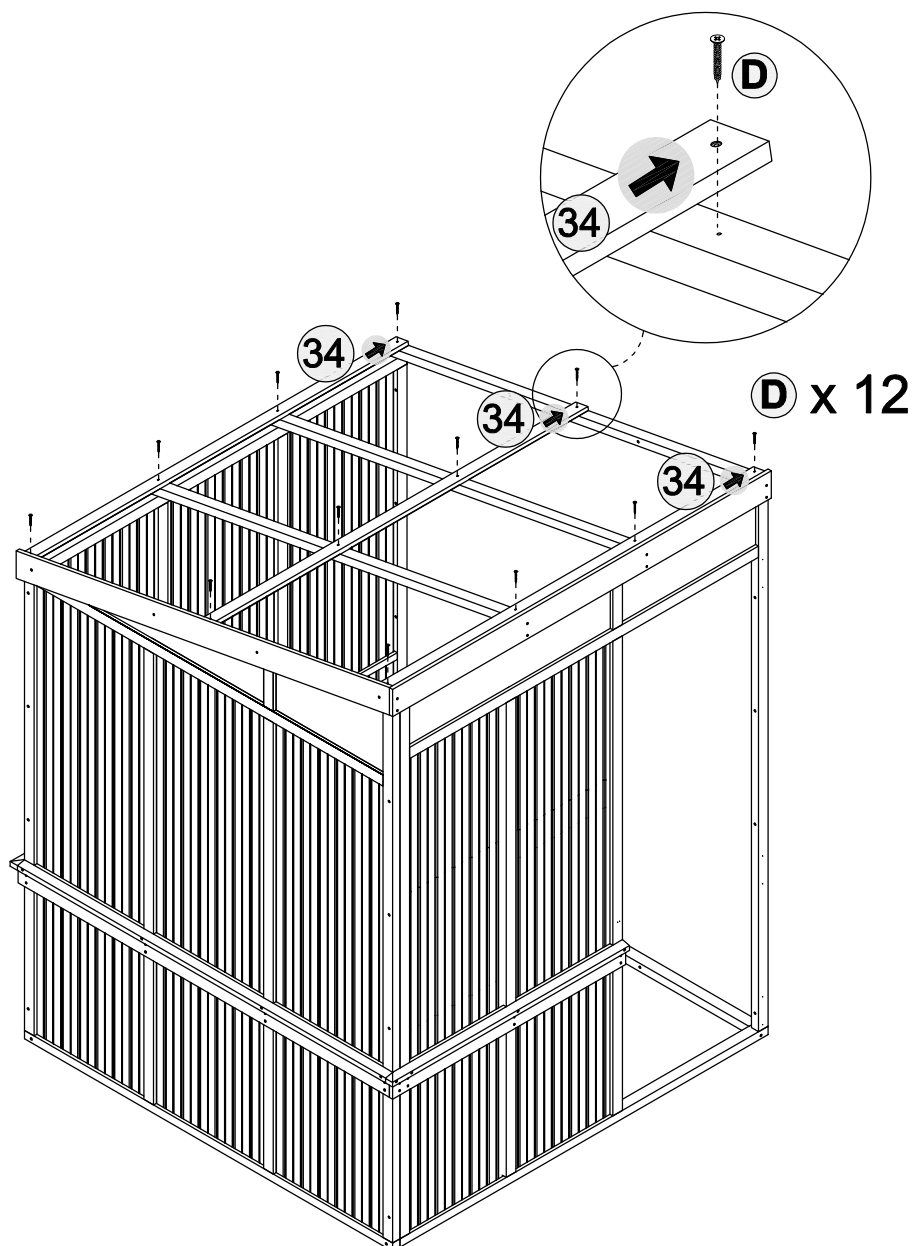






M5*70

G

x 12

   1. Connect to another sunroom, align it, and install it with hardware G

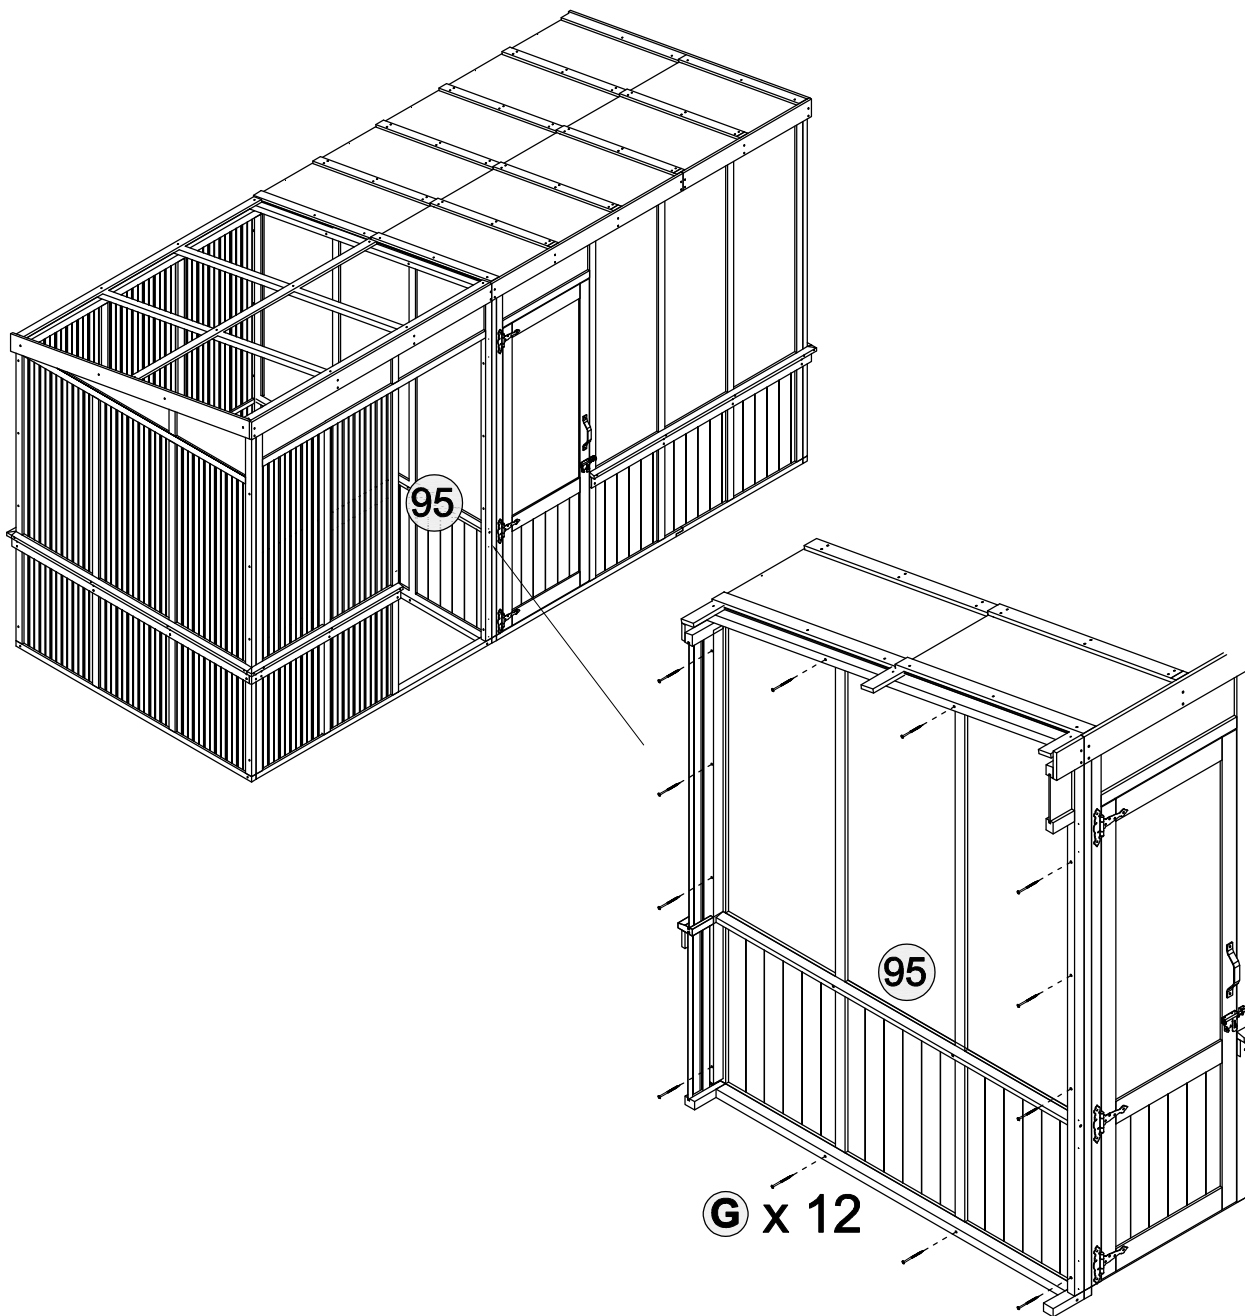

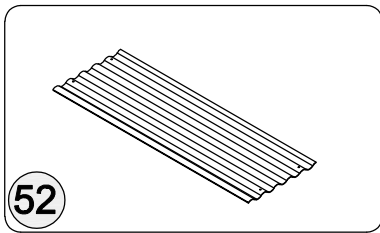

top cover plate

Qty: 2



M4*30

C

x 6

 


 
Ø15

J

x 6

1. First, cover component 52 below, and then cover another component 52 above
2. Thread hardware C through hardware J and install it into the lead hole of component 52

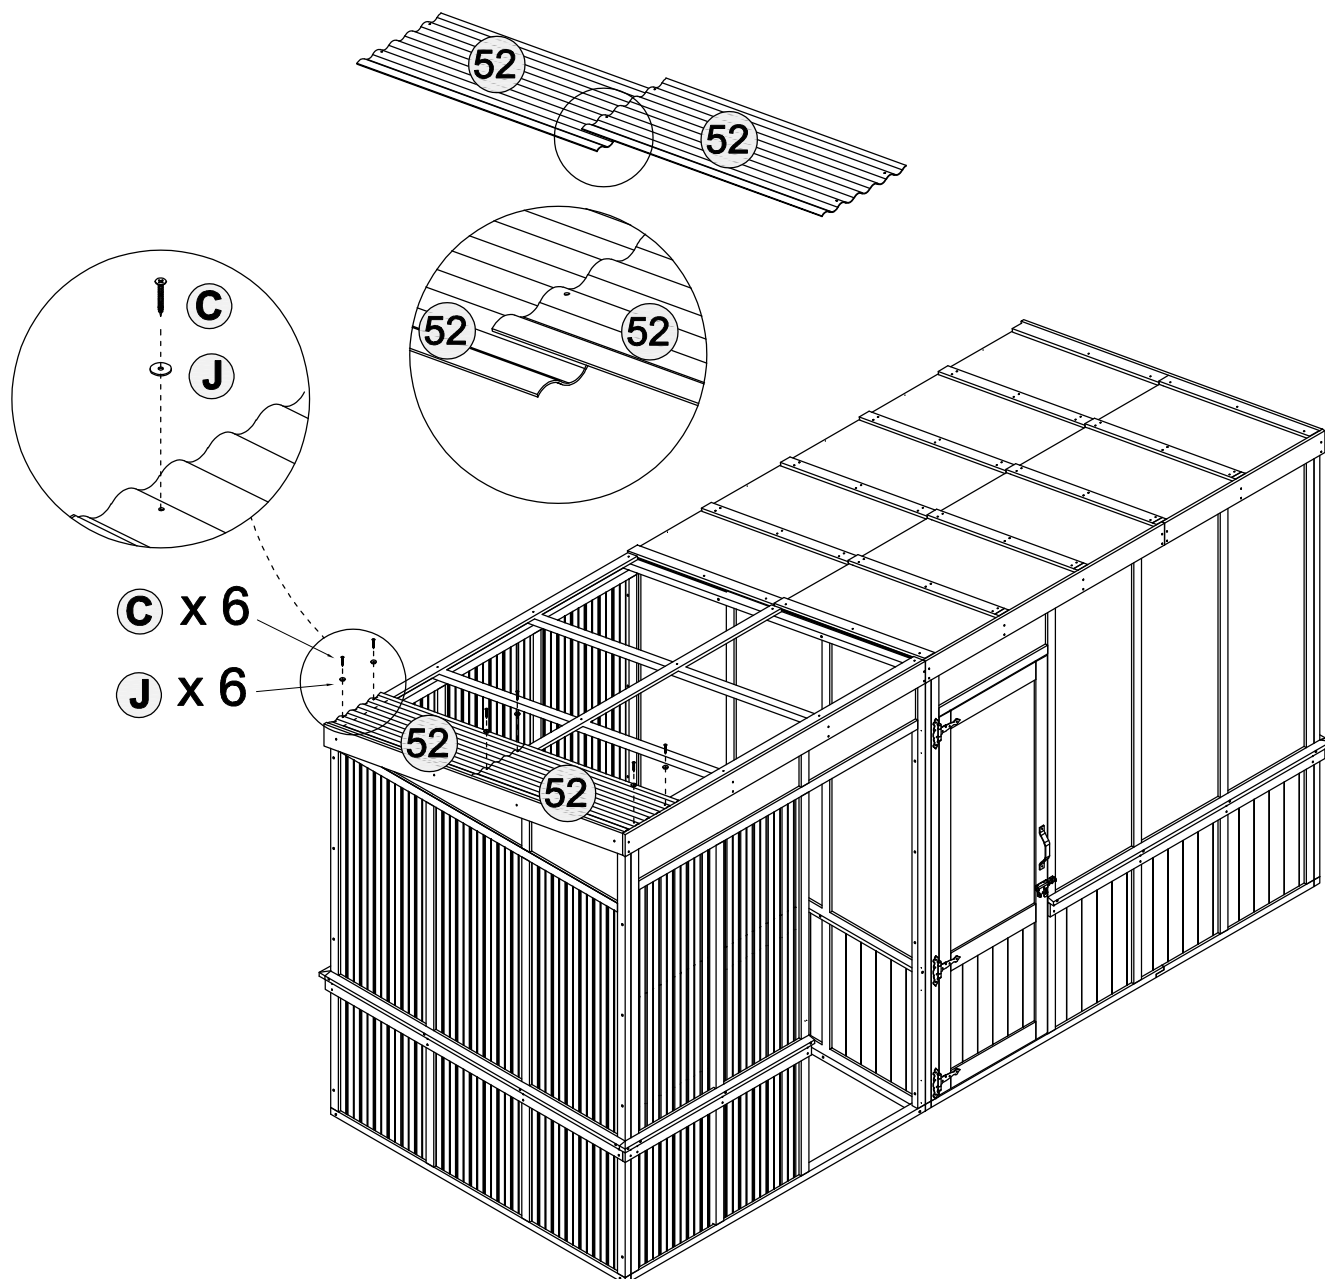

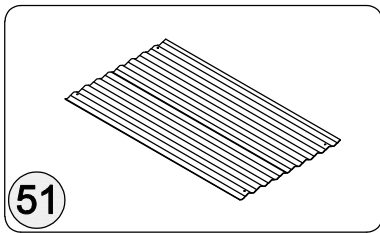

51

top cover plate

Qty: 2



M4*30

C

x 6

 
 
 


Ø15

J


x 6


1. Install component 51 according to the previous method

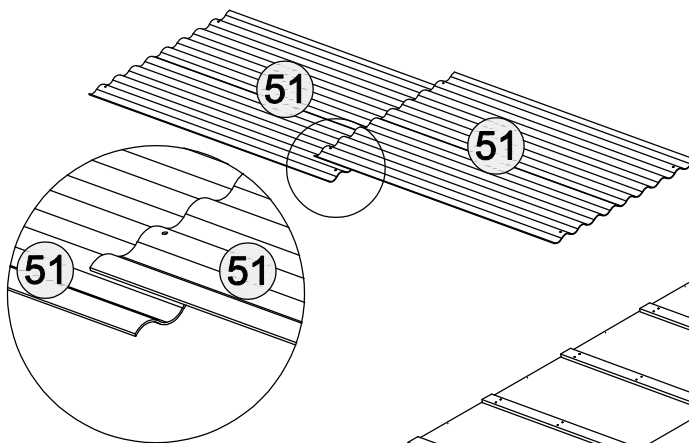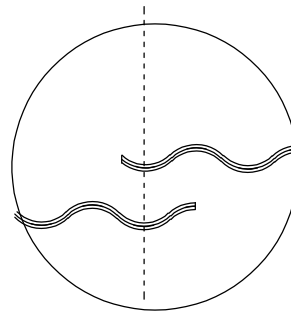

C x 6

  J x 6

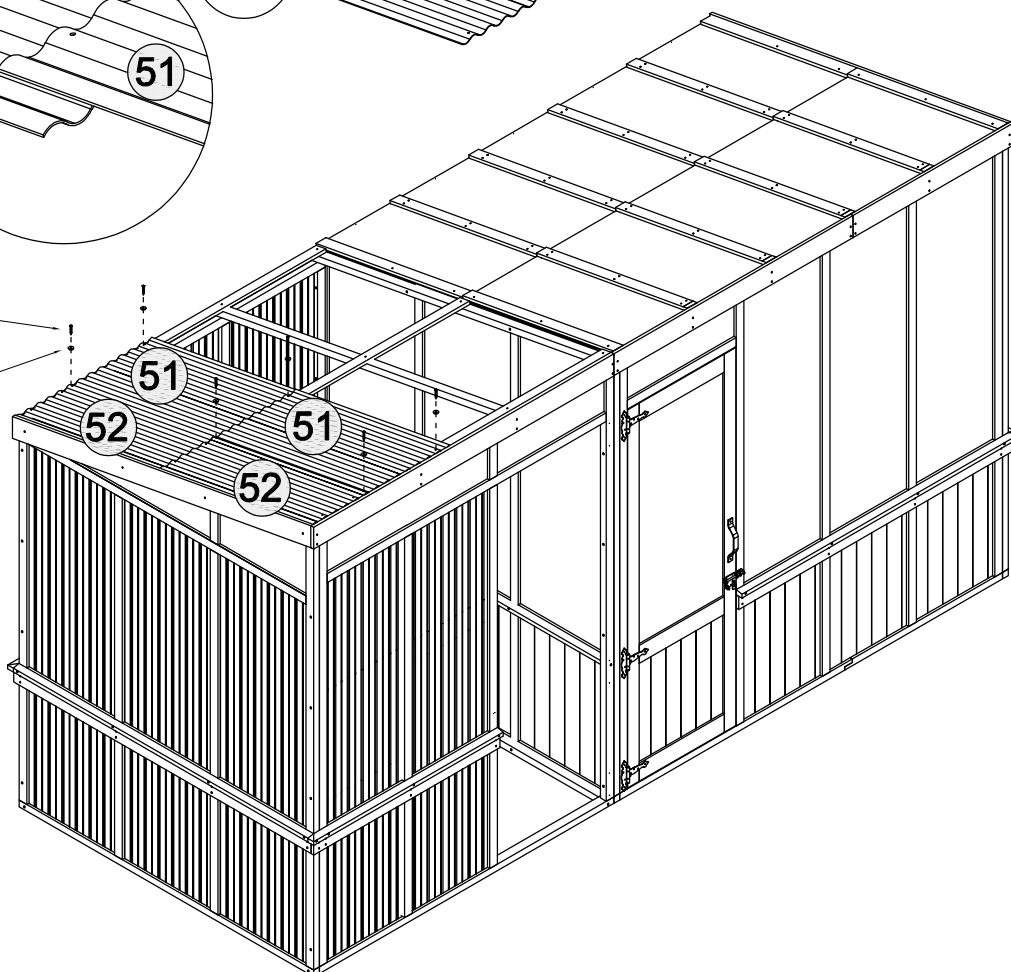

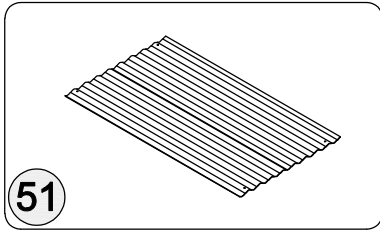


top cover plate
Qty: 4



M4*30

C

 x 12







Ø15

J


x 12

    
1. Install component 51 according to the previous method

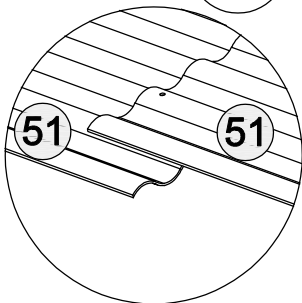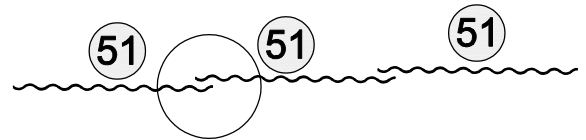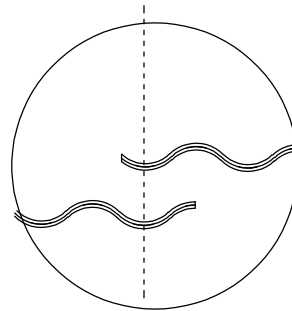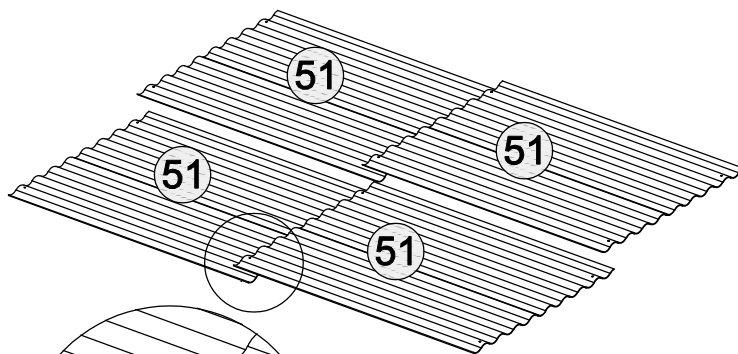


C x 12

  J x 12

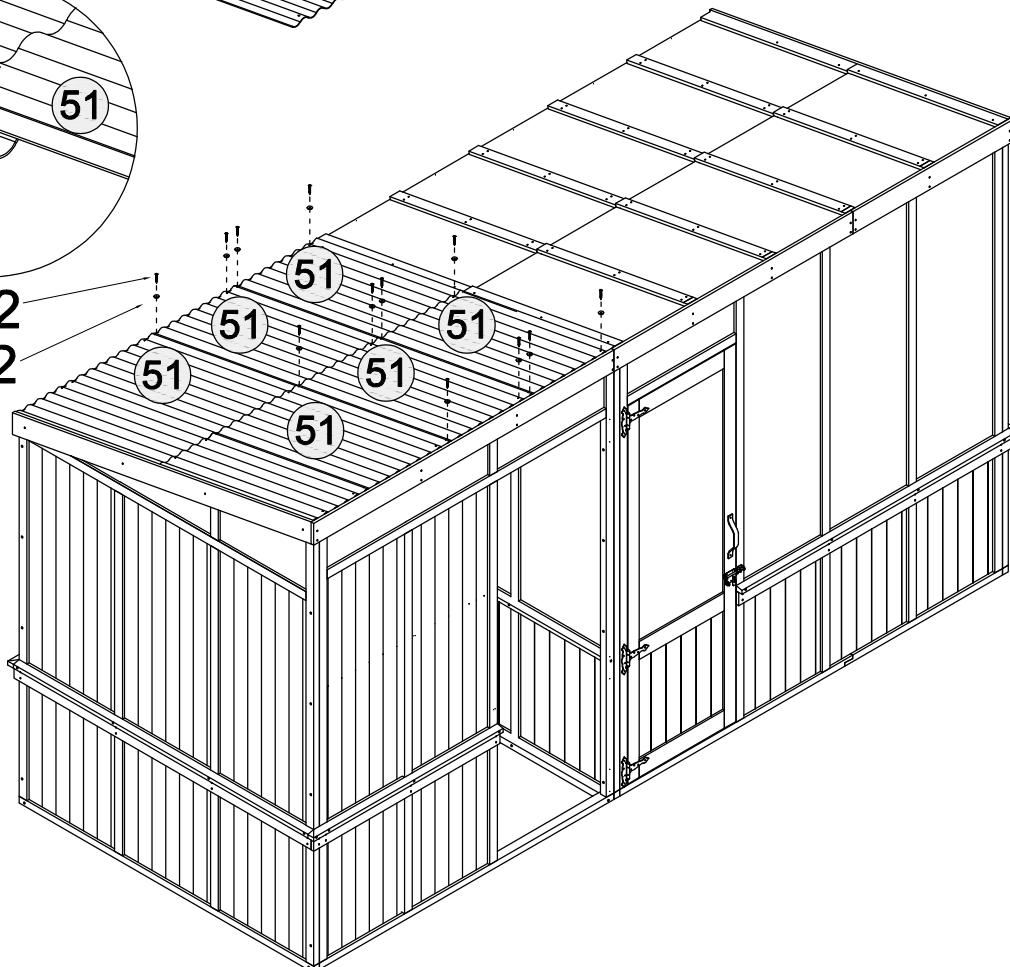


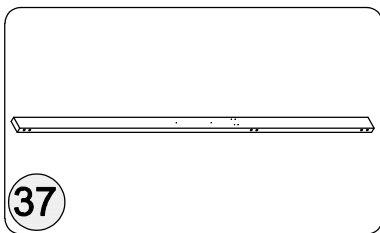


Left door strip
Qty: 1

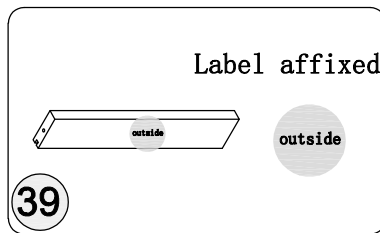 


Door up strip
Qty: 1

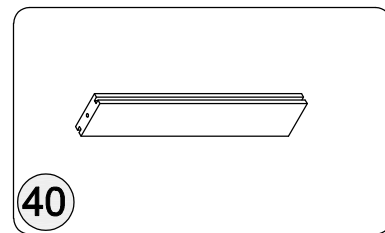 


Door middle strip
Qty: 1

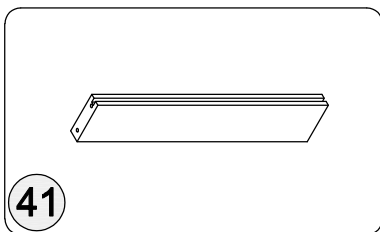 

Door down strip
Qty: 1



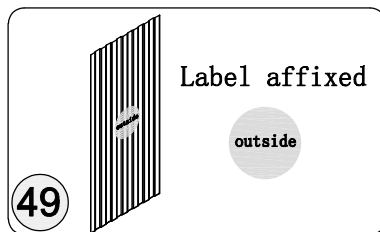 




Door core board
Qty: 1

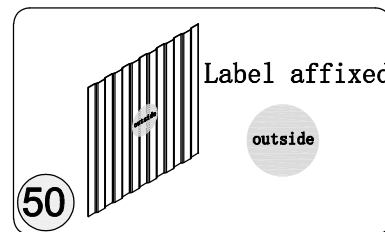 


Underdoor core board
Qty: 1

     1. Connect with hardware A first, then install with hardware I

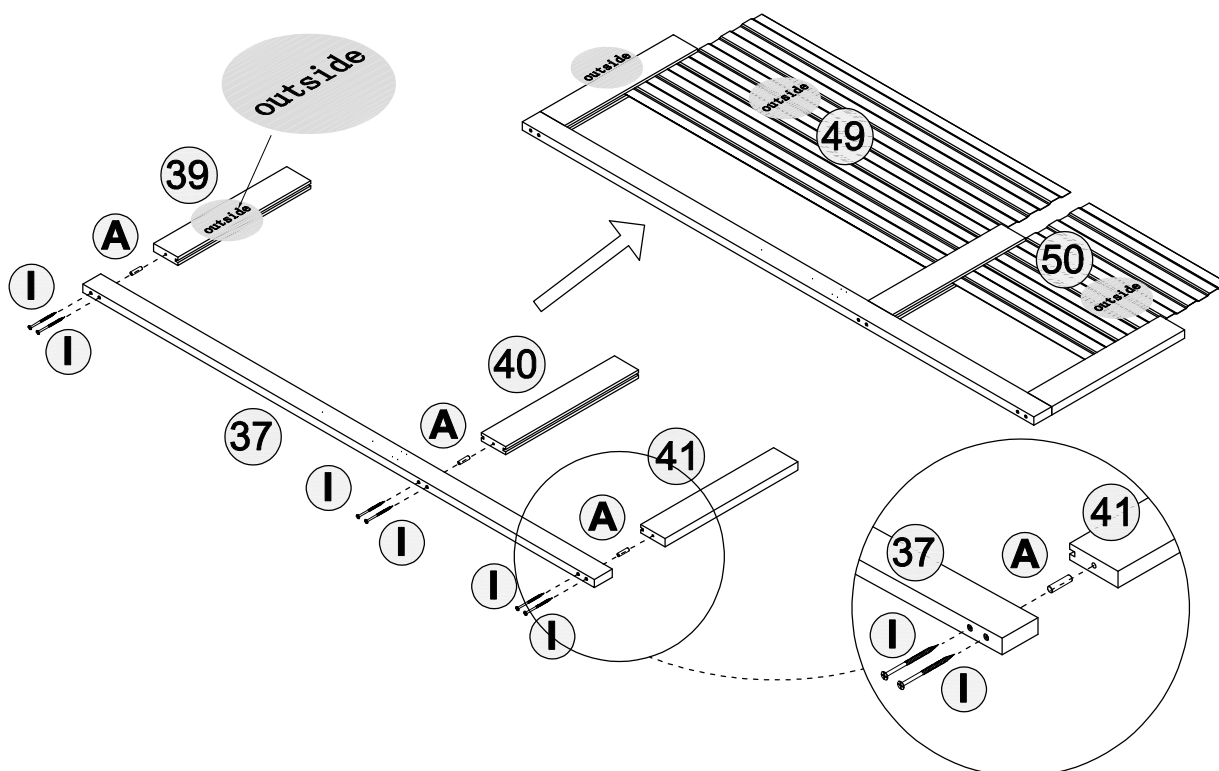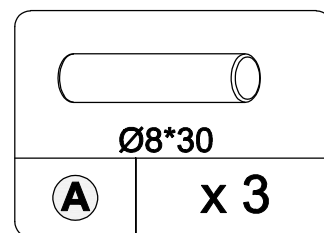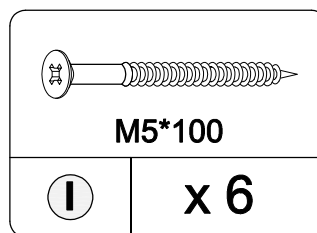


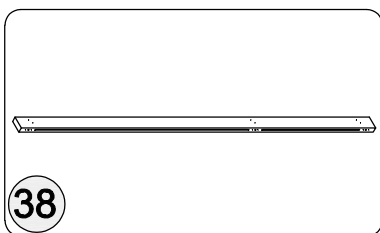


Right door strip
Qty: 1

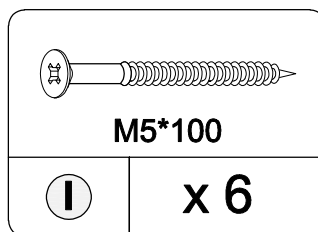 


I x 6

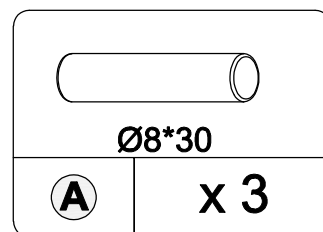 

A x 3

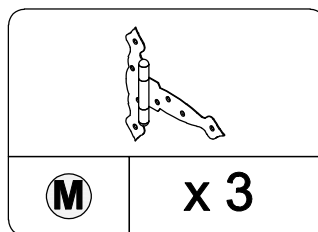 


M x 3




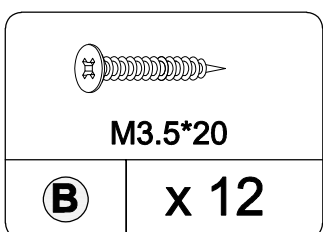 


B x 12




1. Connect with hardware A first, then install with hardware I

     ⚠ 2. Pre-install the hardware B for the pilot hole, and then install the other holes of the hardware B.


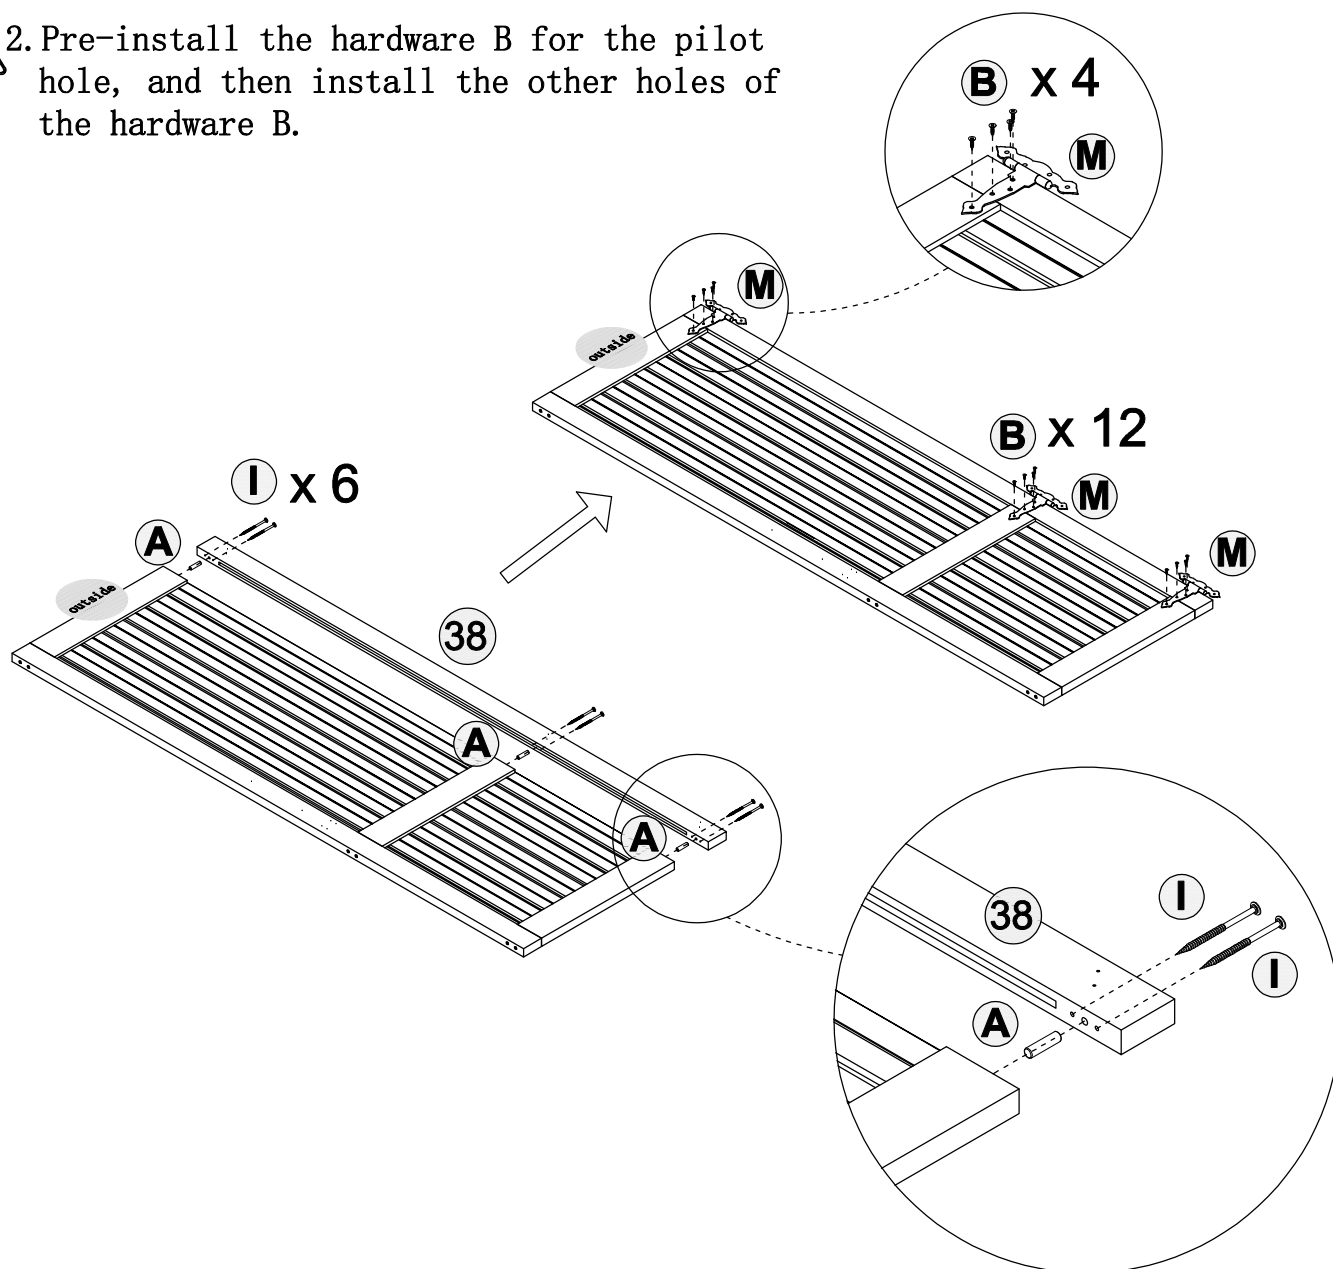


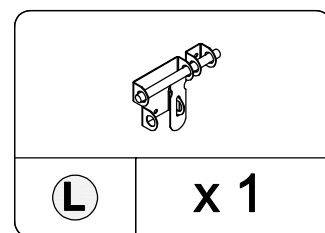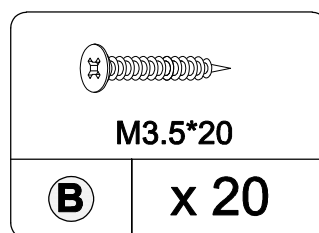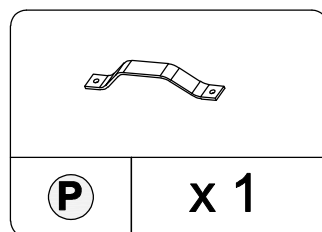

  
 
1. Pre-install the hardware B for the pilot hole, and then install the other holes of the hardware B.
2. Please note that the hole positions of the pilot holes must be aligned

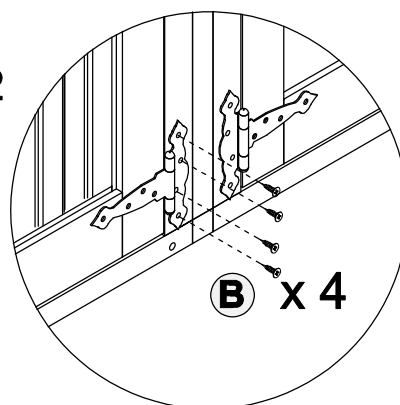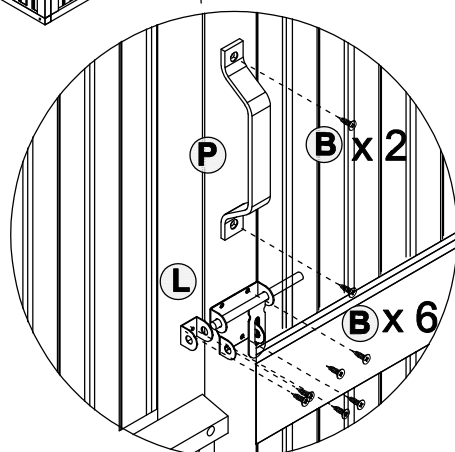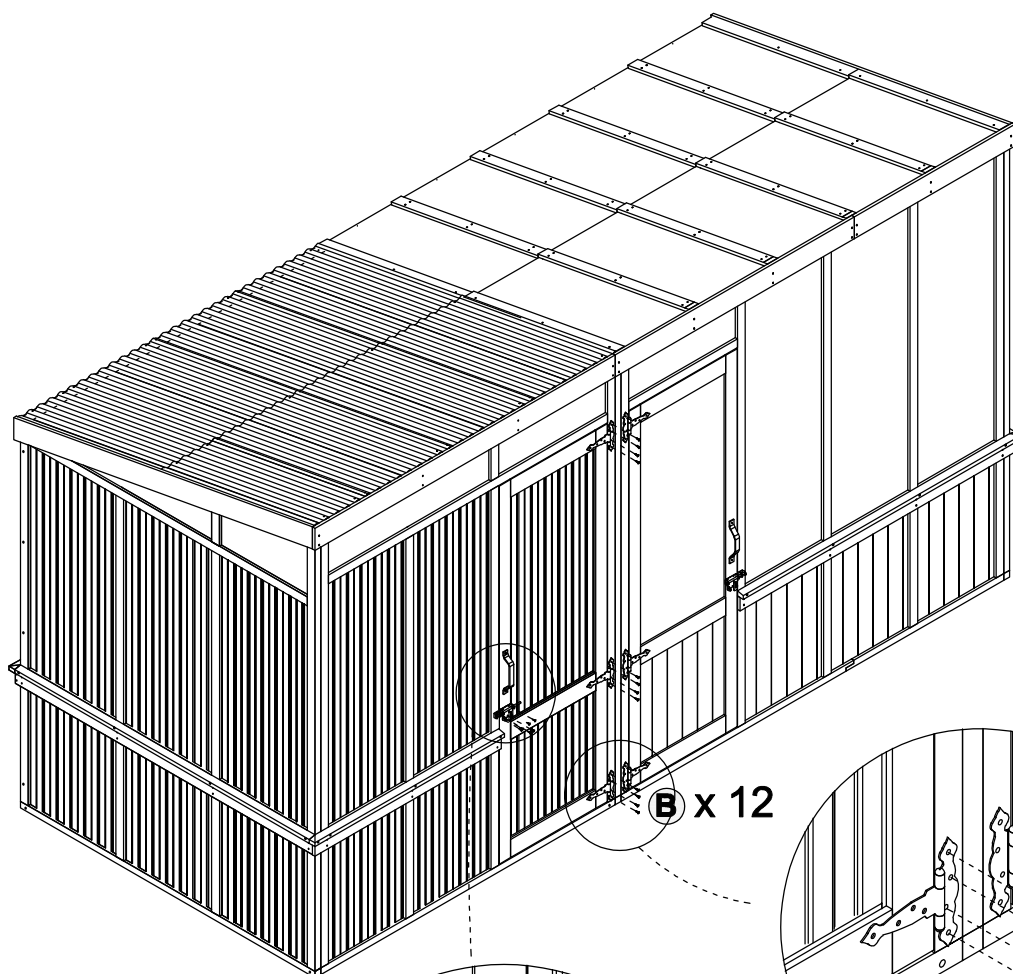

  1. Install hardware behind the door
2. Install towards the lead hole
3. Please note that the hole positions of the pilot holes must be aligned

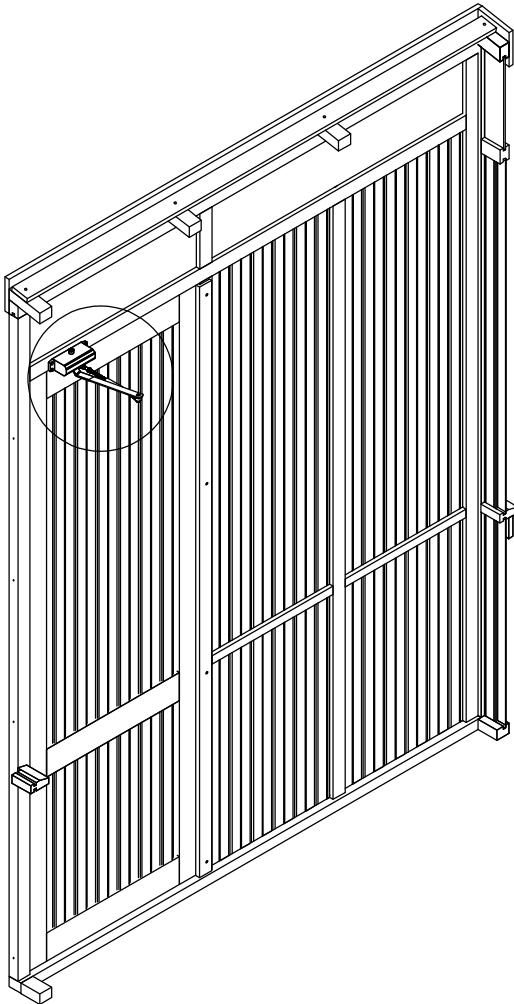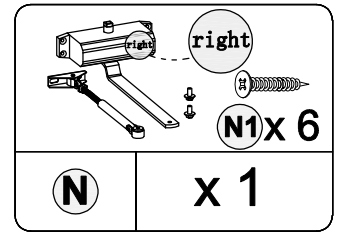

Room door rear pull rod installation

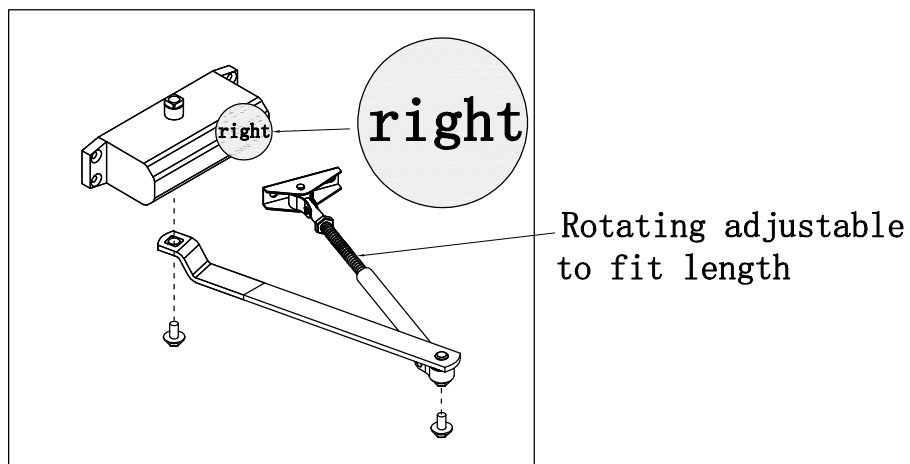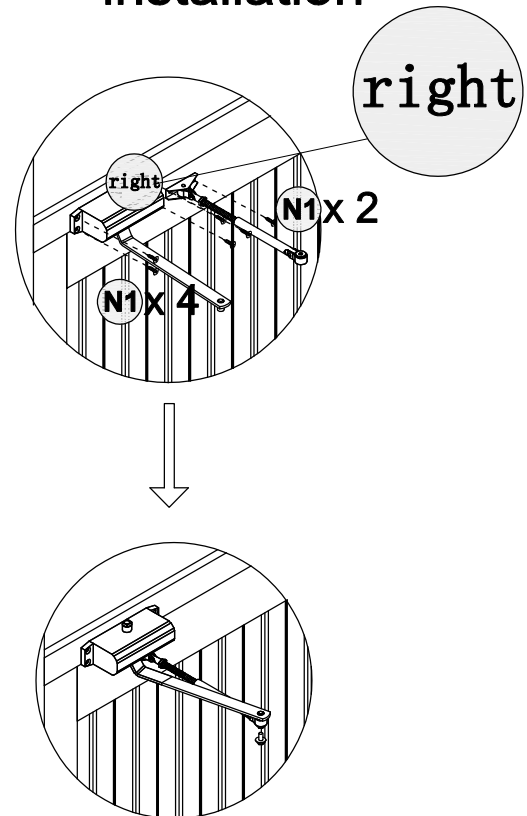  

WARRANTY

WARRANTY CLAIMS

- There is a 30-day warranty for broken furniture or any other problems that do not work properly. The warranty will start from the date of purchase which must be verified by proof of purchase.
- Before making a claim, we may be able to answer your query, simply call us. Please leave your purchase order number, along with some details of the problem, if you want a replacement part. We will arrange within 48 hours. If there is out of stock, we will reply with a shipping date.
- The product must be used in accordance with the instructions provided. For health reasons.
- For other reasons, if the furniture needs to be returned, it must be cleaned and dried and operated within 30 days of receipt.

Type of Warranty Claim

- Failure to follow the furniture instructions will invalidate the warranty. Attention please.
- Does not include damage during installation, but includes damage during transportation.

Scope of responsibility

- Shall not bear any responsibility for misuse or user damage and / or loss of parts during the installation of furniture.
- After using, the damage and scratches of the furniture are not covered by the warranty.

The Warranty Relates to All Bought in The Us and Covers The Following Areas

- Sheet parts: 1 month from the date of purchase.
- Electrical parts: 1 month from the date of purchase.

RETURNS

CHANGED YOUR MIND AND NEED TO RETURN YOUR ITEM?

PLEASE FOLLOW THE BELOW INSTRUCTIONS:

- If you have purchased and have simply changed your mind, follow the retailer's instructions for returns.

DEFECTIVE ITEMS

- If your item is defective in any way, i.e. it doesn't work but you can't identify why, in the first instance, please call us.

DAMAGED ITEMS

- If you receive an order with obvious shipping damage from the retailer, then we suggest the delivery is refused. If the delivery has been accepted and then shipping damage is found, please follow the specific instructions advised by the retailer.
In all circumstances please save all packaging material and paperwork for the order. Please be aware that if you dispose of packaging material or attempt to return the merchandise without contacting the fulfiller, you jeopardise your chances of making a claim, and you may not receive a credit for the return.

AFTER-SALES CONTACT



adelahu@fufugaga.com



208-820-0068
208-820-0799