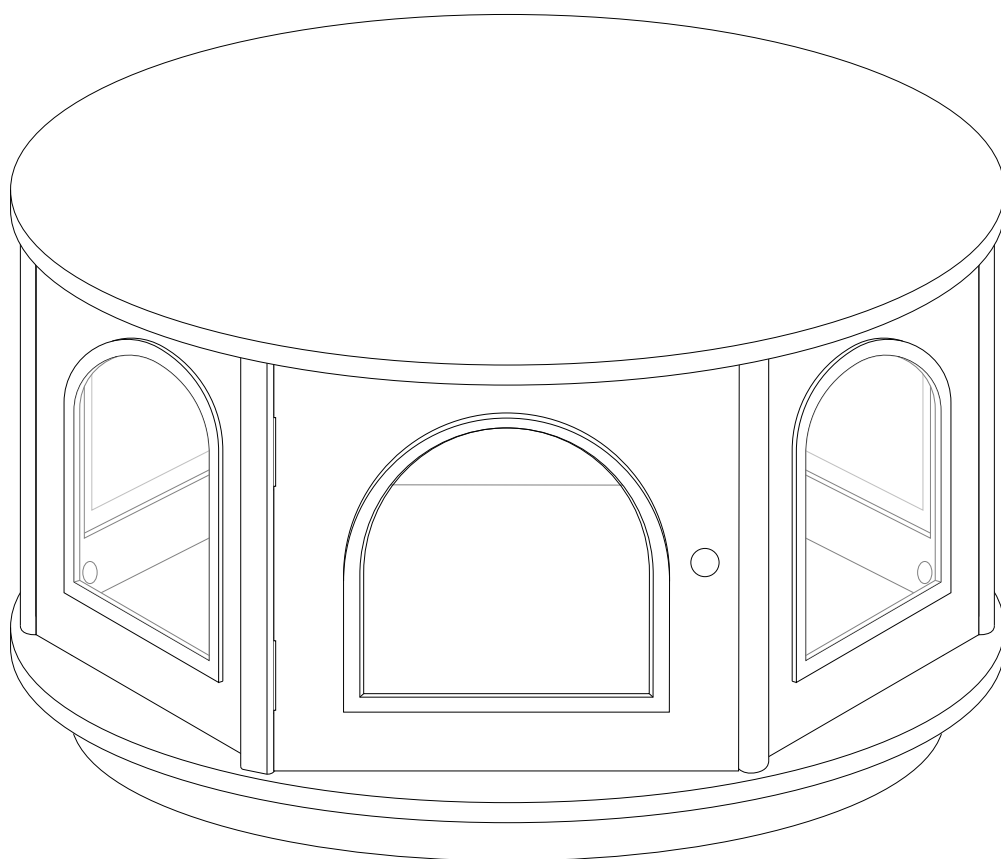 
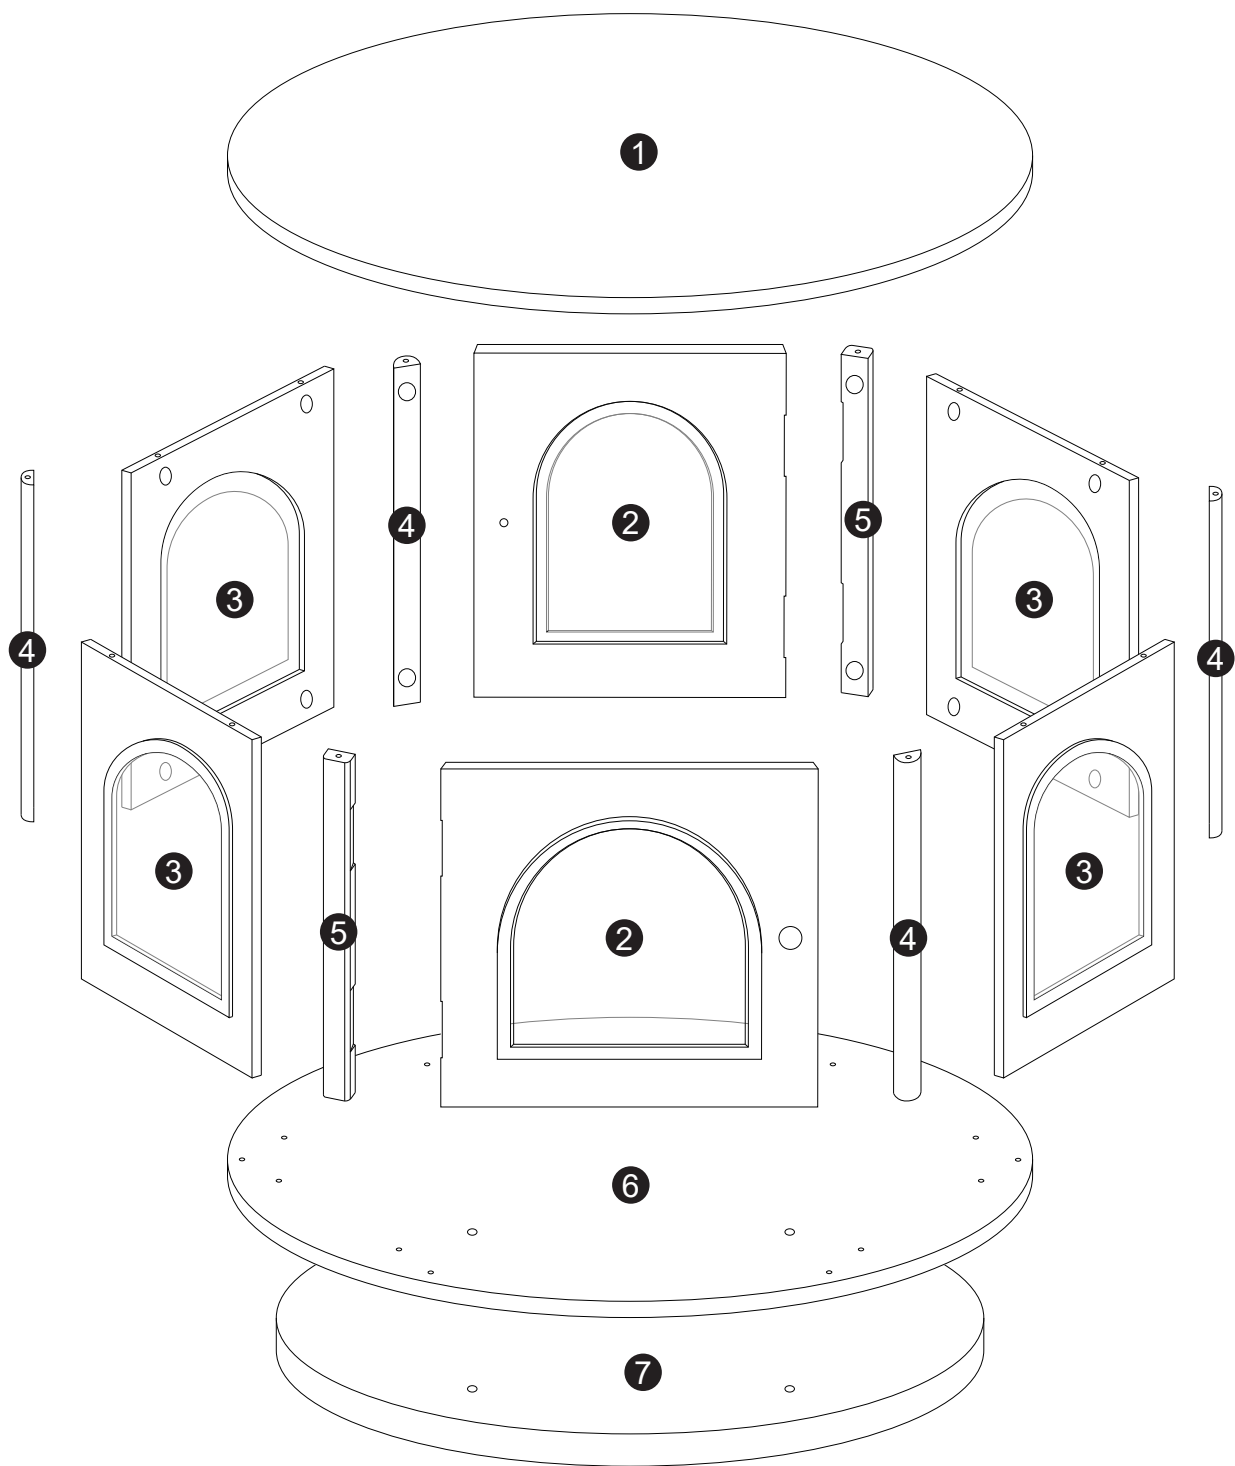 


Assembly Instructions

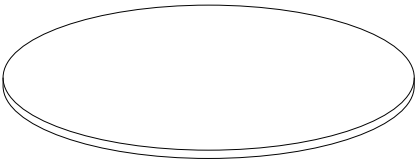 
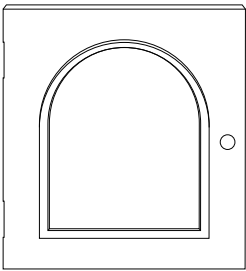 
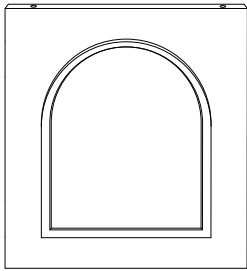 
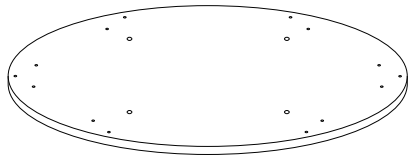 
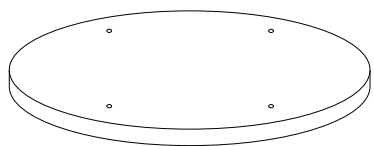 




 
 
 
 
 
 
⚠ Caution

 
 
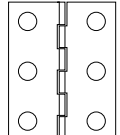 
Make sure all parts are included. Most board parts are labeled or stamped on the raw edge. Contact us for a free replacement if you encounter any damaged or missing parts.

Parts List

1  1 pc	2  2 pcs	3  4 pcs
4  4 pcs	5  2 pcs	6  1 pc
7  1 pc		

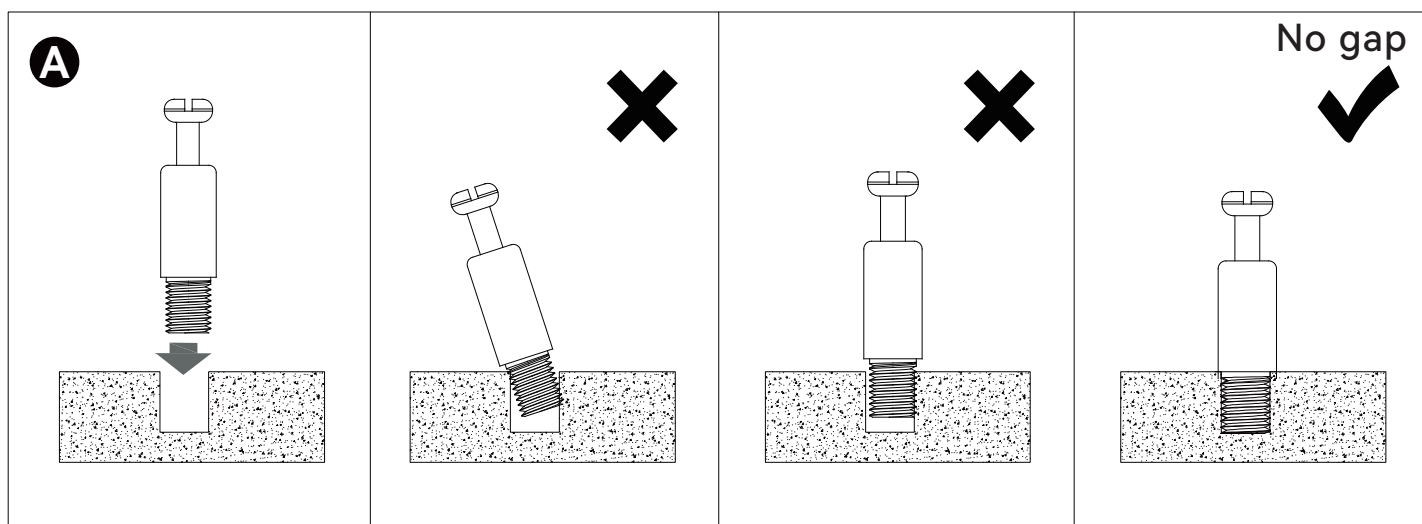 
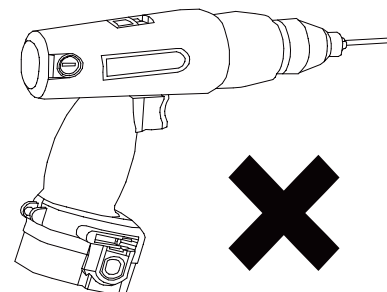 
Hardware List

A	B	C	D	E	F
		 Ø 6x16mm			 Ø 4x16mm
28 pcs	28 pcs	4 pcs	6 pcs	1 pc	2 pcs

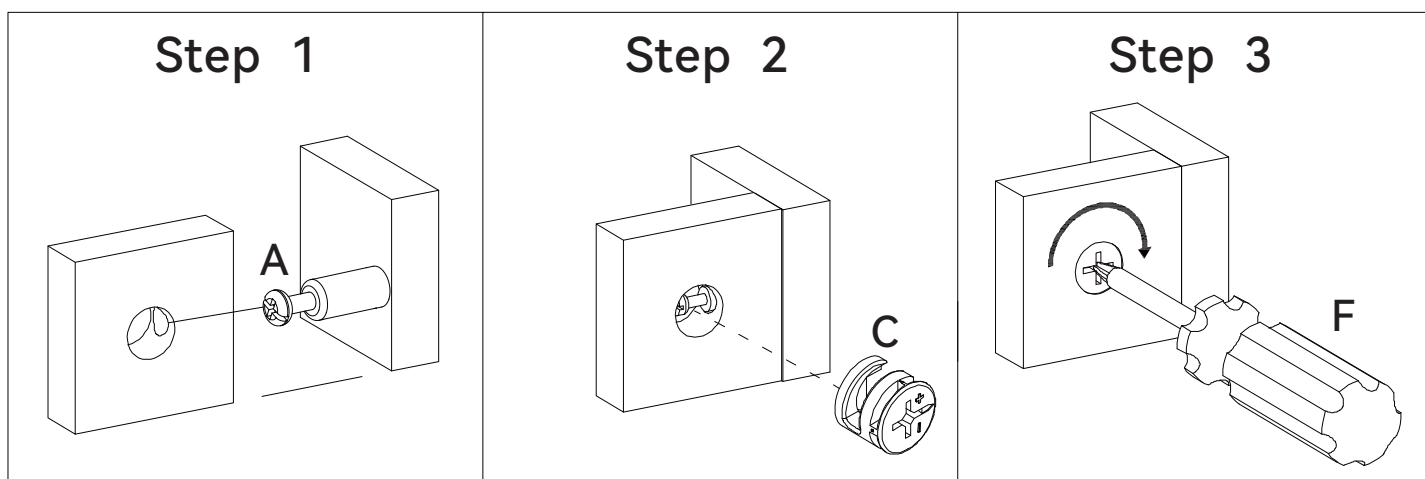 
G	H1	H2	I	J	K
			 Ø 3x12mm		
1 pc	2 pcs	2 pcs	32 pcs	2 pcs	4 pcs

Installation of Cams and Pins

 
 
Read each step carefully before starting. Each step of instruction should be performed in the correct order. If these steps are not followed in sequence, assembly difficulties may occur.

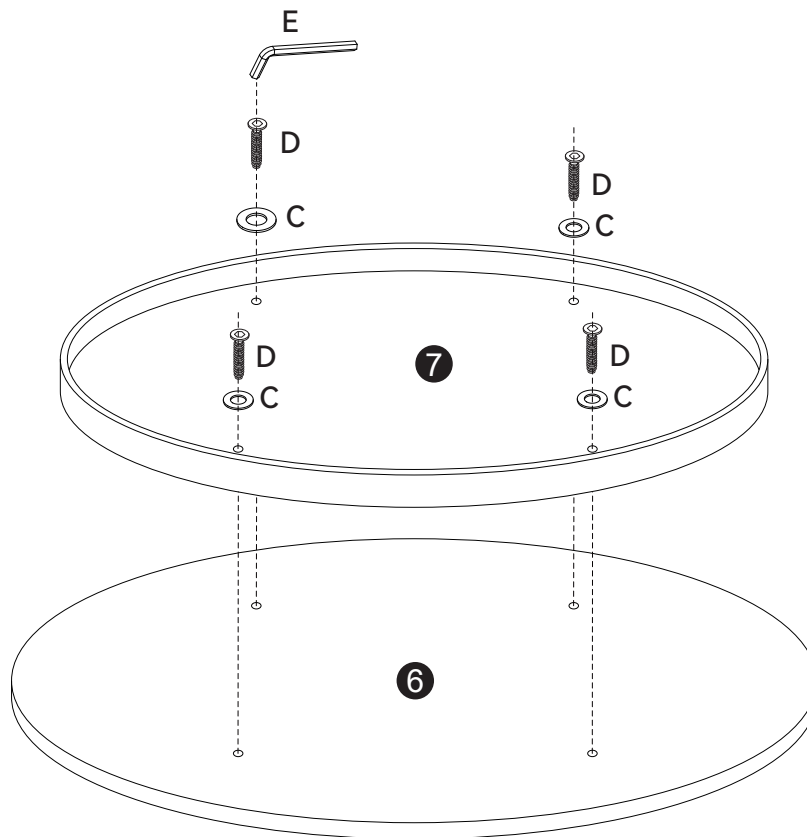 


Screw the pin into the hole. Set the cams correctly by aligning the head of the cams with the lock pins. Lock the cam by turning the cam head with a screwdriver until it is tightened. Please do not use an electric screwdriver to assemble the unit.

 


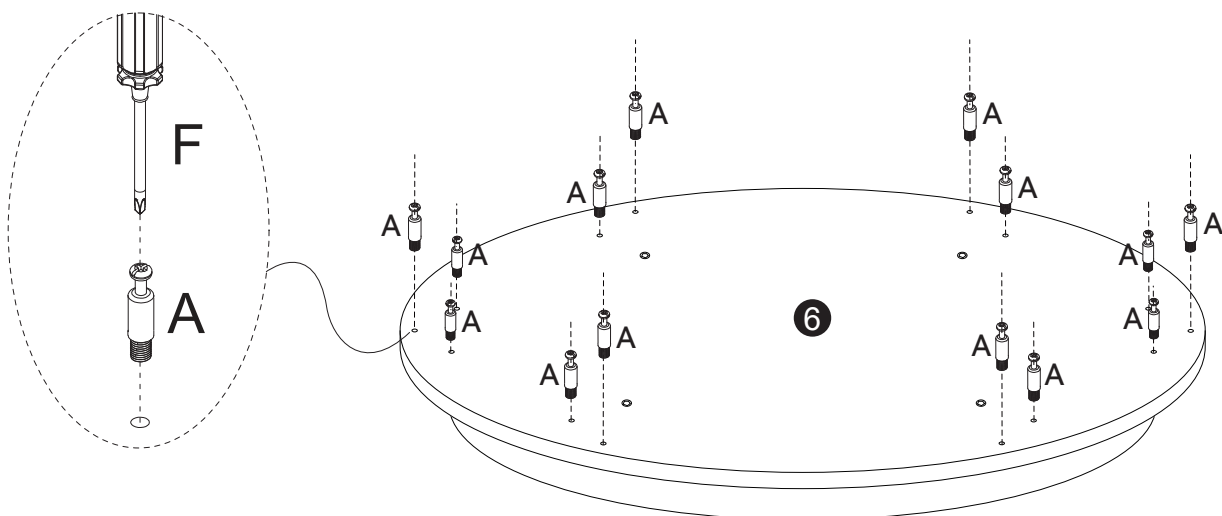 
1

C	D
	
4 pcs	4 pcs

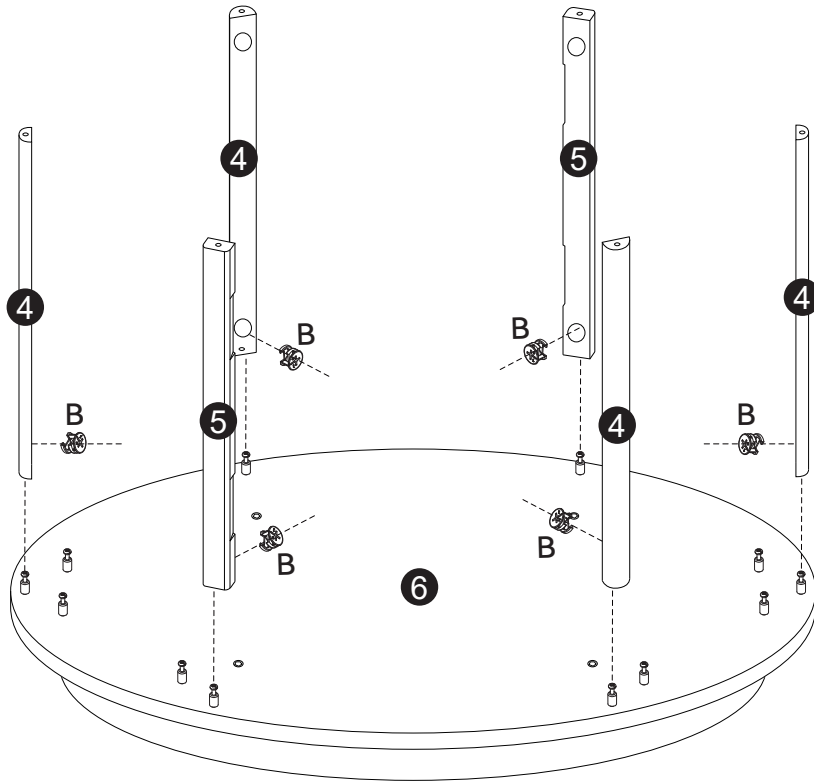 
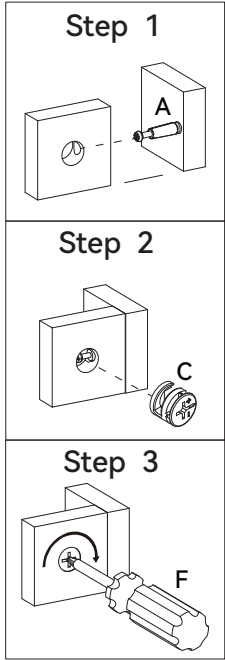 


2

A

14 pcs

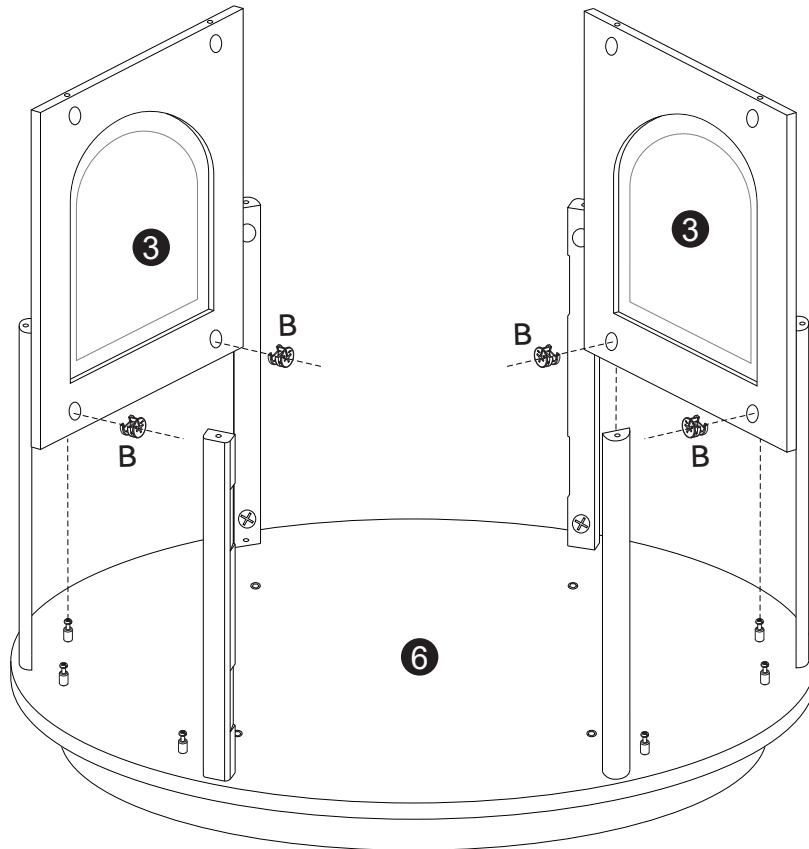 


3



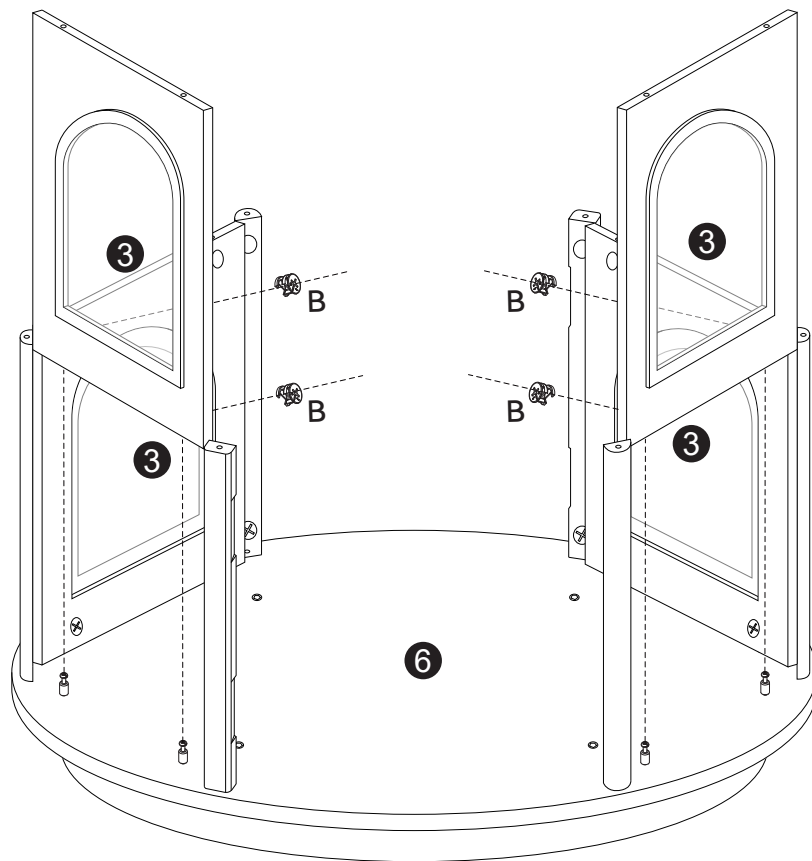 
B
6 pcs

4



B
4 pcs

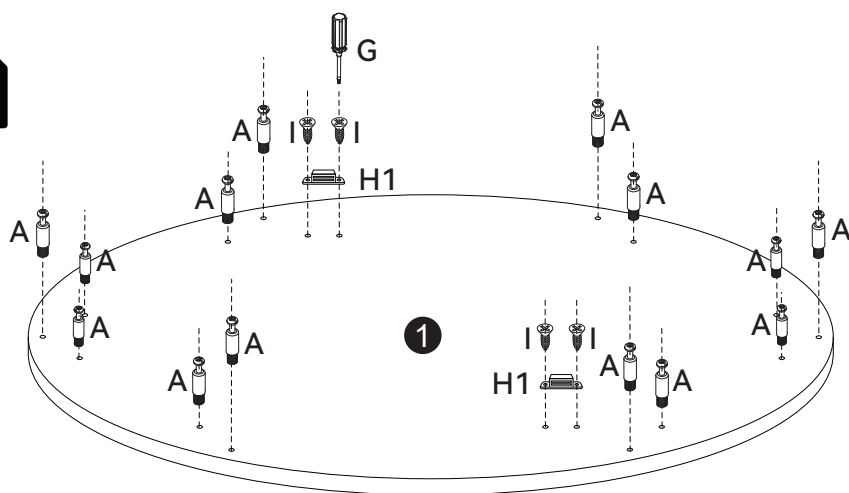 
5

 


B

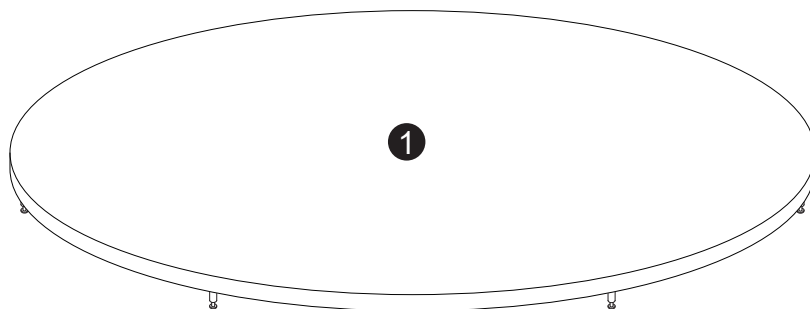 
4 pcs

6

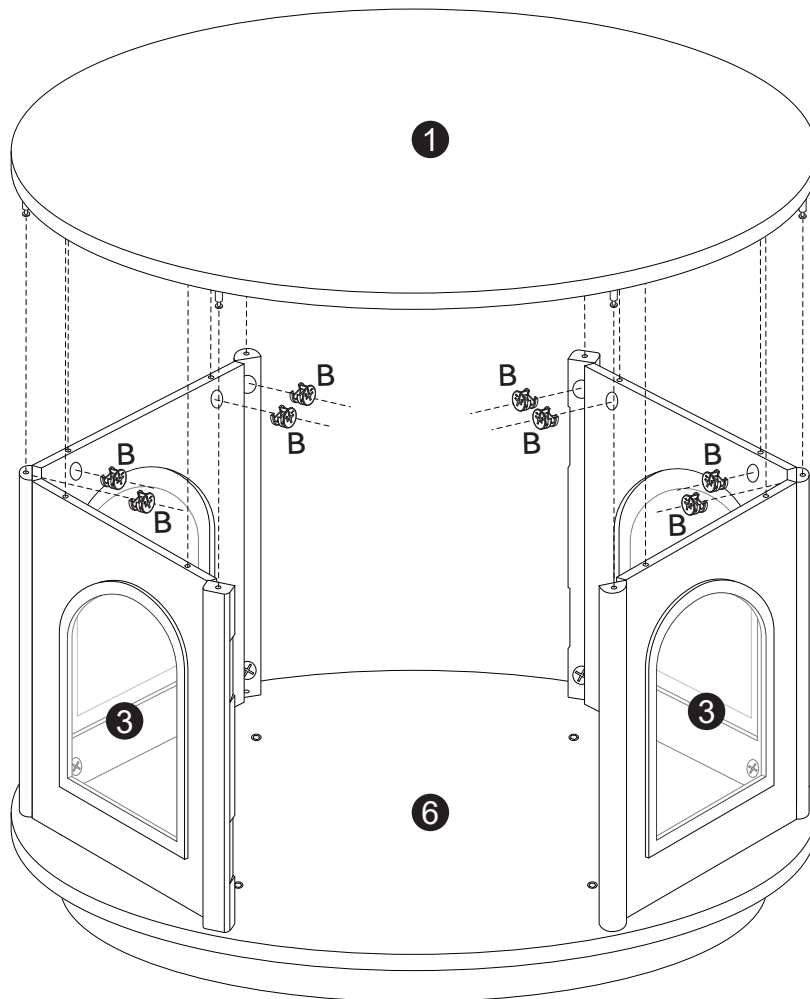 


H1	I
	
2 pcs	4 pcs
A	
	
14 pcs	

Rotate 180



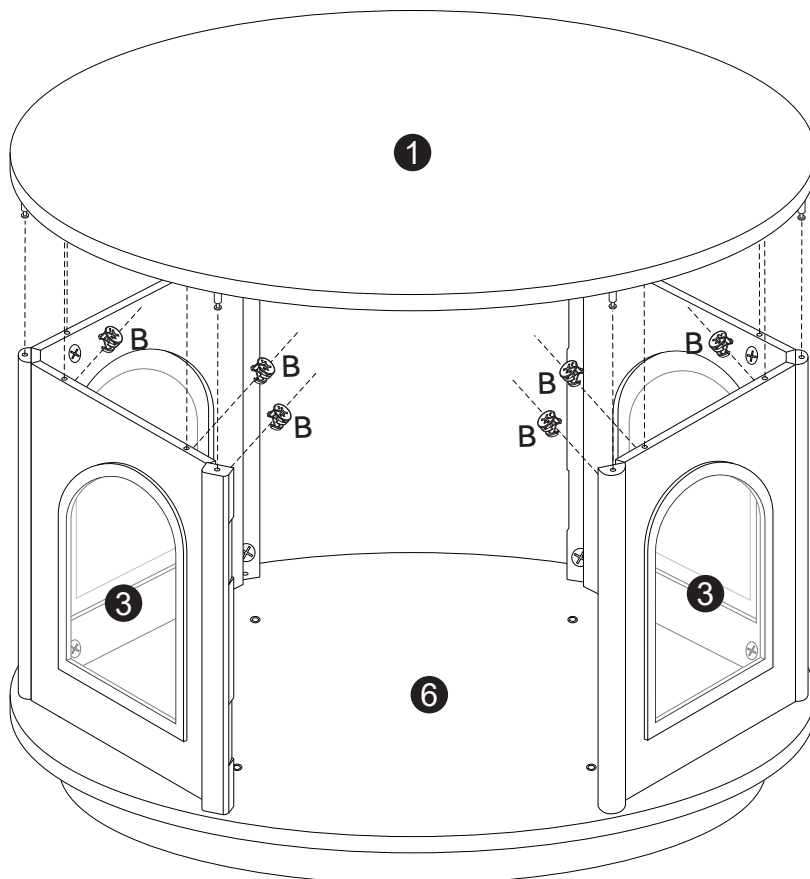 
7



B

8 pcs

8

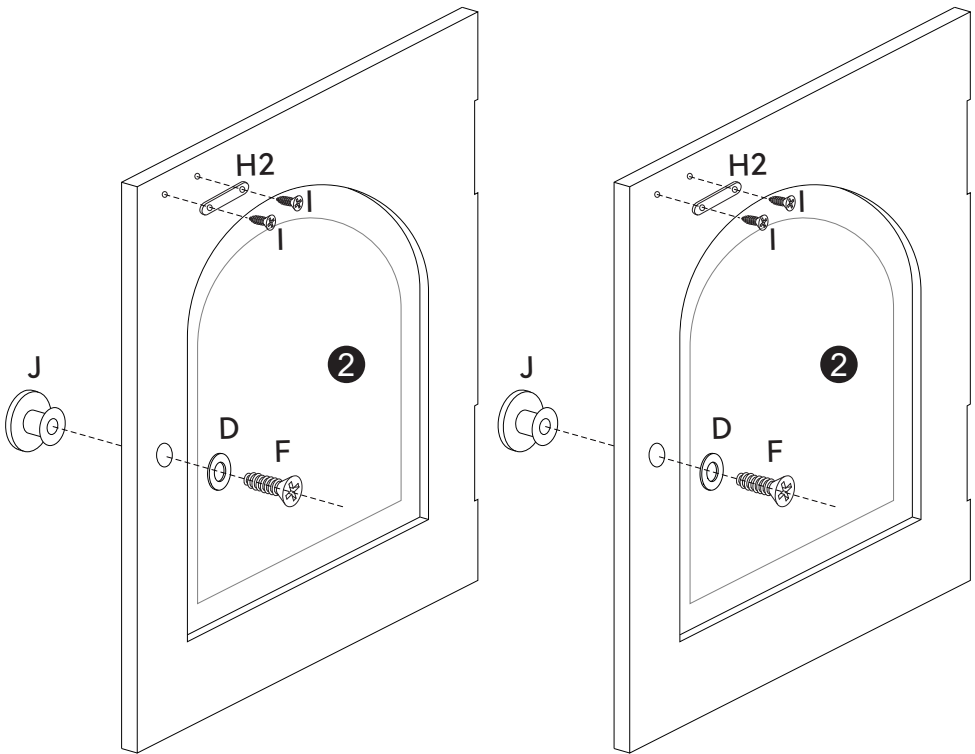 


C

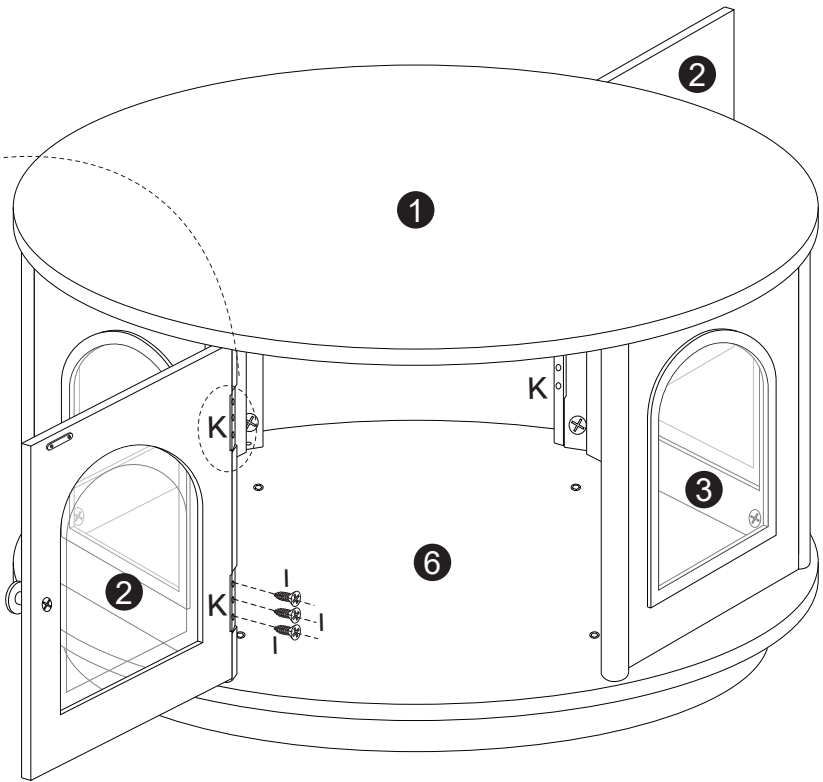 
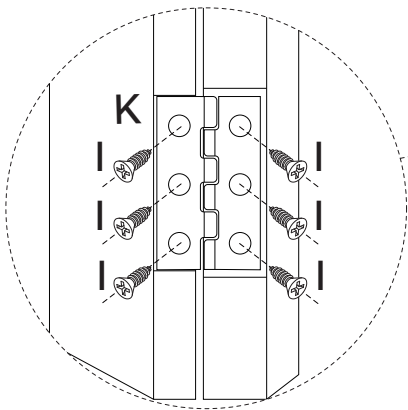 
6 pcs

9

 
I	H2	J	F	D
				
4 pcs	2 pcs	2 pcs	2 pcs	2 pcs



10



I

24 pcs
K

4 pcs

Thank you for your support!

