










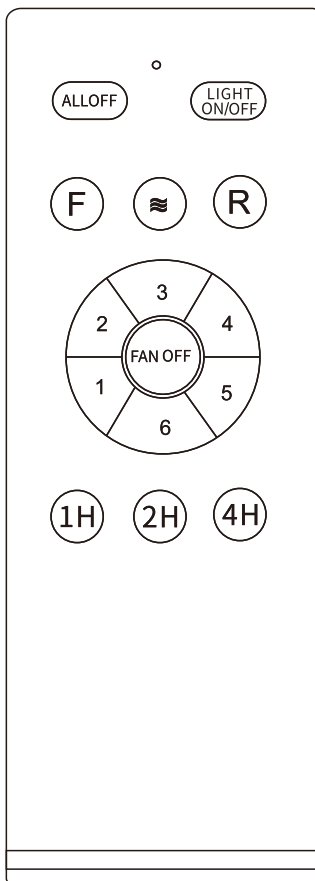


Notes:

1. Do not install any dimming switches, but you can use the simple "on/off" wall switch.
2. This output has completed the code before the factory, which can be used directly without re-coding.
3. If you need to match the code: press the code key within 5 seconds of power on, and the light flashes to match the code successfully.
4. The remote control uses the No. 7 battery and needs to be purchased and used by yourself.

## Remote control function definition



-  ALL OFF
-  Light ON/OFF
-  FAN Forward
-  Natural Wind
-  FAN Reverse
-  1 2 3  
Speed / Fan ON
-  4 5 6
-  FAN Timing 1 hours
-  FAN Timing 2 hours
-  FAN Timing 4 hours
-  FAN OFF  
SET UP MODE