

ASSEMBLY INSTRUCTIONS

DINING TABLE


ASSEMBLY
REQUIREMENTS

2-Person
Assembly

30MINUTES
Assembly Time
Approximate

Thank you for purchasing our product!

Please refer and use this assembly instruction to assemble the product. Contact our customer service department in case there are any missing or damage parts or hardware. Replacement parts are normally shipped within 2 or 3 days.

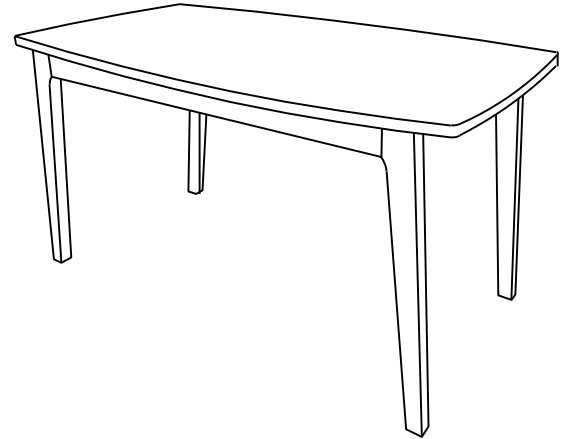

ASSEMBLY PREPARATION

1. Remove all packaging materials, staples and packing straps from the carton.
2. Refer to Parts List and Hardware List and ensure parts and hardware are correct before assembly.
Contact customer service for missing parts.
3. Place all wooden parts on a clean, flat and soft surface (e.g. carpet or rug) to prevent parts from getting scratched.

SAFETY PRECAUTION

1. KEEP ALL HARDWARE PARTS OUT OF REACH OF CHILDREN.
2. DISPOSE PLASTIC PACKAGING MATERIAL IMMEDIATELY TO AVOID ANY RISK OF SUFFOCATION TO CHILDREN AND ANIMALS.

TIPS FOR ASSEMBLY

1. Allow ample room for assembly and in close proximity to where product will be placed.
2. Assemble the product on a surface that does not scratch or damage the exterior gloss and finish of the furniture.
3. Identify all of the parts, hardware and quantities required for each step.
4. During assembly, do not over-tighten any fittings as this may cause damage.
5. DO NOT USE POWER TOOLS TO ASSEMBLE THIS PRODUCT.
6. Always place the product on a flat, level surface.
7. Do not sit or stand on the partially assembled product; only use the product for which it is intended.

CARE AND MAINTENANCE

- Use a slightly damp cloth to clean the product. Do not use bleach or abrasive cleaning material.
- Check all the fittings periodically and re-tighten as necessary. Do not use the product if any of the parts is damaged or broken.
- Never allow any kind of liquid to remain on your furniture. Absorption can cause wood to warp or delaminate.
- Do not place hot items (e.g. hot drinks) directly onto the wood surface.
- Do not drag and/or pull the furniture.

This product is for indoor and household use only - not for commercial use.

ASSEMBLY INSTRUCTIONS


DINING TABLE

PARTS LIST		
No.	Description	Qty
A	Table top	1 pc
B	Table leg	4 pcs

HARDWARE LIST				
No.	Description		Qty	Extra*
C	M8 x 70mm JCB Bolt		8 pcs	1 pc
D	5/16 Spring Washer		8 pcs	1 pc
E	5/16 Flat Washer		8 pcs	1 pc
F	M5 Allen Key		1 pc	
G	Leg Stud			2 pcs

* Extra hardware for spare use

STEP 1

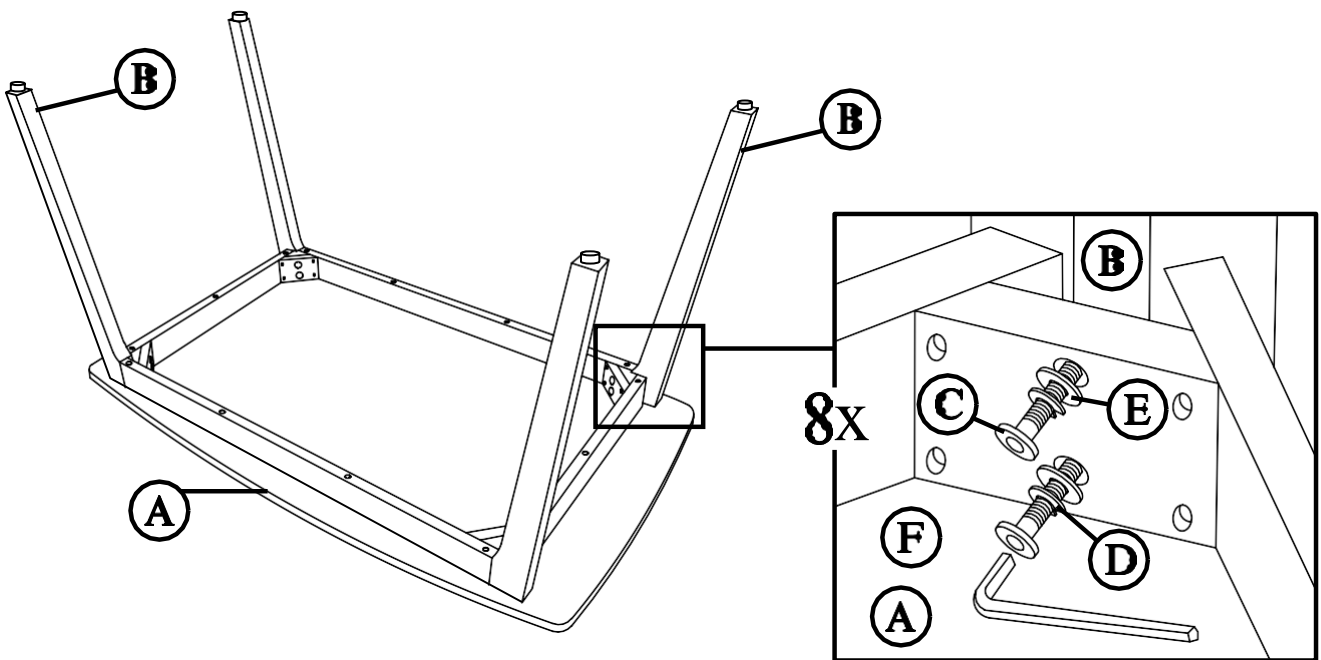

- a) With the assistance of another person, place Table Top (A) on a flat surface & soft material to prevent scratch and damage.
- b) Position a Table Leg (B) against the corner of the table aprons and align the screw holes on (B) to the screw holes on the corner block.
- c) Insert Screw (C) fitted with Spring Washer (D) and Flat Washer (E) through each hole on the corner block into screw hole on (B). Use Allen Key (F) to drive (C) to fasten Table Leg (B) to corner block. Do not tighten (C) completely until both bolts are in place on each leg. Do not over-tighten.
- d) Repeat the above assembly procedure for the other three legs.
- e) With assistance, set the table right-side up when all of the legs are assembled.
The assembly of the table is complete.