 


Tower Fan

Instruction Manual

AC-DSV25TS-35D5

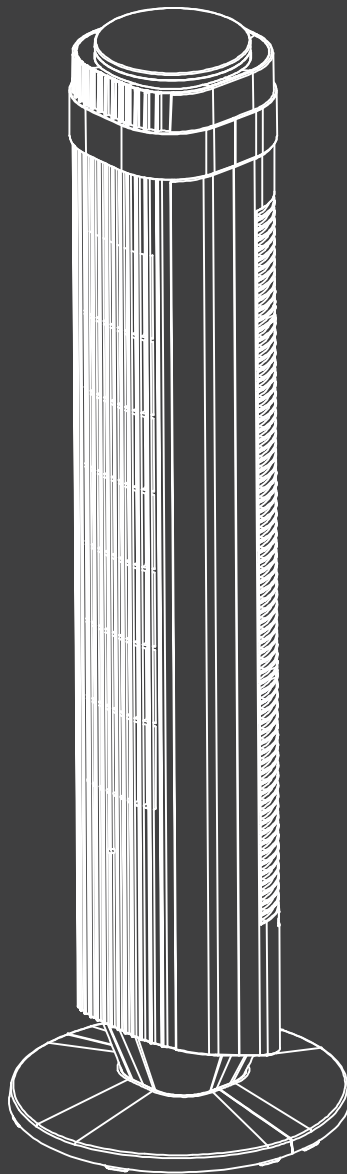

☎ EST 9:00AM--17:00PM


✉ HJ-Customer-Service@outlook.com

☎ 6269443420 | 6267435564

Safety Precautions



 Please read this user manual carefully before using the product and keep it for future reference.

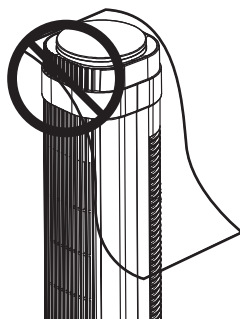

Do not cover the air inlet and outlet while in operation.



Do not use the fan near flammables and combustibles.

General Safety

1. Children shall not play with the appliance. Cleaning and maintenance shall not be performed by children.
2. Use the appliance as described in the user manual only. Any other use not recommended in the user manual may cause fire, electrical shock, or personal injury.
3. This appliance is not intended for use by persons (including children) with reduced physical, sensory, or mental capabilities, or who lack experience or knowledge, unless they are supervised or instructed on the proper use of the appliance by a person responsible for their safety.

Operation Safety

1. Place the appliance on a flat, dry surface before use.
2. Do not immerse in water or any other liquids.
3. Do not use the appliance until the base is installed.
4. Do not insert your fingers, pencils, or any other objects into the grilles while in operation.
5. Do not dismantle, repair, or modify. All servicing should be performed by qualified personnel.

Electricity Safety

1. Make sure that the voltage of your electricity supply is the same as that indicated on the appliance.
2. Always unplug before cleaning or leaving the appliance unused for a long period of time. Keep your hands dry when plugging/unplugging.
3. Do not operate the fan with a damaged cord or plug.
4. Do not run the cord under carpeting. Do not cover the cord with throw rugs, runners, or similar coverings. Do not route the cord under furniture or appliances. Arrange the cord away from the walking area to avoid tripping.
5. To reduce the risk of fire or electric shock, do not use this tower fan with any solid-state-speed control device.
6. This appliance has a polarized plug (one blade is wider than the other). To reduce the risk of electric shock, this plug is intended to fit in a polarized outlet only one way. If the plug does not fit fully in the outlet, reverse the plug. If it still does not fit, contact a qualified electrician. Do not attempt to repair it by yourself.





WARNING: To reduce the risk of fire, electric shock, or injury to persons, do not use replacement parts that have not been recommended by the manufacturer.

Technical Specifications


Model	AC-DSV25TS-35
Voltage	120V~ / 60Hz
Power	50W
Oscillation	Horizontal Oscillation 70°
Product Weight	7.28 lb
Package Dimension	7.68 x 7.68 x 36.61 in

Assembly Instructions

    
When using the appliance for the first time, remove the wraps and attach the parts by following the steps below.

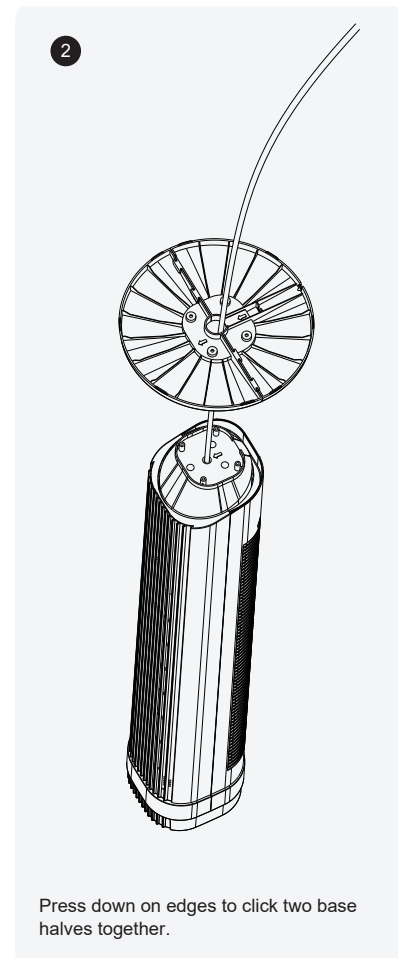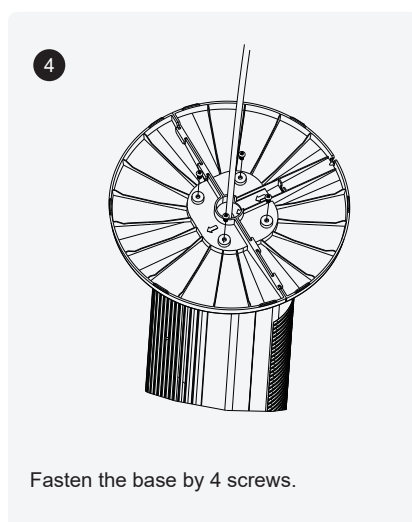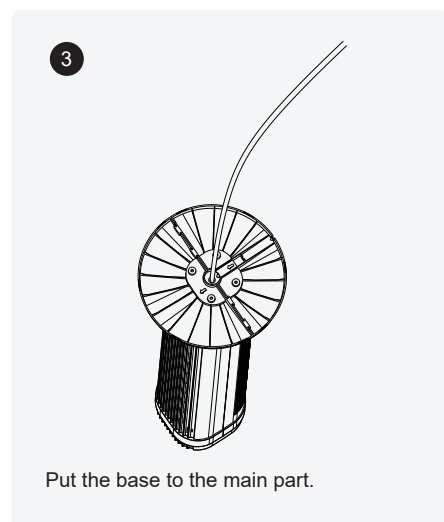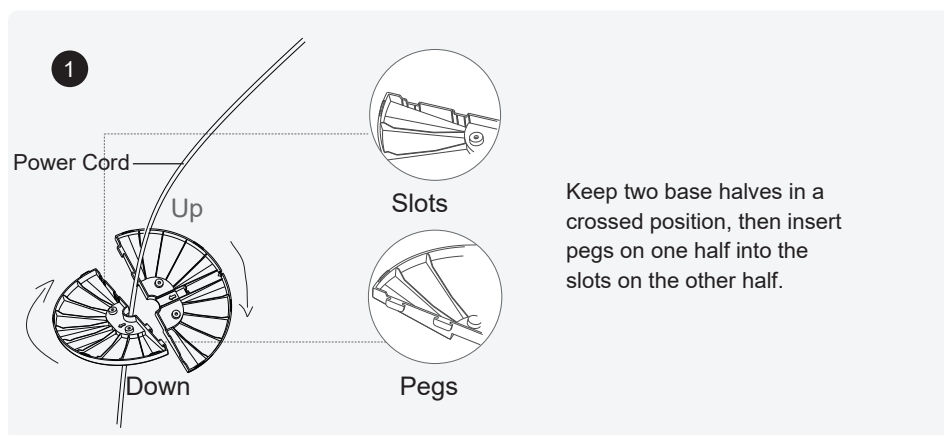

5

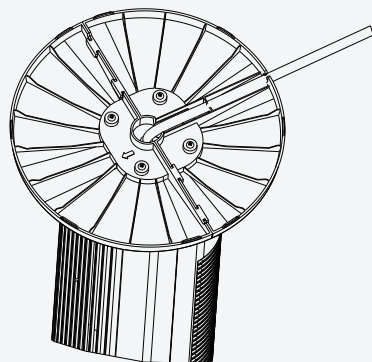 


 Thread the cord through all cord keepers before putting the fan upright.

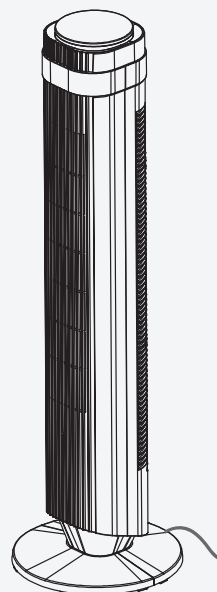

Operation Instructions

 LED Display

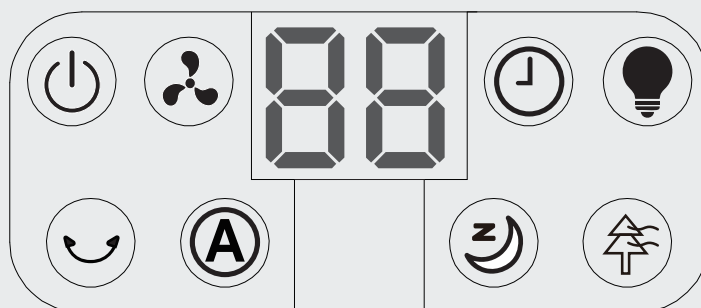

Normal Mode



Natural Mode



Sleep Mode



Auto Mode



LED Light



Oscillation



Timer




NOTE:

1. The display will turn off after 3 minutes of no operation.
2. Wake up the display with any button.

Working Modes


 Sleep Mode (Mute Auto On) Fan speed decreases every 30 minutes until speed 1, and keeps speed 1 constant when it decreases to speed 1.	 Normal Mode Fan runs at the constant speed.
 Auto Mode Fan speed adapts to the ambient temperature.	 Natural Mode Fan runs at alternating speeds.

 Remote Control

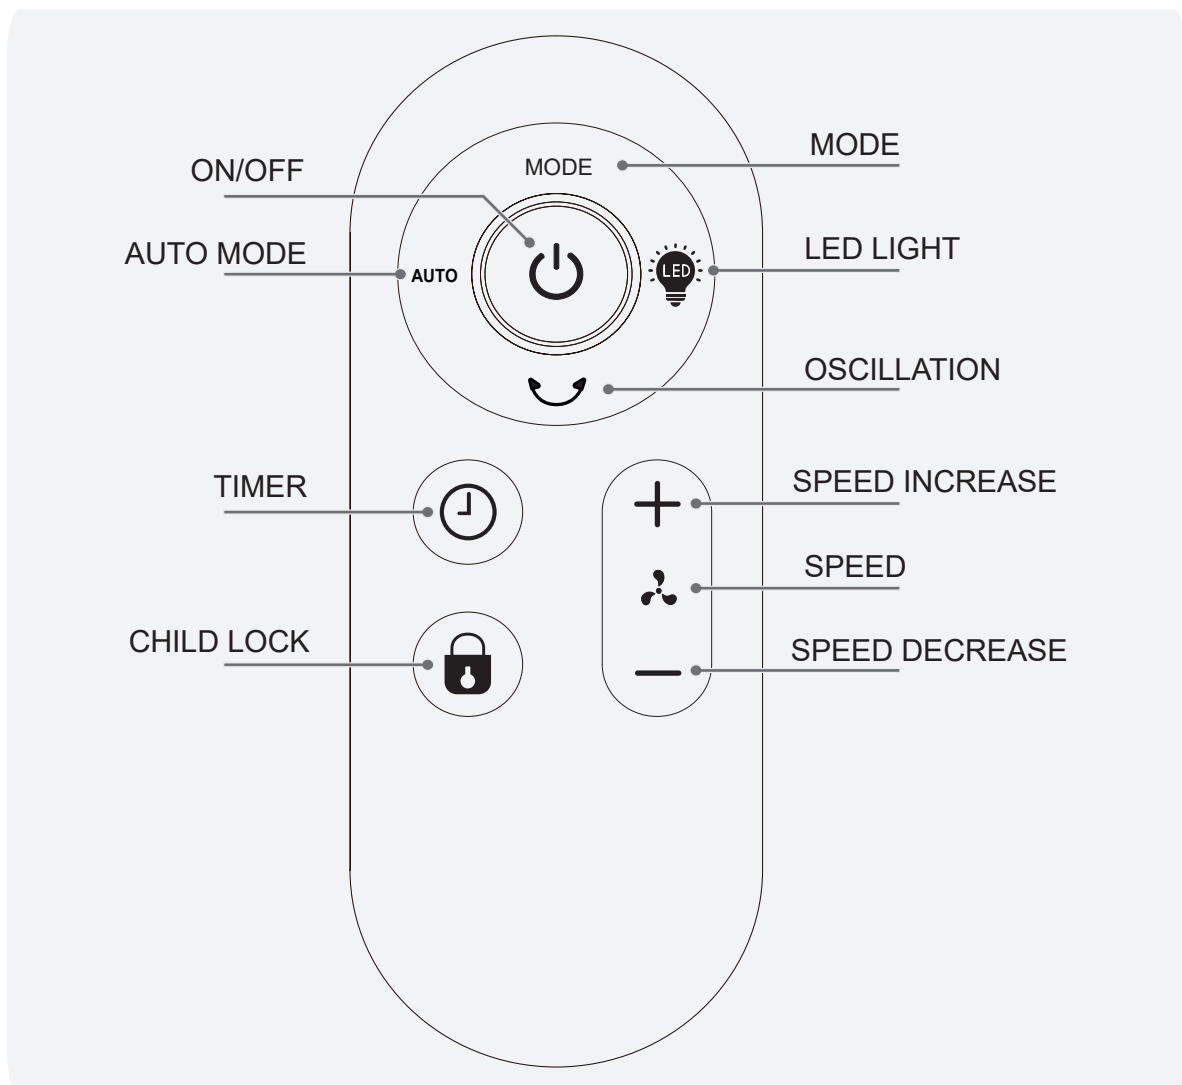

Before first use, remove the battery pull tab to activate the remote control.

 Control Panel

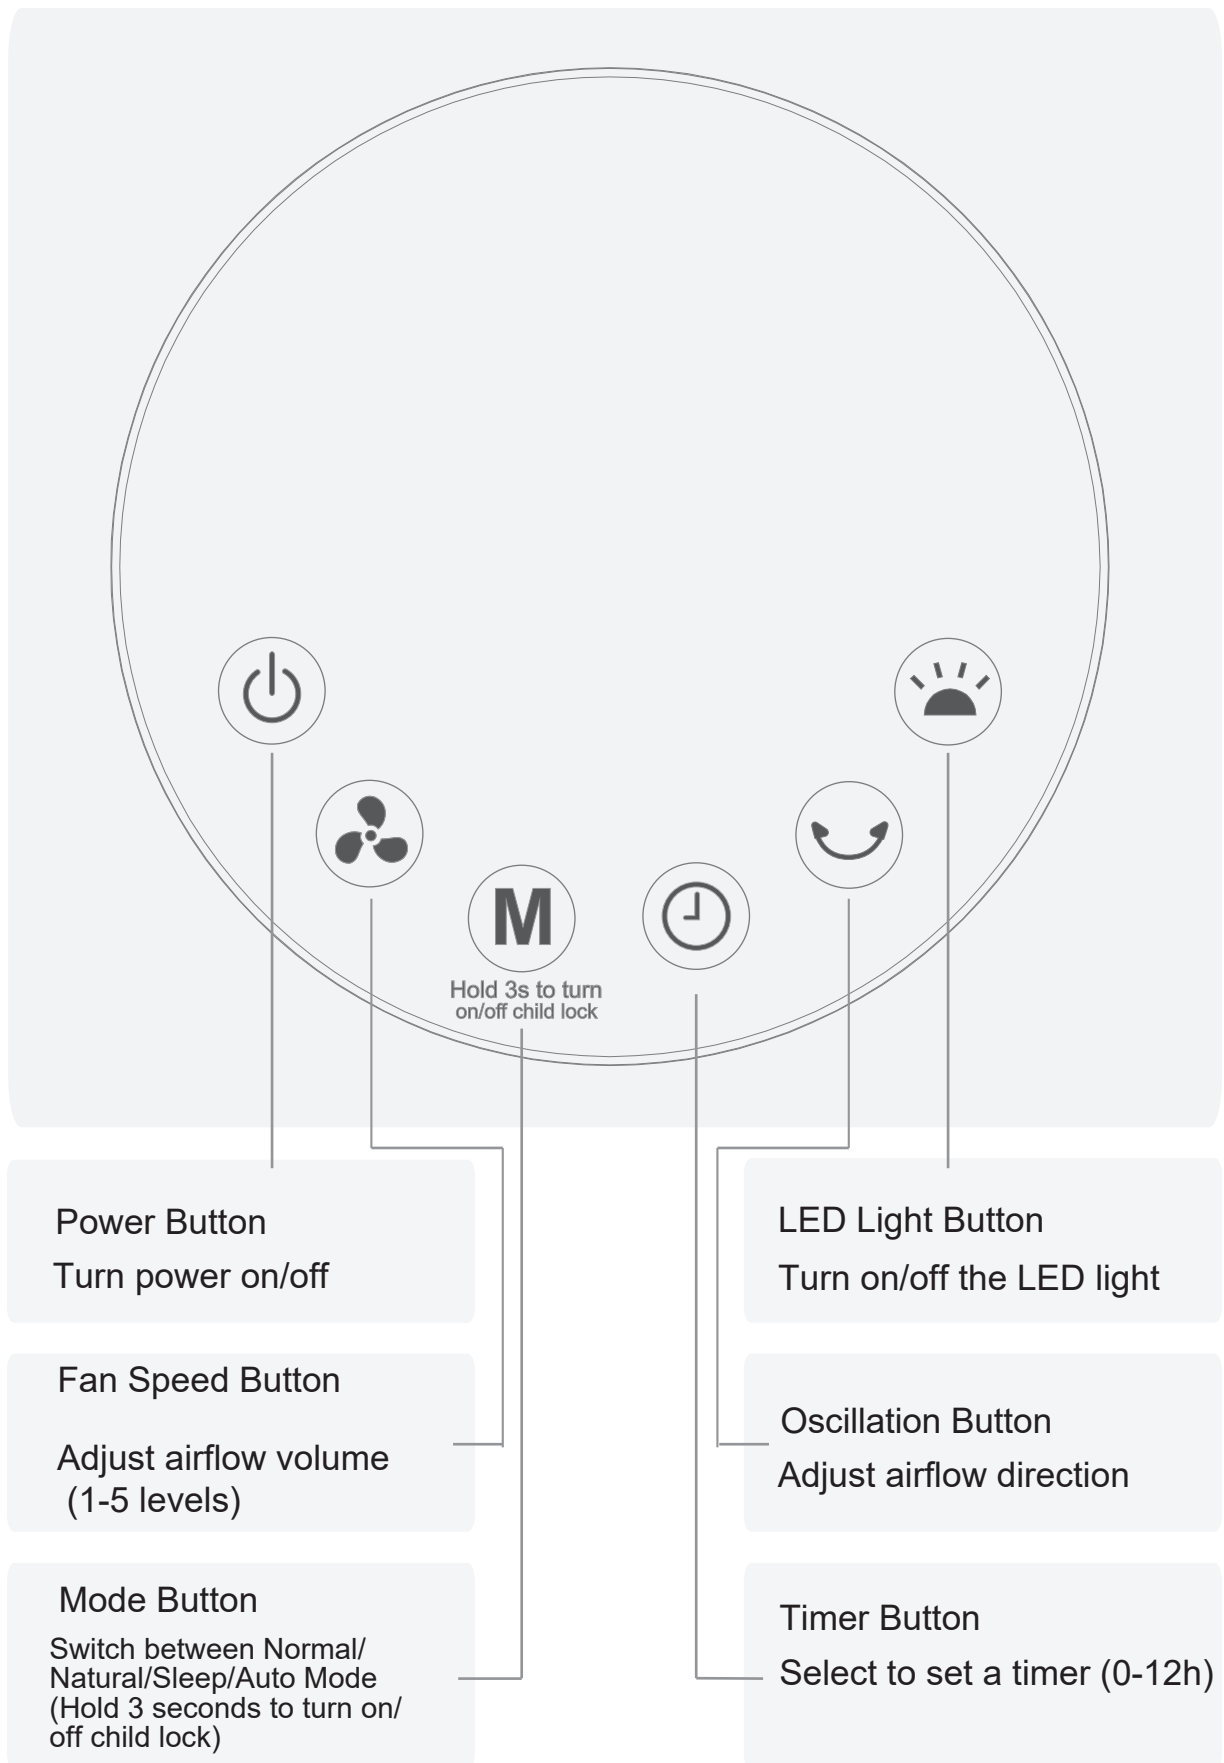


Additional Features

- Screen Off: The screen will automatically turn off after 3 minutes of no operation.
- Factory Initial State: Level 1 (fan speed).
- Memory Function: The product has a standby memory function.
- Smart Wind (Auto mode): The fan speed adapts to the ambient temperature.

Fuse Replacement

 This appliance features a fused safety plug that protects against overload or short-circuit situations. If the fuse blows, please cut off power and follow the below instructions or consult a qualified electrician.

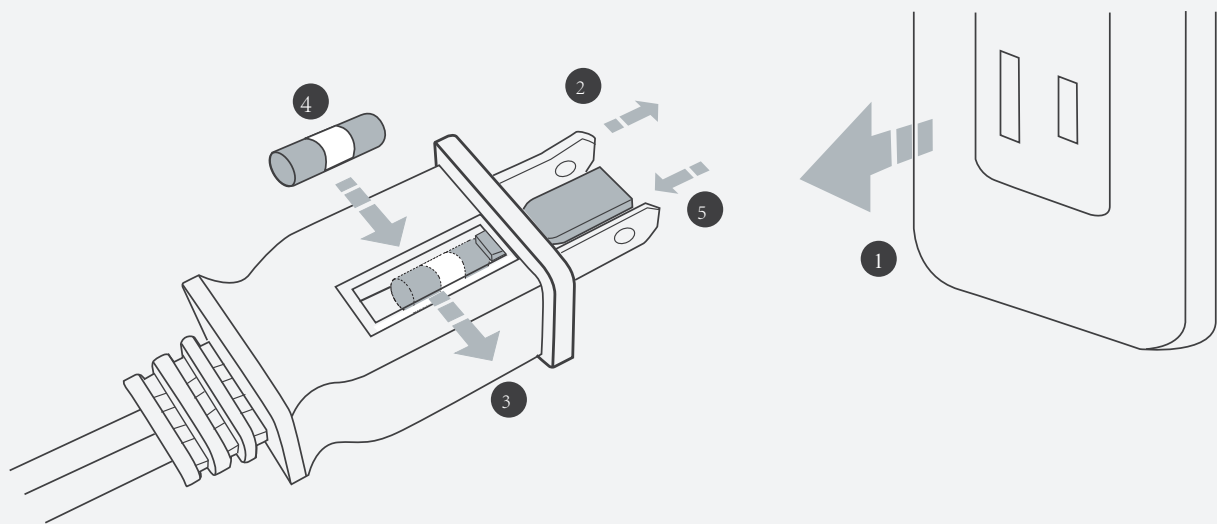


- 1 Grasp the plug and remove it from the electrical receptacle. Do not unplug by pulling on the cord.
- 2 Open the fuse cover. Slide the fuse access cover on top of the plug towards blades as shown in the diagram.
- 3 Remove the fuse carefully. Push the fuse from the opposite side to remove it.
- 4 Risk of fire. Replace the fuse only with 125 V, 5A fuse.
- 5 Close the fuse cover by sliding the fuse access cover on top of the plug away from the blades.



WARNING

Risk of fire. Do not replace the plug, as it contains a safety device (fuse) that should not be removed. Discard the product if the plug is damaged.

 Battery Replacement in the Remote Control

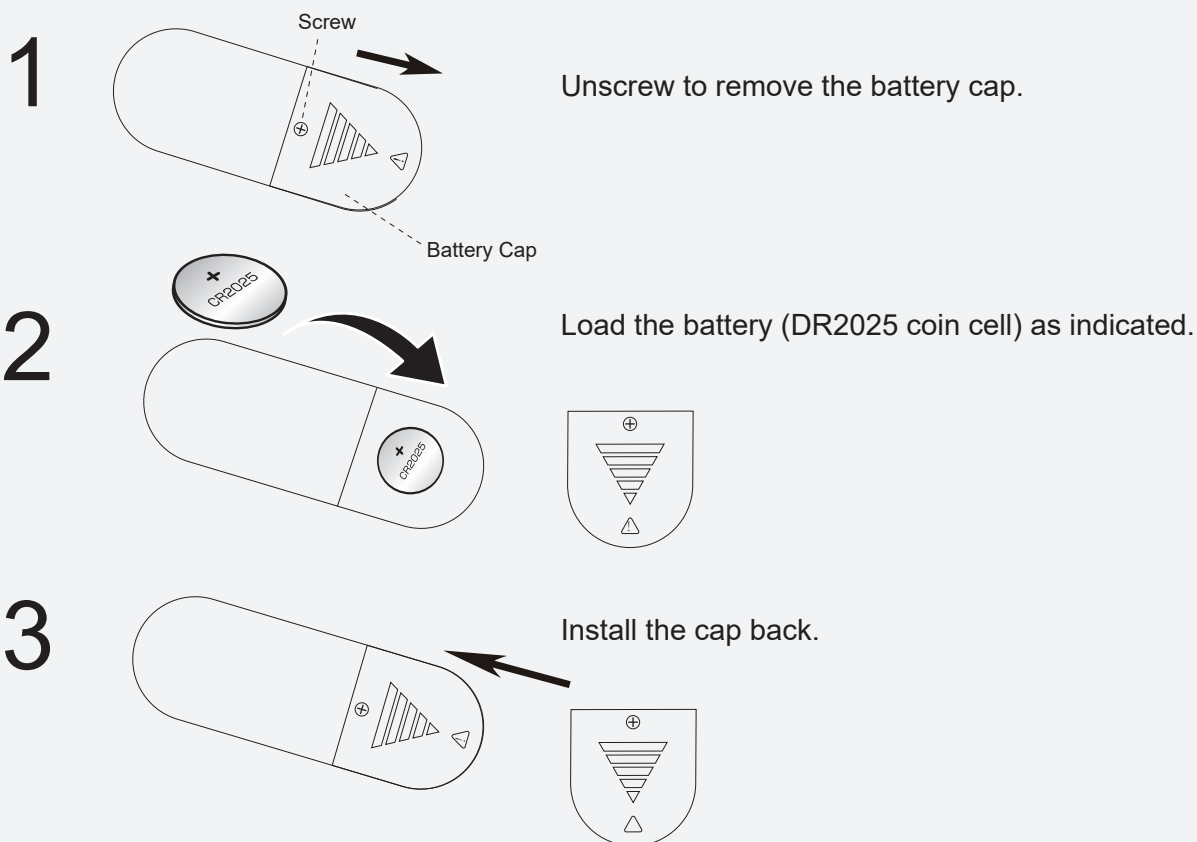


Attention

1. Do not charge this battery.
2. Please keep the remote control out of reach of children. If children swallow the battery, please seek medical attention immediately.
3. When using the remote control, you need to point it at the fan display screen.
4. The remote control frequency will overlap. To avoid misoperation, please stay away from other electrical appliances when using it; The power button on the fan and remote control cannot completely turn off the fan power.
5. If not used for a long time, please unplug and remove the battery on the remote control.

⚠ WARNING:

1. INGESTION HAZARD: This product contains a button cell.
2. DEATH or serious injury can occur if ingested.
3. A swallowed button cell can cause internal chemical burns in as little as 2 hours.
4. KEEP new and used batteries OUT OF REACH of CHILDREN.
5. Seek immediate medical attention if a battery is suspected to be swallowed or inserted inside any part of the body.
6. Battery type: DR2025, DC 3V (included).

 Cleaning and Maintenance

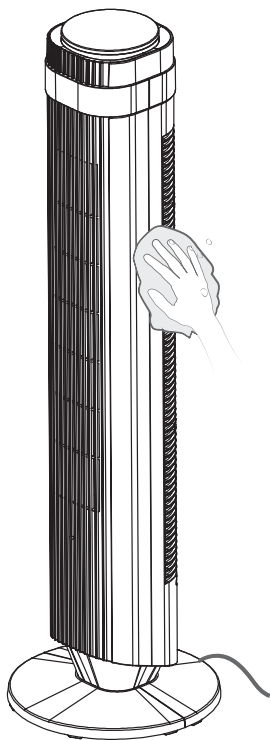

Cleaning the Fan Surface

1. Please do not get the fan wet or splash it with water, as this may damage the machine.
2. Please do not use banana oil, gasoline, alcohol, or bleach to wipe the fan surface, as this may cause discoloration or deterioration.
3. Please use a dry, soft cloth to gently wipe the fan surface.
4. If the fan surface is dirty, you can use a neutral detergent diluted with a soft cloth to wipe it.
5. After wiping the fan surface clean, wipe it with a dry, soft cloth.

Remote Control

1. Please use a soft cloth to gently wipe the surface of the remote control.
2. If you do not use it for a long time, please remove the battery.

Power Plug

1. Please use a dry, soft cloth to clean it.

Storage

1. After maintenance, the fan can be stored in a carton.
2. Please avoid places with vibrations and appliances with cooling/heating functions.
3. Please avoid placing it in places with direct sunlight, high temperature, and humidity.
4. Please remove the batteries in the remote control.
5. Please place it out of the reach of young children.

CAUTION

1. Always unplug the fan before any cleaning or maintenance to avoid the risk of fire, electric shock, or injury.
2. Do not immerse in water or get water inside the motor housing.
3. Do not use any chemical agents when cleaning the fan.
4. Store in a cool, dry place and cover it to protect from dust.

Troubleshooting

My fan won't turn on!

1. Make sure that the cord is connected to a powered outlet and the mains voltage corresponds with the voltage indicated on the fan.
2. Check if the fan is broken or the cable is intact. If so, stop using it and contact our after-sales service.

My fan is shaky and wobbling!

 
1. Place the fan on a flat, level surface.
2. Incorrect installation might also cause shakiness. Please refer to the assembly instructions.
Note that the power cord must be secured by all keepers.

My fan is making vibration and noise!

1. Place the fan on a flat, level surface.
2. Be sure not to insert anything into the air inlet and outlet.

Warranty Information

1. This product is covered by a **one (1) -year** limited warranty against defects in materials and workmanship, valid only for the original purchaser. The warranty period begins on the date of retail purchase and is non-transferable.
2. This warranty does not cover normal wear and tear, or any damage resulting from misuse, negligent use, use with improper voltage or current, failure to follow the operating instructions, or any disassembly, repair, or modification not authorized by our after-sales service.
3. Additionally, this warranty does not cover damages caused by Acts of God (such as fire, flood, hurricanes, or tornadoes) or force majeure events (such as arson, power outages, riots, or vandalism).
4. This warranty gives you specific legal rights, and you may also have other rights which vary from state to state (or province to province). Some states (or provinces) do not allow limitations on how long an implied warranty lasts, or the exclusion or limitation of incidental or consequential damages, so the above limitations or exclusions may not apply to you.

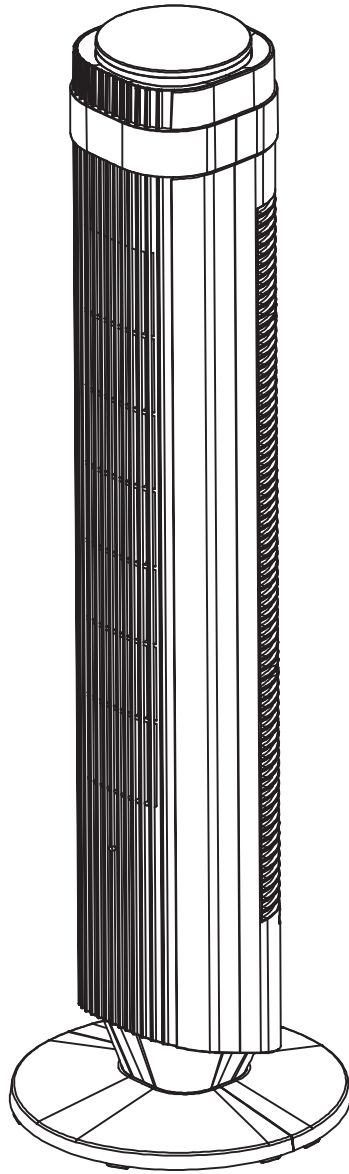

Technical Support

6269443420 | 6267435564

Other Info

HJ-Customer-Service@outlook.com

Thank you for choosing this product. We strive to provide you with the best quality products and service in the industry. Should you have any issues, please don't hesitate to contact us.