



Installation Precautions!

Voltage: AC110V-120V 50/60Hz

1. Power supply must be cut off before installation and maintenance of lamps.
2. The lamps must be installed by professional technicians. The installation parts of the lamps and lanterns must be installed in place.
3. Lamps and lanterns must be regularly maintained by professional technicians.
4. Thanks for choosing our product. If your product has any quality problems, please feel free to contact us.

We are honest seller and will do our best to help you.
Good communication is the best solution to the problem.